



SERVICE MANUAL

UHF FM TRANSCEIVERS

IC-F4GT
IC-F4GS

INTRODUCTION

This service manual describes the latest service information for the **IC-F4GT** and **IC-F4GS** at the time of publication.

To upgrade quality, all electrical or mechanical parts and internal circuits are subject to change without notice or obligation.

DANGER

NEVER connect the transceiver to an AC outlet or to a DC power supply that uses more than 16 V. Such a connection could cause a fire hazard and/or electric shock.

DO NOT expose the transceiver to rain, snow or any liquids.

DO NOT reverse the polarities of the power supply when connecting the transceiver.

DO NOT apply an RF signal of more than 20 dBm (100mW) to the antenna connector. This could damage the transceiver's front end.

ORDERING PARTS

Be sure to include the following four points when ordering replacement parts:

1. 10-digit order numbers
2. Component part number and name
3. Equipment model name and unit name
4. Quantity required

<**SAMPLE ORDER**>

1130007610	S.IC	μPD3140GS	IC-F4GT	MAIN UNIT	1 pieces
8810009510	Screw	BT M2 x 4 NI-ZU	IC-F4GS	Chassis	10 pieces

Addresses are provided on the inside back cover for your convenience.



REPAIR NOTES

1. Make sure a problem is internal before disassembling the transceiver.
2. **DO NOT** open the transceiver until the transceiver is disconnected from its power source.
3. **DO NOT** force any of the variable components. Turn them slowly and smoothly.
4. **DO NOT** short any circuits or electronic parts. An insulated turning tool **MUST** be used for all adjustments.
5. **DO NOT** keep power ON for a long time when the transceiver is defective.
6. **DO NOT** transmit power into a signal generator or a sweep generator.
7. **ALWAYS** connect a 40 dB to 50 dB attenuator between the transceiver and a deviation meter or spectrum analyzer when using such test equipment.
8. **READ** the instructions of test equipment thoroughly before connecting equipment to the transceiver.

TABLE OF CONTENTS

SECTION 1	SPECIFICATIONS	
SECTION 2	INSIDE VIEWS	
SECTION 3	DISASSEMBLY AND OPTION INSTRUCTIONS	
3-1	DISASSEMBLY INSTRUCTION	3-1
3-2	OPTIONAL UNIT INSTALLATIONS	3-2
SECTION 4	CIRCUIT DESCRIPTION	
4-1	RECEIVER CIRCUITS	4-1
4-2	TRANSMITTER CIRCUITS	4-1
4-3	PLL CIRCUITS	4-2
4-4	POWER SUPPLY CIRCUITS	4-3
4-5	CPU PORT ALLOCATIONS	4-4
SECTION 5	ADJUSTMENT PROCEDURES	
5-1	PREPARATION	5-1
5-2	PLL ADJUSTMENT	5-4
5-3	SOFTWARE ADJUSTMENT	5-5
SECTION 6	PARTS LIST	
SECTION 7	MECHANICAL PARTS AND DISASSEMBLY	
SECTION 8	SEMI-CONDUCTOR INFORMATION	
SECTION 9	BOARD LAYOUTS	
SECTION 10	BC-137 OPTIONAL DESKTOP CHARGER INFORMATION	
10-1	PARTS LIST	10-1
10-2	DISASSEMBLY INFORMATION	10-1
10-3	VOLTAGE DIAGRAM	10-2
10-4	BOARD LAYOUT	10-2
SECTION 11	BLOCK DIAGRAM	
SECTION 12	VOLTAGE DIAGRAM	

SECTION 1 SPECIFICATIONS

■ GENERAL

- Frequency coverage : 440.000–470.000 MHz
- Type of emission : 8K50F3E
- Number of channels : 32 ch (16 channels × 2 banks: 2-BANK version), 16 ch (16 channel version)
- Power supply requirement : 7.2 V DC (negative ground; supplied battery pack)
- Current drain (approx.) : Transmit at High (4.0 W) 1.55 A
at Low (1.0 W) 800 mA
Receive rated audio 250 mA
stand-by 70 mA
- Frequency stability : ±0.00025 %
- Usable temperature range : –30°C to +60°C; –22°F to +140°F
- Dimensions (projections not included) : 54(W) × 132(H) × 35(D) mm; 2 5/32(W) × 5 3/16(H) × 1 3/8(D) in.
- Weight (with ant., BP-209) : 355 g; 12.5 oz.

■ TRANSMITTER

- RF output power (at 7.2 V DC (with supplied battery pack) : 4 W / 1 W (High / Low)
- Modulation system : Variable reactance frequency modulation
- Maximum frequency deviation : ±2.5 kHz
- Spurious emissions : 73 dBc (typical)
- Adjacent channel power : 60 dB (typical)
- Transmitter audio distortion : Less than 3% at 1 kHz, 40% deviation
- Limiting charact of modulator : 70–100% of max. deviation
- Ext. microphone connector : 3-conductor 2.5(d) mm (1/10")/2.2 kΩ

■ RECEIVER

- Receive system : Double conversion superheterodyne system
- Intermediate frequencies : 1st 46.35 MHz
2nd 450 kHz
- Sensitivity : 0.3 μV at 12 dB SINAD (typical)
- Squelch sensitivity : 0.3 μV at threshold (typical)
- Adjacent channel selectivity : 65 dB (typical)
- Spurious response rejection : 70 dB (typical)
- Intermodulation rejection ratio : 70 dB (typical)
- Hum and noise : 40 dB (typical)
- Audio output power (at 7.2 V DC) : 500 mW typical at 5% distortion with an 8 Ω load
- Ext. speaker connector : 3-conductor 3.5(d) mm (1/8")/8 Ω


Specifications are measured in accordance with EIA/TIA-603.

All stated specifications are subject to change without notice or obligation.


SECTION 2 INSIDE VIEWS

• MAIN UNIT

TOP VIEW

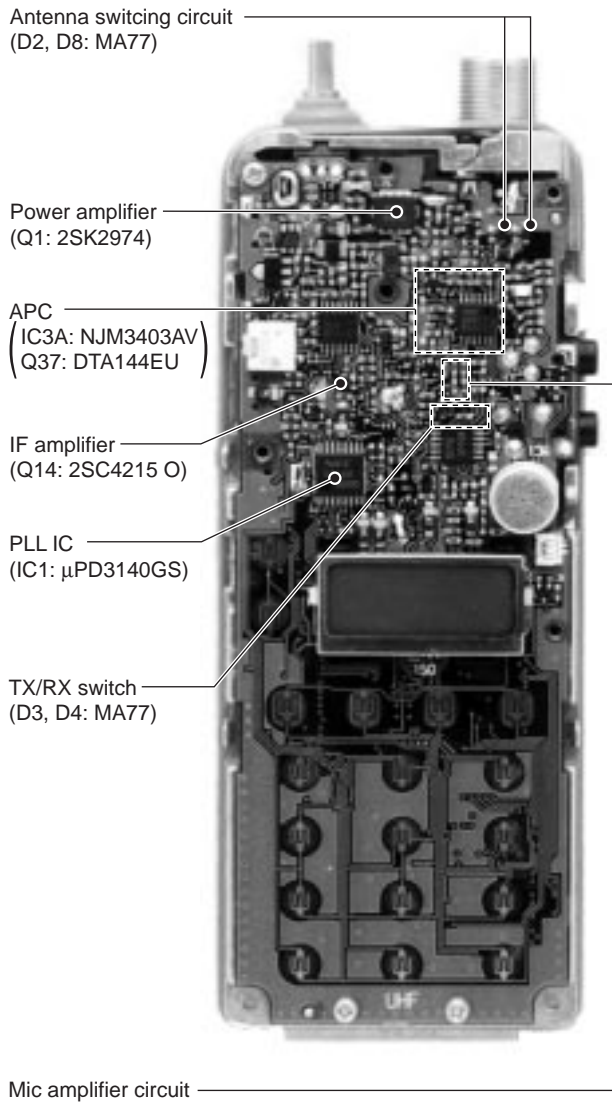

BOTTOM VIEW

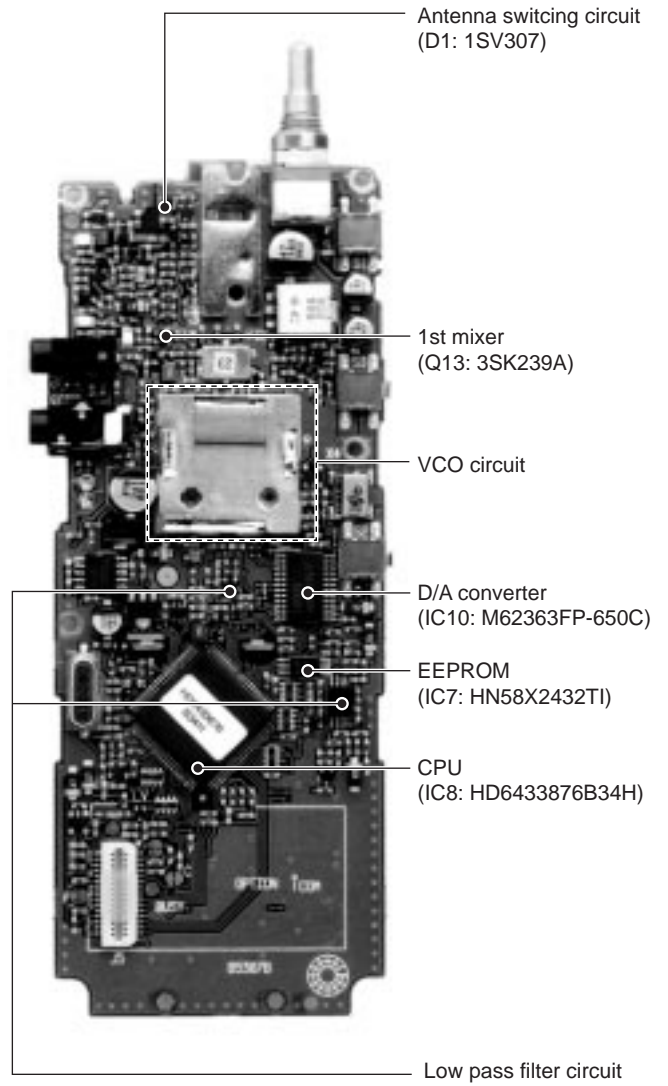


SECTION 3 DISASSEMBLY AND OPTION INSTRUCTIONS

3-1 DISASSEMBLY INSTRUCTION


• REMOVING THE CHASSIS PANEL

- ① Unscrew 1 nut (A), and remove 1 knob (B).
- ② Unscrew 2 screws (C).
- ③ Take off the chassis in the direction of the arrow.
- ④ Unplug J6 to separate front panel and chassis.

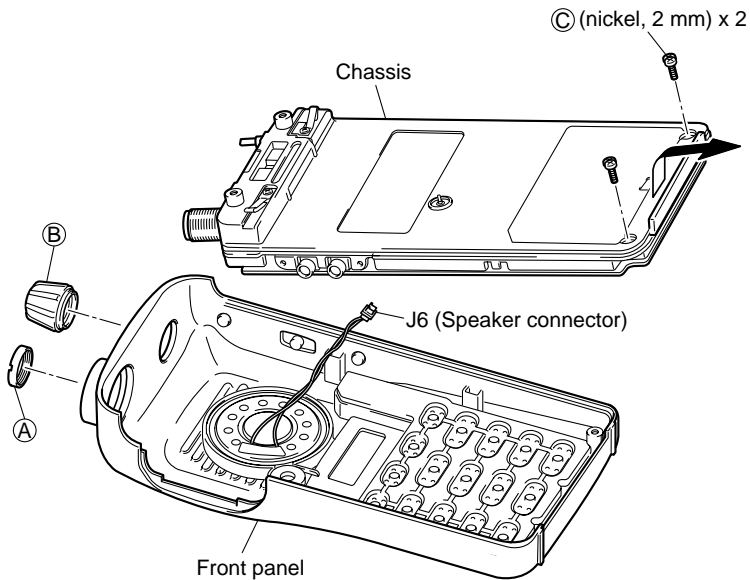


• REMOVING THE MAIN UNIT

- ① Remove the searing rubber.
- ② Unsolder 3 points (D), and unscrew 1 nut (E).
- ③ Unscrew 3 screws (F) and 6 screws (G) (silver, 2 mm) to separate the chassis and the MAIN unit.
- ④ Take off the MAIN unit in the direction of the arrow.

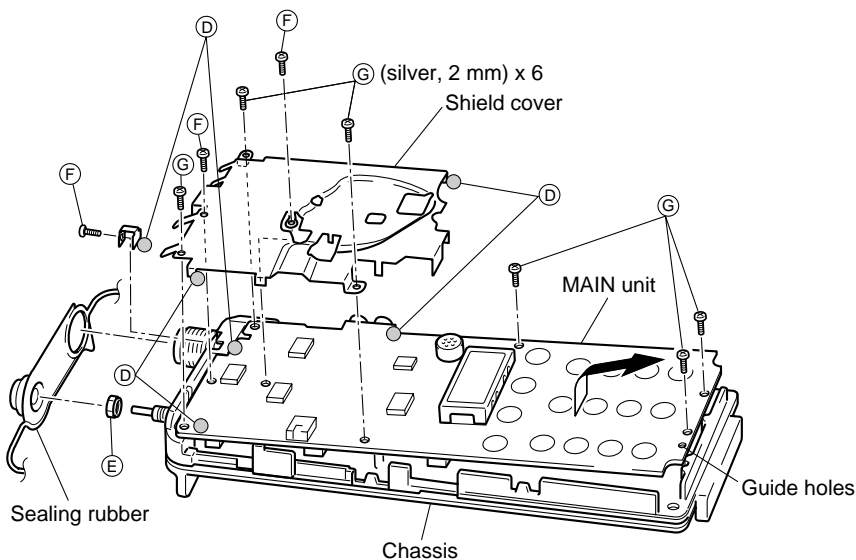

3-2 OPTIONAL UNIT INSTALLATIONS

- ① Remove the option cover.
- ② Remove the bottom protective paper of spoge.
- ③ Connect one of UT-96, UT-105, UT-108, UT-109, UT-110, UT-111, and UT-113 optional units to J5.
- ④ Replace the option cover to the chassis-hole.

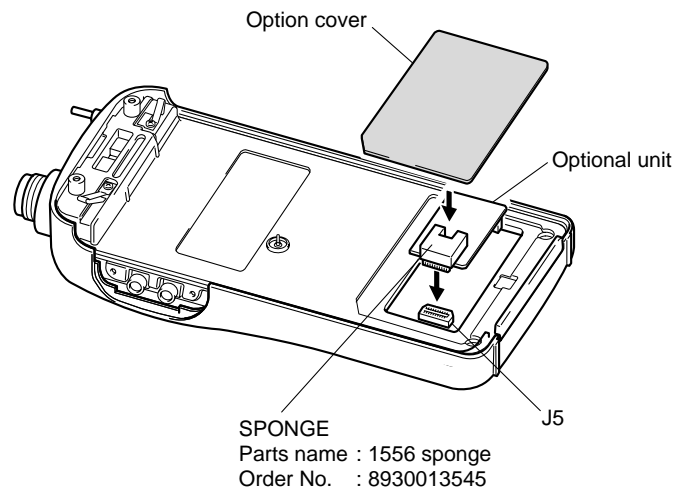

SECTION 4 CIRCUIT DESCRIPTION

4-1 RECEIVER CIRCUITS

4-1-1 ANTENNA SWITCHING CIRCUIT

The antenna switching circuit functions as a low-pass filter while receiving. However, its impedance becomes very high while D2 and D8 are turned ON. Thus transmit signals are blocked from entering the receiver circuits. The antenna switching circuit employs a $\lambda/4$ type diode switching system.

Received signals are passed through the low-pass filter (L1, L2, C3, C8, C666). The filtered signals are applied to the $\lambda/4$ type antenna switching circuit (D2, D8).

The passed signals are then applied to the RF amplifier circuit.

4-1-2 RF CIRCUIT

The RF circuit amplifies signals within the range of frequency coverage and filters out-of-band signals.

The signals from the antenna switching circuit are amplified at the RF amplifier (Q12) after passing through the tunable bandpass filter (L17, D10, C85, C86). The amplified signals are applied to the 1st mixer circuit (Q13) after out-of-band signals are suppressed at the 3 stages tunable bandpass filter (D401, L18, C89, C406, D11, L402, C91, C92, C94, D12, L19, C97, C98).

Varactor diodes are employed at the bandpass filters that track the filters and are controlled by the CPU (IC8) via the expander IC (IC10) using T1–T4 signals. These diodes tune the centre frequency of an RF passband for wide bandwidth receiving and good image rejection.

4-1-3 1ST MIXER AND 1ST IF CIRCUITS

The 1st mixer circuit converts the received signal into a fixed frequency of the 1st IF signal with a PLL output frequency. By changing the PLL frequency, only the desired frequency will pass through a crystal filter at the next stage of the 1st mixer.

The signals from the RF circuit are mixed at the 1st mixer (Q13) with a 1st LO signal coming from the VCO circuit to produce a 46.35 MHz 1st IF signal.

The 1st IF signal is applied to a pair of crystal filters (F11) to suppress out-of-band signals. The filtered 1st IF signal is applied to the IF amplifier (Q14), then applied to the 2nd mixer circuit (IC2, pin 16).

4-1-4 2ND IF AND DEMODULATOR CIRCUITS


The 2nd mixer circuit converts the 1st IF signal into a 2nd IF signal. A double conversion superheterodyne system (which converts receive signals twice) improves the image rejection ratio and obtains stable receiver gain.

The 1st IF signal from the IF amplifier is applied to the 2nd mixer section of the FM IF IC (IC2, pin 16), and is mixed with the 2nd LO signal to be converted into a 450 kHz 2nd IF signal.

The FM IF IC contains the 2nd mixer, limiter amplifier, quadrature detector and active filter circuits. A 2nd LO signal (45.9 MHz) is produced at the PLL circuit by tripling its reference frequency.

The 2nd IF signal from the 2nd mixer (IC2, pin 3) passes through a ceramic filter (F12) to remove unwanted heterodyned frequencies. It is then amplified at the limiter amplifier (IC2, pin 5) and applied to the quadrature detector (IC2, pins 10, 11) to demodulate the 2nd IF signal into AF signals.

• 2ND IF AND DEMODULATOR CIRCUITS

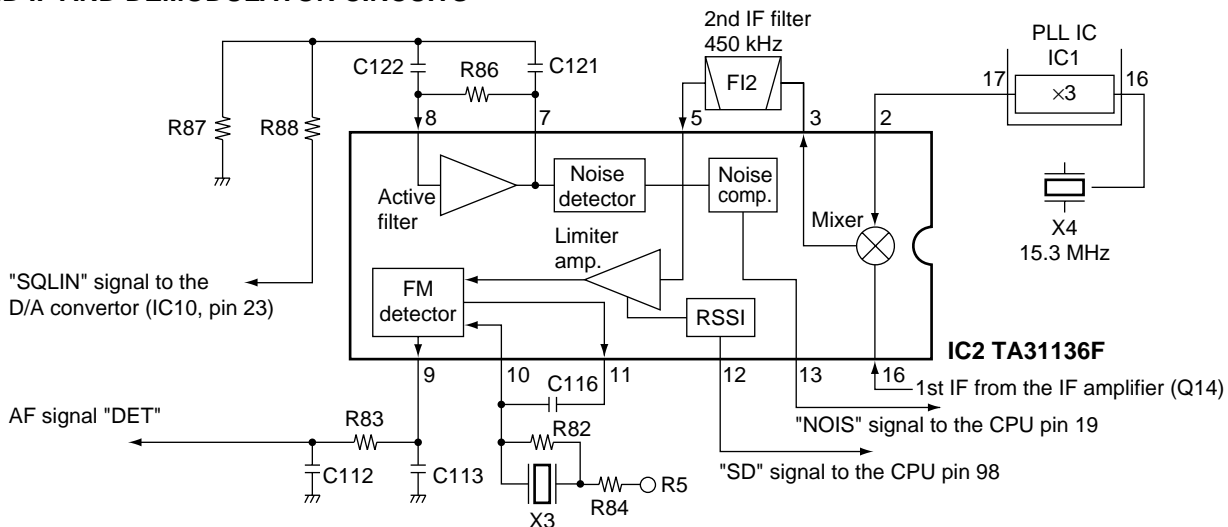

4-1-5 AF CIRCUIT

AF signals from the FM IF IC (IC2, pin 9) are applied to the mute switch (IC4, pin 1) via the AF filter circuit (IC3b, pins 6, 7). The output signals from pin 11 are applied to the AF power amplifier (IC5, pin 4) after being passed through the [VOL] control (R143).

The applied AF signals are amplified at the AF power amplifier circuit (IC5, pin 4) to obtain the specified audio level. The amplified AF signals, output from pin 10, are applied to the internal speaker (SP1) as the "SP" signal via the [SP] jack when no plug is connected to the jack.

4-1-6 SQUELCH CIRCUIT

A squelch circuit cuts out AF signals when no RF signals are received. By detecting noise components in the AF signals, the squelch switches the AF mute switch.

A portion of the AF signals from the FM IF IC (IC2, pin 9) are applied to the active filter section (IC2, pin 8) where noise components are amplified and detected with an internal noise detector.

The active filter section amplifies noise components. The filtered signals are rectified at the noise detector section and converted into "NOIS" (pulse type) signals at the noise comparator section. The "NOIS" signal is applied to the CPU (IC8, pin 19).

The CPU detects the receiving signal strength from the number of the pulses, and outputs an "RMUT" signal from pin 49. This signal controls the mute switch (IC4, pin 13) to cut the AF signal line.

4-2 TRANSMITTER CIRCUITS

4-2-1 MICROPHONE AMPLIFIER CIRCUIT

The microphone amplifier circuit amplifies audio signals with +6 dB/octave pre-emphasis characteristics from the microphone to a level needed for the modulation circuit.

The AF signals from the microphone are applied to the microphone amplifier circuit (IC3c, pin 10). The amplified AF signals are passed through the low-pass filter circuit (IC3d, pins 13, 14) via the mute switch (IC4, pins 4, 3). The filtered AF signals are applied to the modulator circuit after being passed through the mute switch (IC4, pins 9, 8).

4-2-2 MODULATION CIRCUIT

The modulation circuit modulates the VCO oscillating signal (RF signal) using the microphone audio signal.

The audio signals change the reactance of a diode (D404) to modulate an oscillated signal at the VCO circuit (Q7, Q8). The oscillated signal is amplified at the buffer-amplifiers (Q4, Q6), then applied to the T/R switching circuit (D3, D4).

4-2-3 DRIVE/POWER AMPLIFIER CIRCUITS

The signal from the VCO circuit passes through the T/R switching circuit (D3) and is amplified at the buffer (Q403, Q3), pre-drive (Q2) and power amplifier (Q1) to obtain 4 W of RF power (at 7.2 V DC). The amplified signal passes through the antenna switching circuit (D1), and low-pass filter and is then applied to the antenna connector.


The bias current of the pre-drive (Q2) and the power amplifier (Q1) is controlled by the APC circuit.

4-2-5 APC CIRCUIT

The APC circuit (IC3a, Q37) protects the drive and the power amplifiers from excessive current drive, and selects HIGH or LOW output power.

The signal output from the power detector circuit (D32, D33) is applied to the differential amplifier (IC3a, pin 2), and the "T4" signal from the expander (IC10, pin 11), controlled by the CPU (IC8), is applied to the other input for reference.

• APC CIRCUIT

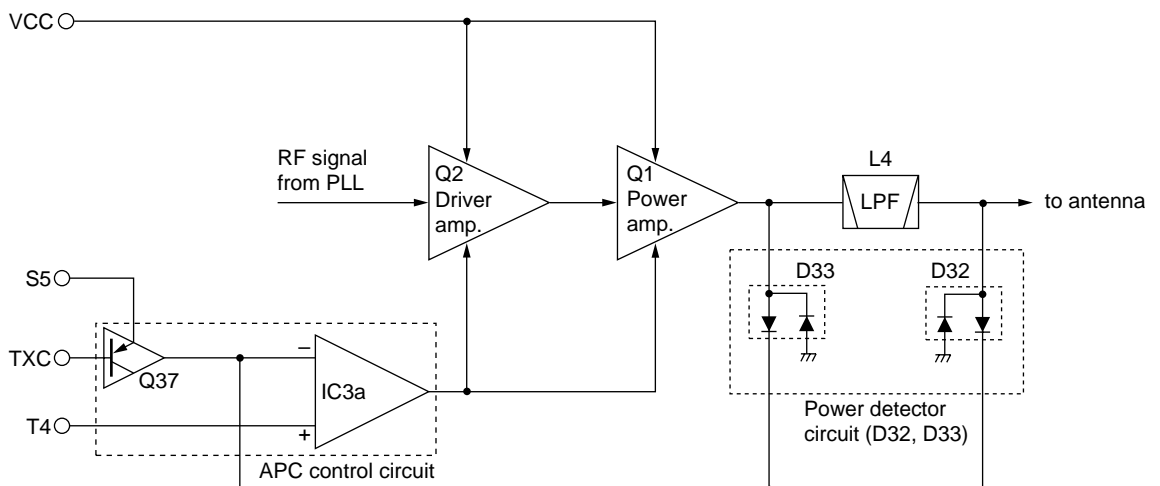

When the driving current is increased, input voltage of the differential amplifier (pin 2) will be increased. In such cases, the differential amplifier output voltage (pin 1) is decreased to reduce the driving current.

4-3 PLL CIRCUIT

A PLL circuit provides stable oscillation of the transmit frequency and receive 1st LO frequency. The PLL output compares the phase of the divided VCO frequency to the reference frequency. The PLL output frequency is controlled by the divided ratio (N-data) of a programmable divider.

The PLL circuit contains the VCO circuit (Q7, Q8). The oscillated signal is amplified at the buffer-amplifiers (Q6, Q5) and then applied to the PLL IC (IC1, pin 2).

The PLL IC contains a prescaler, programmable counter, programmable divider and phase detector, etc. The entered signal is divided at the prescaler and programmable counter section by the N-data ratio from the CPU. The divided signal is detected on phase at the phase detector using the reference frequency.

If the oscillated signal drifts, its phase changes from that of the reference frequency, causing a lock voltage change to compensate for the drift in the oscillated frequency.


A portion of the VCO signal is amplified at the buffer-amplifier (Q4), and is then applied to the receive 1st mixer (Q13) or transmit buffer-amplifier circuit (Q403) via the T/R switching diode (D3, D4).

4-4 POWER SUPPLY CIRCUITS

VOLTAGE LINE

LINE	DESCRIPTION
HV	The voltage from the attached battery pack.
VCC	The same voltage as the HV line (battery voltage) which is controlled by the power switch ([VOL] control).
CPU5	Common 5 V converted from the VCC line by the reference regulator circuit (IC6). The output voltage is applied to the CPU (IC8), the 5 V regulator circuit (Q18, Q19), reset circuit (IC11) and etc.
T5	5 V for transmitter circuits regulated by the T5 regulator circuit (Q22).
R5	5 V for receiver circuits regulated by the R5 regulator circuit (Q21).
S5	Common 5 V converted from the VCC line by the S5 regulator circuit (Q18, Q19).
OPT	The same voltage as the CPU5 line for the optional HM-46L, HM-75A or HS-51 through a resistor (R132).

• PLL CIRCUIT

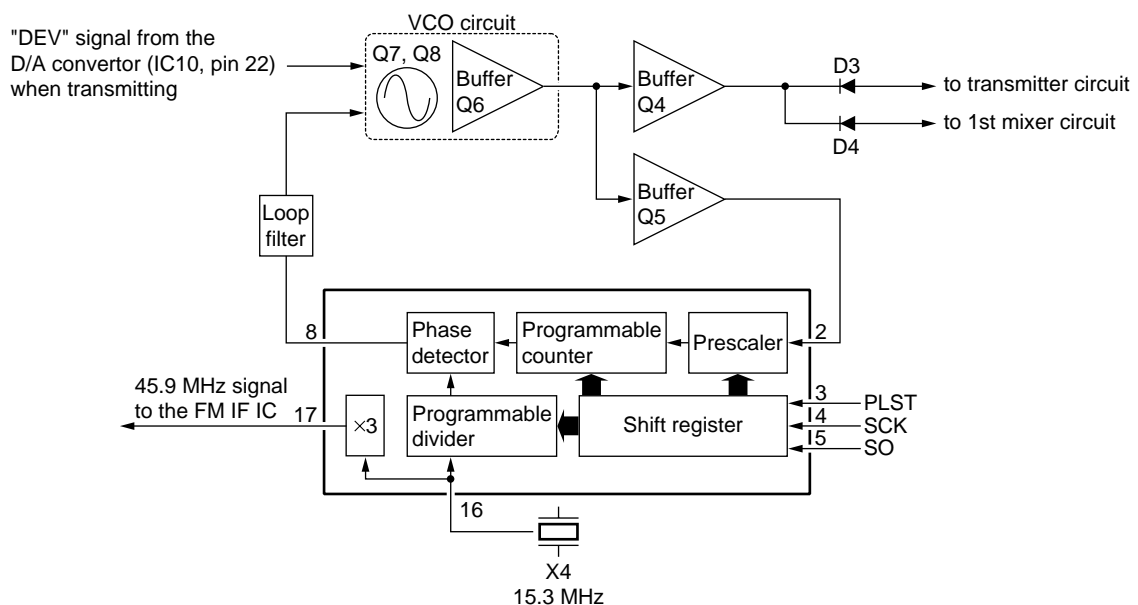

4-5 PORT ALLOCATIONS

4-5-1 CPU (IC8)

Pin number	Port name	Description
1	VIN	Input port for battery voltage detection.
9	RESET	Input port for RESET signal.
11	CSIFT	Outputs reference oscillator for the CPU control signal.
12	SCK	Outputs clock signal to the PLL IC (IC1), EEPROM (IC7), etc.
15	DAST	<ul style="list-style-type: none"> Outputs strobe signals to the expander IC (IC10, pin 6). Input port for the initial version signal.
16	CLIN	Input port for the cloning signal.
17	CLOUT	Outputs the cloning signal.
18	PLST	Outputs strobe signals to the PLL IC (IC1, pin 3).
19	NOIS	Input port for noise signals (pulse type).
21	BUSY	Outputs BUSY detection. Low: The channel is busy.
36–38	OPV3–OPV1	Input ports for the optional unit detection signal from J5.
44–47	KR3–KR0	Output ports for key matrix. Low: When the key is pushed.
49	RMUT	<ul style="list-style-type: none"> Outputs RX mute control signal. Input port for the RX mute signal from optional units.
50	MMUT	<ul style="list-style-type: none"> Output TX mute control signal. Input port for the TX mute signal from optional units.
51	DUSE	Outputs low-pass filter cut-off frequency control signal when DTCS is activated.
52	S5C	Outputs S5 regulator control signal. Low: While power is ON.
53	R5C	Outputs R5 regulator control signal. Low: While receiving.
54	T5C	Outputs T5 regulator control signal. Low: While transmitting.
55	TXC	Outputs APC circuit control signal. High: While transmitting.
56	AFON	Outputs control signal for the regulator circuit of AF power amplifier. High: When squelch is open, etc.
57	LIGT	Outputs LCD backlight control signal. High: Lights ON.
58	ESCK	Outputs EEPROM (IC7, pin 6) clock signal.
59	ESDA	I/O port for data signals from/to EEPROM (IC7, pin 5)

CPU (IC8)–continued

Pin number	Port name	Description
63	UNLK	Input port for unlock signal. High: PLL is unlocked.
90	MTONE	Output port for: Beep audio while receiving. 2/5-tone signals while transmitting.
91	DTMF	Outputs DTMF tone signal while transmitting.
94	CTCIN	CTCSS/DTCS signals input port for decoding.
95	PTT	Input port for the [PTT] switch. High: While [PTT] switch is pushed.
96	BDET	Input port for the battery's type detection.
97	REM0	Input port for the remote-control signal from external MIC (HM-75).
98	SD	Input port for the RSSI detection.
99	LVIN	Input port for the PLL lock voltage.
100	TEMP	Input port for the transceiver's internal temperature detection.

4-5-2 OUTPUT EXPANDER IC (IC10)

Pin number	Port name	Description
2, 3, 10, 11	T1–T4	Output tunable bandpass filter control signals.
6	DAST	Input port for strobe signal from the CPU (IC8, pin 15).
7	SCK	Input port for clock signal from the CPU (IC8, pin 12).

SECTION 5 ADJUSTMENT PROCEDURES

5-1 PREPARATION

When you adjust the contents on page 5-5 or 5-6, SOFTWARE ADJUSTMENT, the optional CS-F3G ADJ ADJUSTMENT SOFTWARE (Rev. 2.0 or later), OPC-478 CLONING CABLE and a JIG CABLE (see illustration at page 5-2) are required.

■ REQUIRED TEST EQUIPMENT

EQUIPMENT	GRADE AND RANGE	EQUIPMENT	GRADE AND RANGE
DC power supply	Output voltage : 7.2 V DC Current capacity : 5 A or more	Audio generator	Frequency range : 300–3000 Hz Output level : 1–500 mV
RF power meter (terminated type)	Measuring range : 1–10 W Frequency range : 300–600 MHz Impedance : 50 Ω SWR : Less than 1.2 : 1	Attenuator	Power attenuation : 40 or 50 dB Capacity : 10 W or more
Frequency counter	Frequency range : 0.1–600 MHz Frequency accuracy : ±1 ppm or better Sensitivity : 100 mV or better	Standard signal generator (SSG)	Frequency range : 120–600 MHz Output level : 0.1 μV–32 mV (–127 to –17 dBm)
FM deviation meter	Frequency range : DC–600 MHz Measuring range : 0 to ±5 kHz	DC voltmeter	Input impedance : 50 kΩ/V DC or better
Digital multimeter	Input impedance : 10 MΩ/V DC or better	Oscilloscope	Frequency range : DC–20 MHz Measuring range : 0.01–20 V
		AC millivoltmeter	Measuring range : 10 mV–10 V

■ SYSTEM REQUIREMENTS

- IBM PC compatible computer with an RS -232C serial port (38400 bps or faster)
- Microsoft Windows 95 or Windows 98
- Intel i486DX processor or faster (Pentium 100 MHz or faster recommended)
- At least 16 MB RAM and 10 MB of hard disk space
- 640×480 pixel display (800×600 pixel display recommended)

■ ADJUSTMENT SOFTWARE INSTALLATION

NOTE: Before using the program, make a backup copy of the original disk. After making a backup copy, keep the original disk in a safe place.


- ① Boot up Windows.
 - Quit all applications when Windows is running.
- ② Insert the backup disk1 into the appropriate floppy drive.
- ③ Select 'Run' from the [Start] menu.
- ④ Type the setup program name using the full path name, then push the [Enter] key. (A:\ setup)
- ⑤ Follow the prompts.
- ⑥ Program group 'CS-F3G ADJ' appears in the 'Programs' folder of the [Start] menu.

■ STARTING SOFTWARE ADJUSTMENT

- ① Connect IC-F4GT/GS and PC with the optional OPC-478 and the JIG cable.
- ② Boot up Windows, and turn the transceiver power ON.
- ③ Click the program group 'CS-F3G ADJ' in the 'Programs' folder of the [Start] menu, then CS-F3G ADJ's window is appeared.
- ④ Click the TCXO tag.
- ⑤ Click 'Connect' on the CS-F3G's window, then appears IC-F4GT/GS's up-to-date condition.
- ⑥ Set or modify adjustment data as desired.

IBM is a registered trademark of International Business Machines Corporation in the U.S.A. and other countries. Microsoft and Windows are registered trademarks of Microsoft Corporation in the U.S.A. and other countries. Screen shots produced with permission from Microsoft Corporation. All other products or brands are registered trademarks or trademarks of their respective holders.


• ADJUSTMENT SOFTWARE'S SCREEN DISPLAY EXAMPLE

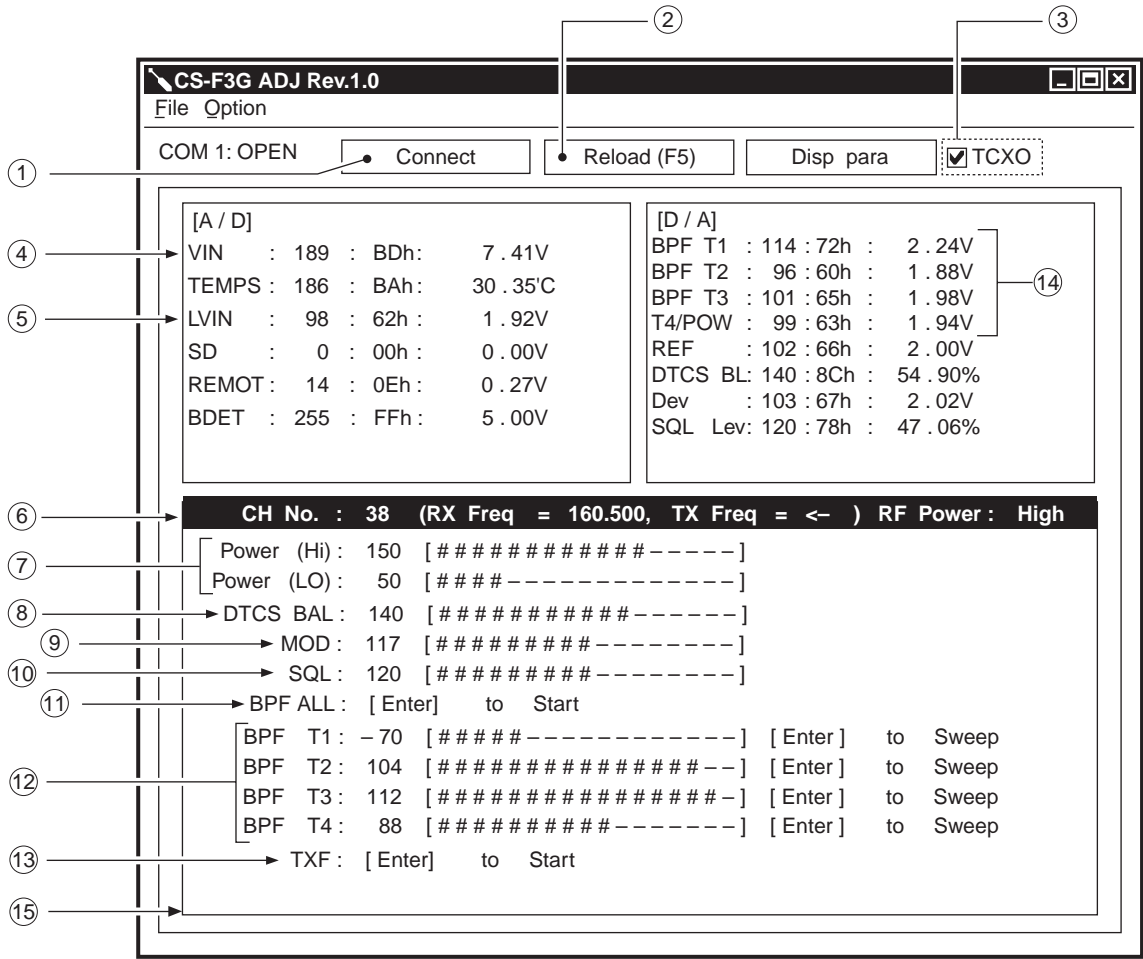


NOTE: The above values for settings are example only.
Each transceiver has its own specific values for each setting.

- | | |
|--|---|
| ① : Transceiver's connection state | ⑨ : FM deviation |
| ② : Reload adjustment data | ⑩ : Squelch level |
| ③ : TCXO tag (must check for F4G adjustment) | ⑪ : Receive sensitivity (automatically) |
| ④ : Connected DC voltage | ⑫ : Receive sensitivity (manually) |
| ⑤ : PLL lock voltage | ⑬ : Reference frequency |
| ⑥ : Operating channel select | ⑭ : Receive sensitivity measurement |
| ⑦ : RF output power | ⑮ : Adjustment items |
| ⑧ : DTCS wave form | |


• JIG CABLE

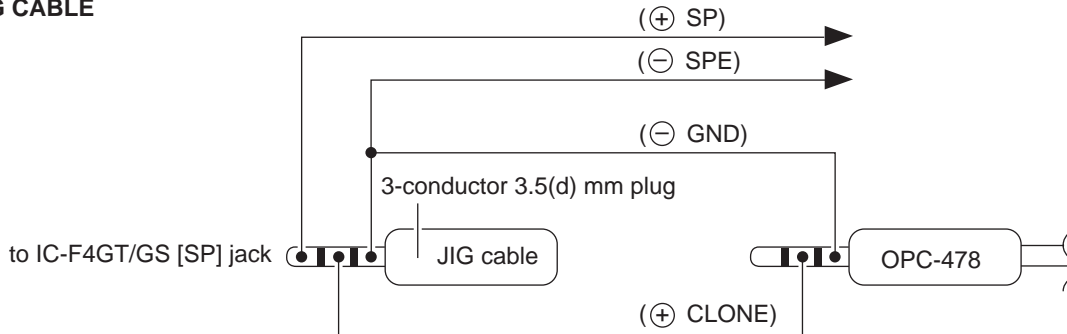

• CONNECTION

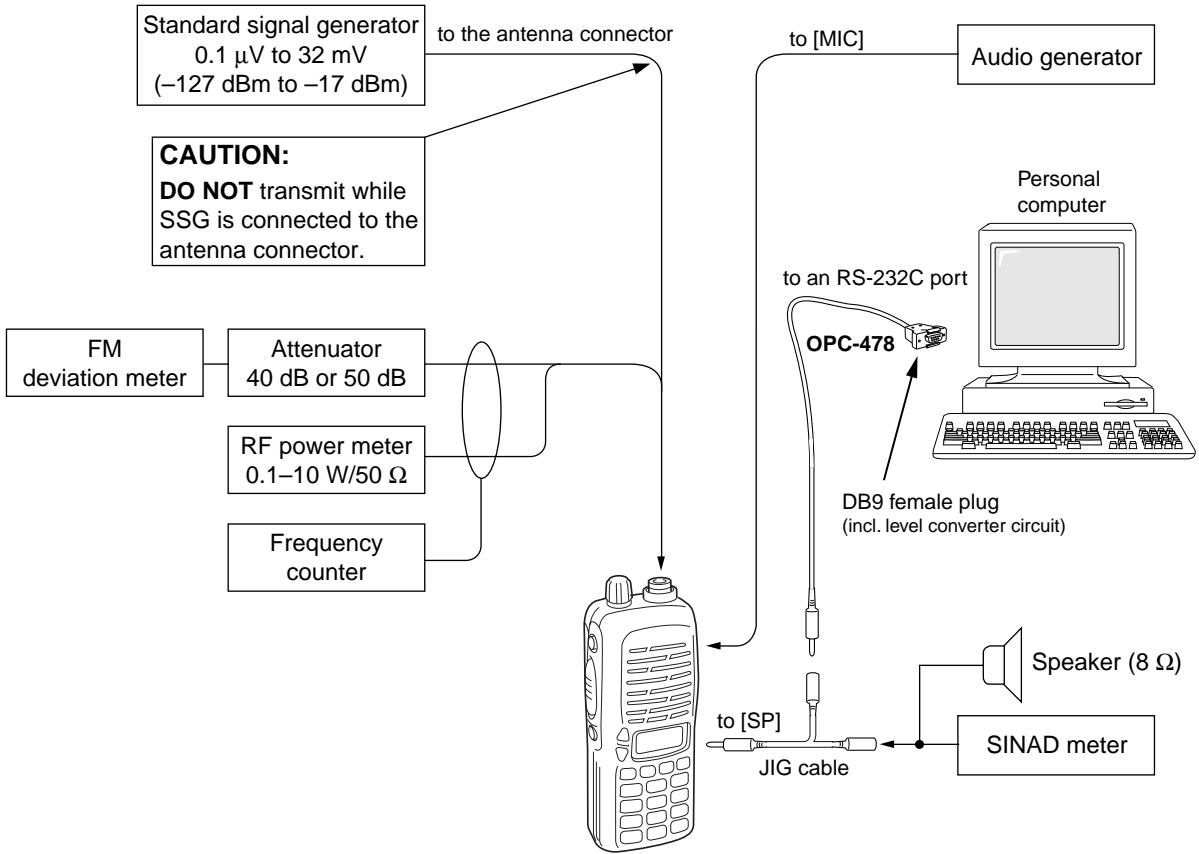


• DC POWER CABLE CONNECTIONS

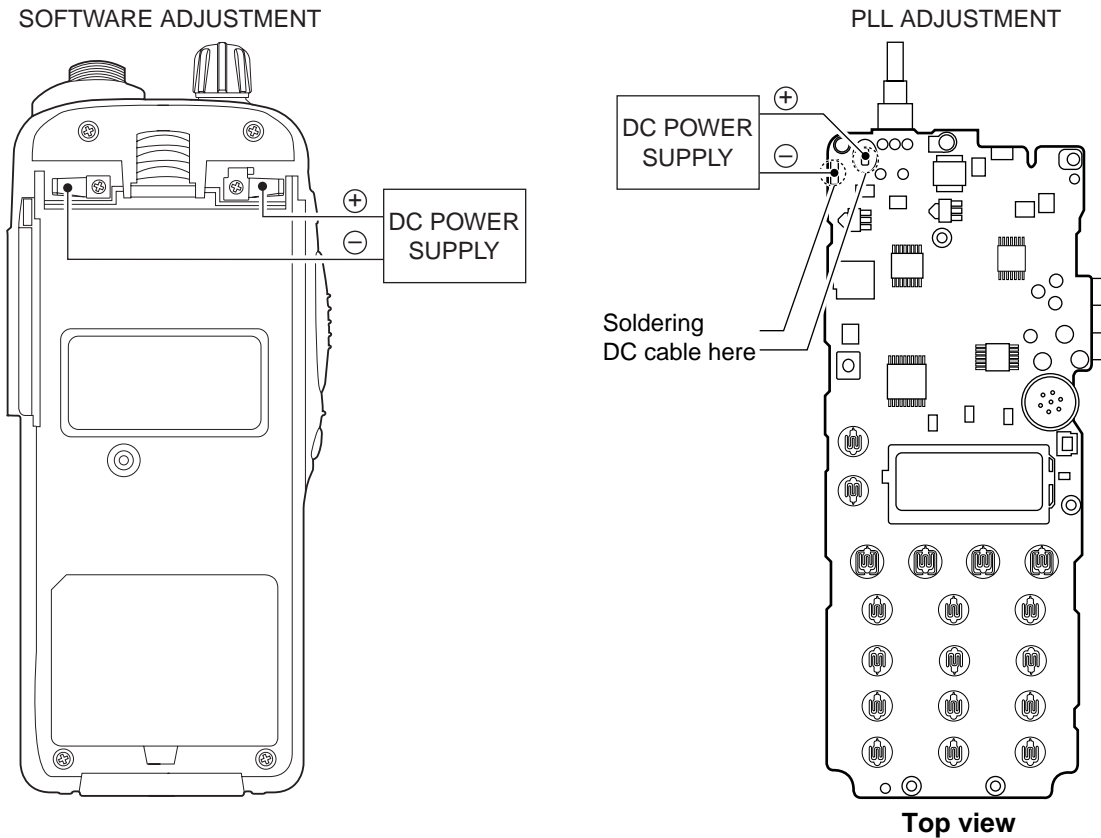

5-2 PLL ADJUSTMENT


ADJUSTMENT	ADJUSTMENT CONDITIONS	MEASUREMENT		VALUE	ADJUSTMENT	
		UNIT	LOCATION		UNIT	ADJUST
PLL LOCK VOLTAGE	1 • Operating frequency: 440.000 MHz • Receiving	MAIN	Connect a digital multi meter to check point LV.	1.3 V	MAIN	L11
	2 • Transmitting			1.3 V		L405
	3 • Operating frequency: 470.000 MHz • Receiving			3.0–4.5 V		Verify
	4 • Transmitting			3.0–4.5 V		

• MAIN unit

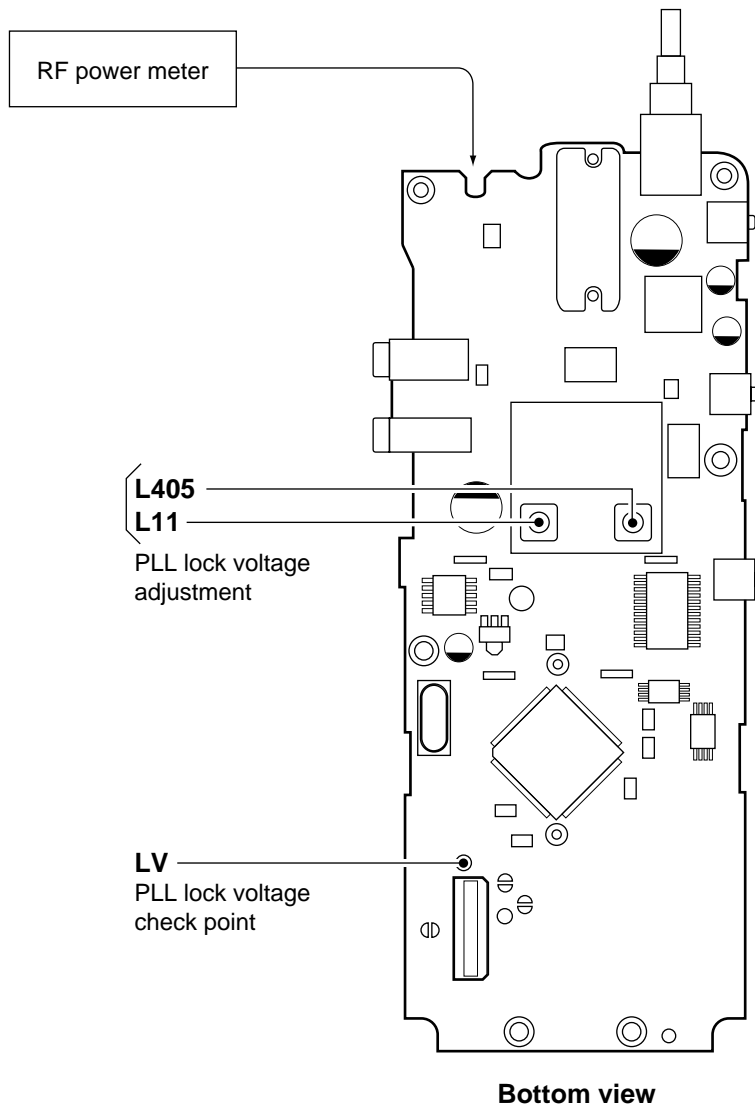

5-3 SOFTWARE ADJUSTMENT

 Select an operation using [↑] / [↓] keys, then set specified value using [←] / [→] keys on the connected computer keyboard.

ADJUSTMENT	ADJUSTMENT CONDITION	MEASUREMENT		VALUE
		UNIT	LOCATION	
REFERENCE FREQUENCY [TXF]	1 <ul style="list-style-type: none"> Operating frequency: 440.000 MHz High/Low switch : Low Connect the RF power meter or 50 Ω dummy load to the antenna connector. Transmitting 	Top panel	Loosely couple a frequency counter to the antenna connector.	440.0000 MHz
OUTPUT POWER [POWER(LO)]	1 <ul style="list-style-type: none"> Operating frequency: 470.000 MHz High/Low switch : Low Transmitting 	Top panel	Connect an RF power meter to the antenna connector.	1.0 W
[POWER(HI)]	2 <ul style="list-style-type: none"> High/Low switch : High Transmitting 			4.0 W
FM DEVIATION [MOD]	1 <ul style="list-style-type: none"> Operating frequency: 440.000 MHz High/Low switch : Low Connect the audio generator to the [MIC] jack and set as: 1.0 kHz/150 mVrms Set the FM deviation meter as: HPF : OFF LPF : 20 kHz De-emphasis : OFF Detector : (P-P)/2 Transmitting 	Top panel	Connect an FM deviation meter to the antenna connector through the attenuator.	±2.0 kHz
DTCS WAVE FORM [DTCS BAL]	1 <ul style="list-style-type: none"> Operating frequency: 470.000 MHz High/Low switch : Low No audio applied to the [MIC] jack. DTCS code : 007 Transmitting 	Top panel	Connect an FM deviation meter with an oscilloscope to the antenna connector through an attenuator.	Set to flat waveform 

SOFTWARE ADJUSTMENT – continued

Select an operation using [↑] / [↓] keys, then set specified value using [←] / [→] keys on the connected computer keyboard.

ADJUSTMENT	ADJUSTMENT CONDITION	MEASUREMENT		VALUE	
		UNIT	LOCATION		
RX SENSITIVITY [BPF T1] – [BPF T4]	1	<ul style="list-style-type: none"> • Operating frequency: 440.000 MHz • Connect a standard signal generator to the antenna connector and set as: <ul style="list-style-type: none"> Frequency : 440.000 MHz Level : 10 μV* (-87 dBm) Modulation : 1 kHz Deviation : \pm1.75 kHz • Receiving 	Top panel	Connect a SINAD meter with an 8 Ω load to the [SP] jack.	Minimum distortion level
	<p>CONVENIENT: The BPF T1–BPF T4 can be adjusted automatically.</p> <p>①-1: Set the cursor to “BPF ALL” on the adjustment program and then push [ENTER] key.</p> <p>①-2: The connected PC tunes BPF T1–BPF T4 to peak levels.</p> <p style="text-align: center;">or</p> <p>②-1: Set the cursor to one of BPF T1, T2, T3, or T4 as desired.</p> <p>②-2: Push [ENTER] key to start tuning.</p> <p>②-3: Repeat ②-1 and ②-2 to perform additional BPF tuning.</p>				
SQUELCH LEVEL [SQL]	1	<ul style="list-style-type: none"> • Operating frequency: 440.000 MHz • Connect a standard signal generator to the antenna connector and set as: <ul style="list-style-type: none"> Frequency : 440.000 MHz Level : 0.2 μV* (-121 dBm) Modulation : 1 kHz Deviation : \pm1.75 kHz • Receiving 	Top panel	Connect a SINAD meter with an 8 Ω load to the [SP] jack.	12 dB SINAD
	2	<ul style="list-style-type: none"> • Receiving 			At the point where the audio signals just appears.

*The output level of the standard signal generator (SSG) is indicated as the SSG's open circuit.

SECTION 6 PARTS LIST

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION	
IC1	1130007610	S.IC	μPD3140GS-E1 (DS8)
IC2	1110003490	S.IC	TA31136FN (D.EL)
IC3	1110005140	S.IC	NJM3403AV-TE1
IC4	1130008090	S.IC	BU4066BCFV-E1
IC5	1110001810	S.IC	TA7368F (TP1)
IC6	1180001740	S.IC	TK11250BMCL
IC7	1130009680	S.IC	HN58X2432TI
IC8	1140008880	S.IC	HD6433876B34H
IC10	1190000350	S.IC	M62363FP-650C
IC11	1130009110	S.IC	S-80942ANMP-DD6-T2
IC12	1110003800	S.IC	NJM2904V-TE1
IC13	1110002750	S.IC	TA75S01F (TE85R)
Q1	1560001050	S.FET	2SK2974
Q2	1560001020	S.FET	2SK2973 (MTS101P)
Q3	1530002620	S.TRANSISTOR	2SC3585 R44-T2B
Q4	1530003310	S.TRANSISTOR	2SC5107-O (TE85R)
Q5	1530003310	S.TRANSISTOR	2SC5107-O (TE85R)
Q6	1530003310	S.TRANSISTOR	2SC5107-O (TE85R)
Q7	1530003230	S.TRANSISTOR	2SC5085-Y (TE85R)
Q8	1530003230	S.TRANSISTOR	2SC5085-Y (TE85R)
Q10	1530002690	S.TRANSISTOR	2SC4116-GR (TE85R)
Q11	1590001190	S.TRANSISTOR	XP6501-(TX) .AB
Q12	1580000720	S.FET	3SK239AXRTL
Q13	1580000720	S.FET	3SK239AXRTL
Q14	1530002600	S.TRANSISTOR	2SC4116-O (TE85R)
Q15	1520000460	S.TRANSISTOR	2SB1132 T100 R
Q16	1590001190	S.TRANSISTOR	XP6501-(TX) .AB
Q17	1590002530	S.TRANSISTOR	UN911H (TX)
Q18	1520000460	S.TRANSISTOR	2SB1132 T100 R
Q19	1590001190	S.TRANSISTOR	XP6501-(TX) .AB
Q20	1590000720	S.TRANSISTOR	DTA144EUA T106
Q21	1510000920	S.TRANSISTOR	2SA1577 T107 Q
Q22	1510000920	S.TRANSISTOR	2SA1577 T107 Q
Q25	1530002690	S.TRANSISTOR	2SC4116-GR (TE85R)
Q31	1590000660	S.TRANSISTOR	DTC144TU T107
Q33	1590000430	S.TRANSISTOR	DTC144EUA T106
Q34	1560000540	S.FET	2SK880-Y (TE85R)
Q35	1530002690	S.TRANSISTOR	2SC4116-GR (TE85R)
Q36	1530002690	S.TRANSISTOR	2SC4116-GR (TE85R)
Q37	1590000720	S.TRANSISTOR	DTA144EUA T106
Q38	1590001940	S.TRANSISTOR	DTC144EE TL
Q401	1590001400	S.TRANSISTOR	XP1214 (TX)
Q402	1590000430	S.TRANSISTOR	DTC144EUA T106
Q403	1530003310	S.TRANSISTOR	2SC5107-O (TE85R)
Q404	1550000010	S.FET	2SJ364-Q (TX)
D1	1750000580	S.DIODE	1SV307 (TPH3)
D2	1790000620	S.DIODE	MA77 (TX)
D3	1790000620	S.DIODE	MA77 (TX)
D4	1790000620	S.DIODE	MA77 (TX)
D5	1720000370	S.VARICAP	HVU350TRF
D7	1720000660	S.VARICAP	1SV288 (TPH2)
D8	1790000620	S.DIODE	MA77 (TX)
D10	1720000370	S.VARICAP	HVU350TRF
D11	1720000370	S.VARICAP	HVU350TRF
D12	1720000370	S.VARICAP	HVU350TRF
D14	1790000620	S.DIODE	MA77 (TX)
D26	1160000070	S.DIODE	DAN202K T146
D27	1790001670	S.DIODE	RB706F-40T106
D29	1730002260	S.ZENER	MA8030-H (TX)
D32	1790001670	S.DIODE	RB706F-40T106
D33	1790001670	S.DIODE	RB706F-40T106
*D34	1790000620	S.DIODE	MA77 (TX)
D401	1720000370	S.VARICAP	HVU350TRF
D403	1720000370	S.VARICAP	HVU350TRF
D404	1720000520	S.VARICAP	1T365-01-T8A
FI1	2010002450	S.XTAL	FL-313 (46.35 MHz)
FI2	2020001080	S.CERAMIC	SFPC450G-TC01

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION	
X2	6050010870	S.XTAL	CR-663 (9.200 MHz)
X3	6070000210	S.DISCRIMINATOR	CDBCA450CX24
X4	6050010930	S.XTAL	CR-662 (15.3 MHz)
L1	6200008240	S.COIL	0.30-0.9-5TL 14N
L2	6200008240	S.COIL	0.30-0.9-5TL 14N
L4	6200008240	S.COIL	0.30-0.9-5TL 14N
L6	6200007690	S.COIL	LQN21A 18NJ04
L7	6200005670	S.COIL	ELJRE 12NG-F
L8	6200005710	S.COIL	ELJRE 27NG-F
L9	6200005710	S.COIL	ELJRE 27NG-F
L11	6200004110	S.COIL	MC152-E558ANA-100050
L12	6200003550	S.COIL	MLF1608A 4R7K-T
L13	6200003960	S.COIL	MLF1608A 1R0K-T
L14	6200005680	S.COIL	ELJRE 15NG-F
L15	6200008240	S.COIL	0.30-0.9-5TL 14N
L17	6200008440	S.COIL	LQN21A 8N2D04
L18	6200008440	S.COIL	LQN21A 8N2D04
L19	6200008440	S.COIL	LQN21A 8N2D04
L20	6200002850	S.COIL	NL 252018T-R82J
L21	6200005720	S.COIL	ELJRE 33NG-F
L22	6200008240	S.COIL	0.30-0.9-5TL 14N
L24	6200009250	S.COIL	LQW1608A R22G00
L25	6200004480	S.COIL	MLF1608D R82K-T
L26	6200003590	S.COIL	EXCCL3225U1
L31	6200008520	S.COIL	0.30-0.7-3TR 4.9N
L33	6200009210	S.COIL	NL 252018T-390J
L402	6200008440	S.COIL	LQN21A 8N2D04
L404	6200004660	S.COIL	MLF1608A 1R8K-T
L405	6200004110	S.COIL	MC152-E558ANA-100050
L406	6200004660	S.COIL	MLF1608A 1R8K-T
L407	6200003550	S.COIL	MLF1608A 4R7K-T
L411	6200005700	S.COIL	ELJRE 22NG-F
L441	6200003960	S.COIL	MLF1608A 1R0K-T
L442	6200004720	S.COIL	MLF1608D R10K-T
R1	7030003670	S.RESISTOR	ERJ3GEYJ 823 V (82 kΩ)
R2	7030003580	S.RESISTOR	ERJ3GEYJ 153 V (15 kΩ)
R3	7030003580	S.RESISTOR	ERJ3GEYJ 153 V (15 kΩ)
R7	7030004980	S.RESISTOR	ERJ2GEJ 101 X (100 Ω)
R9	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R12	7030005040	S.RESISTOR	ERJ2GEJ 472 X (4.7 kΩ)
R13	7030005530	S.RESISTOR	ERJ3GEYJ 100 X (10 Ω)
R14	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R15	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R17	7030005040	S.RESISTOR	ERJ2GEJ 472 X (4.7 kΩ)
R18	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R19	7030004980	S.RESISTOR	ERJ2GEJ 101 X (100 Ω)
R20	7030003660	S.RESISTOR	ERJ3GEYJ 683 V (68 kΩ)
R21	7030003360	S.RESISTOR	ERJ3GEYJ 221 V (220 Ω)
R22	7030003660	S.RESISTOR	ERJ3GEYJ 683 V (68 kΩ)
R23	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R30	7030003480	S.RESISTOR	ERJ3GEYJ 222 V (2.2 kΩ)
R32	7030003540	S.RESISTOR	ERJ3GEYJ 682 V (6.8 kΩ)
R33	7030008410	S.RESISTOR	ERJ2GEJ 392 X (3.9 kΩ)
R34	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R41	7030004970	S.RESISTOR	ERJ2GEJ 470 X (47 Ω)
R44	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R48	7030005090	S.RESISTOR	ERJ2GEJ 104 X (100 kΩ)
R49	7030003630	S.RESISTOR	ERJ3GEYJ 393 V (39 kΩ)
R50	7030003750	S.RESISTOR	ERJ3GEYJ 394 V (390 kΩ)
R51	7030003760	S.RESISTOR	ERJ3GEYJ 474 V (470 kΩ)
R52	7030003700	S.RESISTOR	ERJ3GEYJ 154 V (150 kΩ)
R53	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R54	7030003700	S.RESISTOR	ERJ3GEYJ 154 V (150 kΩ)
R55	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R59	7030003340	S.RESISTOR	ERJ3GEYJ 151 V (150 Ω)
R61	7030003280	S.RESISTOR	ERJ3GEYJ 470 V (47 Ω)
R62	7030003720	S.RESISTOR	ERJ3GEYJ 224 V (220 kΩ)
R63	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R64	7030003720	S.RESISTOR	ERJ3GEYJ 224 V (220 kΩ)
R65	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R66	7030003700	S.RESISTOR	ERJ3GEYJ 154 V (150 kΩ)
R67	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)

S.=Surface mount

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION	
R68	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R69	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R70	7030003520	S.RESISTOR	ERJ3GEYJ 472 V (4.7 kΩ)
R72	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R75	7030003350	S.RESISTOR	ERJ3GEYJ 181 V (180 Ω)
R77	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R79	7030003350	S.RESISTOR	ERJ3GEYJ 181 V (180 Ω)
R80	7030005310	S.RESISTOR	ERJ2GEJ 124 X (120 kΩ)
R81	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R82	7030003510	S.RESISTOR	ERJ3GEYJ 392 V (3.9 kΩ)
R83	7030003380	S.RESISTOR	ERJ3GEYJ 331 V (330 Ω)
R84	7030003280	S.RESISTOR	ERJ3GEYJ 470 V (47 Ω)
R85	7030003460	S.RESISTOR	ERJ3GEYJ 152 V (1.5 kΩ)
R86	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R87	7030003480	S.RESISTOR	ERJ3GEYJ 222 V (2.2 kΩ)
R88	7030003620	S.RESISTOR	ERJ3GEYJ 333 V (33 kΩ)
R89	7030003450	S.RESISTOR	ERJ3GEYJ 122 V (1.2 kΩ)
R90	7030003780	S.RESISTOR	ERJ3GEYJ 684 V (680 kΩ)
R93	7030003610	S.RESISTOR	ERJ3GEYJ 273 V (27 kΩ)
R94	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R95	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R96	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R97	7030003720	S.RESISTOR	ERJ3GEYJ 224 V (220 kΩ)
R98	7030003710	S.RESISTOR	ERJ3GEYJ 184 V (180 kΩ)
R99	7030003590	S.RESISTOR	ERJ3GEYJ 183 V (18 kΩ)
R100	7030008060	S.RESISTOR	RR0816P-222-D (2.2 kΩ)
R101	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R102	7030003200	S.RESISTOR	ERJ3GEYJ 100 V (10 Ω)
R103	7030003570	S.RESISTOR	ERJ3GEYJ 123 V (12 kΩ)
R104	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R105	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R107	7030003700	S.RESISTOR	ERJ3GEYJ 154 V (150 kΩ)
R108	7030003710	S.RESISTOR	ERJ3GEYJ 184 V (180 kΩ)
R109	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R112	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R113	7030003660	S.RESISTOR	ERJ3GEYJ 683 V (68 kΩ)
R114	7030003620	S.RESISTOR	ERJ3GEYJ 333 V (33 kΩ)
R115	7030005310	S.RESISTOR	ERJ2GEJ 124 X (120 kΩ)
R116	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R117	7030003460	S.RESISTOR	ERJ3GEYJ 152 V (1.5 kΩ)
R120	7030003660	S.RESISTOR	ERJ3GEYJ 683 V (68 kΩ)
R121	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R122	7030003490	S.RESISTOR	ERJ3GEYJ 272 V (2.7 kΩ)
R123	7030003500	S.RESISTOR	ERJ3GEYJ 332 V (3.3 kΩ)
R125	7030003610	S.RESISTOR	ERJ3GEYJ 273 V (27 kΩ)
R126	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R127	7030003260	S.RESISTOR	ERJ3GEYJ 330 V (33 Ω)
R128	7030003200	S.RESISTOR	ERJ3GEYJ 100 V (10 Ω)
R130	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R131	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R132	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R133	7030004040	S.RESISTOR	ERJ3GEYJ 4R7 V (4.7 Ω)
R134	7030003480	S.RESISTOR	ERJ3GEYJ 222 V (2.2 kΩ)
R135	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R136	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R137	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R139	7030003520	S.RESISTOR	ERJ3GEYJ 472 V (4.7 kΩ)
R140	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R141	7030003520	S.RESISTOR	ERJ3GEYJ 472 V (4.7 kΩ)
R142	7030004980	S.RESISTOR	ERJ2GEJ 101 X (100 Ω)
R143	7210003060	VARIABLE	TP76N00N-15F-10KA-2251
R144	7030003620	S.RESISTOR	ERJ3GEYJ 333 V (33 kΩ)
R145	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R146	7030003570	S.RESISTOR	ERJ3GEYJ 123 V (12 kΩ)
R147	7030003570	S.RESISTOR	ERJ3GEYJ 123 V (12 kΩ)
R148	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R150	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R152	7030005170	S.RESISTOR	ERJ2GEJ 474 X (470 kΩ)
R153	7030005170	S.RESISTOR	ERJ2GEJ 474 X (470 kΩ)
R154	7030005170	S.RESISTOR	ERJ2GEJ 474 X (470 kΩ)
R155	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R159	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R160	7030003320	S.RESISTOR	ERJ3GEYJ 101 V (100 Ω)
R161	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R162	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R163	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R164	7030005310	S.RESISTOR	ERJ2GEJ 124 X (120 kΩ)
R165	7030005310	S.RESISTOR	ERJ2GEJ 124 X (120 kΩ) [F4GT] only [F4GS] only
R168	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R169	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION	
R170	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R171	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R174	7030003580	S.RESISTOR	ERJ3GEYJ 153 V (15 kΩ)
R176	7030003510	S.RESISTOR	ERJ3GEYJ 392 V (3.9 kΩ)
R177	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R178	7030005340	S.RESISTOR	RR0816P-332-D (3.3 kΩ)
R181	7030005870	S.RESISTOR	RR0816R-104-D (100 kΩ)
R182	7510001280	S.THERMISTOR	NTCCM20124AG473J-T
R184	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R185	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R186	7030005240	S.RESISTOR	ERJ2GEJ 473 X (47 kΩ)
R190	7030003600	S.RESISTOR	ERJ3GEYJ 223 V (22 kΩ)
R191	7030003600	S.RESISTOR	ERJ3GEYJ 223 V (22 kΩ)
R192	7030003600	S.RESISTOR	ERJ3GEYJ 223 V (22 kΩ)
R193	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R194	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R195	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R196	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R197	7030003720	S.RESISTOR	ERJ3GEYJ 224 V (220 kΩ)
R198	7030003590	S.RESISTOR	ERJ3GEYJ 183 V (18 kΩ)
R199	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R200	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R202	7030005240	S.RESISTOR	ERJ2GEJ 473 X (47 kΩ)
R203	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R204	7030003500	S.RESISTOR	ERJ3GEYJ 332 V (3.3 kΩ)
R205	7030003460	S.RESISTOR	ERJ3GEYJ 152 V (1.5 kΩ)
R207	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R208	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R209	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R210	7030003480	S.RESISTOR	ERJ3GEYJ 222 V (2.2 kΩ)
R211	7030003690	S.RESISTOR	ERJ3GEYJ 124 V (120 kΩ)
R212	7030003660	S.RESISTOR	ERJ3GEYJ 683 V (68 kΩ)
R213	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R215	7030005870	S.RESISTOR	RR0816R-104-D (100 kΩ)
R216	7030005870	S.RESISTOR	RR0816R-104-D (100 kΩ)
R218	7030003690	S.RESISTOR	ERJ3GEYJ 124 V (120 kΩ)
R219	7030003690	S.RESISTOR	ERJ3GEYJ 124 V (120 kΩ)
R220	7030003740	S.RESISTOR	ERJ3GEYJ 334 V (330 kΩ)
R221	7030003750	S.RESISTOR	ERJ3GEYJ 394 V (390 kΩ)
R223	7030005310	S.RESISTOR	ERJ2GEJ 124 X (120 kΩ)
R224	7030003610	S.RESISTOR	ERJ3GEYJ 273 V (27 kΩ)
R225	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R226	7410000950	S.ARRAY	EXB-V8V 102JV
R227	7030005240	S.RESISTOR	ERJ2GEJ 473 X (47 kΩ)
R228	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R229	7030003710	S.RESISTOR	ERJ3GEYJ 184 V (180 kΩ)
R230	7030003650	S.RESISTOR	ERJ3GEYJ 563 V (56 kΩ)
R231	7030003600	S.RESISTOR	ERJ3GEYJ 223 V (22 kΩ)
R232	7410000950	S.ARRAY	EXB-V8V 102JV
R234	7030003600	S.RESISTOR	ERJ3GEYJ 223 V (22 kΩ)
R235	7030003780	S.RESISTOR	ERJ3GEYJ 684 V (680 kΩ)
R236	7410000950	S.ARRAY	EXB-V8V 102JV
R237	7410000950	S.ARRAY	EXB-V8V 102JV
R238	7410000950	S.ARRAY	EXB-V8V 102JV
R239	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R240	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R241	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R242	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R243	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R244	7030005090	S.RESISTOR	ERJ2GEJ 104 X (100 kΩ)
R245	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R246	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R251	7030003740	S.RESISTOR	ERJ3GEYJ 334 V (330 kΩ)
R252	7030003520	S.RESISTOR	ERJ3GEYJ 472 V (4.7 kΩ)
R253	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R257	7030004050	S.RESISTOR	ERJ3GEYJ 1R0 V (1 Ω)
R258	7030003620	S.RESISTOR	ERJ3GEYJ 333 V (33 kΩ)
R260	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R261	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R262	7030004050	S.RESISTOR	ERJ3GEYJ 1R0 V (1 Ω)
R401	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R402	7030003640	S.RESISTOR	ERJ3GEYJ 473 V (47 kΩ)
R404	7030003720	S.RESISTOR	ERJ3GEYJ 224 V (220 kΩ)
R405	7030003560	S.RESISTOR	ERJ3GEYJ 103 V (10 kΩ)
R410	7030003500	S.RESISTOR	ERJ3GEYJ 332 V (3.3 kΩ)
R411	7030003490	S.RESISTOR	ERJ3GEYJ 272 V (2.7 kΩ)
R413	7030004040	S.RESISTOR	ERJ3GEYJ 4R7 V (4.7 Ω)
R414	7030003390	S.RESISTOR	ERJ3GEYJ 391 V (390 Ω)
R416	7030003500	S.RESISTOR	ERJ3GEYJ 332 V (3.3 kΩ)
R417	7030003500	S.RESISTOR	ERJ3GEYJ 332 V (3.3 kΩ)
R420	7030003400	S.RESISTOR	ERJ3GEYJ 471 V (470 Ω)
R421	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)

S.=Surface mount

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION	
R422	7030003720	S.RESISTOR	ERJ3GEYJ 224 V (220 kΩ)
R445	7030003360	S.RESISTOR	ERJ3GEYJ 221 V (220 Ω)
R446	7030003650	S.RESISTOR	ERJ3GEYJ 563 V (56 kΩ)
R447	7030005000	S.RESISTOR	ERJ2GEJ 471 X (470 Ω)
R448	7030003210	S.RESISTOR	ERJ3GEYJ 120 V (12 Ω)
R449	7030005000	S.RESISTOR	ERJ2GEJ 471 X (470 Ω)
R457	7030004980	S.RESISTOR	ERJ2GEJ 101 X (100 Ω)
R458	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R464	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R465	7030003260	S.RESISTOR	ERJ3GEYJ 330 V (33 Ω)
R469	7030003490	S.RESISTOR	ERJ3GEYJ 272 V (2.7 kΩ)
R473	7030004970	S.RESISTOR	ERJ2GEJ 470 X (47 Ω)
R500	7030003680	S.RESISTOR	ERJ3GEYJ 104 V (100 kΩ)
R501	7030003590	S.RESISTOR	ERJ3GEYJ 183 V (18 kΩ)
R502	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R503	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R504	7030003380	S.RESISTOR	ERJ3GEYJ 331 V (330 Ω)
R505	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R506	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R507	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R508	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R509	7030005050	S.RESISTOR	ERJ2GEJ 103 X (10 kΩ)
R510	7030003440	S.RESISTOR	ERJ3GEYJ 102 V (1 kΩ)
R511	7030007350	S.RESISTOR	ERJ2GEJ 393 X (39 kΩ)
R512	7030003490	S.RESISTOR	ERJ3GEYJ 272 V (2.7 kΩ)
R515	7030005310	S.RESISTOR	ERJ2GEJ 124 X (120 kΩ)
R516	7030003580	S.RESISTOR	ERJ3GEYJ 153 V (15 kΩ)
R517	7030005070	S.RESISTOR	ERJ2GEJ 683 X (68 kΩ)
R518	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R519	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R520	7030007280	S.RESISTOR	ERJ2GEJ 331 X (330 Ω)
R521	7030007280	S.RESISTOR	ERJ2GEJ 331 X (330 Ω)
R522	7030003200	S.RESISTOR	ERJ3GEYJ 100 V (10 Ω)
R523	7030008410	S.RESISTOR	ERJ2GEJ 392 X (3.9 kΩ)
R524	7510001300	S.THERMISTOR	NTCCM1608 4LH 223KC
R525	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R526	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R527	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R528	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R529	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R530	7030004980	S.RESISTOR	ERJ2GEJ 101 X (100 Ω)
R531	7030005120	S.RESISTOR	ERJ2GEJ 102 X (1 kΩ)
R532	7030003800	S.RESISTOR	ERJ3GEYJ 105 V (1 MΩ)
R533	7030003840	S.RESISTOR	ERJ3GEYJ 225 V (2.2 MΩ)
C3	4030006980	S.CERAMIC	C1608 CH 1H 070D-T-A
C8	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C9	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C10	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C11	4030011770	S.CERAMIC	C1608 CH 1H 060B-T-A
C12	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C13	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C14	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C15	4030014340	S.CERAMIC	ECUE1H390JQC
C17	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C18	4030006850	S.CERAMIC	C1608 JB 1H 471K-T-A
C19	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C21	4550006540	S.TANTALUM	ECST1CY475R
C22	4030007020	S.CERAMIC	C1608 CH 1H 120J-T-A
C24	4030006850	S.CERAMIC	C1608 JB 1H 471K-T-A
C25	4030009910	S.CERAMIC	C1608 CH 1H 040B-T-A
C26	4030013850	S.CERAMIC	ECUE1E102KBQ
C27	4030009920	S.CERAMIC	C1608 CH 1H 050B-T-A
C28	4030007020	S.CERAMIC	C1608 CH 1H 120J-T-A
C29	4030006850	S.CERAMIC	C1608 JB 1H 471K-T-A
C30	4030007020	S.CERAMIC	C1608 CH 1H 120J-T-A
C31	4030009920	S.CERAMIC	C1608 CH 1H 050B-T-A
C32	4030006850	S.CERAMIC	C1608 JB 1H 471K-T-A
C33	4030006850	S.CERAMIC	C1608 JB 1H 471K-T-A
C42	4030013850	S.CERAMIC	ECUE1E102KBQ
C47	4550006360	S.TANTALUM	ECST1VY104R
C48	4550006450	S.TANTALUM	ECST1EY105R
C50	4550006200	S.TANTALUM	ECSTOJY106R
C51	4030007010	S.CERAMIC	C1608 CH 1H 100D-T-A
C52	4030007010	S.CERAMIC	C1608 CH 1H 100D-T-A
C53	4030007030	S.CERAMIC	C1608 CH 1H 150J-T-A
C54	4030013850	S.CERAMIC	ECUE1E102KBQ
C55	4030016790	S.CERAMIC	ECJ0EB1C103K
C56	4030016790	S.CERAMIC	ECJ0EB1C103K
C60	4030013850	S.CERAMIC	ECUE1E102KBQ
C61	4030011770	S.CERAMIC	C1608 CH 1H 060B-T-A

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION	
C62	4030011770	S.CERAMIC	C1608 CH 1H 060B-T-A
C63	4030007010	S.CERAMIC	C1608 CH 1H 100D-T-A
C65	4030009910	S.CERAMIC	C1608 CH 1H 040B-T-A
C66	4030006980	S.CERAMIC	C1608 CH 1H 070D-T-A
C67	4030009530	S.CERAMIC	C1608 CH 1H 030B-T-A
C71	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C72	4550006320	S.TANTALUM	ECSTOJY475R
C73	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C75	4030016930	S.CERAMIC	ECJ0EB1A104K
C76	4030006980	S.CERAMIC	C1608 CH 1H 070D-T-A
C78	4030009910	S.CERAMIC	C1608 CH 1H 040B-T-A
C79	4030009540	S.CERAMIC	C1608 CH 1H 1R5B-T-A
C84	4030007090	S.CERAMIC	C1608 CH 1H 470J-T-A
C85	4030006980	S.CERAMIC	C1608 CH 1H 070D-T-A
C86	4030009920	S.CERAMIC	C1608 CH 1H 050B-T-A
C87	4030007090	S.CERAMIC	C1608 CH 1H 470J-T-A
C88	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C89	4030009500	S.CERAMIC	C1608 CH 1H 0R5B-T-A
C90	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C91	4030006970	S.CERAMIC	C1608 CH 1H 060D-T-A
C92	4030006990	S.CERAMIC	C1608 CH 1H 080D-T-A
C93	4030014180	S.CERAMIC	ECUE1H470JQC
C94	4030009500	S.CERAMIC	C1608 CH 1H 0R5B-T-A
C95	4030014180	S.CERAMIC	ECUE1H470JQC
C96	4030006990	S.CERAMIC	C1608 CH 1H 080D-T-A
C97	4030006970	S.CERAMIC	C1608 CH 1H 060D-T-A
C98	4030007050	S.CERAMIC	C1608 CH 1H 220J-T-A
C99	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C100	4030006990	S.CERAMIC	C1608 CH 1H 080D-T-A
C104	4030013850	S.CERAMIC	ECUE1E102KBQ
C105	4030014180	S.CERAMIC	ECUE1H470JQC
C106	4030007030	S.CERAMIC	C1608 CH 1H 150J-T-A
C107	4030007090	S.CERAMIC	C1608 CH 1H 470J-T-A
C108	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C109	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C110	4030009990	S.CERAMIC	C1608 CH 1H 200J-T-A
C111	4030013850	S.CERAMIC	ECUE1E102KBQ
C112	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C113	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C114	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C115	4030007130	S.CERAMIC	C1608 CH 1H 101J-T-A
C116	4030014200	S.CERAMIC	ECUE1H101JQC
C117	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C118	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C119	4030008680	S.CERAMIC	C2012 JF 1C 105Z-T-A
C120	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C121	4030007170	S.CERAMIC	C1608 CH 1H 221J-T-A
C122	4030007170	S.CERAMIC	C1608 CH 1H 221J-T-A
C123	4030013850	S.CERAMIC	ECUE1E102KBQ
C124	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C125	4030006870	S.CERAMIC	C1608 JB 1H 222K-T-A
C126	4030008470	S.CERAMIC	C1608 JB 1H 272K-T-A
C128	4030008680	S.CERAMIC	C2012 JF 1C 105Z-T-A
C129	4550006680	S.TANTALUM	ECSTOJY156R
C132	4030008770	S.CERAMIC	C1608 JB 1H 562K-T-A
C133	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C134	4030007160	S.CERAMIC	C1608 CH 1H 181J-T-A
C135	4030007160	S.CERAMIC	C1608 CH 1H 181J-T-A
C136	4030008770	S.CERAMIC	C1608 JB 1H 562K-T-A
C137	4030008900	S.CERAMIC	C1608 JB 1C 333K-T-A
C139	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C140	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C144	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A
C145	4510004630	S.ELECTROLYTIC	ECEV1CA100SR
C146	4030011810	S.CERAMIC	C1608 JB 1A 224K-T-N
C147	4030008630	S.CERAMIC	C1608 JF 1C 104Z-T-A
C148	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C149	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C150	4550006200	S.TANTALUM	ECSTOJY106R
C151	4030007090	S.CERAMIC	C1608 CH 1H 470J-T-A
C152	4030008920	S.CERAMIC	C1608 JB 1C 473K-T-A
C153	4510006940	S.ELECTROLYTIC	EEVFC0J101P
C154	4550006200	S.TANTALUM	ECSTOJY106R
C155	4510004630	S.ELECTROLYTIC	ECEV1CA100SR
C156	4030011600	S.CERAMIC	C1608 JB 1C 104KT-N
C158	4550006620	S.TANTALUM	ECSTOJY226R
C159	4030006850	S.CERAMIC	C1608 JB 1H 471K-T-A
C160	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C161	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C162	4030006900	S.CERAMIC	C1608 JB 1E 103K-T-A
C163	4030013850	S.CERAMIC	ECUE1E102KBQ
C164	4030006860	S.CERAMIC	C1608 JB 1H 102K-T-A

S.=Surface mount

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION
C165	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C167	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C168	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C169	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C173	4510004640	S.ELECTROLYTIC ECEV1CA470SP
C174	4510005430	S.ELECTROLYTIC ECEVOJA220SR
C179	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C193	4030006990	S.CERAMIC C1608 CH 1H 080D-T-A
C194	4030007020	S.CERAMIC C1608 CH 1H 120J-T-A
C195	4030007080	S.CERAMIC C1608 CH 1H 390J-T-A
C196	4030006850	S.CERAMIC C1608 JB 1H 471K-T-A
C197	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C198	4550006170	S.TANTALUM ECST1AY225R
C199	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C200	4030008900	S.CERAMIC C1608 JB 1C 333K-T-A
C201	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C202	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C204	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C205	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C209	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C211	4550006320	S.TANTALUM ECSTOJY475R
C212	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C213	4550006170	S.TANTALUM ECST1AY225R
C214	4030008900	S.CERAMIC C1608 JB 1C 333K-T-A
C215	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C216	4030016930	S.CERAMIC ECJOEB1A104K
C217	4030016930	S.CERAMIC ECJOEB1A104K
C218	4030013850	S.CERAMIC ECUE1E102KBQ
C219	4030009630	S.CERAMIC C1608 JB 1H 822K-T-A
C221	4030008910	S.CERAMIC C1608 JB 1C 393K-T-A
C222	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C223	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C224	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C225	4030009880	S.CERAMIC C1608 JB 1H 682K-T-A
C227	4030011600	S.CERAMIC C1608 JB 1C 104KT-N
C228	4030009490	S.CERAMIC C1608 JB 1H 821K-T-A
C229	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C230	4030008880	S.CERAMIC C1608 JB 1C 223K-T-A
C231	4030008630	S.CERAMIC C1608 JF 1C 104Z-T-A
C232	4030008630	S.CERAMIC C1608 JF 1C 104Z-T-A
C233	4030013850	S.CERAMIC ECUE1E102KBQ
C234	4030013850	S.CERAMIC ECUE1E102KBQ
C236	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C243	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C244	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C245	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C248	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C249	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C250	4030006900	S.CERAMIC C1608 JB 1E 103K-T-A
C251	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C252	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C282	4030013850	S.CERAMIC ECUE1E102KBQ
C283	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C285	4030009650	S.CERAMIC C1608 CH 1H 240J-T-A
C288	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C289	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C291	4030016930	S.CERAMIC ECJOEB1A104K
C403	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C404	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C405	4030011770	S.CERAMIC C1608 CH 1H 060B-T-A
C406	4030006990	S.CERAMIC C1608 CH 1H 080D-T-A
C407	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C410	4030007020	S.CERAMIC C1608 CH 1H 120J-T-A
C411	4030011770	S.CERAMIC C1608 CH 1H 060B-T-A
C412	4030011770	S.CERAMIC C1608 CH 1H 060B-T-A
C413	4030006980	S.CERAMIC C1608 CH 1H 070D-T-A
C414	4030009920	S.CERAMIC C1608 CH 1H 050B-T-A
C416	4030006850	S.CERAMIC C1608 JB 1H 471K-T-A
C417	4030009570	S.CERAMIC C1608 CH 1H 0R3B-T-A
C418	4030014290	S.CERAMIC ECUE1H090CCQ
C419	4030009570	S.CERAMIC C1608 CH 1H 0R3B-T-A
C421	4030009990	S.CERAMIC C1608 CH 1H 200J-T-A
C422	4030006980	S.CERAMIC C1608 CH 1H 070D-T-A
C423	4030011770	S.CERAMIC C1608 CH 1H 060B-T-A
C424	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C426	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C427	4030009500	S.CERAMIC C1608 CH 1H 0R5B-T-A
C443	4030016950	S.CERAMIC ECJOEB1A473K
C450	4030009920	S.CERAMIC C1608 CH 1H 050B-T-A
C452	4030007010	S.CERAMIC C1608 CH 1H 100D-T-A
C455	4030007010	S.CERAMIC C1608 CH 1H 100D-T-A
C467	4030007000	S.CERAMIC C1608 CH 1H 090D-T-A

[MAIN UNIT]

REF NO.	ORDER NO.	DESCRIPTION
C471	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C472	4030014180	S.CERAMIC ECUE1H470JCQ
C473	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C475	4030014000	S.CERAMIC ECUE1H1R5BCQ
C486	4030009920	S.CERAMIC C1608 CH 1H 050B-T-A
C491	4550006450	S.TANTALUM ECST1EY105R
C492	4030007010	S.CERAMIC C1608 CH 1H 100D-T-A
C495	4030016930	S.CERAMIC ECJOEB1A104K
C496	4030006880	S.CERAMIC C1608 JB 1H 472K-T-A
C501	4550006200	S.TANTALUM ECSTOJY106R
C550	4550006620	S.TANTALUM ECSTOJY226R
C551	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C552	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C553	4030014180	S.CERAMIC ECUE1H470JCQ
C554	4030006850	S.CERAMIC C1608 JB 1H 471K-T-A
C555	4030009920	S.CERAMIC C1608 CH 1H 050B-T-A
C556	4030014180	S.CERAMIC ECUE1H470JCQ
C557	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C558	4030014180	S.CERAMIC ECUE1H470JCQ
C559	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C560	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C561	4030014180	S.CERAMIC ECUE1H470JCQ
C562	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C563	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C564	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C565	4030014180	S.CERAMIC ECUE1H470JCQ
C566	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C567	4030007090	S.CERAMIC C1608 CH 1H 470J-T-A
C571	4030014180	S.CERAMIC ECUE1H470JCQ
C572	4030014180	S.CERAMIC ECUE1H470JCQ
C573	4030014180	S.CERAMIC ECUE1H470JCQ
C574	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C659	4030006860	S.CERAMIC C1608 JB 1H 102K-T-A
C662	4030016930	S.CERAMIC ECJOEB1A104K
C663	4030008920	S.CERAMIC C1608 JB 1C 473K-T-A
C664	4030013850	S.CERAMIC ECUE1E102KBQ
C665	4030014180	S.CERAMIC ECUE1H470JCQ
C666	4030009910	S.CERAMIC C1608 CH 1H 040B-T-A
C669	4030014180	S.CERAMIC ECUE1H470JCQ
C670	4030006850	S.CERAMIC C1608 JB 1H 471K-T-A
C671	4030013850	S.CERAMIC ECUE1E102KBQ
C672	4030014180	S.CERAMIC ECUE1H470JCQ
C673	4030014180	S.CERAMIC ECUE1H470JCQ
C674	4030014180	S.CERAMIC ECUE1H470JCQ
C675	4030014220	S.CERAMIC ECUE1E471KBQ
J2	6450001680	CONNECTOR HSJ1122-010010
J3	6450001690	CONNECTOR HSJ1456-01-220
J5	6510018430	S.CONNECTOR AXN330C038P
J6	6510021900	S.CONNECTOR BM02B-ASRS-TF
DS1	5030001800	LCD LM-7045B
DS2	5010000160	S.LED LN310M6URA
DS3	5010000160	S.LED LN310M6URA
MC1	7700002160	MICROPHON KUC3523-040245
S1	2230000900	S.SWITCH JPM1990-2013R
S2	2230000900	S.SWITCH JPM1990-2013R
S3	2230000900	S.SWITCH JPM1990-2013R
SP1	2510001060	SPEAKER K036NA500-47
W1	8900009640	CABLE OPC-963
W5	7030009970	S.JUMPER MJ-0.1
W10	7030003860	S.JUMPER ERJ3GE JPW V
W11	7030003860	S.JUMPER ERJ3GE JPW V
W12	7030003860	S.JUMPER ERJ3GE JPW V
W15	7030010040	S.JUMPER ERJ2GE-JPW
EP1	0910052732	PCB B 5387B
EP2	89300051310	LCD CONTACT SRCN-2251-SP-N-W
EP10	6910013370	S.BEAD BLM11B221SB
EP11	6910013370	S.BEAD BLM11B221SB

S.=Surface mount


SECTION 7 MECHANICAL PARTS AND DISASSEMBLY

[CHASSIS PARTS]

REF. NO.	ODER NO.	DESCRIPTION	QTY.
MP1	8210016750	2251-T front panel [F4GT]	1
	8210016740	2251-S front panel [F4GS]	1
MP2	8930050890	2251 terminal holder	1
MP3	8010017990	2251 chassis	1
MP4	8210016570	2251 rear panel	1
MP5	8930050870	2251 release button	1
MP7	8310047580	2251 window plate	1
MP8	8930051350	2251 jack rubber	1
MP9	8210016550	2251 jack panel	1
MP10	8610010780	Knob N-276	1
MP12	8930050820	2251 main seal	1
MP13	8930050790	2251 10key [F4GT]	1
	8930050590	2251 6key [F4GS]	1
MP14	8930050840	2251 minus terminal	1
MP15	8930050850	2251 plus terminal	1
MP18	8930050880	2251 spring holder	1
MP20	8930042350	1922 mic sheet	1
MP21	8930051300	2251 mic sponge	1
MP22	8930051290	2251 opt sheet	1
MP23	8930001340	1903 hex nut	1
MP24	8930050900	2251 window sheet	1
MP25	8930036751	Spring	1
MP26	8950005260	Ant connector-102	1
MP27	8830001250	Ant connector-101	1
MP31	8810009510	Screw BT M2 x 4 NI-ZU	8
MP32	8810009560	Screw BT M2 x 6 ZK	7
MP33	8810000100	Screw M2 x 4 ZK	4
MP36	8930051330	2251 contact rubber	1
MP37	8930050800	2251 jack cap	1
MP38	8950005240	2251 contact spring	1
MP39	8860001210	2251 ANT rug	1
MP41	8510013020	2252 shield plate	1
MP42	8930007100	Aluminum sheet	1

[ACCESSORIES]


REF. NO.	ODER NO.	DESCRIPTION	QTY.
EP1	3310002290	Antenna FA-SC57U	1
MP1	8930042040	1922 Belt clip	1
MP2	8930051290	2251 OPT sheet	1

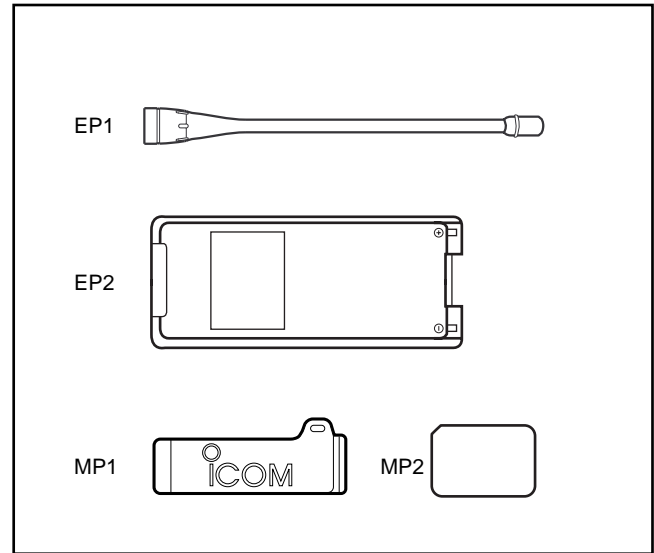

[MAIN UNIT]

REF. NO.	ODER NO.	DESCRIPTION	QTY.
DS1	5030001800	LM-7045B	1
SP1	2510001060	Speaker K036NA500-47	1
EP2	8930051310	LCD contact SRCN-2251-SP-N-W	1
MP1	8510011111	1922 VCO case-1	1
MP3	8930050810	2251 LCD holder	1
MP4	8210016580	2251 reflector	1
MP5	8410002230	2078 PA heatsink	1
MP6	8510011180	1923 VCO cover	1
MP8	8930052270	Shield sponge (d)	1

 
 

 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
Screw abbreviations A, B0, BT: Self-tapping
 PH: Pan head
 FH: Flat head
 BiH: Bind head
 SUS: Stainless
 NI: Nickel
 ZK: Black

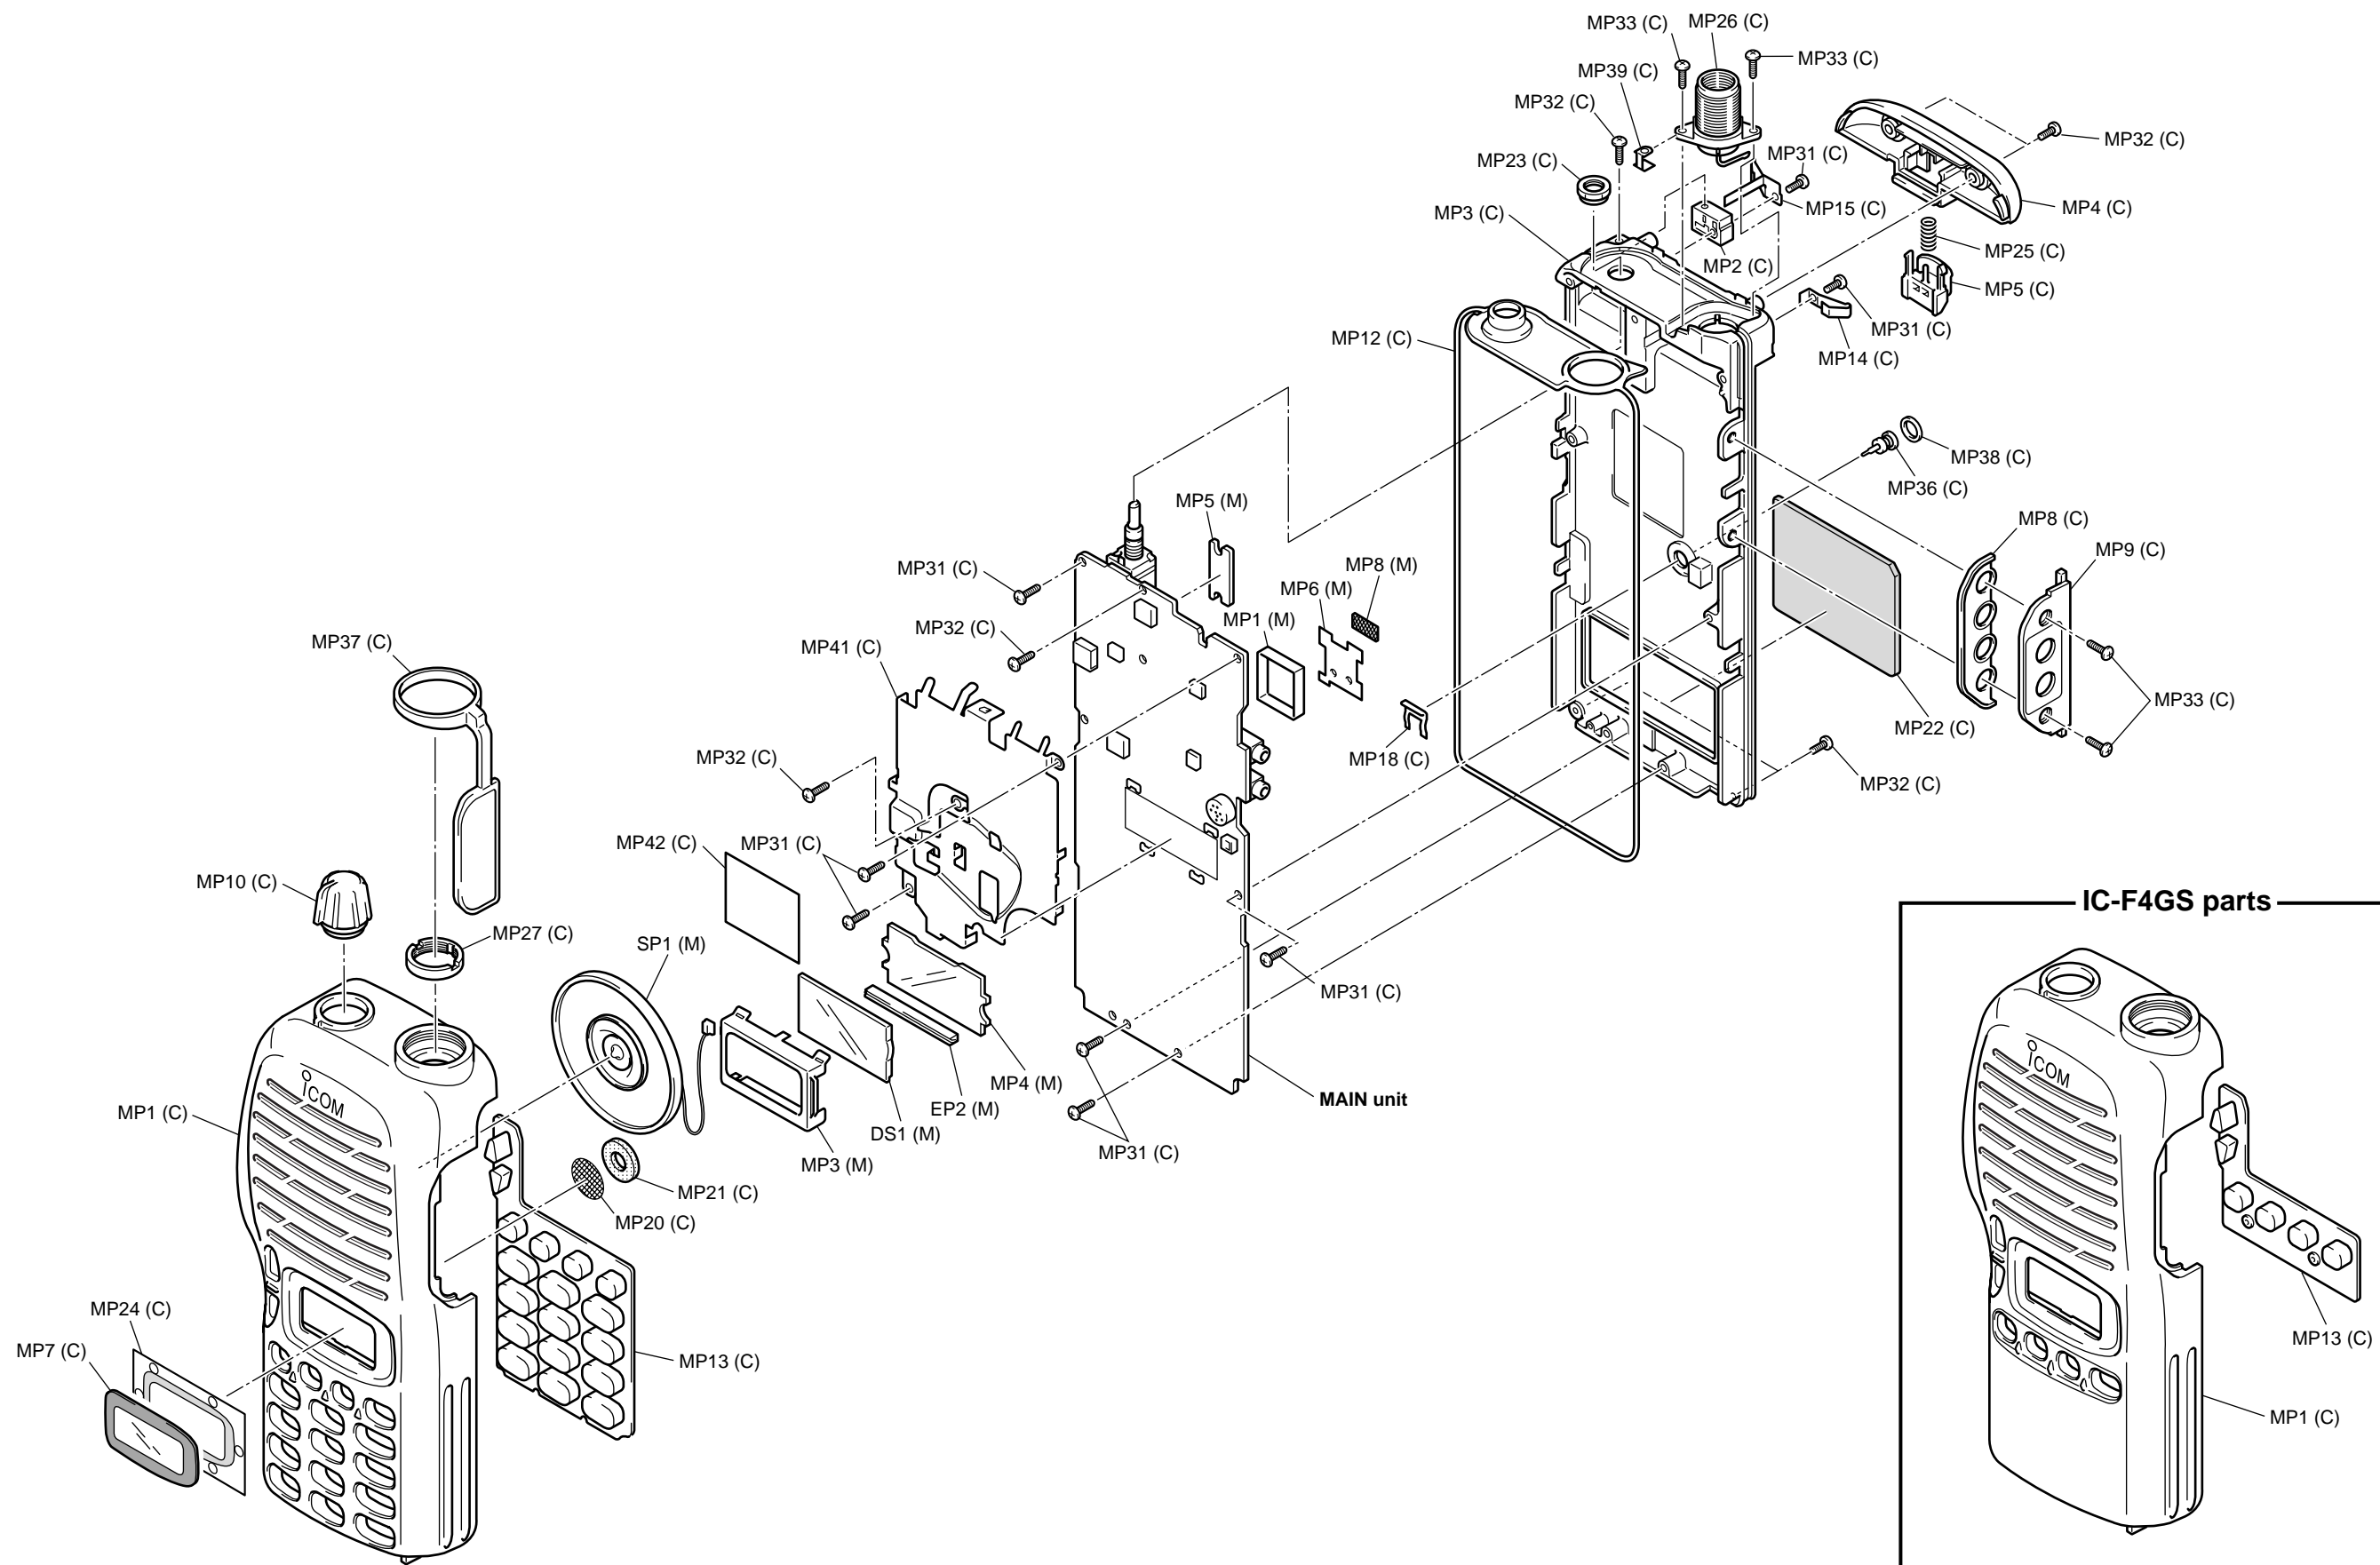

 

 
 
 
 
 
 
 
 
 
UNIT abbreviation (C): CHASSIS PARTS, (M): MAIN UNIT

SECTION 8 SEMI-CONDUCTOR INFORMATION

● TRANSISTOR AND FET'S

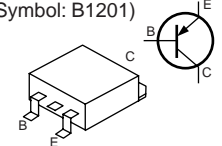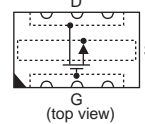
2SA1577 Q (Symbol: HQ) 	2SB1132 R (Symbol: BARB) 	2SB1201 S (Symbol: B1201) 	2SC2712 GR (Symbol: LG) 	2SC3585 R44 (Symbol: R44) 
2SC4116 GR (Symbol: LG) 	2SC4215 O (Symbol: QO) 	2SC5085 Y (Symbol: MCY) 	2SC5107 O (Symbol: MFO) 	2SJ364 Q (Symbol: 4MQ) 
2SK2973 (Symbol: K1) 	2SK2974 (Symbol: K2974)  (top view)	2SK880 Y (Symbol: XY) 	3SK239 A (Symbol: XR) 	DTA144 EU (Symbol: 16) 
DTC144 EE (Symbol: 26) 	DTC144 EU (Symbol: 26) 	DTC144 TU (Symbol: 06) 	RN1409 (Symbol: XJ) 	RN2402 (Symbol: YB) 
UN911 H (Symbol: 6P) 	XP1214 (Symbol: 9H) 	XP6501 AB (Symbol: 5N) 		

● DIODES


1SS184 (Symbol: B3) 	1SS355 (Symbol: A) 	1SV288 (Symbol: TJ) 	1SV307 (Symbol: TX) 	1T365 (Symbol: pink line) 
DAN202K (Symbol: N) 	HVU350 (Symbol: 4) 	MA77 (Symbol: 4B) 	MA8030 H (Symbol: 3^0) 	MA8056 M (Symbol: 5-6) 
RB706F-40 (Symbol: 3J) 				

SECTION 9 BOARD LAYOUTS

9-1 MAIN UNIT • TOP VIEW

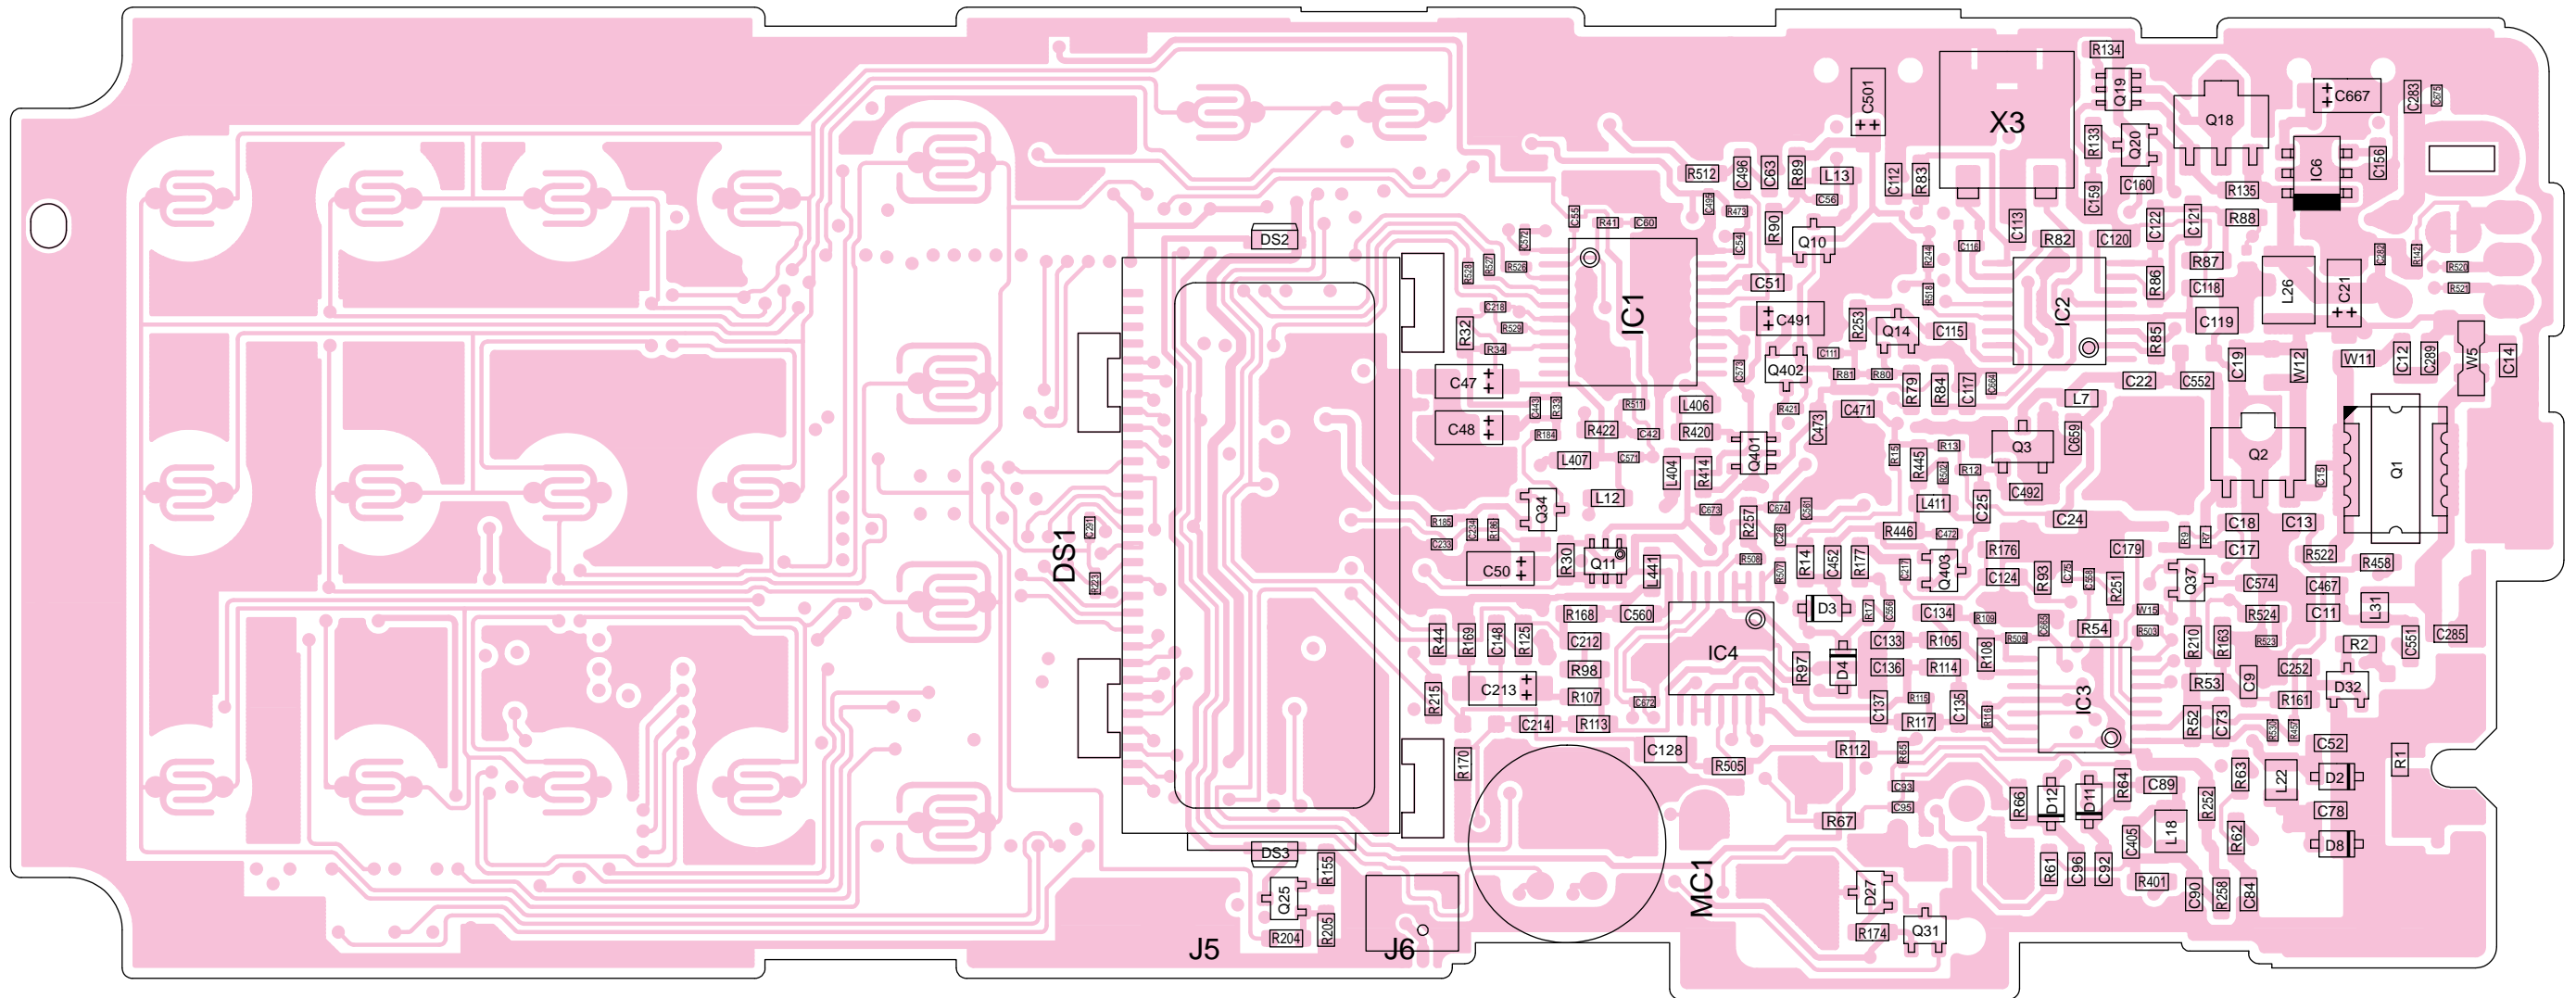

• BOTTOM VIEW

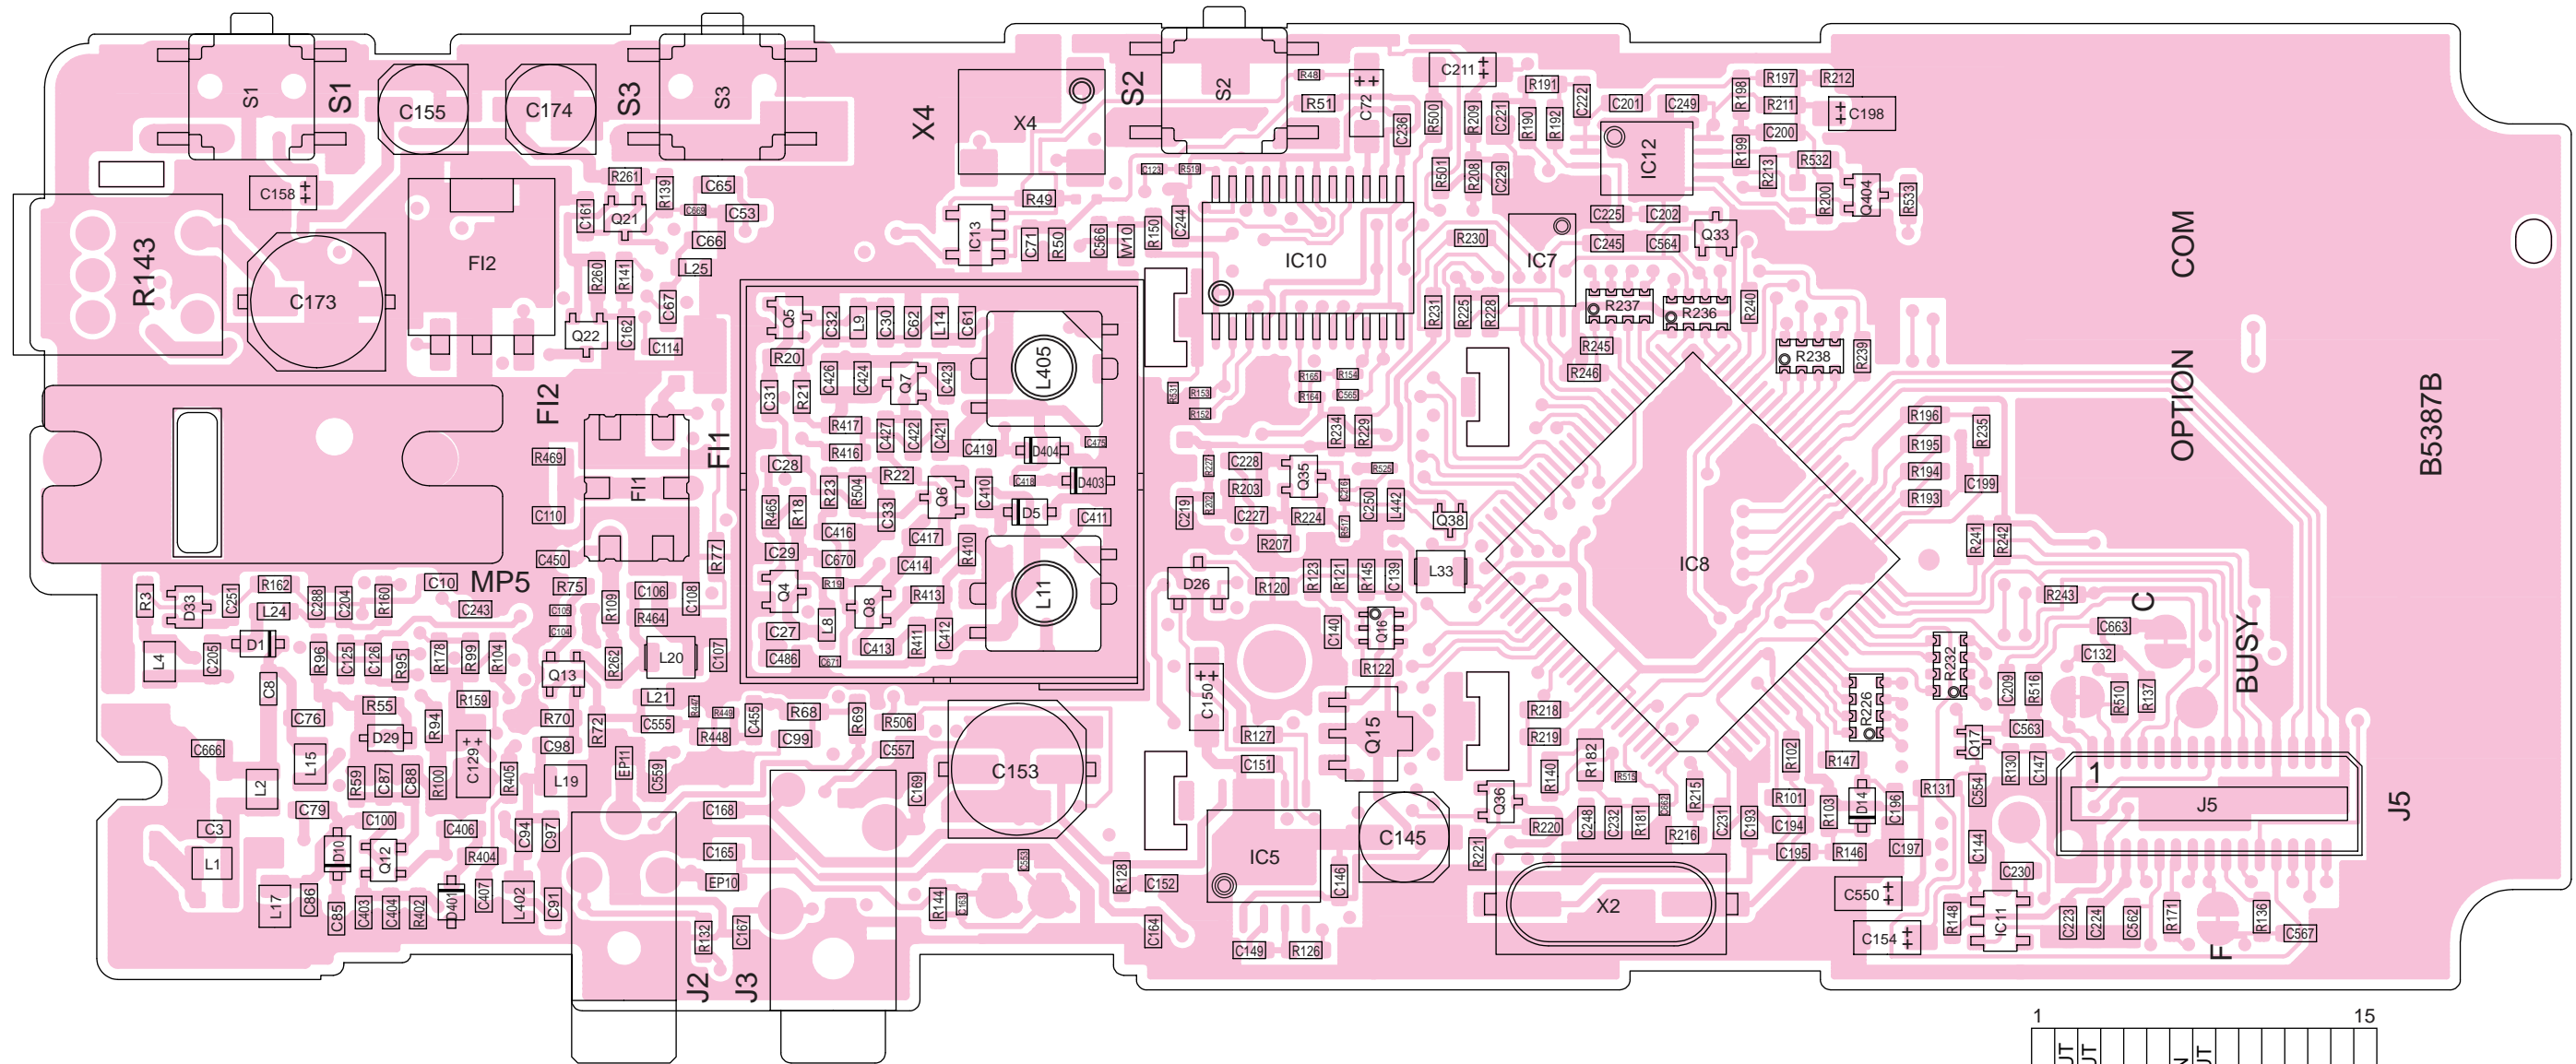

1	PTTIN	15
2	PITOUT	
3	VCC	
4	MICMUTE	
5	MICIN	
6	AFONOP	
7	AUX	
8	BEEPOUT	
9	BUSY	
10	RXMUTE	
11	MOWN	
12	SIGOUT	
13	AFOUT	
14	OPT1	
15	OPT2	
16	OPT3	
17	CCS	
18	CIRQ	
19	GND	
20	SO	
21	OPV3	
22	SI	
23	OPV2	
24	SCK	
25	OPV1	

J5
to the OPTIONAL unit

SECTION 10 BC-137 OPTIONAL DESKTOP CHARGER INFORMATION


10-1 PARTS LIST

[MAIN UNIT]

REF. NO.	ODER NO.	DESCRIPTION	QTY.
Q1	1520000650	S.TRANSISTOR 2SB1201-S-TL	1
Q2	1590000480	S.TRANSISTOR RN2402 (TE85R)	1
Q3	1590000510	S.TRANSISTOR RN1409 (TE85R)	1
Q4	1530001950	S.TRANSISTOR 2SC2712-GR (TE85R)	1
D1	1750000550	S.DIODE 1SS355 TE-17	1
D2	1750000020	S.DIODE 1SS184 (TE85R)	1
D3	1790000950	S.ZENER MA8056-M (TX)	1
R1	7030010000	S.RESISTOR MCR10EZHF 24R0 Ω (240)	1
R2	7030010000	S.RESISTOR MCR10EZHF 24R0 Ω (240)	1
R3	7030000190	S.RESISTOR MCR10EZHJ 27 Ω (270)	1
R4	7030000500	S.RESISTOR MCR10EZHJ 10 kΩ	1
R5	7030000500	S.RESISTOR MCR10EZHJ 10 kΩ	1
R6	7030000190	S.RESISTOR MCR10EZHJ 27 Ω (270)	1
R7	7030001740	S.RESISTOR MCR10EZHJ 2 kΩ	1
R8	7030001740	S.RESISTOR MCR10EZHJ 2 kΩ	1
R9	7030000590	S.RESISTOR MCR10EZHJ 56 kΩ	1
R10	7030000500	S.RESISTOR MCR10EZHJ 10 kΩ	1
R11	7030000380	S.RESISTOR MCR10EZHJ 1 kΩ	1
C1	4030001150	S.CERAMIC GRM40 F 104Z 25PT	1
C2	4030001150	S.CERAMIC GRM40 F 104Z 25PT	1
C3	4030001150	S.CERAMIC GRM40 F 104Z 25PT	1
C4	4030001150	S.CERAMIC GRM40 F 104Z 25PT	1
J1	6510021470	CONNECTOR HEC0470-01-230	1
J2	6510021470	CONNECTOR HEC0470-01-230	1
DS1	5040001390	LED TLG124A	1
W1	7030003970	S.JUMPER MCR18EZHJ JPW (000)	1
EP1	0910052602	PCB B 5493B	1
EP2	6910012240	SPACER TLE60-05	1
MP1	8930051340	2338 TERMINAL	3

S.=Surface mount

10-2 DISASSEMBLY INFORMATION

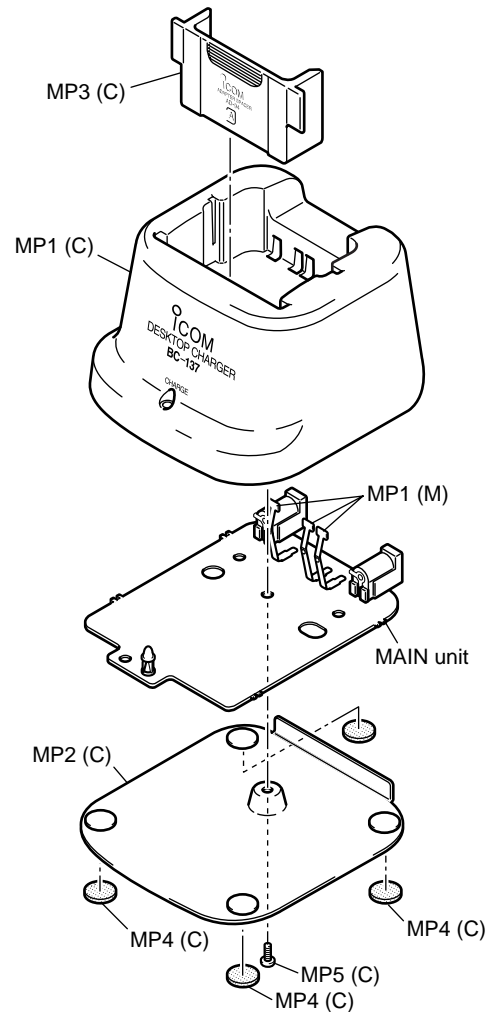

NOTE: (C) : CHASSIS
(M) : MAIN UNIT

[CHASSIS UNIT]


REF. NO.	ODER NO.	DESCRIPTION	QTY.
MP1	8010018030	2338 case	1
MP2	8110007080	2338 cover	1
MP3	8930050920	2327 spacer	1
MP4	8930039620	Leg cushion (A)	4
MP5	8810008660	Screw BT M3 x 8 NI-ZU	1

Screw abbreviations BT : Self-tapping
NI : Nickel


CONVENIENT:

BC-137 is connectable max. 6 pieces in parallel.
When connect BC-137 in parallel, JIG cable (as shown below) is required.


• CONNECTION

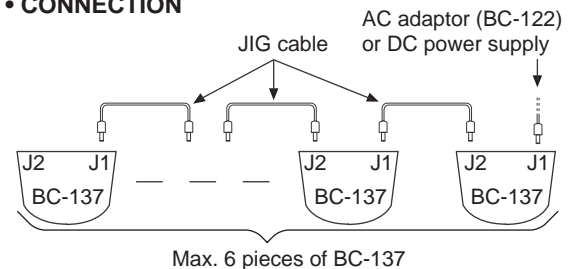


• JIG CABLE

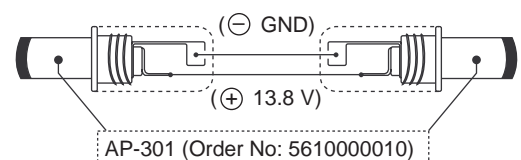


10-3 VOLTAGE DIAGRAM

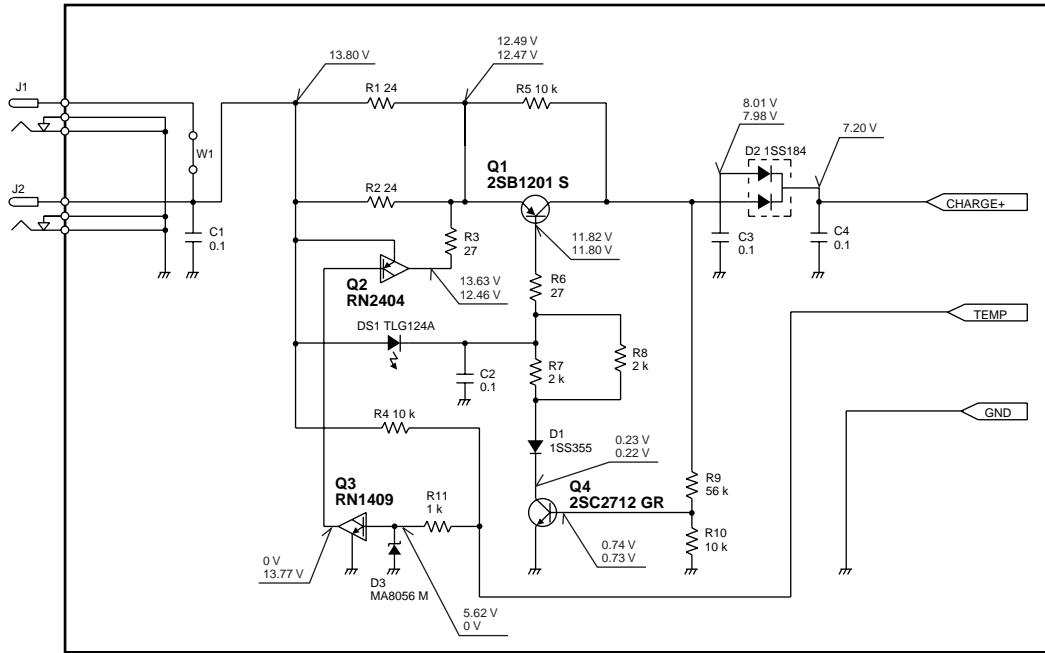


10-4 BOARD LAYOUT

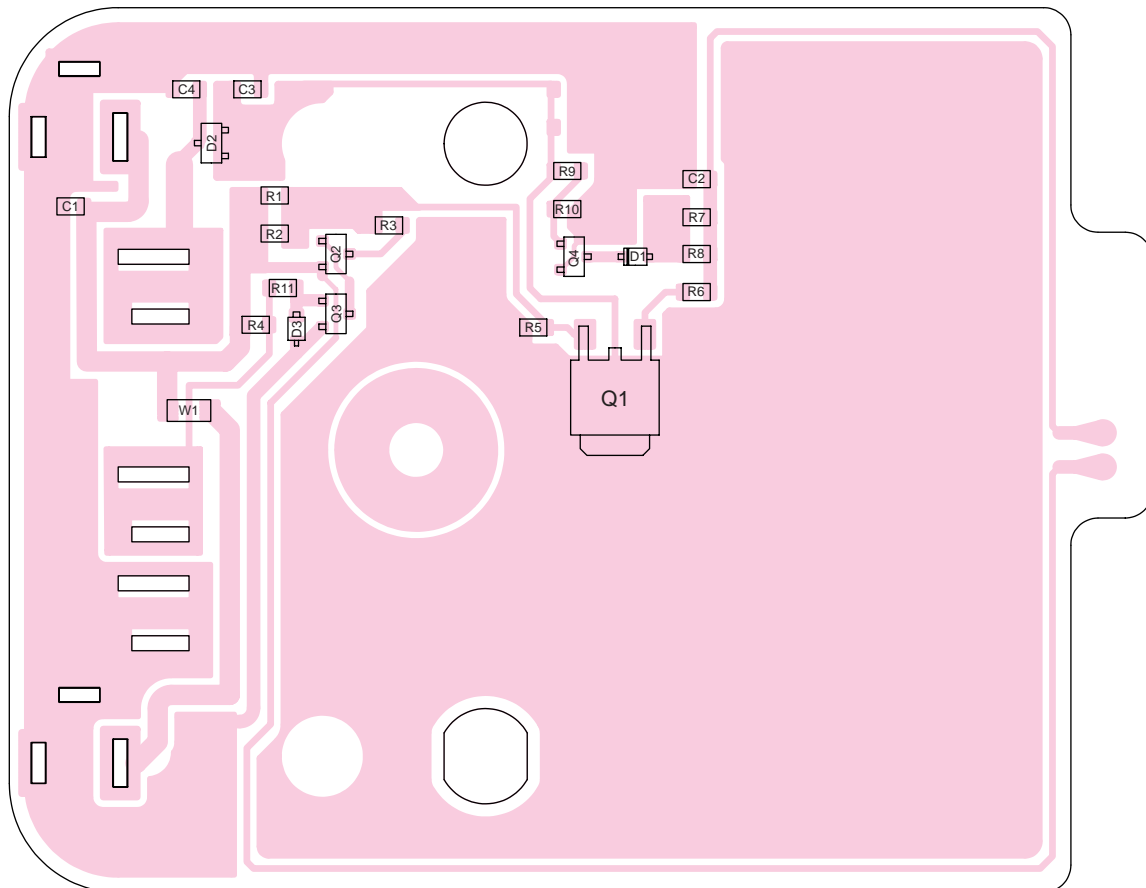





SECTION 11 BLOCK DIAGRAM

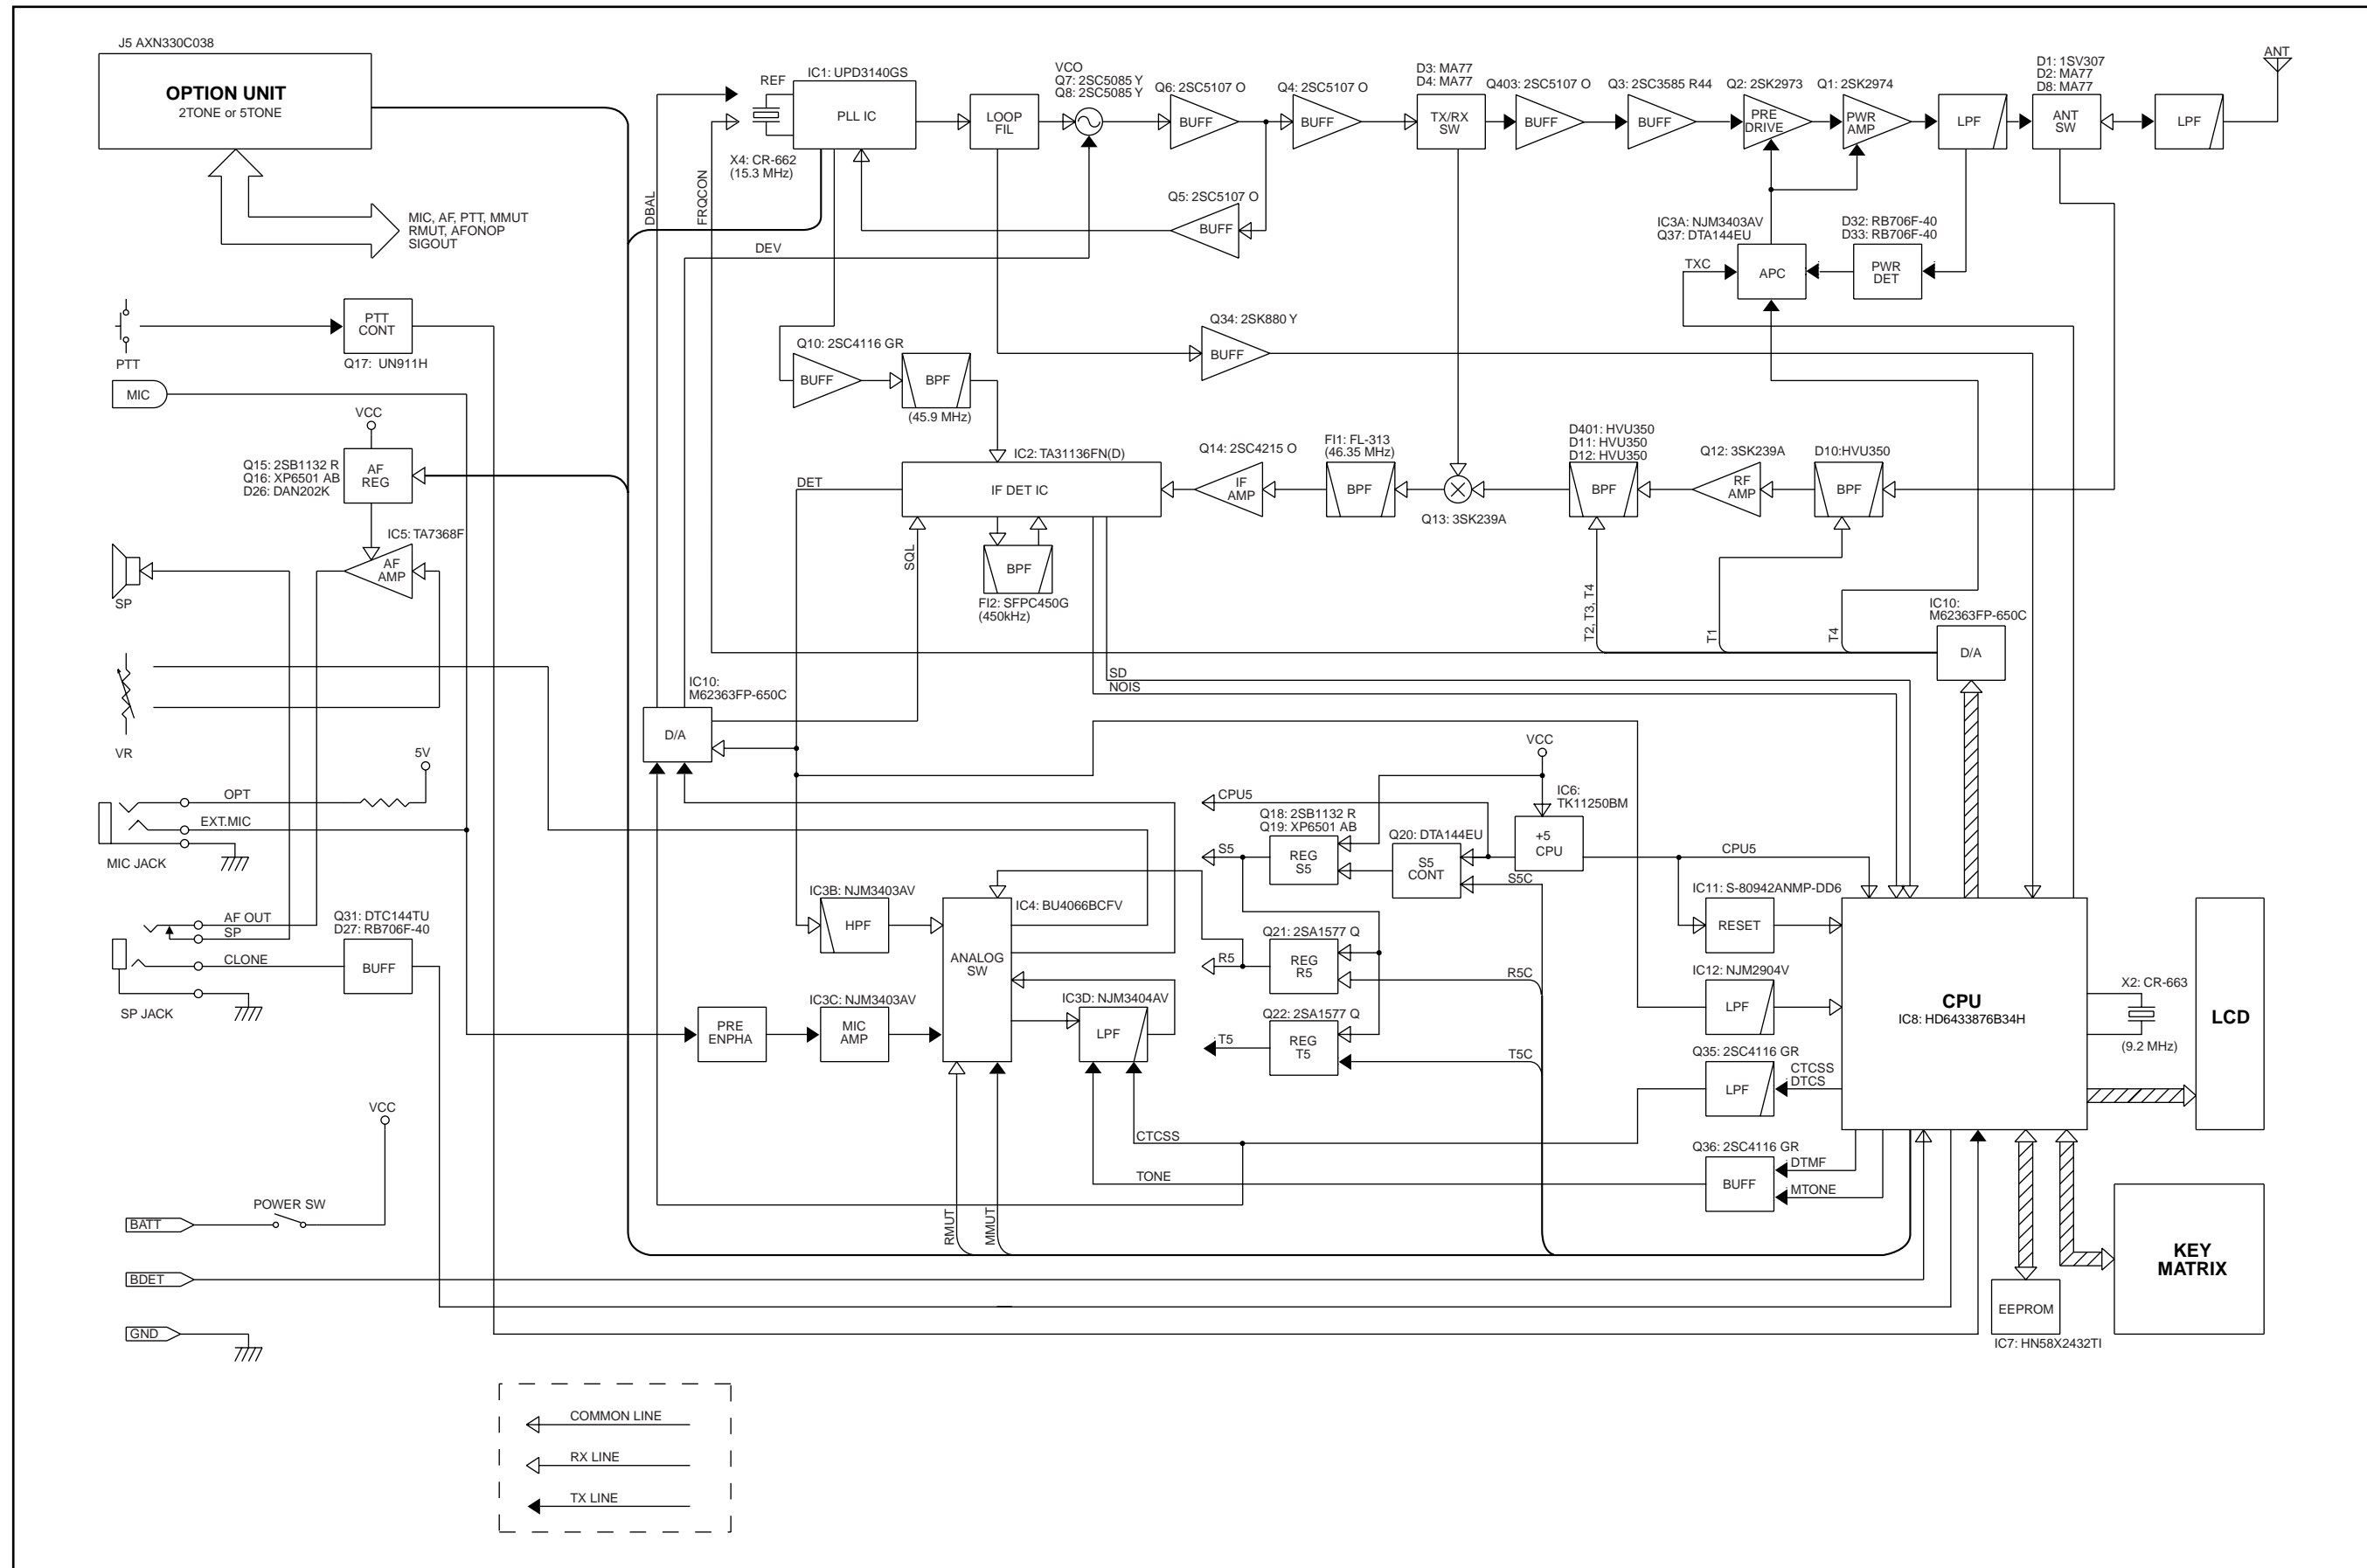

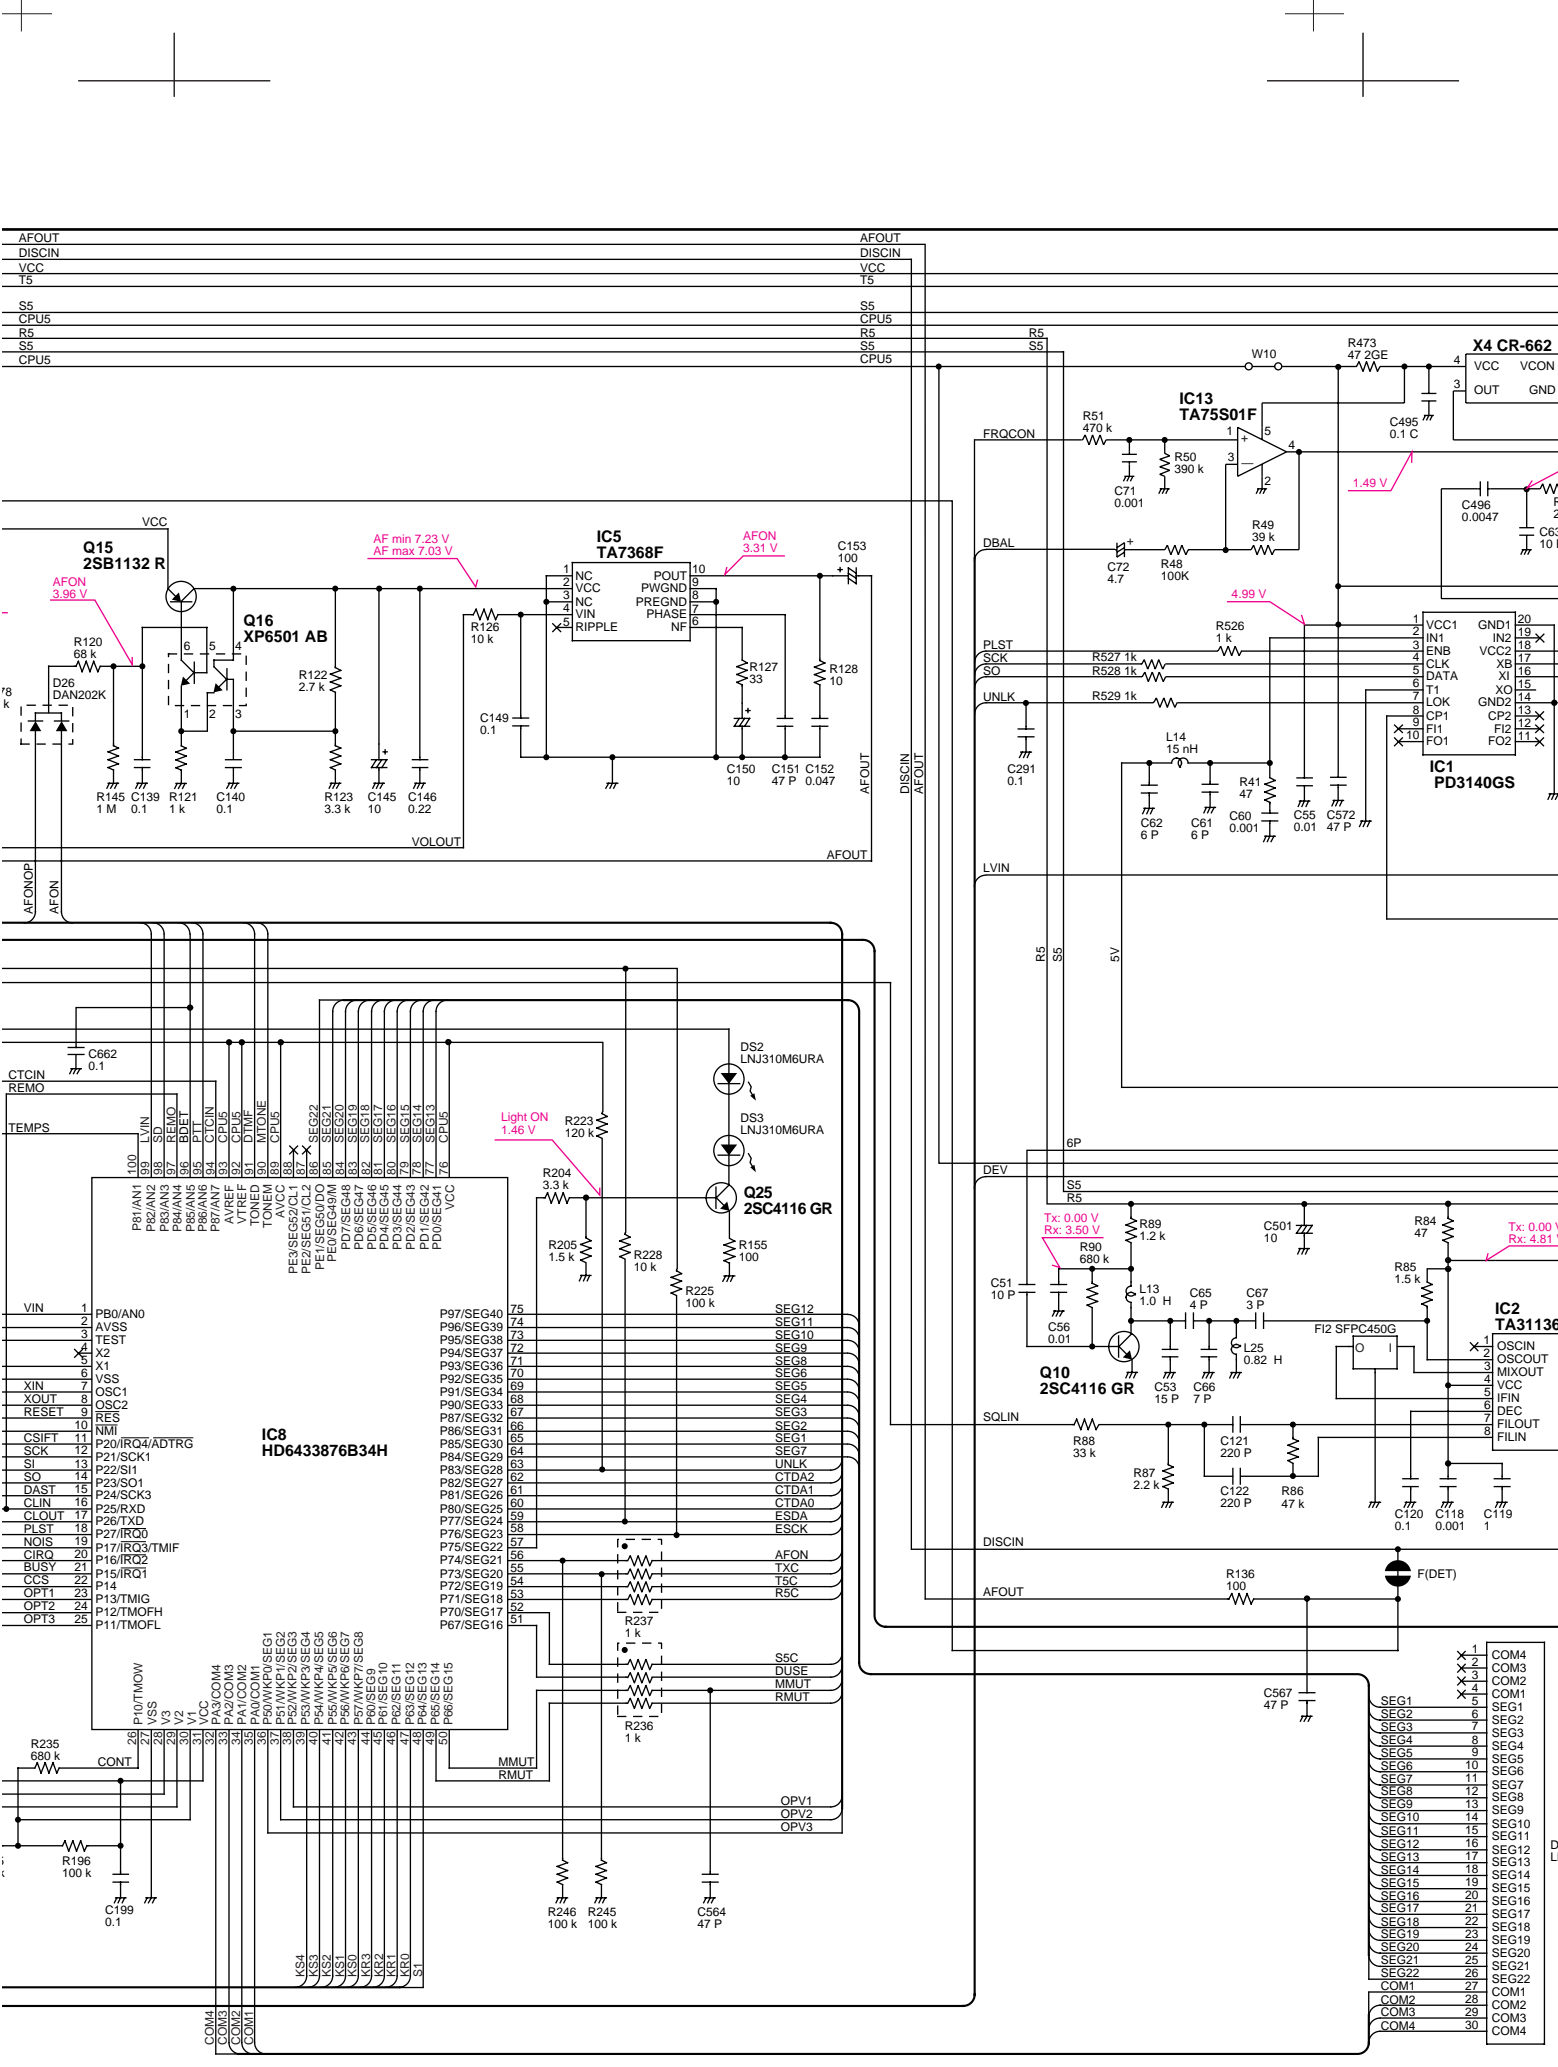


AFOUT
DISCIN
VCC
V5
S5
CPU5
R5
S5
CPU5

AFOUT
DISCIN
VCC
V5
S5
CPU5
R5
S5
CPU5

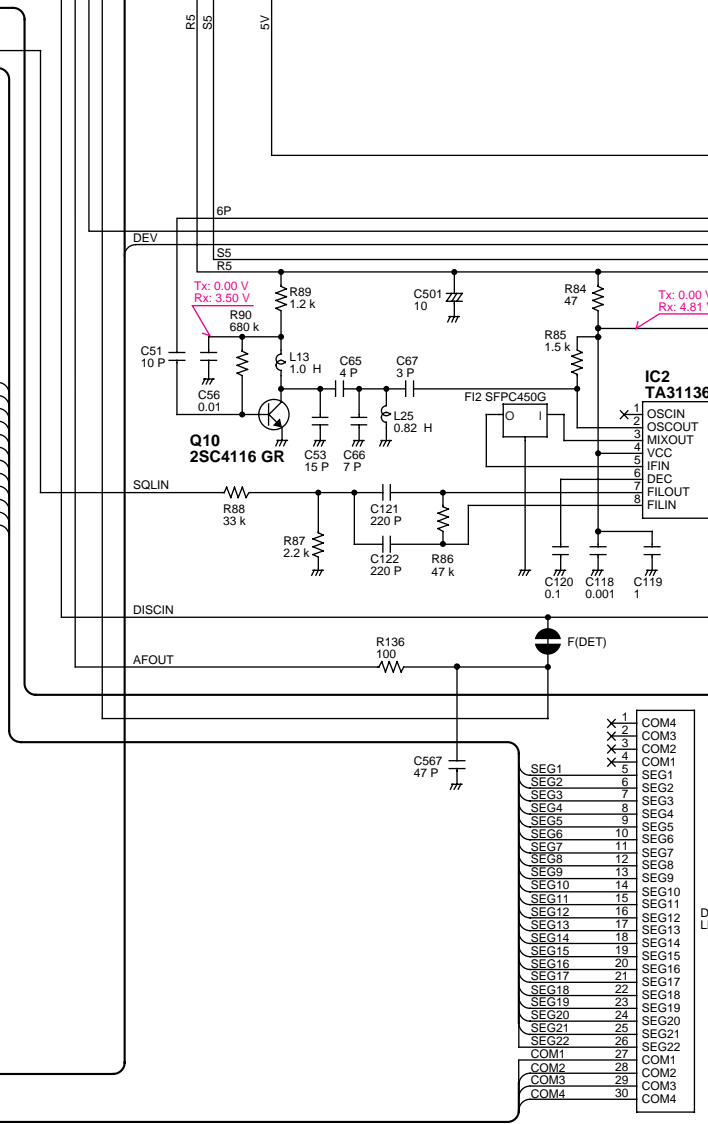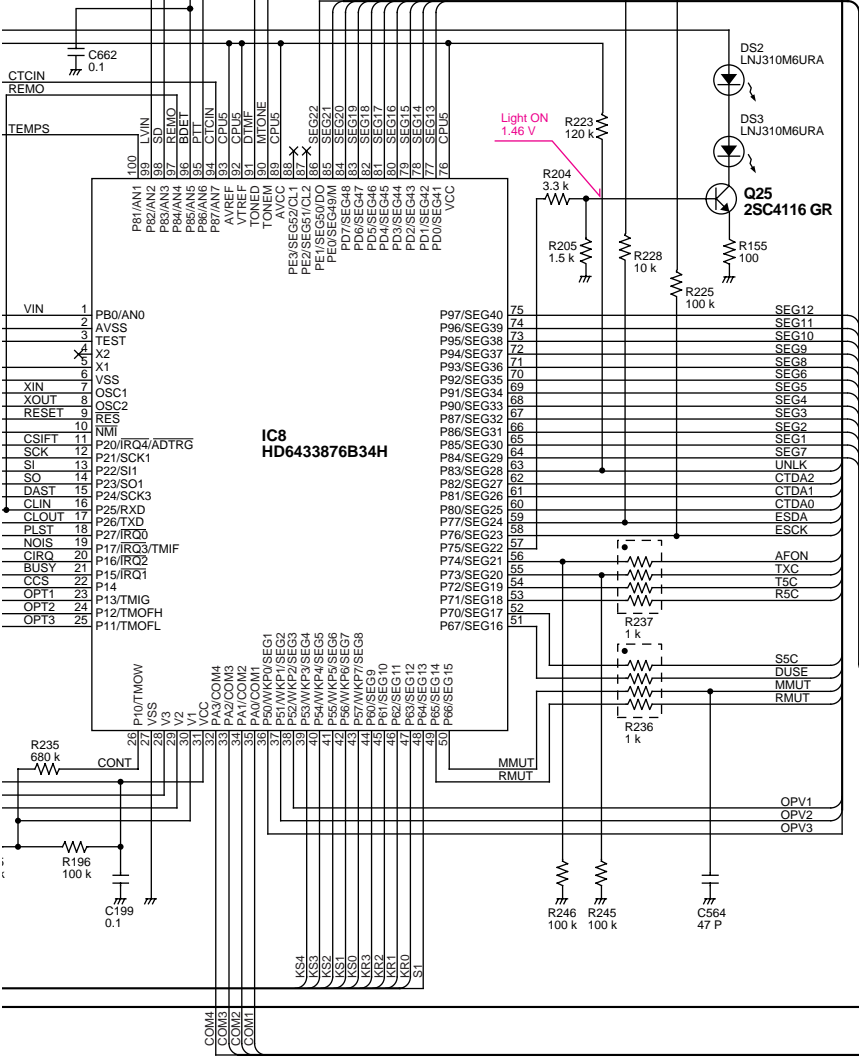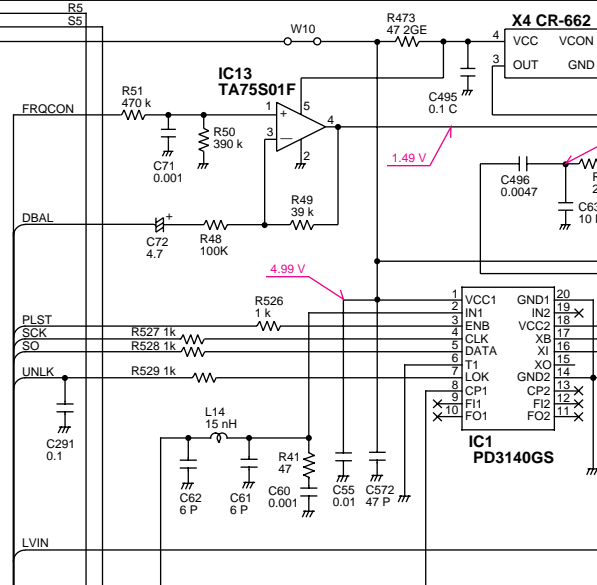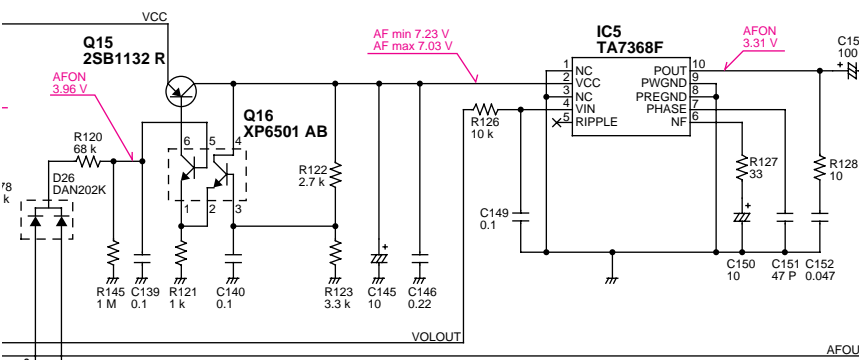


COMPLETE VIEW

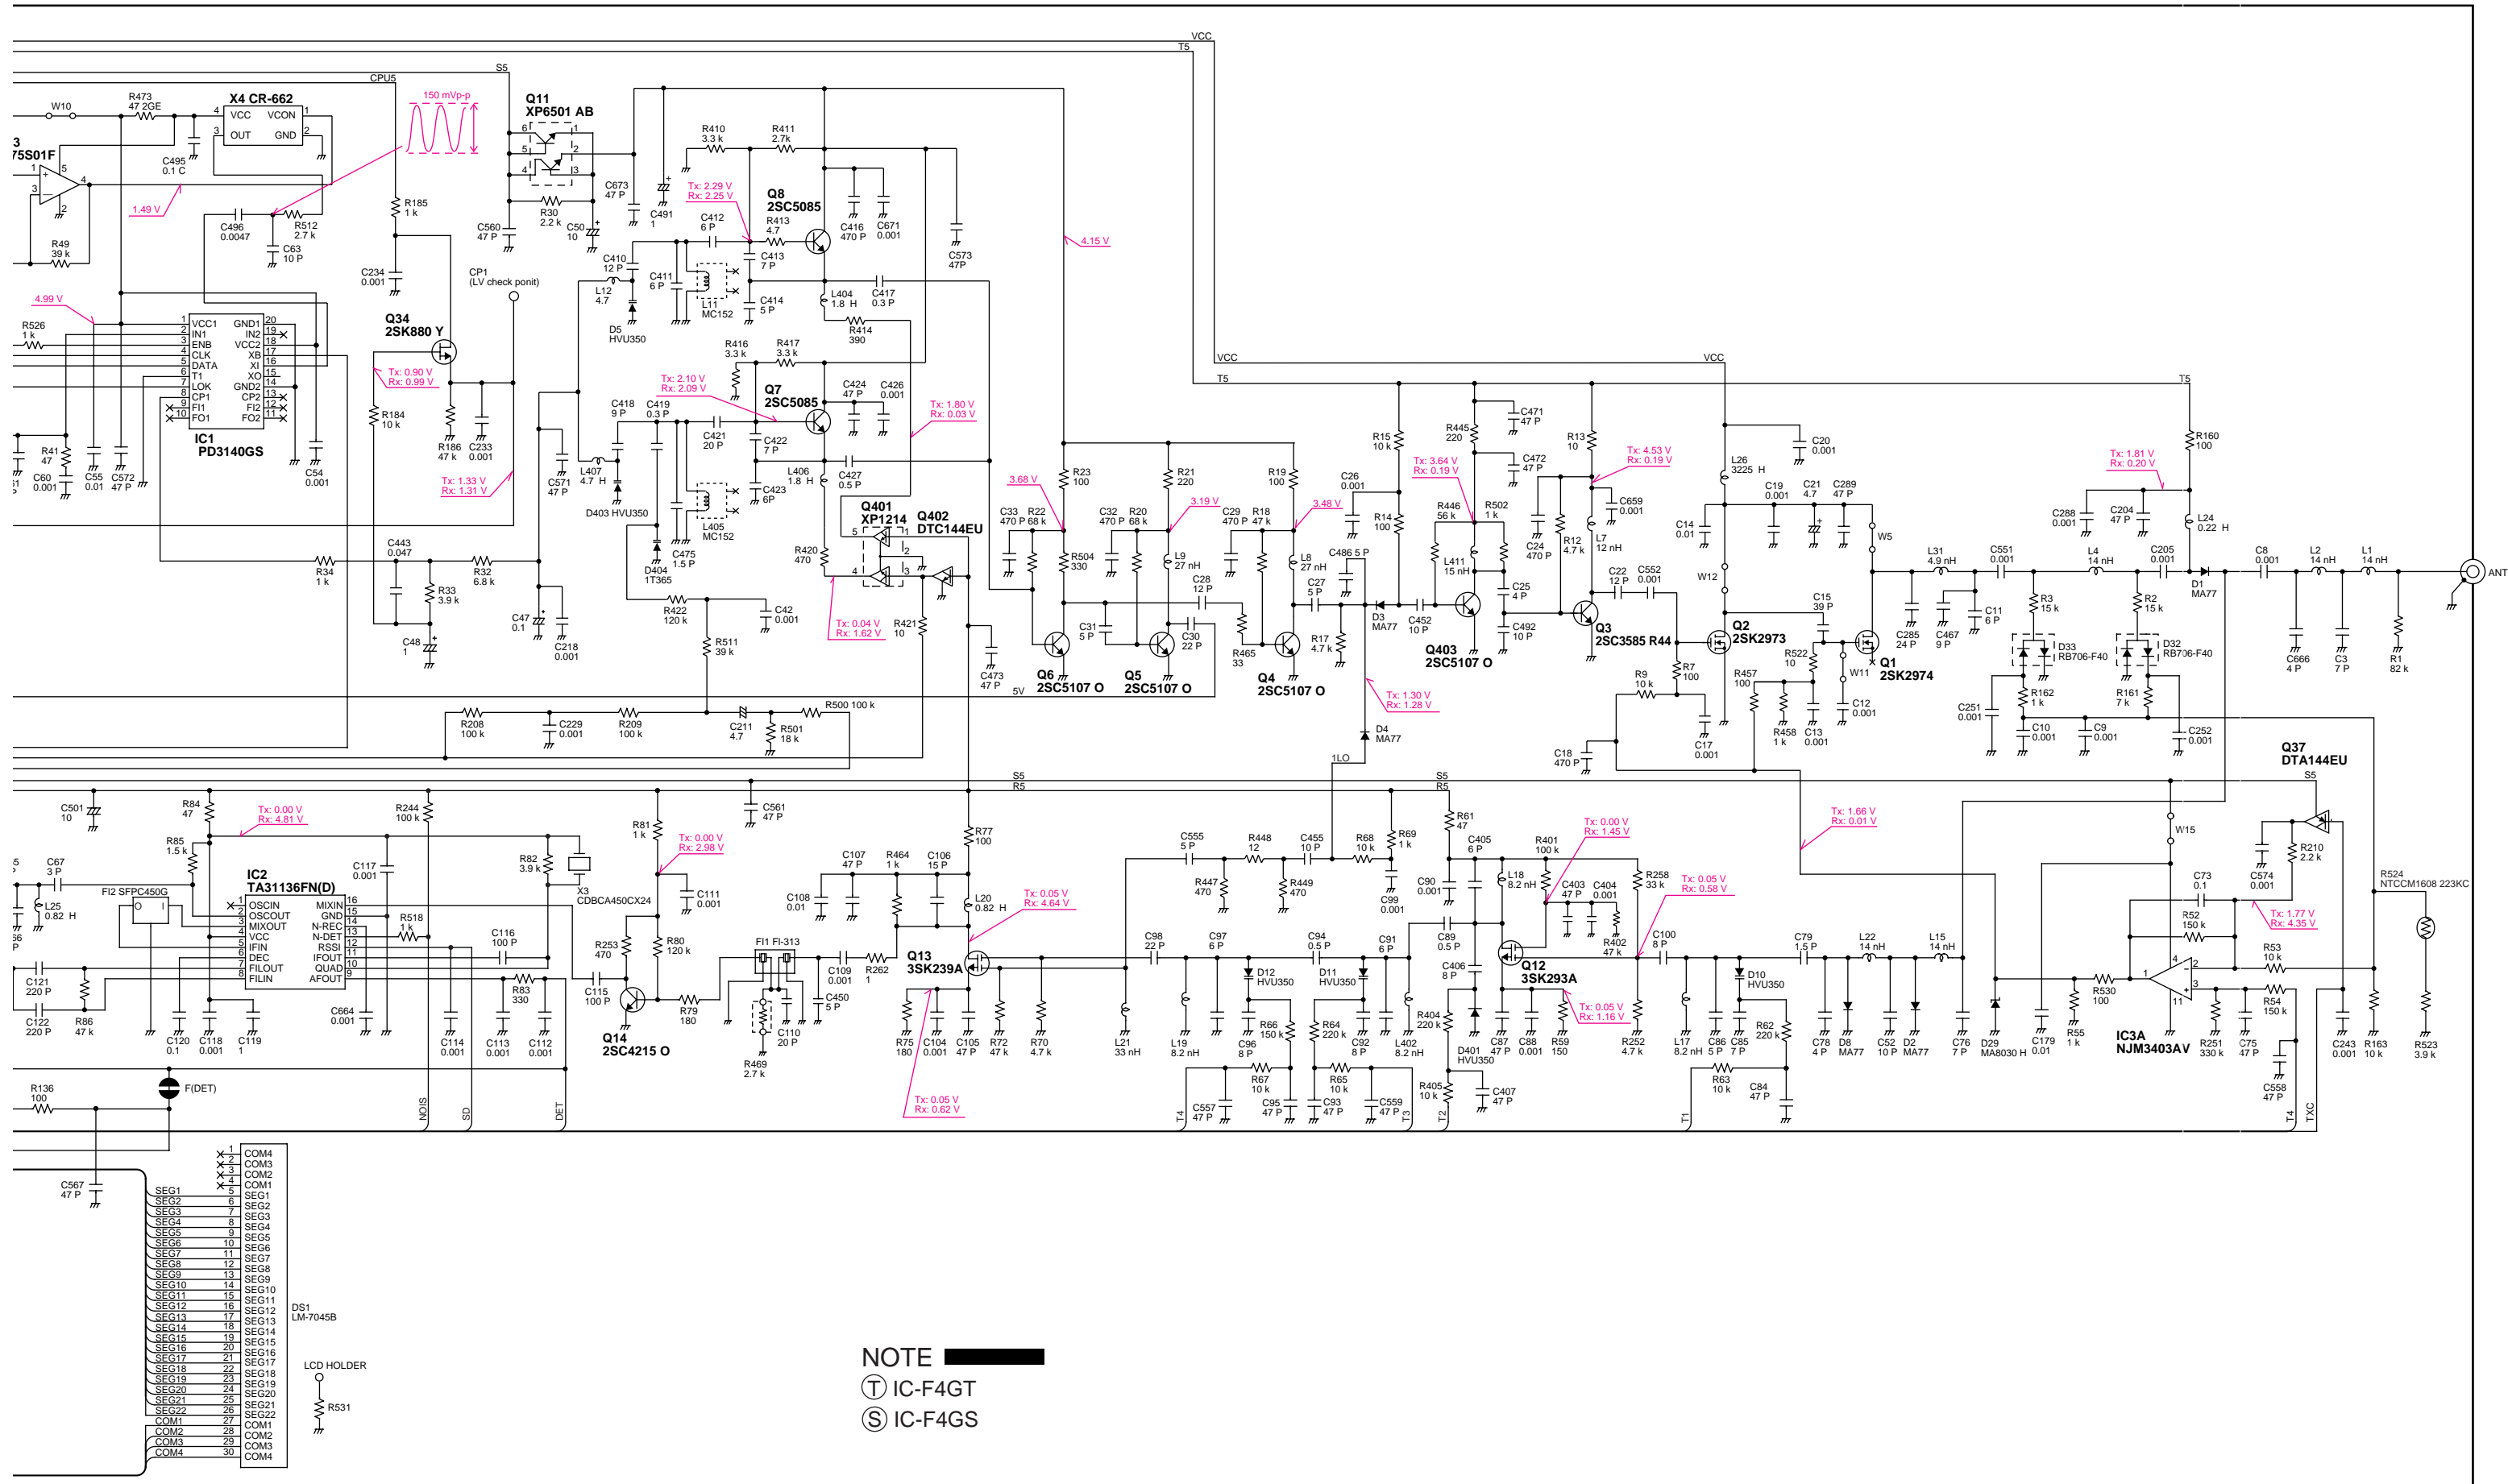

NOTE

- Ⓧ IC-F4GT
- Ⓧ IC-F4GS

SECTION 12 VOLTAGE DIAGRAM

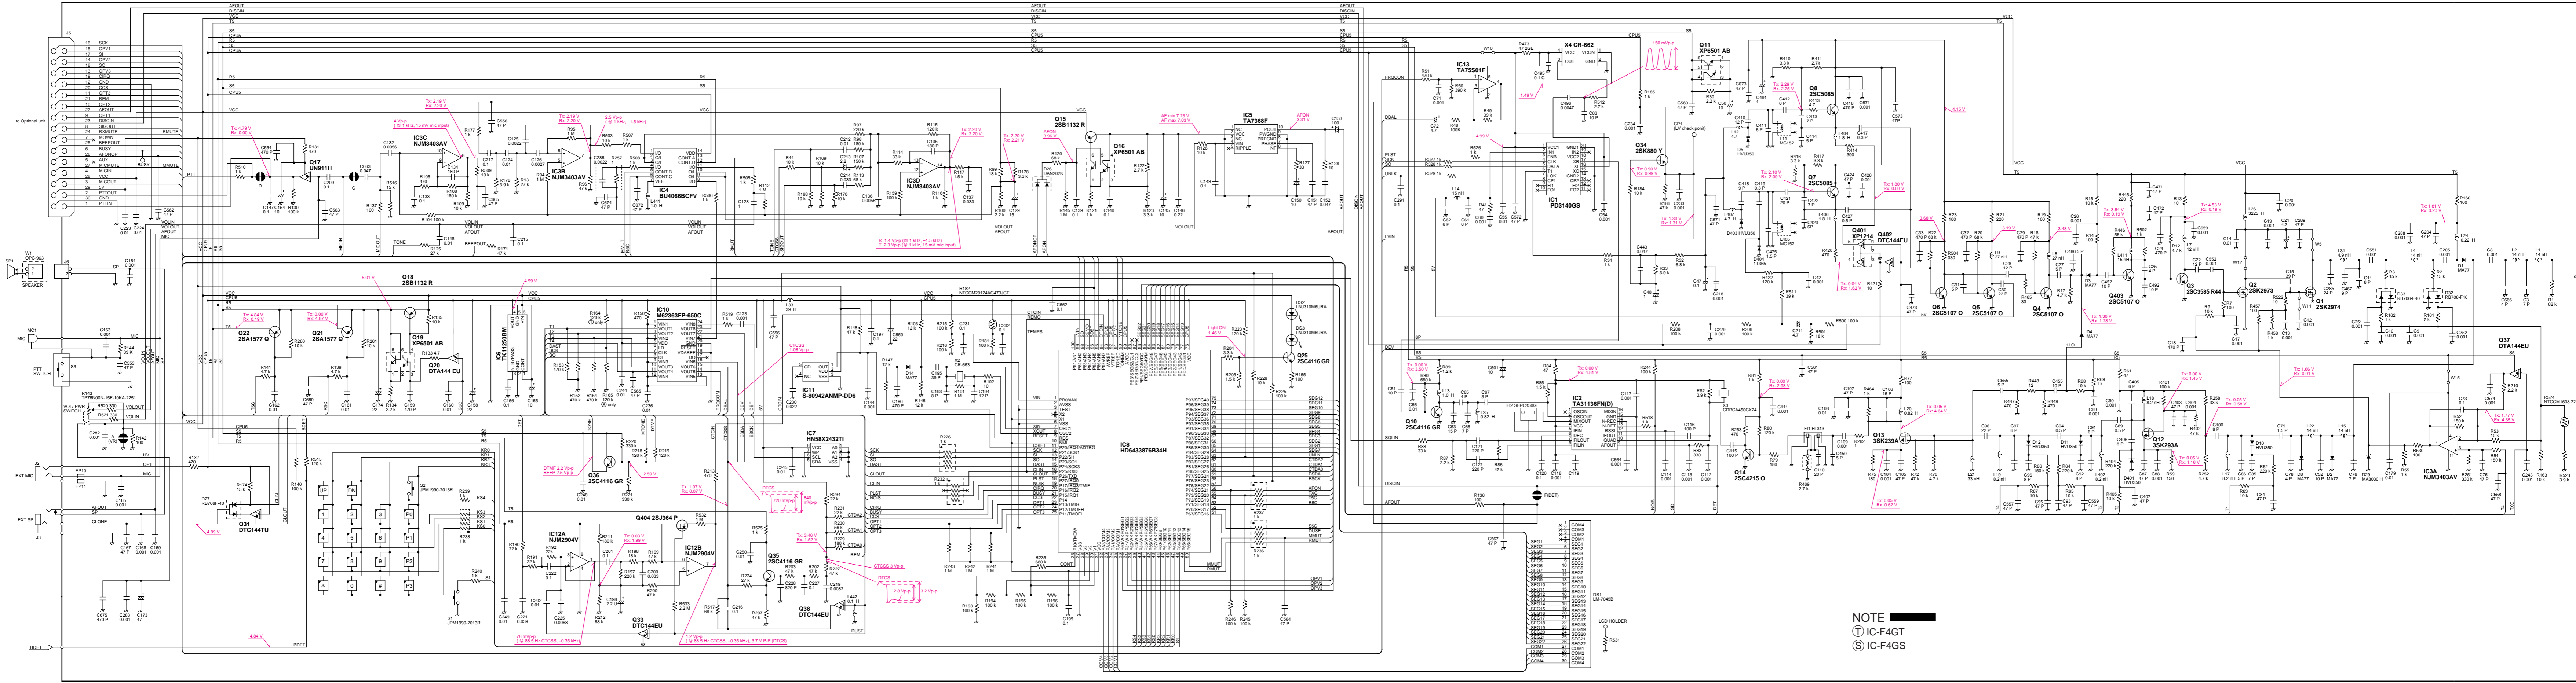

NOTE
 (T) IC-F4GT
 (S) IC-F4GS

Icom Inc.

6-9-16, Kamihigashi, Hirano-ku, Osaka 547-0002, Japan
Phone : 06 6793 5302
Fax : 06 6793 0013

Icom America Inc.

<Corporate Headquarters>
2380 116th Avenue N.E., Bellevue, WA 98004, U.S.A.
Phone : (425) 454-8155 Fax : (425) 454-1509
URL : <http://www.icomamerica.com>
<Customer Service>
Phone : (425) 454-7619

Icom Canada

3071 #5 Road, Unit 9, Richmond, B.C., V6X 2T4, Canada
Phone : (604) 273-7400 Fax : (604) 273-1900
URL : <http://www.icomcanada.com>

Icom (Australia) Pty. Ltd.

A.C.N. 006 092 575
290-294 Albert Street, Brunswick, Victoria, 3056, Australia
Phone : 03 9387 0666 Fax : 03 9387 0022
URL : <http://www.icom.net.au>

Asia Icom Inc.

6F No. 68, Sec. 1 Cheng-Teh Road, Taipei, Taiwan, R.O.C.
Phone : (02) 2559 1899 Fax : (02) 2559 1874

Icom (Europe) GmbH

Communication Equipment
Himmelgeister Str. 100, D-40225 Düsseldorf, Germany
Phone : 0211 346047 Fax : 0211 333639
URL : <http://www.icomeurope.com>

Icom Spain S.L.

Crta. de Gracia a Manresa Km. 14,750
08190 Sant Cugat del Valles Barcelona, SPAIN
Phone : (93) 590 26 70 Fax : (93) 589 04 46
URL : <http://www.icomspain.com>

Icom (UK) Ltd.

Unit 9, Sea St., Herne Bay, Kent, CT6 8LD, U.K.
Phone : 01227 741741 Fax : 01227 741742
URL : <http://www.icomuk.co.uk>

Icom France S a

Zac de la Plaine, Rue Brindejenc des Moulinais
BP 5804, 31505 Toulouse Cedex, France
Phone : 561 36 03 03 Fax : 561 36 03 00
URL : <http://www.icom-france.com>

Count on us!