

**iCOM**

**INSTRUCTION MANUAL**

 
UHF TRANSCEIVER  
**IC-U8s2**

---

---

---

**Icom Inc.**

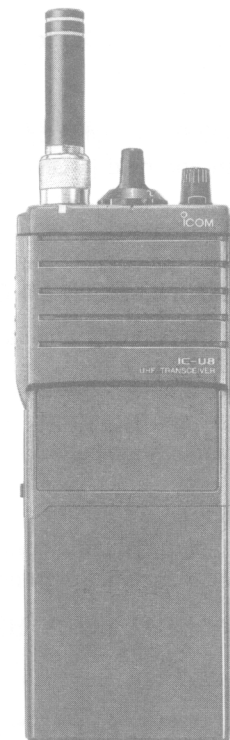

---

## FOREWORD

---

Thank you for choosing the Icom **IC-U8S2 UHF TRANSCIVER**. Icom uses the most advanced, state-of-the-art engineering concepts and the latest technology.

The **IC-U8S2** meets U.S. Government Military Standard Specifications 810C and 810D for use in harsh environments that include:

- Low pressure
- Low temperature
- High temperature
- Solar radiation
- Rain
- Humidity
- Soft fog
- Dust
- Vibration
- Shock

To fully appreciate the capabilities of your new **IC-U8S2**, please read this instruction manual carefully before operating.

 
### **WARNING:**

The CM-79 BATTERY PACK must be used in areas where the danger of explosion might exist since the battery pack is designed for intrinsically safe-type transceivers.

---

## UNPACKING

---

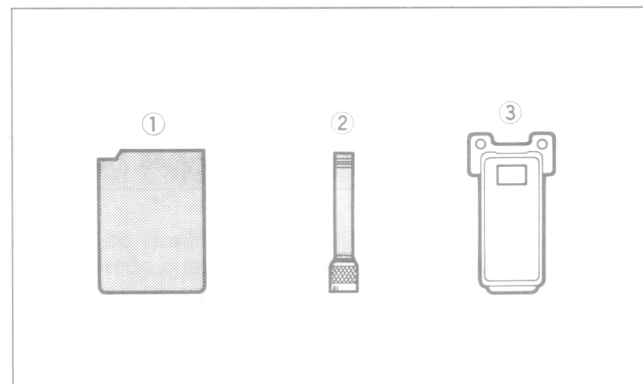

Accessories included with the IC-U8S2:	Qty.
① Battery pack (CM-79) .....	1
② Flexible antenna .....	1
③ Alligator clip .....	1

# CONTROL FUNCTIONS

1

① **ANTENNA CONNECTOR**

Connects the supplied flexible antenna.

② **TRANSMIT/BUSY INDICATOR [TX/BUSY]**

Lights up in red while transmitting.

Lights up in green when a channel is busy.

③ **CHANNEL SELECTOR**

Selects a channel. Do not try to rotate beyond the channel lock point. (Channels can be locked by your nearest authorized Icom Dealer).

④ **POWER SWITCH/VOLUME CONTROL [PWR/VOL]**

Turn power ON and OFF, and adjust the audio level.

⑤ **MONITOR SWITCH [MONITOR]**

Push when the [TX/BUSY] indicator lights up in green to listen to the channel.

⑥ **PTT (Push-To-Talk) SWITCH**

 
Push to transmit, and release to receive.

⑦ **BATTERY PACK RELEASE BUTTON**

Allows the battery pack to be removed from the transceiver.

⑧ **EXTERNAL SPEAKER-MICROPHONE JACKS**

Accepts an optional EM-49 SPEAKER-MICROPHONE. Ask your Icom Dealer for connection information.

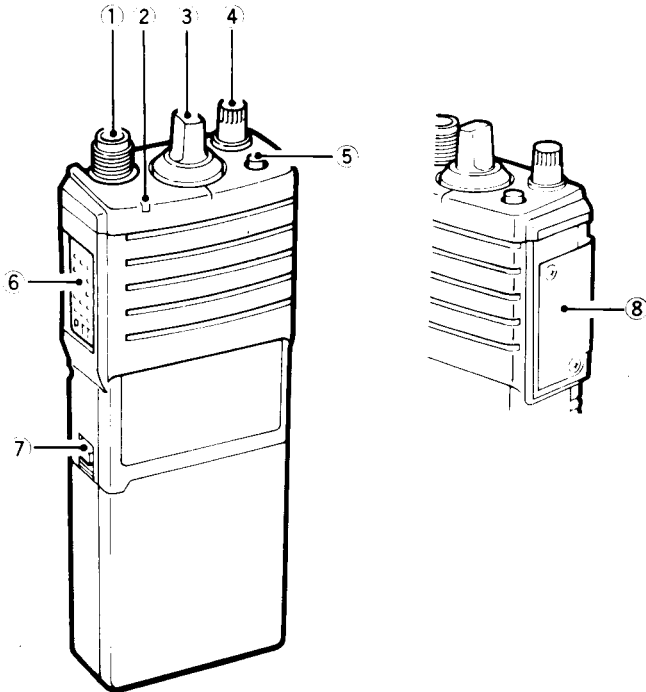


## ■ BATTERY PACK REPLACEMENT

Before replacing the battery pack, [PWR/VOL] **MUST** be fully rotated counterclockwise until a click is heard to turn OFF power.

- 1) To remove the battery pack from the transceiver, push and hold the **RELEASE** button upward, then slide the battery pack to the right with the transceiver facing you.
- 2) To attach the battery pack to the transceiver, mate the notched ends between the battery pack and the transceiver, then slide the battery pack until a click sound from the latch is heard.
 
### • Battery pack removal

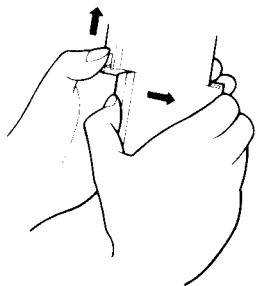


## ■ BATTERY PACK CHARGING

Prior to using the transceiver for the first time, the battery pack **MUST** be fully charged with the optional BM-71U/E DESKTOP CHARGER.

- 1) Turn ON the optional BM-71U/E DESKTOP CHARGER.
- 2) Put the battery pack in the CHARGING SLOT.
  - The CHG indicator on the BM-71U/E lights up while charging.
  - When the battery pack is attached to the transceiver, [PWR/VOL] **MUST** be OFF.
  - Average charging time is about 1 hour.
 
### • Battery pack charging

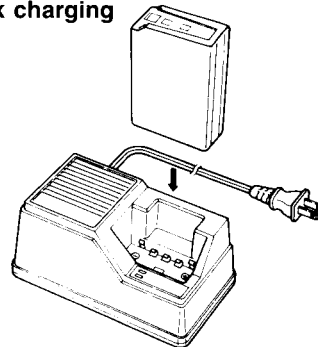

### ■ BATTERY PACK CAUTIONS

**NEVER** throw the battery pack into a fire. Internal battery gas may cause an explosion.

**NEVER** put the battery pack in water. If the battery pack is wet, be sure to wipe it dry.

**NEVER** short terminals of the battery pack. Internal components may be damaged. Current may flow into nearby metal objects.

**NEVER** replace the battery cells. When the operating time of the battery pack is shorten even full charged, a new battery pack must be purchased.

**AVOID** charging the battery pack in extreme cold (under 0°C) or extreme heat (over +40°C). The battery pack may not charge fully in these extreme temperatures.

### ■ LOW BATTERY CONDITION

When the [TX/BUSY] indicator goes out or does not light up while transmitting, the battery should be charged or replaced with a fully charged battery pack.

### ■ ANTENNA CONNECTION

 
Insert the connector on the supplied flexible antenna to the antenna connector on the top panel of the transceiver. Screw down securely.

### ■ ALLIGATOR CLIP ATTACHMENT

The supplied alligator clip is helpful for carrying the transceiver.

Remove 2 screws on the rear panel, then attach the alligator clip to the transceiver with the 2 screws.

#### • Belt clip attachment

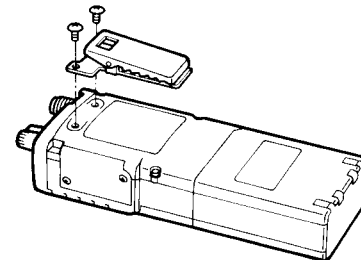

**■ RECEIVING**

- 1) Rotate [PWR/VOL] clockwise to turn ON power.
- 2) Set the channel selector to the desired channel position.
- 3) Adjust [PWR/VOL] to the desired listening level when a call is received.
- 4) If [TX/BUSY] lights up in green but no audio is emitted, push and hold [MONITOR] to listen to the channel.

**■ TURNING POWER OFF**

Rotate [PWR/VOL] until a click is heard. Power is now OFF.

**■ TRANSMITTING**

**CAUTION:** Transmitting without an antenna may damage the transceiver.

- 1) Turn ON power, then set the channel selector to the desired channel position.
- 2) When [TX/BUSY] lights up in green, wait until the channel is clear before transmitting.
- 3) After confirming the channel is clear, push and hold the PTT switch, and speak into the microphone.
  - [TX/BUSY] lights up in red.
  - **DO NOT** hold the transceiver too closely to your mouth or speak too loudly. This may distort the signal.
- 4) Release the PTT switch to return to receive.

## ■ OPTIONS

### • BATTERY PACK

	OUTPUT VOLTAGE	BATTERY CAPACITY	HEIGHT
<b>CM-79</b> (Intrinsically safe type)	7.2 V	600 mAh	67 mm (2.6 in)

### • BM-71U/E AC BATTERY CHARGER

Rapidly charges the CM-79 BATTERY PACK.

### • EM-49 SPEAKER-MICROPHONE

Plugs into transceiver and clips on lapel or pocket. Has PTT switch.

 
### • FA-450TA FLEXIBLE ANTENNA

Long-type flexible antennas. Ensure you longer distance communications.

### • UT-46 DTMF ENCODER UNIT

Provides repeater access and auto phone-patch operation.

**Count on us!**

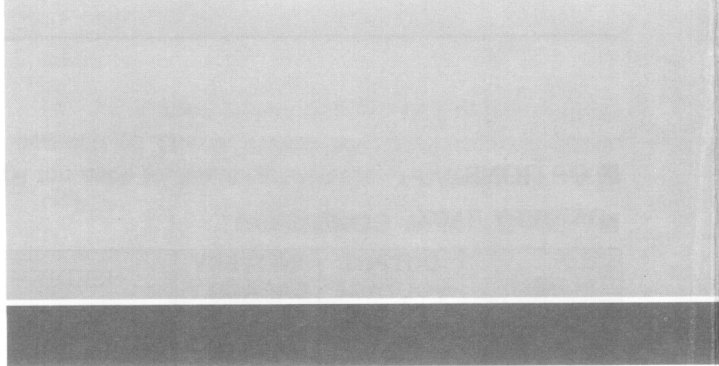

A-5173S-1EX  
Printed in Japan  
Copyright © 1991 by Icom Inc.

**Icom Inc.**  
6-9-16, Kamihigashi, Hirano-ku, Osaka 547, Japan