

4 WATCH A RECORDED PROGRAM

* You can use the available buttons on the remote control or on the VCR.

- 1 Load a cassette with the label facing out and the window facing up.
- 2 Press **REW** or **FF** to find program start point.
- 3 Press **PLAY** to start playback.
- 4 Press **STOP** (remote) or **STOP/EJECT** (VCR), then press **STOP/EJECT** to remove the cassette.

5 RECORD A PROGRAM

a-BASIC RECORDING


* You can use the available buttons on the remote control or on the VCR.

- 1 Load a cassette as above.
- 2 Press **CH**, or press the appropriate **NUMBER** keys (remote) and press **ENTER** (remote), to select the recording channel.
- 3 Press **SP/EP** (remote) to set the recording speed.
- 4 Press **REC** and **PLAY** together (remote) or **REC** (VCR) to start recording.
- 5 Press **PAUSE** to stop recording temporarily, and press **PLAY** to resume.
- 6 Press **STOP** or **STOP/EJECT**, then press **STOP/EJECT** to remove the cassette.


b-INSTANT TIMER RECORDING

* You cannot perform ITR using the remote control.

- 1 Press **REC** to start recording.
- 2 Press **REC** to engage ITR. "0:30" appears on the screen.
- 3 To extend duration in increments of 30 minutes, press **REC** as many times as necessary.

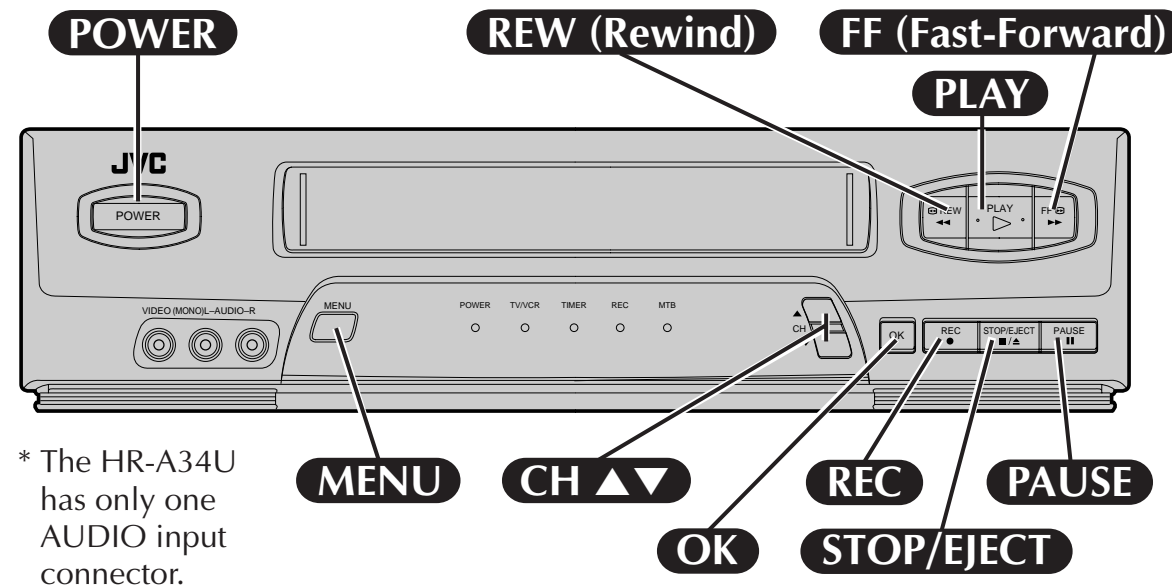

* The HR-A34U has only one AUDIO input connector.

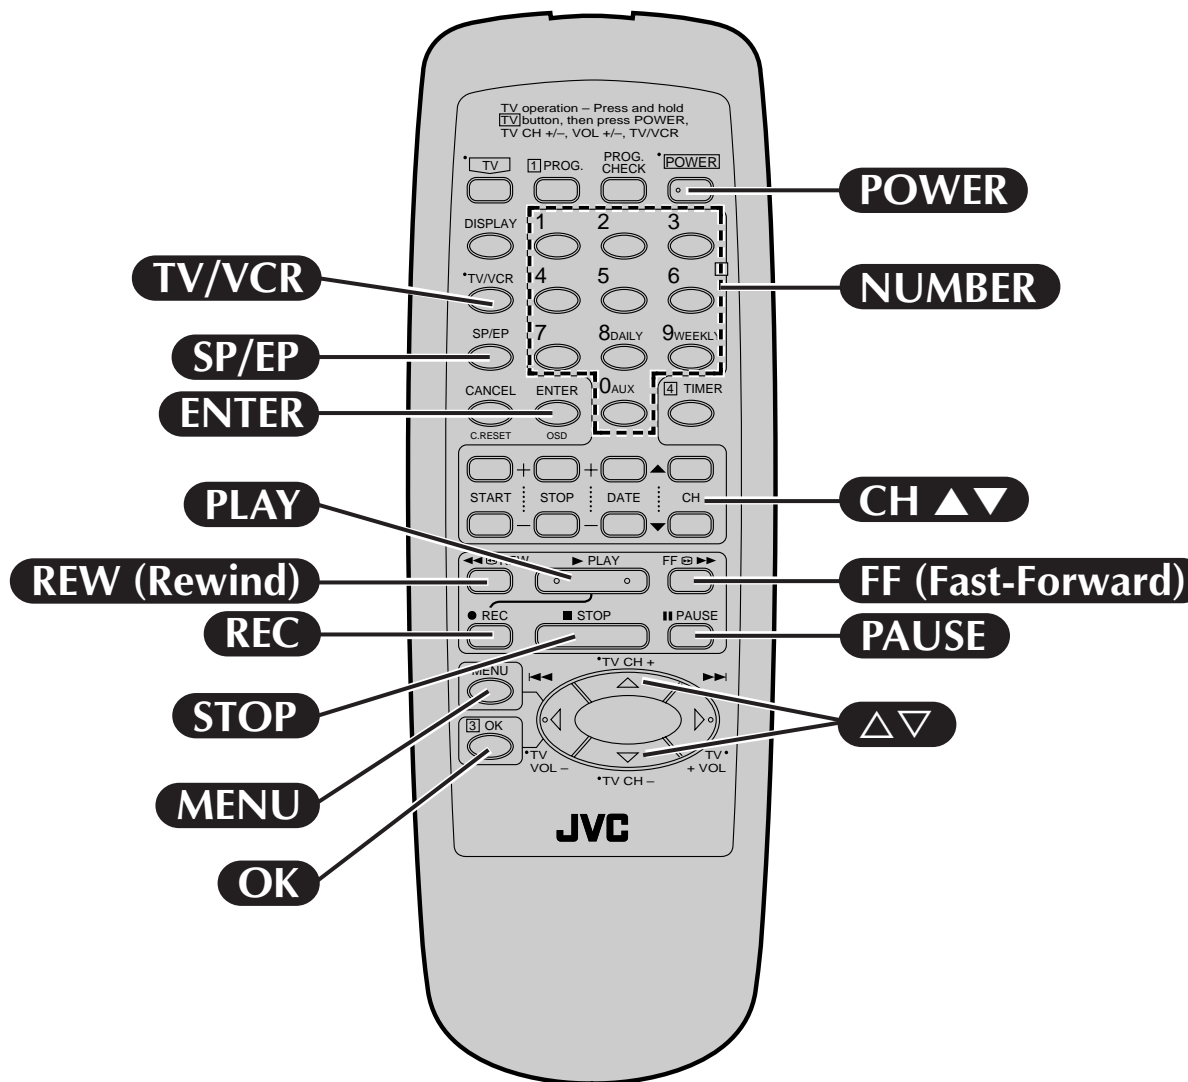

Dear Customer,
Thank you for purchasing
this JVC Video Cassette
Recorder.

QUICK START*

A GUIDE TO EASY SET UP AND USE


JVC
MONO/Hi-Fi/SUPER VHS
VIDEO CASSETTE RECORDERS

* Please refer to the HR-A54U/A34U's instruction manual for more detailed information.

The Path To Enjoyment Starts Here . . .

- 1 CHECK PACKAGE CONTENTS
- 2 SITUATE AND CONNECT VCR
- 3 SET CLOCK AND TUNER
- 4 PLAY BACK A TAPE
- 5 RECORD A PROGRAM

1 MAKE SURE THAT YOUR PACKAGE CONTAINS:

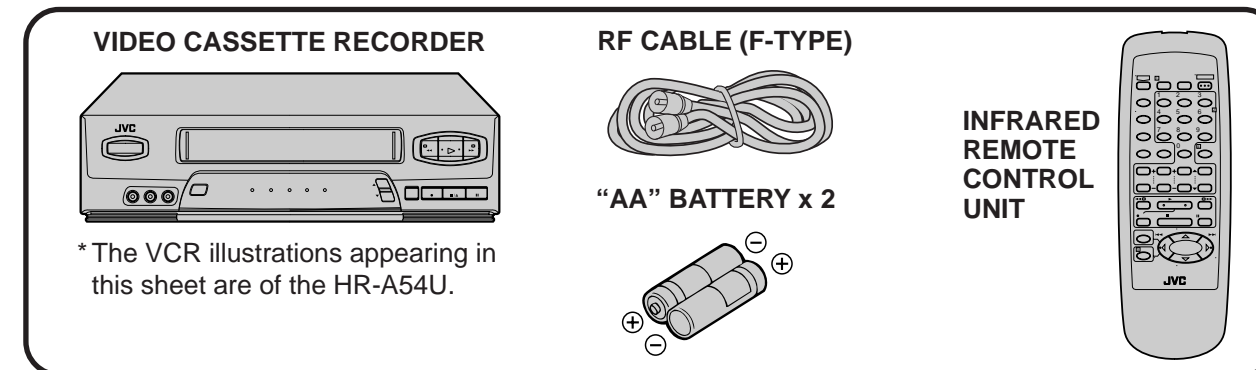


* The VCR illustrations appearing in this sheet are of the HR-A54U.


2 SITUATE AND CONNECT YOUR NEW VCR

a-BASIC ANTENNA/CABLE CONNECTION


- Place the VCR on a stable, horizontal surface.
- Disconnect your antenna or cable line from your TV.
- Connect your antenna to your VCR.
- Connect your VCR to your TV.
- After completing the basic connections:
 - If you're using a Cable Box, . . . go to **2b** (CATV CONVERTER CONNECTION).
 - If you're using an AV connection, . . . go to **2c** (AUDIO/VIDEO CONNECTIONS).
 - If you're using an RF connection, . . . go directly to **3** (CLOCK).

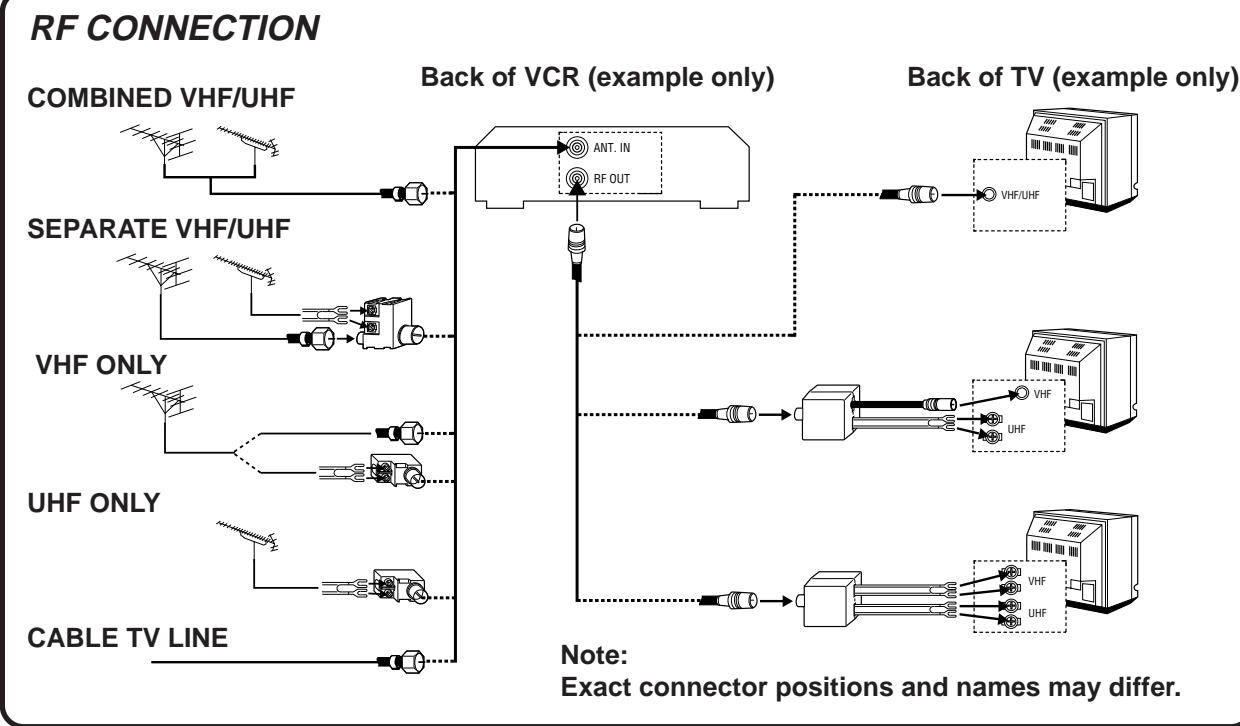

CONNECTORS WHICH ARE OR MAY BE REQUIRED:

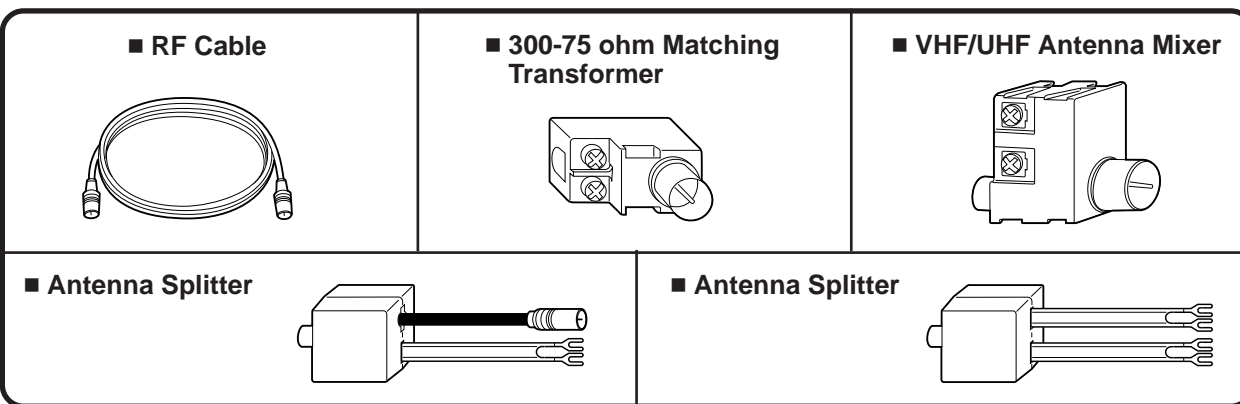

b-CATV CONVERTER CONNECTION

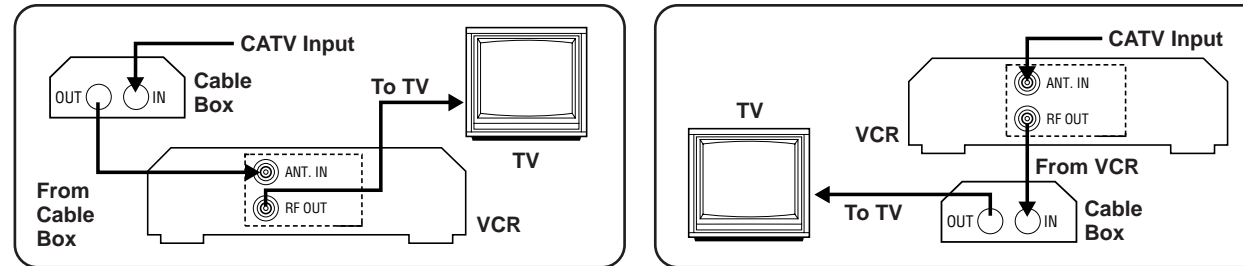

With this connection you can view/record any cable channel including scrambled channels to which you have subscribed. After making the connections, go to **3** (CLOCK).

With this connection, you can view one scrambled cable channel while recording another unscrambled channel. After making the connections, go to **3** (CLOCK).

To watch TV with this type of connection



- Press **TV/VCR** on remote to engage VIDEO mode.
- Tune TV to VCR output channel (3, 4 or AV mode).
- Tune VCR to Cable Box output channel.
- Select desired channel on Cable Box.
 - You can only view the channel you're recording.
 - You cannot change channels with the VCR remote control.

To watch TV with this type of connection

- Press **CH** or **NUMBER** keys to select desired channel for recording.
- Press **TV/VCR** to engage TV mode.
- Tune TV to Cable Box output channel.
- Select desired channel on Cable Box.
 - You cannot record scrambled channels.
 - To play back a tape, you must tune the Cable Box to the VCR output channel.


c-AUDIO/VIDEO CONNECTIONS

AV connection methods differ from one type of VCR to another. First, for any TV and VCR type, connect your VCR to your TV using RF connection. Then make AV connections following one of the methods pictured to the right. After making the connections, go to **3** (CLOCK).

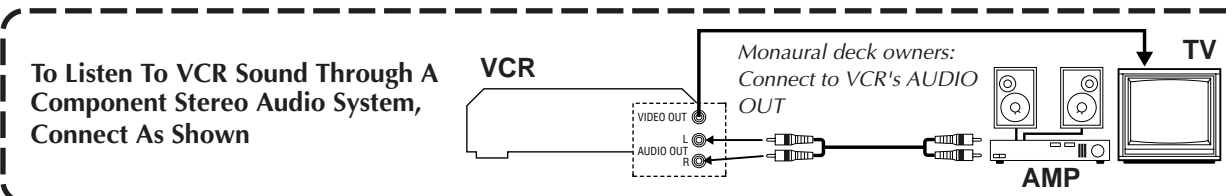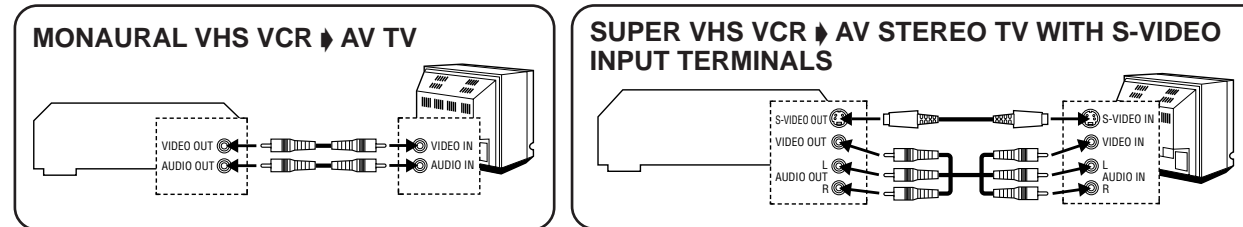


3 SET YOUR VCR'S CLOCK AND TUNER

a-CLOCK

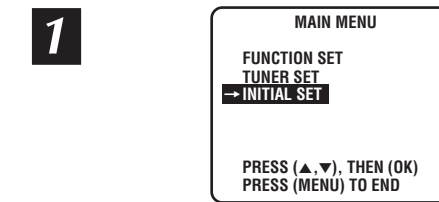


Press **MENU** to access this screen. Press **CH ▲▼** or **▲▼** to select "INITIAL SET", then press **OK**.

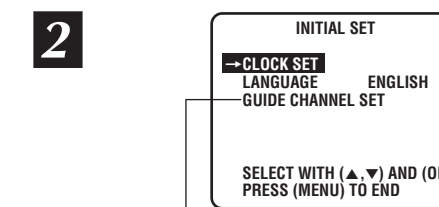

Displayed with HR-A54U only


Press **CH ▲▼** or **▲▼** to select "CLOCK SET", then press **OK**.

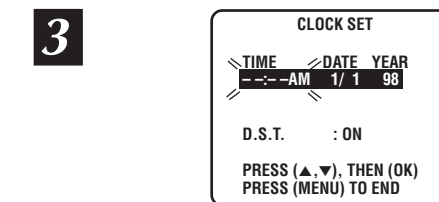


- Press **CH ▲▼** or **▲▼** to set the time, then press **OK**.
- Press **CH ▲▼** or **▲▼** to set the date, then press **OK**.
- Press **CH ▲▼** or **▲▼** to set the year, then press **OK**.
- Press **CH ▲▼** or **▲▼** to set D.S.T.(Daylight Saving Time) to "ON" or "OFF".

When you're finished with this set-up procedure, press **MENU** to start the clock.


b-TUNER

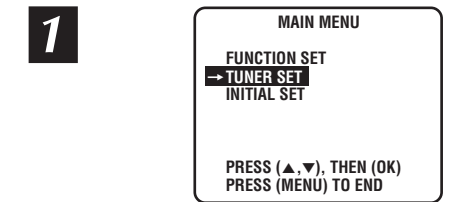

Press **MENU** to access this screen. Press **CH ▲▼** or **▲▼** to select "TUNER SET", then press **OK**.

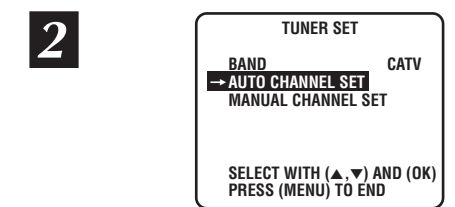

Press **CH ▲▼** or **▲▼** to select "AUTO CHANNEL SET", then press **OK**.

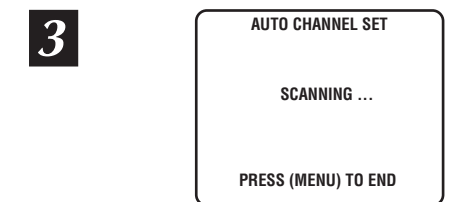

Receivable channels in your area are automatically assigned to **CH ▲▼** buttons, and non-receivable channels are skipped.

- At the end of Auto Channel Set, "SCAN COMPLETED" appears on screen.
- If the scan was unsuccessful, "SCAN COMPLETED-NO SIGNAL" appears on screen. Check the connections and start again.