

ATTENTION

For Customers Who Have Connected The VCR To TV Via RF Connection:

If the relevant on-screen menu does not appear...

... when you press **PROG** in step 2 of "VCR Plus+ Timer Programming" (☞ pg. 38) or "Express Timer Programming" (☞ pg. 42),

... when you press **PROG. CHECK** in step 2 of "Check, Cancel And Revise Programs" (☞ pg. 44),

press **TV/VCR** on the remote control so that the VCR indicator lights up on the front display panel.