


## Additional Reference Manual

### Charging the Battery Pack(BN-V856U)

Use the provided AC Power Adapter/Charger to charge the battery pack. The Battery Pack is rechargeable even if it is not completely depleted.

For details on operation, refer to the notes on page 10 in the camcorder's instructions.

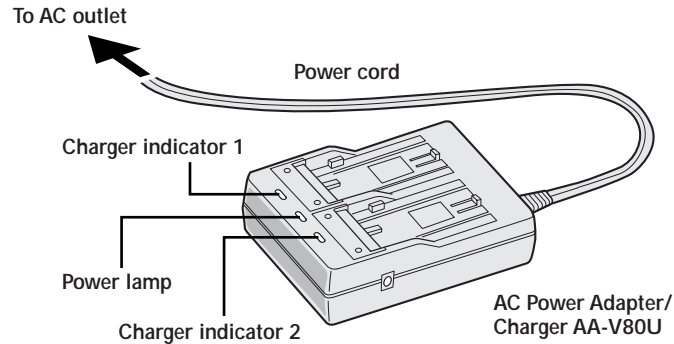

AC Power Adapter/  
Charger AA-V80U


#### 1 SUPPLY POWER TO CHARGER

Plug the AC Power Adapter/Charger's power cord in to an AC outlet. The power lamp comes on.

#### 2 ATTACH THE BATTERY PACK

Attach while making sure the  $\oplus$   $\ominus$  marks are facing down and aligned with the corresponding marks on the AC Power Adapter/Charger.


- The Charger Indicator 1 begins blinking to indicate charging has started. (Charger indicator 2 does not blink.)
- When blinking of the Charger indicator 1 stops blinking and remains lit, charging is finished.
- Charging time is approximately 6 hrs. 30 min. (When the Battery Pack is completely depleted.)

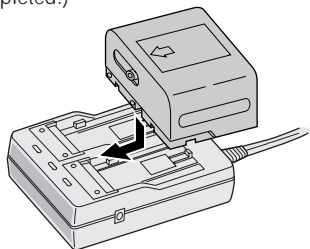


#### 3 DETACH THE BATTERY PACK

Slide the battery in the direction of the arrow and lift off.

- When charging is finished, unplug the Power cord from an AC outlet.

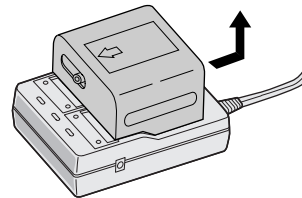

### Using the Battery Pack (BN-V856U)

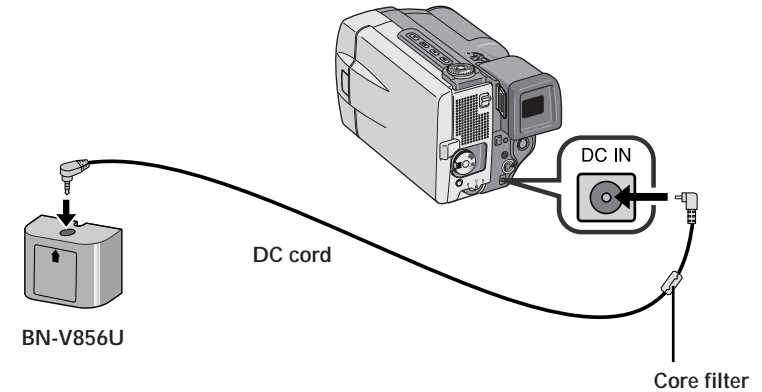


#### Approximate recording time

LCD monitor off/Viewfinder on	approx. 6 hrs.
LCD monitor on/Viewfinder off	approx. 5 hrs.


## Using the Battery Pouch

- Using the provided Battery Pouch, you can carry the Battery Pack (BN-V856U) on your waist or shoulder.
- Use the provided DC cord only.


### 1 PACKING THE DC CORD

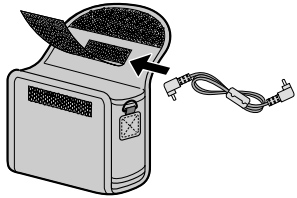

### 2 INSERT THE BATTERY PACK

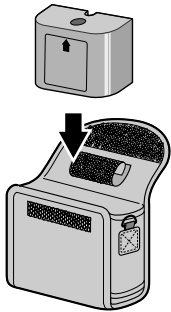


### 3 CONNECT THE DC CORD

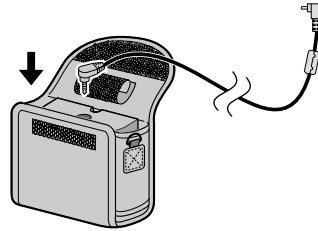

### 4 SHOOTING WITH THE BATTERY PACK HUNG FROM THE WAIST OR SHOULDER



## Using DV cable

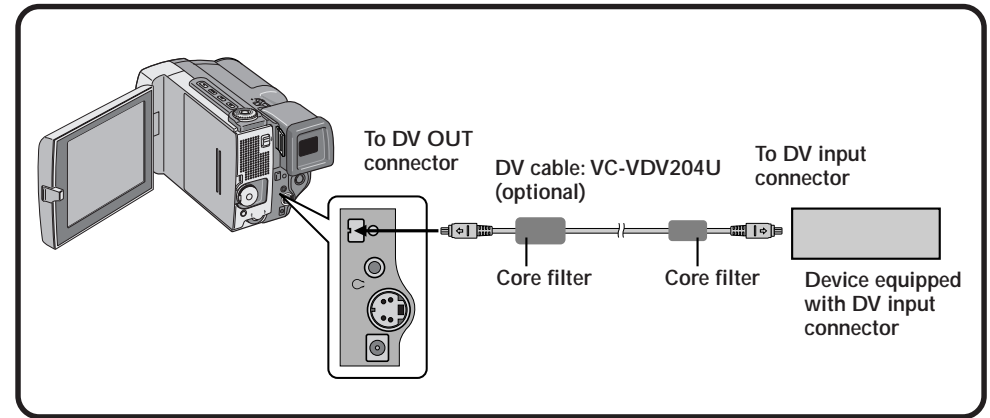


When connecting this camcorder to a device equipped with a DV input connector, refer to pages 60,61, and 63 in the camcorder's instructions, be sure to use the optional DV cable (VC-VDV204U). Connect the end of the cable with the larger core filter to the camcorder.

#### NOTE:

*If a DV cable other than the VC-VDV204U is used, interference may affect devices located near the camcorder (Ex.: bands of noise appearing on the TV monitor).*

## Performing Audio Dubbing

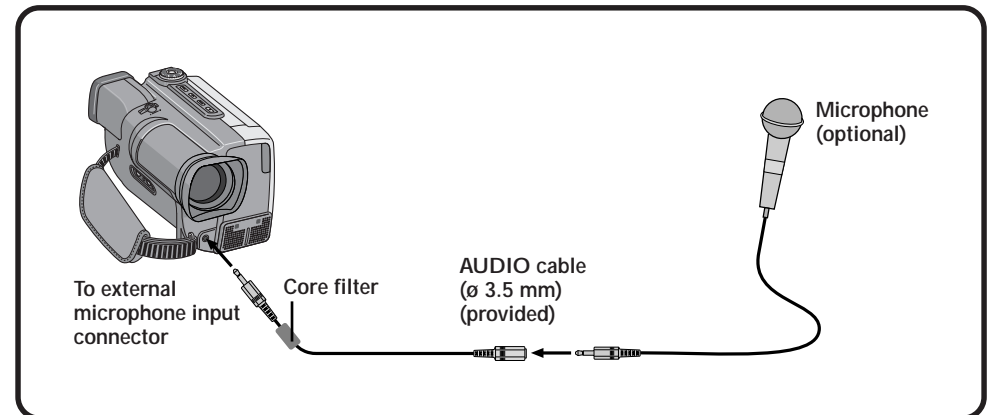

When performing Audio Dubbing, refer to page 70 in the camcorder's instructions, using an optional microphone, be sure to connect the microphone to the camcorder using the provided AUDIO cable as shown in the illustration.

#### NOTE:

*If the provided AUDIO cable is not used when connecting a microphone to the camcorder, interference may affect devices located near the camcorder (Ex.: bands of noise appearing on the TV monitor).*