
JVC





VIDEO CASSETTE RECORDER

HR-S9500E/EH

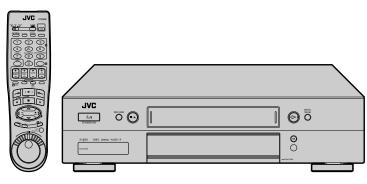

PTIME JOG & SCAN

SHOWVIEW HI-FI SVHS



ENGLISH

CONTENTS	
SAFETY FIRST Safety Precautions	2 . 2
INSTALLING YOUR NEW RECORDER Basic Connections	
INITIAL SETTINGS Auto Set Up Language On-Screen Displays Power Save Mode (HR-S9500E only)	. 9 10
INFORMATION ON COLOUR SYSTEM Colour System Set	12 12
PLAYBACK Basic Playback Playback Features TimeScan	13 13 14 18
RECORDING Basic Recording Recording Features B.E.S.T. Picture System	21
TIMER RECORDING SHOWVIEW Timer Programming Express Timer Programming Automatic Satellite Programme Recording	28
SPECIAL FEATURES Remote Control Functions	33 33
Edit To Or From Another Video Recorder	37 38
Insert Editing Random Assemble Editing Audio Dubbing	42
INFORMATION ON J TERMINAL	45
	46 46 47 48
Tuner Set	49 49 50 57 58
TROUBLESHOOTING	60
QUESTIONS AND ANSWERS	62
INDEX	63



 $2_{\scriptscriptstyle ext{EN}}$ SAFETY FIRST

Safety Precautions

The rating plate and the safety caution are on the rear of the unit.

WARNING: DANGEROUS VOLTAGE INSIDE

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR

MOISTURE.

CAUTION

■ When you are not using the recorder for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.

■ Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the mains outlet prior to connecting or disconnecting any signal lead or aerial.

WARNING

There are two different types of SECAM colour systems: SECAM-L, used in FRANCE (also called SECAM-West), and SECAM-B, used in Eastern European countries (also called SECAM-East).

1. This recorder can also receive SECAM-B colour television signals for recording and playback.

- Recordings made of SECAM-B television signals produce monochrome pictures if played back on a video recorder of SECAM-L standard, or do not produce normal colour pictures if played back on a PAL video recorder with SECAM-B system incorporated (even if the TV set is SECAM-compatible).
- 3. SECAM-L prerecorded cassettes or recordings made with a SECAM-L video recorder produce monochrome pictures when played back with this recorder.
- 4. This recorder cannot be used for the SECAM-L standard. Use a SECAM-L recorder to record SECAM-L signals.

IMPORTANT

- Please read the various precautions on page 2 and 3 before installing or operating the recorder.
- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.



- Cassettes marked "S-VHS" and "VHS" can be used with this video cassette recorder. However, S-VHS recordings are possible only with cassettes marked "S-VHS".
- SHOWVIEW is a trademark of Gemstar Development Corporation. The SHOWVIEW system is manufactured under licence from Gemstar Development Corporation.
- Certain audio features of this product manufactured under a license from Desper Products, Inc. Spatializer® is a trademark owned by Desper Products, Inc.

For Italy:

"It is declared that this product, brand JVC, conforms to the Ministry Decree n. 548 of 28 Aug. '95 published in the Official Gazette of the Italian Republic n. 301 of 28 Dec. '95"

The STANDBY/ON 0/I button does not completely shut off mains power from the unit, but switches operating current on and off. " 0" shows electrical power standby and " 1" shows ON.

Video tapes recorded with this video recorder in the LP (Long Play) mode cannot be played back on a single-speed video recorder.

Failure to heed the following precautions may result in damage to the recorder, remote control or video cassette.

- 1. **DO NOT** place the recorder ...
 - ... in an environment prone to extreme temperatures or humidity.
 - ... in direct sunlight.
 - ... in a dusty environment.
 - ... in an environment where strong magnetic fields are generated.
 - ... on a surface that is unstable or subject to vibration.
- 2. DO NOT block the recorder's ventilation openings.
- 3. DO NOT place heavy objects on the recorder or remote control.
- 4. DO NOT place anything which might spill on top of the recorder or remote control.
- 5. AVOID violent shocks to the recorder during transport.


MOISTURE CONDENSATION

Moisture in the air will condense on the recorder when you move it from a cold place to a warm place, or under extremely humid conditions—just as water droplets form in the surface of a glass filled with cold liquid. Moisture condensation on the head drum will cause damage to the tape. In conditions where condensation may occur, keep the recorder turned on for a few hours to let the moisture dry.

ABOUT HEAD CLEANING

Accumulation of dirt and other particles on the video heads may cause the playback picture to become blurred or interrupted. Be sure to contact your nearest JVC dealer if such troubles occur.

Basic Connections

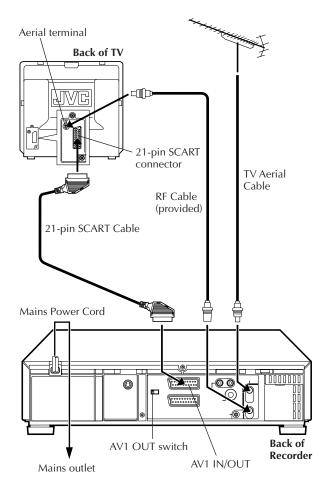

Make AV connection if your TV has a 21-pin AV input connector (SCART) in order to reduce the possibility of interference. And if you are using a stereo TV, you will need this cable in order to enjoy stereo playback of videotapes.

It's essential that your video recorder be properly connected. Follow these steps carefully. THESE STEPS MUST BE COMPLETED BEFORE ANY VIDEO OPERATION CAN BE PERFORMED.

CHECK CONTENTS

Make sure the package contains all of the accessories listed in "Specifications" (pg. 66).

SITUATE RECORDER

Place the recorder on a stable, horizontal surface.

CONNECT RECORDER TO TV

The connection method you use depends on the type of TV you have.

RF CONNECTION

- To Connect To A TV With NO AV Input Terminals . . .
- **a** Disconnect the TV aerial cable from the TV.
- **b** Connect the TV aerial cable to the ANT. IN jack
- on the rear panel of the recorder. **c** Connect the provided RF cable between the RF
 OUT jack on the rear panel of the recorder and the

AV CONNECTION

TV's aerial terminal.

- To Connect To A TV With AV Input Terminals . . .
- a– Connect the aerial, recorder and TV as per "RF CONNECTION".
- **b** Connect an optional SCART cable between the AV1 IN/OUT socket on the rear panel of the recorder and the TV's 21-pin SCART connector.
- c– Set the AV1 OUT switch to the appropriate position. See "AV1 OUTPUT SIGNAL SELECTION FOR AV CONNECTION" below.

CONNECT RECORDER TO MAINS

4

Plug the end of the mains power cord into a mains outlet.

After you plug the mains power cord into a mains outlet, the Country Set display appears on the TV screen and/or on the recorder's front display panel when the \oplus /I button on the recorder/remote control is pressed for the first time to power on the recorder; go to page 6 to perform Auto Set Up.


AV1 OUTPUT SIGNAL SELECTION FOR AV CONNECTION

The AV1 IN/OUT connector accepts only a composite signal (regular video signal), but can deliver either a composite video signal or a Y/C signal (a signal in which the luminance and chrominance signals are separated) according to the setting of the rear panel AV1 OUT switch.

- If your TV's 21-pin AV input connector (SCART) is compatible only with the regular video signal, set this switch to COMP.
- If your TV's 21-pin AV input connector (SCART) is compatible with the Y/C signal, set this switch to Y/C. You can obtain high-quality S-VHS pictures. (For connection, be sure to use a 21-pin SCART cable that is compatible with the Y/C signal.)

- Set your TV to the VIDEO (or AV), Y/C, or RGB mode according to the type of your TV's SCART connector.
- For switching the TV's mode, refer to the instruction manual of your television.
- To obtain high-quality S-VHS pictures, you can also use the S-VIDEO CONNECTION described on page 5.

S-VIDEO Connection

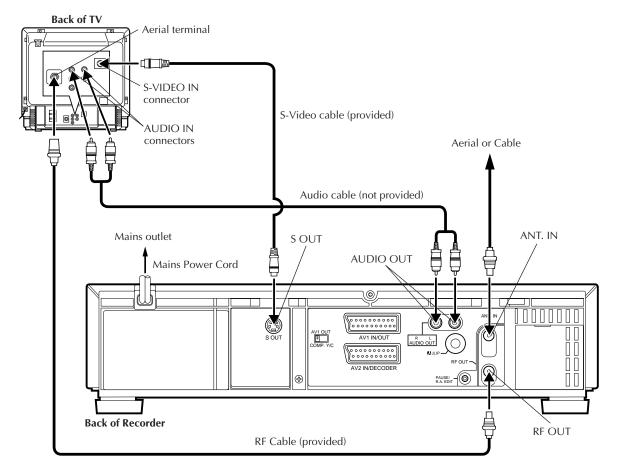

• To Connect to A TV With S-VIDEO/AUDIO IN Connectors . . .

CONNECT RECORDER TO

| | \ | a_ (

- **a** Connect the aerial, recorder and TV as per "RF CONNECTION" (pg. 4).
- b– Connect the recorder's S OUT connector to the TV's S-VIDEO IN connector.
- c– Connect the recorder's AUDIO OUT connectors to the TV's AUDIO IN connectors.

CONNECT RECORDER TO MAINS

Plug the end of the mains power cord into a mains outlet.

NOTES:

 
- You can obtain high-quality S-VHS pictures.
- If your television is not stereo-capable, use the recorder's AUDIO OUT connectors to connect to an audio amplifier for Hi-Fi stereo sound reproduction. (pg. 48)
- To operate the recorder with your TV using the S-VIDEO connection, set your TV to the VIDEO (or AV mode).
- For switching the TV's mode, refer to the instruction manual of your television.


2

After you plug the mains power cord into a mains outlet, the Country Set display appears on the TV screen and/or on the recorder's front display panel when the θ/I button on the recorder/remote control is pressed for the first time to power on the recorder; go to page 6 to perform Auto Set Up.

Auto Set Up

Auto Channel Set/Auto Clock Set/Auto Guide Program Number Set/Auto Video Channel Set



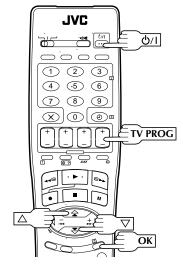

International Telephone Country Code SUISSE : 41 SHOMI : 358 ITALIA :39 **PORTUGAL** : 351 **ESPAÑA** : 34 DEUTSCHLAND: 49 **BELGIUM** : 32 NORGE : 47 **NEDERLAND SVERIGE** : 46 : 31 DANMARK GREECE :30 : 45 **OTHERS** ÖSTERREICH : 43

ATTENTION

Once you have performed Auto Set Up, even if the recorder's memory backup has expired, all the stored stations and their Guide Program numbers remain in the recorder's memory and the recorder will not perform Auto Set Up again. You only need to set the clock. (p. 58)

If you have moved to a different area, perform each setting as required.

- Video Channel setting (for RF connection users) \$\sup\$ pg. 49
- Tuner setting ☞ pg. 50
- Clock setting
 □ pg. 58

If a new station starts broadcasting in your area, perform tuner setting (pg. 50) and, if necessary, video channel setting (pg. 49).

When the U/I button on the recorder/remote control is pressed for the first time to power on the recorder after you plug the mains power cord into a mains outlet, the Country Set display will appear on the TV screen and the recorder's front display panel. By simply selecting your country*, the Auto Set Up function sets the tuner channels, clock, Guide Program numbers and video channel** automatically.

- * If you live in Belgium (BELGIUM) or Switzerland (SUISSE), you also need to select your area.
- ** Useful if you have connected the video recorder to your TV via RF connection (IF) pg. 4). Video Channel (RF output channel) is the channel on which your TV receives picture and sound signals from the video recorder through the RF cable.

You can refer to the front display panel and/or the on-screen display to perform this procedure.

Before starting, make sure of the following:

- The TV aerial cable should be connected to the recorder.
- The recorder's mains power cord should be connected to a mains outlet.
- If you want to use the on-screen display, the TV should be set to its AV mode (with AV or S-VIDEO connection graps, 4 or 5) or UHF channel 36 (with RF connection graps, 4).

TURN ON THE RECORDER

Press U/I on the recorder or remote control. The Country Set display appears on the front display panel and/or on the screen.

5 [] - - (

NOTE:

If you have connected your TV to the recorder with RF connection and the onscreen display appearing on UHF channel 36 looks distorted, perform this procedure referring to the front display panel.



SELECT COUNTRY

If you are referring to the front display panel


Press $\triangle \nabla$ to select your international telephone country code of your country referring to the chart in the left column.

- If you have selected a country code other than 32 (BELGIUM) or 41 (SUISSE), go to step 4.
- If you have selected 32 (BELGIUM) or 41 (SUISSE), go to step 3.

(Ex.) DEUTSCHLAND is selected



If you are referring to the on-screen display Press △▽ to move the highlight bar (pointer) to your

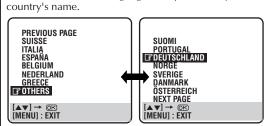

- If you have selected a country other than BELGIUM or SUISSE, go to step 4.
- If you have selected BELGIUM or SUISSE, go to step 3.

7

3

SELECT LANGUAGE

Press **OK**. The Language Set display appears on the front display panel and/or on the screen.

If you are referring to the front display panel Press △∇ to select your language code.

Language Code ENGLISH :01 **NEDERLANDS: 06 DEUTSCH** :02 **SVENSKA** : 07 **FRANCAIS** :03 **NORSK** : 08 : 04 : 09 **ITALIANO SUOMI** CASTELLANO: 05 **DANSK** :10

(Ex.) DEUTSCH is selected for SUISSE

International telephone country code

Language code

If you are referring to the on-screen display

Press △∇ to move the highlight bar (pointer) to the language of your choice.



(Ex.) DEUTSCH is selected


PERFORM AUTO SET UP

Press OK.

"Auto" appears on the display panel and blinks; do NOT press any button on the recorder or remote control until the display panel shows either the display as illustrated in step 5 or "——:——".

• If "--:--" appears on the display panel, refer to page 8.

 If you are using the onscreen display, the AUTO SET screen will appear. As Auto Set Up progresses, the " " " mark on the screen moves from left to right.

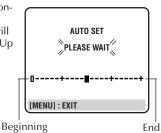


CONFIRM/SET VIDEO CHANNEL

If you have connected the video recorder to your TV via the provided RF cable only (RF connection)

The UHF channel that is shown on the display panel is your Video Channel.

 To view picture signals from the video recorder, set your TV to the Video Channel. — Refer to the instructions supplied with your TV set for how to do this.




If you have connected the video recorder to your TV via both the provided RF cable and a 21-pin SCART cable (AV connection), or via the provided RF cable, the provided S-Video cable and an audio cable (S-VIDEO connection)

You do not need the video channel so you have to set the video channel to off.

Press **TV PROG** – until the display panel shows "_OUT- –" to set the Video Channel to off.

 To view picture signals from the video recorder, set your TV to its AV mode. — Refer to the instructions supplied with your TV set for how to do this.



FINISH AUTO SET UP

 
Press **OK** and refer to page 8 to check the results.

4

- Auto channel set function takes place first; it assigns automatically all receivable stations in your area.
- Auto clock set function sets the clock automatically by reading the clock setting data from a station transmitting a PDC signal while auto channel set is being performed.
- During auto channel set, the recorder recognizes each station name of the detected stations and stores them in the recorder's memory, then automatically sets ShowView assigned Guide Program number for those stations according to the broadcast area.
- In the area where no TV station transmits a PDC signal, the recorder can perform neither auto clock set nor auto Guide Program number set.
- For RF connection users: The video recorder detects the channels which are not occupied by local stations and selects one channel automatically for your Video Channel that is located in the middle of more than 5 vacant channels.
- If there is a power cut, or if you press O(1) or **MENU** while Auto Set Up is in progress, Auto Set Up will be interrupted; be sure to turn off the recorder power once and try again from step 1.




Auto Set Up results appear on the front display panel



When both auto channel set and auto clock set have been completed successfully the correct current time will be displayed after the **OK** button is pressed in step **6** on page 7.



 When auto channel set has been completed successfully but auto clock set has not, "1" (channel position) will be displayed after the **OK** button is pressed in step **6** on page 7.



When neither auto channel set nor auto clock set has been completed successfully, "- -:- -" will be displayed.

You can check if the Guide Program numbers have been set correctly when you perform ShowView Timer Programming (F) pg. 26); if the correct channel position number is displayed in step 3, this confirms that the Guide Program number for the ShowView number you enter in step 2 has been set correctly.

A If both auto channel set and auto clock set have been performed successfully:

- 1 Turn on the TV and select its VIDEO channel or AV mode, then make sure that all necessary stations have been stored in the recorder's memory by using the **TV PROG** button(s).

 - If you want to set the tuner manually such as to add or skip channels, to change channel positions, or to set or change station names, see pages 52 56.

B If auto channel set has succeeded but auto clock set has not:

- 1 Turn on the TV and select its VIDEO channel or AV mode, then make sure that all necessary stations have been stored in the recorder's memory by using the **TV PROG** button(s).

 - If you want to set the tuner manually such as to add or skip channels, to change channel positions, or to set or change station names, see pages 52 56.
- 2 Perform "Clock Set" on page 58.

C If both auto channel set and auto clock set have failed:

- Make sure the TV aerial cable is connected properly to the recorder and turn off the recorder power once, then turn the recorder power back on again.
 - The Country Set display appears on the front display panel and/or on the screen; perform steps 2 6 on pages 6 7 again.

IMPORTANT

- In certain reception conditions, station names may not be stored correctly, and auto Guide Program Number Set may not work properly. If the Guide Program numbers are not set properly, when you timer-record a TV programme using ShowView, the recorder will record a TV programme of a different station. When programming the timer using ShowView, be sure to check whether the channel position on which your recorder receives the broadcasting station you wish to record is selected (p. 26, "ShowView Timer Programming").
- Your video recorder memorizes all detected stations even if reception of some of them is poor. In these cases picture quality may be poor. To delete those stations with an unacceptable picture ☐ "Delete A Channel" on page 53.
- For RF connection users: In certain reception conditions, the Video Channel may not be set correctly and interference may appear in the TV picture while the recorder's power is on. Set your Video Channel manually.

 pg. 49, "Video Channel Set".

INFORMATION

Language for the on-screen display

Auto Set Up also selects the language automatically for the on-screen display depending on the Country setting you have made in step 2 on page 6 (unless you have selected BELGIUM or SUISSE), as shown below.

SUOMI SUOMI SVERIGE → SVENSKA ESPAÑA CASTELLANO PORTUGAL **ENGLISH** DANMARK → DANSK **NEDERLAND NEDERLANDS** DEUTSCHLAND → **DEUTSCH** ÖSTERREICH DEUTSCH GREECE **ENGLISH** ITALIANO NORSK ITALIA **OTHERS ENGLISH** If you want to change the language setting manually, 🖙 "Language" on page 9.


Just Clock

Your recorder is equipped with the Just Clock function which provides accurate time keeping through automatic adjustments at regular intervals, by reading data from a PDC signal. If you want to take advantage of this function, simply set it to "ON".

"" "Just Clock" on page 58.

Language

Turn on the TV and select the VIDEO channel (or AV mode).

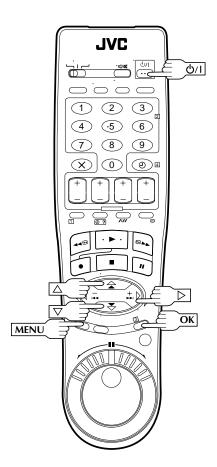

This recorder offers you the choice to view on-screen messages in 10 different languages. Though Auto Set Up selects the language automatically (pg. 8), you can change the language setting manually using this procedure as required.

1

TURN ON THE RECORDER

Press U/I.

ACCESS MAIN MENU

Press **MENU**.

ACCESS COUNTRY SET

Press △∇ to move the highlight bar (pointer) to "AUTO CH SET", then press **OK** or ▷.

MAIN MENU

MODE SET

FAUTO CH SET

MANUAL CH SET

INITIAL SET

REC LEVEL CTL

R.A. EDIT

[AV] → ©K

[MENU]: EXIT

SELECT COUNTRY

Press $\triangle \nabla$ to move the highlight bar (pointer) to your country's name, then press **OK** or \triangleright .

SELECT LANGUAGE

Press △▽ to move the highlight bar (pointer) to the language of your choice.

 You do not have to press OK; pressing OK starts Auto Channel Set. DANSK
SUOMI
NORSK
SVENSKA
NEDERLANDS
CASTELLANO
ITALIANO
FRANCAIS
DEUTSCH
FENGLISH
[AV] - GIE


RETURN TO NORMAL SCREEN

Press **MENU**.

6

On-Screen Displays

Turn on the TV and select the VIDEO channel (or AV mode).

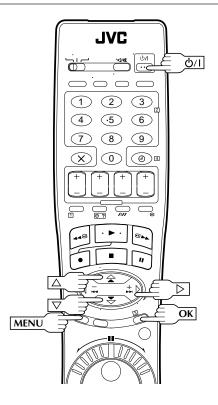

NOTES:

- When you use this recorder as the player for editing, be sure to set "O.S.D." to "OFF" before starting.
- During playback, the operation mode indicators may be disturbed depending on the type of tape being used.

You can choose whether or not to have various operational indicators appear on screen, by setting this function ON or OFF. Messages appear in the selected language (F) pg. 8 or 9).

TURN ON THE RECORDER

Press (1)/1.

ACCESS MAIN MENU SCREEN

Press MENU.

ACCESS MODE SET SCREEN

 
Move the highlight bar (pointer) to "MODE SET" by pressing $\triangle \nabla$, then press **OK** or \triangleright .

ENABLE/DISABLE ON-SCREEN DISPLAY

The default setting is "ON", so if you want on-screen displays, leave the setting as it is and go to step 5. If you don't want the displays to appear, press △▽ to move the highlight bar (pointer) to "O.S.D." and press **OK** or ▷ to set "O.S.D." to "OFF".



HR-S9500EH




RETURN TO NORMAL **SCREEN**

AUTO

Press MENU.

[MENU] : EXIT


The superimposed indication on the TV screen tells you what the recorder is doing.

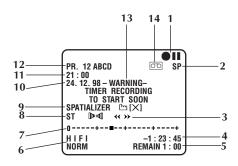

- 1– Operation mode indicators
- 2- Tape speed SP/LP/EP (EP is for NTSC playback only)
- 3- Tape direction
- 4- Counter display
- 5- Tape remaining time indicator (F) pg. 21)
- **6–** Audio mode display (pg. 17)
- 7- Tape position indicator (F) pg. 13)
- 8- Type of Broadcast (F pg. 23)
- 9– Spatializer[®] indicator (☐ pg. 17) 10– Current day/month/year
- 11- Clock display
- 12- Channel position number and station name/Aux. indicator (L-1, L-2, F-1 or S-1)
- 13- Timer warning display (F pg. 27, 29)
- 14- Cassette loaded mark

Power Save Mode (HR-S9500E only)

Turn on the TV and select the VIDEO channel (or AV mode).

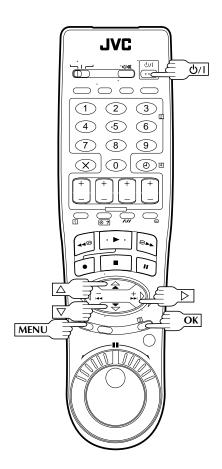

You can reduce the power consumption while the recorder is turned off.

1

TURN ON THE RECORDER

Press ⊍/I.

 
ACCESS MAIN MENU SCREEN

Press **MENU**.

2


ACCESS MODE SET SCREEN

Press $\triangle \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .



SELECT POWER SAVE

 Press △▽ to move the highlight bar (pointer) to "POWER SAVE", then press **OK** or ▷ to set to "ON".




RETURN TO NORMAL SCREEN

Press **MENU**.

5

- During Power Save, the display panel will be turned off.
- The Just Clock function (pg. 58) does not work while the Power Save mode is engaged.
- While the recorder is in the Power Save mode, the picture may be distorted momentarily when you turn on/off the recorder.
- Power Save does not work when ...
 - ... the recorder is in the Timer mode.
 - ... the recorder's power is turned off after timer-recording (or Instant Timer Recording).
 - ... the Auto Satellite Prog Recording mode is engaged (27 pg. 32).
 - ... "AV2 SELECT" is set to "DECODER" or "SAT" (pg. 39).

Colour System Set

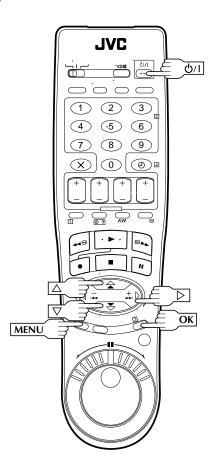

NOTES:

About NTSC Playback

- Some TVs shrink the picture vertically and place black bars at the top and bottom of the screen. This is not a malfunction on the part of either the video recorder or the TV.
- The picture may roll up and down. This can be corrected using the V-HOLD control found on some TVs. (This cannot be corrected if the TV does not have a V-HOLD control.)
- The counter and tape remaining time readings will be incorrect.
- During search, still, or frame-by-frame playback, the picture will be distorted, and there may be a loss of colour.
- Depending on the type of TV, the top and bottom portions of superimposed displays may be cut off during NTSC playback.

You can play back PAL, NTSC and MESECAM tapes, or record PAL and SECAM* signals on this recorder. Follow the procedure below to select the appropriate colour system.

* SECAM signals will be recorded as MESECAM on this recorder; MESECAM is the designation for tapes with SECAM signals that have been recorded on a MESECAM-compatible PAL video cassette recorder.

1

TURN ON THE RECORDER

Press U/I.

ACCESS MAIN MENU SCREEN

Press MENU.

_

ACCESS MODE SET SCREEN

Press $\triangle \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .

MAIN MENU


EMODESE
AUTO CH SET
MANUAL CH SET
INITIAL SET
REC LEVEL CTL
R.A. EDIT


[▲▼] → ©K [MENU] : EXIT

1

SELECT COLOUR SYSTEM MODE

Press $\triangle \nabla$ to move the highlight bar (pointer) to "COLOUR SYSTEM", then press **OK** or \triangleright to select the appropriate colour system.

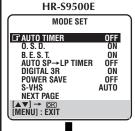

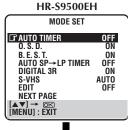





a- PAL/NTSC: To record PAL signals, or play back a PAL or NTSC tape.

b- MESECAM: To record SECAM signals, or play back a MESECAM tape.

RETURN TO NORMAL SCREEN


Press **MENU**.

5

PLAYBACK EN 13

Basic Playback

Turn on the TV and select the VIDEO channel (or AV mode).

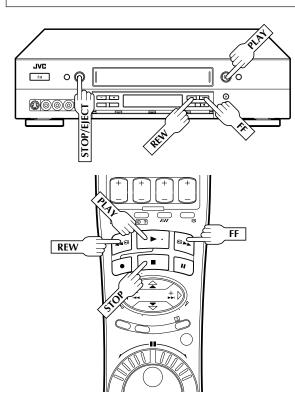

The easiest, most basic operation possible with your video recorder is tape playback. Already-recorded signals on a video tape are read by your video recorder and displayed on your TV just like a TV programme.

LOAD A CASSETTE

Make sure the window side is up, the rear label side is facing you and the arrow on the front of the cassette is point toward the recorder. Don't apply too much pressure when inserting.

- The recorder power comes on automatically and the counter is reset to 0:00:00.
- If the record safety tab has been removed, playback begins automatically.

FIND PROGRAMME START POINT

If the tape is advanced past the start point, press $\mbox{\bf REW}.$ To go forward, press $\mbox{\bf FF}$.

START PLAYBACK

 
Press **PLAY**. "BEST" appears blinking in the recorder's display panel during automatic tracking. (127 pg. 24)


STOP PLAYBACK

Press **STOP** on the remote or **STOP/EJECT** on the recorder's front panel. Then press **STOP/EJECT** to remove the cassette.

Tape Position Indicator

The tape position indicator appears on screen when, from the Stop mode, you press **FF**, **REW** or perform an Index Search. The position of "**B**" in relation to "0" (beginning) or "+" (end) shows you where you are on the tape.




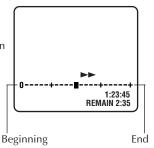

NOTE:


Depending on the type of tape used, there may be times when the indication is not correct.

Usable cassettes

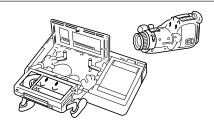

- Compact VHS camcorder recordings can be played on this video recorder. Simply place the recorded cassette into a VHS Cassette Adapter and it can be used just like any full-sized VHS cassette.
- This video recorder can record on regular VHS and Super VHS cassettes. While only VHS signals can be recorded on regular VHS cassettes, both VHS and Super VHS signals can be recorded and played back using Super VHS cassettes.

Playback Features

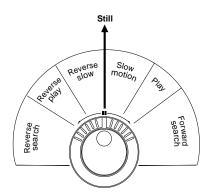

NOTES:

- Refer to the SHUTTLE ring illustration above as you read the following procedures.
- To use the remote control's JOG dial or SHUTTLE ring, press JOG/SHUTTLE first so that the button lights. Pressing the button again turns off the light.

Still Picture/Frame-By-Frame Playback

1

PAUSE DURING PLAYBACK

Press PAUSE.

- During still picture, the sound from the previous 3 seconds (approx.) will be played back repeatedly (provided there was at least 6 seconds of normal playback prior to engaging the still picture mode).
- "TIME SCAN AUDIO" must be set to "ON", or the sound will not be heard. (pg. 19)

ACTIVATE FRAME-BY-FRAME PLAYBACK

2

Turn the **JOG** dial to the right for forward frame-byframe playback, or to the left for reverse frame-by-frame playback.

OR

Press PAUSE.

OR

Press \triangleleft or \triangleright .

To resume normal playback, press PLAY.

Slow Motion

ACTIVATE SLOW-MOTION PLAYBACK

1

During playback or still, turn the **SHUTTLE** ring to the right for forward slow motion, or to the left for reverse slow motion (refer to the illustration to the left).

OR

During still picture, press and hold **PAUSE** for 2 seconds, then release. Press and release again to return to still picture.

OR

During still picture, press and hold \triangleleft or \triangleright . Release to return to still picture.

To resume normal playback, press PLAY.

NOTE:

For Time Jog, see page 19.

High-Speed (Turbo) Search

ACTIVATE HIGH-SPEED SEARCH

1

During playback or still, turn the **SHUTTLE** ring all the way to the right for forward high-speed search, or to the left for reverse high-speed search. Releasing **SHUTTLE** resumes still picture playback.

OR

During playback or still, press **FF** for forward highspeed search, or **REW** for reverse high-speed search.

To resume normal playback, press PLAY.

NOTE:

For short searches, press and hold **FF** or **REW** for over 2 seconds during playback or still picture. When released, normal playback resumes.

ATTENTION

- The operations by the remote control's **JOG** dial/**SHUTTLE** ring do not include TimeScan (pg. 18).
- Picture may not appear during high-speed search with an LP-recorded tape.
- In the high-speed search, still, slow motion or frame by frame playback mode, the picture will be distorted, and there will be a loss of colour.
- When normal playback resumes from search, still, slow motion or frame-by-frame playback, the picture may jitter vertically momentarily depending on the type of TV being used.

Variable-Speed Search



ACTIVATE VARIABLE-SPEED SEARCH

During playback or still, turn the **SHUTTLE** ring to the right for forward variable-speed search, or to the left for reverse variable-speed search (refer to the illustration on page 14).

 
To resume normal playback, press PLAY.

NOTE:

Variable-speed search with TimeScan (r pg. 18) can be used by pressing the remote control's \triangleleft or \triangleright button.

Manual Tracking

Your video recorder is equipped with automatic tracking control. During playback, you can override this and adjust the tracking manually by pressing the **TV PROG** buttons.



OVERRIDE AUTOMATIC TRACKING

Press IIII o

Press \emph{I}/\emph{II} on the remote to engage manual tracking.

ADJUST TRACKING MANUALLY

Press TV PROG + or - to adjust tracking.

RETURN TO AUTOMATIC TRACKING

Press //// on the remote to re-engage automatic tracking.

NOTE:

When a new tape is inserted, the recorder enters the automatic tracking mode automatically.

Skip Search



SKIP OVER UNWANTED SECTIONS

Press **30 SEC** 1 to 4 times during playback. Each press initiates a 30-second period of fast-motion playback. Normal playback resumes automatically.

NOTE:

 
To return to normal playback during a Skip Search, press PLAY.

Index Search

Your recorder automatically marks index codes at the beginning of each recording. This function gives you quick access to any one of 9 index codes in either direction.

NOTE:

Before starting, make sure the recorder is in the Stop mode.




ACTIVATE INDEX SEARCH

Press \triangleleft or \triangleright (i \blacktriangleleft or \blacktriangleright \blacktriangleright). "i \blacktriangleleft 1" or " \blacktriangleright \blacktriangleright 1" is displayed on screen and search begins in the corresponding direction.

To access index codes 2 through 9, press ⊲ or ▷ repeatedly until the correct index number is displayed.
 Ex.: To locate the beginning of B from the current position, press ⊲ twice.

 To locate the beginning of D from the current position, press \triangleright once.



 When the specified index code is located, playback begins automatically.

Instant ReView

Simply by pressing a single button, the recorder power comes on, rewinds, and begins playback of the last timer-recorded programme. If you have several programmes recorded, you can easily access any of them.

NOTE:

Before starting, make sure that the recorder is off and that the Timer mode is disengaged.

P


activate instant review

Press **REVIEW**. The recorder power comes on and the recorder searches for the index code indicating the start of the last timer-recorded programme. Once it's found, playback begins automatically.

• The front display panel tells you how many programmes have been timer-recorded. If you have, for example, 3 programmes, "REVIEW" and "3" appear and blink. To watch the first of the 3 programmes, press REVIEW three times. The recorder searches and begins playback automatically. You can access a programme as far as 9 index codes away from the current tape position.

- Instant ReView is not possible while the recorder is in the Timer mode.
- The number of recorded programmes will not be displayed on the front display panel after Auto Satellite Prog recording (Fig. 32).

16_{EN} PLAYBACK (cont.)

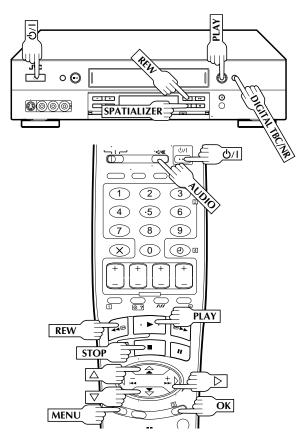

Digital TBC/NR

Your video recorder is equipped with the Digital TBC (Time Base Corrector) that removes jitter from fluctuating video signals to deliver a stable picture even with old tapes and rental cassettes.

The on/off of Digital 3-DNR (Noise Reduction) which cuts noise and enables clear picture reproduction is also linked to this function.

* The default setting is "ON".

We recommend that you use the Digital TBC feature when...

- ... playing back a tape recorded on a camcorder.
- ... playing back a tape repeatedly used.
- ... using this video recorder as the player for editing.

1

ACTIVATE DIGITAL TBC/NR

Press **DIGITAL TBC/NR** so that the button lights up.

 To turn off DIGITAL TBC/NR, press DIGITAL TBC/NR again so that the light goes off.

NOTES:

- If you play back a tape recorded under poor TV reception condition, there may be cases where the picture becomes more stable with Digital TBC/NR set to off.
- When Digital TBC/NR is set to on, if you play back a tape where certain types of signals are recorded (using a PC or some character generators), the playback picture may be distorted. If this is the case, turn off Digital TBC/NR.
- When playing back a MESECAM tape, Digital TBC/NR does not function even though the TBC/NR button is lit.

Digital 3R

Digital 3R picture system applies edge correction to the luminance signal to enhance detail.

 
S Pre

ACCESS MAIN MENU SCREEN

Press MENU.

ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing $\Delta \nabla$, then press **OK** or \triangleright .



SELECT DIGITAL 3R SET MODE

Move the highlight bar (pointer) to "DIGITAL 3R" by pressing $\Delta \nabla$, then press **OK** or \triangleright to set to "ON".

MODE SET

AUTO TIMER OFF
O.S.D. ON
B.E.S.T. ON
AUTO SP→LP TIMER OFF
FOIGHTAL 3R ON
POWER SAVE OFF
S-VHS
NEXT PAGE

[▲V] → ⓒ▷
||MENU]: EXIT



RETURN TO NORMAL SCREEN

4

Press MENU.

- Normally it is recommendable to keep "DIGITAL 3R" set to "ON".
- Depending on the type of tape being used, picture quality may be better with "DIGITAL 3R" set to "OFF".

Spatializer®

This feature expands sound field when you play back any stereo source or view a stereo programme while recording it. *Spatializer® has no effect on recording quality.

1

ACTIVATE SPATIALIZER®

Press **SPATIALIZER**; the current setting will be displayed on the screen for about 5 seconds. Pressing **SPATIALIZER** while the screen shows the display changes the setting.

 
- To view a stereo programme such as movies or music, select "SPATIALIZER I™ ¶" to create more spacious sound.
- To view a monaural programme, select
 "SPATIALIZER→ST" which simulates a stereo effect.
- Select "SPATIALIZER OFF" to turn off Spatializer® if the sound becomes unnatural with either "SPATIALIZER ™ Ф" or "SPATIALIZER→ST" selected.
- If your TV is equipped with 3D-PHONIC and if you use both Spatializer® and 3D-PHONIC at the same time, the sound may become unnatural; set either function to "OFF".
- The setting will remain effective even though you turn on/off the recorder.

NOTES:

- Spatializer®is effective only with a stereo TV.
- You can change the Spatializer[®] setting even though "O.S.D." is set to "OFF".
- The setting cannot be changed during search, still, frame-byframe playback or slow motion mode.
- When this recorder is used as the player for editing, the recorded audio will correspond to the Spatializer® setting.

Repeat Playback

Your video recorder can automatically play back the whole tape 50 times repeatedly.



1

START PLAYBACK

Press **PLAY**.

ACTIVATE REPEAT PLAYBACK

Press **PLAY** and hold for over 5 seconds, then release.

- The Play indicator (>) on the display panel blinks slowly.
- The tape plays 50 times automatically, and then stops.

STOP PLAYBACK

Press **STOP** at any time to stop playback.

3

NOTE:

Pressing PLAY, REW, FF or PAUSE also stops Repeat Playback.

Next Function Memory

You can set your recorder's power to go off automatically after the tape is fully rewound. Before starting, make sure the recorder is in the Stop mode.

For Automatic Power Off After Tape Rewind . . .

... press **REW**, then press 0/1 within 2 seconds.

Soundtrack Selection

Your video recorder is capable of recording three soundtracks (HI-FI L, HI-FI R and NORM) and will play back the one you select.

During Playback


Pressing AUDIO on the remote control changes the soundtrack being played back as follows:


TRA	iCK	LICE	
Recorder's Front Panel	On-Screen Display	USE	
₾ + 🗹	HIFI L D ¶R	For Hi-Fi stereo tapes	
	HIFI L D	For main audio of Bilingual tapes	
₫	HI FI ¶R	For sub audio of Bilingual tapes	
NORM	NORM	For audio-dubbed tapes	
[□] + [□] + NORM	HI FI NORM	For audio-dubbed tapes	

- ™ + □ "should normally be selected. In this mode, Hi-Fi stereo tapes are played back in stereo, and the normal audio track is played back automatically for tapes with only normal audio.
- For instructions on recording stereo and bilingual programmes, refer to page 23.
- "O.S.D." must be set to "ON" or the on-screen displays will not appear (pg. 10).

18_{EN} PLAYBACK (cont.

TimeScan

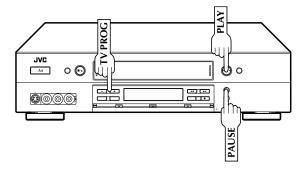

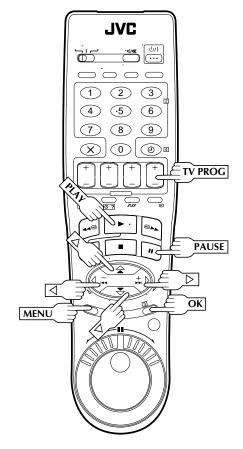

Your recorder is equipped with the TimeScan function. TimeScan allows noise free pictures to be displayed on your TV screen in the forward and reverse search modes. Audio will be played back at normal speed during the TimeScan modes (F) pg. 19). TimeScan also allows you to view a programme in search mode while listening to the audio.

NOTES:

- "TIME SCAN AUDIO" must be set to "ON", or the sound will not be heard in TimeScan mode. (□ pg. 19)
- The audio will not synchronize with the video in TimeScan modes.
- In Pause mode 3 seconds (approx.) of audio will be played back repeatedly. (☐ pg. 14)
- In TimeScan search modes some of the audio information will not be played so that the audio can keep up with the video.

Audio signal during TimeScan

Playback tape



Sound of ①, ③ and ⑤ is heard. Sound of ② and ④ is not heard.

Output audio signal is normal (monaural) sound.

Variable-Speed Search

.

ACTIVATE VARIABLE-SPEED SEARCH

During playback, press \triangleleft or \triangleright .

- The more times you press, the faster the playback picture moves.
- To decrease speed, press the button for the opposite direction.

(Refer to the chart on pg 19 for playback speeds).

To resume normal playback, press PLAY.

If the picture jitters vertically during still or variablespeed search with a MESECAM tape:

- 1 Press **PAUSE**.
- 2 Press **TV PROG** + or so that the vibration stops.

TimeScan

Names of	Reverse			Forward				
special-effects playback	Search	Play	Slow-Motion (Time Jog**)	*St	ill	Slow-Motion (Time Jog**)	Play	Search
Speed SP	-9x -7x -5x -3x	-1x	-1/2x	0)	1/2x	1x	1.5x 2x 3x 5x 7x 9x
Speed LP	$\begin{bmatrix} -7x \end{bmatrix}$ $\begin{bmatrix} -3x \end{bmatrix}$		-1/2x	0		1/2x	1x	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$
Audio output	Audio is outp	ut.	Audio is not output.	Audi outp		Audio is output.		Audio is output.


- *Still mode cannot be engaged using the remote control's ⊲ or ▷ button. Still mode can be engaged by pressing the **PAUSE** button.
- ** Smooth slow motion delivering an uninterrupted moving image without distortion.
- The speed is shown during TimeScan in the upper right corner of the TV screen for approx. 5 seconds. (The display may be distorted.)
- To resume normal playback, press **PLAY**.
- Picture and audio may become distorted when the recording speed changes. When this happens, resume normal playback once, and then try using TimeScan again.
- The picture may be noisy or there may be a loss of colour when you change the playback speed. (More noise will appear with LP recordings.)
- Noise may appear or the upper part of the picture may be distorted during still, frame-by-frame playback, 2x search of LP recordings, or depending on the tape being used.
- Picture may appear distorted in comparison to normal playback.
- When normal playback resumes from search (including TimeScan), still, slow motion or frame-by-frame playback, the picture may jitter vertically momentarily depending on the type of TV being used.
- In TimeScan mode there will be a time lag between the video and the audio and noise may appear in the audio signal.
- TimeScan sound quality will differ in comparison to normal playback.
- When material such as music videos where there is non-stop sound (very few breaks in the soundtrack) are viewed at 1.5x or 2x normal speed, the audio playback may be faster than normal.
- Depending on the type of tape contents, the sound may not be clear during forward slow-motion playback.
- Time Jog cannot be activated by pressing PAUSE for longer than 2 seconds.
- When the playback direction is reversed, it takes approximately 6 seconds until sound is heard.
- Picture will be monochrome with an LP-recorded MESECAM tape during TimeScan.
- When playing back an NTSC tape, the speeds differ from those listed above and are not shown on the TV screen.
- TimeScan at -1/2x, 1/2x and 1.5x normal speed are not possible with a MESECAM tape.
- The operations by the remote's **JOG** dial/**SHUTTLE** ring do not include TimeScan; noise will appear on the screen and audio will not be output.

If you don't want to hear TimeScan audio, set "TIME SCAN AUDIO" to "OFF" (See below).

TimeScan Audio

The audio output can be set ON/OFF during TimeScan. Select ON/OFF as required.


- * The default setting is "ON".
- 1 Press **MENU** to access the Main Menu screen.
- 2 Move the highlight bar (pointer) to "MODE SET" by pressing △∇, then press **OK** or ▷.
- ③ Move the highlight bar (pointer) to "TIME SCAN AUDIO" by pressing $\triangle \nabla$, then press **OK** or ▷ to select "ON" or "OFF".
- 4 Press **MENU** to return to the normal screen.

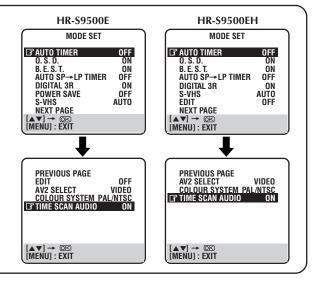


 $20_{\scriptscriptstyle EN}$ recording

Basic Recording

Turn on the TV and select the VIDEO channel (or AV mode).

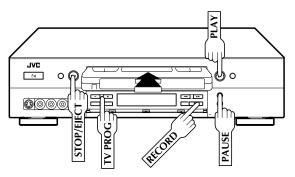

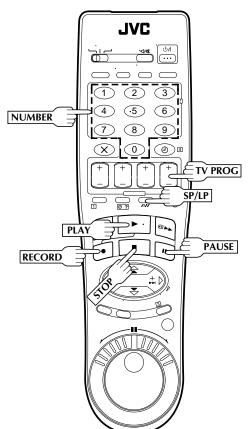

TV signals being received by the recorder's built-in tuner can be recorded onto a video tape. You can "capture" a TV programme using your video recorder.

LOAD A CASSETTE

Insert a cassette with the record safety tab intact.

 The counter is reset to 0:00:00 and the recorder power comes on automatically.

CHOOSE A PROGRAMME

Press TV PROG +/- or the NUMBER keys to select the channel you wish to record.

SET TAPE SPEED

Press **SP/LP** (**////**). Check the SP/LP indicator on the recorder display panel to confirm the selected tape speed.

START RECORDING

Press and hold **RECORD** and press **PLAY** on the remote control, or press **RECORD** on the recorder.

B.E.S.T. takes place at the beginning of both the first SP and the first LP recording after inserting the cassette (LTP pg. 24).

PAUSE/RESUME RECORDING

Press PAUSE. Press PLAY to resume recording.

STOP RECORDING

Press **STOP** on the remote control or **STOP/EJECT** on the recorder. Then press **STOP/EJECT** to remove the cassette.

Recording Resume Function

If there is a power outage during recording (or Instant Timer Recording or timer recording), the recording will resume automatically when power is restored to the recorder unless the recorder's memory backup has expired.

Accidental erasure prevention

 To prevent accidental recording on a recorded cassette, remove its safety tab. To record on it later, cover the hole with adhesive tape.

 



7

Л

5

Recording Features



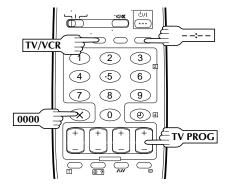

Instant Timer Recording (ITR)

This easy method lets you record for from 30 minutes to 6 hours (selectable in 30-min. increments), and shuts the recorder off after recording is finished.

1

START RECORDING

Press **RECORD** on the recorder.

2

ENGAGE ITR MODE

Press **RECORD** again. " \bigcirc " blinks and 0:30 appears on the front display panel.

3

SET RECORDING DURATION

If you want to record for more than 30 minutes, press **RECORD** to extend the time. Each press extends recording time by 30 minutes.

NOTE:

You can only perform ITR using the **RECORD** button on the recorder's front panel.

Record One Programme While Watching Another

If your recorder is connected to the TV via AV connection, press **TV/VCR**. The recorder's VCR indicator and the TV broadcast being recorded disappear.

1

SELECT CHANNEL TO WATCH

Once recording is in progress, all you need to do is to set the channel controls on the TV for the station you wish to view.

- The programme selected with the TV's channel controls appears on the TV screen while the one selected with the recorder's **TV PROG** buttons is recorded on the tape.
- If a decoder is connected to the recorder (
 pg. 47),
 you can select a scrambled channel as well with the
 TV channel controls.

Elapsed Recording Time Indication

You can check the exact time of a recording.

1

SET COUNTER DISPLAY

Press --:- - until a counter reading appears on the dispay panel.

2

RESET COUNTER

Press **0000** before starting recording or playback.

• The counter is reset to "0:00:00" and shows the exact elapsed time as the tape runs.

Tape Remaining Time

1


DISPLAY REMAINING TIME

Press – -: – until the time remaining on the tape appears.

- The display panel shows the tape remaining time with " displayed.
- By pressing the -- button, you can change the display to show the counter reading, channel position*, clock time or tape remaining time.
 * channel position is not displayed during playback.

NOTE:

Depending on the type of tape used, there may be times when the tape remaining time reading may not appear right away, or is not correct. "--:--" may sometimes appear, or the display may blink on occasion.

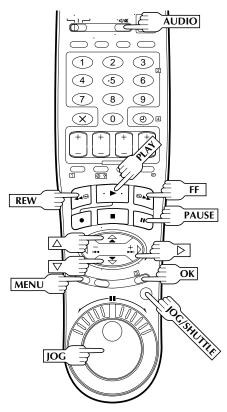

Retake

You can cut out unnecessary parts of a TV programme while you're recording it.

End of programme I		Beginning o	f programme I	;
Programme	Unnecessary part	Unnecessary part	Programme	
	ramme to cu	t out		

ENGAGE RECORD-PAUSE MODE

Press PAUSE during recording.

LOCATE START POINT

First press **JOG/SHUTTLE** and turn the **JOG** dial (or hold down **REW** or **FF**) and release it when you reach the point where you want to resume recording.

* Your recorder returns to the Record-Pause mode.

RESUME RECORDING

Press PLAY when you wish to resume recording.

S-VHS (Super VHS) and VHS

Your recorder can record in either S-VHS or VHS.

To record in S-VHS:

Perform the steps 1 – 4 below to set "S-VHS" to "AUTO".

Then, insert a cassette marked "S-VHS", the S-VHS indicator will light on the display panel.

The S-VHS recording mode will be selected.

To record in VHS:

Insert a cassette marked "VHS".

The VHS recording mode will be automatically selected regardless of the S-VHS mode setting.

To record in VHS on an S-VHS cassette:

Insert the cassette marked "S-VHS", the S-VHS indicator will light on the display panel.

Then, perform the steps 1-4 below to set the "S-VHS" to "OFF"; the S-VHS indicator will go out.

 
The VHS recording mode will be selected.

ACCESS MAIN MENU SCREEN

Press MENU.


ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing $\Delta \nabla$, then press **OK** or \triangleright .



SELECT S-VHS MODE

Move the highlight (pointer) to "S-VHS" by pressing $\Delta \nabla$, then press **OK** or \triangleright to select "AUTO" or "OFF".

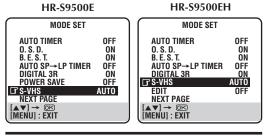

RETURN TO NORMAL SCREEN

Press **MENU**.

NOTE:

When playing back a tape that has been recorded in S-VHS, the S-VHS indicator lights on the display panel regardless of the "S-VHS" mode setting.

Hi-Fi Audio Recording Level Control

Your recorder allows manual adjustment of the Hi-Fi audio recording level. Normally the preset audio recording level is satisfactory, but if the sound you are going to record is too loud or too low, adjust the audio recording level while referring to the recorder's audio level meters.

ACCESS MAIN MENU

ACCESS HI-FI REC LEVEL

Press △∇ to move the highlight bar (pointer) to "REC

CONTROL SCREEN

LEVEL CTL", then press OK or \triangleright .

SELECT MODE

Move the highlight bar (pointer) to "MANUAL" by pressing $\triangle \nabla$, then press **OK** or \triangleright .

SCREEN Press MENU.



ADJUST AUDIO RECORDING LEVEL

Press \triangle or ∇ .

 Press △ or ▽ briefly 5 times to move the on-screen's audio levels by one division on the scale. To move the audio levels faster, keep \triangle or ∇ pressed.

 Adjust the recording level while watching the recorder's audio level meters. Set the level so that maximum volume causes the meters to vary between 0dB to 4dB.

RETURN TO NORMAL **SCREEN**

Press MENU.

Noise will increase if the recording level is too low, while distortion will increase if the level is too high.

Receiving Stereo And Bilingual Programmes

Your recorder is equipped with a Sound-Multiplex decoder (A2) and, if you own the HR-S9500EH, a Digital stereo sound decoder (NICAM) as well, making reception of stereo and bilingual broadcasts possible.

When the channel is changed, the type of broadcast being received will be displayed on the TV screen for a few seconds.

Type of Broadcast Being Received	On-screen Display
A2 Stereo A2 Bilingual Regular Monaural *NICAM Stereo *NICAM Bilingual *NICAM Monaural	ST BIL (none) ST NICAM BIL NICAM NICAM

*Available with HR-S9500EH only.

- To listen to a stereo programme, press **AUDIO** until "D" and "□ appear on the front display panel or "HIFI L 🕒 • R" appears on the screen.
- To listen to a bilingual programme, press **AUDIO** until "D" or "

 "appears on the front display panel, or "HIFI L

 "or " "HIFI d R" appears on the screen (as required).
- To listen to the Standard (regular monaural) audio while receiving a NICAM broadcast, press AUDIO until "NORM" appears on the front display panel or on the screen. (HR-S9500EH only)

NOTE:

"O.S.D." must be set to "ON" or the on-screen displays will not appear (□ pg. 10).

To Record Stereo And **Bilingual Programmes (A2)**

- Stereo programmes are automatically recorded in stereo on the Hi-Fi audio track (with the normal audio track recording mixed L and R channel sound).
- Bilingual programmes are automatically recorded in bilingual on the Hi-Fi audio track. The main soundtrack will be recorded on the normal audio track.


To Record NICAM Stereo **And Bilingual Programmes** (HR-S9500EH only)


The NICAM audio programme will be recorded on the Hi-Fi audio track, and the Standard audio programme on the normal audio track.

- If the quality of stereo sound being received is poor, the broadcast will be received in monaural with better quality.
- Before playing back a programme recorded in stereo, or a bilingual programme, refer to "Soundtrack Selection" (pg. 17).

B.E.S.T. Picture System

Turn on the TV and select the VIDEO channel (or AV mode).

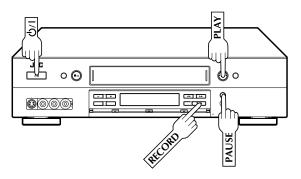

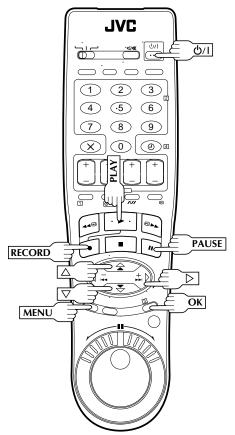

The B.E.S.T. (Biconditional Equalised Signal Tracking) system checks the condition of the tape in use during recording and playback, and compensates to provide the highest-possible recording and playback pictures. The default setting for both recording and playback is "ON".

Preparation

1

TURN ON THE RECORDER

 
Press U/I.

ACCESS MAIN MENU SCREEN

Press MENU.

ACCESS MODE SET SCREEN

Press $\triangle \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .



SELECT B.E.S.T. MODE

Press $\Delta \nabla$ to move the highlight bar (pointer) to "B.E.S.T.", then press **OK** or \triangleright to set to "ON" or "OFF".

HR-S9500E

MODE SET	
AUTO TIMER 0. S. D.	OFF ON
B.E.S.T. AUTO SP→LP TIMER	ON OFF
DIGITAL 3R POWER SAVE	ON OFF
S-VHS NEXT PAGE	AUTO
[▲▼] → OK [MENU] : EXIT	

MODE SET	
AUTO TIMER 0. S. D.	OFF ON
■B.E.S.T. AUTO SP→LP TIMER	ON OFF
DIGITAL 3R	ON
S-VHS EDIT	AUTO OFF
NEXT PAGE [▲▼] → ⊙⋉	
[MENU] : EXIT	

HR-S9500EH

RETURN TO NORMAL SCREEN

Press MENU.

5

Recording

START RECORDING

Press and hold **RECORD** and press **PLAY** on the remote, or press **RECORD** on the recorder.

DURING B.E.S.T.



B.E.S.T. COMPLETE



• The recorder spends approximately 7 seconds assessing the condition of the tape, then begins recording.

NOTES:

- The B.E.S.T. system works for both SP and LP modes only after a tape has been inserted and the Record mode is first initiated. It does not work during recording.
- The B.E.S.T. system does not work while Auto Satellite Prog recording is in progress (pg. 32).

 In the case of timer recording, the B.E.S.T. system works
- before recording is initiated.
- Once the cassette is ejected, the B.E.S.T. data is cancelled. The next time the cassette is used for recording, B.E.S.T. is reperformed.
- Pressing the recorder's RECORD button while "BEST" is displayed does not start Instant Timer Recording (pg. 21).

ATTENTION

Since the B.E.S.T. system works before recording actually starts, there is a delay of approximately 7 seconds after **RECORD** and **PLAY** on the remote are pressed, or **RECORD** on the recorder is pressed. To make sure you record the desired scene or programme in its entirety, first perform the following steps:

 
- 1) Press and hold **PAUSE** and press **RECORD** to engage the RECORD PAUSE mode.
 - The recorder then automatically checks the condition of the tape and, after approximately 7 seconds, reenters RECORD PAUSE.
- 2) Press PLAY to start recording.
 - If you want to bypass the B.E.S.T. system and begin recording immediately, set "B.E.S.T." to "OFF" in step 4 on page 24.

Playback

The recorder assesses the quality of the tape once you initiate playback.

START PLAYBACK

Press **PLAY**.




- The recorder adjusts the playback picture quality based on the quality of the tape in use.
- B.E.S.T. is active during Auto Tracking. "BEST" appears blinking on the recorder's display panel.

- When watching a tape recorded with "B.E.S.T." set to "ON", it is recommended that you leave B.E.S.T. on during playback as well.
- When watching a rental tape or one recorded on another video recorder, or when using this recorder as the player for editing, set B.E.S.T. to your preference by performing steps 1 through 5 on page 24.
- "BEST" only appears at the beginning of automatic tracking. Even though it doesn't appear after that, the B.E.S.T. function is operative.

SHOWVIEW Timer Programming

Before performing SHOWVIEW Timer Programming:

- Make sure that the recorder's built-in clock is set properly.
- Insert a cassette with the safety tab in place. The recorder will come on automatically.
- Turn on the TV and select the VIDEO channel (or AV mode).

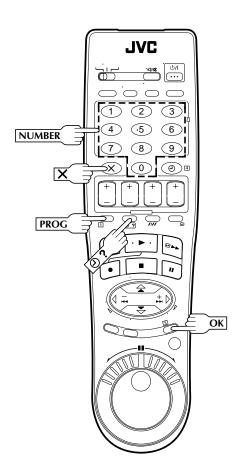

With SHOWVIEW, timer programming is greatly simplified because each TV programme has a corresponding code number which your recorder is able to recognize.

ACCESS SHOWVIEW SCREEN
Press PROG.

SHOWVIEW

[0 - 9] → P SSS [+/-]: EXPRESS PROGRAMING [PROG]: EXIT

The front display panel looks like this:

ENTER SHOWVIEW NUMBER

Press the **NUMBER** keys to enter the SHOWVIEW number of a programme you wish to record.

 If you make a mistake, press X and input the correct number.



The SHOWVIEW number you enter appears on the front display panel:

1234

The display panel can show only a 4-digit number.

ACCESS SHOWVIEW PROGRAM SCREEN

Press **OK**, and the SHOWVIEW Program screen appears (if you're just starting out, "P1" appears).

The display panel shows the programme start time. Pressing ②? changes the display to the programme stop time, then the date and channel position.


SHOWVIEW START 21:00	- P1 - 123456789 STOP → 22:00
SP	VPS/PDC OFF
DATE 25.12	TV PROG 1 ARD
©⊠: OK	



IMPORTANT

Make sure the channel position number you wish to record is displayed; if not, see "SHOWVIEW Setup" on page 57 and set the Guide Program number for that SHOWVIEW number correctly.

- If the number you entered is invalid, "ERROR" appears on the screen and "Err" appears on the display panel.
 Press X and input a valid ShowView number.
- If the "GUIDE PROG SET" screen appears, see "ATTENTION Regarding Guide Program Number Set" on page 27.

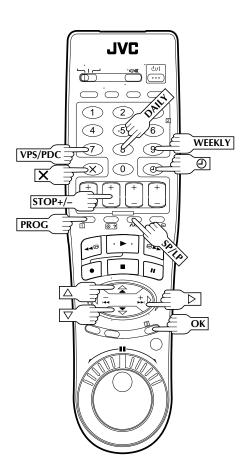

Satellite Tuner Users

To timer-record a satellite broadcast using SHOWVIEW:

 
- Set "AV2 SELECT" to "SAT" (□ pg. 39).
- Perform steps 1 7.
- 3 Set the satellite tuner to the appropriate channel before the selected programme begins.
- 4 Leave the satellite tuner's power on.

ATTENTION

Regarding Guide Program Number Set

"GUIDE PROG SET" appears after performing step 3 if the Guide Program number for the ShowView number you entered has not been set.

 Press the NUMBER keys or △∇ to input the channel position number on which your recorder receives that station, then press OK or ▷. The SHOWVIEW program screen appears.



(Ex.) To timer-record a ZDF programme with SHOWVIEW.

* If your recorder receives ZDF on the channel position 2, press **OK** or ▷ after entering "2".

SET TAPE SPEED

Press **SP/LP** (////) to set the tape speed.

SET VPS/PDC MODE

Press **VPS/PDC** to select "ON" or "OFF". If "VPS/PDC ON" is displayed on the screen or "VPS/PDC" is lit on the display panel, VPS/PDC is set to ON. If "VPS/PDC OFF" is displayed on the screen or "VPS/PDC" is not lit on the display panel, VPS/PDC is set to OFF.

""VPS/PDC Recording" on page 29.

RETURN TO NORMAL SCREEN

Press **PROG** or **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears.

• Repeat steps 1 – 6 for each additional programme.

ENGAGE RECORDER'S TIMER MODE

Press igodeta. The recorder turns off automatically and igodeta appears on the display panel.

• To disengage the timer, press ② again.

NOTES:

- To Change The Stop Time . . .
- ... press **STOP** +/- after pressing **OK** in step **3**. You can compensate for anticipated programme schedule delays this way.
- To Timer-Record Weekly Or Daily Serials . . .
 . . . after pressing OK in step 3, press WEEKLY (NUMBER key "9") for weekly serials or DAILY (NUMBER key "8") for daily serials (Monday Friday). Either "WEEKLY" or "DAILY" appears on the screen. Pressing the button again makes the corresponding indication disappear.
- You can programme this recorder to timer-record as many as 8
 programmes. If you try to programme the recorder to record a
 ninth, "PROGRAM FULL" appears on screen and "FULL" appears
 on the front display panel. To record the extra programme, you
 must first cancel any unnecessary programmes (pg. 30).
- It is not possible to timer-record a TV programme with a SHOWVIEW number which starts with "0".

Timer Warning

If you have programmed your recorder to timer-record a programme or a series of programmes, a warning appears on screen to tell you that the recording is to start in 5 minutes.

- WARNING-TIMER RECORDING TO START SOON [hg [X]

NOTES:


- The warning only appears if you're not in the Timer mode at that time.
- If this recorder is being used as the player for tape dubbing, the warning screen is recorded on the tape in the other video recorder.

The warning blinks for the entire 5 minutes leading up to the start of timer recording. To clear the display, press X.

Express Timer Programming

Before performing Express Timer Programming:

- Make sure that the recorder's built-in clock is set properly.
- Insert a cassette with the safety tab in place. The recorder will come on automatically.
- Turn on the TV and select the VIDEO channel (or AV mode).

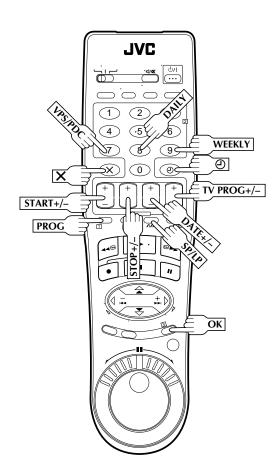


If you don't know the ShowView number for the programme you wish to record, use the following procedure to set your recorder to timer-record the programme.

ACCESS SHOWVIEW SCREEN

Press **PROG**.

ACCESS PROGRAMME SCREEN

 Press **START** +/-. (If you're just starting out, "P1" appears.)




The front display panel looks like this:



ENTER PROGRAMME START TIME

Press **START** +/– to enter the time you want recording to start.

 Press and hold START +/- to move in 30minute increments, or press and release repeatedly to move 1 minute at a time.

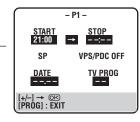

The front display panel looks like this:

ENTER PROGRAMME STOP TIME

Press **STOP** +/– to enter the time you want recording to stop.

 Press and hold STOP +/- to move in 30-minute increments, or press and release repeatedly to move 1 minute at a time.

ENTER PROGRAMME DATE

 
Press **DATE** +/-. (The current date appears on screen. The date you enter appears in its place.)

5

6

ENTER CHANNEL POSITION

Press TV PROG +/-.



SET TAPE SPEED

Press SP/LP (////) to set the tape speed.

SET VPS/PDC MODE

Press **VPS/PDC** to select "ON" or "OFF".

If "VPS/PDC ON" is displayed on the screen or "VPS/
PDC" is lit on the display panel, VPS/PDC is set to ON.

If "VPS/PDC OFF" is displayed on the screen or "VPS/PDC" is not lit on the display panel, VPS/PDC is set to OFF.

""VPS/PDC Recording" in the right column.

RETURN TO NORMAL SCREEN

After confirming all information is correct, press **PROG** or **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears.

ullet Repeat steps 1-9 for each additional programme.

ENGAGE RECORDER'S TIMER MODE

10

Press \odot . The recorder turns off automatically and \odot appears on the display panel.

To disengage the timer, press ⊕ again.

To Timer-Record Weekly Or Daily Serials anytime during steps 2 through 9, press WEEKLY (NUMBER key "9") for weekly serials or DalLY (NUMBER key "8") for daily serials (Monday – Friday). Either "WEEKLY" or "DAILY" appears on the screen. Pressing the button again makes the corresponding indication disappear.

NOTE:

You can programme this recorder to timer-record as many as 8 programmes. If you try to programme the recorder to record a ninth, "PROGRAM FULL" appears on screen and "FULL" appears on the front display panel. To record the extra programme, you must first cancel any unnecessary programmes (p. 30).

Satellite Tuner Users

To timer-record a satellite broadcast using Express Timer Programming:

- Set "AV2 SELECT" to "SAT" (□ pg. 39).
- 2 Perform steps 1 10. Enter "L-2" for the channel position in step 6.
- 3 Set the satellite tuner to the appropriate channel before the selected programme begins.
- 4 Leave the satellite tuner's power on.

VPS/PDC Recording

Now available from some TV stations, PDC (Programme Delivery Control) and VPS (Video Programme System) are service designed to assure safe, accurate timer recording. With this system, special code signals are transmitted together with the audio/video signals. These code signals control your video recorder and have precedence over the advertised times you may have preset into the timer. This means that your recorder will start and stop recording when the preset TV programmes actually start and end — even if the broadcast time of a preset TV programme is changed.

NOTES:

- When you use Express Timer Programming, set the start time (VPS or PDC time) exactly as advertised in the TV listing. A different time than advertised will result in no recording.
- VPS/PDC recording is also possible when a satellite tuner or a cable system is connected to AV2 IN/DECODER on your recorder.
- VPS/PDC recording is also possible via the AV1 IN/OUT connector.

How to check if the station being received transmits a VPS/PDC signal

- 2 Hold down **START+** for about 5 seconds.
- "VPS/PDC" appears blinking on the display panel. *If a VPS/PDC signal is detected from the station,* "VPS/PDC" will stop blinking.

If no VPS/PDC signal is detected from the station, "VPS/PDC" will blink at a slower rate.

Press - -: - or START+ again to return to normal display.

Timer Warning


If you have programmed your recorder to timer-record a programme or a series of programmes, a warning appears on screen to tell you that the recording is to start in 5 minutes.

– WARNING– TIMER RECORDING TO START SOON

NOTES:

- The warning only appears if you're not in the Timer mode at that time.
- If this recorder is being used as the player for tape dubbing, the warning screen is recorded on the tape in the other video recorder.

The warning blinks for the entire 5 minutes leading up to the start of timer recording. To clear the display, press X.

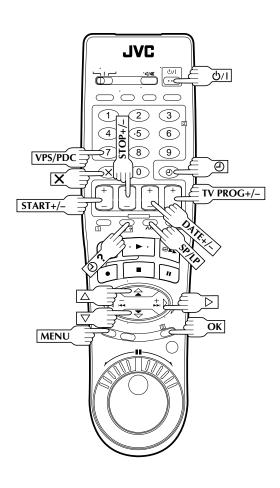

Check, Cancel And Replace Programmes

1

DISENGAGE TIMER MODE

Press ⊕, then press ٺ/I.

ACCESS PROGRAM CHECK SCREEN/DISPLAY


Press ② ?.

PR 1 2 3 4 5 6 7 8		STOP 10:00 10:45 13:00	CH 3 2 1	DATE 24.12 25.12 25.12
(IO	?] : NEX	(T		

PIP8

ACCESS PROGRAM SCREEN/ DISPLAY

 Press ② ? again to check more information. Each time you press ② ?, the next programme's information appears.





• The display panel shows the programme start time. Pressing **OK** changes the display to the programme stop time, then the date and the channel position.

To cancel or replace a programme...

1

CANCEL OR REPLACE A PROGRAMME

Press X to cancel a programme. To replace a programme, press the appropriate button: START+/-, STOP+/-, DATE+/-, TV PROG+/-, VPS/PDC, SP/LP (////).

RETURN TO NORMAL SCREEN/ DISPLAY

Press **② ?** as many times as necessary. If there are still some programmes remaining, go on to step **6**.

RETURN TO TIMER MODE Press .

6

NOTE:

You can also check the programmes on the display panel even if the recorder's power is off (unless the recorder is in the Power Save mode ☞ pg. 11) or the recorder is in the Timer mode; however, it is not possible to cancel or replace the programmes.

Auto SP→**LP Timer**

If, when timer-recording in SP mode, there is not enough tape to record the entire programme, the recorder automatically switches to LP mode to allow complete recording.

For Example . . .

Recording a programme of 210 minutes in length onto a 180-minute tape

Approximately 150 minutes

Approximately 60 minutes

SP mode

LP mode

Total 210 minutes

Make sure you set "AUTO SP \to LP TIMER" to "ON" at the Mode Set screen before the timer-recording starts.

1

ACCESS MAIN MENU SCREEN

Press **MENU**.

7

ACCESS MODE SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "MODE SET", then press \mathbf{OK} or \triangleright .

 
3

SELECT MODE

Press $\triangle \nabla$ to move the highlight bar (pointer) to "AUTO SP \rightarrow LP TIMER", then press **OK** or \triangleright to select "ON".

HR-S9500E

HR-S9500EH





RETURN TO NORMAL SCREEN

Press MENU.

NOTES:

- If you have programmed the recorder to timer-record 2 or more programmes, the second programme and those thereafter may not fit on the tape if you set "AUTO SP→LP TIMER" to "ON". In this case, make sure the mode is not engaged, then set the tape speed manually during timer programming.
- In order to ensure that the recording fits on the tape, this feature may leave a slight non-recorded section at the end of the tape.
- There may be some noise and sound disturbance at the point on the tape where the recorder switches from SP to LP mode.
- The Auto SP→LP Timer feature is not available during ITR (Instant Timer Recording), and the feature will not work properly with any tapes longer than E-180 or with some tapes of shorter lengths.
- If you perform timer recording with both VPS/PDC and the Auto SP—LP Timer activated, and the programme goes beyond its originally scheduled length, there may be times when the programme cannot be recorded in its entirety.

Auto Timer

When the Auto Timer is set to ON the timer is automatically engaged when the recorder power is turned off and automatically disengaged when the recorder is powered back on.

1

 
ACCESS MAIN MENU SCREEN

Press MENU.

2

ACCESS MODE SET SCREEN


Press $\triangle \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .



SELECT MODE

HR-S9500E

Press **OK** or ▷ to select either "ON" or "OFF".

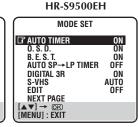

RETURN TO NORMAL SCREEN

Press **MENU**.


[MENU] : EXIT

4

NOTE:

For safety, when Auto timer is set to "OFF", all other recorder functions are disabled while the Timer mode is engaged. To disengage the timer, press ⊕.

Automatic Satellite Programme Recording

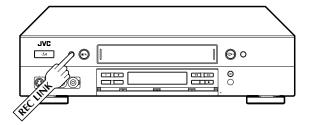

ATTENTION

- Be sure not to turn on the satellite tuner before the programme is executed; otherwise, the recorder will start recording when the satellite tuner's power is turned on.
- If you have connected another appliance other than a satellite tuner to the AV2 IN/DECODER connector, be sure not to engage the Auto Satellite Prog Rec mode; otherwise, the recorder will start recording when the connected appliance's power is turned on.
- Auto Satellite Prog recording and timer-recording cannot be done at the same time.

This facility allows you record automatically a satellite programme which is timer-programmed on your external satellite tuner. Connect a satellite tuner to the recorder's AV2 IN/DECODER connector and programme the timer on the satellite tuner; the recorder starts recording when the signals input from the satellite tuner to the AV2 IN/DECODER connector, and when there is no input signals the recorder stops recording and the power shuts off.

Before performing the following steps:

- Make sure the satellite tuner is connected to the recorder's AV2 IN/DECODER connector. (IF) pg. 46)
- Programme the timer on the satellite tuner.
- Insert a cassette with the safety tab in place.

SELECT AV2 SELECT MODE
Set "AV2 SELECT" to "SAT" (pg. 39).

SET TAPE SPEED

Press **SP/LP** (**////**) to set the tape speed.

ENGAGE AUTO SATELLITE PROG REC MODE


Press and hold **REC LINK** for about 2 seconds. The button lights up and the recorder turns off automatically.

- To disengage the Auto Satellite Prog Rec mode, press **REC LINK**. The button's light goes off.
- If the recorder's power is off, it is not possible to engage the Auto Satellite Prog Rec mode.

- Auto Satellite Prog recording is possible with the AV2 IN/DECODER connector only.
- For timer programming of the satellite tuner, refer to the instruction manual of the satellite tuner.
- Auto Satellite Prog recording is not possible if your satellite tuner does not have a timer.
- The button's light blinks while Auto Satellite Prog recording is in progress.
- Pressing the recorder's \(\psi_1\) button while Auto Satellite Prog recording is in progress turns off the recorder's power and disengage the Auto Satellite Prog Rec mode.
- If there are more than one satellite programme you wish to record with Auto Satellite Prog Recording, it is not possible to set the different tape speed per each; the tape speed selected in step 2 will be applicable to all the programmes for Auto Satellite Prog recording.
- The B.E.S.T. system (pg. 24) does not work while Auto Satellite Prog recording is in progress.
- Just Clock (pg. 58) does not work when the Auto Satellite Prog Rec mode is engaged.
- Depending on the type of satellite tuner, the recorder may not record a slight portion of the beginning of the programme or may record slightly longer than the actual length of the programme.
- If you engage the Auto Satellite Prog Recording mode when the satellite tuner's power is on, the recorder will not start Auto Satellite Prog recording even though the button's light blinks. When the satellite tuner shuts off once and is turned back on again, the recorder starts recording.
- When the Auto Satellite Prog Rec mode is engaged or the recorder's power is turned off after Auto Satellite Prog recording is finished, the recorder will not enter the Timer mode even though "AUTO TIMER" is set to "ON".
- After Auto Satellite Prog recording, the number of recorded programmes will not be displayed on the front display panel for the Instant ReView function (pg. 15).
- You can also record a programme from your cable system in the same way if the system has a timer.
- When you press and hold the recorder's REC LINK button to engage the Auto Satellite Prog Rec mode, if the REC LINK button does
 not light but instead blinks quickly even though your satellite tuner's power is off, Auto Satellite Prog Recording will not work
 properly with that satellite tuner*.
- If this is the case, perform "Express Timer Programming" (pg. 28) to timer-record a satellite programme.
- * Some satellite tuners output signals even if the power is off. Auto Satellite Prog Recording is not possible with those satellite tuners.

PECIAL FEATURES

Remote Control **Functions**

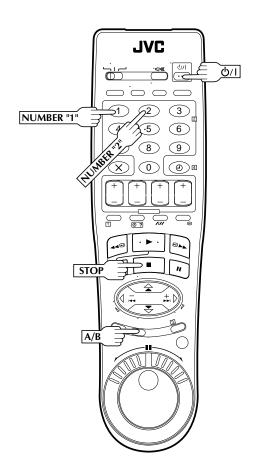

Remote A/B Code Switching

The remote control is capable of controlling two JVC video recorders independently; one set to respond to the remote control's A code control signals and another set to respond to B code control signals. The remote control is preset to send A code signals because your video recorder is initially set to respond to A code signals. You can easily modify your video recorder to respond to B code signals.

REMOVE POWER SUPPLY

Unplug the mains power cord from the mains outlet.

SET REMOTE CONTROL CODE

While holding down A/B on the remote control, press the **NUMBER** key "2" and then press **STOP**.

RE-SUPPLY POWER


Plug the mains power cord back into the mains outlet.

TURN THE RECORDER ON

Press U/I on the remote control. The recorder will now only respond to B code signals.

NOTE:

To set the recorder back to respond to A code signals, repeat the same procedure as shown above except pressing **NUMBER** key "1" instead of "2" in step 2.

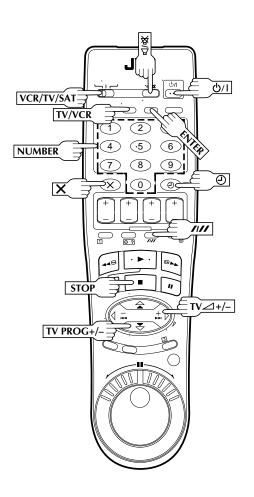

TV Multi-brand Remote Control

Your remote control can operate the basic functions of your TV set. In addition to IVC TVs, other manufacturer's TVs can also be

Before you start . . .

- Turn on the TV using its remote control.
- Set the remote control's VCR/TV/SAT switch to TV.

SET TV BRAND CODE

Refer to the chart below. While holding down 0/1 on the recorder's remote control, enter your TV's brand code using the NUMBER keys, then press STOP. Check if the TV's power goes off as it should. If it does, try other operations (step 2).

- Once you have set the remote control to operate the TV, you don't have to repeat this step until you replace your remote control's battteries.
- JVC or SAMSUNG has more than one code. If the TV does not function with one code, try entering another.

OPERATE TV

Press the corresponding button: 0/1, TV PROG +/-, TV/VCR, TV ∠ +/- (Volume), </br>✓ (Muting), NUMBER keys.

- For some brands of TV, you must press ENTER after having pressed the **NUMBER** keys.
- To return the remote to video recorder control, set its VCR/TV/SAT switch to VCR.

IMPORTANT

Although the provided remote control unit is compatible with JVC televisions, as well as many other models, it may not work with your TV, or in some instances, may have limited function capability.

Control Your TV Using Additional Buttons


Use the **NUMBER** keys, and the //// button, × button or ① button to select the TV's channel.

- With televisions under Code 01, 02, 07, 10, 11, 14, 20, 23, 24, 25, 27, 33 or 35, the //// button corresponds to the 1-digit/2-digit entry switching button (often labelled -/--) of your TV's remote control.
- With televisions under Code 01, 28, 29 or 34, the X button corresponds to the 10 + button, and the 2 button corresponds to the 20 + button of your TV's remote control.

NOTE:

The way these buttons are used is determined by your TV. Use these buttons as instructed for your TV's remote control.

TV BRAND NAME	CODE
IVC	01, 23, 24, 25
BLAUPUNKT	19
BRANDT	26
FERGUSON	27
FINLUX	30
FUNAI	32
LG/GOLDSTAR	18
GRAETZ	28
GRUNDIG	19
HITACHI	10
ITT	28
LUXOR	28
MITSUBISHI	03
MIVAR	29
NEC	20
NOKIA	31
NORDMENDE	26
PANASONIC	11
PHILIPS	02
SABA	26
SALORA	28
SAMSUNG	02, 12, 33, 34, 35
SELECO	28
SHARP	06
SONY Teleavia	07 26
TELEFUNKEN	26
THOMSON	26
	14
TOSHIBA	14

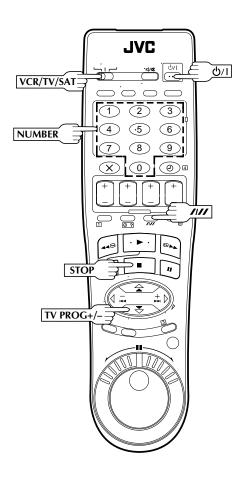

Satellite Tuner Multi-Brand Remote Control

Your remote control can operate the basic functions of your satellite tuner set. In addition to JVC satellite tuners, other manufacturer's satellite tuners can also be controlled.

Before you start . . .

- Turn on the satellite tuner using its remote control.
- Set the remote control's VCR/TV/SAT switch to SAT.

SET SATELLITE TUNER BRAND CODE

Refer to the chart below. While holding down 0/1 on the recorder's remote control, enter your satellite tuner's brand code using the **NUMBER** keys, then press **STOP**. Check if the satellite tuner's power goes off as it should. If it does, try other operations () step 2).

- Once you have set the remote control to operate the satellite tuner, you don't have to repeat this step until you replace your remote control's battleries.
- Some satellite tuner brands have more than one code.
 If the satellite tuner does not function with one code, try entering another.

OPERATE SATELLITE TUNER

Press the corresponding button: 0/1, TV PROG +/-, NUMBER keys.

- For VIDEOWAY or some brands of satellite tuner, you must press //// after having pressed the NUMBER keys
- The NUMBER buttons may not function with some satellite tuners.
- To return the remote to video recorder control, set its VCR/TV/SAT switch to VCR.

IMPORTANT


Although the provided remote control unit is compatible with JVC satellite tuners, as well as many other models, it may not work with your satellite tuner, or in some instances, may have limited function capability.

SATELLITE TUNER BRAND	CODE
JVC	72, 73
AMSTRAD	60, 61, 62, 63
BT	72
CANAL +	81
FINLUX	68
GRUNDIG	64, 65
HIRSCHMANN	64
ITT	68
JERROLD	75
KATHREIN	70, 71
LUXOR	68
MASPRO	70
NOKIA	68
PACE	65, 67
PANASONIC	74
PHILIPS	66
RFT	69
SALORA	68
SIEMENS	64
SKYMASTER	69
VIDEOWAY	76
WISI	64

36 en

Preparation For Editing

Turn on the TV and select the VIDEO channel (or AV mode).

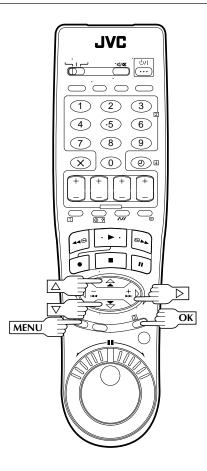

Advantages Of S-VHS Video Recorders

You can edit from VHS to S-VHS, S-VHS to VHS, or, from S-VHS to S-VHS.

- From VHS to S-VHS: Record VHS playback signals in the S-VHS mode. Although the picture quality is inherently limited by that of the original, the edited tape has better picture quality than those made by VHS-to-VHS editing.
- From S-VHS to VHS: Because the picture quality of the source material is very high, the edited tape has better picture quality than those made by VHS-to-VHS editing.
- From S-VHS to S-VHS: All signals will be transferred with minimum degradation.

Editing Mode Setting

 
You can minimize picture degradation while editing.

ACCESS MAIN MENU **SCREEN**

Press MENU.

ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing $\triangle \nabla$, then press **OK** or ▷.



SELECT EDIT MODE

Move the highlight (pointer) to "EDIT" by pressing $\triangle \nabla$, then press **OK** or ▷ to select "ON".

HR-S9500E MODE SET ☑ AUTO TIMER 0FF O. S. D. B. E. S. T. AUTO SP→LP TIMER ON ON OFF DIGITAL 3R POWER SAVE ON OFF S-VHS NEXT PAGE AUTO [MENU] : EXIT






RETURN TO NORMAL **SCREEN**

Press MENU.

NOTE:

After you finish editing, be sure to set "EDIT" back to "OFF".


Edit From A Camcorder

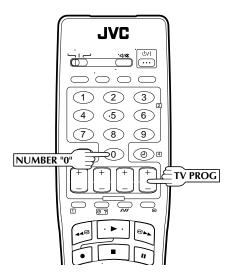

NOTES:

- All necessary cables can be obtained from your dealer.
- You can also use another video recorder as the player instead of a camcorder.

A If the camcorder has no S-VIDEO output connector...

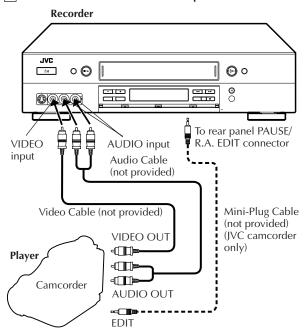

You can use a camcorder as the source player and your video recorder as the recorder.

MAKE CONNECTIONS

A If the camcorder has no S-VIDEO or

- A If the camcorder has no S-VIDEO output connector...
 ... connect the camcorder's AUDIO/VIDEO OUT
 connectors to the recorder's front panel AUDIO/
 VIDEO input connectors.
- B If the camcorder has an S-VIDEO output connector...
 ... connect the camcorder's S-VIDEO OUT and
 AUDIO OUT connectors to the recorder's front
 panel S-VIDEO and AUDIO input connectors.
- When using a monaural camcorder, connect its AUDIO OUT connector to the AUDIO L input connector on your recorder.
- When a Master Edit Control-equipped JVC camcorder is used, the camcorder is capable of controlling the recorder. Refer to the camcorder's instruction manual for operating procedure.

SET RECORDER'S INPUT MODE

Press **NUMBER** key "0" and/or **TV PROG** to select "F-1" for the AUDIO/VIDEO input connectors, or "S-1" for the AUDIO/S-VIDEO input connectors, depending on the connectors being used.

SET EDIT MODE

See "Editing Mode Setting" on page 36.


START CAMCORDER

Engage its Play mode.

START RECORDER

Engage its Record mode.


B If the camcorder has an S-VIDEO output connector...

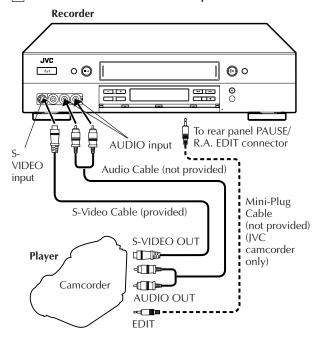

1

 $38_{
m EN}$ EDITING (cont.)

Edit To Or From Another Video Recorder

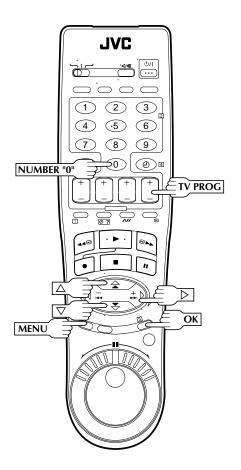

You can use your video recorder as the source player or as the recording deck.

C

MAKE CONNECTIONS

Connect the player's 21-pin SCART connector to the recorder's 21-pin SCART connector as illustrated on page 39.

- A When Using Your Video Recorder As The Source Player ...
 - ... connect its AV1 IN/OUT connector to the recording deck.
- B When Using Your Video Recorder As The Recording Deck ...
 - ... connect its AV2 IN/DECODER or AV1 IN/OUT connector to the source player.

SET RECORDING DECK'S INPUT MODE

Set to AUX. With this video recorder, press **NUMBER** key "0" and/or **TV PROG** to select "L-1" for the AV1 IN/OUT connector, or "L-2" for the AV2 IN/DECODER connector, depending on the connector being used.

 When using the AV2 IN/DECODER connector, make sure "AV2 SELECT" is set to "VIDEO" or "S-VIDEO" (F) pg. 39).

SET EDIT MODE

See "Editing Mode Setting" on page 36.

START SOURCE PLAYER

Engage its Play mode.

5

START RECORDING DECK


Engage its Record mode.

NOTES:

- All necessary cables can be obtained from your dealer.
- For Y/C signal input/output, be sure to use a 21-pin SCART cable that is compatible with the Y/C signal.
- When you use this recorder as the player for editing, be sure to set "O.S.D." to "OFF" before starting (☐ pg. 10).
- If you are using another recorder with S-Video and Audio input/output connectors, you can connect those connectors to this recorder's S-VIDEO IN/S OUT and AUDIO IN/OUT connectors.

When Using Your Video Recorder As The Source Player connect its rear panel S OUT and AUDIO OUT connectors to the recording deck's S-Video and Audio input connectors.

When Using Your Video Recorder As The Recording Deck connect its front panel S-VIDEO and AUDIO input connectors to the source player's S-Video and Audio output connectors. Then, set the recorder's input mode to "S-1".

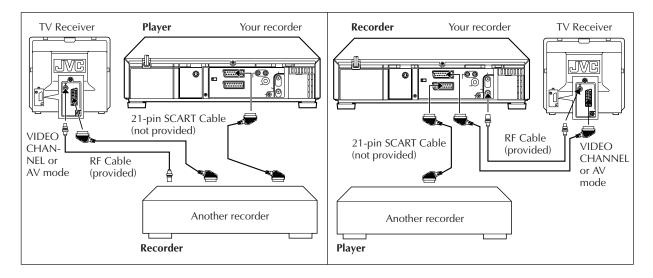

AV2 SELECT Setting

Set "AV2 SELECT" to the appropriate mode depending on the type of unit connected to the rear panel AV2 IN/ DECODER connector of this recorder.

- 1 Press **MENU** to access the Main Menu screen.
- 2 Press $\triangle \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .
- 3 Press △∇ to move the highlight bar (pointer) to "AV2 SELECT".
- 4 Press **OK** or ▷ to select one of the following:
 - **a–**VIDEO : If a connected device's output is

compatible only with regular video signals, set "AV2 SELECT" to "VIDEO".

b–S-VIDEO : If a connected device's output is

compatible with Y/C signals, set "AV2 SELECT" to "S-VIDEO". This setting will

let you take advantage of higher-

quality S-VHS pictures.

c-DECODER: If a decoder is connected to the AV2

IN/DECODER connector, set "AV2

SELECT" to "DECODER". (See page 47 as


well.)

d–SAT : If a satellite tuner is connected to the

AV2 IN/DECODER connector, set "AV2


SELECT" to "SAT". (See page 46 as well.)


- 5 Press **MENU** to return to normal screen.
- If you are using a decoder or satellite tuner, be sure to set "AV2 SELECT" back to "DECODER" or "SAT" after editing.
- If you're not using a decoder or satellite tuner, leave "AV2 SELECT" set to "VIDEO" or "S-VIDEO".
- The default setting is "VIDEO"; if the recorder's memory backup has expired due to a power cut or because the AC was removed from the recorder, "VIDEO" will be automatically selected when the power is restored to the recorder. If you are using a decoder or satellite tuner, be sure to set "AV2 SELECT" back to "DECODER" or "SAT".

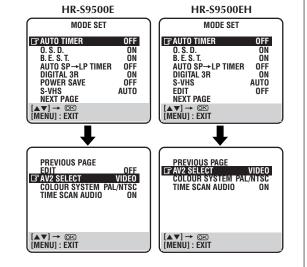


EDITING (cont

Insert Editing

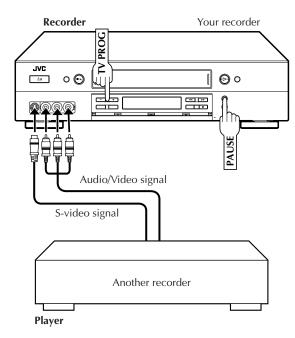

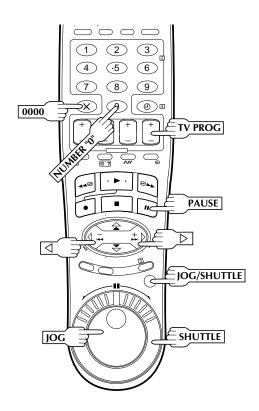

Insert editing replaces part of the recorded scene with new material. Both the picture and Hi-Fi audio soundtrack are replaced with new ones, while the normal audio soundtrack remains unchanged. If you wish to change the normal audio track as well, use the audio dubbing function simultaneously. Use your video recorder as the recorder.

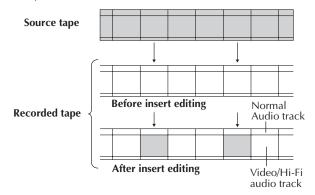

MAKE CONNECTI

Connect the player's VIDEO OUT or S-VIDEO OUT and AUDIO OUT connectors to your recorder's VIDEO or S-VIDEO and AUDIO input connectors on the front panel.

SET INPUT MODE

Press NUMBER key "0" and/or TV PROG so that "F-1" for the VIDEO/AUDIO input connectors or "S-1" for S-VIDEO/AUDIO input connectors appears in place of a channel number.

LOCATE END POINT

Load the recording cassette into your recorder, and play it back to determine the edit-out point (the end of the segment to be replaced) using the SHUTTLE ring or the **JOG** dial or pressing < > and **PAUSE**.

> • To use the JOG dial/SHUTTLE ring, first press the JOG/SHUTTLE button on the remote control so that the button lights up.


RESET THE COUNTER


Press 0000 to change the counter display to "0:00:00".

LOCATE START POINT

Determine the edit-in point (the beginning of the segment to be replaced) using the **SHUTTLE** ring or the **JOG** dial or pressing *¬* ▷ and **PAUSE**.

• Be sure to engage the Still mode at the edit-in point.

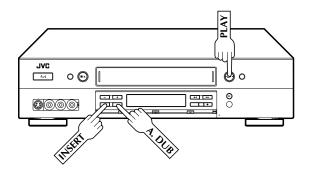

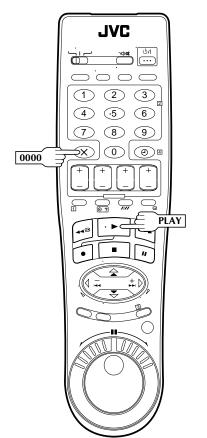

ENGAGE INSERT EDITING

Press **INSERT**.

Your recorder enters the Insert-Pause mode. ("\"\", "\"\"
 and "\"\" light up on the front display panel.)

 The TV screen changes from the still picture to the input source you are going to record.

START EDITING

Load the source cassette and play back the segment that is to be inserted. When you reach the start of the section of the source tape that you wish to insert, press **PLAY** to start the tape in your recorder; Insert Editing begins at this point.

• "()" and "()" are displayed on the front display panel.

END INSERT EDITING

At counter "0:00:00", Insert Editing will stop automatically while the tape continues running in the Play mode. If you wish to stop Insert Editing before the specified edit-out point, press **0000**.

FOR AV INSERT EDITING

If you want to replace the picture, Hi-Fi audio soundtrack and normal audio soundtrack all at the same time...

... In step **6** above, after you press **INSERT**, press **A. DUB** also. (" \bigcirc " and " \bigcirc " blink and " $\|$ " lights up on the front display panel.)


NOTES:


- Suitable leads can be obtained from your dealer.
- Insert editing is not possible with cassettes whose safety tab has been removed.
- When insert editing is performed on a tape that has been recorded on another video recorder, the inserted portion may appear distorted.
- In insert editing, the recording speed (SP/LP) is determined by the previous recording to be replaced. If the previous recording's speed changes within a single edit, the inserted picture will be distorted at the switching point.
- A small portion of the recording which precedes an insert edit may become erased.
- Insert Editing is also possible using the rear panel AV1 IN/ OUT or AV2 IN/DECODER connector. When using these connectors, make sure to select the correct input mode in step 2.

_

 $42_{\,\mathrm{EN}}$ EDITING (cont.)

Random Assemble Editing

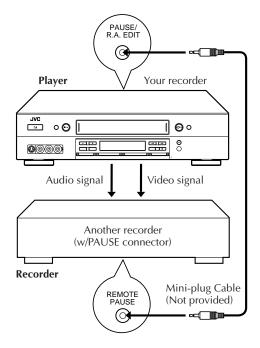

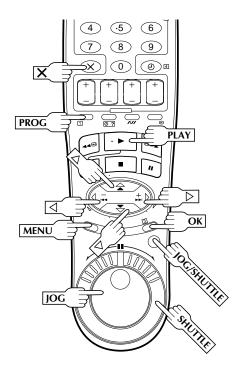

This function makes it easier to create edited videos when your video recorder is used as the source player in combination with another JVC video recorder equipped with a Remote PAUSE Connector. You can pre-program up to 8 scenes or "cuts" for automatic editing in the sequence you have specified.

You can also perform Random Assemble Editing with a second non-JVC recorder. Fig. 43

MAKE CONNECTIC
Connect your recorder's AV1 IN/OUT of

Connect your recorder's AV1 IN/OUT or S OUT/ AUDIO OUT connectors to the Video and Audio input connectors on the recording deck, and connect your recorder's PAUSE/R.A. EDIT connector to the PAUSE connector on the recording deck.

- If the recording deck doesn't have a PAUSE connector, connect to the R.A. EDIT connector instead.
- The Mini-plug cable is a mono 3.5 mm mini-plug to mono 3.5 mm mini-plug connector.

PREPARE FOR EDITING

Insert the cassette to be recorded on into the recorder and set the recorder's input mode.

LOAD SOURCE CASSETTE

Insert the source cassette into your recorder.

SET EDIT MODE

See "Editing Mode Setting" on page 36.

START SOURCE PLAYBACK

Press **PLAY**.

ACCESS MAIN MENU SCREEN

Press **MENU**.

ACCESS R.A. EDIT SCREEN

Press $\triangle \nabla$ to move the highlight bar (pointer) to "R.A.EDIT", then press **OK**.

 The screen is superimposed on the video playback in step 8.

7

 
4

6

8

LOCATE EDIT-IN POINT

Find the point on the source tape from where you want the edited scene to begin by pressing ⊲ ▷ or using the SHUTTLE ring or the JOG dial, then press PROG.




 The edit-in point is registered in memory and appears on the screen.

 To use the JOG dial/SHUTTLE ring, first press the JOG/SHUTTLE button on the remote control so that the button lights up.

LOCATE EDIT-OUT POINT

 Find the point where you want the edited scene to end by pressing $\triangleleft \triangleright$ or using the SHUTTLE ring or the JOG dial, then press



0:02:23

 The edit-out point is registered in memory and appears on the screen.

 The total time of the edited scenes is displayed to the right of "(+)".

to the right of "(+)".
Repeat steps 8 and 9 for each additional scene.



0:02:51

PREPARE RECORDING DECK

Engage its Record-Standby mode.

10

START R.A. EDIT

Press OK.

 Automatic editing begins; all the specified scenes are copied to the recording deck in the order they were registered.

 The on-screen display remains while your recorder searches for each scene (blinking cursor indicates scene currently being searched for), but disappears during actual editing.

• During scene search, the recording deck automatically enters its Record-Standby mode.

 When all registered scenes have been edited, your recorder enters the Pause mode, the recording deck enters its Record-Standby mode, and the cursor blinks at the next available number.

END R.A. EDIT

Press **MENU** to return to the normal screen, and engage the Stop mode for your recorder and for the recording deck.

NOTES:

- You can also monitor the sound when searching for scenes you want to edit in steps 8 − 9. Since you can hear the soundtrack during selection, you can avoid abrupt or unnatural sounding scene-to-scene transitions. The sound that is heard, however, is not TimeScan Audio.
- When editing, there may be a discrepancy of about 2 seconds on the source tape between the locations you chose as edit-in/-out points and the locations your recorder recognizes as those points.
- For any scene, the edit-out point must have a counter reading that is at least 1 second after the corresponding edit-in point. Any less than 1 second and the edit-out point will not be registered.
- Since the source recorder prerolls during Random Assemble Editing, there must be at least 15 seconds worth of recorded material prior to any edit-in point on the source tape.
- If the search time for an edit-in point exceeds 5 minutes, the recording deck enters its Stop mode and editing will not take place.
- During steps 8 and 9 if you engage the Pause mode while registering edit-in and -out points in the R.A. Edit screen, the characters in the on-screen display may become distorted. This is normal.

To Make Corrections . . .

 \dots during step **8** or **9**, you can cancel registered in and out points by pressing X on the remote control. Each time you press, the preceding point is erased.

 If, for example, you have registered 5 sets of in and out points and want to reset the first set, you have to press X until all points after the first set have been erased. Reenter them after you've repaired the first set of points.

Memory Capacity

Random Assemble Editing shares memory space with the recorder's timer. If there are programs occupied by timer-recording data, those spaces cannot be used to register edit-in and -out points — meaning you won't be able to edit 8 scenes.

 When all 8 programs are full, "PROGRAM FULL" appears on the R.A. EDIT screen.

• To cancel a program, see page 30.

0:00:00 (+) 0:00:00

RM-V704U Multi-Brand R.A. Edit Controller (Not provided)


By connecting this controller to your recorder's R.A. EDIT connector, you can perform Random Assemble Editing in combination with a second non-JVC video recorder. The controller is compatible with various major recorder brands. For compatible systems and availability, please consult your JVC dealer.


NOTE:

Although the RM-V704U is designed to operate the recording deck, it may not work with some recorders, or may have limited function capability.

12

Audio Dubbing

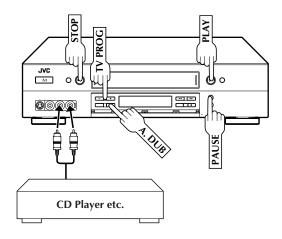


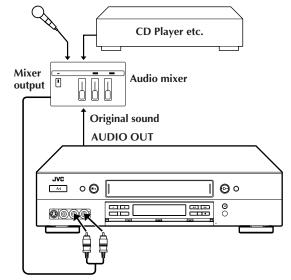

NOTES:

- When monitoring the sound during Audio Dubbing, the normal soundtrack is automatically selected. If you wish to hear the mixed sound (Hi-Fi + Normal soundtracks), press AUDIO on the remote control to select $\square + \square (L+R)+NORM'' \square pg. 17$).
- Audio dubbing stops automatically when the counter reaches "0:00:00", and the recorder enters the Play mode. Check the counter reading before dubbing.
- Audio dubbing is also possible using the rear panel AV1 IN/OUT or AV2 IN/DECODER connector. When using these connectors, make sure to select the correct input mode in step 2.
- Audio dubbing cannot be performed on a cassette that has had its record safety tab removed.
- When playing back an audio-dubbed tape, press AUDIO on the remote control to select the soundtrack you wish to hear (17) pg. 17).

Audio dubbing replaces the normal audio sound of a previously recorded tape with a new soundtrack.

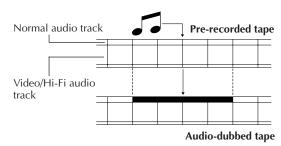

MAKE CONNEC

Connect an audio component to the AUDIO L + R connectors on the recorder's front panel.

• When connecting monaural equipment, use only the recorder's AUDIO L connector.

SET INPUT MODE

Press NUMBER key "0" and/or TV PROG so that "F-1" or "S-1" appears in place of a channel number.

LOCATE START POINT

Press PLAY to start playback of the tape in your recorder, and press PAUSE when you find the point where you want to start dubbing.

ENGAGE AUDIO DUBBINO

Press A. DUB.

- Your recorder enters the Audio Dubbing Pause mode. ("()" blinks, ">" and "" light up on the front display
- To perform audio dubbing with audio mixing, press AUDIO on the remote control to select "□ + □ (L+R)" at this point.
 - Audio dubbing with audio mixing is not possible if you're using a monaural audio component, or if you don't have an audio mixer.


START DUBBING


Engage the audio component's Play mode, then press **PLAY** to start the tape in your recorder. Audio dubbing begins at this point.

- "O" blinks and "O" is displayed on the front display
- To stop dubbing temporarily, press **PAUSE**. Press **PLAY** to resume dubbing.

FND AUDIO DUBBING

Press STOP to stop the tape in your recorder, and engage the audio component's Stop mode.

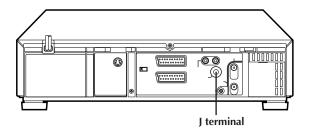

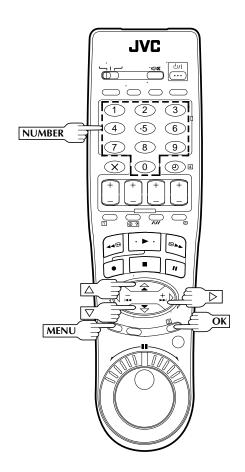

ATTENTION

After you change your recorder's JLIP ID number, control signal transmission may not work properly. If this happens, turn off the recorder's power off once, then turn it back on and try again.

J Terminal (JLIP(Joint Level Interface Protocol) Connector)

The J Terminal is used to connect the recorder to a personal computer or similar device to allow computerized control of the recorder during editing and certain other operations.

Examples:

With the optional JLIP VIDEO CAPTURE BOX GV-CB3E:

- Enables Random Assemble Editing of up to 99 segments, using this recorder as the playback unit.
- Allows you to capture still images from the recorder into a personal computer.

For further details consult your nearest JVC dealer.

JLIP ID Number

Your recorder has its own JLIP ID number. This ID number must be unique when your recorder is connected to another device via its J terminal. The ID Number is preset to "1" at the factory. You can change this number to any number between "1" and "99". If it is necessary to change the JLIP ID number perform the following steps.

ACCESS MAIN MENU SCREEN


Press MENU.

ACCESS INITIAL SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "INITIAL SET", then press **OK** or \triangleright .


ACCESS JUP ID NO. SET SCRFFN

Press △▽ and move the highlight bar (pointer) to "JLIP ID NO. SET", then press **OK** or ▷.

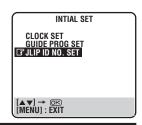

SET JLIP ID NUMBER

Press **NUMBER** keys to enter the desired ID number.

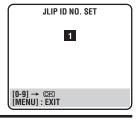


RETURN TO NORMAL SCREEN

Press **OK**.

Connection To A Satellite Tuner

The AV2 IN/DECODER connector on the rear panel of your recorder allows simple connection to a satellite tuner.

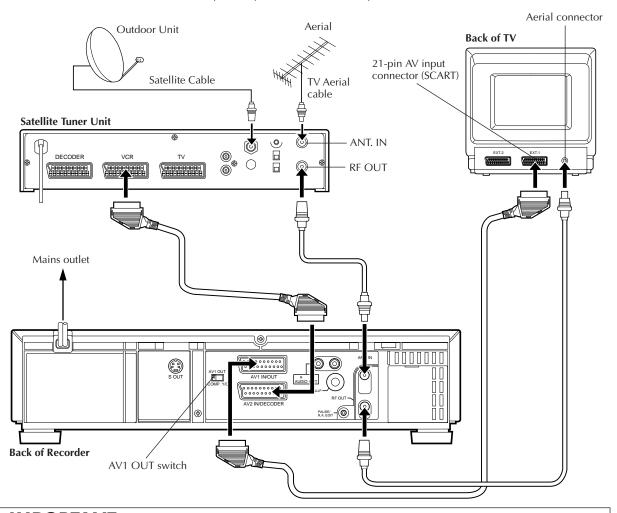

IMPORTANT

Set "AV2 SELECT" to "SAT" on the Mode Set screen (\square pg. 39). If you set "AV2 SELECT" to "SAT"...

- It is possible to view a satellite programme with the TV set to its AV mode even if the recorder's power is turned off.
- The AV2 IN/DECODER connector's input is the same signal that is controlled by the rear panel AV1 OUT switch as shown below:
 - a- If both the satellite tuner and the TV are compatible with the Y/C signal, set the AV1 OUT switch to Y/C in order to take advantage of high-quality S-VHS pictures. (For connection, be sure to use a 21-pin SCART cable that is compatible with the Y/C signal.)
 - b- If the satellite tuner and/or the TV are/is not compatible with the Y/C signal, set the AV1 OUT switch to COMP.


AV2 SELECT setting on the MODE SET screen	Rear panel AV1 OUT switch	AV2 IN/DECODER connector input signal	
SAT	COMP.	Composite signal*	
3/1	Y/C	Y/C signal**	

- * The composite signal is a regular video
- ** The Y/C signal is a signal in which the luminance and chrominance signals are separated.

NOTE:

Refer to the instructions supplied with your satellite tuner.

Connecting/ Using A Decoder

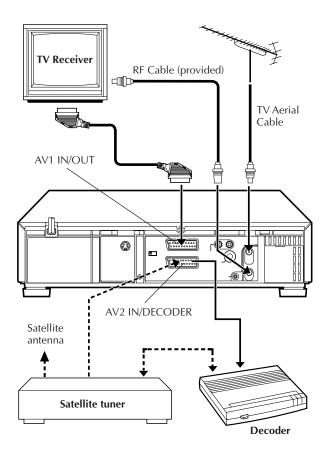

The AV2 IN/DECODER connector can be used as an input terminal for an external decoder (descrambler). Simply connect a decoder and you can enjoy the variety of programming that is available through scrambled channels.

SELECT INPUT MODE

Set "AV2 SELECT" to "DECODER". (F. pg. 39)

CONNECT DECODER

Connect your recorder's AV2 IN/DECODER connector to the decoder's Euroconnector using a 21-pin SCART

SET TUNER

Perform the procedure as described in "When Receiving A Scrambled Broadcast" on page 53.

NOTE:

When Connecting A Satellite Tuner . . .


. . . if you don't have a decoder connect the satellite tuner directly to the video recorder's AV2 IN/DECODER connector. . . . if you have a decoder, first connect the decoder to the decoder input of the satellite tuner, then connect the satellite tuner's output to the recorder's AV2 IN/DECODER connector. Refer to the instruction book for the satellite tuner and decoder. See page 46 as well for the connections.

... set "AV2 SELECT" to "SAT". (pg. 39)

. . . to view a programme via the satellite tuner, select L-2 mode by pressing NUMBER keys and/or TV PROG so that "L-2" appears on the display panel.

Connecting/ Using A Stereo System

These instructions enable you to connect your video recorder to your Hi-Fi stereo system (if you have one) and listen to the soundtrack through the stereo.

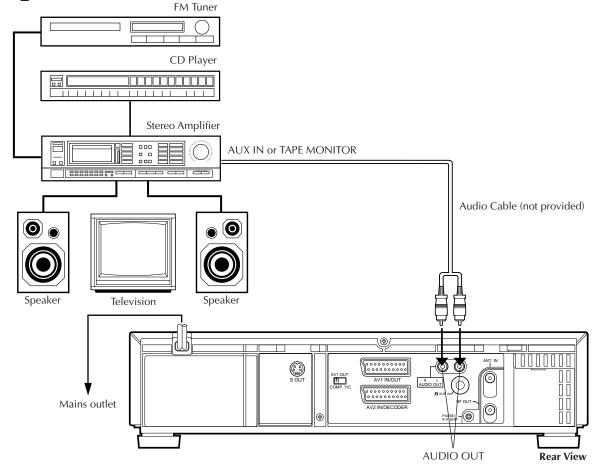

1

MAKE CONNECTIONS

Connect the AUDIO OUT L and R connectors on your video recorder to the AUX IN or TAPE MONITOR terminals on your stereo system's receiver or amplifier.

NOTES:

- When connecting your recorder's audio output connectors to a stereo amplifier, make sure you connect L and R correctly.
- If stereo or bilingual TV broadcasts are receivable in your area, this recorder can record them independently of the TV set and play them back through the connected stereo system.
- When listening to sound through the connected stereo system, turn the TV's volume down completely.

CAUTIONS:

- This recorder has a dynamic range of more than 80 dB with regards to its Hi-Fi audio capability. It is recommended that you check the maximum level if you are going to listen to the Hi-Fi audio signals through a stereo amplifier. A sudden surge in the input level to the speakers may damage them.
- Some speakers and televisions are specially shielded to prevent television interference. If both are of the non-shielded type, do not place the speakers adjacent to the TV set as this can adversely affect the video playback picture.

Video Channel Set

Video Channel (RF Output Channel) is the channel on which your TV receives picture and sound signals from the video recorder through the RF cable.

IMPORTANT

Perform the following steps only if —

- Video Channel Set has not been done correctly by the Auto Set Up function (pg. 6).
- interference appears in the TV picture after you have moved to a different area or a new station has started broadcasting in your area.
- you change the connection between your recorder and TV from RF connection to AV or S-VIDEO connection, or vice versa.

If you have connected the video recorder to your TV via both the provided RF cable and a 21-pin SCART cable (AV connection), or via the provided RF cable, the provided S-Video cable and an audio cable (S-VIDEO connection), since you do not need the video channel you have to set the video channel to off.

If you have connected the video recorder to your TV via the provided RF cable only (RF connection), you have to set the correct video channel.

Before performing the following steps, make sure the recorder's power is off and there is no cassette inserted in the recorder.

1

 
ACCESS VIDEO CHANNEL SET MODE

Hold down **STOP** (\blacksquare/\triangle) on the recorder until the display panel shows the following.



SET VIDEO CHANNEL

With AV Connection or S-VIDEO Connection Press TV PROG – until the display panel shows "_OUT- –".




• Now the video channel is set to off.

With RF Connection

Press **TV PROG** + or – to set the video recorder to a vacant channel between 22 and 69 which is not occupied by any local station in your area.

 (Ex.) If channel 50 is available in your area



Then set your TV to UHF channel 50.

- If the two vertical white bars appear clearly on the screen as shown to the right, go to step 3.
- If the two vertical white bars do not appear clearly, re-set the video recorder to another vacant channel and try again.



NOTES:

- If you set the video recorder to a channel which is occupied by a local station or has neighbouring channels that are occupied by local stations, the picture reception quality will be affected and some interference noise will appear on the TV screen. Be sure to select a vacant channel which has no broadcast on neighbouring channels.
- If you cannot obtain the two vertical white bars clearly with any channel between 22 and 69, consult your JVC dealer.

EXIT VIDEO CHANNEL SET MODE

Press **OK** on the remote control.

3

With AV Connection or S-VIDEO Connection: To view picture signals from the video recorder, set your TV to its AV mode.


With RF Connection:

The channel on which the screen in step 2 appears clearly is your video channel.

To view picture signals from the video recorder, set your TV to the Video Channel.

Tuner Set

Turn on the TV and select the VIDEO channel (or AV mode).

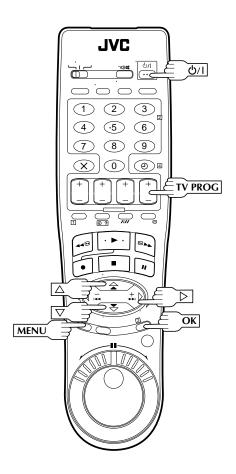

IMPORTANT

Perform the following steps only if —

- Auto Channel Set has not been set correctly by Auto Set Up function (pg. 6).
- you have moved to a different area or if a new station starts broadcasting in your area.

Your recorder needs to memorize all necessary stations in channel positions in order to record TV programmes. Auto Channel Set automatically assigns all receivable stations in your area to call them up by using the **TV PROG** buttons without going through any vacant channel.

Auto Channel Set

1

TURN ON THE RECORDER

 
Press 心/I.

ACCESS MAIN MENU SCREEN

Press **MENU**.

ACCESS COUNTRY SET SCREEN

Press △▽ to move the highlight bar (pointer) to "AUTO CH SET", then press **OK** or ▷.



SELECT COUNTRY


4

Press $\Delta \nabla$ to move the highlight bar (pointer) to your country's name, then press **OK** or \triangleright .

SELECT LANGUAGE

5

Press $\Delta \nabla$ to move the highlight bar (pointer) to the language of your choice.

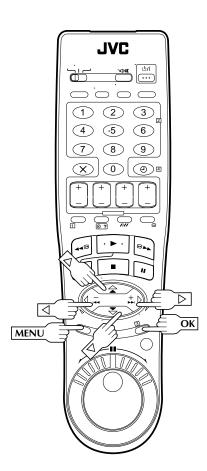

IMPORTANT

- In certain reception conditions, station names may not be stored correctly, and auto Guide Program Number Set may not work properly. If the Guide Program numbers are not set properly, when you timer-record a TV programme using SHOWVIEW, the recorder will record a TV programme of a different station. When programming the timer using SHOWVIEW, be sure to check whether the channel position on which your recorder receives the broadcasting station you wish to record is selected (F) pg. 26, "SHOWVIEW Timer Programming").
- Your video recorder memorizes all detected stations even if reception of some of them is poor. In these cases picture quality may be poor. To delete those stations with an unacceptable picture F "Delete A Channel" on page 53.

NOTES:

- Fine tuning is performed automatically during Auto Channel Set. If you want to perform it manually, refer to page 56.
- If you perform Auto Channel Set when the aerial cable is not connected properly, "SCAN COMPLETED -NO SIGNAL-" appears on the screen in step 7. When this happens, make sure of the aerial connection and press OK; Auto Channel Set will take place again.

PERFORM AUTO CHANNEL **SET**

Press **OK** or ▷.

 The Auto Set screen appears, and remains on screen while the recorder searches for receivable stations. As Auto Channel Set progresses, the " " mark on the

AUTO SET PLEASE WAIT [MENU]: EXIT screen moves from Beginning End

left to right.

Wait until the screen as shown in step 7 appears.

VIEW CONFIRMATI SCREEN

After "SCAN COMPLETED" is displayed on the screen for about 5 seconds, the Confirmation screen looking like the one to the right appears. The stations your recorder located appear on a Confirmation screen — channel positions (PR), channels (CH) and station names



C: Cable


(ID - F pg. 55). The blueback screen and the programme currently being broadcast by the blinking station appear alternately for 8 seconds each. To view the next page, use the $\triangle \nabla \triangleleft \triangleright$ button on the remote control.

- The stations located in the selected country appear at the top of the list.
- The Guide Program numbers will also be set automatically during Auto Channel Set.

RETURN TO NORMAL **SCREEN**

Press MENU.

- Using the Confirmation screen, you can skip or add channel positions, enter station names and perform other operations. Refer to pages 52 - 56 for the procedures.
- Depending on reception conditions, the stations may not be stored in order, and the station names may not be stored correctly.
- For information on scrambled broadcasts, refer to page 53.

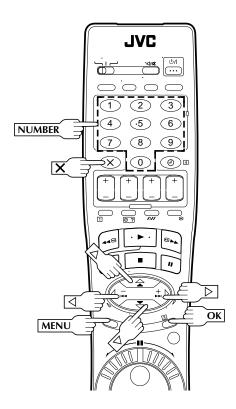

Storing Channels Manually

Store channels that were not stored during Auto Set Up (\square pg. 6) or Auto Channel Set (\square pg. 50).

1

ACCESS MAIN MENU

Press MENU.

 
ACCESS CONFIRMATION SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "MANUAL CH SET", then press \mathbf{OK} or \triangleright . The Confirmation screen appears.

SELECT POSITION

Press △▽ ⟨ ▷ until an open position in which you want to store a channel begins blinking, then press **OK**. The Manual Channel Set screen appears.

(Ex.) To store in position 12.



The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

SELECT BAND

Press $\triangle \nabla$ to change the band between CH (regular) and CC (cable), then press \triangleright .



The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

INPUT CHANNEL

Press the **NUMBER** keys to input the channel number you want to store.

- Input "0" before any single number entries.
- To input the registered station name (ID □ pg. 55), press > until "– – – " (ID setting) begins blinking, then press △ ▽.
- For fine tuning adjustment, press ▷ until "+/-" begins blinking, then press △▽. While tuning, "+" or "-" appears.
- When storing a channel that sends scrambled broadcasts, press ▷ until "OFF" (Decoder setting) blinks, then press △▽ to set "DECODER" to "ON" ("OFF" is the default setting).
- When "AV2 SELECT" is set to "VIDEO", "S-VIDEO", or "SAT", the "DECODER" setting cannot be changed (F) pg. 39).

ENTER NEW CHANNEL INFORMATION

Press **OK** and the Confirmation screen appears.

• Repeat steps 3 through 6 as necessary.

CLOSE CONFIRMATION SCREEN

Press **MENU**.

6

- To change positions, see "Change Station Channel Position" (pg. 53).
- If you wish to set station names other than the ones registered in your recorder, "Set Stations (B)" on page 54.

ATTENTION

After you have stored channels manually, be sure to perform Guide Program Number Set (pg. 57) in order to get proper results from ShowView timer recording.

Delete A Channel

Perform steps 1 and 2 of "Storing Channels Manually" on page 52 to access the Confirmation screen before continuing.

SELECT ITEM

Press $\triangle \nabla \triangleleft \triangleright$ until the item you want to delete begins

DELETE CHANNEL

Press X.

- The item directly beneath the cancelled one moves up one line.
- Repeat steps 1 and 2 as necessary.

CLOSE CONFIRMATION SCREEN

Press MENU.

Change Station Channel Position

Perform steps 1 and 2 of "Storing Channels Manually" on page 52 to access the Confirmation screen before continuing.

 
SELECT ITEM

Press $\triangle \nabla \triangleleft \triangleright$ until the item you want to move begins blinking. Then press OK and the station name (ID) and its channel (CH) number begin blinking.

SELECT NEW POSITION

Press $\triangle \nabla \triangleleft \triangleright$ to move the station to the new channel position, then press OK.

Example: If you moved the station in position 4 to position 2, the stations originally in positions 2 and 3 each move down one space.



• Repeat steps 1 and 2 as necessary.

CLOSE CONFIRMATION SCREEN

Press MENU.

When Receiving A **Scrambled Broadcast**

SELECT DECODER MODE

Set "AV2 SELECT" to "DECODER" (F pg. 39).

ACCESS CONFIRMATION SCREEN

Perform steps 1 and 2 of "Storing Channel Manually" on page 52.

SELECT POSITION

Press $\triangle \nabla \triangleleft \triangleright$ to select the channel position broadcasting scrambled programmes, then press OK twice.

CHANGE DECODER SETTING

Press > until "OFF" (decoder setting) begins blinking, and set it to "ON" by pressing $\triangle \nabla$.

RETURN TO CONFIRMATION **SCREEN**

Press **OK**.

• Repeat steps 3 through 5 as necessary.

CLOSE CONFIRMATION SCREEN Press MENU.

ATTENTION

After you have deleted channels or changed channel positions, be sure to perform Guide Program Number Set (2 pg. 57) in order to get proper results from SHOWVIEW timer recording.

Set Stations (A)

Set station names that are registered in your recorder.

Perform steps 1 and 2 of "Storing Channels Manually" on page 52 to access the Confirmation screen before continuing.

1

SELECT ITEM

Press $\triangle \nabla \triangleleft \triangleright$ until the item you want begins blinking.

ACCESS MANUAL CHANNEL SET SCREEN

Press **OK** twice.

2

SELECT NEW STATION

Press \triangleright until the station name (ID) begins blinking, then press $\triangle \nabla$ until the new station's name (ID) you want to store begins blinking.

Registered station names (\square pg. 55) appear as you press $\triangle \nabla$.



SWITCH STATIONS

Press OK.

- The Confirmation screen appears.
- Repeat steps 1 through 4 as necessary.

CLOSE CONFIRMATION SCREEN

Press MENU.

Set Stations (B)

Set station names other than the ones registered in your recorder.

Perform steps 1 and 2 of "Storing Channels Manually" on page 52 to access the Confirmation screen and then perform steps 1 and 2 of "Set Stations (A)" on the left before continuing.

1

SELECT STATION NAME CHARACTER

Press ▷ until the first letter of the station name begins blinking.



2

ENTER NEW CHARACTER

Press $\triangle \nabla$ to cycle through the characters (A–Z, 0–9, –, *, +, — (space)) and stop when the desired character is indicated, then press \triangleright to enter. Enter the remaining characters the same way (maximum of 4). After entering all characters, press **OK**.

- The Confirmation screen appears.

CLOSE CONFIRMATION SCREEN

3


Press **MENU**.

TV Station And ID List

IV Sidilon And	I ID LISI
ID*	STATION NAME
1000	TV1000
3SAT	3SAT
ADLT	ADULT
ANT3	ANTENA3
ARD ARTE	ARD ARTE
BBC	BBC GROUP
BBC1	BBC1
BBC2	BBC2
BR3	BAYERN3
C+	CANAL PLUS
C1	PORTUGUSES
CAN5	CANALE5
CH4 CH5	CHANNEL4 CHANNEL5
CHLD	CHAINNELS
CINE	CINEMA
CLUB	TELECLUB
CMT	CMT
CNN	CNN
CSUR	ANDALUCIA
DISC	DISCOVERY
DR	DR TV
DRS DSF	DRS DSF
ETB1	ETB1
ETB2	ETB2
EURO	EURONEWS
EUSP	EUROSPORTS
FEMM	FEMMAN
FILM	FILM
FNET FR2	FILMNET France2
FR3	France3
GALA	GALAVISION
HR3	HESSEN3
INFO	INFO-KANAL
ITA1	ITALIA1
ITA7	ITALIA7
ISTV	ISTV
KA2	KA2
KAB1	KABEL1
KAN2	KANAL2
LOCA	LOCAL
M6	M6
MBC MCM	MBR MCM
MDR	MDR
MOVE	MOVIE
MTV	MTV
MTV3	MTV3
N3	NORD3
N-TV	N-TV
NBC	NBC SUPER
NDR3 NED1	NDR3 NED1
NED2	NED2
NED3	NED3
NEWS	
NICK	NICKELODEON
NRK	NRK
NRK2	NRK2
ODE OPE1	ODEON ORF1
ORF1	UNFT

ID*	STATION NAME
ORF2	ORF2
ORF3	ORF3
OWL3	OWL3
PREM	PREMIERE
PRO7	PRO7
RAI1	RAI1
RAI2	RAI2
RAI3	RAI3
RET4	RETE4
21	TELE21
RTBF	RTBF1 or 2
RTL	RTL
RTL2	RTL2
RTL4	RTL4
RTL5	RTL5
RTP	RTP
S4	SCHWEIZ4
SAT1	SAT1
SBS	SBS
SHOW	SHOW
SIC	SOCIEDADE
SKY	SKY CHANNEL
SKYN	SKY NEWS
SPRT	SPORT
SRTL	SUPER RTL
STAR	STAR-TV
SVT1	SVT1
SVT2	SVT2
SW3	SUEDWEST3
TCC	TCC
TELE	TELE
TEL5	TELE5
TF1	TF1
TM3	TM3
TMC	TELEMONTECARLO
TNT	TNT INT
TRT	TRT INT
TSI	TSI
TSR	TSR
TV1	BRTN TV1
TV2	BRTN TV2
TV3	TV3
TV4	TV4
TV5	TV5
TV6	TV6
TVE1	TVE1
TVE2	TVE2
TVG	TV GALICIA
TVI	TV INDEPENDENT
TVN	TV NORGE
VCR	VIDEO
VERO	VERONICA
VH-1	VH-1
VIVA	VIVA
VIV2	VIVA2
VMTV	VIDEO MUSIC
VOX	VOX
VT4	VT4
VTM	VTM
WDR1	West1
WDR3	West3
YLE1	YLE1
YLE2	YLE2
ZDF	ZDF
ZTV	ZTV

^{*} The "ID" abbreviation is what is shown on-screen in lieu of the station name. The "ID" abbreviation is listed in the Confirmation screen and is displayed on the TV screen when the recorder is tuned to a different station.

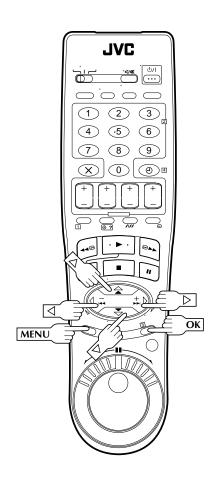

Fine-Tuning Channels Already Stored

Perform steps 1 and 2 of "Storing Channels Manually" on page 52 to access the Confirmation screen before continuing.

,

SELECT CHANNEL TO FINE-TUNE

Press $\triangle \nabla \triangleleft \triangleright$ until the channel you want to tune begins blinking.

ACCESS MANUAL CHANNEL SET SCREEN

Press **OK** <u>twice</u>. The Manual Channel Set screen appears.

PERFORM TUNING

Press \triangleright until "+/-" begins blinking, then press $\triangle \nabla$ until the picture is its clearest. Then press **OK**.

- The Confirmation screen appears.
- Repeat steps 1 through 3 as necessary.

CLOSE CONFIRMATION SCREEN

4

Press MENU.

SHOWVIEW Setup

IMPORTANT

Normally, Auto Set Up (pg. 6) or Auto Channel Set (pg. 50) sets the Guide Program Numbers automatically. You need to set the Guide Program Numbers manually only in the following cases.

- When timer-programming with ShowView, the channel position, where the station you wish to record is received on your recorder, is not selected.
- Set the Guide Program Number for that station manually.
- When you add/delete a channel or change channel positions manually after Auto Set Up or Auto Channel Set has taken place.
- Set the Guide Program Numbers for all the receivable stations manually.
- When you wish to timer-record a satellite programme with SHOWVIEW.
- Set the Guide Program Numbers for all satellite broadcasts received on your satellite tuner.

Turn on the TV and select the VIDEO channel (or AV mode).

Guide Program Number Set

ACCESS MAIN MENU SCREEN

Press MENU.

ACCESS INITIAL SET SCREEN

Press △▽ to move the highlight bar (pointer) to "INITIAL SET", then press **OK** or ▷.

ACCESS GUIDE PROG SET SCREEN

Press $\triangle \nabla$ to move the highlight bar (pointer) to "GUIDE PROG SET", then press **OK** or \triangleright .

ENTER GUIDE PROG NUMBER

Press $\Delta \nabla$ or **NUMBER** keys to enter the Guide Program number for the desired station as shown in the TV listings. Then press **OK** or \triangleright .



(Ex.) When inputting the Guide Program number 2 for ZDF.

ENTER RECEIVING CHANNEL POSITION NUMBER

Press $\Delta \nabla$ or **NUMBER** keys to input the number of the recorder's channel position on which the Guide Program number's broadcast is received. Then press **OK** or \triangleright .

If the satellite broadcast



is received on your recorder's auxiliary channel "L-2", select (Ex.) If ZDF is received on channel position 2.

"L-2" for the channel position.

Repeat steps 4 and 5 as necessary.

RETURN TO NORMAL SCREEN


Press MENU.

Guide Program Number

"Guide Program (GUIDE PROG) number" refers to the assigned TV station numbers, according to broadcast area, for SHOWVIEW timer recording. The Guide Program numbers can be found in most TV listings.

Clock Set

Turn on the TV and select the VIDEO channel (or AV mode).

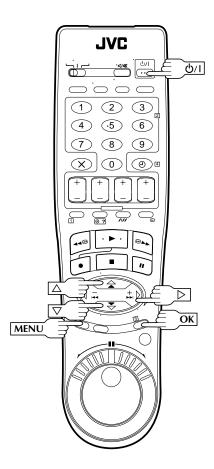

lust Clock

The Just Clock function provides accurate time keeping through automatic adjustments at regular intervals, by reading data from a PDC signal.

The Just Clock option can be set "ON" or "OFF" at the Clock Set screen (the default setting is "OFF"). Press \mathbf{OK} until the Just Clock setting begins blinking, then press $\Delta \nabla$ to change the setting.

IMPORTANT: If you turn off Just Clock, the accuracy of your recorder's built-in clock may be reduced, which could adversely effect timer recording. We recommend you to keep Just Clock on. In cases where the clock setting data from a PDC signal is incorrect, however, you are advised to keep Just Clock set to "OFF".

IMPORTANT

If you performed Auto Set Up (\square pg. 6) or Auto Channel Set (\square pg. 50), without ever having set the clock previously, the recorder's built-in clock is also set automatically. Perform the following steps only if —

- Auto Clock Set has not been performed correctly by Auto Set Up or Auto Channel Set.
 - or
- the recorder's memory backup has expired.
 - or
- you want to change Just Clock setting (
 "Just Clock" in the left column).

TURN THE RECORDER ON Press 6/1.

ACCESS MAIN MENU SCREEN

Press **MENU**.

ACCESS INITIAL SET SCREEN

Move the highlight bar (pointer) to "INITIAL SET" by pressing $\Delta \nabla$, then press **OK** or \triangleright .

ACCESS CLOCK SET SCREEN

Move the highlight bar (pointer) to "CLOCK SET" by pressing $\triangle \nabla$, then press **OK** or \triangleright . The Clock Set screen appears.



	CLOCK SET	
▼TIME // 0: 00	DATE 01.01	YEAR 98
	CLOCK : OFF	90
[▲▼] → © [MENU] : E	KIT	


SET DATE AND TIME

Press $\triangle \nabla$ to set the time, then press **OK** or \triangleright . The "date" display begins blinking. Repeat the same procedure to set the date and year.

- When you set the time, press and hold △∇ to change the time by 30 minutes.
- When you set the date, press and hold △∇ to change the date by 15 days.

1

Δ

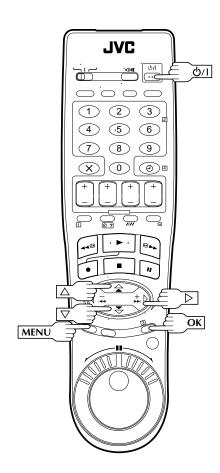

SET JUST CLOCK

The default setting is "OFF". Set as desired by pressing $\triangle \nabla$, then press **OK** or \triangleright .

- For the Just clock function, 🖙 "Just Clock" on page 58.
- If you set to "OFF", you can disregard the next step as you won't be able to receive regular clock adjustments.

SET CLOCK DATA SOURCE CHANNEL POSITION

The recorder is preset to receive clock setting and adjustment data from channel position 1. Press △∇ to set the channel position to the number representing the station transmitting clock setting data, then press **OK** or ▷.

START CLOCK OPERATION

Press **MENU**.

NOTES:

- Just Clock (when set to "ON") adjusts the recorder's built-in clock every hour, except for 23:00, 0:00, 1:00 and 2:00.
- Just Clock is not effective when . . .
 - the recorder's power is on.
 - the recorder is in the Timer mode.
 - a difference of more than 3 minutes exists between the built-in clock's time and the actual time.
- the recorder is in the Auto Satellite Prog Rec mode (☐ pg. 32).
- the recorder is in the Power Save mode (☐ pg. 11).
- If Just Clock is set to "ON", the recorder's clock is automatically adjusted at the start/end of Summer Time.
- Just Clock may not function properly depending on the reception condition.

6

U

Set the input mode to "L-1", "L-2", "F-1" or "S-1".



Before requesting service for a problem, use this chart and see if you can repair the trouble yourself. Small problems are often easily corrected, and this can save you the trouble of sending your video recorder off for repair.

corrected, and this can save you the trouble	e of sending your video recorder off for repair.	•		
POWER				
SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION		
1. No power is applied to the recorder.	The mains power cord is disconnected.	Connect the mains power cord.		
The clock is functioning properly, but the recorder cannot be powered.	• "@" is displayed on the display panel with Auto Timer set to "OFF".	Press the ① button to turn the "①" indicator off.		
3. The remote control won't function.	The batteries are discharged.	Replace the dead batteries with new ones.		
	 The VCR/TV/SAT switch is in the wrong position. 	Set the switch to the position corresponding with the unit you want to operate.		
TAPE TRANSPORT				
SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION		
The tape does not run during recording.	"" is displayed on the display panel.	Press PLAY to turn the "" indicator off.		
The tape will not rewind or fast- forward.	 The tape is already fully rewound or fast-forwarded. 	Check the cassette.		
PLAYBACK				
SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION		
The playback picture does not appear while the tape is running.	If you're using the RF OUT connection	If you are using the RF OUT connection		
appear write are tape is ruilling.	the TV receiver's channel selector is not set to the VIDEO channel the recorder's VIDEO channel has not been correctly set. • If you're using the AV or S-VIDEO connection, the TV receiver is not set to the AV mode.	set the TV receiver to the VIDEO channel. (『 pg. 7) perform "Video Channel Set". (『 pg. 49) If you are using the AV or S-VIDEO connection, set the TV to its AV mode.		
2. Noise appears during visual search.	 This is normal during visual search other than TimeScan. 			
Noise appears during normal playback.	 The automatic tracking mode is engaged. 	Try manual tracking. (F pg. 15)		
 The playback picture is blurred or interrupted while TV broadcasts are clear. 	● The video heads may be dirty.	Consult your JVC dealer.		
5. Breaks are noticeable in Hi-Fi soundtrack	Automatic tracking is engaged.	Engage and adjust tracking manually. (pg. 15)		
RECORDING				
SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION		
Recording cannot be started.	There is no cassette loaded, or the cassette loaded has had its Record Safety tab removed.	Insert a cassette, or using adhesive tape, reseal the slot where the tab was removed.		
2. TV broadcasts cannot be recorded.	• "L-1", "L-2", "F-1" or "S-1" has been selected as the input mode.	Set to the desired channel.		
3. Tape-to-tape editing is not possible.	 The source (another video recorder, camcorder) has not been properly connected. All necessary power switches have not been turned on. The input mode is not correct. 	Confirm that the source is properly connected. Confirm that all units' power switches are turned on. Set the input mode to "L-1", "L-2", "F-1" or "S-1".		
Camcorder recording is not possible.	The camcorder has not been properly connected. The input mode is not correct.	Confirm that the camcorder is properly connected.		

• The input mode is not correct.

TIMER RECORDING				
SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION		
1. Timer recording won't work.	The clock and/or the timer have been set incorrectly.The timer is not engaged.	Re-perform the clock and/or timer settings. Press ⊕ and confirm that "⊕" is displayed on the display panel.		
2. Timer programming is not possible.	• Timer recording is in progress.	Timer programming can't be performed while a timer recording is in progress. Wait until it finishes.		
3. "⊕" and "⊡⊡" on the display panel won't stop blinking.	 The timer is engaged but there's no cassette loaded. 	Load a cassette with the Record Safety tab intact, or cover the hole using adhesive tape.		
4. The cassette is automatically ejected, and "②" and "⑤" on the display panel won't stop blinking.	 The loaded cassette has had its Record Safety tab removed. 	Remove the cassette and cover the hole with adhesive tape, or insert a cassette with the Record Safety tab intact.		
5. "O" blinks for 10 seconds and the Timer mode is disengaged.	 ① has been pressed when there are no programs in memory, or the timer record information has been programmed incorrectly. 	Check the programmed data and reprogram as necessary, then press ⊕ again.		
6. The cassette is automatically ejected, the power shuts off and "⊕" and "⊡" won't stop blinking.	 The end of the tape was reached during timer recording. 	The programme may not have been recorded in its entirety. Next time make sure you have enough time on the tape to record the entire programme.		
7. SHOWVIEW does not timer-record properly.	 The recorder's channel positions have been set incorrectly. 	Refer to "Guide Program Number Set" and re-perform the procedure (137 pg. 57).		
OTHER PROBLEMS				
SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION		
Whistling or howling is heard from the TV during camcorder record- ing.	The camcorder's microphone is too close to the TV.The TV's volume is too high.	Position the camcorder so its microphone is away from the TV. Turn the TV's volume down.		
When scanning channels, some of them are skipped over.	 Those channels have been designated to be skipped. 	If you need the skipped channels, restore them (pg. 52).		
3. The channel cannot be changed.	• Recording is in progress.	Press PAUSE to pause the recording, change channels, then press PLAY to resume recording.		
Channel settings that were made manually seem to have changed or disappeared.	 After the manual settings were made, Auto Channel Set was performed. 	Perform manual setting again.		
5. No channels are stored in the recorder's memory.	 The TV aerial cable was not connected to the recorder when Auto Set Up was performed. 	Connect the TV aerial cable to the recorder properly and turn off the recorder power once, then turn the recorder power back on again. The recorder will try Auto Set Up again (F) pg. 6).		
6. The remote control won't operate the TV or satellite tuner.	• The remote control brand setting is incorrect.	Re-set the remote control to the correct brand (127 pg. 34, 35).		

PLAYBACK Q. What happens if the end of the tape is reached during playback or search? **A.** The tape is automatically rewound to the beginning. Q. Can the video recorder indefinitely remain in the still mode? **A.** No. It stops automatically after 5 minutes to protect the heads. Q. When returning from multi-speed search to normal playback, the picture is disturbed. Should I be concerned about this? **A.** No, it is normal. Q. Other than preventing further recording, what effect does removing the Record Safety tab have? A. It disables marking of index codes. Q. Sometimes, during Index Search, the video recorder can't find the programme I want to see. Why not? A. There may be index codes too close together. RECORDING Q. When I pause and then resume a recording, the end of the recording before the pause is overlapped by the beginning of the continuation of recording. Why does this happen? A. This is normal. It reduces distortion at the pause and resume points. Q. Can the video recorder indefinitely remain in the **Record-Pause mode?** A. No. The video recorder goes to its Stop mode

automatically after 5 minutes to protect the heads.

Q. What happens if the tape runs out during recording? **A.** The video recorder automatically rewinds it to the

TIMER RECORDING


- Q. "O" and "O" remain lit on the display panel. Is there a problem?
- A. No. This is a normal condition for a timer recording in progress.
- Q. Can I programme the timer while I'm watching a tape or a TV broadcast?
- A. You won't see the picture as it is replaced by the onscreen menu, but the audio from the programme or tape you're viewing can be heard.
- Q. Is it possible to timer-record a TV programme broadcast in 2000?
- **A.** Yes, it is possible.

ATTENTION

beginning.

This recorder contains microcomputers. External electronic noise or interference could cause malfunctioning. In such cases, switch the recorder off and unplug the mains power cord. Then plug it in again and turn the recorder on. Take out the cassette. After checking the cassette, operate the unit as usual.


FRONT VIEW

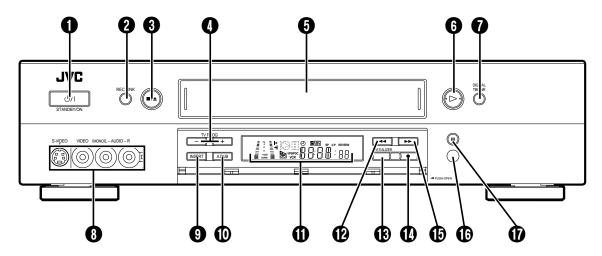


- 1 STANDBY/ON ७/I Button 🖙 pg. 6
- 2 REC LINK Button ☐ pg. 32
- 3 STOP/EJECT Button ☐ pg. 13
- **4** TV PROG +/− Buttons 🖙 pg. 20
- **6** Cassette Loading Slot
- 6 PLAY Button F pg. 13
- 7 DIGITAL TBC/NR Button ☐ pg. 16

- **9** INSERT Button ☞ pg. 40
- Audio Dubbing [A. DUB] Button
 □ pg. 44
- 1 Display Panel 🖙 pg. 64
- **1** Rewind [REW] Button **□** pg. 13
- SPATIALIZER Button □ pg. 17
- RECORD Button
 pg. 20
- 15 Fast-Forward [FF] Button ☐ pg. 13
- (b) Infrared Beam Receiving Window
- **1** PAUSE Button ☞ pg. 14

Attach the provided connector cover when you do not use the front panel connectors.

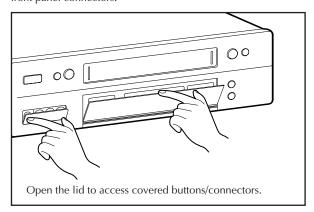


REAR VIEW

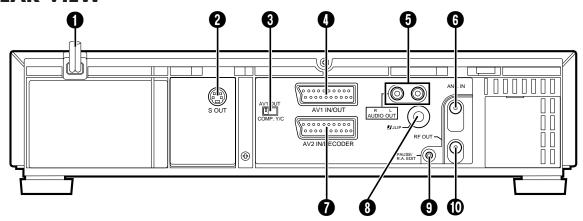

- **1** Mains Power Cord □ pg. 4
- 2 S-Video OUT Connector F pg. 5
- 3 AV1 OUT Switch ☐ pg. 4
- **4** AV1 IN/OUT Connector **□** pg. 4, 39
- **5** AUDIO OUT (L/R) Connectors ☐ pg. 48
- 6 ANT. IN Connector ☐ pg. 4

- AV2 IN/DECODER Connector F pg. 39, 46, 47
- **3** J terminal [JLIP (Joint Level Interface Protocol) Connector] 🖙 pg. 45
- **9** Remote PAUSE Connector ☞ pg. 37 R.A. EDIT Connector r pg. 42
- RF OUT Connector
 pg. 4

DISPLAY PANEL

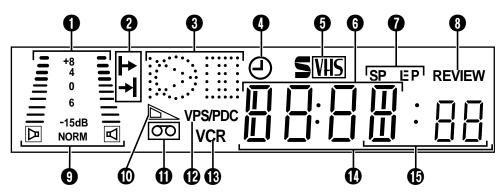


- 1 B.E.S.T. Picture System Display 🖙 pg. 24 Audio Level Indicator pg. 23
- Programme Time Indicators
 pg. 28
- 3 Symbolic Mode Indicators

PLAY: FF/REW VARIABLE SHUTTLE SEARCH:		STILL: SLOW:	p-III
		RECORD:	
SHOTTEL SEARCH.		RECORD PAUSE:	
AUDIO DUBBING:		()	
AUDIO DUBBING PAUSE:			模皿
INSERT:			O
INSERT PAUSE:			
AUDIO DUBBING INSERT:			泠
AUDIO DUBBING INSERT PAUSE:			-0/11

- ¶ "Timer" Indicator
 □ pg. 27, 29
- **5** S-VHS Indicator 🖙 pg. 22
- 6 Channel/Clock Display 🖙 pg. 8
- 7 Tape Speed Indicators 🖙 pg. 20 EP is only for NTSC playback
- 8 Instant REVIEW Indicator

 pg. 15
- Audio Mode Indicator pg. 17
 Tape Remaining Time Indicator pg. 21
- 10 "Cassette Loaded" Mark
- **②** VPS/PDC Indicator □ pg. 27, 29
- **13** VCR Indicator □ pg. 21
- Counter/Remain Display
- **(b)** Mode Display (L-1, L-2, F-1 or S-1)

REMOTE CONTROL

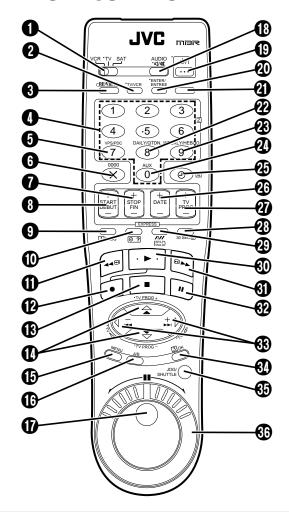

Buttons with a small dot on the left side of the name can also be used to operate your TV $\square P$ g 34.

- VCR/TV/SAT Switch 🖙 pg. 34, 35
- **2** TV/VCR Button ☐ pg. 21, 34
- 3 REVIEW Button ☞ pg. 15
- NUMBER Keys 🖙 pg. 20, 26
- **5** VPS/PDC Button 🖙 pg. 27, 29
- **6** X Button **□** pg. 30 0000 Button **□** pg. 21
- **1** STOP +/− Button 🖙 pg. 28
- **8** START +/− Button 🖙 pg. 28
- 9 PROG Button 🖙 pg. 26
- **⑩ ② ?** Button **□** pg. 30
- Rewind [REW] Button F pg. 13, 14
- Record Button
 pg. 20
- **13** Stop Button **□** pg. 13, 20
- **10** △ ∇ Button 🖙 pg. 6 TV PROG +/– 🖙 pg. 34
- **ⓑ** MENU Button ☞ pg. 9
- ⑥ A/B Code Button ☞ pg. 33
- **1** JOG Dial □ pg. 14
- AUDIO Button ☐ pg. 17
 - **□**/**□**/ (TV Muting) Button **□** pg. 34
- 19 STANDBY/ON ७/I Button ☞ pg. 6
- ② ENTER Button 🖙 pg. 34
- **②** --: -- Button ☞ pg. 21
- **②** DAILY Button □ pg. 27, 29
- 3 WEEKLY Button ☐ pg. 27, 29
- **4** AUX Button 🖙 pg. 37, 38
- **② ②** Button □ pg. 27, 29
- **②** DATE +/− Button **□** pg. 28
- **②** TV PROG +/− Button 🖙 pg. 20
- **23** 30 SEC Button **□** pg. 15
- (Auto Tracking) Button F pg. 15 SP/LP Button F pg. 20
- 30 Play Button 🖙 pg. 13
- 3 Fast Forward [FF] Button ☐ pg. 13, 14
- **②** Pause Button 🖙 pg. 14
- **③ ♦ Button □ pg.** 14, 18 **TV △** +/–**Button □ pg.** 34
- **3** OK Button □ pg. 7
- ⑤ JOG/SHUTTLE Button ☞ pg. 14
- 36 SHUTTLE Ring ☐ pg. 14

How To Use

The remote control can operate most of your video recorder's functions, as well as basic functions of TV sets and satellite tuners of JVC and other brands. 🖙 pg. 34, 35.

- Point the remote control toward the sensor window.
- The maximum operating distance of the remote control is about 8 m.

NOTES:

- When inserting the batteries, be sure to insert in the correct directions as indicated under the battery cover.
- If the remote control doesn't work properly, remove its batteries, wait a short time, replace the batteries and then try again.

GENERAL

Power requirement : AC 220 – 240 $V \sim$, 50/60 Hz

Power consumption

Power on : 26 W Power off : 5.5 W

Power save

(HR-S9500E only): 3 W

Temperature

Operating $: 5^{\circ}\text{C} \text{ to } 40^{\circ}\text{C}$ Storage $: -20^{\circ}\text{C} \text{ to } 60^{\circ}\text{C}$ Operating position : Horizontal onlyDimensions (WxHxD) $: 437 \times 109 \times 339 \text{ mm}$

Weight : 5.0 kg

Format : S-VHS/VHS PAL standard

Maximum recording time

(SP) : 240 min. with E-240 video

cassette

(LP) : 480 min. with E-240 video

cassette

VIDEO/AUDIO

Signal system : PAL-type colour signal and

CCIR monochrome signal,625 lines 50 fields

Recording system : DA4 (Double Azimuth) head

helical scan system

Signal-to-noise ratio : 45 dB

Horizontal resolution : 250 lines (VHS) 400 lines (S-VHS)

Frequency range : 70 Hz to 10,000 Hz

(Normal audio) 20 Hz to 20,000 Hz

(Hi-Fi audio)

Input/Output : 21-pin scart connectors :

 $IN/OUT \times 1$, $IN/DECODER \times 1$

RCA connectors:

VIDEO IN x 1, AUDIO IN x 1,

AUDIO OUT x 1 S-Video connectors: IN x 1, OUT x 1

TUNER/TIMER

TV channel storage

capacity : 99 positions (+AUX position)

Tuning system : Frequency synthesized tuner

Channel coverage : VHF 47 - 89/104 - 300/

302 – 470MHz UHF 470 – 862MHz

Aerial output : UHF channels 22 – 69

(Adjustable)

Memory backup time : Approx. 60 min.

ACCESSORIES

Provided accessories : RF cable,

Infrared remote control unit,

"R6" battery x 2, S-Video cable,

Connector cover (for front panel connectors)

parier connectors)

Specifications shown are for SP mode unless otherwise specified.

É.& O.E. Design and specifications subject to change without notice.

МЕМО		



Auto Set Up - referring to the display panel

The Auto Set Up function sets the tuner channels, clock, Guide Program numbers and video channel* automatically.

* Useful for RF connection users.

BEFORE YOU START PLEASE MAKE SURE THAT:

- The TV aerial cable is connected to the ANT.IN jack on the rear panel of the video recorder.
- The video recorder's mains power cord is connected to a mains outlet.
- The video recorder is turned off.
- Load batteries into the remote control.
- **1** Press U/I (recorder/remote).

567%--\$

Press △▽ (remote) to select the international telephone country code.

(Ex.) DEUTSCHLAND is selected.

S F T "49

• If you have selected a country code other than 32 (BELGIUM) or 41 (SUISSE), go to step 3.

International Telephone Country Code : 41 SUISSE SUOMI · 358 : 39 **PORTUGAL** ITALIA : 351 : 49 **ESPAÑA DEUTSCHLAND** : 34 BELGIUM NORGE : 47 . 32 NEDERLAND : 31 SVERIGE : 46 GREECE DANMARK : 45 : 30 OTHERS ÖSTERREICH : 43

• If you have selected 32 (BELGIUM) or 41 (SUISSE), press **OK** (remote) and select the language code by pressing △∇ (remote), then go to step 3.

(Ex.) FRANCAIS is selected for BELGIUM



Language Code ENGLISH **NEDERLANDS** : 01 : 06 **DEUTSCH** : 02 **SVENSKA** : 07 **FRANCAIS** . 03 NORSK . 08 ITALIANO : 04 SUOMI : 09 CASTELLANO : 05 DANSK : 10

Press **OK** (remote). <u>Do NOT</u> press any button on the video recorder or remote control until the display panel shows as follows.

Video Channel

- If "--:--" appears on the display panel, see page 6 of the instructions.
- If you have connected the video recorder to your TV via RF connection, press **OK** to finish the Auto Set Up. To view picture signals from the video recorder, set your TV to the Video Channel.
- If you have connected the video recorder to your TV via AV connection, press **TV PROG** until the display panel shows "_OUT- —" to set the Video Channel to off, then press **OK** to finish the Auto Set Up. To view picture signals from the video recorder, set your TV to its AV mode.
- * Once you have performed Auto Set Up, even if the recorder's memory backup has expired, the recorder will not perform Auto Set Up again. Perform tuner setting (pg. 50), clock setting (pg. 58) and/or Video Channel setting (pg. 49) as required.

FOR MORE INFORMATION SEE INSTRUCTIONS/P6



