

JVC



CD RECEIVER

KD-SX838/S737

ENGLISH

RECEPTOR CON CD


KD-SX838/S737

ESPAÑOL

RECEPTEUR CD


KD-SX838/S737

FRANÇAIS

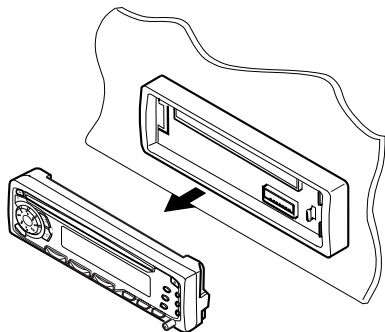


KD-SX838

DIGIFINE

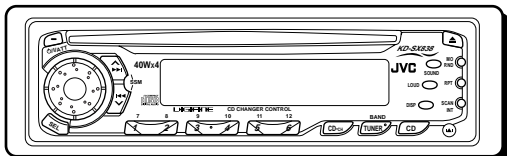

KD-S737

DIGIFINE

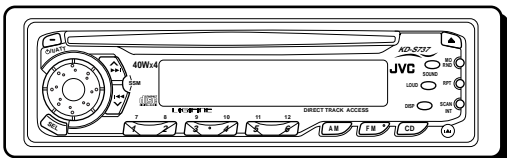

For installation and connections, refer to the separate manual.
Para la instalación y las conexiones, refiérase al manual separado.
Pour l'installation et les raccordements, se référer au manuel séparé.



INSTRUCTIONS

MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS

For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

FSUN3037-631S

[J]



INFORMATION (For U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Identification and Certification labels

Bottom of the main unit

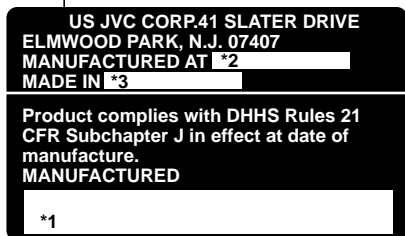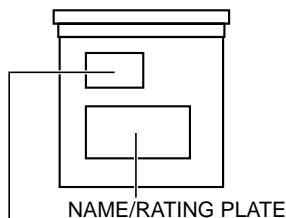

Notes:

- *1 The date of manufacture.
- *2 The ID code of manufacturing plant.
- *3 Marking of country origin.

BEFORE USE

* For safety...

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

IMPORTANT FOR LASER PRODUCTS (For U.S.A. only)

Precautions:

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

* Temperature inside the car...

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

CONTENTS

BASIC OPERATIONS 4



RADIO OPERATIONS 5

Listening to the radio 5

Storing stations in memory 6

FM station automatic preset: SSM 6

Manual preset..... 7

Tuning into a preset station 8

Other convenient tuner functions 9

Scanning broadcast stations 9

Selecting FM reception sound..... 9

Changing the AM/FM channel intervals 9



CD OPERATIONS 10

Playing a CD 10

Locating a track or a particular portion on a CD 11

Selecting CD playback modes 12

Other convenient CD functions 13

Prohibiting CD ejection 13



SOUND ADJUSTMENTS 14

Turning on/off the loudness function 14

Selecting preset sound modes 14

Adjusting the sound 15

Storing your own sound adjustments 16



OTHER MAIN FUNCTIONS 17

Setting the clock 17

Turning on/off the key-touch tone 18

Detaching the control panel 19



CD CHANGER OPERATIONS 20

(ONLY FOR KD-SX838)

Playing CDs 20

Selecting CD playback modes 22



MAINTENANCE 23

Handling CDs 23


TROUBLESHOOTING 24



SPECIFICATIONS 25



BASIC OPERATIONS

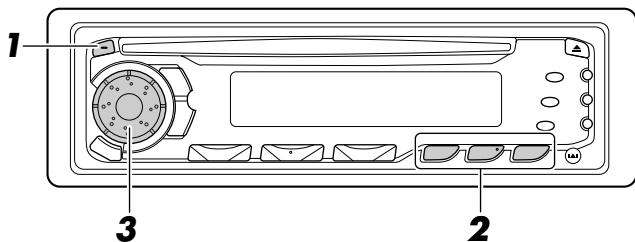**Note:**

When you use this unit for the first time, set the built-in clock correctly, see page 17.

1

 
Turn on the power.

Note on One-Touch Operation:

When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

2

KD-SX838




Select the source.

To operate the tuner, see pages 5 – 9.


To operate the CD player, see pages 10 – 13.

 KD-S737



ONLY FOR KD-SX838:

To operate the CD changer, see pages 20 – 22.

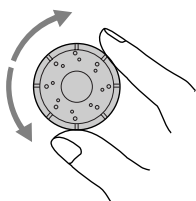3

Adjust the volume.



Volume level appears.

4

Adjust the sound as you want (see pages 14 – 16).

To drop the volume in a moment

Press \odot /I/ATT briefly while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment.


To resume the previous volume level, press the button briefly again.

To turn off the power


Press \odot /I/ATT for more than 1 second.

Listening to the radio


KD-SX838

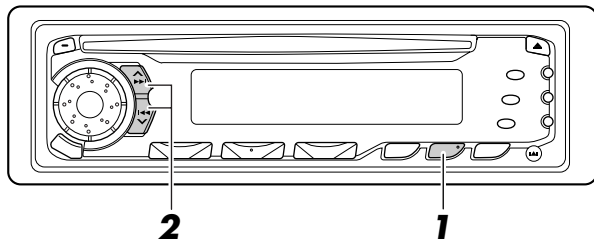

KD-S737

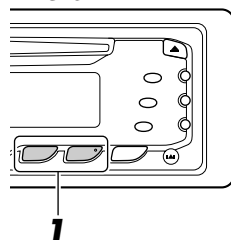


1 KD-SX838

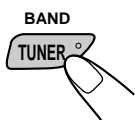


Select the band (FM1, FM2, FM3 or AM).

 
You can select any one of FM1, FM2, and FM3 to listen to an FM station.




KD-S737

 

Audio level indicator

 


2

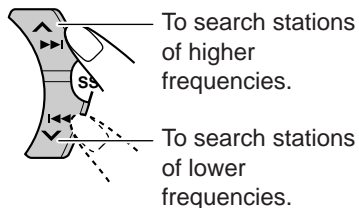

Start searching a station.

 When a station is received, searching stops.



To stop searching before a station is received, press the same button you have pressed for searching.

To tune in a particular frequency without searching:

1 Select the band (FM or AM).

For KD-SX838: Press TUNER/BAND repeatedly.

For KD-S737: Press FM or AM.

2 Press and hold SSM $\blacktriangleright\blacktriangleright$ \blacktriangle or SSM $\blacktriangleleft\blacktriangleleft$ \blacktriangledown until "M" starts flashing on the display.

Now you can manually change the frequency while "M" is flashing.

3 Press SSM $\blacktriangleright\blacktriangleright$ \blacktriangle or SSM $\blacktriangleleft\blacktriangleleft$ \blacktriangledown repeatedly until the frequency you want is reached.

- If you hold down the button, the frequency keeps changing until you release the button.




Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.



- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2, and FM3).

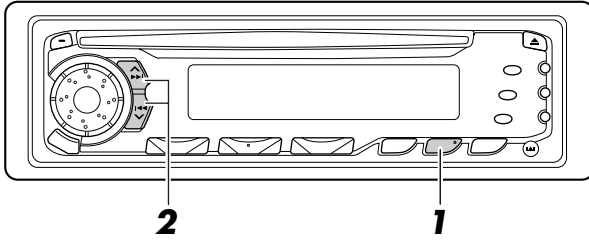


1 KD-SX838

  


Select the FM band number (FM1, FM2 or FM3) you want to store FM stations into.

 
KD-S737



2

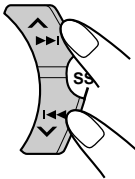

 Press and hold both buttons for more than 3 seconds.



"SSM" appears, then disappears when automatic preset is over.


Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency).

When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

Manual preset


You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band

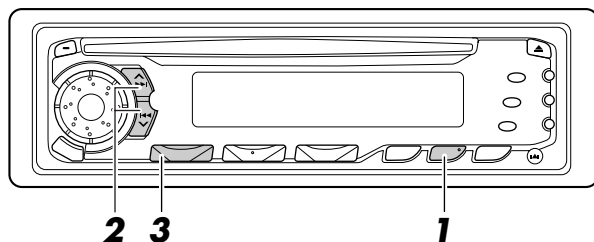


1 KD-SX838 KD-S737

 Select the FM1 band.




2

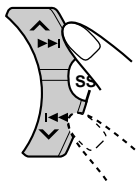


Tune into a station of 88.3 MHz.

 
See page 5 to tune into a station.



3

 

 Press and hold the button for more than 1 second.



Preset number "1" starts flashing for a while.

4

Repeat the above procedure to store other stations into other preset numbers.

Notes:

- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.




Tuning into a preset station


You can easily tune into a preset station.

Remember that you must store stations first. If you have not stored them yet, see pages 6 and 7.


KD-SX838

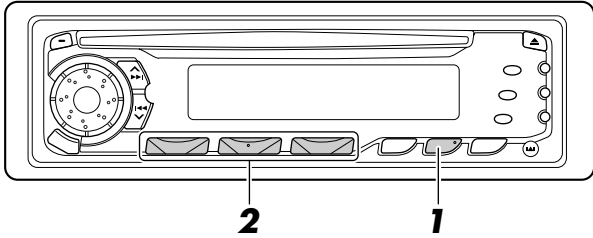


KD-S737

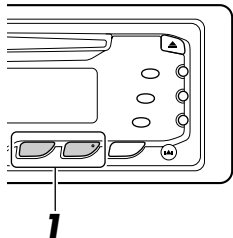

 
1 KD-SX838 **BAND TUNER** Select the band (FM1, FM2, FM3 or AM) you want.




KD-S737

 

 2 Select the number (1 – 6) for the preset station you want.



Other convenient tuner functions

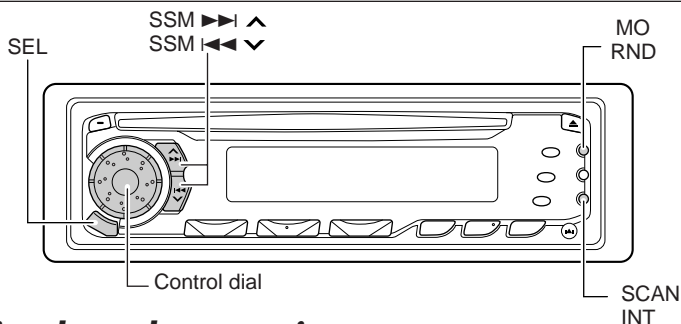

Scanning broadcast stations

When you press SCAN/INT (Scan/Intro) while listening to the radio, station scanning starts. Each time a broadcast is tuned in, scanning stops for about 5 seconds (tuned frequency number flashes on the display), and you can check what program is now being broadcast.

If you want to listen to that program, press the same button again to stop scanning.

Selecting FM reception sound

When an FM stereo broadcast is hard to receive:

Press MO/RND (Mono/Random) while listening to an FM stereo broadcast. The sound you hear becomes monaural but reception will be improved.

Lights up when receiving an FM broadcast in stereo.



To restore the stereo effect, press the same button again.

Changing the AM/FM channel intervals

When using this unit in an area other than North or South America:

When this unit is shipped from the factory, the channel intervals are set to 10 kHz for AM and 200 kHz for FM. You can change the channel intervals by following the procedure below.

- 1 Press SEL (select) for more than 2 seconds.
"CLOCK H," "CLOCK M," "BEEP" or "AREA" appears on the display.
- 2 If "AREA" does not appear, press SSM **▶▶** **▲** or SSM **◀◀** **▼** until it appears.
- 3 Rotate the control dial clockwise.
"AREA EU" appears and the channel intervals are set to 9 kHz for AM and 50 kHz (for manual tuning) / 100 kHz (for searching) for FM.


To reset to the factory setting, follow the above step 1 and 2, then rotate the control dial counterclockwise in step 3 ("AREA US" appears on the display.)

AREA EU: Select this when used in an area other than North and South America.
 AREA US: Select this when used in North or South America.




CD OPERATIONS

Playing a CD

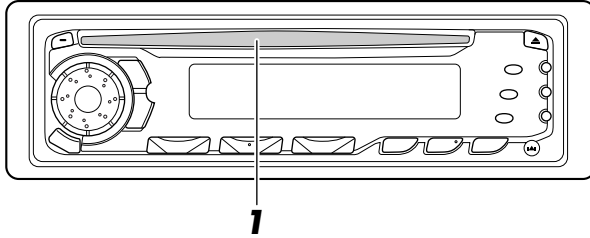


1

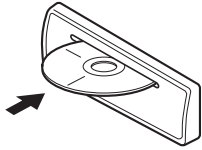

Insert a disc into the loading slot.

The unit turns on, draws a CD and starts playback automatically.

- When a CD is inserted upside down, "EJECT" appears on the display and the CD automatically ejects.

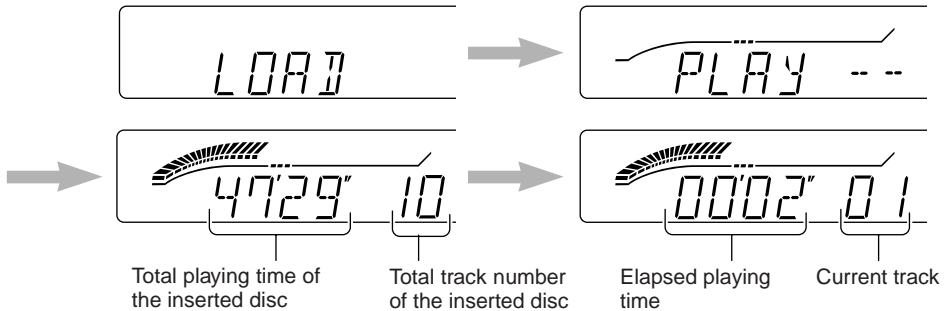

Note on One-Touch Operation:

When a CD is already in the loading slot, pressing CD turns on the unit and starts playback automatically.

CAUTION on Volume Setting

CDs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a CD and adjust it as required during playback.

To stop play and eject the CD

Press ▲.


CD play stops and the CD automatically ejects from the loading slot. The source changes to the tuner (you will hear the last received station).

If you change the source to AM/FM (or CD changer for KD-SX838 only), the CD play also stops (without ejecting the CD this time).


- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)
- You can eject the CD even when the unit is turned off.




Locating a track or a particular portion on a CD

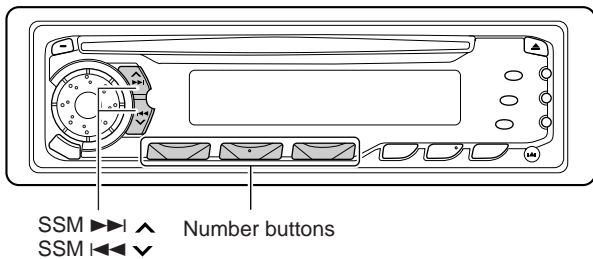


To fast forward or reverse the track

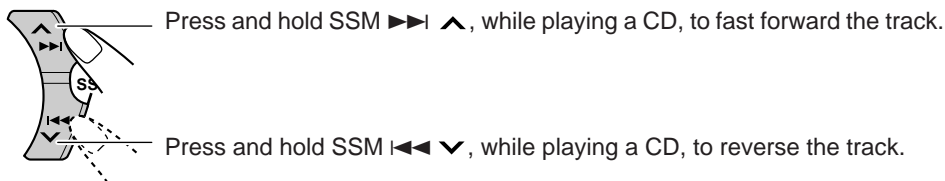

To go to the next track or the previous track

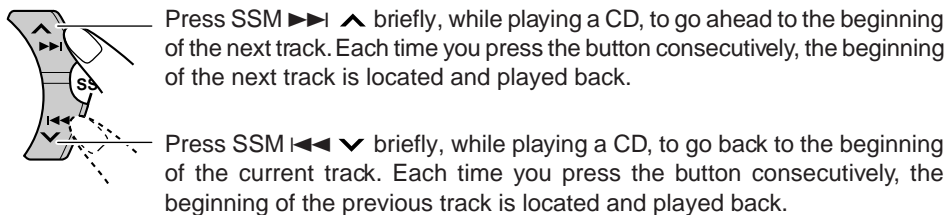

To go to a particular track directly

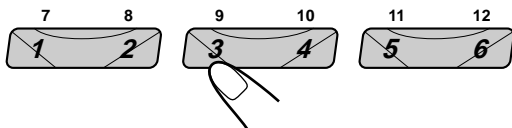


Press the number button corresponding to the track number to start its playback.


- To select a track number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a track number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.



Selecting CD playback modes

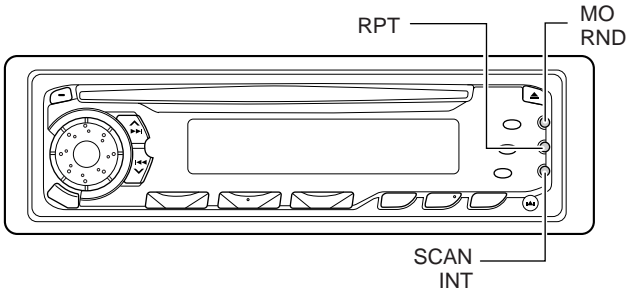

 
To play back tracks at random (Random Play)




You can play back all tracks on the CD at random.

Each time you press MO/RND (Mono/Random) while playing a CD, Random Play mode turns on and off alternatively.

 When Random Play is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.



 
To play back tracks repeatedly (Repeat Play)



You can play back the current track repeatedly.

Each time you press RPT (Repeat) while playing a CD, Repeat Play mode turns on and off alternatively.

 When Repeat Play is turned on, the RPT indicator lights up on the display.



Track number of the currently playing track

To play back the beginning of each track (Intro Play)



You can play back the first 15 seconds of each track in sequence. So you can check what tunes are in the CD.

When you press SCAN/INT (Scan/Intro) while playing a CD, Intro Play starts. During Intro Play, the track number of the current playing track flashes on the display.


To stop Intro Play and start playing the current track, press SCAN/INT again.



Track number of the currently playing track



Other convenient CD functions

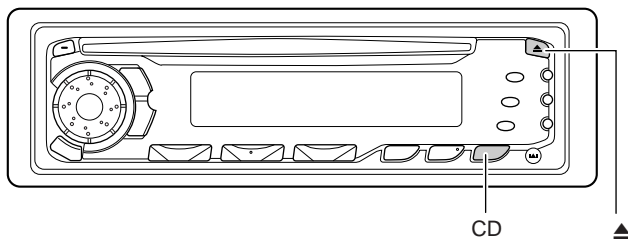

Prohibiting CD ejection

You can prohibit CD ejection and “lock” a CD in the loading slot.

Press and hold CD and ▲ for more than 2 seconds. “EJECT” flashes on the display for about 5 seconds, and the CD is “locked.”



To cancel the prohibition and “unlock” the CD, press and hold CD and ▲ for more than 2 seconds again. “EJECT” appears on the display, and the CD ejects from the loading slot.



SOUND ADJUSTMENTS

Turning on/off the loudness function

The human ear is less sensitive to low and high frequencies at low volumes. The loudness function can boost these frequencies to produce a well-balanced sound at low volume levels.

 
Each time you press LOUD, the loudness function turns on and off alternatively.



Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre:

Each time you press SOUND, the sound mode changes as follows.



Indication	For:	Preset values		
		Bass	Treble	Loudness
SCM OFF	(Flat sound)	00	00	On
BEAT	Rock or disco music	+2	00	On
SOFT	Quiet background music	+1	-3	Off
POP	Light music	+4	+1	Off


Notes:

- You can adjust the preset sound mode to your preference, and store it in memory. If you want to adjust and store your original sound mode, see “Storing your own sound adjustments” on page 16.
- To adjust only the bass and treble reinforcement levels to your preference, see “Adjusting the sound” on page 15.



Adjusting the sound


You can adjust the treble/bass sound and the speaker balance.

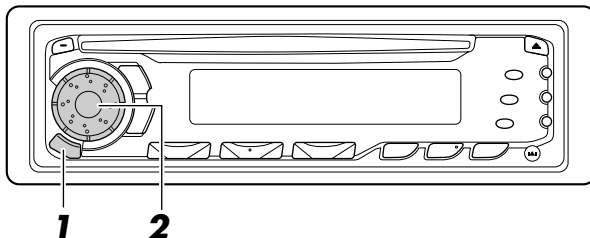

1



 Select the item you want to adjust.




Indication	To do:	Range
BAS (bass)	Adjust the bass	-6 (min.) — +6 (max.)
TRE (treble)	Adjust the treble	-6 (min.) — +6 (max.)
FAD (Fader)*	Adjust the front and rear speaker balance	R6 (rear only) — F6 (front only)
BAL (Balance)	Adjust the left and right speaker balance	L6 (left only) — R6 (right only)
VOL (Volume)	Adjust the volume	00 (min.) — 50 (max.)

Note:

* If you are using a two-speaker system, set the fader level to "00" (center).

2

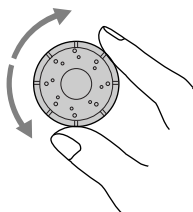

Adjust the level.


Note:

Normally the control dial work as the volume control. So you do not have to select "VOL" to adjust the volume level.



Storing your own sound adjustments

You can adjust the sound modes (BEAT, SOFT, POP: see page 14) to your preference and store your own adjustments in memory.

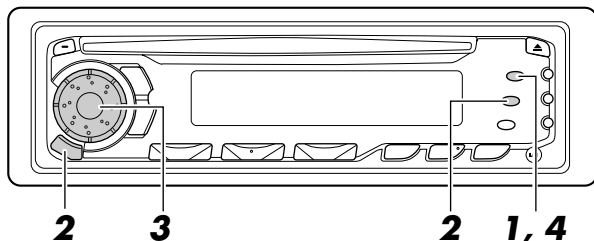

1



Call up the sound mode you want to adjust.
See page 14 for details.

**Within
5 seconds**

2




To adjust the bass or treble sound level
Select "BAS" or "TRE."



To turn on or off the loudness function
Each time you press LOUD, the loudness function turns on
and off alternatively. (→ go to step 4)

**Within
5 seconds**

3

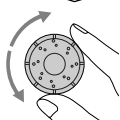

Adjust the bass or treble level.
See page 15 for details.

**Within
5 seconds**

4



Press and hold SOUND until the sound mode
you have selected in step 1 flashes on the
display.
Your setting is stored in memory.


5

Repeat the same procedure to store other settings.

To reset to the factory settings

Repeat the same procedure and reassign the preset values listed in the table on page 14.

Setting the clock

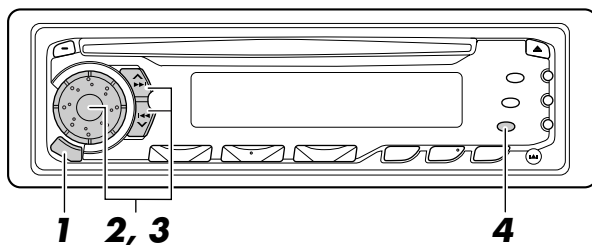


1



Press and hold the button for more than 2 seconds.

“CLOCK H,” “CLOCK M,” “BEEP” or “AREA” appears on the display.

2

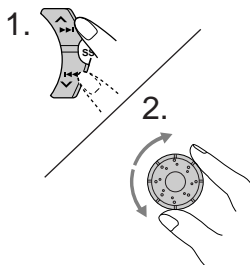


Set the hour.

1. Select “CLOCK H” if not shown on the display.




2. Adjust the hour.

3

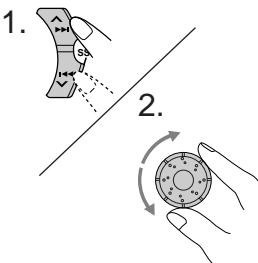

Set the minute.

 1. Select “CLOCK M.”



2. Adjust the minute.

4



Start the clock.

To check the current clock time (changing the display mode)


Press DISP repeatedly. Each time you press the button, the display mode changes as follows.

<p>During tuner operation:</p> <p style="text-align: center;">Frequency ↔ Clock</p>	<p>During CD operation:</p> <p style="text-align: center;">Elapsed playing time ↔ Clock</p>
--	--

- If the unit is not in use when you press DISP, the power turns on, the clock time is shown for 5 seconds, then the power turns off.

Turning on/off the key-touch tone

You can deactivate the key-touch tone if you do not want to make it beep when you press a button. (When shipped from the factory, the key-touch tone is activated.)

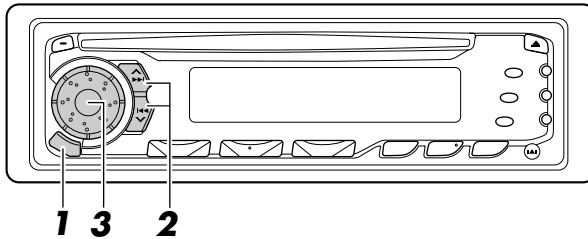


1



Press and hold the button for more than 2 seconds.

“CLOCK H,” “CLOCK M,” “BEEP” or “AREA” appears on the display.


2

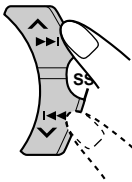

Select “BEEP” if not shown on the display.

→ CLOCK H → CLOCK M → BEEP → AREA

3

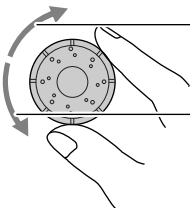

To activate the key-touch tone (ON).

To deactivate the key-touch tone (OFF).


Detaching the control panel

You can detach the control panel when leaving the car. When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


How to detach the control panel

Before detaching the control panel, be sure to turn off the power.


- 1 Unlock the control panel.

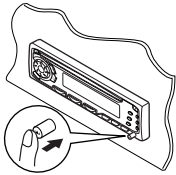

- 2 Lift and pull the control panel out of the unit.

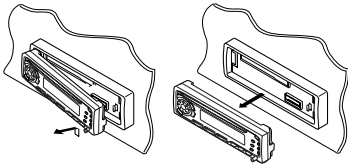


- 3 Put the detached control panel into the case provided.

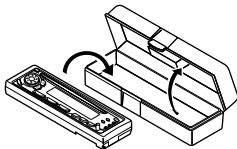


How to attach the control panel

- 1 Insert the left side of the control panel into the groove on the panel holder.

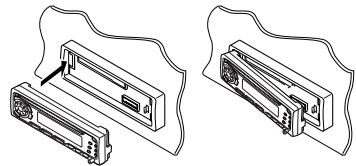


- 2 Press the right side of the control panel to fix it to the panel holder.

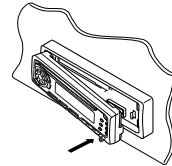

Note on cleaning the connectors:

If you frequently detach the control panel, the connectors will deteriorate.

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

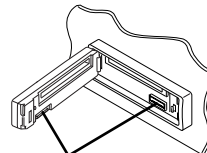

Connectors



CD CHANGER OPERATIONS

This section is **ONLY FOR KD-SX838**, when used with a JVC CD automatic changer (separately purchased).

We recommend that you use one of the CH-X series with your KD-SX838.


If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO CD" or "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 – RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

Playing CDs

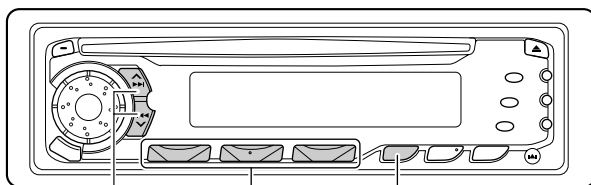

SSM ▶▶ ▲ Number buttons
SSM ◀◀ ▼

1

1



Select the CD automatic changer.

Playback starts from the first track of the first disc.
All tracks of all discs are played back.



Disc number

Track number



Elapsed playing time

(The clock time is shown if you have pressed DISP to see the clock time. See page 18.)

Note on One-Touch Operation:

When you press CD-CH, the power automatically comes on. You do not have to press /I/ATT to turn on the power.




To fast forward or reverse the track

- Press and hold SSM **▶▶|▲**, while playing a CD, to fast forward the track.
- Press and hold SSM **|◀◀▼**, while playing a CD, to reverse the track.

To go to the next track or the previous track

- Press SSM **▶▶|▲** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next track is located and played back.
- Press SSM **|◀◀▼** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.


To go to a particular disc directly

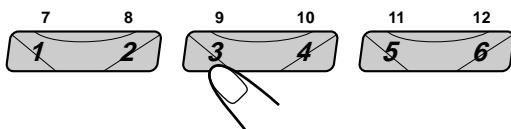

Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).


- To select a disc number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

Ex. When disc number 3 is selected

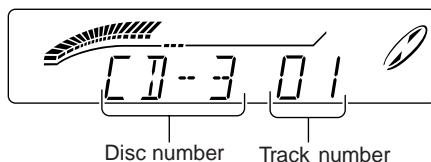



Selecting CD playback modes

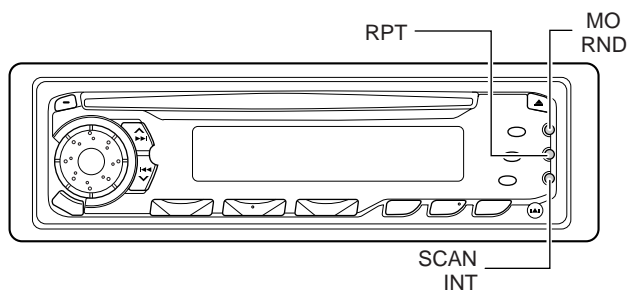

To play back tracks at random (Random Play)



Each time you press MO/RND (Mono/Random) while playing a CD, Random Play mode changes as follows:



Mode	RND indicator	Plays at random
RND1	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RND2	Flashes	All tracks of all discs inserted in the magazine.

To play back tracks repeatedly (Repeat Play)



Each time you press RPT (Repeat) while playing a CD, Repeat Play mode changes as follows:




Mode	RPT indicator	Plays repeatedly
RPT1	Lights	The current track (or specified track).
RPT2	Flashes	All tracks of the current disc (or specified disc).

To play back the beginning of each track (Intro Play)



 
Each time you press SCAN/INT (Scan/Intro) while playing a CD, Intro Play mode changes as follows:



Mode	Indication	Plays the beginnings (15 seconds)
INT1	Track number flashes.	Of all tracks on all inserted discs.
INT2	Disc number flashes.	Of the first track on each inserted disc.

Handling CDs


This unit has been designed only to play back CDs bearing the  mark. Other discs cannot be played back.

How to handle CDs

When removing a CD from its case, press down the center holder of the case and lift the CD out, holding it by the edges.

- Always hold the CD by the edges. Do not touch its recording surface.

Center holder

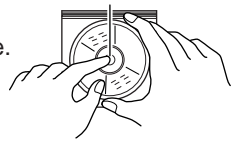


When storing a CD into its case, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.

To keep CDs clean


A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.

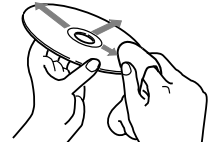

To play new CDs

New CDs may have some rough spots around the inner and outer edges. If such a CD is used, this unit may reject the CD.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

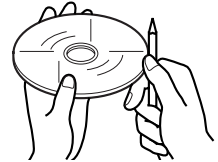

Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

CAUTIONS:

- Do not insert 8cm (3 3/16") CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape — like a heart or flower; otherwise, it will malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.

About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying.

We recommend that you stop CD play while driving on such rough roads.



TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving on rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume control is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• “NO CD” or “NO DISC” appears on the display.	No CD is in the loading slot (or in the magazine).	Insert CD.
	CD is inserted incorrectly.	Insert it correctly.
• “RESET 8” appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• “RESET 1 – RESET 7” appears on the display.	_____	Press the reset button of the CD changer.
• CD can neither be played back nor ejected.	The CD player may function incorrectly.	Press /I/ATT and at the same time for more than 2 seconds. Be careful not to drop CD when it is ejected.
• The unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press /I/ATT and SEL at the same time for more than 2 seconds to reset the unit. (The clock setting and preset stations stored in memory are erased.)

SPECIFICATIONS

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 40 watts per channel

Rear: 40 watts per channel

Continuous Power Output (RMS):

Front: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

Rear: 16 watts per channel into 4 Ω , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 to 8 Ω allowance)

Tone Control Range:

Bass: ± 10 dB at 100 Hz

Treble: ± 10 dB at 10 kHz

Frequency Response: 40 to 20,000 Hz

Signal-to-Noise Ratio: 70 dB

Line-Out Level/Impedance: 2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

TUNER SECTION

Frequency Range:

FM: 87.5 to 107.9 MHz

(with channel interval set to 200 kHz)

87.5 to 108.0 MHz

(with channel interval set to 50 kHz)

AM: 530 to 1,710 kHz

(with channel interval set to 10 kHz)

531 to 1,602 kHz

(with channel interval set to 9 kHz)

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity:

16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 to 15,000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 to 20,000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

GENERAL

Power Requirement:

Operating Voltage: DC 14.4 volts (11 to 16 volts allowance)

Grounding System: Negative ground

Dimensions (W x H x D):

Installation Size: 182 x 52 x 150 mm
(7-3/16" x 2-1/16" x 5-15/16")

Panel Size: 188 x 58 x 14 mm
(7-7/16" x 2-5/16" x 5/8")

Mass: 1.3 kg (2.9 lbs) (excluding accessories)

Design and specifications subject to change without notice.


If a kit is necessary for your car, consult your telephone directory for the nearest car audio speciality shop.

KD-SX838/S737

CD RECEIVER

JVC
VICTOR COMPANY OF JAPAN, LIMITED

 EN, SP, FR

 Printed in Singapore
1297MNMMDWJES