

# JVC



**CD RECEIVER**

**KD-SX840/SX740**

ENGLISH

**RECEPTOR CON CD**

**KD-SX840/SX740**

ESPAÑOL

**RECEPTEUR CD**


**KD-SX840/SX740**

FRANÇAIS





**KD-SX840**

**BBE**

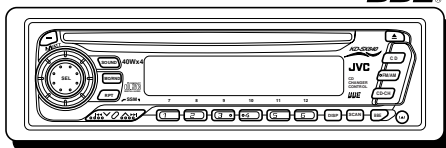

**KD-SX740**

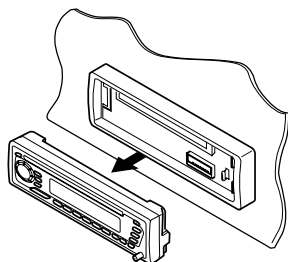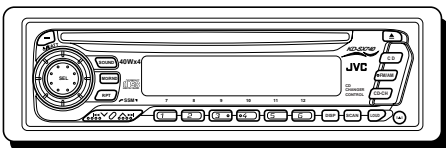

**COMPACT**  
**disc**  
DIGITAL AUDIO

For installation and connections, refer to the separate manual.  
Para la instalación y las conexiones, refiérase al manual separado.  
Pour l'installation et les raccordements, se référer au manuel séparé.

## **INSTRUCTIONS**

**MANUAL DE INSTRUCCIONES**  
**MANUEL D'INSTRUCTIONS**

**For customer Use:**

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

FSUN3060-632

[J]



## INFORMATION (For USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Identification and Certification labels

Bottom of the main unit

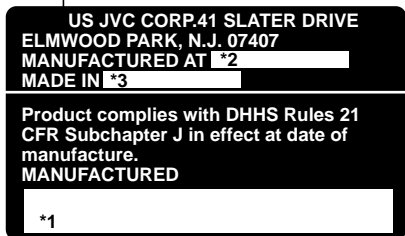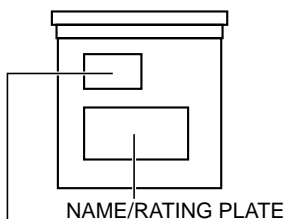

### Notes:

- \*1 The date of manufacture.
- \*2 The ID code of manufacturing plant.
- \*3 Marking of country origin.

## BEFORE USE

### \* For safety....

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

## IMPORTANT FOR LASER PRODUCTS (For USA only)

### Precautions:

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading CDs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### \*Temperature inside the car....

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

# CONTENTS

## **BASIC OPERATIONS** ..... 4



## **RADIO OPERATIONS** ..... 5

Listening to the radio ..... 5

Storing stations in memory ..... 6

FM station automatic preset: SSM ..... 6

Manual preset ..... 7

Tuning into a preset station ..... 8

Other convenient tuner functions ..... 9

Scanning broadcast stations ..... 9

Selecting FM reception sound ..... 9

Changing the AM/FM channel intervals ..... 9



## **CD OPERATIONS** ..... 10

Playing a CD ..... 10

Locating a track or a particular portion a CD ..... 11

Selecting CD playback modes ..... 12

Other convenient CD functions ..... 12

Prohibiting CD ejection ..... 12



## **SOUND ADJUSTMENTS** ..... 13

Turning on/off the loudness function (ONLY FOR KD-SX740) .... 13

Turning on/off the BBE function (ONLY FOR KD-SX840) .... 13

Selecting preset sound modes ..... 14

Adjusting the sound ..... 15

Storing your own sound adjustments ..... 16



## **OTHER MAIN FUNCTIONS** ..... 17

Setting the clock ..... 17

Selecting the level display (ONLY FOR KD-SX840) ..... 18

Detaching the control panel ..... 19



## **REMOTE OPERATIONS (ONLY FOR KD-SX840)** ..... 20

Installing the batteries ..... 20

Using the remote controller ..... 20



## **CD CHANGER OPERATIONS** ..... 21

Playing CDs ..... 21

Selecting CD playback modes ..... 23



## **MAINTENANCE** ..... 24

Handling CDs ..... 24

How to reset your unit ..... 24




## **TROUBLESHOOTING** ..... 25

## **SPECIFICATIONS** ..... 26



# BASIC OPERATIONS

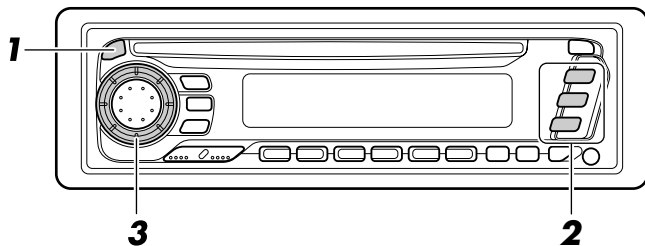**Note:**

When you use this unit for the first time, set the built-in clock correctly, see page 17.

## 1




Turn on the power.

**Note on One-Touch Operation:**

When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

## 2

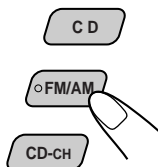


Select the source.

To operate the tuner, see pages 5 – 9.


To operate the CD player, see pages 10 – 12.

To operate the CD changer, see pages 21 – 23.

## 3

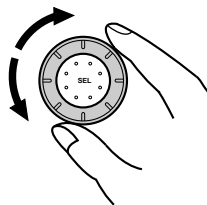

Adjust the volume.

 

Volume level appears.

Volume level indicator.

## 4

Adjust the sound as you want (see pages 13 – 16).

### To drop the volume in a moment


Press briefly while listening to any source. “ATT” starts flashing on the display, and the volume level will drop in a moment.

To resume the previous volume level, press the button briefly again.

### To turn off the power

Press for more than 1 second.

## Listening to the radio

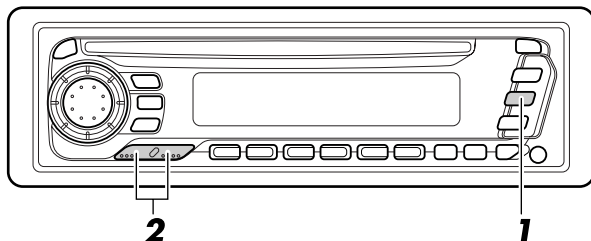



1



Select the band (FM1, FM2, FM3 or AM).


You can select any one of FM1, FM2, and FM3 to listen to an FM station.

  Selected band appears



Audio or volume level indicator  
(ONLY FOR KD-SX840)  
(see page 18.)

2

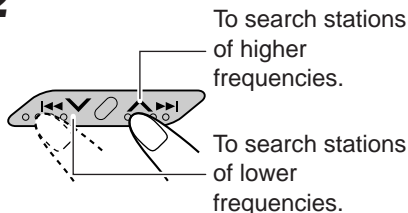

Start searching a station.

When a station is received, searching stops.



**To stop searching before a station is received**, press the same button you have pressed for searching.

### To tune in a particular frequency without searching:

- 1 Select the band (FM or AM).  
Press FM/AM repeatedly.
- 2 Press and hold  $\blacktriangle$   $\blacktriangleright$   $\blacktriangleleft$  or  $\blacktriangleleft$   $\blacktriangleright$  until "M" starts flashing on the display.  
Now you can manually change the frequency while "M" is flashing.
- 3 Press  $\blacktriangle$   $\blacktriangleright$  or  $\blacktriangleleft$   $\blacktriangleright$  repeatedly until the frequency you want is reached.
  - If you hold down the button, the frequency keeps changing until you release the button.




## Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.


- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

### **FM station automatic preset: SSM**

You can preset 6 local FM stations in each FM band (FM1, FM2, and FM3).

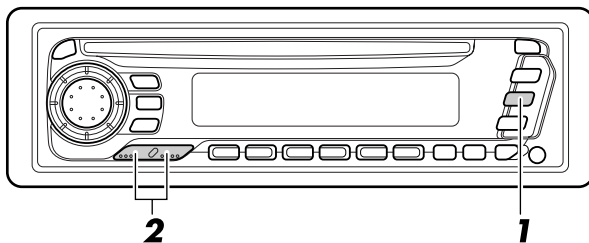


**1**

 


Select the FM band number (FM1, FM2 or FM3) you want to store FM stations into.

**2**

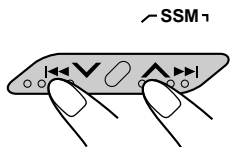

 Press and hold the both buttons for more than 2 seconds.



“SSM” appears, then disappears when automatic preset is over.


Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2 or FM3). These stations are preset in the number buttons — No. 1 (lowest frequency) to No. 6 (highest frequency).

When automatic preset is over, the station stored in number button 1 will be automatically tuned in.

## Manual preset

You can preset up to 6 stations in each band (FM1, FM2, FM3 and AM) manually.

EXAMPLE: Storing an FM station of 88.3 MHz into the preset number 1 of the FM1 band

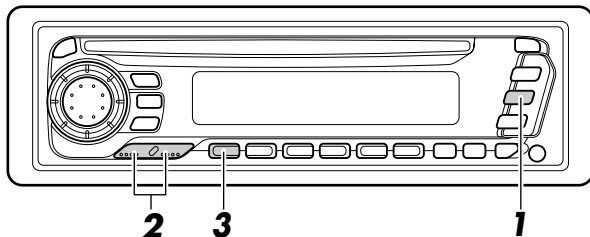

**1**


Select the FM1 band.



**2**

 
Tune into a station of 88.3 MHz.

See page 5 to tune into a station.


**3**

 
Press and hold the button for more than 2 seconds.



"P1" flashes for a few seconds.

**4**

Repeat the above procedure to store other stations into other preset numbers.

### Notes:


- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.



## Tuning into a preset station

You can easily tune into a preset station.


Remember that you must store stations first. If you have not stored them yet, see pages 6 and 7.

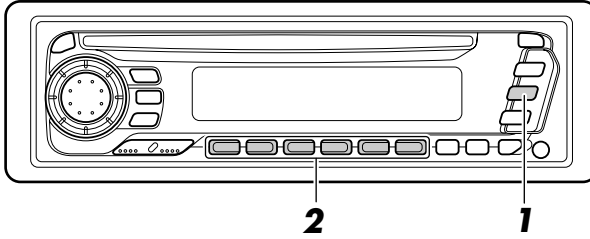


**1**



 Select the band (FM1, FM2, FM3 or AM) you want.




**2**

 

Select the number (1 – 6) for the preset station you want.



# Other convenient tuner functions

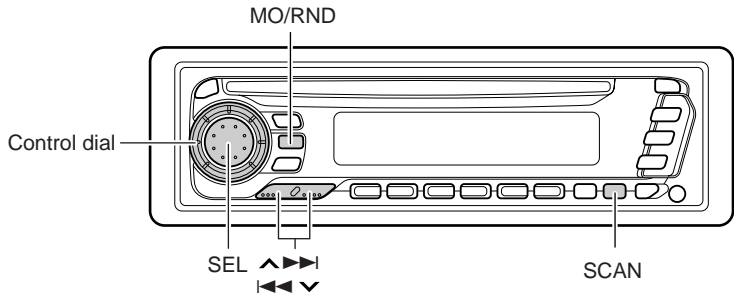

## Scanning broadcast stations

 
When you press SCAN while listening to the radio, station scanning starts. Each time a broadcast is tuned in, scanning stops for about 5 seconds (tuned frequency number flashes on the display), and you can check what program is now being broadcasted.

If you want to listen to that program, press the same button again to stop scanning.

## Selecting FM reception sound

**When an FM stereo broadcast is hard to receive:**

Press MO/RND (Mono/Random) while listening to an FM stereo broadcast. The sound you hear becomes monaural but reception will be improved.



Lights up when receiving an FM broadcast in stereo.

To restore the stereo effect, press the same button again.

## Changing the AM/FM channel intervals

**When using this unit in an area other than North or South America:**

When this unit is shipped from the factory, the channel intervals are set to 10 kHz for AM and 200 kHz for FM. You can change the channel intervals by following the procedure below.

- 1 Press SEL (select) for more than 2 seconds.  
 "CLOCK H," "CLOCK M," "LEVEL (ONLY FOR KD-SX840)" or "AREA" appears on the display.
- 2 If "AREA" does not appear, press ▲▶▶ or ◀◀▼ until it appears.
- 3 Rotate the control dial clockwise.  
 "AREA EU" appears and the channel intervals are set to 9 kHz for AM and 50 kHz (for manual tuning) / 100 kHz (for searching) for FM.


**To reset to the factory setting,** follow the above step 1 and 2, then rotate the control dial counterclockwise in step 3 ("AREA US" appears on the display).

AREA EU: Select this when used in an area other than North and South America.  
 AREA US: Select this when used in North or South America.




# CD OPERATIONS

## Playing a CD

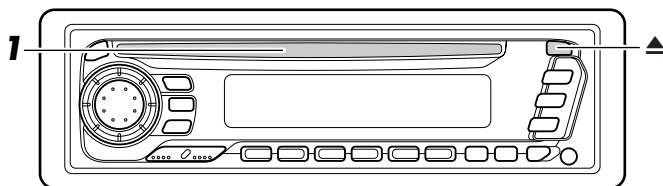


1

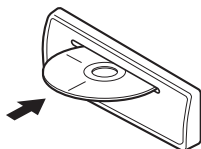

Insert a disc into the loading slot.

The unit turns on, draws a CD and starts playback automatically.

- When a CD is inserted upside down, "EJECT" appears on the display and the CD automatically ejects.

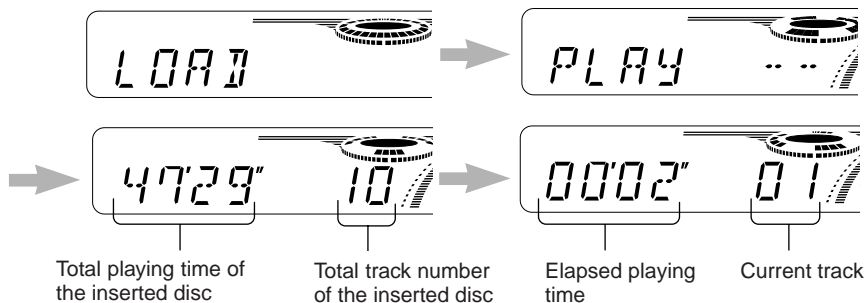

### Note on One-Touch Operation:

When a CD is already in the loading slot, pressing CD turns on the unit and starts playback automatically.

### CAUTION on Volume Setting

CDs produces very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a CD and adjust it as required during playback.

## To stop play and eject the CD

Press ▲.


CD play stops and the CD automatically ejects from the loading slot. The source changes to the tuner (you will hear the last received station).

If you change the source to FM/AM or CD-CH, the CD play also stops (without ejecting the CD this time).


- If the ejected disc is not removed for about 15 seconds, the disc is automatically inserted again into the loading slot to protect it from dust. (CD play will not start this time.)
- You can eject the CD even when the unit is turned off.



# Locating a track or a particular portion on a CD

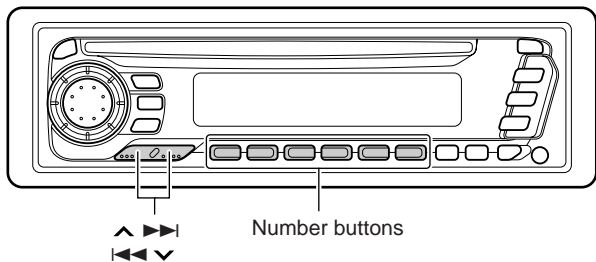


## To fast forward or reverse the track

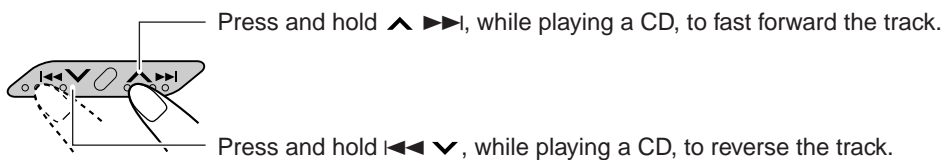

Press and hold **^ >>>|**, while playing a CD, to fast forward the track.

Press and hold **|<<< v**, while playing a CD, to reverse the track.


## To go to the next track or the previous track

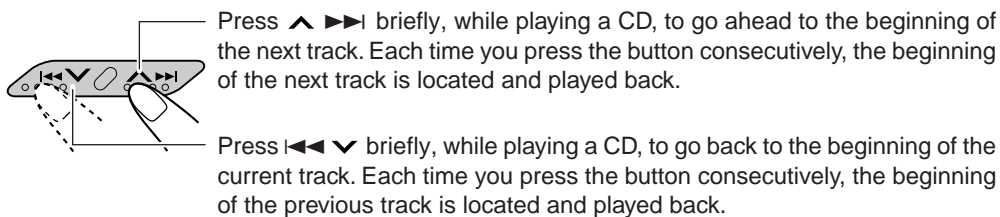

Press **^ >>>|** briefly, while playing a CD, to go ahead to the beginning of the next track. Each time you press the button consecutively, the beginning of the next track is located and played back.

Press **|<<< v** briefly, while playing a CD, to go back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.

## To go to a particular track directly

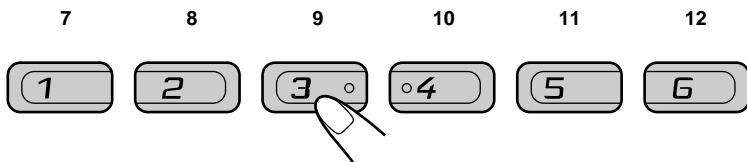


Press the number button corresponding to the track number to start its playback.

- To select a track number from 1 – 6:  
Press 1 (7) – 6 (12) briefly.
- To select a track number from 7 – 12:  
Press and hold 1 (7) – 6 (12) for more than 1 second.



## Selecting CD playback modes

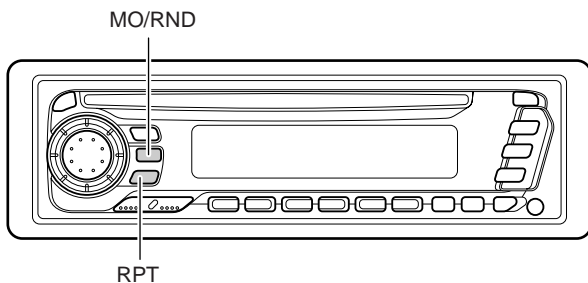


### To play back tracks at random (Random Play)

You can play back all tracks on the CD at random.



Each time you press MO/RND (Mono/Random) while playing a CD, CD random play mode turns on and off alternatively.

 When the random mode is turned on, the RND indicator lights up on the display and a track randomly selected starts playing.




### To play back tracks repeatedly (Repeat Play)

You can play back the current track repeatedly.



Each time you press RPT (Repeat) while playing a CD, CD repeat play mode turns on and off alternatively.

 When the repeat mode is turned on, the RPT indicator lights up on the display.



Track number of the currently playing track

## Other convenient CD functions

### Prohibiting CD ejection

You can prohibit the CD ejection and can “lock” a CD in the loading slot.

Press and hold CD and ▲ for more than 2 seconds. “EJECT” flashes on the display for about 5 seconds, and the CD is “locked.”

**To cancel the prohibition and “unlock” the CD**, press and hold CD and ▲ for more than 2 seconds again. “EJECT” appears on the display, and the CD ejects from the loading slot.



## Turning on/off the loudness function

This section is **ONLY FOR KD-SX740**.

The human ear is less sensitive to low and high frequencies at low volumes.

The loudness function can boost these frequencies to produce well-balanced sound at low volume level.

Each time you press LOUD, the loudness function turns on and off alternatively.



## Turning on/off the BBE function

This section is **ONLY FOR KD-SX840**.

Press BBE to turn BBE circuit\* ON and OFF.



### \*BBE circuit

The BBE system restores the brilliance and clarity of the original live sound in recording, broadcasts, etc.

When a speaker reproduces sound, it introduces frequency-dependent phase shifting, causing high-frequency sounds to take longer to reach the ear than low frequency sounds. The BBE circuit adjusts the phase relationship between the low, mid and high frequencies by adding a progressively longer delay time to the low and mid frequencies, so that all frequencies reach the listener's ears at the proper time.

In addition, the BBE circuit boosts low and high frequencies, which loudspeakers tend to be less efficient in reproducing, through dynamic, program-driven augmentation. When combined with the phase compensation feature, the resulting sound has a clearer, more finely detailed "live" presence.

 
Under license from BBE Sound, Inc.

**BBE** is a trademark of BBE Sound, Inc.



## Selecting preset sound modes

You can select a preset sound adjustment suitable to the music genre:  
Each time you press SOUND, the sound mode changes as follows.



Indication	For:	Preset values		
		Bass	Treble	Loudness*
SCM OFF	(Flat sound)	00	00	On
BEAT	Rock or disco music	+2	00	On
SOFT	Quiet background music	+1	-3	Off
POP	Light music	+4	+1	Off


\*ONLY FOR KD-SX740.

### Notes:

- You can adjust the preset sound mode to your preference, and store in memory.  
If you want to adjust and store your original sound mode, see “Storing your own sound adjustments” on page 16.
- To adjust only the bass and treble reinforcement levels to your preference, see “Adjusting the sound” on page 15.

## Adjusting the sound

You can adjust the treble/bass sound and the speaker balance.

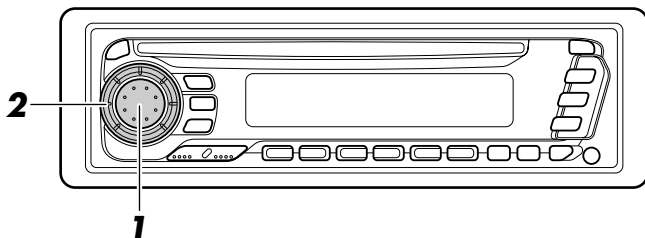
**1**



Select the item you want to adjust.

→ **BAS** → **TRE** → **FAD** → **BAL** → **VOL**

Indication	To do:	Range
BAS (Bass)	Adjust the bass	-6 (min.) — +6 (max.)
TRE (Treble)	Adjust the treble	-6 (min.) — +6 (max.)
FAD (Fader)*	Adjust the front and rear speaker balance	R6 (rear only) — F6 (front only)
BAL (Balance)	Adjust the left and right speaker balance	L6 (left only) — R6 (right only)
VOL (Volume)	Adjust the volume	00 (min.) — 50 (max.)

**Note:**

\* If you are using a two-speaker system, set the fader level to “00.”

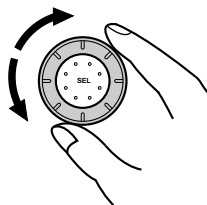**2**


Adjust the level.


**Note:**

Normally the control dial works as the volume control. So you do not have to select “VOL” to adjust the volume level.



## Storing your own sound adjustments

You can adjust the sound modes (BEAT, SOFT, POP: see page 14) to your preference and store your own adjustments in memory.

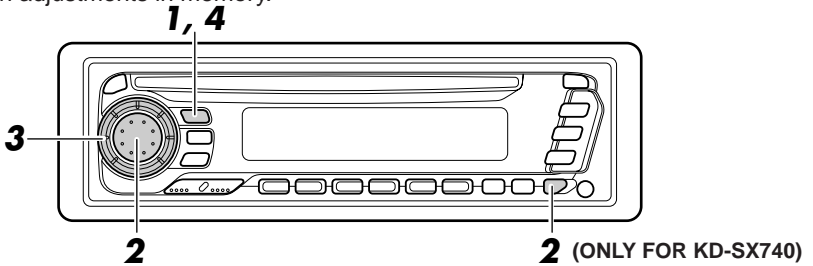

**1**



Call up the sound mode you want to adjust.  
See page 14 for details.

**Within  
5 seconds**

**2**



To adjust the bass or treble sound level  
Select "BAS" or "TRE."


**This is ONLY FOR KD-SX740.**

To turn on or off the loudness function  
Each time you press LOUD, the loudness  
function turns on and off alternatively. (→ go to step 4)



**Within  
5 seconds**

**3**

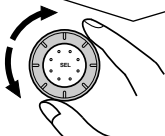

Adjust the bass or treble level.  
See page 15 for details.

**Within  
5 seconds**

**4**



Press and hold SOUND until the sound mode  
you have selected in step 1 flashes on the  
display.  
Your setting is stored in memory.

**5**


Repeat the same procedure to store other settings.

### To reset to the factory settings

Repeat the same procedure and reassign the preset values listed in the table on page 14.



## Setting the clock

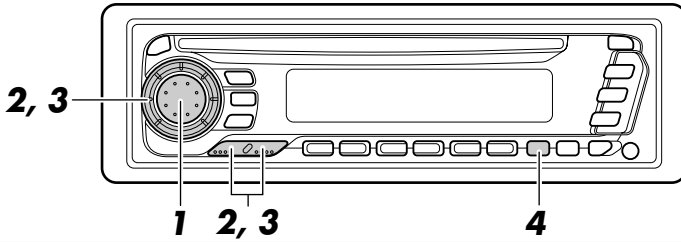

**1**



 
Press and hold SEL for more than 2 seconds.

“CLOCK H,” “CLOCK M,” “LEVEL”<sup>\*</sup> or “AREA” appears on the display.

<sup>\*</sup>ONLY FOR KD-SX840.

**2**

1.




Set the hour.

1. Select “CLOCK H” if not shown on the display.

→ CLOCK H → CLOCK M → LEVEL<sup>\*</sup> → AREA

2.

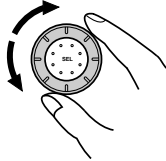

2. Adjust the hour.

**3**

1.




Set the minute.

1. Select “CLOCK M.”


→ CLOCK H → CLOCK M → LEVEL<sup>\*</sup> → AREA

2.

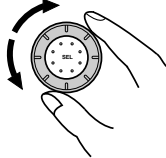

2. Adjust the minute.

**4**

 

Start the clock.

## To check the current clock time (changing the display mode)

Press DISP repeatedly. Each time you press the button, the display mode changes as follows.

<p><b>During tuner operation:</b></p> <p>Frequency ↔ Clock</p>	<p><b>During CD operation:</b></p> <p>Elapsed playing time ↔ Clock</p>	<p><b>During CD changer operation:</b></p> <p>Elapsed playing time → Disc number → Clock</p>
--	--	--

- If the unit is not in use when you press DISP, the power turns on, the clock time is shown for 5 seconds, then the power turns off.


## Selecting the level display

This section is **ONLY FOR KD-SX840**.


You can select the level display according to your preference. When shipped from the factory, the level indicator on the display shows the audio level setting.

AUDIO: Audio level indicator

OFF : Volume level indicator

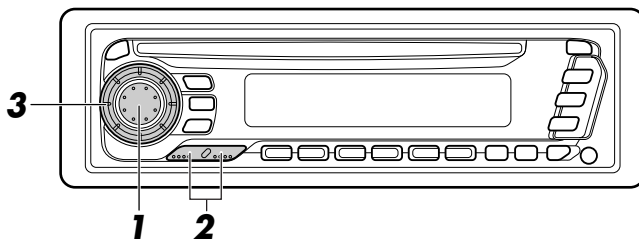


**1**

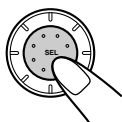

Press and hold SEL for more than 2 seconds. "CLOCK H," "CLOCK M," "LEVEL" or "AREA" appears on the display.


**2**

 

Select "LEVEL" if not shown on the display.

→ CLOCK H → CLOCK M → LEVEL → AREA

**3**

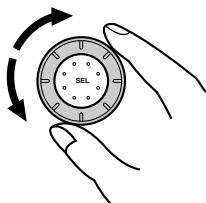

Select the desired mode with the control dial.

## Detaching the control panel


You can detach the control panel when leaving the car.

When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


### How to detach the control panel

Before detaching the control panel, be sure to turn off the power.


- 1 Unlock the control panel.

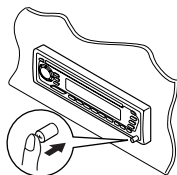

- 2 Lift and pull the control panel out of the unit.

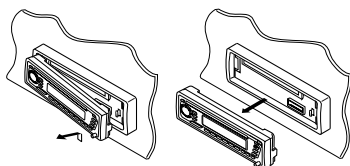


- 3 Put the detached control panel into the case provided.

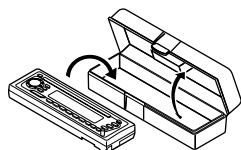


### How to attach the control panel

- 1 Insert the left side of the control panel into the groove on the panel holder.

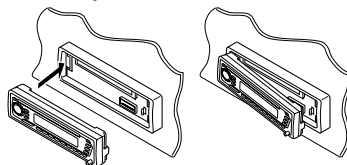


- 2 Press the right side of the control panel to fix it to the panel holder.

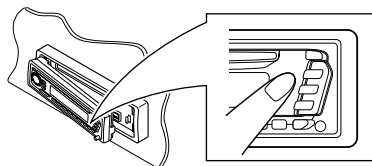

#### Note on cleaning the connectors:

*If you frequently detach the control panel, the connectors will deteriorate.*

*To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.*

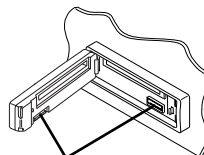

Connectors




# REMOTE OPERATIONS

This section is ONLY FOR KD-SX840.

Remote sensor


Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

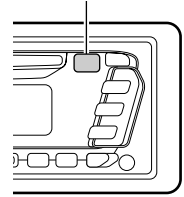


## Installing the batteries

R03(UM-4)/AAA(24F)

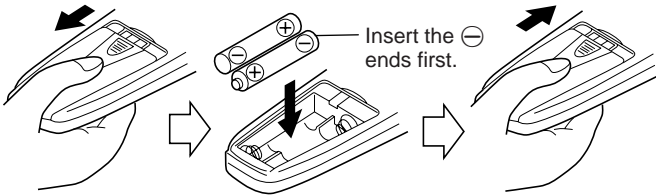

When the controllable range or effectiveness of the remote controller decreases, replace the batteries – R03(UM-4)/AAA(24F).

## Using the remote controller

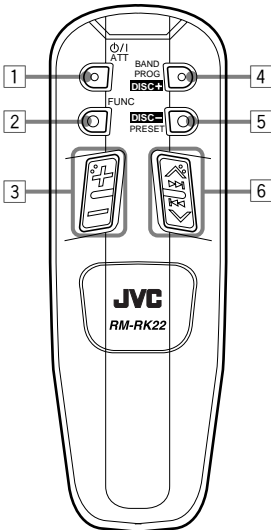

- 1 Functions the same as the  $\odot/||/ATT$  button on the main unit.
- 2 Select the source.  
Each time you press FUNC (function), the source changes.
- 3 \*Functions the same as the control dial on the main unit.
- 4 • Functions as the BAND button while listening to the radio.  
Each time you press the button, the band changes.  
• Functions as the DISC + button while listening to the CD changer.  
Each time you press the button, the disc number increases, and selected disc starts playing.  
• Does not function as the PROG button.
- 5 • Functions as the PRESET button while listening to the radio.  
Each time you press the button, the preset station number increases, and selected station is tuned in.  
• Functions as the DISC – button while listening to the CD changer.  
Each time you press the button, the disc number decreases, and selected disc starts playing.
- 6 • Searches stations while listening to the radio.  
• Fast forwards or reverses the track if pressed and held while listening to the CD.  
• Skips to the beginning of the next tracks or go back to the beginning of the current (or previous tracks) if pressed briefly while listening to the CD.

### Note:

\* These buttons cannot be used for the clock (CLOCK H, CLOCK M), LEVEL and FM/AM channel intervals (AREA) adjustments (see pages 17, 18 and 9).

# CD CHANGER OPERATIONS




We recommend that you use one of the CH-X series (ex.: CH-X1200) with your unit. If you have another CD automatic changer, consult your JVC car audio dealer for connections.

- For example, if your CD automatic changer is one of the KD-MK series, you need a cord (KS-U15K) for connecting it to this unit.

Before operating your CD automatic changer:



- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "NO CD" or "NO DISC" will appear on the display. If this happens, remove the magazine and set the discs correctly.
- If "RESET 1 - RESET 8" appears on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection, connect the connecting cord(s) firmly if necessary, then press the reset button of the CD changer.

## Playing CDs

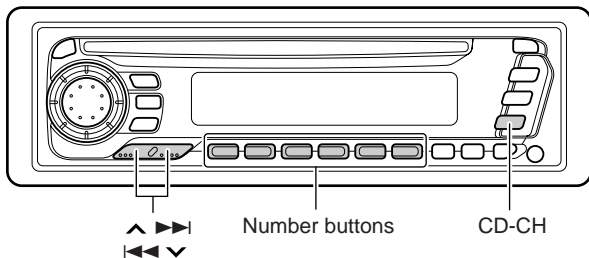

Select the CD automatic changer.

Play back starts from the first track of the first disc. All tracks of all discs are played back.

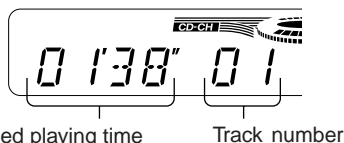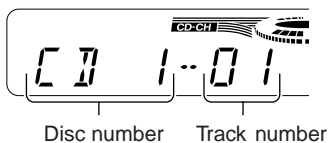


Elapsed playing time  
(The clock time is shown if you have pressed DISP to see the clock time. See page 18.)

### Note on One-Touch Operation:


When you press CD-CH, the power automatically comes on. You do not have to press **⏻/WATT** to turn on the power.




## To fast forward or reverse the track

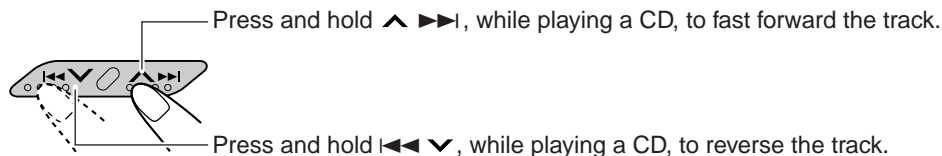

## To go to the next track or the previous track

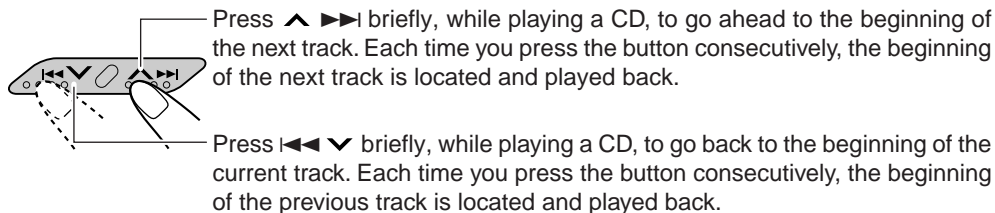

## To go to a particular disc directly

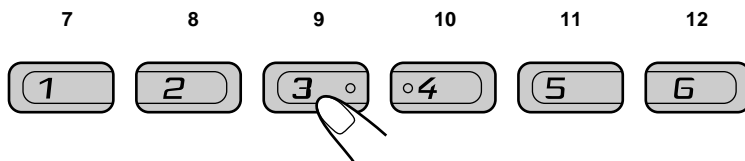

Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).


- To select a disc number from 1 – 6:  
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:  
Press and hold 1 (7) – 6 (12) for more than 1 second.

Ex. When disc number 3 is selected





# Selecting CD playback modes

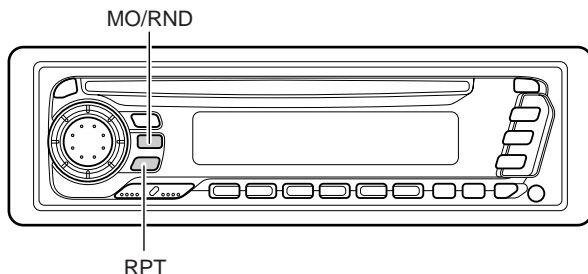

## To play back tracks at random (Random Play)

Each time you press MO/RND (Mono/Random) while playing a CD, CD random play mode changes as follows:

MO/RND



Mode	RND Indicator	Plays at random
RND1	Lights	All tracks of the current disc, then the tracks of the next disc, and so on.
RND2	Flashes	All tracks of all discs inserted in the magazine.

## To play back tracks repeatedly (Repeat Play)

Each time you press RPT (Repeat) while playing a CD, CD repeat play mode changes as follows:

RPT




Mode	RPT Indicator	Plays repeatedly
RPT1	Lights	The current track (or specified track).
RPT2	Flashes	All tracks of the current disc (or specified disc).



# MAINTENANCE

## Handling CDs

This unit has been designed only to reproduce the CDs bearing the  mark. Other discs cannot be played back.

### How to handle CDs

**When removing a CD from its case**, press down the center holder of the case and lift the CD out, holding it by the edges.

- Always hold the CD by the edges. Do not touch its recording surface.

**When storing a CD into its case**, gently insert the CD around the center holder (with the printed surface facing up).

- Make sure to store CDs into the cases after use.

Center holder



### To keep CDs clean

A dirty CD may not play correctly. If a CD does become dirty, wipe it with a soft cloth in a straight line from center to edge.

### To play new CDs

New CDs may have some rough spots around the inner and outer edges. If such a CD is used, this unit may reject the CD.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.



### Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the CD and leave the unit turned on for a few hours until the moisture evaporates.

### CAUTIONS:


- Do not insert 8cm (3 3/16") CDs (single CDs) into the loading slot. (Such CDs cannot be ejected.)
- Do not insert any CD of unusual shape – like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose CDs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzine, etc.) to clean CDs.

### About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the CD, but will be annoying.

We recommend that you stop CD play while driving on such rough roads.

## How to reset your unit

Press and hold both the SEL (Select) and /I/ATT (Standby/On/ATT) buttons at the same time for several seconds.


This will reset the built-in microcomputer.

**NOTE:** Your preset adjustments — such as preset channels or sound adjustments — will also be erased.

/I/ATT

(Standby/On/ATT)

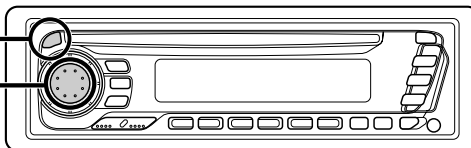


SEL (Select)





# TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• CD cannot be played back.	CD is inserted upside down.	Insert the CD correctly.
• CD sound is sometimes interrupted.	You are driving on rough roads.	Stop CD play while driving rough roads.
	CD is scratched.	Change the CD.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
• SSM (Strong-station Sequential Memory) automatic preset does not work.	Signals are too weak.	Store stations manually.
• Static noise while listening to the radio.	The antenna is not connected firmly.	Connect the antenna firmly.
• "NO CD" or "NO DISC" appears on the display.	No CD is in the loading slot (or in the magazine).	Insert CD.
	CD is inserted incorrectly.	Insert it correctly.
• "RESET 8" appears on the display.	This unit is not connected to a CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button of the CD changer.
• "RESET 1-RESET 7" appears on the display.	—————	Press the reset button of the CD changer.
• CD can be neither played back nor ejected.	The CD player may function incorrectly.	Press  /ATT and  at the same time for more than 2 seconds. Be careful not to drop CD when it is ejected.
• The unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press  /ATT and SEL at the same time for more than 2 seconds to reset the unit. (The clock setting and preset stations stored in memory are erased.) (See page 24.)

# SPECIFICATIONS

## AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 40 watts per channel

Rear: 40 watts per channel

Continuous Power Output (RMS):

Front: 16 watts per channel into 4  $\Omega$ , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

Rear: 16 watts per channel into 4  $\Omega$ , 40 to 20,000 Hz at no more than 0.8% total harmonic distortion.

Load Impedance: 4  $\Omega$  (4 to 8  $\Omega$  allowance)

Tone Control Range

Bass:  $\pm 10$  dB at 100 Hz

Treble:  $\pm 10$  dB at 10 kHz

Frequency Response: 40 to 20,000 Hz

Signal-to-Noise Ratio: 70 dB

Line-Out Level/Impedance: 2.0 V/20 k $\Omega$  load (full scale)

Output Impedance: 1 k $\Omega$

## TUNER SECTION

Frequency Range

FM: 87.5 to 107.9 MHz

(with channel interval set to 200 kHz)

87.5 to 108.0 MHz

(with channel interval set to 50 kHz)

AM: 530 to 1,710 kHz

(with channel interval set to 10 kHz)

531 to 1,602 kHz

(with channel interval set to 9 kHz)

### [FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0  $\mu$ V/75  $\Omega$ )

50 dB Quieting Sensitivity:

16.3 dBf (1.8  $\mu$ V/75  $\Omega$ )

Alternate Channel Selectivity (400 kHz):

65 dB

Frequency Response: 40 to 15,000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

### [AM Tuner]

Sensitivity: 20  $\mu$ V

Selectivity: 35 dB

## CD PLAYER SECTION

Type: Compact disc player

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response: 5 to 20,000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

## GENERAL

Power Requirement

Operating Voltage: DC 14.4 volts (11 to 16 volts allowance)

Grounding System: Negative ground

Dimensions (W x H x D)

Installation Size:

182 x 52 x 150 mm

(7-3/16" x 2-1/16" x 5-15/16")

Panel Size: 188 x 58 x 14 mm

(7-7/16" x 2-5/16" x 5/8")

Mass: 1.3 kg (2.9 lbs) (excluding accessories)

*Design and specifications subject to change without notice.*

If a kit is necessary for your car, consult your telephone directory for the nearest car audio speciality shop.



**Having TROUBLE with operation?  
Please reset your unit**

Refer to page of How to reset  
**Still having trouble??**

**USA ONLY**

**Call 1-800-252-5722**

**<http://www.jvcservice.com>**

**We can help you!**

**JVC**

VICTOR COMPANY OF JAPAN, LIMITED