
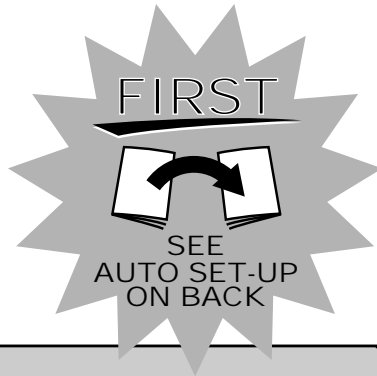


JVC

ENGLISH

VIDEO CASSETTE RECORDER

HR-S9600EU

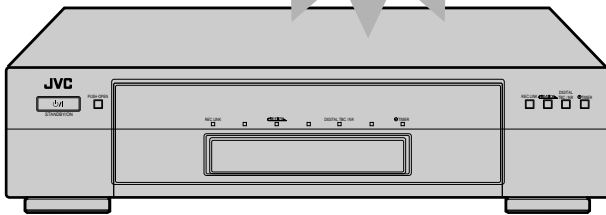

TIME JOG & SCAN

SHOWVIEW[®] Hi-Fi SVHS
625

INSTRUCTIONS

CONTENTS

| | |
|---|-----------|
| SAFETY FIRST | 2 |
| Safety Precautions | 2 |
| INSTALLING YOUR NEW RECORDER | 4 |
| Basic Connections | 4 |
| S-VIDEO Connection | 5 |
| INITIAL SETTINGS | 6 |
| Auto Set Up | 6 |
| Preset Download | 8 |
| Language | 10 |
| On-Screen Displays | 11 |
| Power Save Mode | 12 |
| T-V LINK | 13 |
| T-V Link Functions | 13 |
| INFORMATION ON COLOUR SYSTEM | 14 |
| Colour System Set | 14 |
| PLAYBACK | 15 |
| Basic Playback | 15 |
| Playback Features | 16 |
| TimeScan | 20 |
| RECORDING | 22 |
| Basic Recording | 22 |
| Recording Features | 23 |
| B.E.S.T. Picture System | 26 |
| TIMER RECORDING | 28 |
| ShowView Timer Programming | 28 |
| Express Timer Programming | 30 |
| Automatic Satellite Programme Recording | 35 |
| SPECIAL FEATURES | 36 |
| Remote Control Functions | 36 |
| EDITING | 39 |
| Preparation For Editing | 39 |
| Edit From A Camcorder | 40 |
| Synchro Editing | 41 |
| Edit To Or From Another Video Recorder | 42 |
| Audio Dubbing | 45 |
| Insert Editing | 46 |
| Random Assemble Editing | 48 |
| INFORMATION ON J TERMINAL | 50 |
| SYSTEM CONNECTIONS | 51 |
| Connection To A Satellite Tuner | 51 |
| Connecting/Using A Decoder | 54 |
| Connecting/Using A Stereo System | 55 |
| SUBSIDIARY SETTINGS | 56 |
| Tuner Set | 56 |
| Video Channel Set | 63 |
| Clock Set | 64 |
| ShowView Setup | 66 |
| TROUBLESHOOTING | 67 |
| QUESTIONS AND ANSWERS | 69 |
| INDEX | 70 |
| SPECIFICATIONS | 75 |

Safety Precautions

The rating plate and the safety caution are on the rear of the unit.

WARNING: DANGEROUS VOLTAGE INSIDE

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION

- When you are not using the recorder for a long period of time, it is recommended that you disconnect the power cord from the mains outlet.
- Dangerous voltage inside. Refer internal servicing to qualified service personnel. To prevent electric shock or fire hazard, remove the power cord from the mains outlet prior to connecting or disconnecting any signal lead or aerial.

WARNING

There are two different types of SECAM colour systems: SECAM-L, used in FRANCE (also called SECAM-West), and SECAM-B, used in Eastern European countries (also called SECAM-East).

1. This recorder can also receive SECAM-B colour television signals for recording and playback.
2. Recordings made of SECAM-B television signals produce monochrome pictures if played back on a video recorder of SECAM-L standard, or do not produce normal colour pictures if played back on a PAL video recorder with SECAM-B system incorporated (even if the TV set is SECAM-compatible).
3. SECAM-L prerecorded cassettes or recordings made with a SECAM-L video recorder produce monochrome pictures when played back with this recorder.
4. This recorder cannot be used for the SECAM-L standard. Use a SECAM-L recorder to record SECAM-L signals.

IMPORTANT

- Please read the various precautions on page 2 and 3 before installing or operating the recorder.
- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic work embodied therein.



- Cassettes marked "S-VHS" and "VHS" can be used with this video cassette recorder. However, S-VHS recordings are possible only with cassettes marked "S-VHS".
- SHOWVIEW is a registered trademark of Gemstar Development Corporation. The SHOWVIEW system is manufactured under licence from Gemstar Development Corporation.

For Italy:

"It is declared that this product, brand JVC, conforms to the Ministry Decree n. 548 of 28 Aug.'95 published in the Official Gazette of the Italian Republic n. 301 of 28 Dec.'95"

The STANDBY/ON ϕ /I button does not completely shut off mains power from the unit, but switches operating current on and off. " ϕ " shows electrical power standby and " I " shows ON.

Video tapes recorded with this video recorder in the LP (Long Play) mode cannot be played back on a single-speed video recorder.

Failure to heed the following precautions may result in damage to the recorder, remote control or video cassette.

1. DO NOT place the recorder . . .

- ... in an environment prone to extreme temperatures or humidity.
- ... in direct sunlight.
- ... in a dusty environment.
- ... in an environment where strong magnetic fields are generated.
- ... on a surface that is unstable or subject to vibration.


2. DO NOT block the recorder's ventilation openings.**3. DO NOT place heavy objects on the recorder or remote control.****4. DO NOT place anything which might spill on top of the recorder or remote control.****5. AVOID violent shocks to the recorder during transport.****MOISTURE CONDENSATION**

Moisture in the air will condense on the recorder when you move it from a cold place to a warm place, or under extremely humid conditions—just as water droplets form in the surface of a glass filled with cold liquid. Moisture condensation on the head drum will cause damage to the tape. In conditions where condensation may occur, keep the recorder turned on for a few hours to let the moisture dry.

ABOUT HEAD CLEANING

Accumulation of dirt and other particles on the video heads may cause the playback picture to become blurred or interrupted. Be sure to contact your nearest JVC dealer if such troubles occur.

Basic Connections

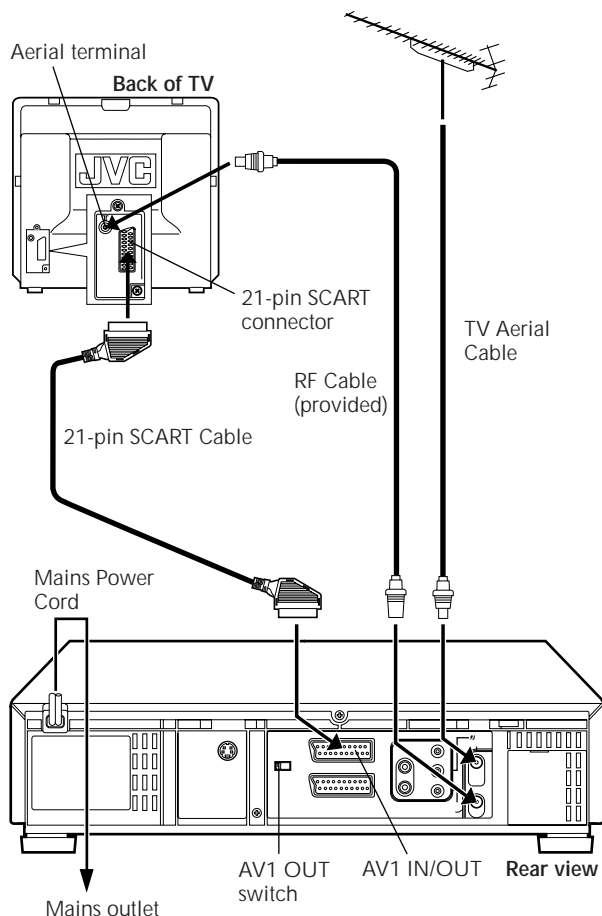

Make AV connection if your TV has a 21-pin AV input connector (SCART) in order to reduce the possibility of interference. And if you are using a stereo TV, you will need this cable in order to enjoy stereo playback of videotapes.

It's essential that your video recorder be properly connected. Follow these steps carefully. THESE STEPS MUST BE COMPLETED BEFORE ANY VIDEO OPERATION CAN BE PERFORMED.

1

CHECK CONTENTS

Make sure the package contains all of the accessories listed in "Specifications" (☞ pg. 75).

2

SITUATE RECORDER

Place the recorder on a stable, horizontal surface.

3

CONNECT RECORDER TO TV

The connection method you use depends on the type of TV you have.

RF CONNECTION

- *To Connect To A TV With NO AV Input Terminals . . .*
 - a- Disconnect the TV aerial cable from the TV.
 - b- Connect the TV aerial cable to the ANT. IN jack on the rear panel of the recorder.
 - c- Connect the provided RF cable between the RF OUT jack on the rear panel of the recorder and the TV's aerial terminal.

AV CONNECTION

- *To Connect To A TV With AV Input Terminals . . .*
 - a- Connect the aerial, recorder and TV as per "RF CONNECTION".
 - b- Connect an optional SCART cable between the AV1 IN/OUT socket on the rear panel of the recorder and the TV's 21-pin SCART connector.
 - c- Set the AV1 OUT switch to the appropriate position. See "AV1 INPUT/OUTPUT SIGNAL SELECTION FOR AV CONNECTION" below.

4

CONNECT RECORDER TO MAINS

Plug the end of the mains power cord into a mains outlet.

After you plug the mains power cord into a mains outlet, the Country Set display appears on the TV screen and/or on the recorder's front display panel when the button on the recorder/remote control is pressed for the first time to power on the recorder; go to page 6 to perform Auto Set Up.

AV1 INPUT/OUTPUT SIGNAL SELECTION FOR AV CONNECTION


The AV1 IN/OUT connector accepts and delivers either a composite signal (regular video signal) or a Y/C signal (a signal in which the luminance and chrominance signals are separated). For input signal selection, select "VIDEO" (regular video signal) or "S-VIDEO" (Y/C signal) for "AV1 SELECT" setting (☞ pg. 44). For output signal selection, use **AV1 OUT** switch of the rear panel.

- If your TV's 21-pin AV input connector (SCART) is compatible only with the regular video signal, set this switch to COMP.
- If your TV's 21-pin AV input connector (SCART) is compatible with the Y/C signal, set this switch to Y/C. You can obtain high-quality S-VHS pictures. (For connection, be sure to use a 21-pin SCART cable that is compatible with the Y/C signal.)

NOTES:

- Set your TV to the VIDEO (or AV), Y/C, or RGB mode according to the type of your TV's SCART connector.
- For switching the TV's mode, refer to the instruction manual of your television.
- To obtain high-quality S-VHS pictures, you can also use the S-VIDEO CONNECTION described on page 5.

S-VIDEO Connection

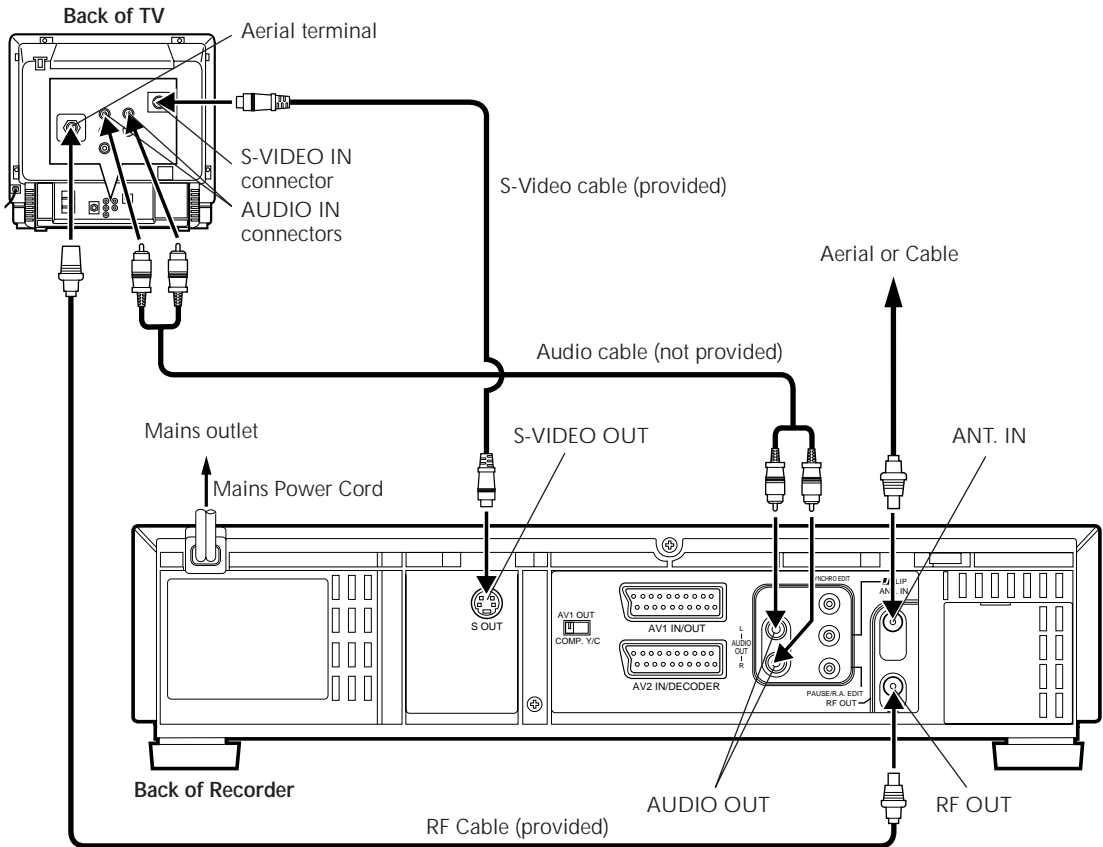

- To Connect to A TV With S-VIDEO/AUDIO IN Connectors . . .

1 CONNECT RECORDER TO TV


- Connect the aerial, recorder and TV as per "RF CONNECTION" (☞ pg. 4).
- Connect the recorder's S-VIDEO OUT connector to the TV's S-VIDEO IN connector.
- Connect the recorder's AUDIO OUT connectors to the TV's AUDIO IN connectors.

2 CONNECT RECORDER TO MAINS

- Plug the end of the mains power cord into a mains outlet.


NOTES:

- You can obtain high-quality S-VHS pictures.
- If your television is not stereo-capable, use the recorder's AUDIO OUT connectors to connect to an audio amplifier for Hi-Fi stereo sound reproduction. (☞ pg. 55)
- To operate the recorder with your TV using the S-VIDEO connection, set your TV to the VIDEO (or AV mode).
- For switching the TV's mode, refer to the instruction manual of your television.

After you plug the mains power cord into a mains outlet, the Country Set display appears on the TV screen and/or on the recorder's front display panel when the  button on the recorder/remote control is pressed for the first time to power on the recorder; go to page 6 to perform Auto Set Up.

Auto Set Up

Auto Channel Set/Auto Clock Set/Auto Guide Program Number Set

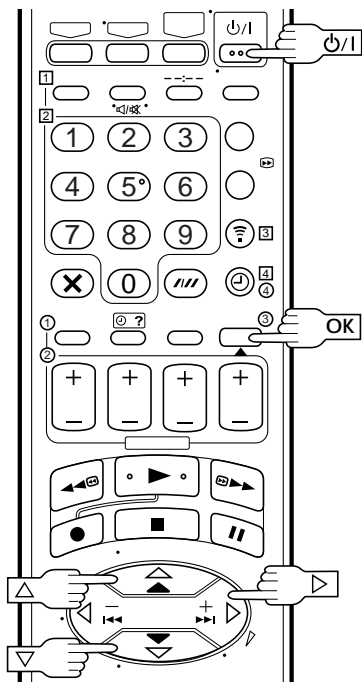

International Telephone Country Code

| | | | |
|-----------------|------|----------------------|-------|
| BELGIUM | : 32 | NORGE | : 47 |
| ČESKÁ REPUBLIKA | : 42 | ÖSTERREICH | : 43 |
| DANMARK | : 45 | POLSKA | : 48 |
| DEUTSCHLAND | : 49 | PORTUGAL | : 351 |
| ESPAÑA | : 34 | SUISSE | : 41 |
| GREECE | : 30 | SUOMI | : 358 |
| ITALIA | : 39 | SVERIGE | : 46 |
| MAGYARORSZÁG | : 36 | OTHER WESTERN EUROPE | : -- |
| NEDERLAND | : 31 | OTHER EASTERN EUROPE | : EE |

ATTENTION

Once you have performed Auto Set Up, even if the recorder's memory backup has expired, all the stored stations and their Guide Program numbers remain in the recorder's memory and the recorder will not perform Auto Set Up again. You only need to set the clock. (☞ pg. 64)

If you have moved to a different area, perform each setting as required.

- Video Channel setting (for RF connection users) ☞ pg. 63
- Tuner setting ☞ pg. 56
- Clock setting ☞ pg. 64

If a new station starts broadcasting in your area, perform tuner setting (☞ pg. 56) and, if necessary, video channel setting (☞ pg. 63).

When the **P/I** button on the recorder/remote control is pressed for the first time to power on the recorder after you plug the mains power cord into a mains outlet, the Country Set display will appear on the TV screen and the recorder's front display panel. By simply selecting your country*, the Auto Set Up function sets the tuner channels, clock** and Guide Program numbers automatically.

* If you live in Belgium (BELGIUM) or Switzerland (SUISSE), you also need to select your language.

** If you live in Hungary (MAGYARORSZAG), Czech Republic (CESKA REPUBLIKA), Poland (POLSKA) or other countries in Eastern Europe (OTHER EASTERN EUROPE), set the clock manually.

 
You can refer to the front display panel and/or the on-screen display to perform this procedure.

Before starting, make sure of the following:

- The TV aerial cable should be connected to the recorder.
- The recorder's mains power cord should be connected to a mains outlet.
- If you want to use the on-screen display, the TV should be set to its AV mode (with AV or S-VIDEO connection ☞ pg. 4 or 5) or UHF channel 36 (with RF connection ☞ pg. 4).

1 TURN ON THE RECORDER

Press **P/I** on the recorder or remote control. The Country Set display appears on the front display panel and/or on the screen.



NOTE:

If you have connected your TV to the recorder with RF connection and the on-screen display appearing on UHF channel 36 looks distorted, perform "Video Channel Set" on page 63.



2 SELECT COUNTRY

If you are referring to the front display panel

Press **Δ∇** to select your international telephone country code of your country referring to the chart in the left column. (Ex.) DEUTSCHLAND is selected



If you are referring to the on-screen display

Press **Δ∇** to move the highlight bar (pointer) to your country's name.

NOTE:

If you have selected BELGIUM (32) or SUISSE (41), go to step 3. If you have selected

MAGYARORSZAG (36), CESKA REPUBLIKA (42), POLSKA (48) or OTHER EASTERN EUROPE (EE), press **OK**. The Clock Set screen will appear. Set the clock manually (☞ pg. 64 - 65), then go to step 4. If you have selected any other country name (code), go to step 4.



3

SELECT LANGUAGE

Press **OK**. The Language Set display appears on the front display panel and/or on the screen.


If you are referring to the front display panel

Press $\Delta \nabla$ to select your language code.

| Language Code | |
|-----------------|-----------------|
| ENGLISH : 01 | NEDERLANDS : 06 |
| DEUTSCH : 02 | SVENSKA : 07 |
| FRANCAIS : 03 | NORSK : 08 |
| ITALIANO : 04 | SUOMI : 09 |
| CASTELLANO : 05 | DANSK : 10 |

(Ex.) DEUTSCH is selected for SUISSE

 International telephone country code Language code

**If you are referring to the on-screen display**

Press $\Delta \nabla$ to move the highlight bar (pointer) to the language of your choice.



(Ex.) DEUTSCH is selected

4

PERFORM AUTO SET UP


Press **OK**.

If you are referring to the front display panel

Press $\Delta \nabla$ to select "Auto" and press **OK** or \triangleright .


**If you are referring to the on-screen display**

Press $\Delta \nabla$ to move the highlight bar (pointer) to "AUTO SET" and press **OK** or \triangleright .

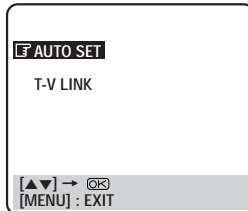

"Auto" blinks on the display panel; do NOT press any button on the recorder or remote control until the display panel shows either the display as illustrated on page 9 or "--:--".

- If you are using the on-screen display, the AUTO SET screen will appear. As Auto Set Up progresses, the "■" mark on the screen moves from left to right.

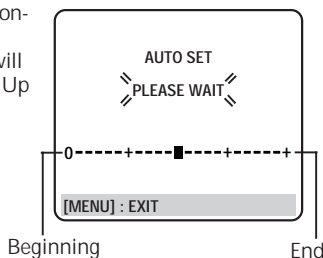

- If "--:--" appears on the display panel, refer to page 9.


NOTES:

- Auto channel set function takes place first; it assigns automatically all receivable stations in your area.
- Auto clock set function sets the clock automatically by reading the clock setting data from a station transmitting a PDC signal while auto channel set is being performed.
- During auto channel set, the recorder recognizes each station name of the detected stations and stores them in the recorder's memory, then automatically sets SHOWVIEW assigned Guide Program number for those stations according to the broadcast area.
- In the area where no TV station transmits a PDC signal, the recorder can perform neither auto clock set nor auto Guide Program number set.
- If there is a power cut, or if you press O/I or **MENU** while Auto Set Up is in progress, Auto Set Up will be interrupted; be sure to turn off the recorder power once and try again from step 1.
- Auto clock may not function properly depending on the reception condition.

Preset Download

You can use this function only with the TV offering T-V Link, etc.*

* Compatible with TVs offering T-V Link, EasyLink, Megalogic, SMARTLINK, Q-Link, DATA LOGIC or NEXTVIEWLINK via fully-wired 21-pin SCART cable. The degree of compatibility and available functions may differ by system.

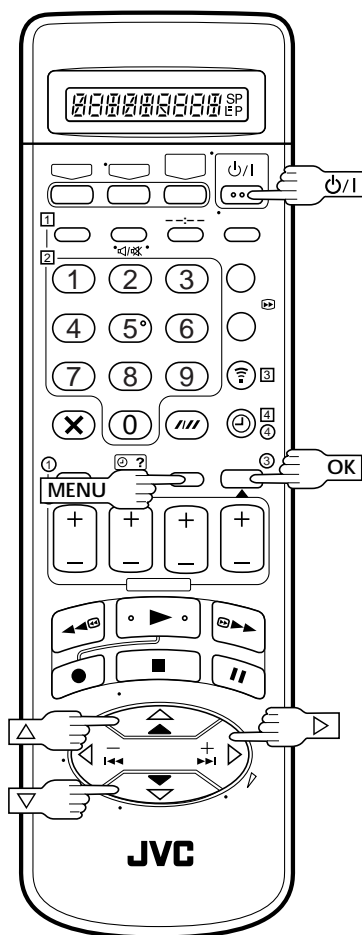

NOTES:

- In the area where no TV station transmits a PDC signal, the recorder can perform neither auto clock set nor auto Guide Program number set.
- If there is a power cut, or if you press **Power/Standby** or **MENU** while downloading or set up is in progress, it will be interrupted; be sure to turn off the recorder power once and try again from the beginning.
- Auto clock may not function properly depending on the reception condition.
- When you perform T-V LINK function, be sure to use fully-wired 21-pin SCART cable.
- On this recorder, the characters available for station's name (ID) are A-Z, 0-9, -, *, + and _ (space). Some downloaded station's name may differ from those of your TV (☞ pg. 60).

When you connect the recorder and your TV via fully-wired 21-pin SCART cable (☞ pg. 4), you can set the recorder's tuner channels by downloading preset data from your TV instead of using the Auto Set Up function (☞ pg. 6). After downloading is completed, the recorder sets the clock and Guide Program number automatically. For details, refer to the instruction manual for your TV.

Perform steps 1 to 3 of "Auto Set Up" on page 6 and 7 before continuing.

1

PERFORM PRESET DOWNLOAD

Press **OK**.


If you are referring to the front display panel

Press $\Delta \nabla$ to select "CH --" and press **OK** or \triangleright .





If you are referring to the on-screen display

Press $\Delta \nabla$ to move the highlight bar (pointer) to "T-V LINK" and press **OK** or \triangleright .

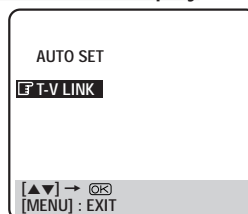

Preset position on the display panel increases from "CH1"; do NOT press any button on the recorder or remote control until the display panel shows either the display as illustrated on page 9 or "--:--".

- If "--:--" appears on the display panel, refer to page 9.
- If you are using the on-screen display, the T-V LINK screen will appear. Then the GUIDE PROG SET screen will appear during Guide Program number set.
- If you press any button on the recorder or remote control while downloading is in progress, it will be interrupted.

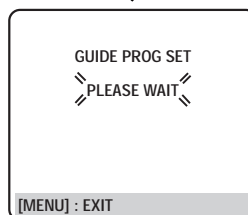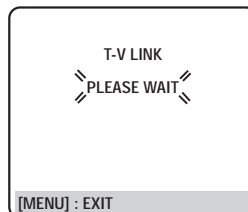


2

SET VIDEO CHANNEL

Set the Video Channel to off manually. (☞ pg. 63)

 
Results of Auto Set Up/Preset Download appear on the front display panel



When both auto channel set and auto clock set have been completed successfully the correct current time will be displayed after the **OK** button is pressed in step 4 on page 7 or in step 1 on page 8.



 When auto channel set has been completed successfully but auto clock set has not, "1" (channel position) will be displayed after the **OK** button is pressed in step 4 on page 7 or in step 1 on page 8.



When neither auto channel set nor auto clock set has been completed successfully, "--:--" will be displayed.

You can check if the Guide Program numbers have been set correctly when you perform **SHOWVIEW** Timer Programming (pg. 28); if the correct channel position number is displayed in step 3, this confirms that the Guide Program number for the **SHOWVIEW** number you enter in step 2 has been set correctly.

A If both auto channel set and auto clock set have been performed successfully:

- 1 Turn on the TV and select its **VIDEO** channel or **AV** mode, then make sure that all necessary stations have been stored in the recorder's memory by using the **TV PROG** button(s).
 - If station names (ID — pg. 61) have also been stored in the recorder's memory, the station name will be displayed at the top left corner of the screen for about 5 seconds when the recorder is tuned to a different station.
 - If you want to set the tuner manually such as to add or skip channels, to change channel positions, or to set or change station names, see pages 58 – 62.

B If auto channel set has succeeded but auto clock set has not:

- 1 Turn on the TV and select its **VIDEO** channel or **AV** mode, then make sure that all necessary stations have been stored in the recorder's memory by using the **TV PROG** button(s).
 - If station names (ID — pg. 61) have also been stored in the recorder's memory, the station name will be displayed at the top left corner of the screen for about 5 seconds when the recorder is tuned to a different station.
 - If you want to set the tuner manually such as to add or skip channels, to change channel positions, or to set or change station names, see pages 58 – 62.
- 2 Perform "Clock Set" on page 64.

C If both auto channel set and auto clock set have failed:

- 1 Make sure the TV aerial cable is connected properly to the recorder and turn off the recorder power once, then turn the recorder power back on again.
 - The Country Set display appears on the front display panel and/or on the screen; perform steps 2 – 4 on pages 6 – 7 again or perform the procedure on page 8.

IMPORTANT

- In certain reception conditions, station names may not be stored correctly, and auto Guide Program Number Set may not work properly. If the Guide Program numbers are not set properly, when you timer-record a TV programme using **SHOWVIEW**, the recorder will record a TV programme of a different station. When programming the timer using **SHOWVIEW**, be sure to check whether the channel position on which your recorder receives the broadcasting station you wish to record is selected (pg. 28, "SHOWVIEW Timer Programming").
- Your video recorder memorizes all detected stations even if reception of some of them is poor. In these cases picture quality may be poor. To delete those stations with an unacceptable picture press "Delete A Channel" on page 59.

INFORMATION

Language for the on-screen display

Auto Set Up also selects the language automatically for the on-screen display depending on the Country setting you have made in step 2 on page 6 (unless you have selected **BELGIUM** or **SUISSE**), as shown below.

| | | | | | |
|-------------|-----------|-----------------|--------------|----------------------|--------------|
| SUOMI | → SUOMI | DANMARK | → DANSK | NEDERLAND | → NEDERLANDS |
| PORTUGAL | → ENGLISH | ÖSTERREICH | → DEUTSCH | GREECE | → ENGLISH |
| DEUTSCHLAND | → DEUTSCH | ČESKÁ REPUBLIKA | → ENGLISH | OTHER WESTERN EUROPE | → ENGLISH |
| POLSKA | → ENGLISH | ITALIA | → ITALIANO | OTHER EASTERN EUROPE | → ENGLISH |
| NORGE | → NORSK | MAGYARORSZÁG | → ENGLISH | | |
| SVERIGE | → SVENSKA | ESPAÑA | → CASTELLANO | | |

If you want to change the language setting manually, press "Language" on page 10.


Just Clock

Your recorder is equipped with the Just Clock function which provides accurate time keeping through automatic adjustments at regular intervals, by reading data from a PDC signal. If you want to take advantage of this function, simply set it to "ON".

press "Just Clock" on page 64.

Language

Turn on the TV and select the VIDEO channel (or AV mode).

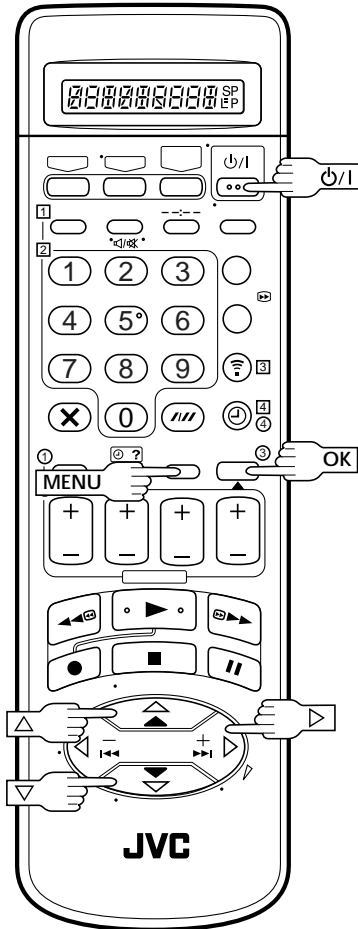

This recorder offers you the choice to view on-screen messages in 10 different languages. Though Auto Set Up selects the language automatically (pg. 9), you can change the language setting manually using this procedure as required.

1 TURN ON THE RECORDER


Press **⏻/I**.

2 ACCESS MAIN MENU

Press **MENU**.

3 ACCESS COUNTRY SET SCREEN

Press **△▽** to move the highlight bar (pointer) to "AUTO CH SET", then press **OK** or **▷**.

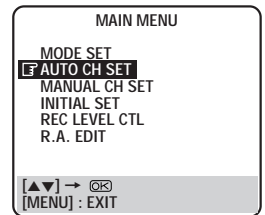

4 SELECT COUNTRY

Press **△▽** to move the highlight bar (pointer) to your country's name, then press **OK** or **▷**.

5 SELECT LANGUAGE

Press **△▽** to move the highlight bar (pointer) to the language of your choice.

- You do not have to press **OK**; pressing **OK** enters Auto Set/T-V LINK screen.




6 RETURN TO NORMAL SCREEN

Press **MENU**.

On-Screen Displays

Turn on the TV and select the VIDEO channel (or AV mode).

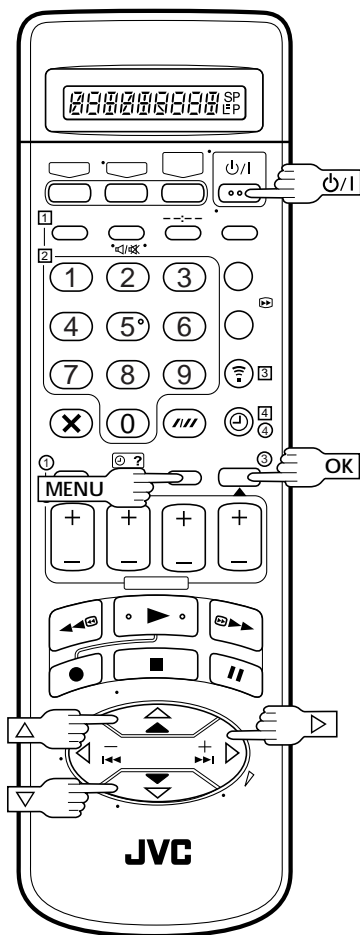

You can choose whether or not to have various operational indicators appear on screen, by setting this function ON or OFF. Messages appear in the selected language (☞ pg. 9 or 10).

1 TURN ON THE RECORDER

Press **⏻/I**.

2 ACCESS MAIN MENU SCREEN

Press **MENU**.

3 ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing **△▽**, then press **OK** or **▷**.

4 ENABLE/DISABLE ON-SCREEN DISPLAY

The default setting is "ON", so if you want on-screen displays, leave the setting as it is and go to step 5. If you don't want the displays to appear, press **△▽** to move the highlight bar (pointer) to "O.S.D." and press **OK** or **▷** to set "O.S.D." to "OFF".

| MODE SET | | |
|------------------|--|-----------|
| B. E. S. T. | | ON |
| PICTURE CONTROL | | AUTO |
| AUTO TIMER | | OFF |
| O.S.D. | | ON |
| DIRECT REC | | ON |
| AUTO SP→LP TIMER | | OFF |
| DIGITAL 3R | | ON |
| NEXT PAGE | | |
| [△▽] → [OK] | | |
| [MENU] : EXIT | | |


5 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- When you use this recorder as the player for editing, be sure to set "O.S.D." to "OFF" before starting.
- During playback, the operation mode indicators may be disturbed depending on the type of tape being used.


The superimposed indication on the TV screen tells you what the recorder is doing.

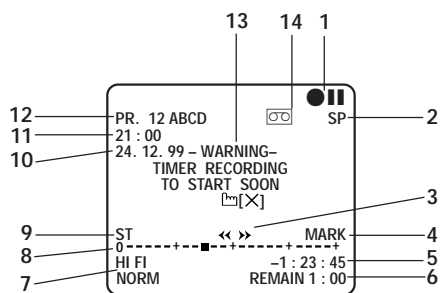

- 1- Operation mode indicators
- 2- Tape speed SP/LP/EP (EP is for NTSC playback only)
- 3- Tape direction
- 4- Index MARK/ERASE indicator (☞ pg. 17)
- 5- Counter display
- 6- Tape remaining time indicator (☞ pg. 23)
- 7- Audio mode display (☞ pg. 19)
- 8- Tape position indicator (☞ pg. 15)
- 9- Type of Broadcast (☞ pg. 25)
- 10- Current day/month/year
- 11- Clock display
- 12- Channel position number and station name/Aux. indicator (L-1, L-2, F-1 or S-1)
- 13- Timer warning display (☞ pg. 29, 31)
- 14- Cassette loaded mark

Power Save Mode

Turn on the TV and select the VIDEO channel (or AV mode).

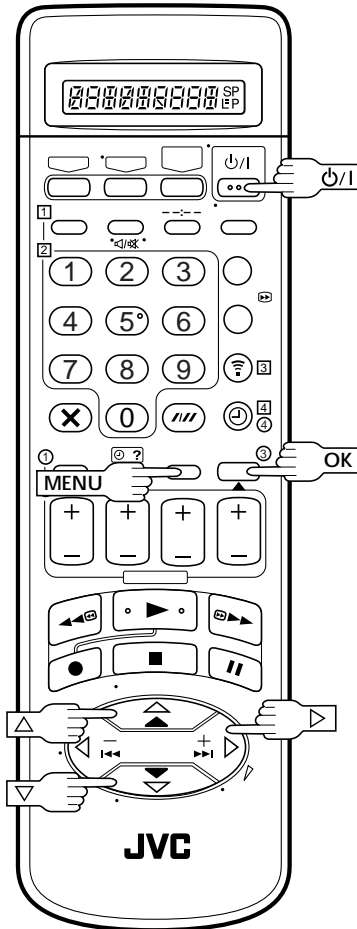

You can reduce the power consumption while the recorder is turned off.

1 TURN ON THE RECORDER


Press **⏻/I**.

2 ACCESS MAIN MENU SCREEN

Press **MENU**.


3 ACCESS MODE SET SCREEN

Press **△▽** to move the highlight bar (pointer) to "MODE SET", then press **OK** or **▷**.

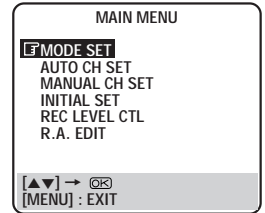

4 SELECT POWER SAVE MODE

Press **△▽** to move the highlight bar (pointer) to "POWER SAVE", then press **OK** or **▷** to set to "ON".

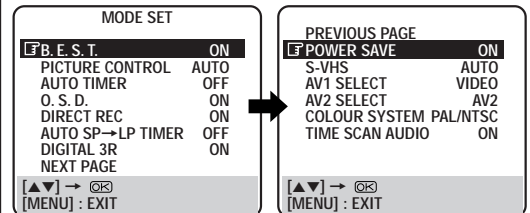

5 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- During Power Save, the display panel will be turned off.
- The Just Clock function (☞ pg. 64) does not work while the Power Save mode is engaged.
- While the recorder is in the Power Save mode, the picture may be distorted momentarily when you turn on/off the recorder.
- Power Save does not work when ...
 - ... the recorder is in the Timer mode.
 - ... the recorder's power is turned off after timer-recording (or Instant Timer Recording).
 - ... the Auto Satellite Prog Recording mode is engaged (☞ pg. 35).
 - ... "AV2 SELECT" is set to "DECODER" or "SAT" (☞ pg. 44).

T-V Link Functions

When you connect the recorder and your TV via fully-wired 21-pin SCART cable (☞ pg. 4), the following functions are available. You can use these functions only with the TV offering T-V Link, etc.*

For details, refer to the instruction manual for your TV.

* Compatible with TVs offering T-V Link, EasyLink, Megalogic, SMARTLINK, Q-Link, DATA LOGIC or NEXTVIEWLINK via fully-wired 21-pin SCART cable. The degree of compatibility and available functions may differ by system.

NexTView Link

You can download the EPG (Electronic Programme Guide) information from your TV for timer-programming on the recorder.

For details, refer to the instruction manual for your TV.

TV Auto Power On

You can turn on the TV and set it to video mode automatically whenever you play a tape.

For details, refer to the instruction manual for your TV.

VCR Auto Standby

You can use your TV's remote control to turn off the recorder.

For details, refer to the instruction manual for your TV.

Direct Rec

You can start recording the programme that you are watching on your TV with simple operation. Press and hold **RECORD** and press **PLAY** on the remote control, or press **RECORD** on the recorder.

Follow the procedure below to use this function.

1 TURN ON THE RECORDER


Press **⏻/I**.

2 ACCESS MAIN MENU SCREEN

Press **MENU**.


3 ACCESS MODE SET SCREEN

Press **△▽** to move the highlight bar (pointer) to "MODE SET", then press **OK** or **▷**.

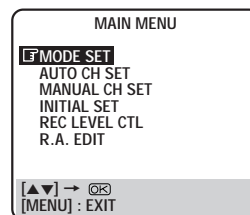

4 SELECT DIRECT REC MODE

Press **△▽** to move the highlight bar (pointer) to "DIRECT REC", then press **OK** or **▷** to set to "ON".

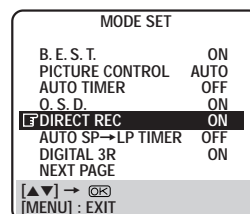


5 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- If "DIRECT REC" is set to "OFF", the **RECORD** button functions as described in "Basic Recording" (☞ pg. 22).
- During the Direct Rec, "--" appears on the display panel.
- When you perform T-V LINK functions, be sure to use the fully-wired 21-pin SCART cable.
- Retake function does not work during Direct Rec (☞ pg. 24).

Colour System Set

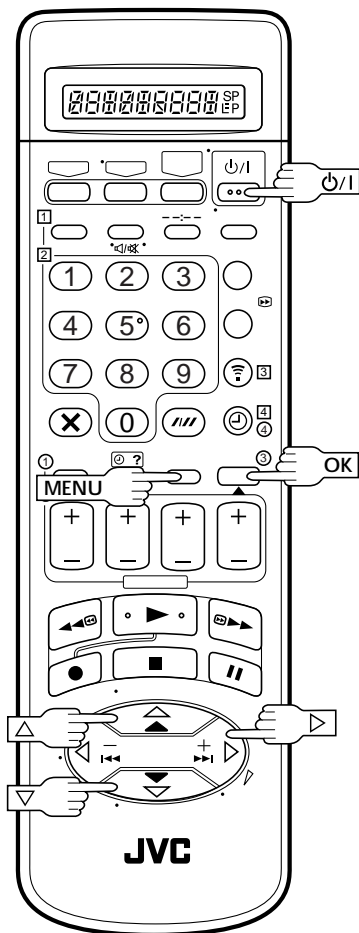

You can play back PAL, NTSC and MESECAM tapes, or record PAL and SECAM* signals on this recorder. Follow the procedure below to select the appropriate colour system.

* SECAM signals will be recorded as MESECAM on this recorder; MESECAM is the designation for tapes with SECAM signals that have been recorded on a MESECAM-compatible PAL video cassette recorder.

TURN ON THE RECORDER


Press **⏻/I**.

ACCESS MAIN MENU SCREEN

Press **MENU**.


ACCESS MODE SET SCREEN

Press **△▽** to move the highlight bar (pointer) to "MODE SET", then press **OK** or **▷**.

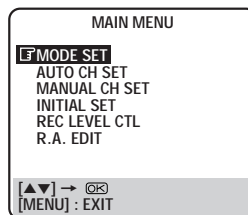

SELECT COLOUR SYSTEM MODE

Press **△▽** to move the highlight bar (pointer) to "COLOUR SYSTEM", then press **OK** or **▷** to select the appropriate colour system.

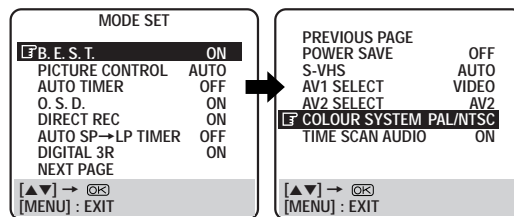

- a- PAL/NTSC: To record PAL signals, or play back a PAL or NTSC tape.
- b- MESECAM: To record SECAM signals, or play back a MESECAM tape.

RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:




About NTSC Playback

- Some TVs shrink the picture vertically and place black bars at the top and bottom of the screen. This is not a malfunction on the part of either the video recorder or the TV.
- The picture may roll up and down. This can be corrected using the V-HOLD control found on some TVs. (This cannot be corrected if the TV does not have a V-HOLD control.)
- The counter and tape remaining time readings will be incorrect.
- During search, still, or frame-by-frame playback, the picture will be distorted, and there may be a loss of colour.
- Depending on the type of TV, the top and bottom portions of superimposed displays may be cut off during NTSC playback.

5

Basic Playback


Turn on the TV and select the VIDEO channel (or AV mode).

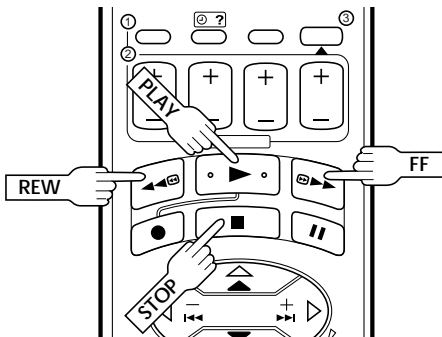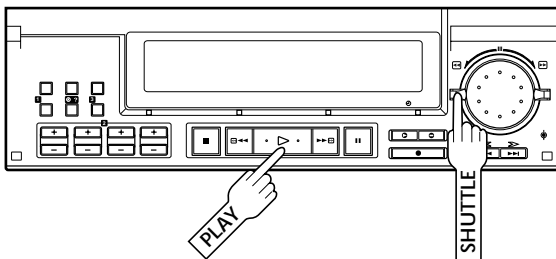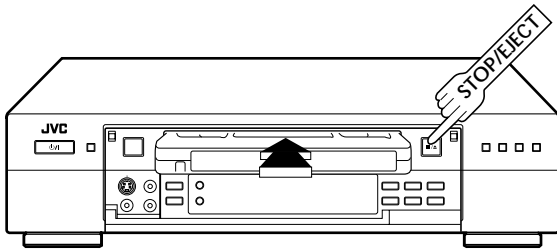

Tape Position Indicator

The tape position indicator appears on screen when, from the Stop mode, you press **FF**, **REW** or perform an Index Search. The position of "■" in relation to "0" (beginning) or "+" (end) shows you where you are on the tape.

"O.S.D." (pg. 11) must be set to "ON", or the indicator will not appear.

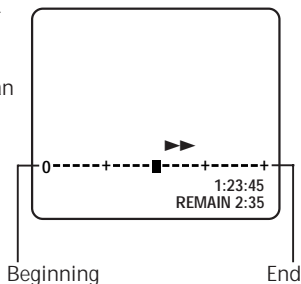

NOTE:

Depending on the type of tape used, there may be times when the indication is not correct.

The easiest, most basic operation possible with your video recorder is tape playback. Already-recorded signals on a video tape are read by your video recorder and displayed on your TV just like a TV programme.

1 LOAD A CASSETTE

Make sure the window side is up, the rear label side is facing you and the arrow on the front of the cassette is pointed toward the recorder. Don't apply too much pressure when inserting.

- The recorder power comes on automatically and the counter is reset to 0:00:00.
- If the record safety tab has been removed, playback begins automatically.

2 FIND PROGRAMME START POINT

If the tape is advanced past the start point, press **REW** or turn the **SHUTTLE** ring to the left. To go forward, press **FF** or turn the **SHUTTLE** ring to the right.


3 START PLAYBACK

Press **PLAY**. "BEST" appears blinking in the recorder's display panel during automatic tracking. (pg. 26)

4 STOP PLAYBACK


Press **STOP** on the remote or **STOP/EJECT** on the recorder's front panel. Then press **STOP/EJECT** to remove the cassette.

Usable cassettes

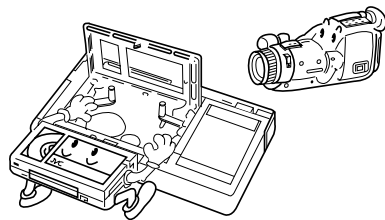

- Compact VHS camcorder recordings can be played on this video recorder. Simply place the recorded cassette into a VHS Cassette Adapter and it can be used just like any full-sized VHS cassette.
- This video recorder can record on regular VHS and Super VHS cassettes. While only VHS signals can be recorded on regular VHS cassettes, both VHS and Super VHS signals can be recorded and played back using Super VHS cassettes.

Playback Features

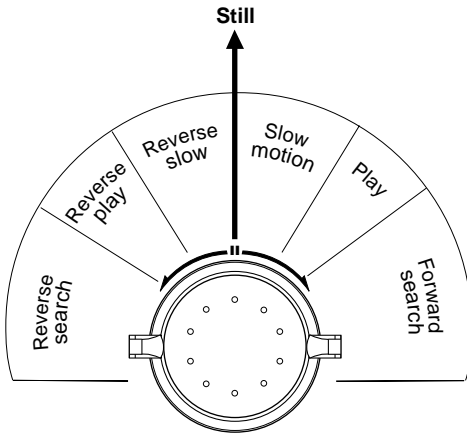

NOTES:

- Refer to the **SHUTTLE** ring illustration above as you read the following procedures.
- Reverse playback is possible only with a tape recorded in SP mode.

Still Picture/Frame-By-Frame Playback

1

PAUSE DURING PLAYBACK

Press **PAUSE**.

- During still picture, the sound from the previous 3 seconds (approx.) will be played back repeatedly (provided there was at least 6 seconds of normal playback prior to engaging the still picture mode).
- "TIME SCAN AUDIO" must be set to "ON", or the sound will not be heard. (☞ pg. 21)

2

ACTIVATE FRAME-BY-FRAME PLAYBACK

Turn the **JOG** dial to the right for forward frame-by-frame playback, or to the left for reverse frame-by-frame playback.

OR

Press **PAUSE**.

OR

Press ◀ or ▶.

To resume normal playback, press **PLAY**.

Slow Motion

1

ACTIVATE SLOW-MOTION PLAYBACK

During playback or still, turn the **SHUTTLE** ring to the right for forward slow motion, or to the left for reverse slow motion (refer to the illustration on the left).

OR

During still picture, press and hold **PAUSE** for 2 seconds, then release. Press and release again to return to still picture.

OR

During still picture, press and hold ◀ or ▶. Release to return to still picture.

To resume normal playback, press **PLAY**.

NOTE:

For Time Jog, see page 21.

High-Speed (Turbo) Search

1

ACTIVATE HIGH-SPEED SEARCH

During playback or still, turn the **SHUTTLE** ring all the way to the right for forward high-speed search, or to the left for reverse high-speed search. Releasing **SHUTTLE** resumes still picture playback.

OR

During playback or still, press **FF** for forward high-speed search, or **REW** for reverse high-speed search.

To resume normal playback, press **PLAY**.

NOTE:

For short searches, press and hold **FF** or **REW** for over 2 seconds during playback or still picture. When released, normal playback resumes.

ATTENTION

- The operations by **JOG** dial/**SHUTTLE** ring do not include TimeScan (☞ pg. 20).
- Picture may not appear during high-speed search with an LP-recorded tape.
- In the high-speed search, still, slow motion or frame by frame playback mode, the picture will be distorted, and there will be a loss of colour.
- When normal playback resumes from search, still, slow motion or frame-by-frame playback, the picture may jitter vertically momentarily depending on the type of TV being used.

Variable-Speed Search

1

ACTIVATE VARIABLE-SPEED SEARCH

During playback or still, turn the **SHUTTLE** ring to the right for forward variable-speed search, or to the left for reverse variable-speed search (refer to the illustration on page 16).

 
To resume normal playback, press **PLAY**.

NOTE:

Variable-speed search with TimeScan (☞ pg. 20) can be used by pressing the remote control's ◀ or ▶ button.

Manual Tracking

Your video recorder is equipped with automatic tracking control. During playback, you can override this and adjust the tracking manually by pressing the **TV PROG** buttons.



1

OVERRIDE AUTOMATIC TRACKING

Press **///** on the remote to engage manual tracking.

2

ADJUST TRACKING MANUALLY

Press **TV PROG +** or **-** to adjust tracking.

3

RETURN TO AUTOMATIC TRACKING

Press **///** on the remote to re-engage automatic tracking.

NOTE:

When a new tape is inserted, the recorder enters the automatic tracking mode automatically.

Skip Search

1

SKIP OVER UNWANTED SECTIONS

Press **30 SEC 1** to 4 times during playback. Each press initiates a 30-second period of fast-motion playback. Normal playback resumes automatically.

NOTE:

To return to normal playback during a Skip Search, press **PLAY**.

Index Search

Your recorder automatically marks index codes at the beginning of each recording. This function gives you quick access to any one of 9 index codes in either direction.



NOTE:


Before starting, make sure the recorder is in the Stop mode.

1

ACTIVATE INDEX SEARCH

Press ◀ or ▶ (◀◀ or ▶▶). "◀◀ 1" or "▶▶ 1" is displayed on screen and search begins in the corresponding direction.

- To access index codes 2 through 9, press ◀ or ▶ repeatedly until the correct index number is displayed.
Ex.: To locate the beginning of B from the current position, press ◀ twice.
To locate the beginning of D from the current position, press ▶ once.

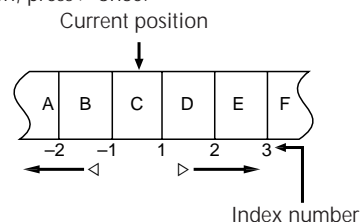

- When the specified index code is located, playback begins automatically.

Manual Index Mark/Erase

To mark an index code...

- ...during playback press **INDEX MARK** on the recorder.
- The recorder will mark an index code at that location.
- If "O.S.D." is set to "ON" (☞ pg. 11), "MARK" blinks on the screen while an index code is being marked.


To erase an index code...

- ...during playback or still press **INDEX ERASE** on the recorder.
- The recorder will fast-forward to the nearest index code and erase it. Playback continues after the index code is erased.
- If "O.S.D." is set to "ON" (☞ pg. 11), "ERASE" blinks on the screen while an index code is being erased.

Next Function Memory

The Next Function Memory "tells" the recorder what to do after rewinding. Before continuing, make sure the recorder is in the Stop mode.

- a-** For Automatic Start Of Playback After Tape Rewind . . .
... press **REW**, then press **PLAY** within 2 seconds.
- b-** For Automatic Power Off After Tape Rewind . . .
... press **REW**, then press **⏻** within 2 seconds.
- c-** For Automatic Timer Standby After Tape Rewind . . .
... press **REW**, then press **⏻** (or **⏻ TIMER**) within 2 seconds.

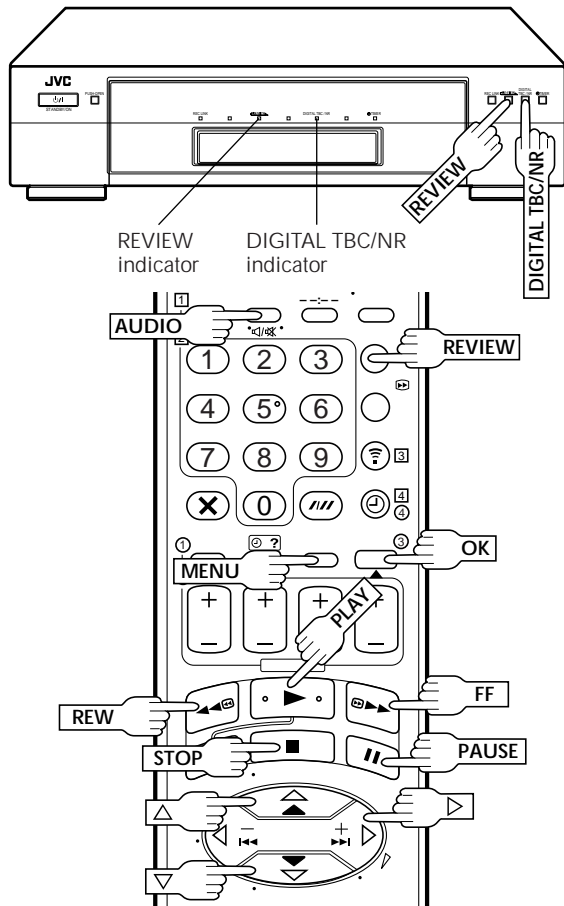

Digital TBC/NR

Your video recorder is equipped with the Digital TBC (Time Base Corrector) that removes jitter from fluctuating video signals to deliver a stable picture even with old tapes and rental cassettes.

The on/off of Digital 3-DNR (Noise Reduction) which cuts noise and enables clear picture reproduction is also linked to this function.

* The default setting is "ON".

We recommend that you use the Digital TBC feature when...

- ... playing back a tape recorded on a camcorder.
- ... playing back a tape repeatedly used.
- ... using this video recorder as the player for editing.

1

ACTIVATE DIGITAL TBC/NR

Press **DIGITAL TBC/NR** so that DIGITAL TBC/NR indicator lights up.

- To turn off DIGITAL TBC/NR, press **DIGITAL TBC/NR** again so that the indicator goes off.

NOTES:

- If you play back a tape recorded under poor TV reception condition, there may be cases where the picture becomes more stable with Digital TBC/NR set to off.
- When Digital TBC/NR is set to on, if you play back a tape where certain types of signals are recorded (using a PC or some character generators), the playback picture may be distorted. If this is the case, turn off Digital TBC/NR.
- When playing back a MESECAM tape, Digital TBC/NR does not function even though the indicator is lit.

Digital 3R

Digital 3R picture system applies edge correction to the luminance signal to enhance detail.

1


ACCESS MAIN MENU SCREEN

Press **MENU**.

2

ACCESS MODE SET SCREEN


Move the highlight bar (pointer) to "MODE SET" by pressing Δ / ∇ , then press **OK** or \triangleright .

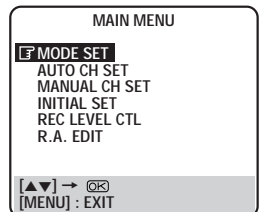

3

SELECT DIGITAL 3R SET MODE

Move the highlight bar (pointer) to "DIGITAL 3R" by pressing Δ / ∇ , then press **OK** or \triangleright to set to "ON".

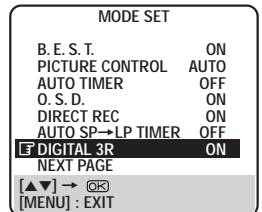

4

RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- Normally it is recommendable to keep "DIGITAL 3R" set to "ON".
- Depending on the type of tape being used, picture quality may be better with "DIGITAL 3R" set to "OFF".

Repeat Playback

Your video recorder can automatically play back the whole tape 50 times repeatedly.



START PLAYBACK

Press **PLAY**.

1

ACTIVATE REPEAT PLAYBACK

Press **PLAY** and hold for over 5 seconds, then release.

2

- The Play indicator (▶) on the display panel blinks slowly.
- The tape plays 50 times automatically, and then stops.

STOP PLAYBACK

Press **STOP** at any time to stop playback.

3

NOTE:

Pressing **PLAY**, **REW**, **FF** or **PAUSE** also stops Repeat Playback.

Instant ReView

Simply by pressing a single button, the recorder power comes on, rewinds, and begins playback of the last timer-recorded programme. If you have several programmes recorded, you can easily access any of them.

NOTE:

Before starting, make sure that the recorder is off and that the Timer mode is disengaged.

ACTIVATE INSTANT REVIEW

1

Press **REVIEW**. The recorder power comes on and the recorder searches for the index code indicating the start of the last timer-recorded programme. Once it's found, playback begins automatically.

- The front display panel tells you how many programmes have been timer-recorded. If you have, for example, 3 programmes, "REVIEW" and "3" appear and blink. The REVIEW indicator on the recorder also blinks. To watch the first of the 3 programmes, press **REVIEW** three times. The recorder searches and begins playback automatically. You can access a programme as far as 9 index codes away from the current tape position.

NOTES:

- Instant ReView is not possible while the recorder is in the Timer mode.
- The number of recorded programmes will not be displayed on the front display panel after Auto Satellite Prog recording (see pg. 35).

Soundtrack Selection

Your video recorder is capable of recording three soundtracks (HI-FI L, HI-FI R and NORM) and will play back the one you select.

During Playback


Pressing **AUDIO** on the remote control or **AUDIO MONITOR** on the recorder changes the soundtrack being played back as follows:

| TRACK | | USE |
|------------------------|-------------------|-----------------------------------|
| Recorder's Front Panel | On-Screen Display | |
| ▶ + ◀ | HI FI L ▶ ◀ R | For Hi-Fi stereo tapes |
| ▶ | HI FI L ▶ | For main audio of Bilingual tapes |
| ◀ | HI FI ◀ R | For sub audio of Bilingual tapes |
| NORM | NORM | For audio-dubbed tapes |
| ▶ + ◀ + NORM | HI FI NORM | For audio-dubbed tapes |

NOTES:

- "▶ + ◀" should normally be selected. In this mode, Hi-Fi stereo tapes are played back in stereo, and the normal audio track is played back automatically for tapes with only normal audio.
- For instructions on recording stereo and bilingual programmes, refer to page 25.
- "O.S.D." must be set to "ON" or the on-screen displays will not appear (see pg. 11).

TimeScan

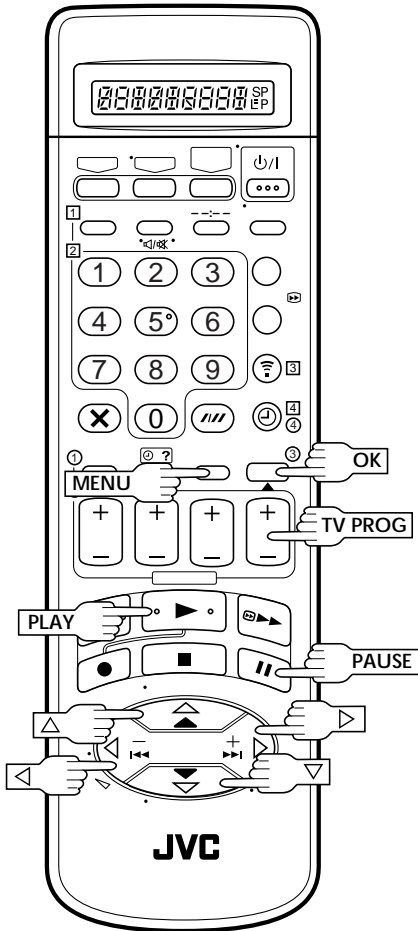

The **PLAY**, **PAUSE**, and **TV PROG** buttons on the recorder have the same function as those on the remote control.

Your recorder is equipped with the TimeScan function. TimeScan allows noise free pictures to be displayed on your TV screen in the forward and reverse search modes. Audio will be played back at normal speed during the TimeScan modes (☞ pg. 21). TimeScan also allows you to view a programme in search mode while listening to the audio.

NOTES:

- "TIME SCAN AUDIO" must be set to "ON", or the sound will not be heard in TimeScan mode. (☞ pg. 21)
- The audio will not synchronize with the video in TimeScan modes.
- During 1.5x speed TimeScan the audio playback speed will also be 1.5 times normal, so dialog will sound fast-talking.
- In Pause mode 3 seconds (approx.) of audio will be played back repeatedly. (☞ pg. 16)
- In TimeScan search modes some of the audio information will not be played so that the audio can keep up with the video.

Audio signal during TimeScan

Playback tape



Sound of ①, ③ and ⑤ is heard.

Sound of ② and ④ is not heard.

Output audio signal is normal (monaural) sound.

Variable-Speed Search

ACTIVATE VARIABLE-SPEED SEARCH

1

During playback, press ◀ or ▶.

- The more times you press, the faster the playback picture moves.
- To decrease speed, press the button for the opposite direction. (Refer to the chart on page 21 for playback speeds).

To resume normal playback, press **PLAY**.

If the picture jitters vertically during still or variable-speed search with a MESECAM tape:

- 1 Press **PAUSE**.
- 2 Press **TV PROG +** or **-** so that the vibration stops.

TimeScan

| Names of special-effects playback | Reverse | | | | Forward | | | | | | | | | | | | |
|-----------------------------------|------------------|-----|------|-----|--------------------------|-------|------------------|--------------------------|------------------|------|------|--------|----|----|----|----|----|
| | Search | | Play | | Slow-Motion (Time Jog**) | | *Still | Slow-Motion (Time Jog**) | | Play | | Search | | | | | |
| Speed SP | -9x | -7x | -5x | -3x | -1x | -1/2x | -1/3x | 0 | 1/3x | 1/2x | 1x | 1.5x | 2x | 3x | 5x | 7x | 9x |
| Speed LP | -7x | -5x | -3x | -1x | -1/2x | -1/3x | 0 | 1/3x | 1/2x | 1x | 1.5x | 2x | 3x | 5x | 7x | 9x | |
| Audio output | Audio is output. | | | | Audio is not output. | | Audio is output. | Audio is output. | Audio is output. | | | | | | | | |

* Still mode cannot be engaged using the remote control's ◀ or ▶ button. Still mode can be engaged by pressing the **PAUSE** button.

** Smooth slow motion delivering an uninterrupted moving image without distortion.

- If the picture jitters vertically, noise appears or the upper or lower part of the picture is distorted at -1/2x, -1/3x, 1/3x, 1/2x or 1.5x normal speed, use **TV PROG +** or **-** to correct the picture.
- When noise appears or the upper or lower part of the picture is distorted during TimeScan search, press **///** and adjust tracking with **TV PROG +** or **-** button.
- The speed is shown during TimeScan in the upper right corner of the TV screen for approx. 5 seconds. (The display may be distorted.)
- To resume normal playback, press **PLAY**.
- Picture and audio may become distorted when the recording speed changes. When this happens, resume normal playback once, and then try using TimeScan again.
- The picture may be noisy or there may be a loss of colour when you change the playback speed. (More noise will appear with LP recordings.)
- Noise may appear or the upper part of the picture may be distorted during still, frame-by-frame playback, 2x search of LP recordings, or depending on the tape being used.
- Picture may appear distorted in comparison to normal playback.
- When normal playback resumes from search (including TimeScan), still, slow motion or frame-by-frame playback, the picture may jitter vertically momentarily depending on the type of TV being used.
- Depending on the tape in use, noise may appear or the upper part of the picture may be distorted.
- In TimeScan mode there will be a time lag between the video and the audio and noise may appear in the audio signal.
- TimeScan sound quality will differ in comparison to normal playback.
- When material such as music videos where there is non-stop sound (very few breaks in the soundtrack) are viewed at 1.5x or 2x normal speed, the audio playback may be faster than normal.
- Depending on the type of tape contents, the sound may not be clear during forward slow-motion playback.
- Time Jog cannot be activated by pressing **PAUSE** for longer than 2 seconds.
- When the playback direction is reversed, it takes approximately 6 seconds until sound is heard.
- Picture will be monochrome with an LP-recorded MESECAM tape during TimeScan.
- TimeScan does not work with NTSC playback.
- TimeScan at -1/2x, 1/2x and 1.5x normal speed are not possible with a MESECAM tape.
- The operations by **JOG** dial/**SHUTTLE** ring do not include TimeScan; noise will appear on the screen and audio will not be output.



If you don't want to hear TimeScan audio, set "TIME SCAN AUDIO" to "OFF" (See below).

TimeScan Audio

The audio output can be set ON/OFF during TimeScan. Select ON/OFF as required.

* The default setting is "ON".




- 1 Press **MENU** to access the Main Menu screen.
- 2 Move the highlight bar (pointer) to "MODE SET" by pressing **Δ∇**, then press **OK** or **▷**.
- 3 Move the highlight bar (pointer) to "TIME SCAN AUDIO" by pressing **Δ∇**, then press **OK** or **▷** to select "ON" or "OFF".

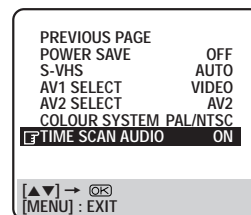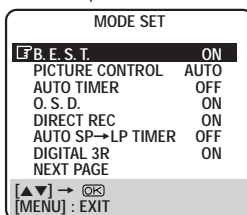

- 4 Press **MENU** to return to the normal screen.

Basic Recording

Turn on the TV and select the VIDEO channel (or AV mode).

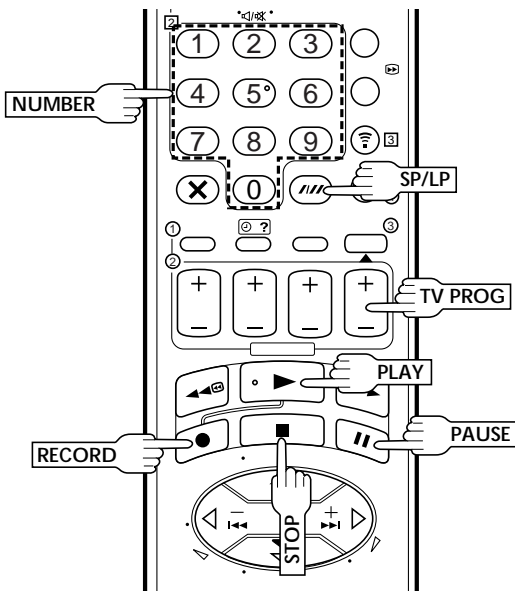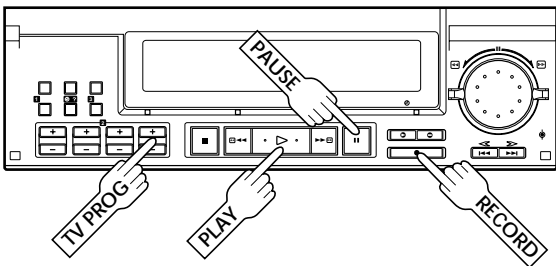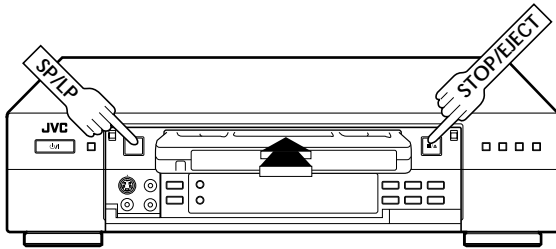

Recording Resume Function

If there is a power outage during recording (or Instant Timer Recording or timer recording), the recording will resume automatically when power is restored to the recorder unless the recorder's memory backup has expired.

TV signals being received by the recorder's built-in tuner can be recorded onto a video tape. You can "capture" a TV programme using your video recorder.

1 LOAD A CASSETTE

Insert a cassette with the record safety tab intact.

- The counter is reset to 0:00:00 and the recorder power comes on automatically.

2 CHOOSE A PROGRAMME

Press **TV PROG +/-** or the **NUMBER** keys to select the channel you wish to record.

3 SET TAPE SPEED

Press **SP/LP (//)**. Check the SP/LP indicator on the recorder display panel to confirm the selected tape speed.

4 START RECORDING

Press and hold **RECORD** and press **PLAY** on the remote control, or press **RECORD** on the recorder.

B.E.S.T. takes place at the beginning of both the first SP and the first LP recording after inserting the cassette (☞ pg. 26).

If "DIRECT REC" is set to "ON", the programme that appears on the TV screen will be recorded (☞ pg. 13).

5 PAUSE/RESUME RECORDING


Press **PAUSE**. Press **PLAY** to resume recording.

6 STOP RECORDING


Press **STOP** on the remote control or **STOP/EJECT** on the recorder. Then press **STOP/EJECT** to remove the cassette.

Accidental erasure prevention

- To prevent accidental recording on a recorded cassette, remove its safety tab. To record it later, cover the hole with adhesive tape.

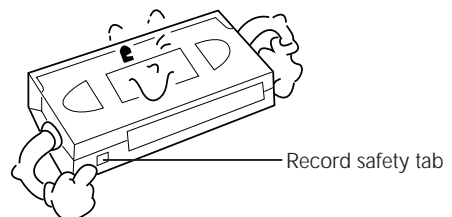

Recording Features

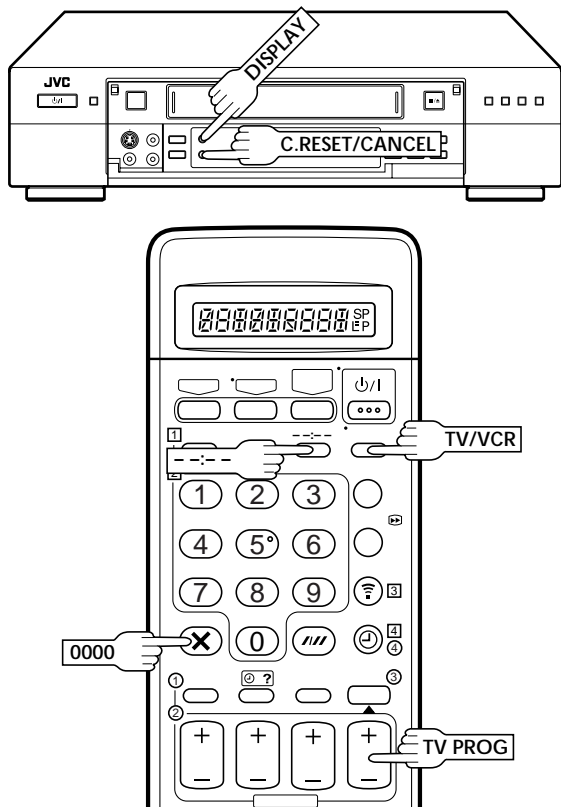

Record One Programme While Watching Another

If your recorder is connected to the TV via AV connection, press **TV/VCR**. The recorder's VCR indicator and the TV broadcast being recorded disappear.

1 SELECT CHANNEL TO WATCH

Once recording is in progress, all you need to do is to set the channel controls on the TV for the station you wish to view.

- The programme selected with the TV's channel controls appears on the TV screen while the one selected with the recorder's **TV PROG** buttons is recorded on the tape.
- If a decoder is connected to the recorder (see pg. 54), you can select a scrambled channel as well with the TV channel controls.

Elapsed Recording Time Indication

You can check the exact time of a recording.

1 SET COUNTER DISPLAY

Press **--:--** (or **DISPLAY**) until a counter reading appears on the display panel.

2 RESET COUNTER

Press **0000** (or **C.RESET/CANCEL**) before starting recording or playback.

- The counter is reset to "0:00:00" and shows the exact elapsed time as the tape runs.

Instant Timer Recording (ITR)

This easy method lets you record for from 30 minutes to 6 hours (selectable in 30-min. increments), and shuts the recorder off after recording is finished.

1 START RECORDING

Press **RECORD** on the recorder.

2 ENGAGE ITR MODE

Press **RECORD** again. "⊙" blinks and 0:30 appears on the front display panel.

3 SET RECORDING DURATION

If you want to record for more than 30 minutes, press **RECORD** to extend the time. Each press extends recording time by 30 minutes.

NOTE:

You can only perform ITR using the **RECORD** button on the recorder's front panel.

Tape Remaining Time


1 DISPLAY REMAINING TIME

Press **--:--** (or **DISPLAY**) until the time remaining on the tape appears.

- The display panel shows the tape remaining time with "▶" displayed.
- By pressing the **--:--** (or **DISPLAY**) button, you can change the display to show the counter reading, channel position*, clock time or tape remaining time.
* channel position is not displayed during playback.

NOTE:

Depending on the type of tape used, there may be times when the tape remaining time reading may not appear right away, or is not correct. "--:--" may sometimes appear, or the display may blink on occasion.

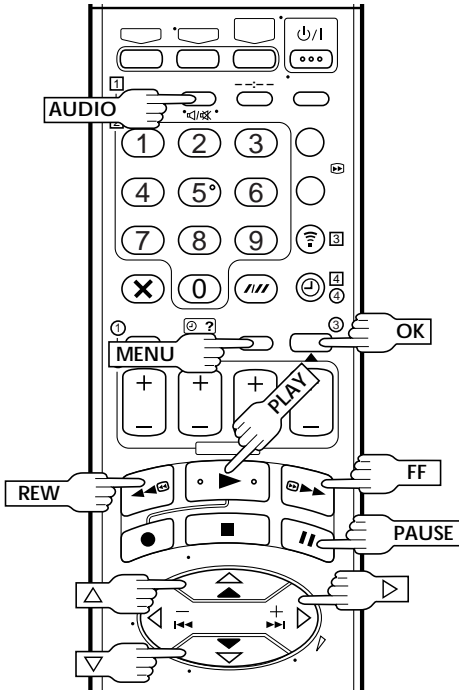

S-VHS (Super VHS) and VHS

Your recorder can record in either S-VHS or VHS.

To record in S-VHS:

Perform the steps 1 – 4 below to set "S-VHS" to "AUTO". Then, insert a cassette marked "S-VHS", the S-VHS indicator will light on the display panel. The S-VHS recording mode will be selected.

To record in VHS:


Insert a cassette marked "VHS". The VHS recording mode will be automatically selected regardless of the S-VHS mode setting.

To record in VHS on an S-VHS cassette:

Insert the cassette marked "S-VHS", the S-VHS indicator will light on the display panel. Then, perform the steps 1 – 4 below to set the "S-VHS" to "OFF"; the S-VHS indicator will go out. The VHS recording mode will be selected.

Retake

You can cut out unnecessary parts of a TV programme while you're recording it.

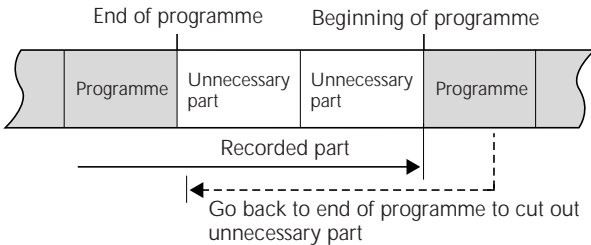

- 1** **ENGAGE RECORD-PAUSE MODE**
Press **PAUSE** during recording.
- 2** **LOCATE START POINT**
Turn the **JOG** dial to the left or right (or hold down **REW** or **FF**) and release it when you reach the point where you want to resume recording.
* Your recorder returns to the Record-Pause mode.
- 3** **RESUME RECORDING**
Press **PLAY** when you wish to resume recording.

NOTE:


Retake function does not work during Direct Rec (pg. 13).

ACCESS MAIN MENU SCREEN

Press **MENU**.


ACCESS MODE SET SCREEN

Move the highlight bar (pointer) to "MODE SET" by pressing Δ / ∇ , then press **OK** or \triangleright .

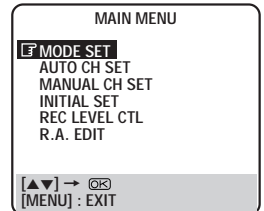

SELECT S-VHS MODE

Move the highlight (pointer) to "S-VHS" by pressing Δ / ∇ , then press **OK** or \triangleright to select "AUTO" or "OFF".

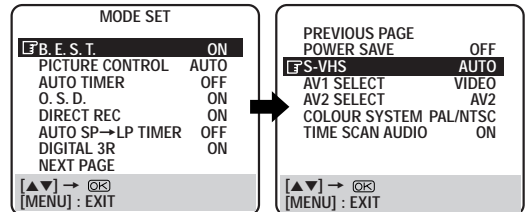


RETURN TO NORMAL SCREEN

Press **MENU**.

NOTE:

When playing back a tape that has been recorded in S-VHS, the S-VHS indicator lights on the display panel regardless of the "S-VHS" mode setting.

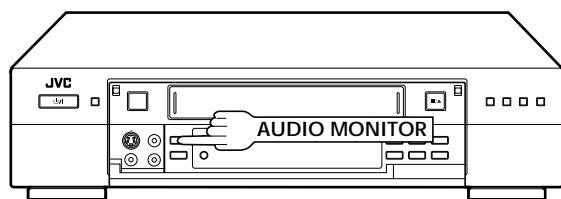

Receiving Stereo And Bilingual Programmes

Your recorder is equipped with a Sound-Multiplex decoder (A2) and a Digital stereo sound decoder (NICAM) making reception of stereo and bilingual broadcasts possible.

When the channel is changed, the type of broadcast being received will be displayed on the TV screen for a few seconds.

| Type of Broadcast Being Received | On-screen Display |
|----------------------------------|-------------------|
| A2 Stereo | ST |
| A2 Bilingual | BIL |
| Regular Monaural | (none) |
| NICAM Stereo | ST NICAM |
| NICAM Bilingual | BIL NICAM |
| NICAM Monaural | NICAM |

- To listen to a stereo programme, press **AUDIO** (or **AUDIO MONITOR**) until "L" and "R" appear on the front display panel or "HIFI L R" appears on the screen.
- To listen to a bilingual programme, press **AUDIO** (or **AUDIO MONITOR**) until "L" or "R" appears on the front display panel, or "HIFI L R" or "HIFI R" appears on the screen (as required).
- To listen to the Standard (regular monaural) audio while receiving a NICAM broadcast, press **AUDIO** (or **AUDIO MONITOR**) until "NORM" appears on the front display panel or on the screen.

NOTE:

"O.S.D." must be set to "ON" or the on-screen displays will not appear (see pg. 11).

To Record Stereo And Bilingual Programmes (A2)

- Stereo programmes are automatically recorded in stereo on the Hi-Fi audio track (with the normal audio track recording mixed L and R channel sound).
- Bilingual programmes are automatically recorded in bilingual on the Hi-Fi audio track. The main soundtrack will be recorded on the normal audio track.

To Record NICAM Stereo And Bilingual Programmes

The NICAM audio programme will be recorded on the Hi-Fi audio track, and the Standard audio programme on the normal audio track.

NOTES:

- If the quality of stereo sound being received is poor, the broadcast will be received in monaural with better quality.
- Before playing back a programme recorded in stereo, or a bilingual programme, refer to "Soundtrack Selection" (see pg. 19).

Hi-Fi Audio Recording Level Control

Your recorder allows manual adjustment of the Hi-Fi audio recording level.

1 ACCESS MAIN MENU SCREEN


Press **MENU**.

2 ACCESS HI-FI REC LEVEL CONTROL SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "REC LEVEL CTL", then press **OK** or \triangleright .

3 ADJUST AUDIO RECORDING LEVEL

Press Δ or ∇ .

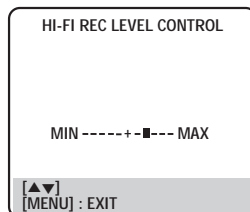

- Press Δ or ∇ briefly 5 times to move the on-screen's audio levels by one division on the scale. To move the audio levels faster, keep Δ or ∇ pressed.
- Adjust the recording level while watching the recorder's audio level meters. Set the level so that maximum volume causes the meters to vary between 0dB to 4dB.

4 RETURN TO NORMAL SCREEN


Press **MENU**.

NOTES:

- Noise will increase if the recording level is too low, while distortion will increase if the level is too high.
- When you finished Hi-Fi Audio recording, be sure to set the level control back to its centre position.

B.E.S.T. Picture System

Turn on the TV and select the VIDEO channel (or AV mode).

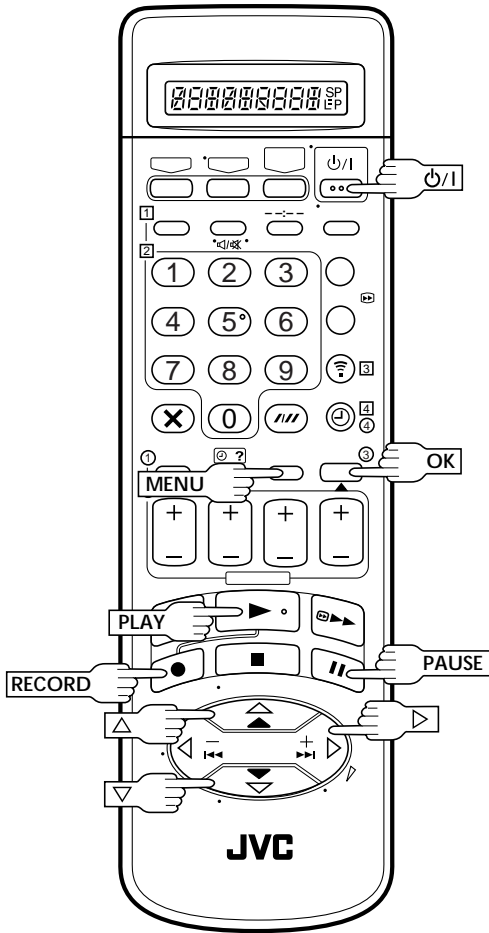

The **power**, **PLAY**, **RECORD**, and **PAUSE** buttons on the recorder have the same function as those on the remote control.

The B.E.S.T. (Biconditional Equalised Signal Tracking) system checks the condition of the tape in use during recording and playback, and compensates to provide the highest-possible recording and playback pictures. The default setting for both recording and playback is "ON".

Preparation

- 1** **TURN ON THE RECORDER**
 Press **power**.

- 2** **ACCESS MAIN MENU SCREEN**
 Press **MENU**.

- 3** **ACCESS MODE SET SCREEN**
 Press **up/down** to move the highlight bar (pointer) to "MODE SET", then press **OK** or **right**.

MAIN MENU

MODE SET

AUTO CH SET

MANUAL CH SET

INITIAL SET

REC LEVEL CTL

R. A. EDIT

[**up/down**] → [OK]

[MENU] : EXIT

- 4** **SELECT B.E.S.T. MODE**
 Press **up/down** to move the highlight bar (pointer) to "B.E.S.T.", then press **OK** or **right** to set to "ON" or "OFF".

MODE SET

B.E.S.T. ON

PICTURE CONTROL AUTO

AUTO TIMER OFF

O. S. D. ON

DIRECT REC ON

AUTO SP→LP TIMER OFF

DIGITAL 3R ON

NEXT PAGE

[**up/down**] → [OK]

[MENU] : EXIT

- 5** **RETURN TO NORMAL SCREEN**
 Press **MENU**.

 
Recording

1


START RECORDING

Press and hold **RECORD** and press **PLAY** on the remote, or press **RECORD** on the recorder.

DURING B.E.S.T.



B.E.S.T. COMPLETE

 

- The recorder spends approximately 7 seconds assessing the condition of the tape, then begins recording.

NOTES:

- The B.E.S.T. system works for both SP and LP modes only after a tape has been inserted and the Record mode is first initiated. It does not work during recording.
- The B.E.S.T. system does not work while Auto Satellite Prog recording is in progress (⇨ pg. 35).
- In the case of timer recording, the B.E.S.T. system works before recording is initiated.
- Once the cassette is ejected, the B.E.S.T. data is cancelled. The next time the cassette is used for recording, B.E.S.T. is re-performed.
- Pressing the recorder's **RECORD** button while "BEST" is displayed does not start Instant Timer Recording (⇨ pg. 23).

ATTENTION

*Since the B.E.S.T. system works before recording actually starts, there is a delay of approximately 7 seconds after **RECORD** and **PLAY** on the remote are pressed, or **RECORD** on the recorder is pressed. To make sure you record the desired scene or programme in its entirety, first perform the following steps:*

- 1) Press and hold **PAUSE** and press **RECORD** to engage the **RECORD PAUSE** mode.
 - The recorder then automatically checks the condition of the tape and, after approximately 7 seconds, re-enters **RECORD PAUSE**.
- 2) Press **PLAY** to start recording.
 - If you want to bypass the B.E.S.T. system and begin recording immediately, set "B.E.S.T." to "OFF" in step 4 on page 26.

 
Playback

The recorder assesses the quality of the tape once you initiate playback.

1

START PLAYBACK

Press **PLAY**.



- The recorder adjusts the playback picture quality based on the quality of the tape in use.
- B.E.S.T. is active during Auto Tracking. "BEST" appears blinking on the recorder's display panel.


NOTES:

- When watching a tape recorded with "B.E.S.T." set to "ON", it is recommended that you leave B.E.S.T. on during playback as well.
- When watching a rental tape or one recorded on another video recorder, or when using this recorder as the player for editing, set B.E.S.T. to your preference by performing steps 1 through 5 on page 26.
- "BEST" only appears at the beginning of automatic tracking. Even though it doesn't appear after that, the B.E.S.T. function is operative.

SHOWVIEW Timer Programming

Before performing ShowView Timer Programming:

- Make sure that the recorder's built-in clock is set properly.
- Insert a cassette with the safety tab in place. The recorder will come on automatically.
- Turn on the TV and select the VIDEO channel (or AV mode).

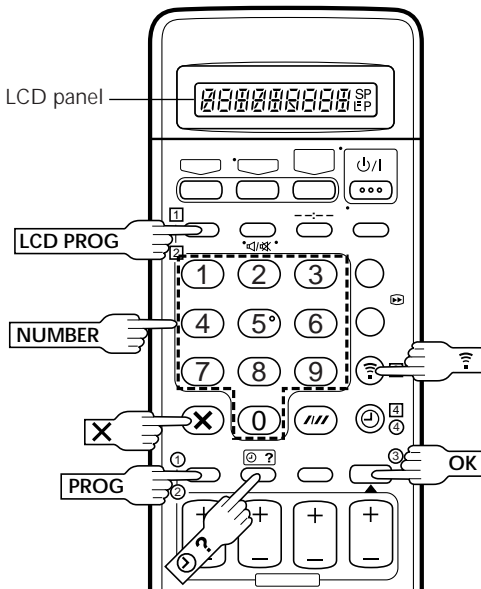


You can use the remote control with LCD panel to enter the ShowView number.

1

ACCESS SHOWVIEW DISPLAY

Press **LCD PROG**.

 The LCD panel looks like this:




2

ENTER SHOWVIEW NUMBER

Press the **NUMBER** keys to enter the ShowView number of a programme you wish to record, then press **?**.

- If you make a mistake, press **X** and input the correct number.

 The ShowView number you enter appears on the LCD panel:




Then go to step 3 in the right column.


1

ACCESS SHOWVIEW SCREEN

Press **PROG**.

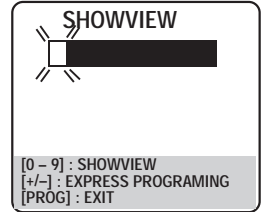

 The front display panel looks like this:




2


ENTER SHOWVIEW NUMBER

Press the **NUMBER** keys to enter the ShowView number of a programme you wish to record, then press **OK**.

- If you make a mistake, press **X** and input the correct number.

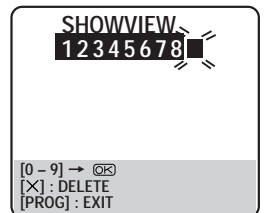

 The ShowView number you enter appears on the front display panel:





The display panel can show only a 4-digit number.

3

ACCESS SHOWVIEW PROGRAM SCREEN

The ShowView Program screen appears (if you're just starting out, "P1" appears).

 

The display panel shows the programme start time. Pressing **?** changes the display to the programme stop time, then the date and channel position.

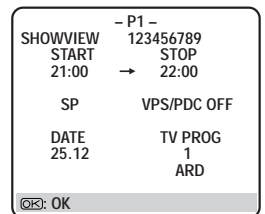

IMPORTANT

Make sure the channel position number you wish to record is displayed; if not, see "ShowView Setup" on page 66 and set the Guide Program number for that ShowView number correctly.

- If the number you entered is invalid, "ERROR" appears on the screen and "Err" appears on the display panel. Press **X** and input a valid ShowView number.
- If the "GUIDE PROG SET" screen appears, see "ATTENTION - Regarding Guide Program Number Set" on page 29.

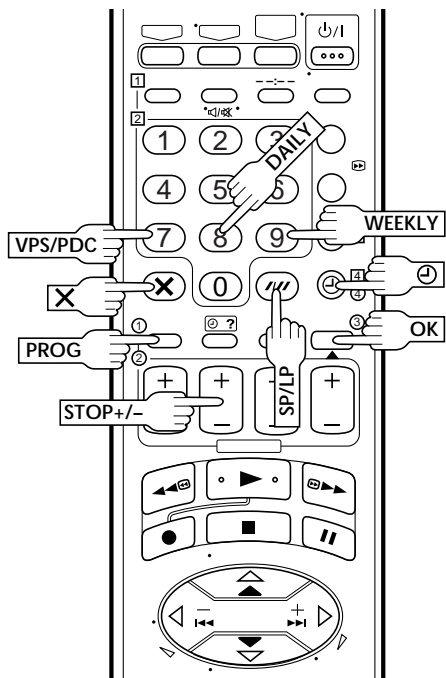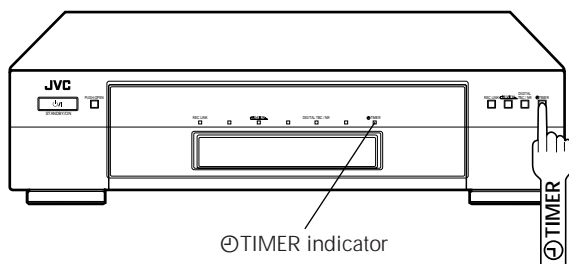

4 SET TAPE SPEED

Press **SP/LP** (//) to set the tape speed.

5 SET VPS/PDC MODE

Press **VPS/PDC** to select "ON" or "OFF".
 If "VPS/PDC ON" is displayed on the screen or "VPS/PDC" is lit on the display panel, VPS/PDC is set to ON.
 If "VPS/PDC OFF" is displayed on the screen or "VPS/PDC" is not lit on the display panel, VPS/PDC is set to OFF.
 ☞ "VPS/PDC Recording" on page 31.

6 RETURN TO NORMAL SCREEN

Press **PROG** or **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears.

- Repeat steps 1 – 6 for each additional programme.

7 ENGAGE RECORDER'S TIMER MODE

Press ⊖ (or ⊖TIMER). The recorder turns off automatically and ⊖ appears on the display panel. The ⊖TIMER indicator on the recorder also lights up.

- To disengage the timer, press ⊖ (or ⊖TIMER) again.

NOTES:

- To Change The Stop Time . . .
 . . . press **STOP +/-** in step 3. You can compensate for anticipated programme schedule delays this way.
- To Timer-Record Weekly Or Daily Serials . . .
 . . . in step 3, press **WEEKLY** (NUMBER key "9") for weekly serials or **DAILY** (NUMBER key "8") for daily serials (Monday – Friday). Either "WEEKLY" or "DAILY" appears on the screen. Pressing the button again makes the corresponding indication disappear.
- You can programme this recorder to timer-record as many as 8 programmes. If you try to programme the recorder to record a ninth, "PROGRAM FULL" appears on screen and "FULL" appears on the front display panel. To record the extra programme, you must first cancel any unnecessary programmes (☞ pg. 32).
- It is not possible to timer-record a TV programme with a ShowView number which starts with "0".

Satellite Tuner Users

To timer-record a satellite broadcast using ShowView:


- 1 Set "AV2 SELECT" to "AV2" (☞ pg. 44).
- 2 Perform steps 1 – 7.
- 3 Set the satellite tuner to the appropriate channel before the selected programme begins.
- 4 Leave the satellite tuner's power on.

ATTENTION

Regarding Guide Program Number Set

"GUIDE PROG SET" appears after performing step 3 if the Guide Program number for the ShowView number you entered has not been set.

- Press the **NUMBER** keys or Δ / ∇ to input the channel position number on which your recorder receives that station, then press **OK** or \triangleright to set the Guide Program number. The ShowView program screen appears.

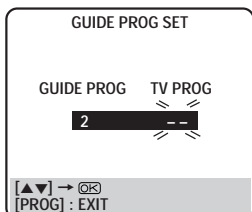

(Ex.) To timer-record a ZDF programme with ShowView.
 * If your recorder receives ZDF on the channel position 2, press **OK** or \triangleright after entering "2".

Timer Warning

If you have programmed your recorder to timer-record a programme or a series of programmes, a warning appears on screen to tell you that the recording is to start in 5 minutes.

– WARNING –
 TIMER RECORDING
 TO START SOON
 [X]

NOTES:


- The warning only appears if you're not in the Timer mode at that time.
- If this recorder is being used as the player for tape dubbing, the warning screen is recorded on the tape in the other video recorder.

The warning blinks for the entire 5 minutes leading up to the start of timer recording. To clear the display, press **X**.

Express Timer Programming

Before performing Express Timer Programming:

- Make sure that the recorder's built-in clock is set properly.
- Insert a cassette with the safety tab in place. The recorder will come on automatically.
- Turn on the TV and select the VIDEO channel (or AV mode).

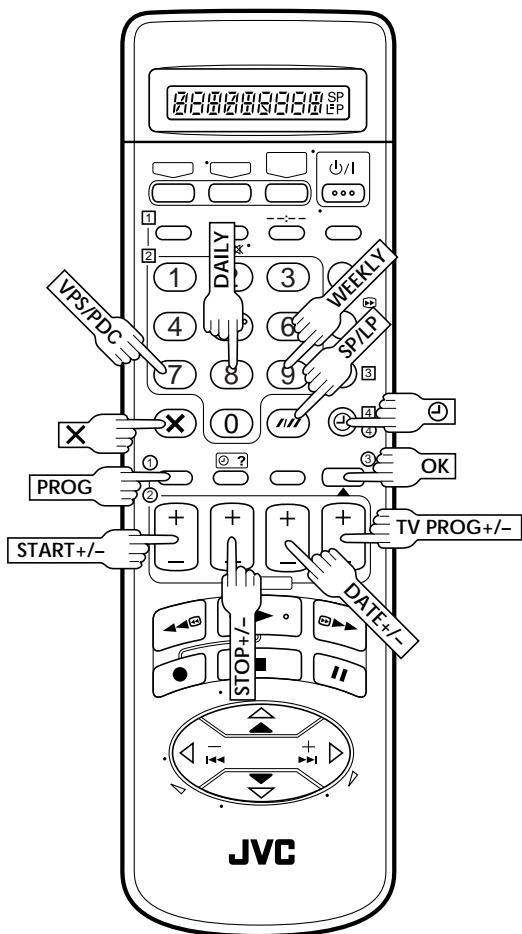


If you don't know the ShowView number for the programme you wish to record, use the following procedure to set your recorder to timer-record the programme.

1 ACCESS SHOWVIEW SCREEN


Press **PROG**.

2 ACCESS PROGRAMME SCREEN

Press **START +/-**. (If you're just starting out, "P1" appears.)

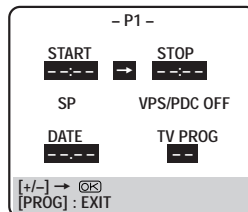

 
The front display panel looks like this:




3 ENTER PROGRAMME START TIME

Press **START +/-** to enter the time you want recording to start.

- Press and hold **START +/-** to move in 30-minute increments, or press and release repeatedly to move 1 minute at a time.

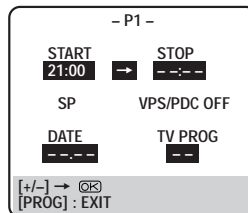

 The front display panel looks like this:



4 ENTER PROGRAMME STOP TIME

Press **STOP +/-** to enter the time you want recording to stop.

- Press and hold **STOP +/-** to move in 30-minute increments, or press and release repeatedly to move 1 minute at a time.

 

5 ENTER PROGRAMME DATE

Press **DATE +/-**. (The current date appears on screen. The date you enter appears in its place.)

6

ENTER CHANNEL POSITION

Press **TV PROG +/-**.

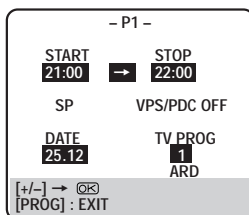

7

SET TAPE SPEED

Press **SP/LP (||||)** to set the tape speed.

8

SET VPS/PDC MODE

Press **VPS/PDC** to select "ON" or "OFF".

If "VPS/PDC ON" is displayed on the screen or "VPS/PDC" is lit on the display panel, VPS/PDC is set to ON. If "VPS/PDC OFF" is displayed on the screen or "VPS/PDC" is not lit on the display panel, VPS/PDC is set to OFF. "VPS/PDC Recording" in the right column.

9

RETURN TO NORMAL SCREEN

After confirming all information is correct, press **PROG** or **OK**. "PROGRAM COMPLETED" appears on the screen for about 5 seconds, then normal screen appears.

- Repeat steps 1 – 9 for each additional programme.

10

ENGAGE RECORDER'S TIMER MODE

Press (or **TIMER**). The recorder turns off automatically and appears on the display panel. The **TIMER** indicator on the recorder also lights up.

- To disengage the timer, press (or **TIMER**) again.

To Timer-Record Weekly Or Daily Serials . . .

. . . anytime during steps 2 through 9, press **WEEKLY** (NUMBER key "9") for weekly serials or **DAILY** (NUMBER key "8") for daily serials (Monday – Friday). Either "WEEKLY" or "DAILY" appears on the screen. Pressing the button again makes the corresponding indication disappear.

NOTE:

You can programme this recorder to timer-record as many as 8 programmes. If you try to programme the recorder to record a ninth, "PROGRAM FULL" appears on screen and "FULL" appears on the front display panel. To record the extra programme, you must first cancel any unnecessary programmes (pg. 32).

Satellite Tuner Users

To timer-record a satellite broadcast using Express Timer Programming:

- 1 Set "AV2 SELECT" to "AV2" (pg. 44).
- 2 Perform steps 1 – 10. Enter "L-2" for the channel position in step 6.
- 3 Set the satellite tuner to the appropriate channel before the selected programme begins.
- 4 Leave the satellite tuner's power on.

VPS/PDC Recording

Now available from some TV stations, PDC (Programme Delivery Control) and VPS (Video Programme System) are service designed to assure safe, accurate timer recording. With this system, special code signals are transmitted together with the audio/video signals. These code signals control your video recorder and have precedence over the advertised times you may have preset into the timer. This means that your recorder will start and stop recording when the preset TV programmes actually start and end — even if the broadcast time of a preset TV programme is changed.

NOTES:

- When you use Express Timer Programming, set the start time (VPS or PDC time) exactly as advertised in the TV listing. A different time than advertised will result in no recording.
- VPS/PDC recording is also possible when a satellite tuner or a cable system is connected to AV2 IN/DECODER on your recorder.
- VPS/PDC recording is also possible via the AV1 IN/OUT connector.

How to check if the station being received transmits a VPS/PDC signal

- 1 Press **--:--** until the channel position appears on the display panel.
- 2 Hold down **START+** for about 5 seconds.
 - "VPS/PDC" appears blinking on the display panel. *If a VPS/PDC signal is detected from the station, "VPS/PDC" will stop blinking.*
 - *If no VPS/PDC signal is detected from the station, "VPS/PDC" will blink at a slower rate.*
- 3 Press **--:--** or **START+** again to return to normal display.

Timer Warning


If you have programmed your recorder to timer-record a programme or a series of programmes, a warning appears on screen to tell you that the recording is to start in 5 minutes.

– WARNING –
TIMER RECORDING
TO START SOON
 [X]

NOTES:

- The warning only appears if you're not in the Timer mode at that time.
- If this recorder is being used as the player for tape dubbing, the warning screen is recorded on the tape in the other video recorder.

The warning blinks for the entire 5 minutes leading up to the start of timer recording. To clear the display, press **X**.

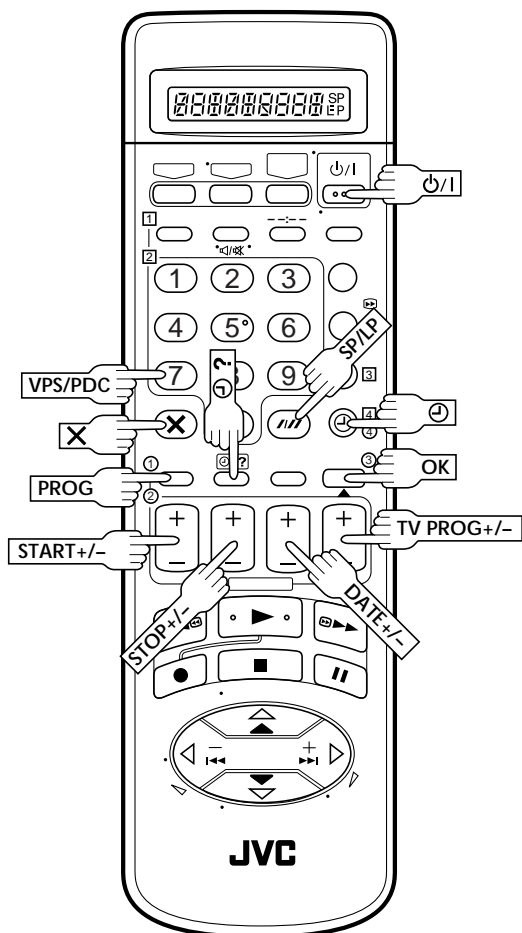

Check, Cancel And Replace Programmes

1

DISENGAGE TIMER MODE

Press \odot (or \odot TIMER), then press \odot /I.

2

ACCESS PROGRAM CHECK SCREEN/DISPLAY

Press \odot ?.

| PR | START | STOP | CH | DATE |
|----|-------|-------|----|-------|
| 1 | 8:00 | 10:00 | 3 | 24.12 |
| 2 | 10:00 | 10:45 | 2 | 25.12 |
| 3 | 11:30 | 13:00 | 1 | 25.12 |
| 4 | | | | |
| 5 | | | | |
| 6 | | | | |
| 7 | | | | |
| 8 | | | | |

[\odot ?] : NEXT

P 1 P 8

3

ACCESS PROGRAM SCREEN/DISPLAY

Press \odot ? again to check more information. Each time you press \odot ?, the next programme's information appears.

| - P1 - | |
|---------------|---------------------|
| START 8:00 | STOP 10:00 |
| SP | VPS/PDC OFF |
| DATE 24.12 | TV PROG 3 WDR |

[\odot ?] : NEXT

8:00 SP P 1

- The display panel shows the programme start time. Pressing **OK** changes the display to the programme stop time, then the date and the channel position.

To cancel or replace a programme...

4

CANCEL OR REPLACE A PROGRAMME

Press **X** (or **C.RESET/CANCEL**) to cancel a programme. To replace a programme, press the appropriate button: **START +/-**, **STOP +/-**, **DATE +/-**, **TV PROG +/-**, **VPS/PDC**, **SP/LP** (//).

5

RETURN TO NORMAL SCREEN/DISPLAY

Press \odot ? as many times as necessary. If there are still some programmes remaining, go on to step 6.


6

RETURN TO TIMER MODE

Press \odot (or \odot TIMER).

NOTE:

You can also check the programmes on the display panel even if the recorder's power is off (unless the recorder is in the Power Save mode \square pg. 12) or the recorder is in the Timer mode; however, it is not possible to cancel or replace the programmes.

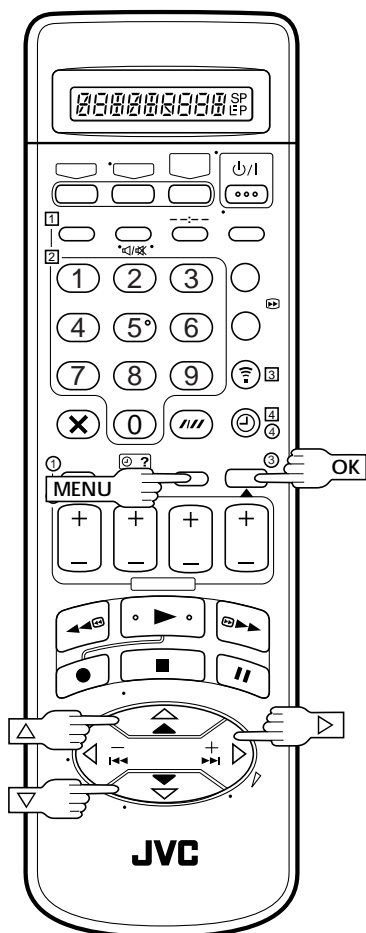

Auto SP→LP Timer

If, when timer-recording in SP mode, there is not enough tape to record the entire programme, the recorder automatically switches to LP mode to allow complete recording.

For Example . . .

Recording a programme of 210 minutes in length onto a 180-minute tape

Approximately 150 minutes Approximately 60 minutes

| | |
|-------------------|---------|
| SP mode | LP mode |
| Total 210 minutes | |

Make sure you set "AUTO SP→LP TIMER" to "ON" at the Mode Set screen before the timer-recording starts.

1 ACCESS MAIN MENU SCREEN

Press **MENU**.

2 ACCESS MODE SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .

3 SELECT MODE

Press Δ / ∇ to move the highlight bar (pointer) to "AUTO SP→LP TIMER", then press **OK** or \triangleright to select "ON".


| MODE SET | |
|---|-----------|
| B. E. S. T. | ON |
| PICTURE CONTROL | AUTO |
| AUTO TIMER | OFF |
| O. S. D. | ON |
| DIRECT REC | ON |
| AUTO SP→LP TIMER | ON |
| DIGITAL 3R | ON |
| NEXT PAGE | |
| [Δ / ∇] → [OK] [MENU] : EXIT | |

4 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- If you have programmed the recorder to timer-record 2 or more programmes, the second programme and those thereafter may not fit on the tape if you set "AUTO SP→LP TIMER" to "ON". In this case, make sure the mode is not engaged, then set the tape speed manually during timer programming.
- In order to ensure that the recording fits on the tape, this feature may leave a slight non-recorded section at the end of the tape.
- There may be some noise and sound disturbance at the point on the tape where the recorder switches from SP to LP mode.
- The Auto SP→LP Timer feature is not available during ITR (Instant Timer Recording), and the feature will not work properly with any tapes longer than E-180 or with some tapes of shorter lengths.
- If you perform timer recording with both VPS/PDC and the Auto SP→LP Timer activated, and the programme goes beyond its originally scheduled length, there may be times when the programme cannot be recorded in its entirety.

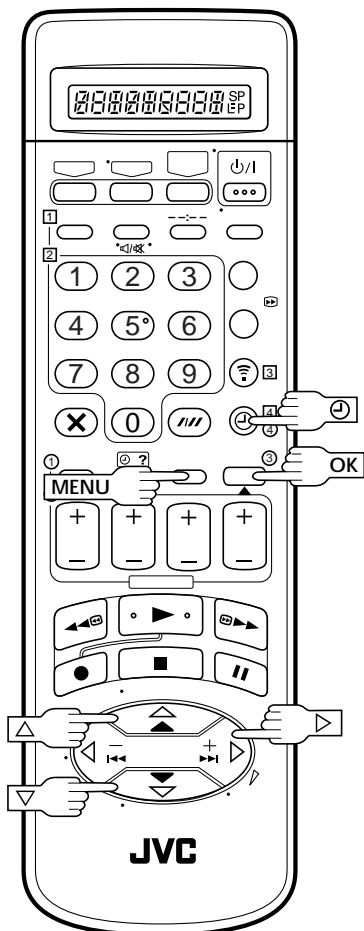

Auto Timer


When the Auto Timer is set to ON the timer is automatically engaged when the recorder power is turned off and automatically disengaged when the recorder is powered back on.

1 ACCESS MAIN MENU SCREEN

Press **MENU**.


2 ACCESS MODE SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .

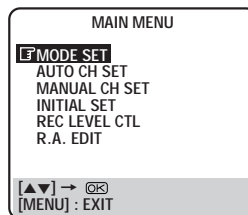

3 SELECT MODE

Press Δ / ∇ to move the highlight bar (pointer) to "AUTO TIMER", then press **OK** or \triangleright to select either "ON" or "OFF".

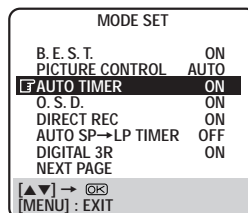


4 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTE:

For safety, when Auto timer is set to "OFF", all other recorder functions are disabled while the Timer mode is engaged. To disengage the timer, press \ominus (or \ominus **TIMER**).

Automatic Satellite Programme Recording

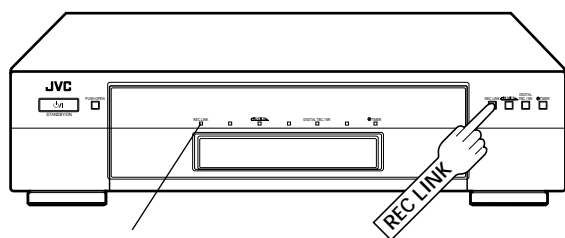

REC LINK indicator

ATTENTION

- Be sure not to turn on the satellite tuner before the programme is executed; otherwise, the recorder will start recording when the satellite tuner's power is turned on.
- If you have connected another appliance other than a satellite tuner to the AV2 IN/DECODER connector, be sure not to engage the Auto Satellite Prog Rec mode; otherwise, the recorder will start recording when the connected appliance's power is turned on.
- Auto Satellite Prog recording and timer-recording cannot be done at the same time.

This facility allows you record automatically a satellite programme which is timer-programmed on your external satellite tuner. Connect a satellite tuner to the recorder's AV2 IN/DECODER connector (☞ pg. 51, 52) and programme the timer on the satellite tuner; the recorder starts recording when the signals input from the satellite tuner to the AV2 IN/DECODER connector, and when there is no input signals the recorder stops recording and the power shuts off.

Before performing the following steps:

- Make sure the satellite tuner is connected to the recorder's AV2 IN/DECODER connector. (☞ pg. 51, 52)
- Programme the timer on the satellite tuner.
- Insert a cassette with the safety tab in place.

1 SELECT AV2 SELECT MODE

Set "AV2 SELECT" to "AV2" (☞ pg. 44).

- When you select "SAT", refer to "IMPORTANT" on page 51.

2 SET TAPE SPEED

Press SP/LP (⏏) to set the tape speed.

3 ENGAGE AUTO SATELLITE PROG REC MODE

Press and hold **REC LINK** on the recorder for about 2 seconds. The REC LINK indicator lights up and the recorder turns off automatically.

- To disengage the Auto Satellite Prog Rec mode, press **REC LINK**. The REC LINK indicator goes off.
- If the recorder's power is off, it is not possible to engage the Auto Satellite Prog Rec mode.


NOTES:

- Auto Satellite Prog recording is possible with the AV2 IN/DECODER connector only. (☞ pg. 51, 52)
- For timer programming of the satellite tuner, refer to the instruction manual of the satellite tuner.
- Auto Satellite Prog recording is not possible if your satellite tuner does not have a timer.
- The REC LINK indicator blinks while Auto Satellite Prog recording is in progress.
- Pressing the recorder's ⏏ button while Auto Satellite Prog recording is in progress turns off the recorder's power and disengage the Auto Satellite Prog Rec mode.
- If there are more than one satellite programme you wish to record with Auto Satellite Prog Recording, it is not possible to set the different tape speed per each; the tape speed selected in step 2 will be applicable to all the programmes for Auto Satellite Prog recording.
- The B.E.S.T. system (☞ pg. 26) does not work while Auto Satellite Prog recording is in progress.
- Just Clock (☞ pg. 64) does not work when the Auto Satellite Prog Rec mode is engaged.
- Depending on the type of satellite tuner, the recorder may not record a slight portion of the beginning of the programme or may record slightly longer than the actual length of the programme.
- If you engage the Auto Satellite Prog Recording mode when the satellite tuner's power is on, the recorder will not start Auto Satellite Prog recording even though the REC LINK indicator blinks. When the satellite tuner shuts off once and is turned back on again, the recorder starts recording.
- When the Auto Satellite Prog Rec mode is engaged or the recorder's power is turned off after Auto Satellite Prog recording is finished, the recorder will not enter the Timer mode even though "AUTO TIMER" is set to "ON".
- After Auto Satellite Programme recording, the number of recorded programmes will not be displayed on the front display panel for the Instant ReView function (☞ pg. 19).
- You can also record a programme from your cable system in the same way if the system has a timer.
- When you press and hold the recorder's **REC LINK** button to engage the Auto Satellite Prog Rec mode, if the REC LINK indicator does not light but instead blinks quickly even though your satellite tuner's power is off, Auto Satellite Prog Recording will not work properly with that satellite tuner*.

If this is the case, perform "Express Timer Programming" (☞ pg. 30) to timer-record a satellite programme.

* Some satellite tuners output signals even if the power is off. Auto Satellite Prog Recording is not possible with those satellite tuners.

Remote Control Functions

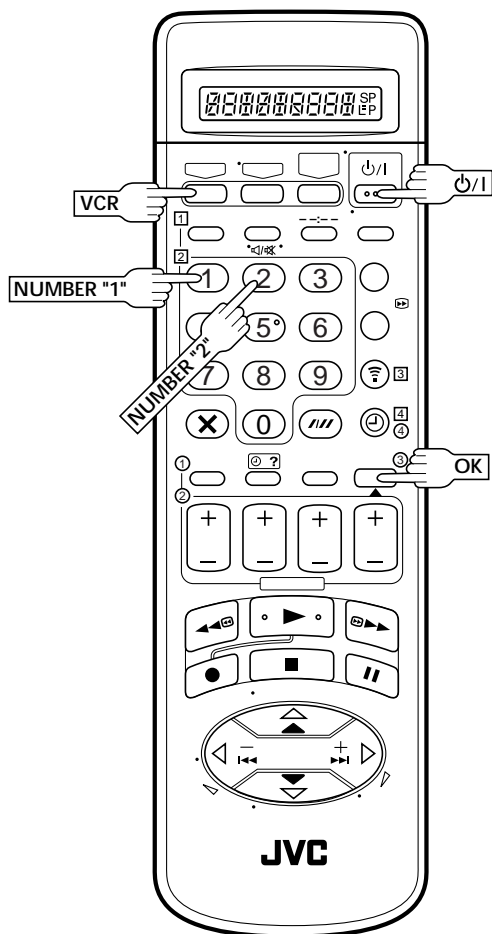

Remote A/B Code Switching

The remote control is capable of controlling two JVC video recorders independently; one set to respond to the remote control's A code control signals and another set to respond to B code control signals. The remote control is preset to send A code signals because your video recorder is initially set to respond to A code signals. You can easily modify your video recorder to respond to B code signals.

1 REMOVE POWER SUPPLY

Unplug the mains power cord from the mains outlet.

2 SET REMOTE CONTROL CODE

Press and hold **VCR** on the remote control for over 2 seconds, press the **NUMBER** key "2" and then press **OK**.

3 RE-SUPPLY POWER


Plug the mains power cord back into the mains outlet.

4 TURN THE RECORDER ON

Press ϕ/I on the remote control. The recorder will now only respond to B code signals.

NOTE:

To set the recorder back to respond to A code signals, repeat the same procedure as shown above except pressing **NUMBER** key "1" instead of "2" in step 2.

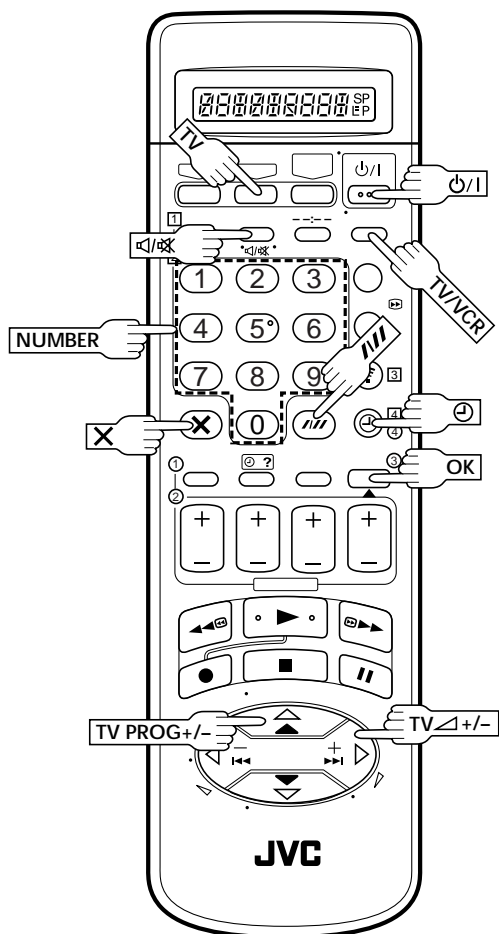

TV Multi-brand Remote Control

Your remote control can operate the basic functions of your TV set. In addition to JVC TVs, other manufacturer's TVs can also be controlled.

Before you start . . .

- Turn off the TV using its remote control.

1 SET TV BRAND CODE

Refer to the chart below. Press and hold **TV** on the recorder's remote control for over 2 seconds, enter your TV's brand code using the **NUMBER** keys, then press **OK**.

Check if the TV's power goes on as it should. If it does, try other operations (→ step 2).

- Once you have set the remote control to operate the TV, you don't have to repeat this step until you replace your remote control's batteries.
- JVC or SAMSUNG has more than one code. If the TV does not function with one code, try entering another.

2 OPERATE TV

First, press **TV** to set the remote control to TV mode, then press the corresponding button: **TV PROG +/-**, **TV/VCR**, **TV ▲ +/-** (Volume), **MUTE** (Muting), **NUMBER** keys.

- For some brands of TV, you must press **OK** after having pressed the **NUMBER** keys.

IMPORTANT

Although the provided remote control unit is compatible with JVC televisions, as well as many other models, it may not work with your TV, or in some instances, may have limited function capability.

Control Your TV Using Additional Buttons


Use the **NUMBER** keys, and the **///** button, **X** button or **⊖** button to select the TV's channel.

- With televisions under Code 01, 02, 07, 10, 11, 14, 20, 23, 24, 25, 27, 33 or 35, the **///** button corresponds to the 1-digit/2-digit entry switching button (often labelled - / - -) of your TV's remote control.
- With televisions under Code 01, 28, 29 or 34, the **X** button corresponds to the 10 + button, and the **⊖** button corresponds to the 20 + button of your TV's remote control.

NOTE:

The way these buttons are used is determined by your TV. Use these buttons as instructed for your TV's remote control.

| TV BRAND NAME | CODE |
|---------------|--------------------|
| JVC | 01, 23, 24, 25 |
| BLAUPUNKT | 19 |
| BRANDT | 26 |
| FERGUSON | 27 |
| FINLUX | 30 |
| FUNAI | 32 |
| LG/GOLDSTAR | 18 |
| GRAETZ | 28 |
| GRUNDIG | 19 |
| HITACHI | 10 |
| ITT | 28 |
| LUXOR | 28 |
| MITSUBISHI | 03 |
| MIVAR | 29 |
| NEC | 20 |
| NOKIA | 31 |
| NORDMENDE | 26 |
| PANASONIC | 11 |
| PHILIPS | 02 |
| SABA | 26 |
| SALORA | 28 |
| SAMSUNG | 02, 12, 33, 34, 35 |
| SELECO | 28 |
| SHARP | 06 |
| SONY | 07 |
| TELEAVIA | 26 |
| TELEFUNKEN | 26 |
| THOMSON | 26 |
| TOSHIBA | 14 |

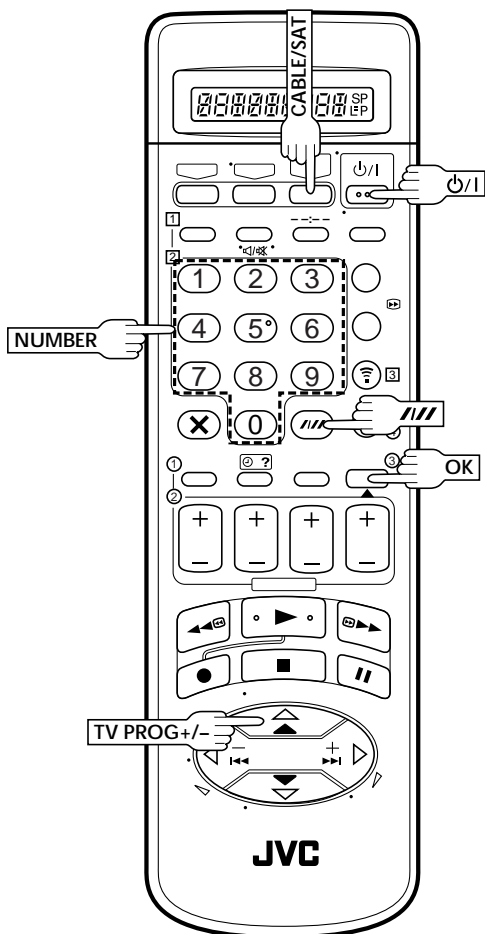

Satellite Tuner Multi-Brand Remote Control

Your remote control can operate the basic functions of your satellite tuner set. In addition to JVC satellite tuners, other manufacturer's satellite tuners can also be controlled.

Before you start . . .

- Turn off the satellite tuner using its remote control.

1 SET SATELLITE TUNER BRAND CODE

Refer to the chart below. Press and hold **CABLE/SAT** on the recorder's remote control for over 2 seconds, enter your satellite tuner's brand code using the **NUMBER** keys, then press **OK**.

Check if the satellite tuner's power goes on as it should. If it does, try other operations (☞ step 2).

- Once you have set the remote control to operate the satellite tuner, you don't have to repeat this step until you replace your remote control's batteries.
- Some satellite tuner brands have more than one code. If the satellite tuner does not function with one code, try entering another.

2 OPERATE SATELLITE TUNER

First, press **CABLE/SAT** to set the remote control to satellite tuner mode, then press the corresponding button: **⏻/⏩**, **TV PROG +/-**, **NUMBER** keys.

- For VIDEOWAY or some brands of satellite tuner, you must press **///** after having pressed the **NUMBER** keys.
- The **NUMBER** buttons may not function with some satellite tuners.


IMPORTANT

Although the provided remote control unit is compatible with JVC satellite tuners, as well as many other models, it may not work with your satellite tuner, or in some instances, may have limited function capability.

| SATELLITE TUNER BRAND | CODE |
|-----------------------|----------------|
| JVC | 72, 73 |
| AMSTRAD | 60, 61, 62, 63 |
| BT | 72 |
| CANAL + | 81 |
| FINLUX | 68 |
| GRUNDIG | 64, 65 |
| HIRSCHMANN | 64 |
| ITT | 68 |
| JERROLD | 75 |
| KATHREIN | 70, 71 |
| LUXOR | 68 |
| MASPRO | 70 |
| NOKIA | 68 |
| PACE | 65, 67 |
| PANASONIC | 74 |
| PHILIPS | 66 |
| RFT | 69 |
| SALORA | 68 |
| SIEMENS | 64 |
| SKYMASTER | 69 |
| VIDEOWAY | 76 |
| WISI | 64 |

Preparation For Editing

Turn on the TV and select the VIDEO channel (or AV mode).

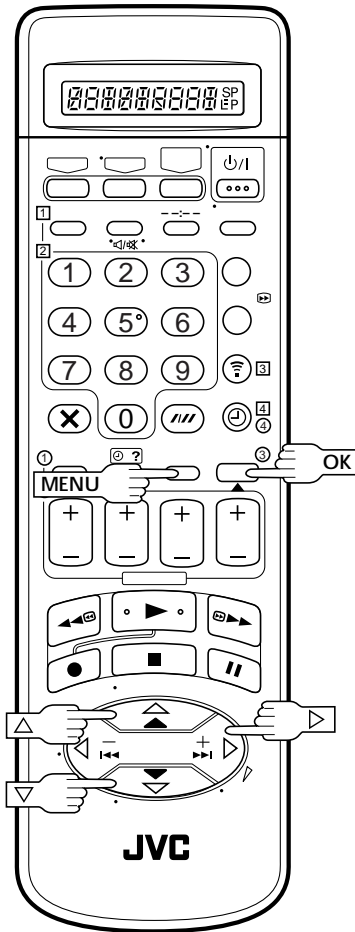

Advantages Of S-VHS Video Recorders

You can edit from VHS to S-VHS, S-VHS to VHS, or, from S-VHS to S-VHS.

- From VHS to S-VHS: Record VHS playback signals in the S-VHS mode. Although the picture quality is inherently limited by that of the original, the edited tape has better picture quality than those made by VHS-to-VHS editing.
- From S-VHS to VHS: Because the picture quality of the source material is very high, the edited tape has better picture quality than those made by VHS-to-VHS editing.
- From S-VHS to S-VHS: All signals will be transferred with minimum degradation.

Picture Control

This feature helps you to adjust the playback picture quality according to your preference. *The default setting is "AUTO."

- ### 1 ACCESS MAIN MENU SCREEN

Press **MENU**.
- ### 2 ACCESS MODE SET SCREEN

Move the highlighted bar (pointer) to "MODE SET" by pressing Δ / ∇ , then press **OK** or \triangleright .
- ### 3 SELECT PICTURE CONTROL SET MODE

Move the highlighted bar (pointer) to "PICTURE CONTROL" by pressing Δ / ∇ , then press **OK** or \triangleright to select the desired mode.

| MODE SET | |
|------------------|------|
| B. E. S. T. | ON |
| PICTURE CONTROL | AUTO |
| AUTO TIMER | OFF |
| O. S. D. | ON |
| DIRECT REC | ON |
| AUTO SP→LP TIMER | OFF |
| DIGITAL 3R | ON |
| NEXT PAGE | |
| [▲▼] → [OK] | |
| [MENU] : EXIT | |

AUTO: Provides optimised picture benefits of B.E.S.T. Picture System. Normally select **AUTO**.

EDIT: Minimizes picture degradation during editing (recording and playback).

SOFT: Reduces image coarseness when viewing overlapped tapes containing a lot of noise.


SHARP: Clearer, sharper-edged picture when viewing images with lots of flat, same-coloured surfaces such as cartoons.
- ### 4 RETURN TO NORMAL SCREEN

Press **MENU**.

NOTES:

- When **B.E.S.T.** is **OFF**, "PICTURE CONTROL" switches automatically from **AUTO** to **NORM**.
- Select **EDIT** when you are dubbing tapes. Refer to page 42.

Edit From A Camcorder

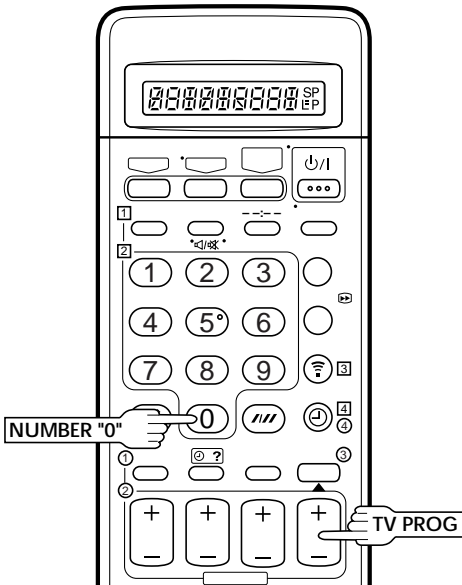

NOTES:

- All necessary cables can be obtained from your dealer.
- You can also use another video recorder as the player instead of a camcorder.
- When you select EDIT to dub tapes in step 3, be sure to select AUTO (or NORM when B.E.S.T. is set to OFF) after you finish dubbing the tapes.

You can use a camcorder as the source player and your video recorder as the recorder.

1 MAKE CONNECTIONS

- A** If the camcorder has no S-VIDEO output connector...
... connect the camcorder's AUDIO/VIDEO OUT connectors to the recorder's front panel AUDIO/VIDEO input connectors.
- B** If the camcorder has an S-VIDEO output connector...
... connect the camcorder's S-VIDEO OUT and AUDIO OUT connectors to the recorder's front panel S-VIDEO and AUDIO input connectors.

- When using a monaural camcorder, connect its AUDIO OUT connector to the AUDIO L input connector on your recorder.
- When a Master Edit Control-equipped JVC camcorder is used, the camcorder is capable of controlling the recorder. Refer to the camcorder's instruction manual for operating procedure.

2 SET RECORDER'S INPUT MODE

Press **NUMBER** key "0" and/or **TV PROG** to select "F-1" for the AUDIO/VIDEO input connectors, or "S-1" for the AUDIO/S-VIDEO input connectors, depending on the connectors being used.

3 SET EDIT MODE

See "Picture Control" on page 39.


4 START CAMCORDER

Engage its Play mode.


5 START RECORDER

Engage its Record mode.





A If the camcorder has no S-VIDEO output connector...

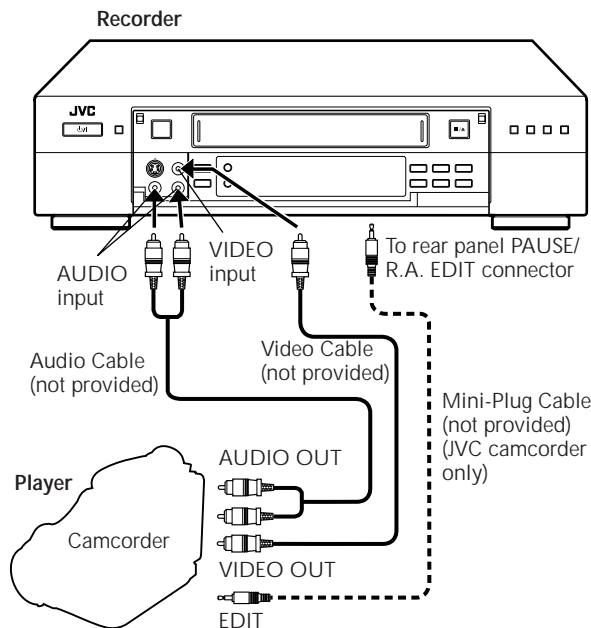

B If the camcorder has an S-VIDEO output connector...

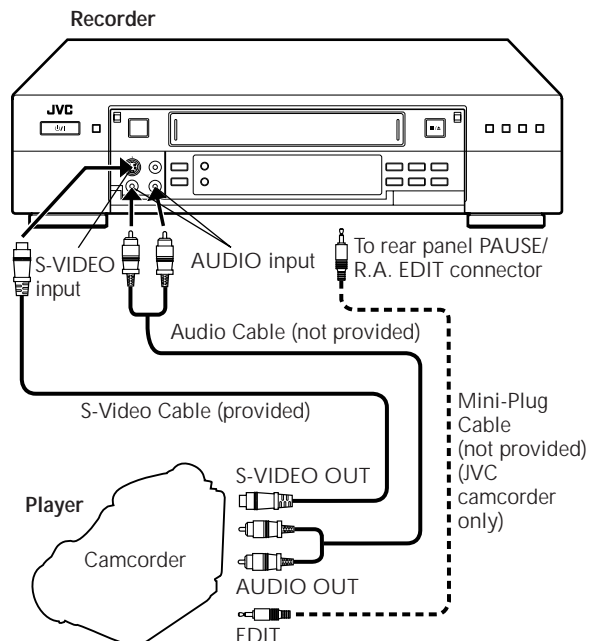

Synchro Editing

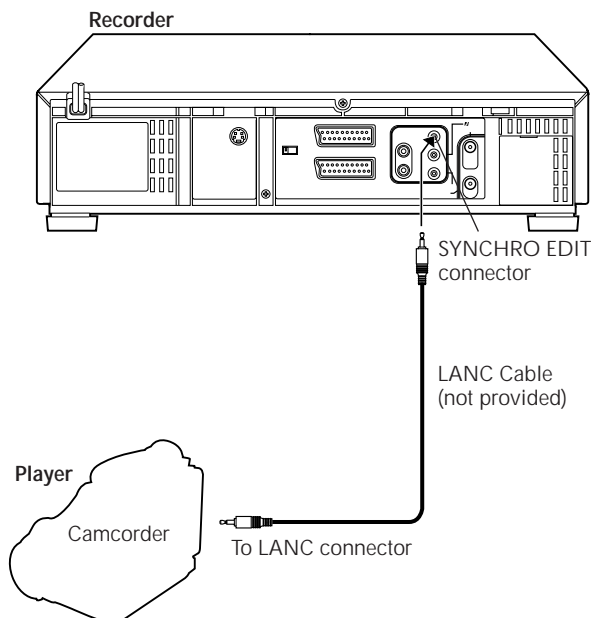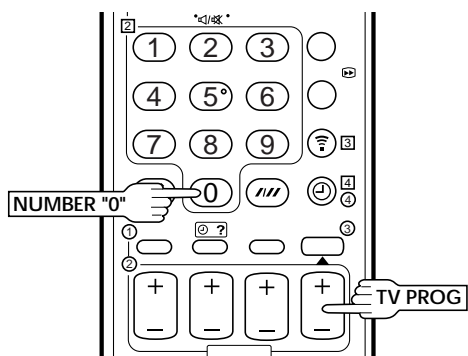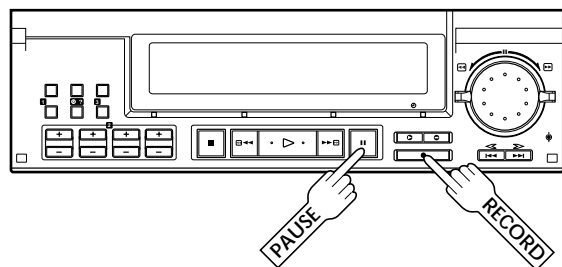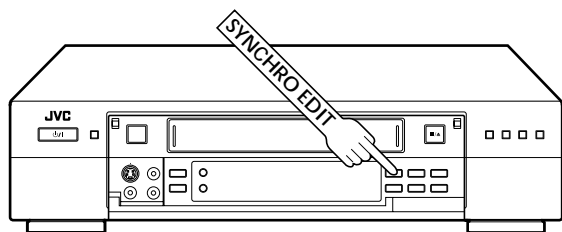

The Synchro Editing function synchronizes the start of the playback and recording operations when starting an edit operation using a camcorder with LANC connector and your video recorder.

1 MAKE CONNECTIONS

Connect your recorder to camcorder (see pg. 40), and connect your recorder's SYNCHRO EDIT connector to the camcorder's LANC connector.

2 SET RECORDER'S INPUT MODE

Press **NUMBER** key "0" and/or **TV PROG** to select "F-1" for the AUDIO/VIDEO input connectors, or "S-1" for the AUDIO/S-VIDEO input connectors, depending on the connectors being used.

3 SET EDIT MODE

See "Picture Control" on page 39.

4 LOCATE START POINT

Start playback of the tape in the camcorder, and pause playback when you find the point where you want to start editing. Press and hold **PAUSE** and press **RECORD** on your recorder so that the recorder enters the Record-Pause Mode.

5 START SYNCHRO EDITING

Press **SYNCHRO EDIT**.

6 PAUSE SYNCHRO EDITING


Press **SYNCHRO EDIT** again.

- Repeat steps 4 – 6 as necessary.

NOTES:

- The Synchro Editing function may not work with the initial part of a camcorder tape.
- The Synchro Editing function cannot be used when using the JLIP function. (Pressing **SYNCHRO EDIT** cancels the JLIP function.)
- The Synchro Editing function may not work properly with some type of camcorder.
- When you select **EDIT** to dub tapes in step 3, be sure to select **AUTO** (or **NORM** when **B.E.S.T.** is set to **OFF**) after you finish dubbing the tapes.

Edit To Or From Another Video Recorder

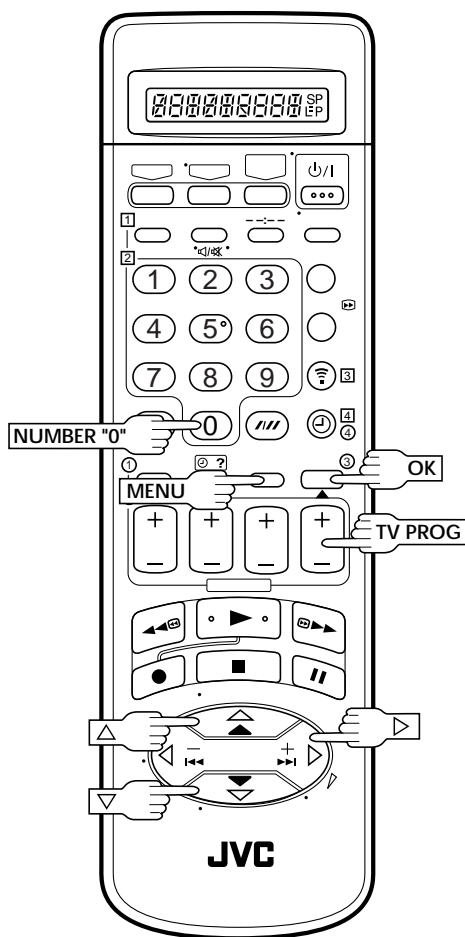

You can use your video recorder as the source player or as the recording deck.

1

MAKE CONNECTIONS

Connect the player's 21-pin SCART connector to the recorder's 21-pin SCART connector as illustrated on page 43.

- A** *When Using Your Video Recorder As The Source Player ...*
... connect its AV1 IN/OUT connector to the recording deck.
- B** *When Using Your Video Recorder As The Recording Deck ...*
... connect its AV2 IN/DECODER or AV1 IN/OUT connector to the source player.
- C** *If Another Recorder Is Compatible With The Y/C Signal ...*
... connect your recorder's AV1 IN/OUT connector to another recorder.

With **C** connection ...

- When using your recorder as the recording deck, set "AV1 SELECT" to "S-VIDEO" and "AV2 SELECT" to "AV2" (☞ pg. 44).
- When using your recorder as the source player, set the AV1 OUT switch on the rear panel to Y/C (☞ pg. 4).

2

SET RECORDING DECK'S INPUT MODE

Set to AUX. With this video recorder, press **NUMBER** key "0" and/or **TV PROG** to select "L-1" for the AV1 IN/OUT connector, or "L-2" for the AV2 IN/DECODER connector, depending on the connector being used.

- When using the AV2 IN/DECODER connector, make sure "AV2 SELECT" is set to "AV2" (☞ pg. 44).

3

SET EDIT MODE

See "Picture Control" on page 39.

4


START SOURCE PLAYER

Engage its Play mode.

5

START RECORDING DECK

Engage its Record mode.

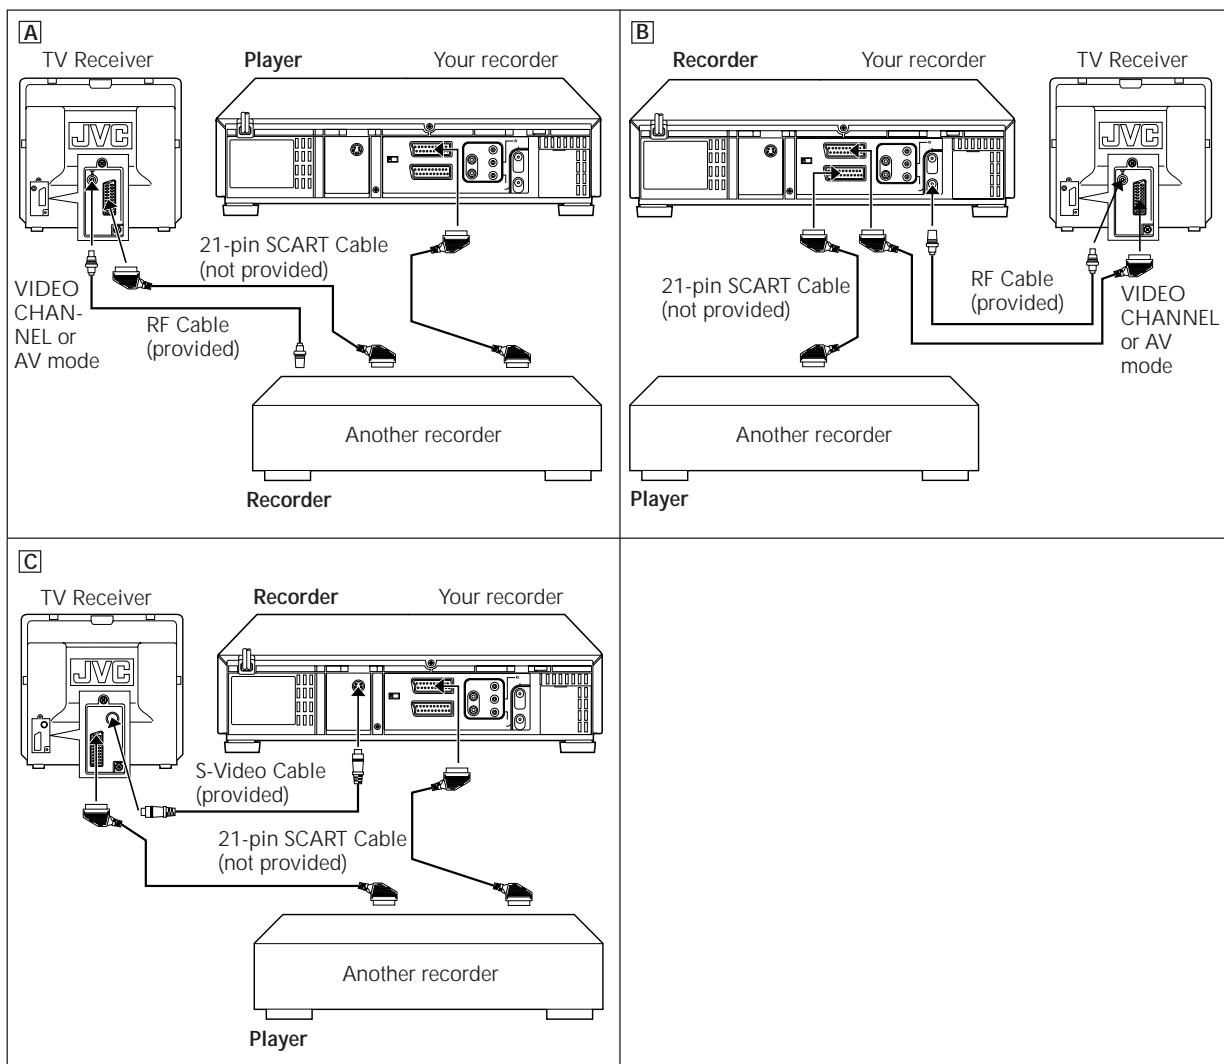



NOTES:

- All necessary cables can be obtained from your dealer.
 - For Y/C signal input/output, be sure to use a 21-pin SCART cable that is compatible with the Y/C signal.
 - When you select EDIT to dub tapes in step 3, be sure to select AUTO (or NORM when B.E.S.T. is set to OFF) after you finish dubbing the tapes.
 - When you use this recorder as the player for editing, be sure to set "O.S.D." to "OFF" before starting (☞ pg. 11).
 - If you are using another recorder with S-Video and Audio input/output connectors, you can connect those connectors to this recorder's S-VIDEO and AUDIO input/output connectors.
 - When Using Your Video Recorder As The Source Player ...
 - ... connect its rear panel S-VIDEO and AUDIO output connectors to the recording deck's S-Video and Audio input connectors.
 - When Using Your Video Recorder As The Recording Deck ...
 - ... connect its front panel S-VIDEO and AUDIO input connectors to the source player's S-Video and Audio output connectors.
- Then, set the recorder's input mode to "S-1".

AV1 SELECT Setting

Set "AV1 SELECT" to the appropriate mode depending on the type of unit connected to the rear panel AV1 IN/OUT connector of this recorder.

- 1 Press **MENU** to access the Main Menu screen.
 - 2 Press $\Delta \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .
 - 3 Press $\Delta \nabla$ to move the highlight bar (pointer) to "AV1 SELECT".
 - 4 Press **OK** or \triangleright to select "VIDEO" or "S-VIDEO".
 - a-VIDEO : If a connected device's output is compatible only with regular video signals, set "AV1 SELECT" to "VIDEO".
 - b-S-VIDEO : If a connected device's output is compatible with Y/C signals, set "AV1 SELECT" to "S-VIDEO". This setting will let you take advantage of higher-quality S-VHS pictures.
 - 5 Press **MENU** to return to normal screen.
- If "AV2 SELECT" is set to "DECODER", it is impossible to set "AV1 SELECT" to "S-VIDEO".

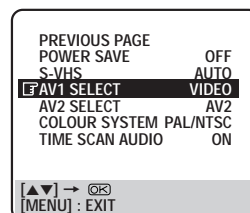
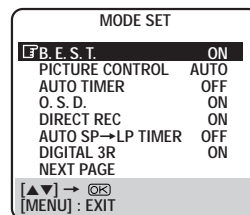


AV2 SELECT Setting


Set "AV2 SELECT" to the appropriate mode depending on the type of unit connected to the rear panel AV2 IN/DECODER connector of this recorder.

- 1 Press **MENU** to access the Main Menu screen.
- 2 Press $\Delta \nabla$ to move the highlight bar (pointer) to "MODE SET", then press **OK** or \triangleright .
- 3 Press $\Delta \nabla$ to move the highlight bar (pointer) to "AV2 SELECT".
- 4 Press **OK** or \triangleright to select "AV2", "DECODER" or "SAT".
 - a-AV2 : To use this recorder as the recording deck with the player connected to the AV2 IN/DECODER connector, or to use the satellite tuner connected to the AV2 IN/DECODER connector.
 - b-DECODER : To use a decoder connected to the AV2 IN/DECODER connector.
 - c-SAT : To view a satellite programme with the TV set while the recorder is in Timer mode, in Stop mode, recording or turned off. (pg. 51)
- 5 Press **MENU** to return to normal screen.

- If you have a decoder connected to the AV2 IN/DECODER connector, be sure to set "AV2 SELECT" back to "DECODER" after editing.
- If you're not connecting a decoder to the AV2 IN/DECODER connector, leave "AV2 SELECT" set to "AV2".
- The default setting is "AV2"; if the recorder's memory backup has expired due to a power cut or because the AC was removed from the recorder, "AV2" will be automatically selected when the power is restored to the recorder. If you are using a decoder, be sure to set "AV2 SELECT" back to "DECODER".
- If the AV1 OUT switch on the rear panel is set to Y/C, it is impossible to set "AV2 SELECT" to "DECODER".

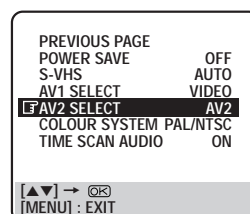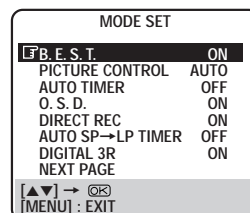


Audio Dubbing

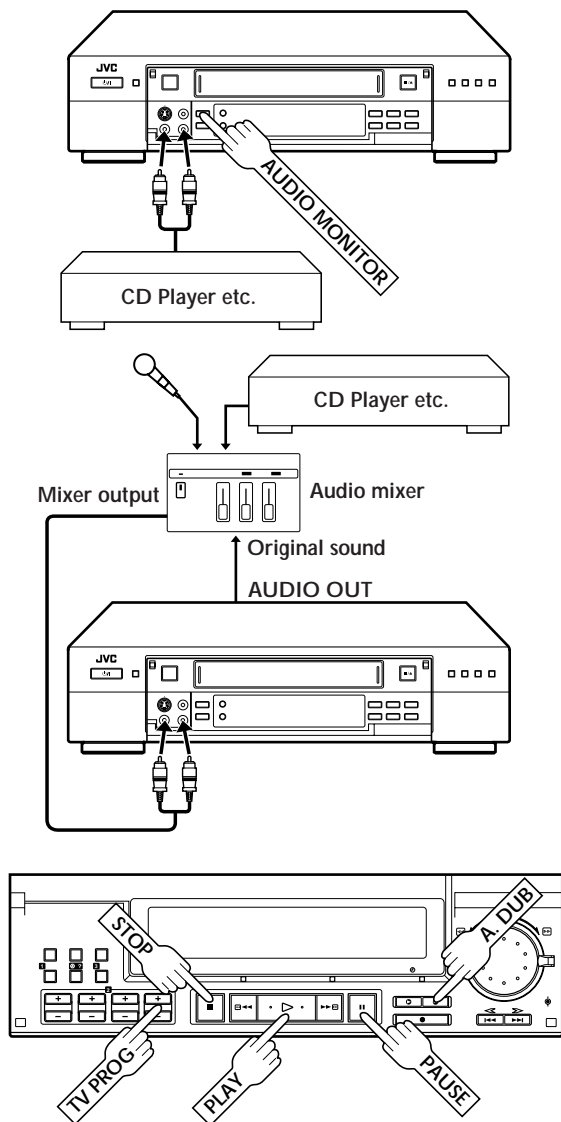

NOTES:

- When monitoring the sound during Audio Dubbing, the normal soundtrack is automatically selected. If you wish to hear the mixed sound (Hi-Fi + Normal soundtracks), press **AUDIO MONITOR** (or **AUDIO** on the remote control) to select " [] + [] (L+R)+NORM" (☞ pg. 19).
- Audio dubbing stops automatically when the counter reaches "0:00:00", and the recorder enters the Play mode. Check the counter reading before dubbing.
- Audio dubbing is also possible using the rear panel AV1 IN/OUT or AV2 IN/DECODER connector. When using these connectors, make sure to select the correct input mode in step 2.
- Audio dubbing cannot be performed on a cassette that has had its record safety tab removed.
- When playing back an audio-dubbed tape, press **AUDIO MONITOR** (or **AUDIO** on the remote control) to select the soundtrack you wish to hear (☞ pg. 19).

Audio dubbing replaces the normal audio sound of a previously recorded tape with a new soundtrack.

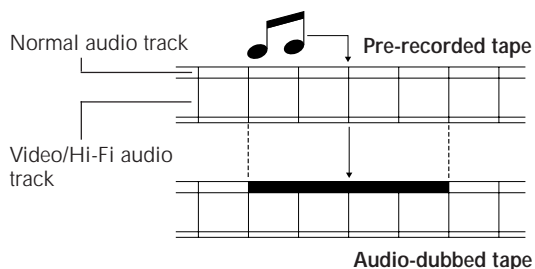

1 MAKE CONNECTIONS

Connect an audio component to the AUDIO L + R connectors on the recorder's front panel.

- When connecting monaural equipment, use only the recorder's AUDIO L connector.

2 SET INPUT MODE

Press **NUMBER** key "0" and/or **TV PROG** so that "F-1" or "S-1" appears in place of a channel number.

3 LOCATE START POINT

Press **PLAY** to start playback of the tape in your recorder, and press **PAUSE** when you find the point where you want to start dubbing.

4 ENGAGE AUDIO DUBBING

Press **A. DUB**.

- Your recorder enters the Audio Dubbing Pause mode. ("0" blinks, "▶" and "⏸" light up on the front display panel.)
- To perform audio dubbing with audio mixing, press **AUDIO MONITOR** (or **AUDIO** on the remote control) to select "[] + [] (L+R)" at this point.
* Audio dubbing with audio mixing is not possible if you're using a monaural audio component, or if you don't have an audio mixer.

5 START DUBBING



Engage the audio component's Play mode, then press **PLAY** to start the tape in your recorder. Audio dubbing begins at this point.

- "0" blinks and "▶" is displayed on the front display panel.
- To stop dubbing temporarily, press **PAUSE**. Press **PLAY** to resume dubbing.


6 END AUDIO DUBBING

Press **STOP** to stop the tape in your recorder, and engage the audio component's Stop mode.

Insert Editing

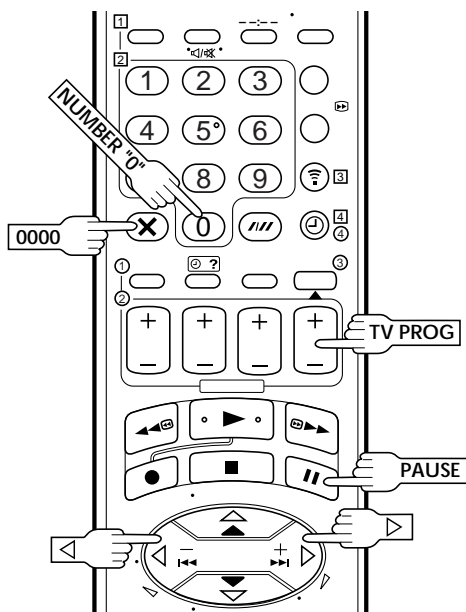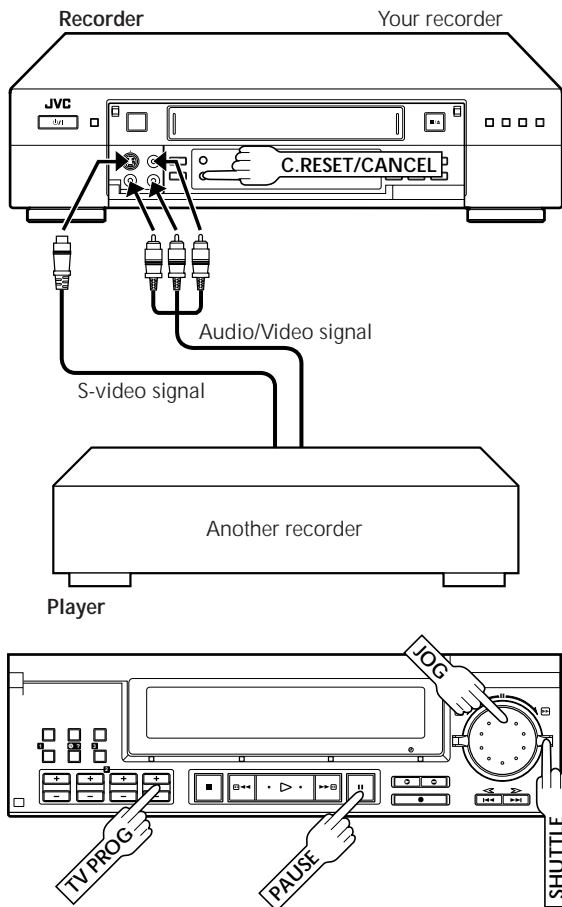

Insert editing replaces part of the recorded scene with new material. Both the picture and Hi-Fi audio soundtrack are replaced with new ones, while the normal audio soundtrack remains unchanged. If you wish to change the normal audio track as well, use the audio dubbing function simultaneously. Use your video recorder as the recorder.

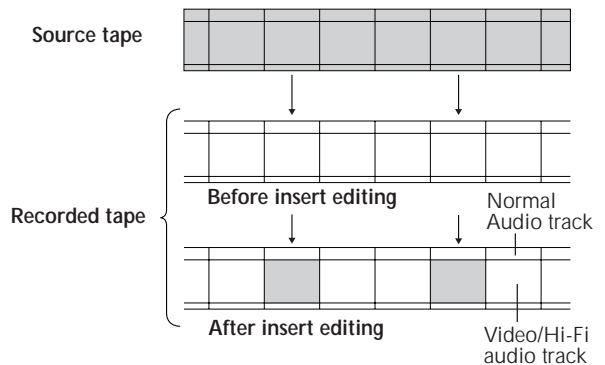

1 MAKE CONNECTIONS

Connect the player's VIDEO OUT or S-VIDEO OUT and AUDIO OUT connectors to your recorder's VIDEO or S-VIDEO and AUDIO input connectors on the front panel.

2 SET INPUT MODE

Press **NUMBER** key "0" and/or **TV PROG** so that "F-1" for the VIDEO/AUDIO input connectors or "S-1" for S-VIDEO/AUDIO input connectors appears in place of a channel number.

3 LOCATE END POINT

Load the recording cassette into your recorder, and play it back to determine the edit-out point (the end of the segment to be replaced) using the **SHUTTLE** ring or the **JOG** dial or pressing **<|>** and **PAUSE**.



4 RESET THE COUNTER

Press **0000** (or **C.RESET/CANCEL**) to change the counter display to "0:00:00".

5 LOCATE START POINT

Determine the edit-in point (the beginning of the segment to be replaced) using the **SHUTTLE** ring or the **JOG** dial or pressing **<|>** and **PAUSE**.

- Be sure to engage the Still mode at the edit-in point.

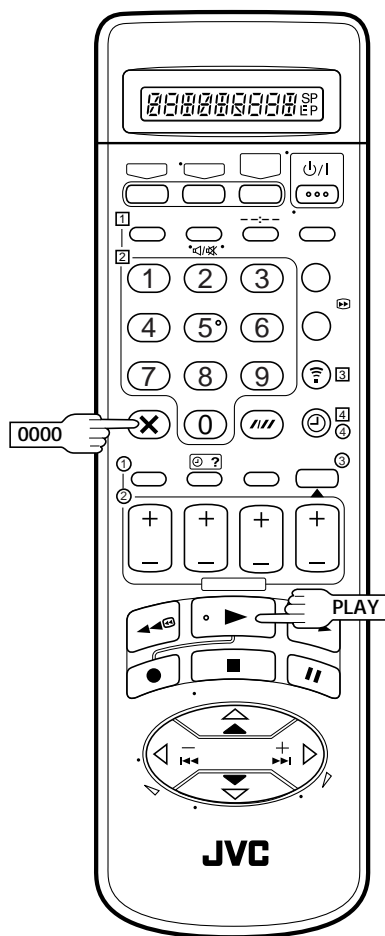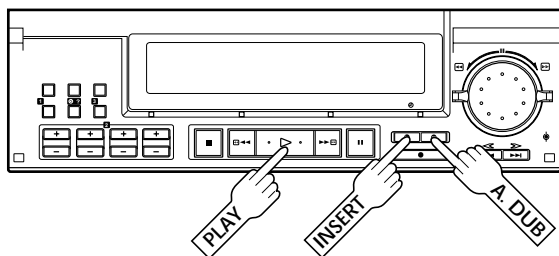

6 ENGAGE INSERT EDITING

Press **INSERT**.

- Your recorder enters the Insert-Pause mode. ("○", "▶" and "■" light up on the front display panel.)
- The TV screen changes from the still picture to the input source you are going to record.

7 START EDITING

Load the source cassette and play back the segment that is to be inserted. When you reach the start of the section of the source tape that you wish to insert, press **PLAY** to start the tape in your recorder; Insert Editing begins at this point.

- "○" and "▶" are displayed on the front display panel.

8 END INSERT EDITING

At counter "0:00:00", Insert Editing will stop automatically while the tape continues running in the Play mode. If you wish to stop Insert Editing before the specified edit-out point, press **0000** (or **C.RESET/CANCEL**).

FOR AV INSERT EDITING


If you want to replace the picture, Hi-Fi audio soundtrack and normal audio soundtrack all at the same time...

... In step 6 above, after you press **INSERT**, press **A. DUB** also. ("○" and "▶" blink and "■" lights up on the front display panel.)

NOTES:

- Suitable leads can be obtained from your dealer.
- Insert editing is not possible with cassettes whose safety tab has been removed.
- When insert editing is performed on a tape that has been recorded on another video recorder, the inserted portion may appear distorted.
- In insert editing, the recording speed (SP/LP) is determined by the previous recording to be replaced. If the previous recording's speed changes within a single edit, the inserted picture will be distorted at the switching point.
- A small portion of the recording which precedes an insert edit may become erased.
- Insert Editing is also possible using the rear panel AV1 IN/OUT or AV2 IN/DECODER connector. When using these connectors, make sure to select the correct input mode in step 2.

Random Assemble Editing

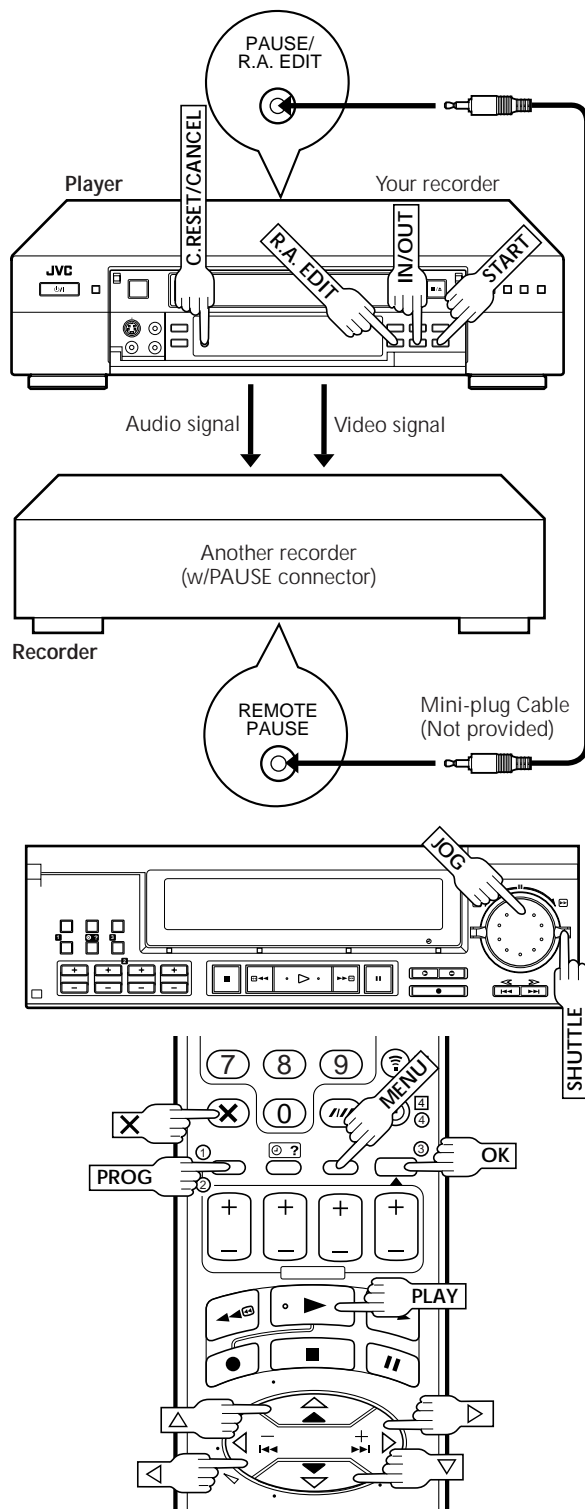

This function makes it easier to create edited videos when your video recorder is used as the source player in combination with another JVC video recorder equipped with a Remote PAUSE Connector. You can pre-program up to 8 scenes or "cuts" for automatic editing in the sequence you have specified.

You can also perform Random Assemble Editing with a second non-JVC recorder. (☞ pg. 49)

1 MAKE CONNECTIONS

Connect your recorder's AV1 IN/OUT or S-VIDEO OUT/AUDIO OUT connectors to the video and audio input connectors on the recording deck, and connect your recorder's PAUSE/R.A. EDIT connector to the PAUSE connector on the recording deck.

- If the recording deck doesn't have a PAUSE connector, connect to the R.A. EDIT connector instead.
- The Mini-plug cable is a mono 3.5 mm mini-plug to mono 3.5 mm mini-plug connector.

2 PREPARE FOR EDITING

Insert the cassette to be recorded on into the recorder and set the recorder's input mode.

3 LOAD SOURCE CASSETTE

Insert the source cassette into your recorder.

4 SET EDIT MODE

See "Picture Control" on page 39.

5 START SOURCE PLAYBACK

Press **PLAY**.

6 ACCESS R.A. EDIT SCREEN

Press **R.A. EDIT**.

OR

Press **MENU** to access MAIN MENU screen and press Δ / ∇ to move the highlight bar (pointer) to "R.A. EDIT", then press **OK**.


- The screen is superimposed on the video playback in step 7.

7

LOCATE EDIT-IN POINT

Find the point on the source tape from where you want the edited scene to begin by pressing \triangleleft or using the **SHUTTLE** ring or the **JOG** dial, then press **IN/OUT** (or **PROG**).

- The edit-in point is registered in memory and appears on the screen.


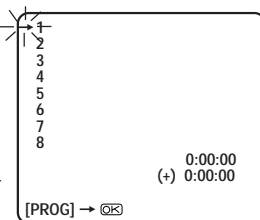


8

LOCATE EDIT-OUT POINT

Find the point where you want the edited scene to end by pressing \triangleleft or using the **SHUTTLE** ring or the **JOG** dial, then press **IN/OUT** (or **PROG**).

- The edit-out point is registered in memory and appears on the screen.
- The total time of the edited scenes is displayed to the right of "(+)".
- Repeat steps 7 and 8 for each additional scene.

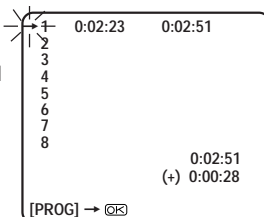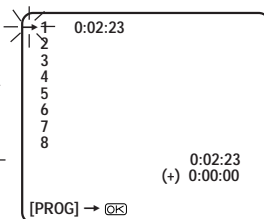

9

PREPARE RECORDING DECK

Engage its Record-Standby mode.

10

START R.A. EDIT

Press **START** (or **OK**).

- Automatic editing begins; all the specified scenes are copied to the recording deck in the order they were registered.
- The on-screen display remains while your recorder searches for each scene (blinking cursor indicates scene currently being searched for), but disappears during actual editing.
- During scene search, the recording deck automatically enters its Record-Standby mode.
- When all registered scenes have been edited, your recorder enters the Pause mode, the recording deck enters its Record-Standby mode, and the cursor blinks at the next available number.

11

END R.A. EDIT

Press **MENU** to return to the normal screen, and engage the Stop mode for your recorder and for the recording deck.

NOTES:

- You can also monitor the sound when searching for scenes you want to edit in steps 7 – 8. Since you can hear the soundtrack during selection, you can avoid abrupt or unnatural sounding scene-to-scene transitions. The sound that is heard, however, is not TimeScan Audio.
- When editing, there may be a discrepancy of about 2 seconds on the source tape between the locations you chose as edit-in/out points and the locations your recorder recognizes as those points.
- For any scene, the edit-out point must have a counter reading that is at least 1 second after the corresponding edit-in point. Any less than 1 second and the edit-out point will not be registered.
- Since the source recorder prerolls during Random Assemble Editing, there must be at least 15 seconds worth of recorded material prior to any edit-in point on the source tape.
- If the search time for an edit-in point exceeds 5 minutes, the recording deck enters its Stop mode and editing will not take place.
- During steps 7 and 8 — if you engage the Pause mode while registering edit-in and -out points in the R.A. Edit screen, the characters in the on-screen display may become distorted. This is normal.

To Make Corrections . . .

. . . during step 7 or 8, you can cancel registered in and out points by pressing \times (or **C.RESET/CANCEL**). Each time you press, the preceding point is erased.

- If, for example, you have registered 5 sets of in and out points and want to reset the first set, you have to press \times (or **C.RESET/CANCEL**) until all points after the first set have been erased. Reenter them after you've repaired the first set of points.

Memory Capacity

Random Assemble Editing shares memory space with the recorder's timer. If there are programs occupied by timer-recording data, those spaces cannot be used to register edit-in and -out points — meaning you won't be able to edit 8 scenes.

- When all 8 programs are full, "PROGRAM FULL" appears on the R.A. EDIT screen.
- To cancel a program, see page 32.

PROGRAM FULL

0:00:00
(+) 0:00:00


[MENU] : EXIT

RM-V704U Multi-Brand R.A. Edit Controller (Not provided)

By connecting this controller to your recorder's R.A. EDIT connector, you can perform Random Assemble Editing in combination with a second non-JVC video recorder. The controller is compatible with various major recorder brands. For compatible systems and availability, please consult your JVC dealer.

NOTE:

Although the RM-V704U is designed to operate the recording deck, it may not work with some recorders, or may have limited function capability.

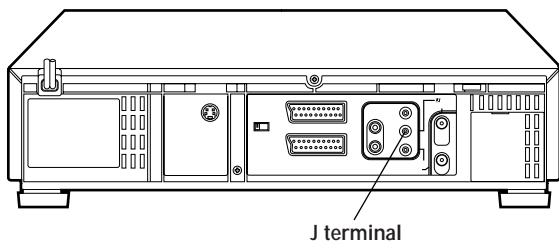

J terminal

J Terminal (JLIP(Joint Level Interface Protocol) Connector)

The J Terminal is used to connect the recorder to a personal computer or similar device to allow computerized control of the recorder during editing and certain other operations.

Examples:


With the optional JLIP VIDEO CAPTURE BOX GV-CB3E:

- Enables Random Assemble Editing of up to 99 segments, using this recorder as the playback unit.
- Allows you to capture still images from the recorder into a personal computer.

For further details consult your nearest JVC dealer.

JLIP ID Number

Your recorder has its own JLIP ID number. This ID number must be unique when your recorder is connected to another device via its J terminal. The ID Number is preset to "1" at the factory. You can change this number to any number between "1" and "99". If it is necessary to change the JLIP ID number perform the following steps.

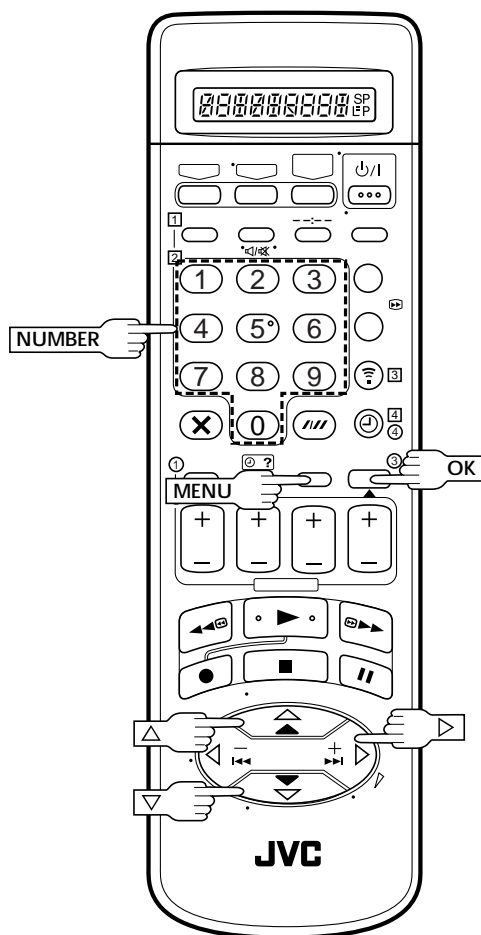

1 ACCESS MAIN MENU SCREEN


Press **MENU**.

2 ACCESS INITIAL SET SCREEN

Press Δ / ∇ to move the highlight bar (pointer) to "INITIAL SET", then press **OK** or \triangleright .


3 ACCESS JLIP ID NO. SET SCREEN

Press Δ / ∇ and move the highlight bar (pointer) to "JLIP ID NO. SET", then press **OK** or \triangleright .

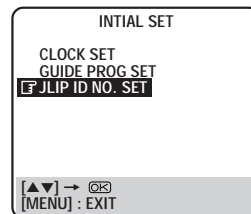

4 SET JLIP ID NUMBER

Press **NUMBER** keys to enter the desired ID number.

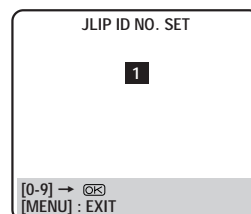

5 RETURN TO NORMAL SCREEN

Press **OK**.

Connection To A Satellite Tuner


Simple Connections

This is an example of simple connection if you don't have a decoder.

Connect the satellite tuner to the video recorder's AV2 IN/ DECODER connector, then connect the recorder's AV1 IN/OUT connector to the TV's 21-pin SCART connector.

NOTES:

- Set "AV2 SELECT" to "AV2". (☞ pg. 44)
- You can use Automatic Satellite Program Recording function (☞ pg. 35) with this connection.
- To view a programme via the satellite tuner, select L-2 mode by pressing **NUMBER** keys and/or **TV PROG** so that "L-2" appears on the display panel.
- For details, refer to the instruction manual for the satellite tuner.

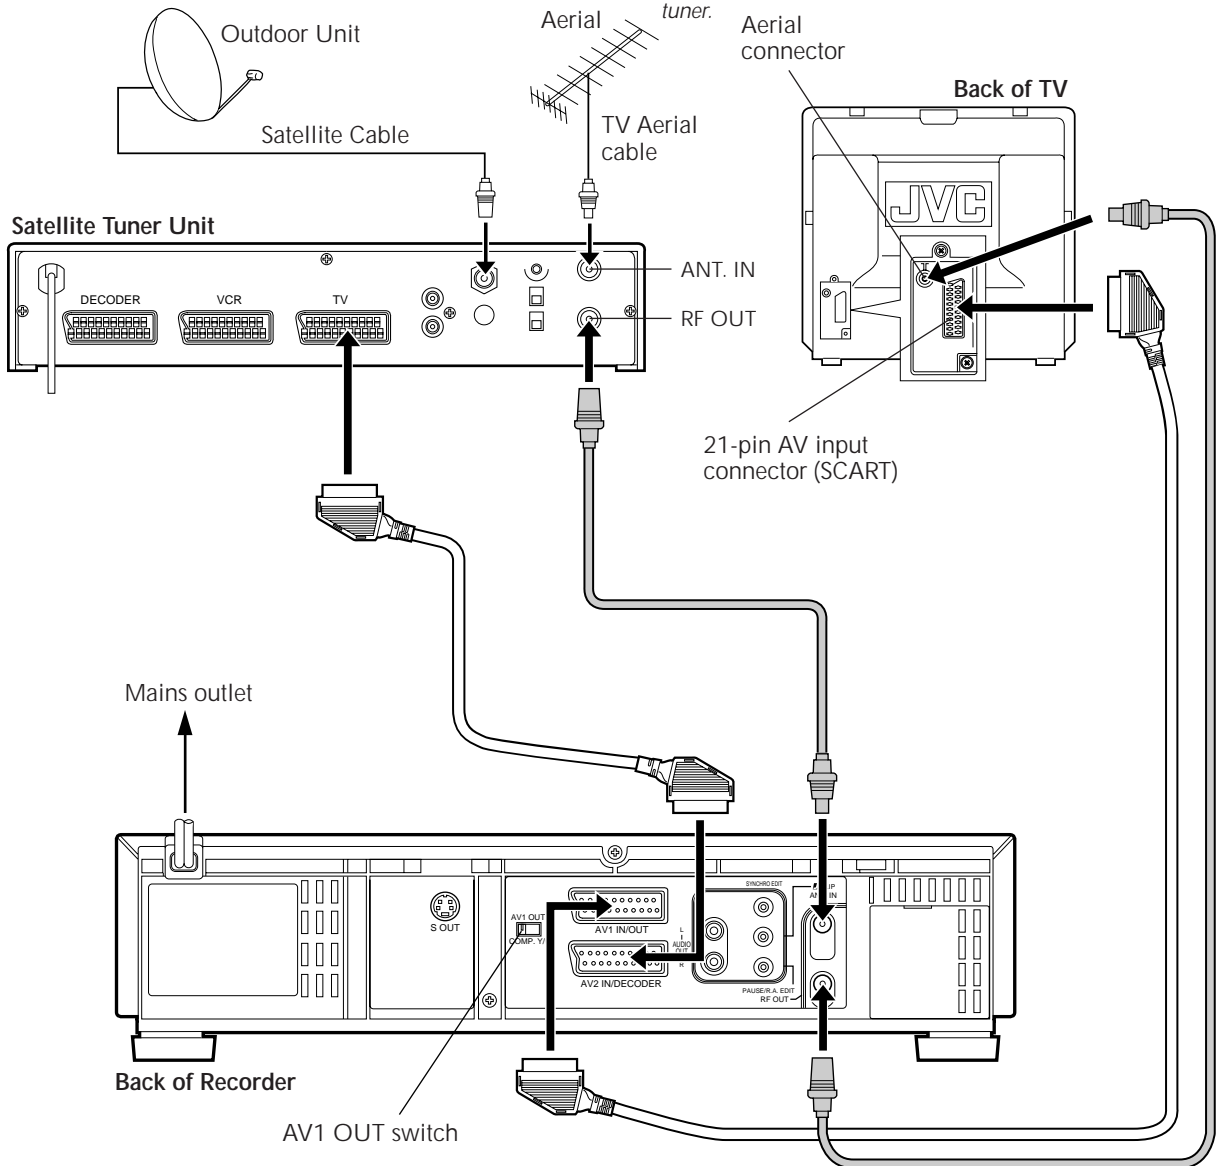

IMPORTANT

When you set "AV2 SELECT" to "SAT" (☞ pg. 44), it is possible to view a satellite broadcast with the TV set to its AV mode even if the recorder is in Timer mode, in Stop mode, recording or turned off. When the recorder is in Stop mode or recording, press **TV/VCR** on the remote control to turn off the VCR indicator on the display panel.

- In this case, be sure to set the **AV1 OUT** switch on the rear panel to **COMP.**


Perfect Connections

This is an example of recommended connection if you have both satellite tuner and decoder.

Connect the decoder to the satellite tuner's connector, AV1 IN/OUT connector to TV's connector, and AV2 IN/DECODER connector to the satellite tuner's connector. Then connect the satellite tuner and TV.

NOTES:

- Set "AV2 SELECT" to "AV2". (☞ pg. 44)
- You can use Automatic Satellite Program Recording function (☞ pg. 35) with this connection.
- To view a programme via the satellite tuner, select L-2 mode by pressing **NUMBER** keys and/or **TV PROG** so that "L-2" appears on the display panel.
- To receive a scrambled broadcast, descramble the signal with the satellite tuner.
- For details, refer to the instruction manual for the satellite tuner and decoder.

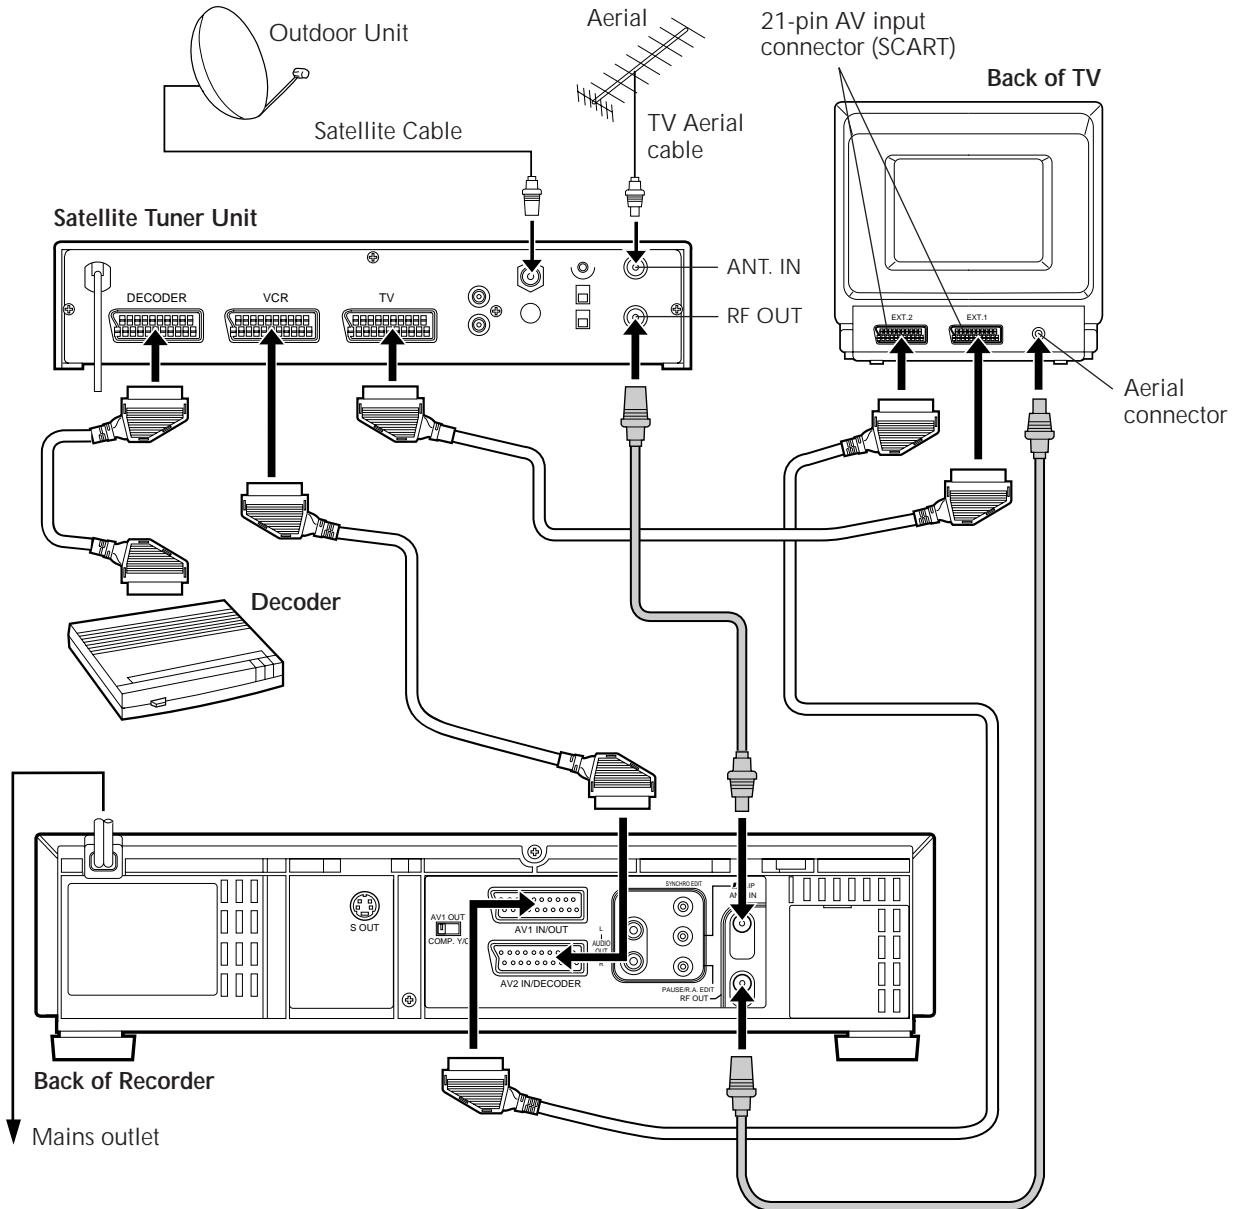


Basic Connections

This is an example of basic connection if you have both satellite tuner and decoder.


Connect the decoder to your recorder's AV2 IN/DECODER connector and AV1 IN/OUT connector to the satellite tuner's connector. Then connect the satellite tuner and TV. If you have a decoder for satellite broadcast, connect it to the satellite tuner's connector.

NOTES:

- To record a satellite programme which delivers the Y/C signal, set "AV2 SELECT" to "AV2" and "AV1 SELECT" to "S-VIDEO". You can obtain high-quality S-VHS picture.
- If you connect your recorder and TV via S-Video cable VC-S211 (not provided), you can enjoy high-quality S-VHS pictures.
- Set "AV2 SELECT" to "DECODER" to view a scrambled broadcast. (☞ pg. 44)
- Automatic Satellite Program Recording function is not possible with this connection.
- To view a programme via the satellite tuner, select L-1 mode by pressing **NUMBER** keys and/or **TV PROG** so that "L-1" appears on the display panel.
- For details, refer to the instruction manual for the satellite tuner and decoder.

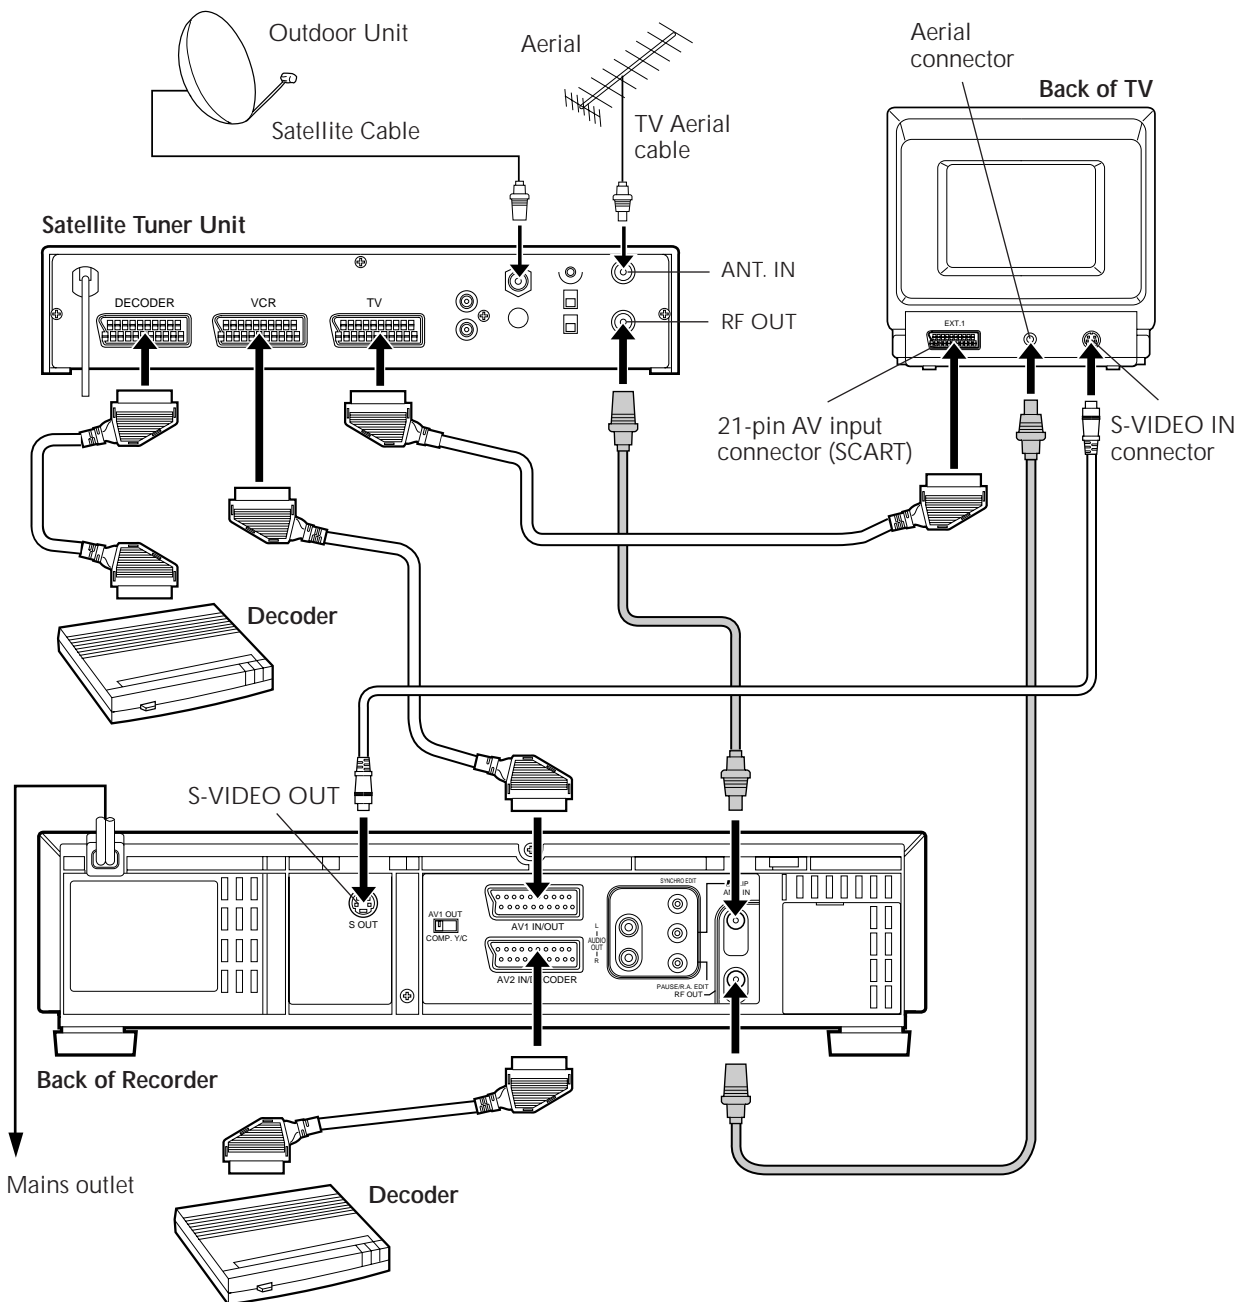

Connecting/ Using A Decoder

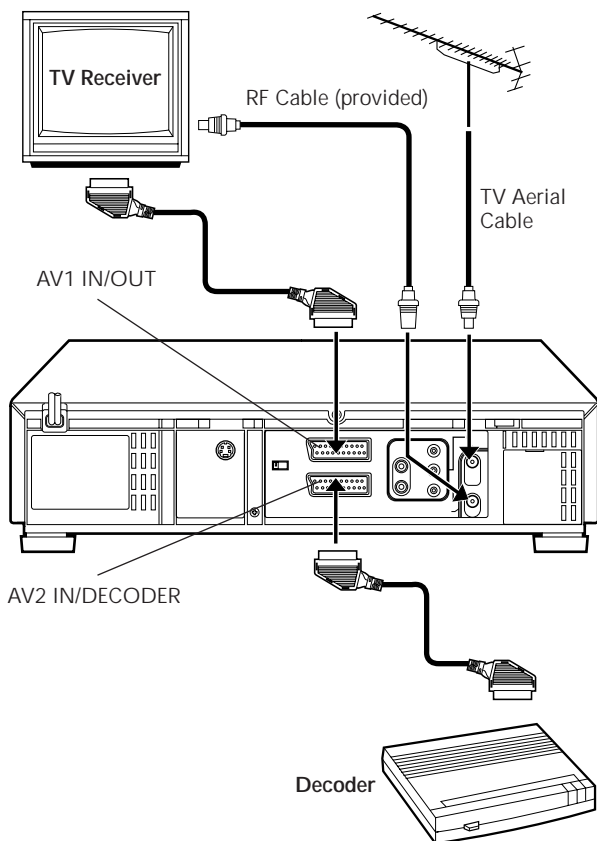

The AV2 IN/DECODER connector can be used as an input terminal for an external decoder (descrambler). Simply connect a decoder and you can enjoy the variety of programming that is available through scrambled channels.

1 SELECT INPUT MODE

Set "AV2 SELECT" to "DECODER". (☞ pg. 44)

2 CONNECT DECODER


Connect your recorder's AV2 IN/DECODER connector to the decoder's Euroconnector using a 21-pin SCART cable.

3 SET TUNER

Perform the procedure as described in "When Receiving A Scrambled Broadcast" on page 59.

Connecting/ Using A Stereo System

These instructions enable you to connect your video recorder to your Hi-Fi stereo system (if you have one) and listen to the soundtrack through the stereo.

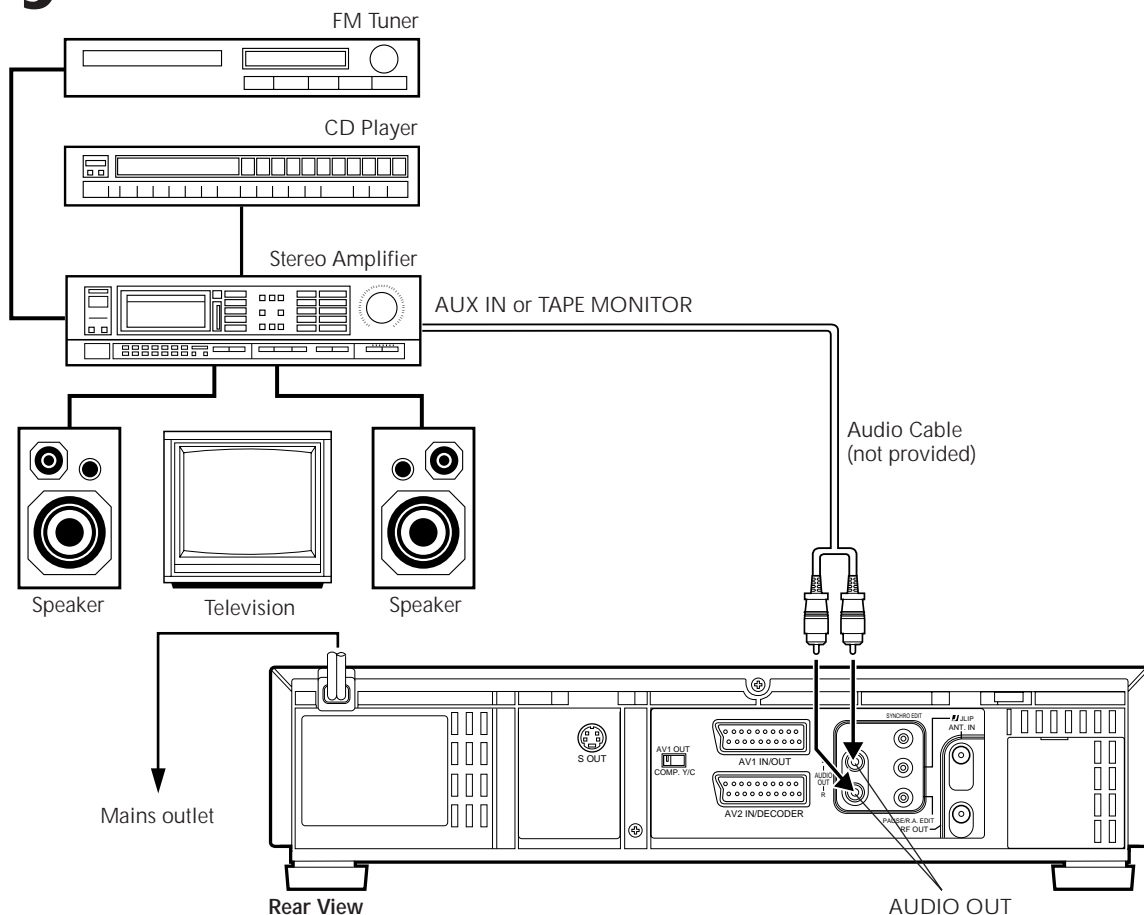

1 MAKE CONNECTIONS

Connect the AUDIO OUT L and R connectors on your video recorder to the AUX IN or TAPE MONITOR terminals on your stereo system's receiver or amplifier.

NOTES:


- When connecting your recorder's audio output connectors to a stereo amplifier, make sure you connect L and R correctly.
- If stereo or bilingual TV broadcasts are receivable in your area, this recorder can record them independently of the TV set and play them back through the connected stereo system.
- When listening to sound through the connected stereo system, turn the TV's volume down completely.

CAUTIONS:

- This recorder has a dynamic range of more than 80 dB with regards to its Hi-Fi audio capability. It is recommended that you check the maximum level if you are going to listen to the Hi-Fi audio signals through a stereo amplifier. A sudden surge in the input level to the speakers may damage them.
- Some speakers and televisions are specially shielded to prevent television interference. If both are of the non-shielded type, do not place the speakers adjacent to the TV set as this can adversely affect the video playback picture.

Tuner Set

Turn on the TV and select the VIDEO channel (or AV mode).

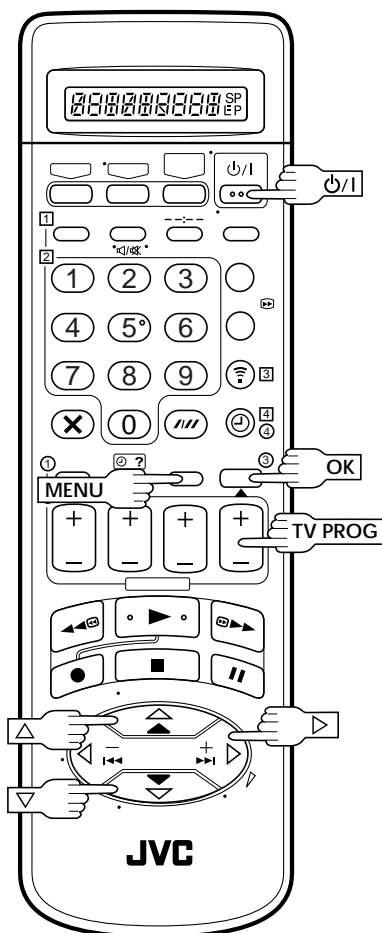

IMPORTANT

Perform the following steps only if —

- Auto Channel Set has not been set correctly by Auto Set Up function or by Preset Download (pg. 6, 8).
- you have moved to a different area or if a new station starts broadcasting in your area.

Your recorder needs to memorize all necessary stations in channel positions in order to record TV programmes. Auto Channel Set automatically assigns all receivable stations in your area to call them up by using the **TV PROG** buttons without going through any vacant channel.

Auto Channel Set

1 TURN ON THE RECORDER


Press **power**.

2 ACCESS MAIN MENU SCREEN

Press **MENU**.

3 ACCESS AUTO CH SET SCREEN

Press **up/down** to move the highlight bar (pointer) to "AUTO CH SET", then press **OK** or **right**.

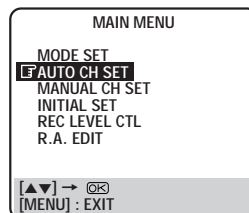


4 SELECT COUNTRY

Press **up/down** to move the highlight bar (pointer) to your country's name, then press **OK** or **right**.

5 SELECT LANGUAGE

Press **up/down** to move the highlight bar (pointer) to the language of your choice.

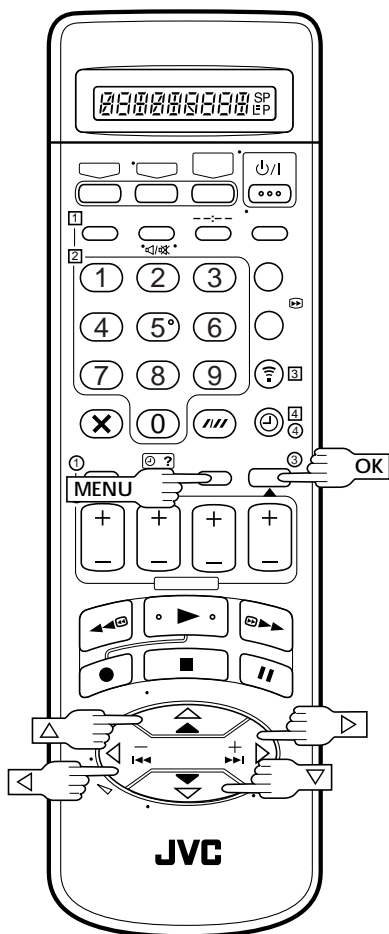

IMPORTANT

- In certain reception conditions, station names may not be stored correctly, and auto Guide Program Number Set may not work properly. If the Guide Program numbers are not set properly, when you timer-record a TV programme using SHOWVIEW, the recorder will record a TV programme of a different station. When programming the timer using SHOWVIEW, be sure to check whether the channel position on which your recorder receives the broadcasting station you wish to record is selected (☞ pg. 28, "SHOWVIEW Timer Programming").
- Your video recorder memorizes all detected stations even if reception of some of them is poor. In these cases picture quality may be poor. To delete those stations with an unacceptable picture ☞ "Delete A Channel" on page 59.


NOTES:

- Fine tuning is performed automatically during Auto Channel Set. If you want to perform it manually, refer to page 62.
- If you perform Auto Channel Set when the aerial cable is not connected properly, "SCAN COMPLETED -NO SIGNAL-" appears on the screen in step 7. When this happens, make sure of the aerial connection and press **OK**; Auto Channel Set will take place again.

PERFORM AUTO CHANNEL SET

Press **OK** twice.

- You can set up the recorder's tuner also by Preset Download (☞ pg. 8).
- The Auto Set screen appears, and remains on screen while the recorder searches for receivable stations.

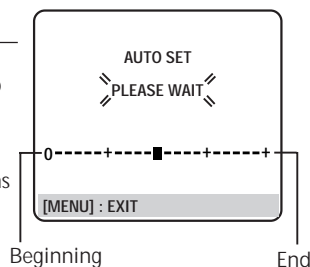

As Auto Channel Set progresses, the "■" mark on the screen moves from left to right.

Wait until the screen as shown in step 7 appears.

VIEW CONFIRMATION SCREEN

After "SCAN COMPLETED" is displayed on the screen for about 5 seconds, the Confirmation screen

looking like the one to the right appears. The stations your recorder located appear on a Confirmation screen — channel

positions (PR) and station names (CH) and station names

(ID — ☞ pg. 61). The blueback screen and the programme currently being broadcast by the blinking station appear alternately for 8 seconds each.

To view the next page, use the $\Delta \nabla < >$ button on the remote control.

| PR | CH | ID | PR | CH | ID |
|----|-----|------|----|-----|------|
| 01 | 25 | ARD | 08 | C26 | E-SP |
| 02 | C08 | SKYT | 09 | 55 | WEST |
| 03 | 10 | ZDF | 10 | C24 | SAT1 |
| 04 | C65 | RAI1 | 11 | C23 | OSF |
| 05 | C31 | BBC1 | 12 | | |
| 06 | C32 | BBC2 | 13 | | |
| 07 | C33 | 3SAT | 14 | | |


C: Cable

- The stations located in the selected country appear at the top of the list.
- The Guide Program numbers will also be set automatically during Auto Channel Set.

RETURN TO NORMAL SCREEN

Press **MENU**.

- Using the Confirmation screen, you can skip or add channel positions, enter station names and perform other operations. Refer to pages 58 – 62 for the procedures.
- Depending on reception conditions, the stations may not be stored in order, and the station names may not be stored correctly.
- For information on scrambled broadcasts, refer to page 59.

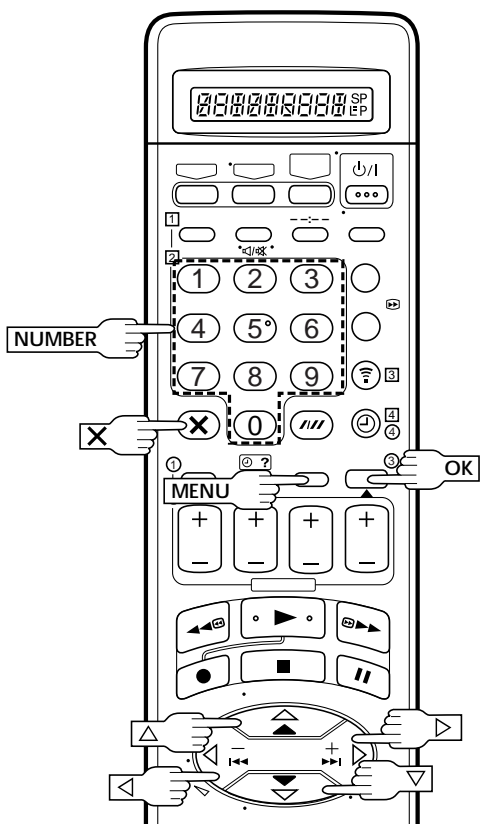

Storing Channels Manually

Store channels that were not stored during Auto Set Up (pg. 6), Preset Download (pg. 8) or Auto Channel Set (pg. 56).

- 1** **ACCESS MAIN MENU**
Press **MENU**.
- 2** **ACCESS CONFIRMATION SCREEN**
Press $\Delta \nabla$ to move the highlight bar (pointer) to "MANUAL CH SET", then press **OK** or \triangleright . The Confirmation screen appears.
- 3** **SELECT POSITION**
Press $\Delta \nabla \triangleleft \triangleright$ until an open position in which you want to store a channel begins blinking, then press **OK**. The Manual Channel Set screen appears.

(Ex.) To store in position 12.

| PR | CH | ID | PR | CH | ID |
|----|-----|------|----|------|------|
| 01 | 25 | ARD | 08 | C26 | E-SP |
| 02 | CDB | SKY1 | 09 | 55 | WEST |
| 03 | 10 | ZDF | 10 | C24 | SAT1 |
| 04 | C65 | RAI1 | 11 | C23 | QSF |
| 05 | C31 | BBC1 | 12 | ---- | ---- |
| 06 | C32 | BBC2 | 13 | ---- | ---- |
| 07 | C33 | 3SAT | 14 | ---- | ---- |

[$\Delta \nabla \triangleleft \triangleright$]: EDIT
 → [OK]: DELETE
 → [X]: DELETE
 [MENU]: EXIT

The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

- 4** **SELECT BAND**
Press $\Delta \nabla$ to change the band between CH (regular) and CC (cable), then press \triangleright .

| | | | | |
|----|------|------|------|---------|
| PR | CH | ID | FINE | DECODER |
| 12 | CH01 | ---- | +/- | OFF |

[$\Delta \nabla$]: SELECT
 [$\triangleleft \triangleright$]: CURSOR \leftrightarrow
 [OK]: OK
 [MENU]: EXIT

The blueback screen and the programme currently being broadcast by the selected channel appear alternately for 8 seconds each.

- 5** **INPUT CHANNEL**
Press the **NUMBER** keys to input the channel number you want to store.
 - Input "0" before any single number entries.
 - To input the registered station name (ID - pg. 61), press \triangleright until "----" (ID setting) begins blinking, then press $\Delta \nabla$.
 - For fine tuning adjustment, press \triangleright until "+/-" begins blinking, then press $\Delta \nabla$. While tuning, "+" or "-" appears.
 - When storing a channel that sends scrambled broadcasts, press \triangleright until "OFF" (Decoder setting) blinks, then press $\Delta \nabla$ to set "DECODER" to "ON" ("OFF" is the default setting).
 - When "AV2 SELECT" is set to "AV2", the "DECODER" setting cannot be changed (pg. 44).

- 6** **ENTER NEW CHANNEL INFORMATION**
Press **OK** and the Confirmation screen appears.
 - Repeat steps 3 through 6 as necessary.
- 7** **CLOSE CONFIRMATION SCREEN**
Press **MENU**.
 - To change positions, see "Change Station Channel Position" (pg. 59).
 - If you wish to set station names other than the ones registered in your recorder, "Set Stations (B)" on page 60.

ATTENTION
 Guide Program numbers are not set when channels are stored manually. If an attempt is made at timer programming with ShowView in this state, the "GUIDE PROG SET" screen appears; set the Guide Program numbers on this screen. "ATTENTION - Regarding Guide Program Number Set" on pg. 29.
 Or perform "Guide Program Number Set" (pg. 66).

Delete A Channel

Perform steps 1 and 2 of "Storing Channels Manually" on page 58 to access the Confirmation screen before continuing.

- 1** **SELECT ITEM**
Press $\Delta \nabla \triangleleft \triangleright$ until the item you want to delete begins blinking.
- 2** **DELETE CHANNEL**
Press **X**.
 - The item directly beneath the cancelled one moves up one line.
 - Repeat steps 1 and 2 as necessary.
- 3** **CLOSE CONFIRMATION SCREEN**
Press **MENU**.

Change Station Channel Position

Perform steps 1 and 2 of "Storing Channels Manually" on page 58 to access the Confirmation screen before continuing.

- 1** **SELECT ITEM**
Press $\Delta \nabla \triangleleft \triangleright$ until the item you want to move begins blinking. Then press **OK** and the station name (ID) and its channel (CH) number begin blinking.
 - 2** **SELECT NEW POSITION**
Press $\Delta \nabla \triangleleft \triangleright$ to move the station to the new channel position, then press **OK**.
Example: If you moved the station in position 4 to position 2, the stations originally in positions 2 and 3 each move down one space.
- | PR | CH | ID | PR | CH | ID | PR | CH | ID | PR | CH | ID |
|----|-----|------|----|------|------|----|-----|------|----|------|------|
| 01 | 25 | ARD | 08 | C26 | E-SP | 01 | 25 | ARD | 08 | C26 | E-SP |
| 02 | C08 | SKY1 | 09 | 55 | WEST | 02 | C65 | RAI1 | 09 | 55 | WEST |
| 03 | 10 | ZDF | 10 | C24 | SAT1 | 03 | C08 | SKY1 | 10 | C24 | SAT1 |
| 04 | C65 | RAI1 | 11 | C23 | OSF | 04 | 10 | ZDF | 11 | C23 | OSF |
| 05 | C31 | BBC1 | 12 | C25 | ESPN | 05 | C31 | BBC1 | 12 | C25 | ESPN |
| 06 | C32 | BBC2 | 13 | ---- | ---- | 06 | C32 | BBC2 | 13 | ---- | ---- |
| 07 | C33 | 3SAT | 14 | ---- | ---- | 07 | C33 | 3SAT | 14 | ---- | ---- |
- [$\Delta \nabla \triangleleft \triangleright$]: MOVE
 [X]: MANUAL CH SET
 [MENU]: EXIT

[$\Delta \nabla \triangleleft \triangleright$]: MOVE → [X]
 [MENU]: EXIT
- 3** **CLOSE CONFIRMATION SCREEN**
Press **MENU**.
 - Repeat steps 1 and 2 as necessary.

When Receiving A Scrambled Broadcast

- 1** **SELECT DECODER MODE**
Set "AV2 SELECT" to "DECODER" (ⓘ pg. 44).
- 2** **ACCESS CONFIRMATION SCREEN**
Perform steps 1 and 2 of "Storing Channel Manually" on page 58.
- 3** **SELECT POSITION**
Press $\Delta \nabla \triangleleft \triangleright$ to select the channel position broadcasting scrambled programmes, then press **OK** twice.
- 4** **CHANGE DECODER SETTING**
Press \triangleright until "OFF" (decoder setting) begins blinking, and set it to "ON" by pressing $\Delta \nabla$.
- 5** **RETURN TO CONFIRMATION SCREEN**
Press **OK**.
 - Repeat steps 3 through 5 as necessary.
- 6** **CLOSE CONFIRMATION SCREEN**
Press **MENU**.

ATTENTION

If channel positions are changed or deleted, the Guide Program numbers that have been set are reset.

- Example 1: If a channel is deleted, all the Guide Program numbers are reset.
- Example 2: If a channel is changed from position 4 to position 2, the Guide Program numbers above position 4 are reset.
- Example 3: If a channel is changed from position 4 to position 6, the Guide Program numbers above position 6 are reset.

* In Examples 2 and 3, if the channel is moved to position 10 before **OK** is pressed, the Guide Program numbers above position 10 are reset.

If an attempt is made at timer programming with SHOWVIEW in this state, the "GUIDE PROG SET" screen appears; set the Guide Program numbers on this screen.

ⓘ "ATTENTION – Regarding Guide Program Number Set" on pg. 29.

Or perform "Guide Program Number Set" (ⓘ pg. 66).

NOTE:

The characters available for the station name (ID) are A–Z, 0–9, -, *, +, _ (space) (maximum of 4).

Set Stations (A)

Set station names that are registered in your recorder.

Perform steps 1 and 2 of "Storing Channels Manually" on page 58 to access the Confirmation screen before continuing.

1

SELECT ITEM

Press $\Delta \nabla \triangleleft \triangleright$ until the item you want begins blinking.

2

ACCESS MANUAL CHANNEL SET SCREEN


Press **OK** twice.

3

SELECT NEW STATION

Press \triangleright until the station name (ID) begins blinking, then press $\Delta \nabla$ until the new station's name (ID) you want to store begins blinking.

Registered station names (pg. 61) appear as you press $\Delta \nabla$.

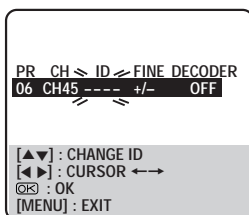

4

SWITCH STATIONS

Press **OK**.

- The Confirmation screen appears.
- Repeat steps 1 through 4 as necessary.

5

CLOSE CONFIRMATION SCREEN

Press **MENU**.

Set Stations (B)


Set station names other than the ones registered in your recorder.

Perform steps 1 and 2 of "Storing Channels Manually" on page 58 to access the Confirmation screen and then perform step 1 and 2 of "Set Stations (A)" on the left before continuing.

1

SELECT STATION NAME CHARACTER

Press \triangleright until the first letter of the station name begins blinking.

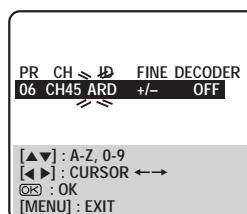

2

ENTER NEW CHARACTER

Press $\Delta \nabla$ to cycle through the characters (A-Z, 0-9, -, *, +, — (space)) and stop when the desired character is indicated, then press \triangleright to enter. Enter the remaining characters the same way (maximum of 4). After entering all characters, press **OK**.

- The Confirmation screen appears.
- If you make a mistake, press \triangleleft until the incorrect character begins blinking. Then enter the correct character by pressing $\Delta \nabla$.

3

CLOSE CONFIRMATION SCREEN

Press **MENU**.

TV Station And ID List


| ID* | STATION NAME |
|------|---------------|
| 1000 | TV1000 |
| 3SAT | 3SAT |
| ADLT | ADULT |
| ANT3 | ANTENA3 |
| ARD | ARD |
| ARTE | ARTE |
| BBC | BBC GROUP |
| BBC1 | BBC1 |
| BBC2 | BBC2 |
| BR3 | BAYERN3 |
| C+ | CANAL PLUS |
| C1 | PORTUGUSES |
| CAN5 | CANALE5 |
| CANV | KETNET CANVAS |
| CH4 | CHANNEL4 |
| CH5 | CHANNEL5 |
| CHLD | CHILD |
| CINE | CINEMA |
| CLUB | TELECLUB |
| CMT | CMT |
| CNN | CNN |
| CSUR | ANDALUCIA |
| DISC | DISCOVERY |
| DR | DR TV |
| DRS | DRS |
| DSF | DSF |
| ETB1 | ETB1 |
| ETB2 | ETB2 |
| EURO | EURONEWS |
| EUSP | EUROSPORTS |
| FEMM | FEMMAN |
| FILM | FILM |
| FNET | FILMNET |
| FR2 | France2 |
| FR3 | France3 |
| GALA | GALAVISION |
| HR3 | HESSEN3 |
| INFO | INFO-KANAL |
| ITA1 | ITALIA1 |
| ITA7 | ITALIA7 |
| ITV | ITV |
| JSTV | JSTV |
| KA2 | KA2 |
| KAB1 | KABEL1 |
| KAN2 | KANAL2 |
| LOCA | LOCAL |
| M6 | M6 |
| MBC | MBR |
| MCM | MCM |
| MDR | MDR |
| MOVE | MOVIE |
| MTV | MTV |
| MTV3 | MTV3 |
| N3 | NORD3 |
| N-TV | N-TV |
| NBC | NBC SUPER |
| NDR3 | NDR3 |
| NED1 | NED1 |
| NED2 | NED2 |
| NED3 | NED3 |
| NEWS | |
| NICK | NICKELODEON |
| NRK | NRK |
| NRK2 | NRK2 |
| ODE | ODEON |
| ORF1 | ORF1 |

| ID* | STATION NAME |
|------|----------------|
| ORF2 | ORF2 |
| ORF3 | ORF3 |
| OWL3 | OWL3 |
| PREM | PREMIERE |
| PRO7 | PRO7 |
| RAI1 | RAI1 |
| RAI2 | RAI2 |
| RAI3 | RAI3 |
| RET4 | RETE4 |
| 21 | TELE21 |
| RTBF | RTBF1 or 2 |
| RTL | RTL |
| RTL2 | RTL2 |
| RTL4 | RTL4 |
| RTL5 | RTL5 |
| RTP | RTP |
| S4 | SCHWEIZ4 |
| SAT1 | SAT1 |
| SBS | SBS |
| SHOW | SHOW |
| SIC | SOCIEDADE |
| SKY | SKY CHANNEL |
| SKYN | SKY NEWS |
| SPRT | SPORT |
| SRTL | SUPER RTL |
| STAR | STAR-TV |
| SVT1 | SVT1 |
| SVT2 | SVT2 |
| SWR | SUEDWEST3 |
| TCC | TCC |
| TELE | TELE |
| TEL5 | TELE5 |
| TF1 | TF1 |
| TM3 | TM3 |
| TMC | TELEMONTECARLO |
| TNT | TNT INT |
| TRT | TRT INT |
| TSI | TSI |
| TSR | TSR |
| TV1 | BRTN TV1 |
| TV2 | TV2 |
| TV3 | TV3 |
| TV4 | TV4 |
| TV5 | TV5 |
| TV6 | TV6 |
| TVE1 | TVE1 |
| TVE2 | TVE2 |
| TVG | TV GALICIA |
| TVI | TV INDEPENDENT |
| TVN | TV NORGE |
| VCR | VIDEO |
| VERO | VERONICA |
| VH-1 | VH-1 |
| VIVA | VIVA |
| VIV2 | VIVA2 |
| VMTV | VIDEO MUSIC |
| VOX | VOX |
| VT4 | VT4 |
| VTM | VTM |
| WDR1 | West1 |
| WDR3 | West3 |
| YLE1 | YLE1 |
| YLE2 | YLE2 |
| ZDF | ZDF |
| ZTV | ZTV |

* The "ID" abbreviation is what is shown on-screen in lieu of the station name. The "ID" abbreviation is listed in the Confirmation screen and is displayed on the TV screen when the recorder is tuned to a different station.

Fine-Tuning Channels Already Stored

Perform steps 1 and 2 of "Storing Channels Manually" on page 58 to access the Confirmation screen before continuing.

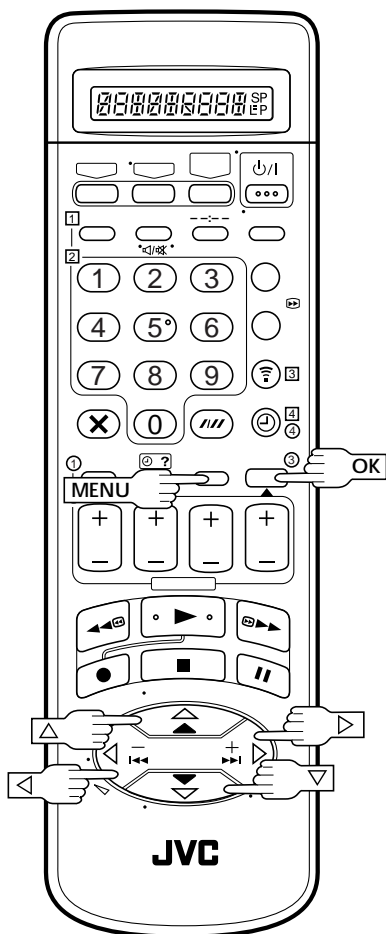

1 SELECT CHANNEL TO FINE-TUNE

Press Δ ∇ \triangleleft \triangleright until the channel you want to tune begins blinking.

2 ACCESS MANUAL CHANNEL SET SCREEN

Press **OK** twice. The Manual Channel Set screen appears.

3 PERFORM TUNING

Press \triangleright until "+/-" begins blinking, then press Δ ∇ until the picture is its clearest. Then press **OK**.

- The Confirmation screen appears.
- Repeat steps 1 through 3 as necessary.

4 CLOSE CONFIRMATION SCREEN

Press **MENU**.

Video Channel Set

Video Channel (RF Output Channel) is the channel on which your TV receives picture and sound signals from the video recorder through the RF cable.

IMPORTANT

Perform the following steps only if —

- interference appears in the TV picture after you have moved to a different area or a new station has started broadcasting in your area.
- you change the connection between your recorder and TV from RF connection to AV or S-VIDEO connection, or vice versa.

 
If you have connected the video recorder to your TV via both the provided RF cable and a 21-pin SCART cable (AV connection), or via the provided RF cable, the provided S-Video cable and an audio cable (S-VIDEO connection), since you do not need the video channel you have to set the video channel to off.

If you have connected the video recorder to your TV via the RF cable only (RF connection), you have to set the correct video channel.

Before performing the following steps, make sure the recorder's power is off and there is no cassette inserted in the recorder.


ACCESS VIDEO CHANNEL SET MODE

- 1** Hold down **STOP** (■/▲) on the recorder until the display panel shows the following.




SET RF OUTPUT SYSTEM

 - 2** The blinking number on the display indicates the RF output system of your country. If you have selected **MAGYARORSZAG** (36), **CESKA REPUBLIKA** (42), **POLSKA** (48) or **OTHER EASTERN EUROPE** (EE) for the country setting (pg. 6, 10), press **Δ∇** to set to "2". For other countries, set to "1". Then press **OK**.
(1: B/G 2: D/K)



SET VIDEO CHANNEL

 - 3** **With AV Connection or S-VIDEO Connection**
Press **TV PROG** – until the display panel shows "10UT--" (or "20UT--").




- Now the video channel is set to off.

With RF Connection


Press **TV PROG** + or – to set the video recorder to a vacant channel between 22 and 69 which is not occupied by any local station in your area.

 (Ex.) If channel 50 is available in your area



Then set your TV to UHF channel 50.

- If the two vertical white bars appear clearly on the screen as shown to the right, go to step 4.
- If the two vertical white bars do not appear clearly, re-set the video recorder to another vacant channel and try again.

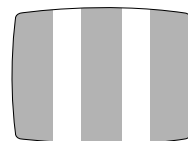

NOTES:

- If you set the video recorder to a channel which is occupied by a local station or has neighbouring channels that are occupied by local stations, the picture reception quality will be affected and some interference noise will appear on the TV screen. Be sure to select a vacant channel which has no broadcast on neighbouring channels.
- If you cannot obtain the two vertical white bars clearly with any channel between 22 and 69, consult your JVC dealer.

EXIT VIDEO CHANNEL SET MODE

- 4** Press **OK** on the remote control.

With AV Connection or S-VIDEO Connection:

To view picture signals from the video recorder, set your TV to its AV mode.


With RF Connection:

The channel on which the screen in step 3 appears clearly is your video channel.

To view picture signals from the video recorder, set your TV to the Video Channel.

Clock Set

Turn on the TV and select the VIDEO channel (or AV mode).

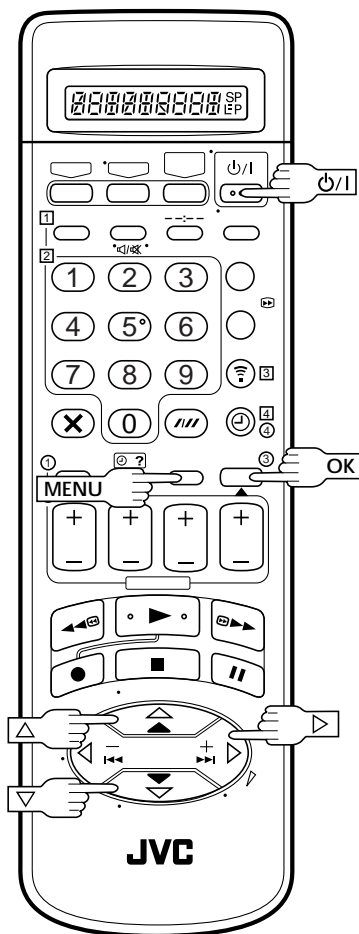

Just Clock

The Just Clock function provides accurate time keeping through automatic adjustments at regular intervals, by reading data from a PDC signal.

The Just Clock option can be set "ON" or "OFF" at the Clock Set screen (the default setting is "OFF"). Press **OK** until the Just Clock setting begins blinking, then press $\Delta\nabla$ to change the setting.

IMPORTANT: If you turn off Just Clock, the accuracy of your recorder's built-in clock may be reduced, which could adversely effect timer recording. We recommend you to keep Just Clock on. In cases where the clock setting data from a PDC signal is incorrect, however, you are advised to keep Just Clock set to "OFF".

IMPORTANT

If you performed Auto Set Up (☞ pg. 6), Preset Download (☞ pg. 8) or Auto Channel Set (☞ pg. 56), without ever having set the clock previously, the recorder's built-in clock is also set automatically.

Perform the following steps only if —

- Auto Clock Set has not been performed correctly by Auto Set Up, Preset Download or Auto Channel Set.
- or
- the recorder's memory backup has expired.
- or
- you want to change Just Clock setting (☞ "Just Clock" in the left column).

1 TURN THE RECORDER ON

Press power .

2 ACCESS MAIN MENU SCREEN



Press **MENU**.

3 ACCESS INITIAL SET SCREEN

Move the highlight bar (pointer) to "INITIAL SET" by pressing $\Delta\nabla$, then press **OK** or \triangleright .

4 ACCESS CLOCK SET SCREEN

Move the highlight bar (pointer) to "CLOCK SET" by pressing $\Delta\nabla$, then press **OK** or \triangleright . The Clock Set screen appears.

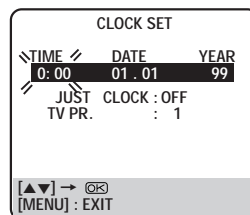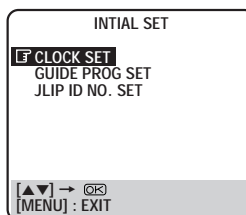


NOTE:

When you have selected MAGYARORSZAG (36), CESKA REPUBLIKA (42), POLSKA (48) or OTHER EASTERN EUROPE (EE) for the country setting (☞ pg. 6, 10), you cannot use Just Clock function. Skip steps 6 and 7 on page 65.

5 SET DATE AND TIME

Press $\Delta\nabla$ to set the time, then press **OK** or \triangleright . The "date" display begins blinking. Repeat the same procedure to set the date and year.

- When you set the time, press and hold $\Delta\nabla$ to change the time by 30 minutes.
- When you set the date, press and hold $\Delta\nabla$ to change the date by 15 days.

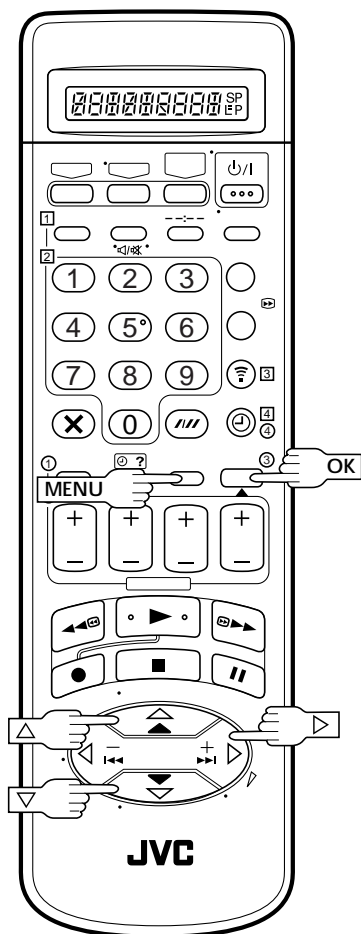

6 SET JUST CLOCK

The default setting is "OFF". Set as desired by pressing Δ / ∇ , then press **OK** or \triangleright .

- For the Just clock function, \llcorner "Just Clock" on page 64.
- If you set to "OFF", you can disregard the next step as you won't be able to receive regular clock adjustments.

7 SET CLOCK DATA SOURCE CHANNEL POSITION

The recorder is preset to receive clock setting and adjustment data from channel position 1. Press Δ / ∇ to set the channel position to the number representing the station transmitting clock setting data, then press **OK** or \triangleright .

8 START CLOCK OPERATION

Press **MENU**.

NOTES:

- *Just Clock* (when set to "ON") adjusts the recorder's built-in clock every hour, except for 23:00, 0:00, 1:00 and 2:00.
- *Just Clock* is not effective when . . .
 - the recorder's power is on.
 - the recorder is in the Timer mode.
 - a difference of more than 3 minutes exists between the built-in clock's time and the actual time.
 - the recorder is in the Auto Satellite Prog Rec mode (\llcorner pg. 35).
 - the recorder is in the Power Save mode (\llcorner pg. 12).
- If *Just Clock* is set to "ON", the recorder's clock is automatically adjusted at the start/end of Summer Time.
- *Just Clock* may not function properly depending on the reception condition.

SHOWVIEW Setup

IMPORTANT

Normally, Auto Set Up (pg. 6), Preset Download (pg. 8) or Auto Channel Set (pg. 56) sets the Guide Program Numbers automatically. You need to set the Guide Program Numbers manually only in the following cases.

- When timer-programming with *SHOWVIEW*, the channel position, where the station you wish to record is received on your recorder, is not selected or when you add a channel after Auto Set Up or Auto Channel Set has taken place.
 - Set the Guide Program Number for that station manually.
- When you delete a channel or change channel positions manually after Auto Set Up or Auto Channel Set has taken place.
 - Set the Guide Program Numbers for all the receivable stations manually.
- When you wish to timer-record a satellite programme with *SHOWVIEW*.
 - Set the Guide Program Numbers for all satellite broadcasts received on your satellite tuner.

Turn on the TV and select the VIDEO channel (or AV mode).

Guide Program Number Set

1

ACCESS MAIN MENU SCREEN

Press **MENU**.

2

ACCESS INITIAL SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "INITIAL SET", then press **OK** or \triangleright .

3


ACCESS GUIDE PROG SET SCREEN

Press $\Delta \nabla$ to move the highlight bar (pointer) to "GUIDE PROG SET", then press **OK** or \triangleright .

4

ENTER GUIDE PROG NUMBER

Press $\Delta \nabla$ or **NUMBER** keys to enter the Guide Program number for the desired station as shown in the TV listings. Then press **OK** or \triangleright .

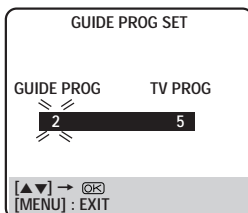


(Ex.) When inputting the Guide Program number 2 for ZDF.

5

ENTER RECEIVING CHANNEL POSITION NUMBER

Press $\Delta \nabla$ or **NUMBER** keys to input the number of the recorder's channel position on which the Guide Program number's broadcast is received. Then press **OK** or \triangleright .

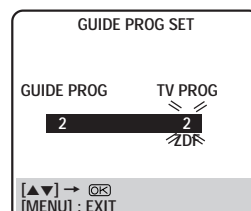

(Ex.) If ZDF is received on channel position 2.

- If the satellite broadcast is received on your recorder's auxiliary channel "L-2", select "L-2" for the channel position.
- Repeat steps 4 and 5 as necessary.

6

RETURN TO NORMAL SCREEN

Press **MENU**.

Guide Program Number

"Guide Program (GUIDE PROG) number" refers to the assigned TV station numbers, according to broadcast area, for *SHOWVIEW* timer recording. The Guide Program numbers can be found in most TV listings.

Before requesting service for a problem, use this chart and see if you can repair the trouble yourself. Small problems are often easily corrected, and this can save you the trouble of sending your video recorder off for repair.

POWER

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|---|---|---|
| 1. No power is applied to the recorder. | <ul style="list-style-type: none"> The mains power cord is disconnected. | Connect the mains power cord. |
| 2. The clock is functioning properly, but the recorder cannot be powered. | <ul style="list-style-type: none"> "⊖" is displayed on the display panel with Auto Timer set to "OFF". | Press the ⊖ button to turn the "⊖" indicator off. |
| 3. The remote control won't function. | <ul style="list-style-type: none"> The batteries are discharged. | Replace the dead batteries with new ones. |

TAPE TRANSPORT

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|--|--|
| 1. The tape does not run during recording. | <ul style="list-style-type: none"> "⏏" is displayed on the display panel. | Press PLAY to turn the "⏏" indicator off. |
| 2. The tape will not rewind or fast-forward. | <ul style="list-style-type: none"> The tape is already fully rewound or fast-forwarded. | Check the cassette. |

PLAYBACK

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|--|--|
| 1. The playback picture does not appear while the tape is running. | <ul style="list-style-type: none"> If you're using the RF OUT connection the TV receiver's channel selector is not set to the VIDEO channel. the recorder's VIDEO channel has not been correctly set. If you're using the AV or S-VIDEO connection, the TV receiver is not set to the AV mode. | <p>If you are using the RF OUT connection set the TV receiver to the VIDEO channel. perform "Video Channel Set". (☞ pg. 63)</p> <p>If you are using the AV or S-VIDEO connection, set the TV to its AV mode.</p> |
| 2. Noise appears during visual search. | <ul style="list-style-type: none"> This is normal during visual search other than TimeScan. | |
| 3. Noise appears during normal playback. | <ul style="list-style-type: none"> The automatic tracking mode is engaged. | Try manual tracking. (☞ pg. 17) |
| 4. The playback picture is blurred or interrupted while TV broadcasts are clear. | <ul style="list-style-type: none"> The video heads may be dirty. | Consult your JVC dealer. |
| 5. Breaks are noticeable in Hi-Fi soundtrack. | <ul style="list-style-type: none"> Automatic tracking is engaged. | Engage and adjust tracking manually. (☞ pg. 17) |

RECORDING

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|--|---|
| 1. Recording cannot be started. | <ul style="list-style-type: none"> There is no cassette loaded, or the cassette loaded has had its Record Safety tab removed. | Insert a cassette, or using adhesive tape, reseal the slot where the tab was removed. |
| 2. TV broadcasts cannot be recorded. | <ul style="list-style-type: none"> "L-1", "L-2", "F-1" or "S-1" has been selected as the input mode. | Set to the desired channel. |
| 3. Tape-to-tape editing is not possible. | <ul style="list-style-type: none"> The source (another video recorder, camcorder) has not been properly connected. All necessary power switches have not been turned on. The input mode is not correct. | <p>Confirm that the source is properly connected.</p> <p>Confirm that all units' power switches are turned on.</p> <p>Set the input mode to "L-1", "L-2", "F-1" or "S-1".</p> |
| 4. Camcorder recording is not possible. | <ul style="list-style-type: none"> The camcorder has not been properly connected. The input mode is not correct. | <p>Confirm that the camcorder is properly connected.</p> <p>Set the input mode to "L-1", "L-2", "F-1" or "S-1".</p> |

TIMER RECORDING

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|---|---|--|
| 1. Timer recording won't work. | <ul style="list-style-type: none"> • The clock and/or the timer have been set incorrectly. • The timer is not engaged. | Re-perform the clock and/or timer settings. Press ⊖ and confirm that "⊖" is displayed on the display panel. |
| 2. Timer programming is not possible. | <ul style="list-style-type: none"> • Timer recording is in progress. | Timer programming can't be performed while a timer recording is in progress. Wait until it finishes. |
| 3. "⊖" and "⊖" on the display panel won't stop blinking. | <ul style="list-style-type: none"> • The timer is engaged but there's no cassette loaded. | Load a cassette with the Record Safety tab intact, or cover the hole using adhesive tape. |
| 4. The cassette is automatically ejected, and "⊖" and "⊖" on the display panel won't stop blinking. | <ul style="list-style-type: none"> • The loaded cassette has had its Record Safety tab removed. | Remove the cassette and cover the hole with adhesive tape, or insert a cassette with the Record Safety tab intact. |
| 5. "⊖" blinks for 10 seconds and the Timer mode is disengaged. | <ul style="list-style-type: none"> • ⊖ has been pressed when there are no programs in memory, or the timer record information has been programmed incorrectly. | Check the programmed data and re-program as necessary, then press ⊖ again. |
| 6. The cassette is automatically ejected, the power shuts off and "⊖" and "⊖" won't stop blinking. However, the cassette may not be ejected when the front panel is closed. | <ul style="list-style-type: none"> • The end of the tape was reached during timer recording. | The programme may not have been recorded in its entirety. Next time make sure you have enough time on the tape to record the entire programme. When the front panel is closed and the cassette cannot be ejected fully, push the cassette into the recorder, then press STOP/EJECT to remove the cassette. |
| 7. SHOWVIEW does not timer-record properly. | <ul style="list-style-type: none"> • The recorder's channel positions have been set incorrectly. | Refer to "Guide Program Number Set" and re-perform the procedure (Ⓞ pg. 66). |

OTHER PROBLEMS

| SYMPTOM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|--|--|---|
| 1. Whistling or howling is heard from the TV during camcorder recording. | <ul style="list-style-type: none"> • The camcorder's microphone is too close to the TV. • The TV's volume is too high. | Position the camcorder so its microphone is away from the TV. Turn the TV's volume down. |
| 2. When scanning channels, some of them are skipped over. | <ul style="list-style-type: none"> • Those channels have been designated to be skipped. | If you need the skipped channels, restore them (Ⓞ pg. 58). |
| 3. The channel cannot be changed. | <ul style="list-style-type: none"> • Recording is in progress. | Press PAUSE to pause the recording, change channels, then press PLAY to resume recording. |
| 4. Channel settings that were made manually seem to have changed or disappeared. | <ul style="list-style-type: none"> • After the manual settings were made, Auto Channel Set was performed. | Perform manual setting again. |
| 5. No channels are stored in the recorder's memory. | <ul style="list-style-type: none"> • The TV aerial cable was not connected to the recorder when Auto Set Up was performed. | Connect the TV aerial cable to the recorder properly and turn off the recorder power once, then turn the recorder power back on again. The recorder will try Auto Set Up again (Ⓞ pg. 6). |
| 6. The remote control won't operate the TV or satellite tuner. | <ul style="list-style-type: none"> • The remote control brand setting is incorrect. | Re-set the remote control to the correct brand (Ⓞ pg. 37, 38). |

PLAYBACK

- Q. What happens if the end of the tape is reached during playback or search?**
A. The tape is automatically rewound to the beginning.

- Q. Can the video recorder indefinitely remain in the still mode?**
A. No. It stops automatically after 5 minutes to protect the heads.

- Q. When returning from multi-speed search to normal playback, the picture is disturbed. Should I be concerned about this?**
A. No, it is normal.

- Q. Other than preventing further recording, what effect does removing the Record Safety tab have?**
A. It disables marking of index codes.

- Q. Sometimes, during Index Search, the video recorder can't find the programme I want to see. Why not?**
A. There may be index codes too close together.

RECORDING

- Q. When I pause and then resume a recording, the end of the recording before the pause is overlapped by the beginning of the continuation of recording. Why does this happen?**
A. This is normal. It reduces distortion at the pause and resume points.

- Q. Can the video recorder indefinitely remain in the Record-Pause mode?**
A. No. The video recorder goes to its Stop mode automatically after 5 minutes to protect the heads.

- Q. What happens if the tape runs out during recording?**
A. The video recorder automatically rewinds it to the beginning.

TIMER RECORDING

- Q. "⦿" and "⊖" remain lit on the display panel. Is there a problem?**
A. No. This is a normal condition for a timer recording in progress.


- Q. Can I programme the timer while I'm watching a tape or a TV broadcast?**
A. You won't see the picture as it is replaced by the on-screen menu, but the audio from the programme or tape you're viewing can be heard.

- Q. Is it possible to timer-record a TV programme broadcast in 2000?**
A. Yes, it is possible.


ATTENTION

This recorder contains microcomputers. External electronic noise or interference could cause malfunctioning. In such cases, switch the recorder off and unplug the mains power cord. Then plug it in again and turn the recorder on. Take out the cassette. After checking the cassette, operate the unit as usual.

FRONT VIEW

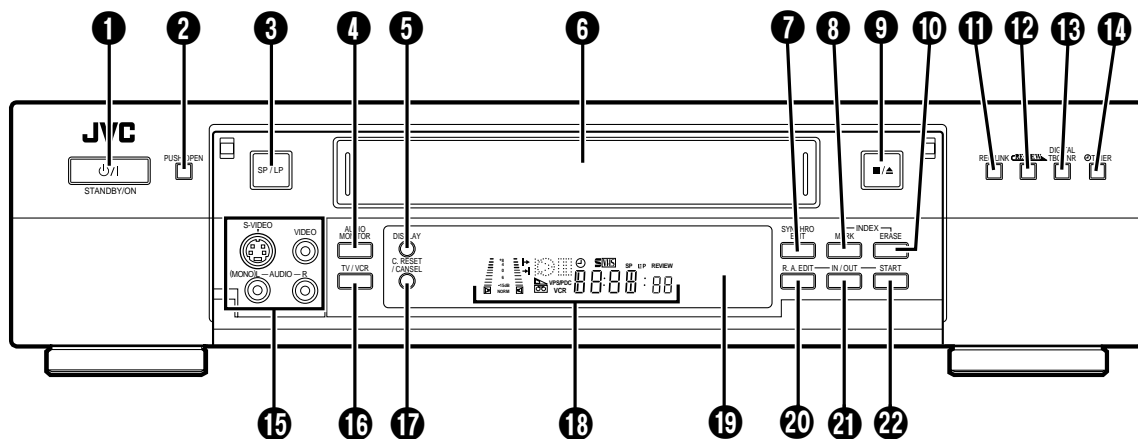


- ❶ STANDBY/ON ϕ /I Button [pg. 6](#)
- ❷ PUSH-OPEN Button
- ❸ SP/LP Button [pg. 22](#)
- ❹ AUDIO MONITOR Button [pg. 19](#)
- ❺ DISPLAY Button [pg. 23](#)
- ❻ Cassette Loading Slot
- ❼ SYNCHRO EDIT Button [pg. 41](#)
- ❽ INDEX MARK Button [pg. 17](#)
- ❾ STOP/EJECT Button [pg. 15](#)
- ❿ INDEX ERASE Button [pg. 17](#)
- ⓫ REC LINK Button [pg. 35](#)
- ⓬ REVIEW Button [pg. 19](#)
- ⓭ DIGITAL TBC/NR Button [pg. 18](#)
- ⓮ \odot TIMER Button [pg. 29, 31](#)
- ⓯ S-VIDEO/AUDIO/AUDIO Input Connectors [pg. 40, 46](#)
- ⓰ TV/VCR Button [pg. 23](#)
- ⓱ Counter Reset [C.RESET] Button [pg. 23, 46](#)
- ⓲ CANCEL Button [pg. 32, 49](#)
- ⓳ Display Panel [pg. 72](#)
- ⓴ Infrared Beam Receiving Window
- ⓵ Random Assemble Edit [R.A. EDIT] Button [pg. 48](#)
- ⓶ IN/OUT Button [pg. 49](#)
- ⓷ START Button [pg. 49](#)

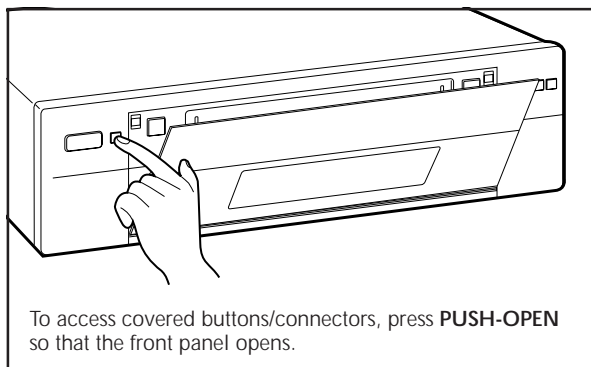


To access covered buttons/connectors, press **PUSH-OPEN** so that the front panel opens.

INSIDE VIEW OF FRONT PANEL

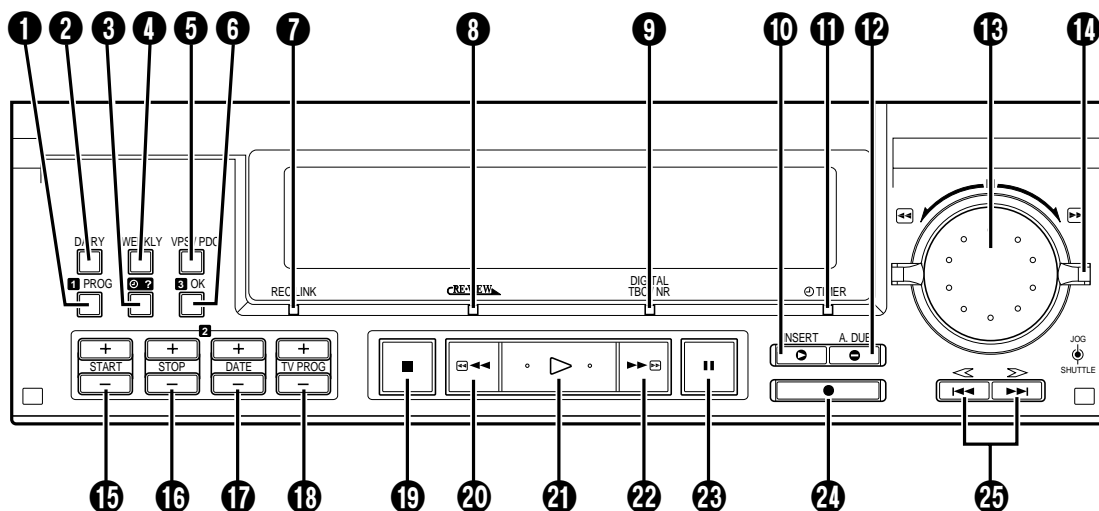


- ❶ PROG Button ☞ pg. 28
- ❷ DAILY Button ☞ pg. 29, 31
- ❸ ? Button ☞ pg. 32
- ❹ WEEKLY Button ☞ pg. 29, 31
- ❺ VPS/PDC Button ☞ pg. 29, 31
- ❻ OK Button ☞ pg. 7
- ❼ REC LINK Indicator ☞ pg. 35
- ❽ REVIEW Indicator ☞ pg. 19
- ❾ DIGITAL TBC/NR Indicator ☞ pg. 18
- ❿ INSERT Button ☞ pg. 46
- ⓫ ?TIMER Indicator ☞ pg. 29, 31
- ⓬ Audio Dubbing [A. DUB] Button ☞ pg. 45
- ⓭ JOG Dial ☞ pg. 16
- ⓮ SHUTTLE Ring ☞ pg. 15 – 17
- ⓯ START +/- Button ☞ pg. 30
- ⓰ STOP +/- Button ☞ pg. 30
- ⓱ DATE +/- Button ☞ pg. 30
- ⓲ TV PROG +/- Buttons ☞ pg. 22
- ⓳ STOP Button ☞ pg. 15
- ⓴ Rewind [REW] Button ☞ pg. 15 – 17
- ⓵ PLAY Button ☞ pg. 15
- ⓶ Fast Forward [FF] Button ☞ pg. 15 – 17
- ⓷ PAUSE Button ☞ pg. 16
- ⓸ RECORD Button ☞ pg. 22
- ⓹ << |◀ and ▶| >> Buttons — same as ◀▶ Button on remote control ☞ pg. 16, 17, 20

REAR VIEW

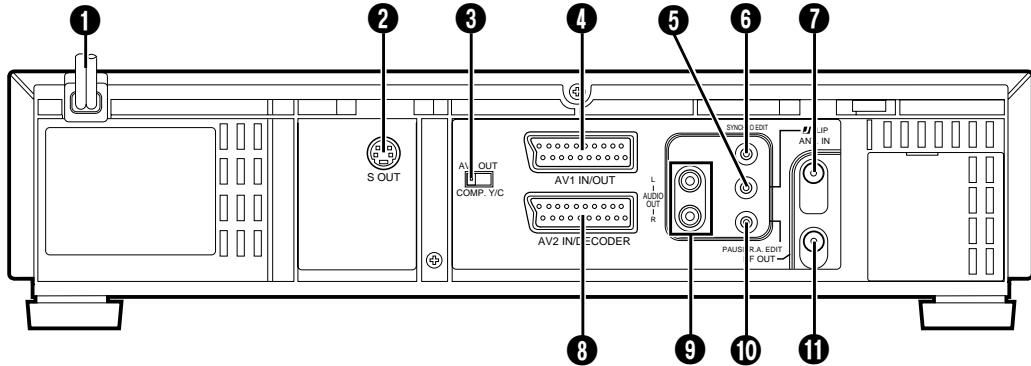

- 1 Mains Power Cord ☞ pg. 4
- 2 S-VIDEO OUT Connector ☞ pg. 5
- 3 AV1 OUT Switch ☞ pg. 4
- 4 AV1 IN/OUT Connector ☞ pg. 4, 41, 42, 48, 51 – 54
- 5 J terminal [JLIP (Joint Level Interface Protocol) Connector] ☞ pg. 50
- 6 SYNCHRO EDIT Connector ☞ pg. 41
- 7 ANT. IN Connector ☞ pg. 4
- 8 AV2 IN/DECODER Connector ☞ pg. 42, 51 – 54
- 9 AUDIO OUT (L/R) Connectors ☞ pg. 55
- 10 Remote PAUSE Connector ☞ pg. 40
- 11 R.A. EDIT Connector ☞ pg. 48
- 11 RF OUT Connector ☞ pg. 4


DISPLAY PANEL

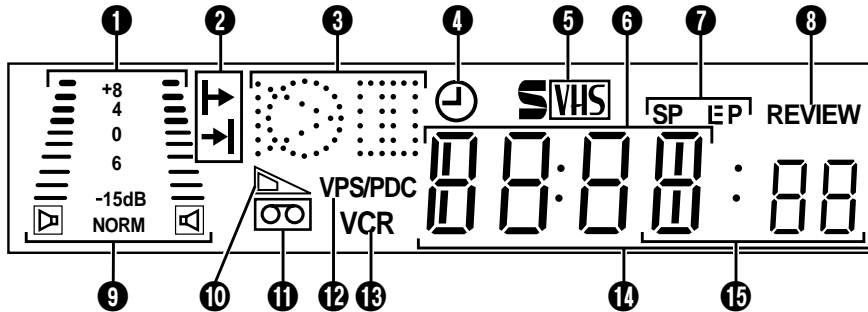

- 1 B.E.S.T. Picture System Display ☞ pg. 26
- 2 Programme Time Indicators ☞ pg. 30
- 3 Symbolic Mode Indicators
- 4 "Timer" Indicator ☞ pg. 29, 31
- 5 S-VHS Indicator ☞ pg. 24
- 6 Channel/Clock Display ☞ pg. 9
- 7 Tape Speed Indicators ☞ pg. 22
- 8 Instant REVIEW Indicator ☞ pg. 19
- 9 Audio Mode Indicator ☞ pg. 19
- 10 Tape Remaining Time Indicator ☞ pg. 23
- 11 "Cassette Loaded" Mark
- 12 VPS/PDC Indicator ☞ pg. 29, 31
- 13 VCR Indicator ☞ pg. 23
- 14 Counter/Remain Display
- 15 Mode Display (L-1, L-2, F-1 or S-1)

| | | | |
|-------------------------------------|--|-----------------|--|
| PLAY: FF/REW VARIABLE SEARCH: | | STILL: SLOW: | |
| | | RECORD: | |
| | | RECORD PAUSE: | |
| AUDIO DUBBING: | | | |
| AUDIO DUBBING PAUSE: | | | |
| INSERT: | | | |
| INSERT PAUSE: | | | |
| AUDIO DUBBING INSERT: | | | |
| AUDIO DUBBING INSERT PAUSE: | | | |

REMOTE CONTROL

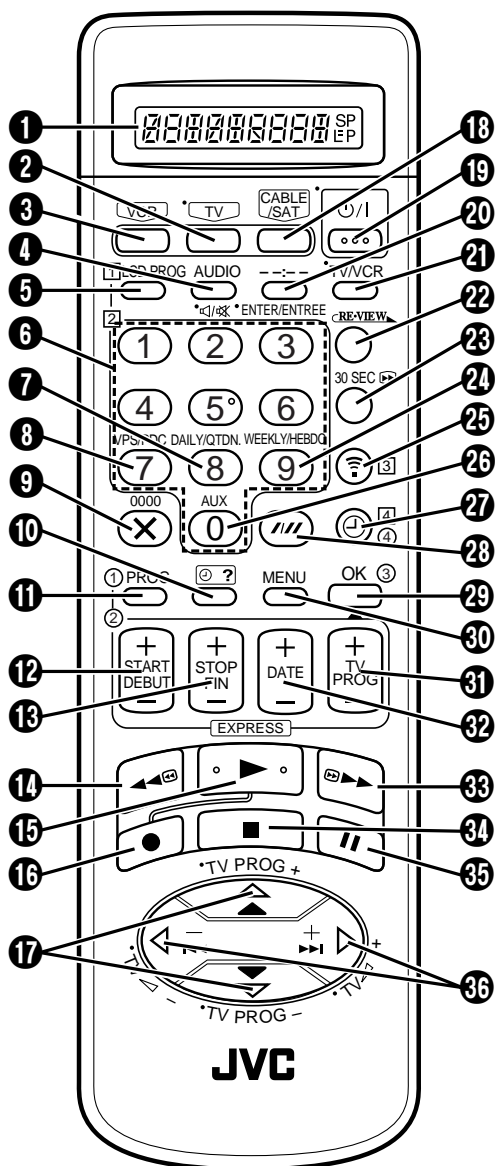

- 1 LCD Panel ☞ pg. 28, 74
- 2 TV Button ☞ pg. 37, 74
- 3 VCR Button ☞ pg. 36, 74
- 4 AUDIO Button ☞ pg. 19
- ☞/☒ (TV Muting) Button ☞ pg. 37
- 5 LCD PROG Button ☞ pg. 28
- 6 NUMBER Keys ☞ pg. 22, 28
- 7 DAILY Button ☞ pg. 29, 31
- 8 VPS/PDC Button ☞ pg. 29, 31
- 9 X Button ☞ pg. 28, 32, 49
- 0000 Button ☞ pg. 23, 47
- 10 ? Button ☞ pg. 32
- 11 PROG Button ☞ pg. 28
- 12 START +/- Button ☞ pg. 30
- 13 STOP +/- Button ☞ pg. 30
- 14 Rewind [REW] Button ☞ pg. 15, 17
- 15 Play Button ☞ pg. 15
- 16 Record Button ☞ pg. 22
- 17 Δ▽ Button ☞ pg. 6
- TV PROG +/- ☞ pg. 37
- 18 CABLE/SAT Button ☞ pg. 38, 74
- 19 STANDBY/ON ⏻/⏻ Button ☞ pg. 6
- 20 -- : -- Button ☞ pg. 23
- 21 TV/VCR Button ☞ pg. 23, 37
- 22 REVIEW Button ☞ pg. 19
- 23 30 SEC Button ☞ pg. 17
- 24 WEEKLY Button ☞ pg. 29, 31
- 25 F Button ☞ pg. 28
- 26 AUX Button ☞ pg. 40
- 27 ⌚ Button ☞ pg. 29, 31
- 28 /// (Auto Tracking) Button ☞ pg. 17
- SP/LP Button ☞ pg. 22
- 29 OK Button ☞ pg. 7
- 30 MENU Button ☞ pg. 10
- 31 TV PROG +/- Button ☞ pg. 22
- 32 DATE +/- Button ☞ pg. 30
- 33 Fast Forward [FF] Button ☞ pg. 15, 17
- 34 Stop Button ☞ pg. 15, 22
- 35 Pause Button ☞ pg. 16
- 36 ◀▶ Button ☞ pg. 16, 20
- TV ◀ +/- Button ☞ pg. 37

Buttons with a small dot on the left side of the name can also be used to operate your TV. (☞ pg. 37)

How To Use

The remote control can operate most of your video recorder's functions, as well as basic functions of TV sets and satellite tuners of JVC and other brands. (☞ pg. 37, 38)

- Point the remote control toward the sensor window.
- The maximum operating distance of the remote control is about 8 m.

NOTES:

- When inserting the batteries, be sure to insert in the correct directions as indicated under the battery cover.
- If the remote control doesn't work properly, remove its batteries, wait a short time, replace the batteries and then try again.

Remote Control LCD

The remote control can operate not only the video recorder but also some of your TV and satellite tuner's functions. The LCD indicates which of these (VIDEO, TV or CABLE/SAT) the remote control can currently operate. When you first purchase the remote control, or after you have just replaced the batteries, VIDEO A (A code) is selected.


- 1 To operate your video recorder, first press the **VCR** button to set the remote control to the Video mode (☞ pg. 36).


 A rectangular LCD display showing the text "VIDEO A" in a digital font. The "V" is slightly larger and positioned to the left of "IDEO".

- 2 To operate your TV, first press the **TV** button to set the remote control to the TV mode (☞ pg. 37).


 A rectangular LCD display showing the text "TV" in a digital font.

- 3 To operate your satellite tuner, first press the **CABLE/SAT** button to set the remote control to the Satellite tuner mode (☞ pg. 38).

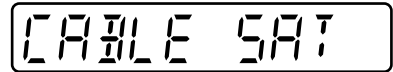
 A rectangular LCD display showing the text "CABLE SAT" in a digital font.

NOTES:

Even if "TV" is displayed on the LCD, the following operations can be performed without switching the mode.

- *Basic operations for the recorder*
After an operation is completed, "TV" reappears on the LCD.
- *Express Timer Programming and SHOWVIEW Timer Programming operations*
To perform a TV operation again, switch to TV mode first.
- *Accessing main menu*
To perform a TV operation again, switch to TV mode first.

GENERAL

| | |
|------------------------|--------------------------------------|
| Power requirement | : AC 220 – 240 V~, 50/60 Hz |
| Power consumption | |
| Power on | : 24 W |
| Power off | : 5.7 W |
| Temperature | |
| Operating | : 5°C to 40°C |
| Storage | : -20°C to 60°C |
| Operating position | : Horizontal only |
| Dimensions (WxHxD) | : 437 x 106 x 352 mm |
| Weight | : 5.1 kg |
| Format | : S-VHS/VHS PAL standard |
| Maximum recording time | |
| (SP) | : 240 min. with E-240 video cassette |
| (LP) | : 480 min. with E-240 video cassette |

VIDEO/AUDIO

| | |
|-----------------------|--|
| Signal system | : PAL-type colour signal and CCIR monochrome signal, 625 lines 50 fields |
| Recording system | : DA4 (Double Azimuth) head helical scan system |
| Signal-to-noise ratio | : 45 dB |
| Horizontal resolution | : 250 lines (VHS) 400 lines (S-VHS) |
| Frequency range | : 70 Hz to 10,000 Hz (Normal audio) 20 Hz to 20,000 Hz (Hi-Fi audio) |
| Input/Output | : 21-pin SCART connectors : IN/OUT x 1, IN/DECODER x 1 RCA connectors: VIDEO IN x 1, AUDIO IN x 1, AUDIO OUT x 1 S-Video connectors: IN x 1, OUT x 1 |

TUNER/TIMER

| | |
|-----------------------------|--|
| TV channel storage capacity | : 99 positions (+AUX position) |
| Tuning system | : Frequency synthesized tuner |
| Channel coverage | : VHF 47 – 89/104 – 300/ 302 – 470MHz UHF 470 – 862MHz |
| Aerial output | : UHF channels 22 – 69 (Adjustable) |
| Memory backup time | : Approx. 60 min. |

ACCESSORIES

| | |
|----------------------|---|
| Provided accessories | : RF cable, Infrared remote control unit, "R6" battery x 2 S-Video cable |
|----------------------|---|

Specifications shown are for SP mode unless otherwise specified.

E. & O.E. Design and specifications subject to change without notice.

Auto Set Up - referring to the display panel

The Auto Set Up function sets the tuner channels, clock and Guide Program numbers automatically.

BEFORE YOU START PLEASE MAKE SURE THAT:

- The TV aerial cable is connected to the ANT.IN jack on the rear panel of the video recorder.
- The video recorder's mains power cord is connected to a mains outlet.
- The video recorder is turned off.
- Load batteries into the remote control.

1 Press (recorder/remote).

SET 32

2 Press Δ / ∇ (remote) to select the international telephone country code.

(Ex.) DEUTSCHLAND is selected.

SET 49

International Telephone Country Code

| | | | |
|-----------------|------|----------------------|-------|
| BELGIUM | : 32 | NORGE | : 47 |
| ČESKÁ REPUBLIKA | : 42 | ÖSTERREICH | : 43 |
| DANMARK | : 45 | POLSKA | : 48 |
| DEUTSCHLAND | : 49 | PORTUGAL | : 351 |
| ESPAÑA | : 34 | SUISSE | : 41 |
| GREECE | : 30 | SUOMI | : 358 |
| ITALIA | : 39 | SVERIGE | : 46 |
| MAGYARORSZÁG | : 36 | OTHER WESTERN EUROPE | : - - |
| NEDERLAND | : 31 | OTHER EASTERN EUROPE | : EE |

- If you have selected a country code other than 32 (BELGIUM) or 41 (SUISSE), go to step 3.
- If you have selected 36 (MAGYARORSZAG), 42 (CESKA REPUBLIKA), 48 (POLSKA) or EE (OTHER EASTERN EUROPE), press **OK**. Clock Set screen will appear. Set the clock manually (pg. 64 – 65), then go to step 3.

- If you have selected 32 (BELGIUM) or 41 (SUISSE), press **OK** (remote) and select the language code by pressing Δ / ∇ (remote), then go to step 3.

(Ex.) FRANCAIS is selected for BELGIUM

32-03

International Telephone
Country Code

Language Code

Language Code

| | | | |
|------------|------|------------|------|
| ENGLISH | : 01 | NEDERLANDS | : 06 |
| DEUTSCH | : 02 | SVENSKA | : 07 |
| FRANCAIS | : 03 | NORSK | : 08 |
| ITALIANO | : 04 | SUOMI | : 09 |
| CASTELLANO | : 05 | DANSK | : 10 |

3 Press **OK** (remote). "Auto" appears on the display panel.

Auto

4 Press **OK** (remote) to start Auto Set Up. Do NOT press any button on the video recorder or remote control during "Auto" is blinking.

Auto

- If "--:--" appears on the display panel, see page 9 of the instructions.

* Once you have performed Auto Set Up, even if the recorder's memory backup has expired, the recorder will not perform Auto Set Up again. Perform tuner setting (pg. 56) and/or clock setting (pg. 64) as required.

FOR MORE INFORMATION
SEE INSTRUCTIONS/P6

JVC

VICTOR COMPANY OF JAPAN, LIMITED