 
 
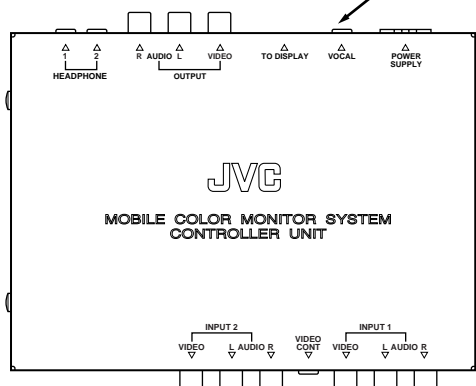 


Connect to the VOCAL terminal of the video CD unit of CH-X202V. For details, refer to the Instructions of CH-X202V.

連接到 CH-X202V 的雷射影碟機上的 VOCAL 端子。詳情請參閱 CH-X202V 的使用說明書。

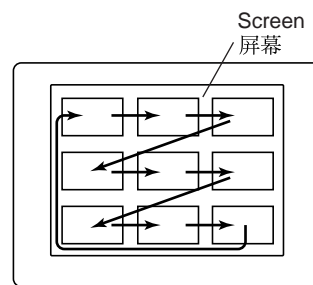

 
Control unit of KV-M700
KV-M700 的控制器

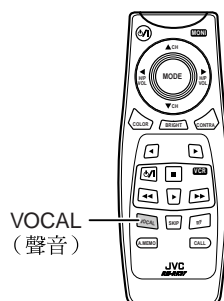

Digest play
簡介播放

Selecting output sound mode

If the source is a stereo recorded or multiplex karaoke disc, you can select the output sound mode. Each time you press the VOCAL button on the remote control repeatedly, the output sound mode changes as follows:

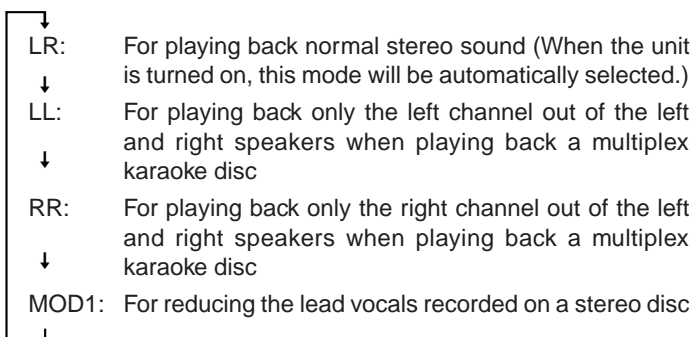


Notes:

- When MOD1 is selected, the lead vocals may not be completely reduced for discs with duets, strong echo, a chorus or only a few instruments.
- The lead vocals will be reduced but never be erased.

選擇輸出音聲模式

 如果音源是以立體聲錄制或為多聲道卡拉 OK 雷射唱片，您可選擇輸出音聲模式。每次反覆按遙控器上的 VOCAL 鍵時，輸出音聲模式呈現如下變換：

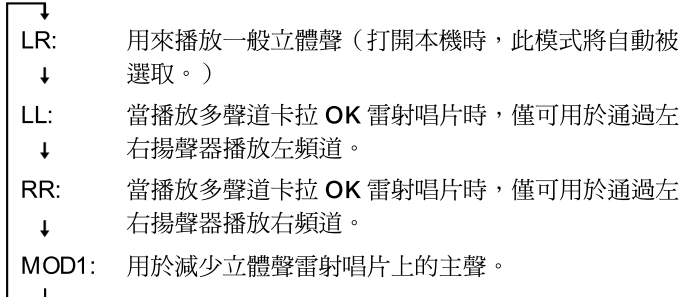


注意：

- 當選擇了 MOD1 時，二重奏、強勁回聲、合唱或幾種樂器之音源的主聲可能不會被減少。
- 主聲可能被減少但決不會被消除。

Enjoying Digest play

Using the Digest play, you can view still pictures picked up from a track every second in sequence. (The screen is divided into 9 portions to show the still pictures—see the above illustration.)

 Each time you press and hold the VOCAL button on the remote control for more than 1 second, the play mode changes as follows:




Note:

During the Digest play on some video CDs, images shown on the screen may be partially distorted. This is not a malfunction.

欣賞簡介播放

使用簡介播放，您可在每秒鐘順次觀賞到某個磁軌上的靜止畫面。（屏幕上所觀賞到的靜止畫面被平均劃分為 9 個片段—見上圖。）

 每次按住遙控器上的 VOCAL 鍵超過 1 秒鐘以上時，播放模式呈現如下變換：



注意：

在某些雷射影碟的簡介播放過程中，屏幕上的畫面可能會發生部分變形，此非故障。