

Dear Customer,
Thank you for purchasing
this JVC Video Cassette
Recorder.

QUICK START*

A GUIDE TO EASY SET UP AND USE

JVC

MONO/Hi-Fi/Mini DV/SUPER VHS VIDEO CASSETTE RECORDERS

* Please refer to the HR-DVSIU's instruction manual for more detailed information.

The Path To
Enjoyment
Starts Here.

1

CHECK PACKAGE CONTENTS

2

SITUATE AND CONNECT VCR

3

SET CLOCK AND TUNER

4


PLAY BACK A TAPE

5

RECORD A PROGRAM

1 MAKE SURE THAT YOUR PACKAGE CONTAINS:


VIDEO CASSETTE
RECORDER

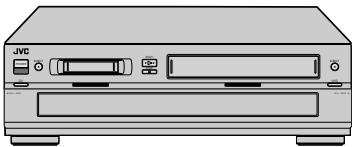

RF CABLE (F-TYPE)




CONTROLLER

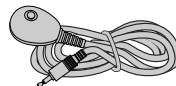


INFRARED
REMOTE
CONTROL
UNIT




"AA" BATTERY x 2

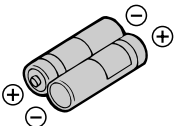

POWER
CORD

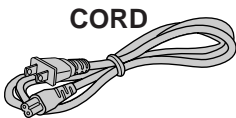


ANTENNA
SPLITTER

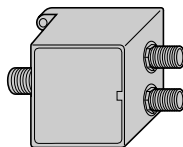

AUDIO/VIDEO
CABLE



S-VIDEO
CABLE

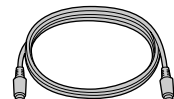

2 SITUATE AND CONNECT YOUR NEW VCR

a-BASIC ANTENNA/CABLE CONNECTION

- ① Place the VCR on a stable, horizontal surface.
- ② Disconnect your antenna or cable line from your TV.
- ③ Connect your antenna to your VCR.
- ④ Connect your VCR to your TV.
- ⑤ After completing the antenna connection, go to **2b** (AUDIO/VIDEO CONNECTIONS).

ANTENNA CONNECTION

COMBINED VHF/UHF

SEPARATE VHF/UHF


VHF ONLY

UHF ONLY

CABLE TV LINE


Back of VCR (example only)

Back of TV (example only)

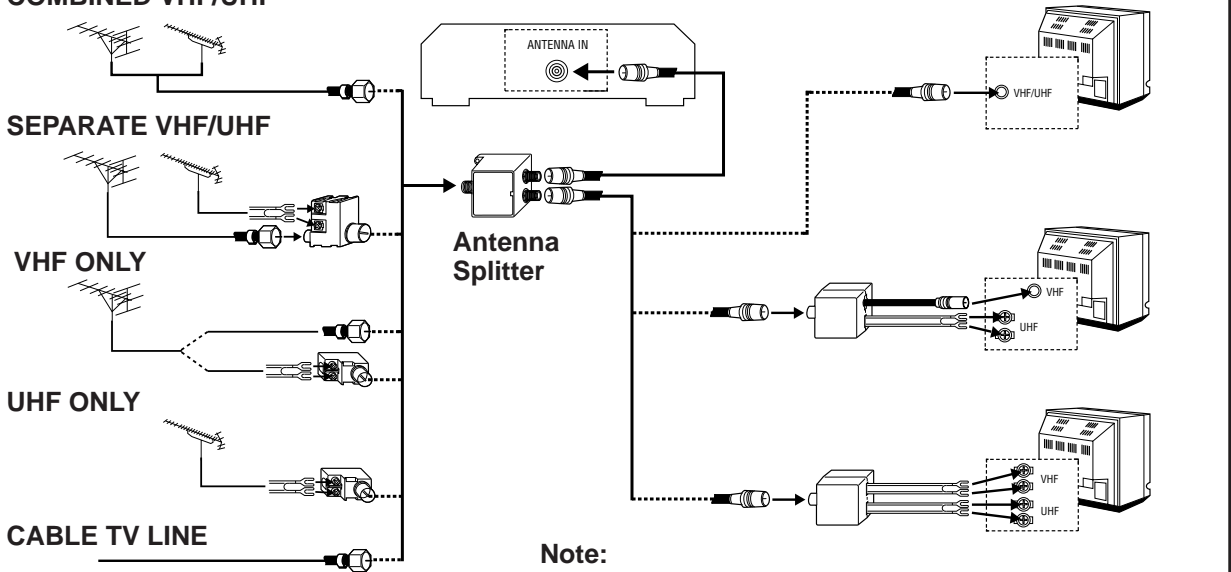


● CONNECTORS WHICH ARE OR MAY BE REQUIRED:


■ RF Cable

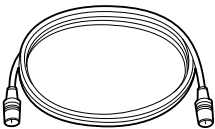


■ 300-75 ohm Matching Transformer

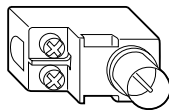


■ VHF/UHF Antenna Mixer

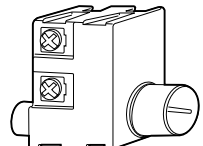


■ Antenna Splitter

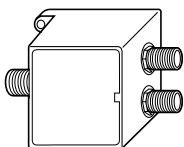

■ Antenna Splitter

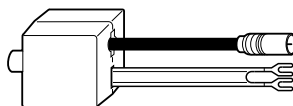

■ Antenna Splitter

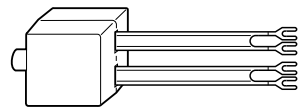

b-AUDIO/VIDEO CONNECTIONS


AV connection methods differ from one type of VCR to another. First, for any TV and VCR type, connect your VCR to your TV using antenna cables. Then make AV connections following one of the methods pictured to the right.

After making the connections, go to 3 (PLUG & PLAY).


- If you're using a Cable Box, go to 2c (CATV CONVERTER CONNECTION).

For the component video connection, refer to page 7 of the HR-DVS1U's instruction manual.


Hi-Fi VHS VCR → AV STEREO TV

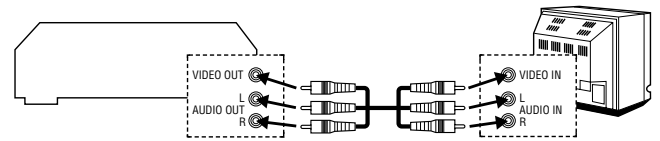


MONAURAL VHS VCR → AV TV

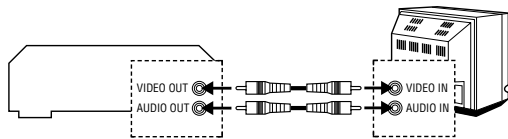


SUPER VHS VCR → AV STEREO TV WITH S-VIDEO INPUT TERMINALS

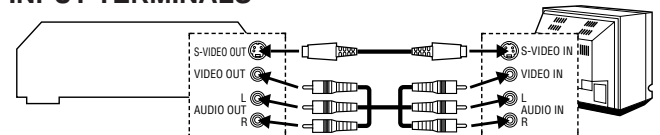

To Listen To VCR Sound Through A Component Stereo Audio System, Connect As Shown

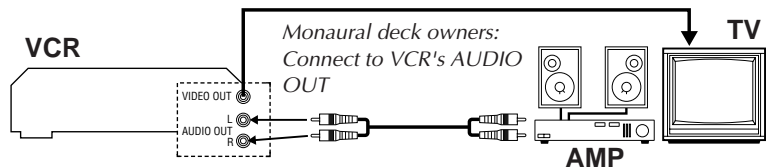


c-CATV CONVERTER CONNECTION

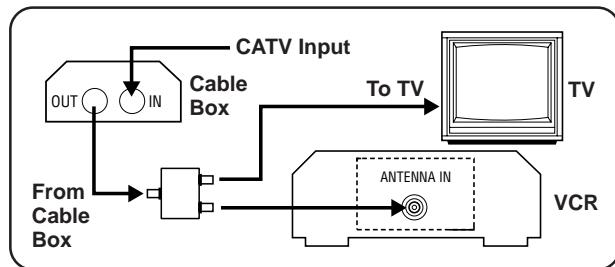

With this connection you can view/record any cable channel including scrambled channels to which you have subscribed.

To watch TV with this type of connection

- ① Tune TV to Cable Box output channel.
- ② Tune VCR to Cable Box output channel.
- ③ Select desired channel on Cable Box.
 - You can only view the channel you're recording.
 - You cannot change channels with the VCR remote control.

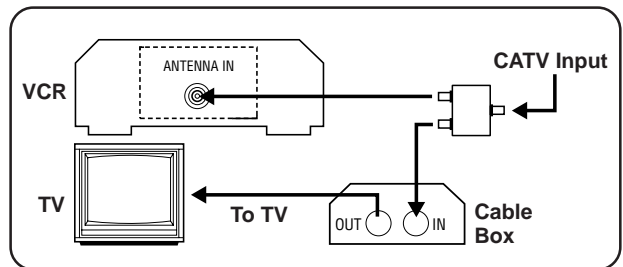

With this connection, you can view one scrambled cable channel while recording another unscrambled channel.

To watch TV with this type of connection

- ① Press **CH** or **NUMBER** keys to select desired channel for recording.
- ② Tune TV to Cable Box output channel.
- ③ Select desired channel on Cable Box.
 - You cannot record scrambled channels.


3 SET YOUR VCR'S CLOCK AND TUNER

PLUG & PLAY

The VCR's clock and tuner channels are set automatically when the VCR is plugged into the AC outlet.


If you use a cable box, Plug & Play will not function; set the clock and tuner channels manually. (☞ pg.10 – 14 of the HR-DVS1U's instruction manual)

1

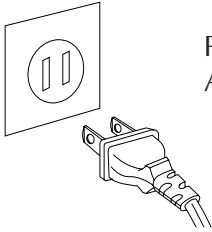


Plug the VCR into the AC outlet.

2

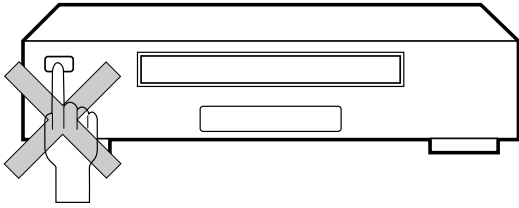


Don't press any buttons on the VCR or remote during auto setup.

3

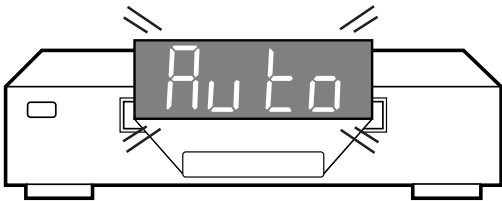


"AUTO" blinks while the VCR automatically sets the clock using information provided by the local PBS channel.

4

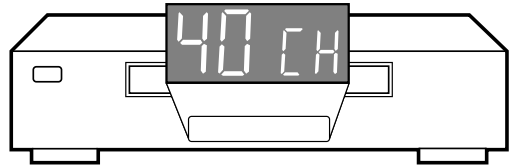

During auto channel setting, the channel numbers are displayed as they are scanned and set. Receivable channels are automatically assigned to CH buttons, and non-receivable channels are skipped.

5

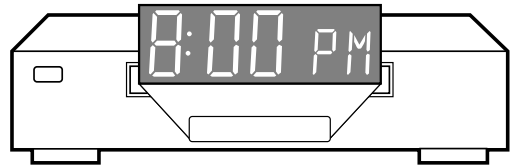

When setting is complete, the VCR displays the current time. You can now use your VCR.

NOTES:

- If the time displayed in **5** is incorrect, perform the Semi-Auto or Manual Clock Set procedure (refer to page 11 or 12 of the HR-DVS1U's instruction manual). Auto channel set has already taken place, and is not affected.
- There are some PBS channels that do not transmit clock setting data. If your antenna cable is properly connected and "-- : --" is displayed, perform the Manual Clock Set procedure (refer to page 12 of the HR-DVS1U's instruction manual). Auto channel setting has not yet taken place, so please also perform the "Set Receivable Channels" procedure (refer to page 13 of the HR-DVS1U's instruction manual).

4 WATCH A RECORDED PROGRAM

* You can use the available buttons on the remote control or on the VCR.

- ① Load a cassette with the label facing out and the window facing up.
- ② Press **VHS** or **DV** to select the deck.
- ③ Press **REW** or **FF** to find program start point.
- ④ Press **PLAY** to start playback.
- ⑤ Press **STOP**, then press **EJECT** to remove the cassette.

5 RECORD A PROGRAM

a-BASIC RECORDING

* You can use the available buttons on the remote control or on the VCR.

- ① Load a cassette as above.
- ② Press **VHS** or **DV** to select the deck.
- ③ Press **CH**, or press the appropriate **NUMBER** keys (remote) and press **ENTER** (remote), to select the recording channel.
- ④ Press **SP/EP** (remote) to set the recording speed.
- ⑤ Press **REC** and **PLAY** together (remote) or **REC** (VCR) to start recording.
- ⑥ Press **PAUSE** to stop recording temporarily, and press **PLAY** to resume.
- ⑦ Press **STOP**, then press **EJECT** to remove the cassette.

b-INSTANT TIMER RECORDING

* You cannot perform ITR using the remote control.

- ① Press **REC** to start recording.
- ② Press **REC** to engage ITR. "0:30" appears in the VCR display.
- ③ To extend duration in increments of 30 minutes, press **REC** as many times as necessary.



