


## Locations


### Locations of remote control buttons

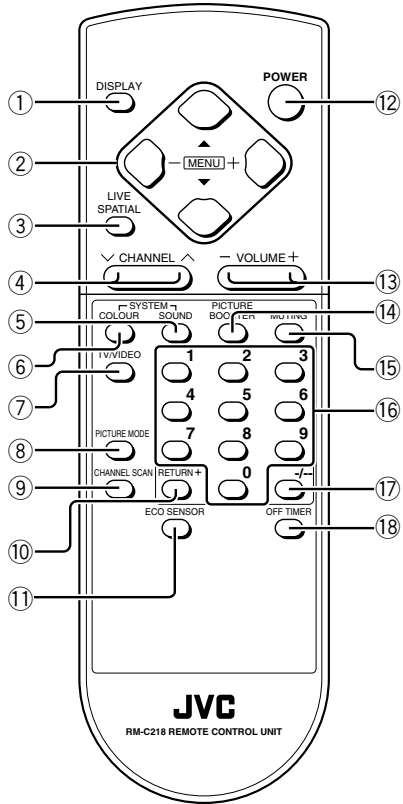

- |                          |           |
|--------------------------|-----------|
| ① DISPLAY button         | p.17      |
| ② MENU buttons           |           |
| • MENU ▲/▼ buttons       |           |
| • MENU -/+ buttons       |           |
| ③ LIVE SPATIAL button    | p.15      |
| ④ CHANNEL V//^ buttons   | p.11      |
| ⑤ SOUND SYSTEM button    | p.14      |
| ⑥ COLOUR SYSTEM button   | p.14      |
| ⑦ TV/VIDEO button        | p.13      |
| ⑧ PICTURE MODE button    | p.14      |
| ⑨ CHANNEL SCAN button    | p.18      |
| ⑩ RETURN + button        | p.18      |
| ⑪ ECO SENSOR button      | p.17      |
| ⑫ POWER button           | p.6,11,12 |
| ⑬ VOLUME -/+ buttons     | p.12      |
| ⑭ PICTURE BOOSTER button | p.15      |
| ⑮ MUTING button          | p.15      |
| ⑯ Number buttons         | p.11      |
| ⑰ -/-- button            | p.11      |
| ⑱ OFF TIMER button       | p.17      |

## Locations

### Locations of front panel buttons and lamps

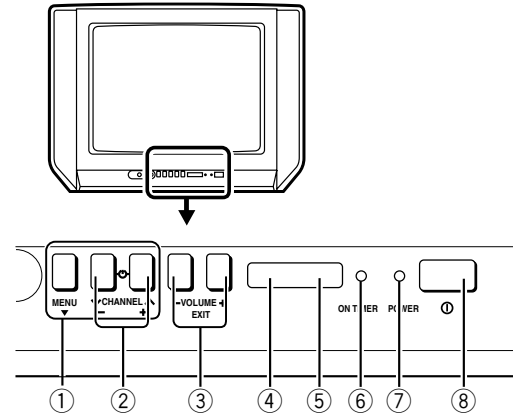

- |                        |      |                         |        |
|------------------------|------|-------------------------|--------|
| ① MENU buttons         | p.22 | ④ ECO sensor            |        |
| • MENU button          |      | ⑤ Remote control sensor |        |
| • MENU -/+ buttons     |      | ⑥ ON TIMER lamp         | p.19   |
| ② CHANNEL V//^ buttons | p.12 | ⑦ POWER lamp            | p.6,12 |
| ③ VOLUME -/+ buttons   | p.12 | ⑧ Main power button     | p.6,12 |