


## Locations


### Locations of remote control buttons

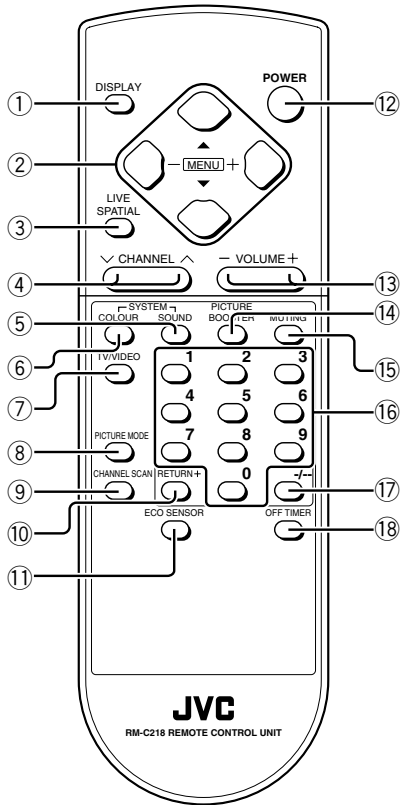

- |   |                        |           |
|---|------------------------|-----------|
| ① | DISPLAY button         | p.18      |
| ② | MENU buttons           |           |
|   | • MENU ▲/▼ buttons     |           |
|   | • MENU -/+ buttons     |           |
| ③ | LIVE SPATIAL button    | p.16      |
| ④ | CHANNEL ∇/▲ buttons    | p.12      |
| ⑤ | SOUND SYSTEM button    | p.15      |
| ⑥ | COLOUR SYSTEM button   | p.15      |
| ⑦ | TV/VIDEO button        | p.14      |
| ⑧ | PICTURE MODE button    | p.15      |
| ⑨ | CHANNEL SCAN button    | p.19      |
| ⑩ | RETURN + button        | p.20      |
| ⑪ | ECO SENSOR button      | p.19      |
| ⑫ | POWER button           | p.6,12,13 |
| ⑬ | VOLUME -/+ buttons     | p.13      |
| ⑭ | PICTURE BOOSTER button | p.17      |
| ⑮ | MUTING button          | p.16      |
| ⑯ | Number buttons         | p.12      |
| ⑰ | -/- button             | p.12      |
| ⑱ | OFF TIMER button       | p.18      |

## Locations

### Locations of front panel buttons and lamps

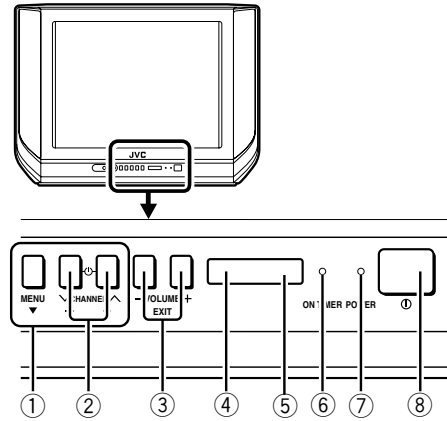

- |   |                       |        |
|---|-----------------------|--------|
| ① | MENU buttons          | p.24   |
|   | • MENU button         |        |
|   | • MENU -/+ buttons    |        |
| ② | CHANNEL ∇/▲ buttons   | p.13   |
| ③ | VOLUME -/+ buttons    | p.13   |
| ④ | ECO sensor            |        |
| ⑤ | Remote control sensor |        |
| ⑥ | ON TIMER lamp         | p.21   |
| ⑦ | POWER lamp            | p.6,13 |
| ⑧ | Main power button     | p.6,13 |