


Locations

Locations of remote control buttons

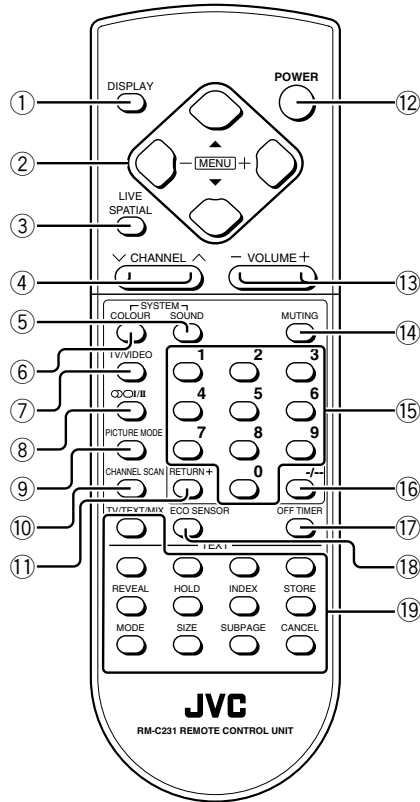


① DISPLAY button	p.20
② MENU buttons	
• MENU ▲/▼ buttons	
• MENU -/+ buttons	
③ LIVE SPATIAL button	p.18
④ CHANNEL ∇/∧ buttons	p.13
⑤ SOUND SYSTEM button	p.17
⑥ COLOUR SYSTEM button	p.17
⑦ TV/VIDEO button	p.15
⑧ Multi Sound button	p.17
(AV-21PS only)	
⑨ PICTURE MODE button	p.17
⑩ CHANNEL SCAN button	p.14
⑪ RETURN + button	p.21
⑫ POWER button	p.6,13,14
⑬ VOLUME -/+ buttons	p.14
⑭ MUTING button	p.14
⑮ Number buttons	p.13
⑯ -/-- button	p.13
⑰ OFF TIMER button	p.20
⑱ ECO SENSOR button	p.20
⑲ Teletext buttons	p.26
(AV-21PS only)	


No. 56039

Locations

Locations of front panel buttons and lamps

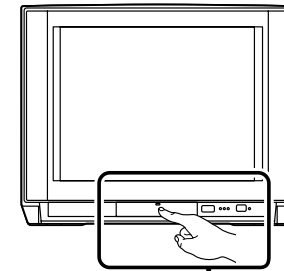

(behind the door)

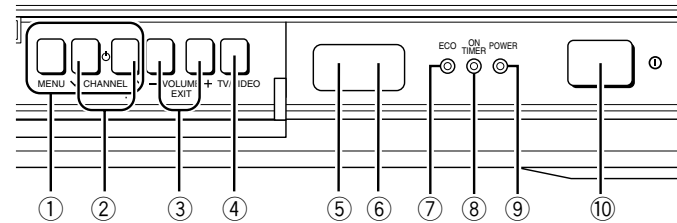

① MENU buttons	p.25
• MENU button	
• MENU -/+ buttons	
② CHANNEL ∇/∧ buttons	p.15
③ VOLUME -/+ buttons	p.15
④ TV/VIDEO button	p.15

⑤ ECO sensor	
⑥ Remote control sensor	
⑦ ECO lamp	p.20
⑧ ON TIMER lamp	p.22
⑨ POWER lamp	p.6,13,14
⑩ Main power button	p.6,15