


## Locations

### Locations of remote control buttons

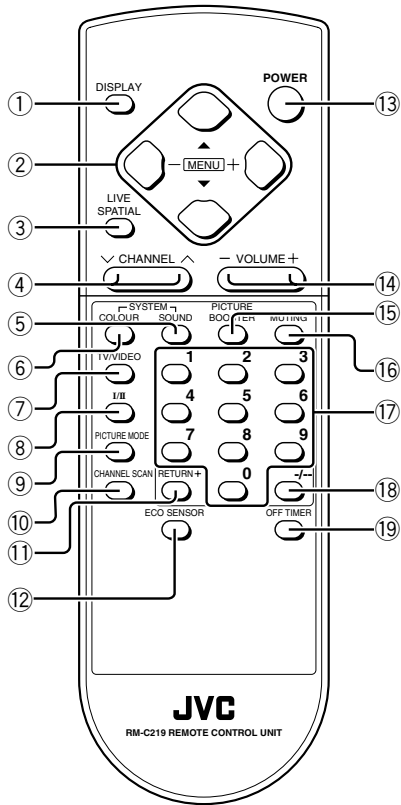


①	DISPLAY button	p.19
②	MENU buttons	
	• MENU ▲/▼ buttons	
	• MENU -/+ buttons	
③	LIVE SPATIAL button	p.16
④	CHANNEL ∇/∧ buttons	p.12
⑤	SOUND SYSTEM button	p.15
⑥	COLOUR SYSTEM button	p.15
⑦	TV/VIDEO button	p.14
⑧	A2 Bilingual button	p.17
⑨	PICTURE MODE button	p.15
⑩	CHANNEL SCAN button	p.20
⑪	RETURN + button	p.20
⑫	ECO SENSOR button	p.19
⑬	POWER button	p.6,12,13
⑭	VOLUME -/+ buttons	p.13
⑮	PICTURE BOOSTER button	p.17
⑯	MUTING button	p.16
⑰	Number buttons	p.12
⑱	-/-- button	p.12
⑲	OFF TIMER button	p.19

No. 56030

## Locations

### Locations of front panel buttons and lamps

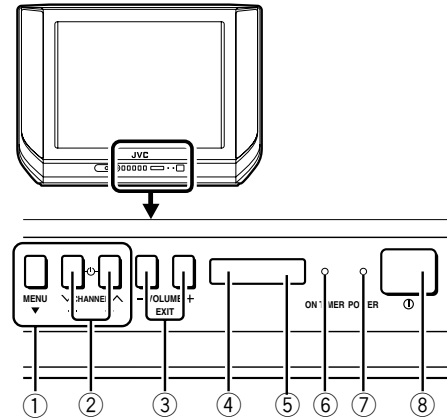

①	MENU buttons	p.24
	• MENU button	
	• MENU -/+ buttons	
②	CHANNEL ∇/∧ buttons	p.13
③	VOLUME -/+ buttons	p.13
④	ECO sensor	
⑤	Remote control sensor	
⑥	ON TIMER lamp	p.21
⑦	POWER lamp	p.6,13
⑧	Main power button	p.6,13