


## Locations

### Locations of remote control buttons

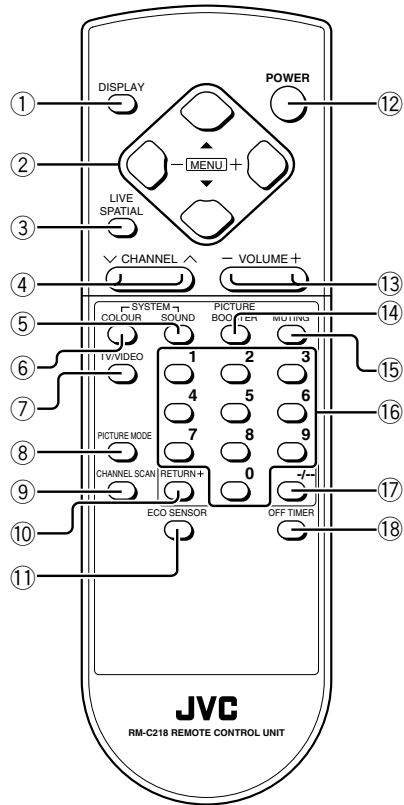


①	DISPLAY button	p.18
②	MENU buttons	
	• MENU ▲/▼ buttons	
	• MENU -/+ buttons	
③	LIVE SPATIAL button	p.16
④	CHANNEL ∇/∧ buttons	p.12
⑤	SOUND SYSTEM button	p.15
⑥	COLOUR SYSTEM button	p.15
⑦	TV/VIDEO button	p.14
⑧	PICTURE MODE button	p.15
⑨	CHANNEL SCAN button	p.19
⑩	RETURN + button	p.20
⑪	ECO SENSOR button	p.19
⑫	POWER button	p.6,12,13
⑬	VOLUME -/+ buttons	p.13
⑭	PICTURE BOOSTER button	p.17
⑮	MUTING button	p.16
⑯	Number buttons	p.12
⑰	-/-- button	p.12
⑱	OFF TIMER button	p.18

No. 56031

## Locations

### Locations of front panel buttons and lamps

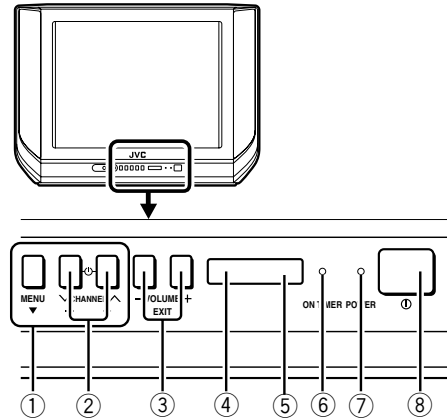

①	MENU buttons	p.24
	• MENU button	
	• MENU -/+ buttons	
②	CHANNEL ∇/∧ buttons	p.13
③	VOLUME -/+ buttons	p.13

④	ECO sensor	
⑤	Remote control sensor	
⑥	ON TIMER lamp	p.21
⑦	POWER lamp	p.6,13
⑧	Main power button	p.6,13