


Locations

Locations of remote control buttons

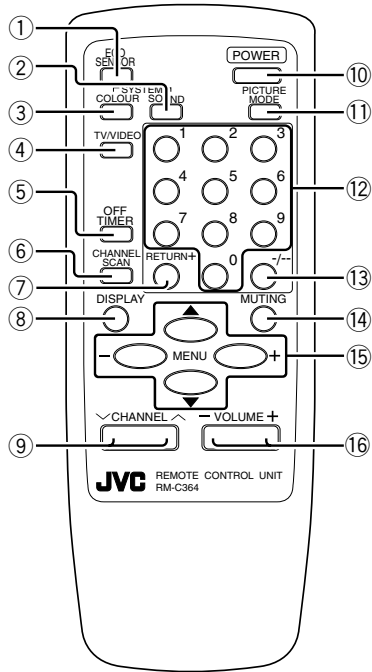


①	ECO SENSOR button	p.17
②	SOUND SYSTEM button	p.15
③	COLOUR SYSTEM button	p.15
④	TV/VIDEO button	p.14
⑤	OFF TIMER button	p.17
⑥	CHANNEL SCAN button	p.18
⑦	RETURN + button	p.18
⑧	DISPLAY button	p.17
⑨	CHANNEL ∇/∧ buttons	p.12
⑩	POWER button	p.6,12,13
⑪	PICTURE MODE button	p.15
⑫	Number buttons	p.12
⑬	-/+ button	p.12
⑭	MUTING button	p.16
⑮	MENU buttons	
	• MENU ▲/▼ buttons	
	• MENU +/- buttons	
⑯	VOLUME +/- buttons	p.13


No. 56055

Locations

Locations of front panel buttons and lamps

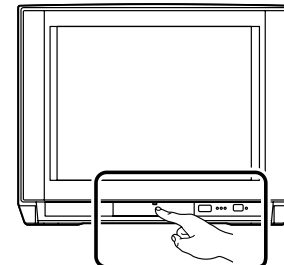

(How to open the door)

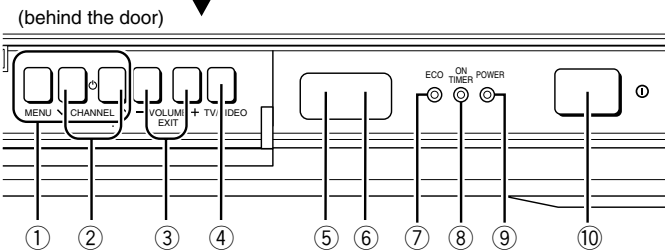

①	MENU buttons	p.22
	• MENU button	
	• MENU +/- buttons	
②	CHANNEL ∇/∧ buttons	p.13
③	VOLUME +/- buttons	p.13
④	TV/VIDEO button	p.13

⑤	ECO sensor	
⑥	Remote control sensor	
⑦	ECO lamp	p.17
⑧	ON TIMER lamp	p.19
⑨	POWER lamp	p.6,13
⑩	Main power button	p.6,13