


Locations

Locations of remote control buttons

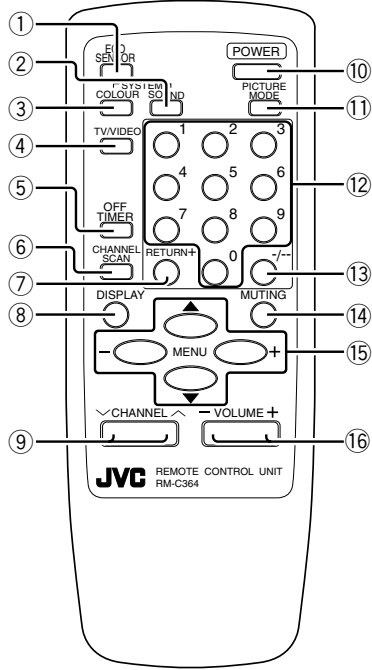



①	ECO SENSOR button (AV-14FT only)	p.17
②	SOUND SYSTEM button	p.15
③	COLOUR SYSTEM button	p.15
④	TV/VIDEO button	p.14
⑤	OFF TIMER button	p.17
⑥	CHANNEL SCAN button	p.18
⑦	RETURN + button	p.18
⑧	DISPLAY button	p.17
⑨	CHANNEL ∇/\wedge buttons	p.12
⑩	POWER button	p.6,12,13
⑪	PICTURE MODE button	p.15
⑫	Number buttons	p.12
⑬	-/-- button	p.12
⑭	MUTING button	p.16
⑮	MENU buttons	
	• MENU $\blacktriangle/\blacktriangledown$ buttons	
	• MENU $-/+$ buttons	
⑯	VOLUME $-/+$ buttons	p.13

No. 56085



Locations

Locations of front panel buttons and lamps

<AV-14FT>

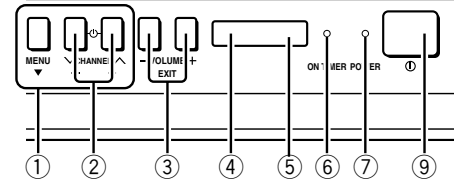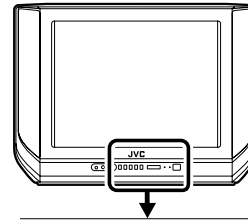

<AV-14AT>

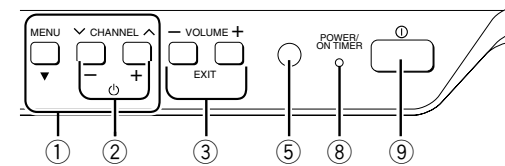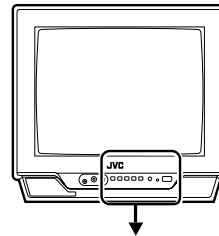

①	MENU buttons	p.22
	• MENU button	
	• MENU $-/+$ buttons	
②	CHANNEL ∇/\wedge buttons	p.13
③	VOLUME $-/+$ buttons	p.13
④	ECO sensor	

⑤	Remote control sensor	
⑥	ON TIMER lamp	p.19
⑦	POWER lamp	p.6,13
⑧	POWER / ON TIMER lamp	p.6,13,19
⑨	Main power button	p.6,13