


Locations


Locations of remote control buttons

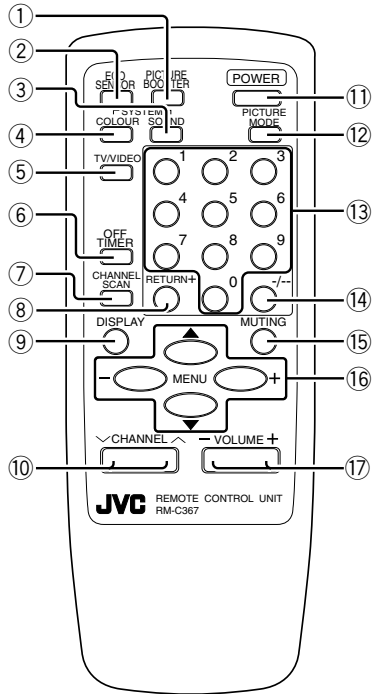

- | | | |
|---|--|-----------|
| ① | PICTURE BOOSTER button | p.16 |
| ② | ECO SENSOR button | p.17 |
| ③ | SOUND SYSTEM button | p.15 |
| ④ | COLOUR SYSTEM button | p.15 |
| ⑤ | TV/VIDEO button | p.14 |
| ⑥ | OFF TIMER button | p.17 |
| ⑦ | CHANNEL SCAN button | p.18 |
| ⑧ | RETURN + button | p.18 |
| ⑨ | DISPLAY button | p.17 |
| ⑩ | CHANNEL ∇/\wedge buttons | p.12 |
| ⑪ | POWER button | p.6,12,13 |
| ⑫ | PICTURE MODE button | p.15 |
| ⑬ | Number buttons | p.12 |
| ⑭ | $-/--$ button | p.12 |
| ⑮ | MUTING button | p.16 |
| ⑯ | MENU buttons | |
| | • MENU $\blacktriangle/\blacktriangledown$ buttons | |
| | • MENU $-/+$ buttons | |
| ⑰ | VOLUME $-/+$ buttons | p.13 |

Locations

Locations of front panel buttons and lamps

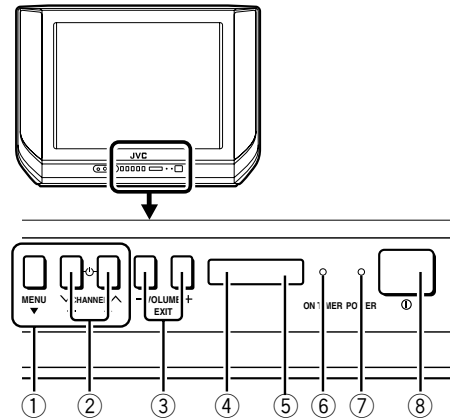

- | | | |
|---|---------------------------------|--------|
| ① | MENU buttons | p.22 |
| | • MENU button | |
| | • MENU $-/+$ buttons | |
| ② | CHANNEL ∇/\wedge buttons | p.13 |
| ③ | VOLUME $-/+$ buttons | p.13 |
| ④ | ECO sensor | |
| ⑤ | Remote control sensor | |
| ⑥ | ON TIMER lamp | p.19 |
| ⑦ | POWER lamp | p.6,13 |
| ⑧ | Main power button | p.6,13 |