

# JVC



DVD/CD PLAYER

KV-DV7

ENGLISH

REPRODUCTOR DVD/CD

KV-DV7

ESPAÑOL

LECTEUR DVD/CD

KV-DV7

FRANÇAIS



For installation and connections, refer to the separate manual.  
Para la instalación y las conexiones, refiérase al manual separado.  
Pour l'installation et les raccordements, se référer au manuel séparé.

## INSTRUCTIONS

MANUAL DE INSTRUCCIONES  
MANUEL D'INSTRUCTIONS

### For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## INFORMATION (For U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## IMPORTANT FOR LASER PRODUCTS

### Precautions:

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This DVD/CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading discs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION: DO NOT insert a disc while the disc loading lamp is flashing or is not lit. (See page 6.)**

## WARNINGS

- **DO NOT** install any unit in locations where;
  - it may obstruct the steering wheel and gearshift lever operations, as this may result in a traffic accident.
  - it may obstruct the operation of safety devices such as air bags, as this may result in a fatal accident.
  - it may obstruct visibility.
- **DO NOT** operate any unit while manipulating the steering wheel, as this may result in a traffic accident.
- **The driver must not watch the monitor while driving.**  
If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.
- **DO NOT** use the headphones while driving. It is dangerous to shut off the outside sounds while driving.
- If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.


## How to reset your unit

Press the reset button on the front panel using a ball-point pen or a similar tool. This will reset the built-in microcomputer.

### NOTE:

If you reset the unit during play, the playback mode selections (e.g. repeat play mode setting), you have selected for the current disc will be reset to the initial settings.

- During DVD playback, the disc menu selection will be also reset to the initial disc settings.

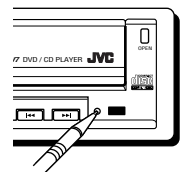

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

# CONTENTS

How to reset your unit .....	2	<b>SPECIAL EFFECTS PLAYBACK .....</b>	<b>18</b>
<b>INTRODUCTION .....</b>	<b>4</b>	• Slow-Motion Playback .....	18
<b>PREPARATION .....</b>	<b>5</b>	• Frame-by-frame Playback .....	18
Installing the battery .....	5	• Zoom .....	19
<b>BASIC PLAYBACK .....</b>	<b>6</b>	<b>DVD SETUP MENU .....</b>	<b>20</b>
Starting playback .....	6	Setting initial audio language .....	20
• Listening with headphones .....	7	Setting initial subtitle language .....	21
Showing the on-screen bar .....	8	Setting initial disc menu language .....	22
• Checking the playing time .....	9	Setting digital audio output .....	22
<b>DVD PLAYBACK .....</b>	<b>10</b>	Setting compression .....	23
Selecting subtitles .....	10	Setting audio output during	
Selecting audio languages .....	11	Low Speed Search .....	24
Selecting multi-angle views .....	11	Setting monitor type .....	25
<b>MENU-DRIVEN PLAYBACK .....</b>	<b>12</b>	Setting closed caption .....	26
Menu operations .....	12	Changing the color of the on-screen bar ..	26
• While playing a DVD .....	12	Setting zoom preference .....	27
• While playing a VCD .....	13	<b>MAINTENANCE .....</b>	<b>29</b>
<b>SEARCH FUNCTIONS .....</b>	<b>14</b>	Handling discs .....	29
Searching for a particular point .....	14	<b>LANGUAGE CODES .....</b>	<b>30</b>
• Forward Search .....	14	<b>GLOSSARY .....</b>	<b>31</b>
• Reverse Search .....	14	<b>LOCATION OF THE BUTTONS .....</b>	<b>32</b>
Locating a particular point directly .....	15	• Remote controller .....	32
<b>REPEAT PLAYBACK .....</b>	<b>16</b>	• Control panel .....	33
Playing repeatedly .....	16	<b>TROUBLESHOOTING .....</b>	<b>34</b>
• Repeat Play .....	16	<b>SPECIFICATIONS .....</b>	<b>35</b>
• A-B Repeat .....	17		

## **CAUTION on Volume Setting**

*Discs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a disc and adjust it as required during playback.*

## **BEFORE USE**

### **\* For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

### **\* Temperature inside the car...**

*If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.*



# INTRODUCTION

ENGLISH

## About this manual

This manual mainly explains operations using the buttons on the remote control. You can also use the buttons on the control panel for the same operations if they have the similar or same marks.

**Discs you can play:**

Disc Type	Mark (Logo)	Video Format	Region Code Number*
DVD Video		NTSC	1 ALL
Video CD	 Video CD		_____
Audio CD		_____	_____

- On some discs, their actual operations may be different from what is explained in this manual.
- The following discs cannot be played back;
  - DVD-Audio, DVD-ROM, DVD-RAM, DVD-R, DVD-RW, CD-ROM, CD-R, CD-RW, CD-I (CD-I Ready), Photo CD, etc.
 Playing back these discs will generate noise and damage the speakers.

**\* Note on Region Code**

DVD players and DVD Video discs have their own Region Code numbers. This unit only can play back DVD discs whose Region Code numbers include "1."

Examples:



## Disc structure – DVD, Video CD (VCD) and Audio CD (CD)

A DVD disc consists of **Titles**, and each title may be divided into some **Chapters**. (See Example 1.) For example, if a DVD disc contains some movies, each movie may have its own title number, and it may be further divided into some chapters.

On the other hand, a VCD or CD consists of **Tracks**. (See Example 2.)

In general, each song has its own track number. (On some discs, each track may also be divided by **Indexes**.)


When playing back a VCD with Playback Control (PBC) function, you can select what to view using the menu shown on the monitor. (While operating a Video CD using the menu, some of the functions such as Repeat and Track Search may not work.)

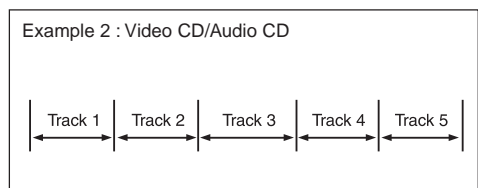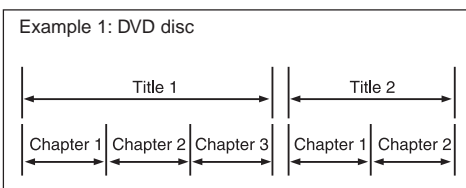



Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- The remote signal reception lamp flashes when the unit receives a remote control signal from the remote controller.

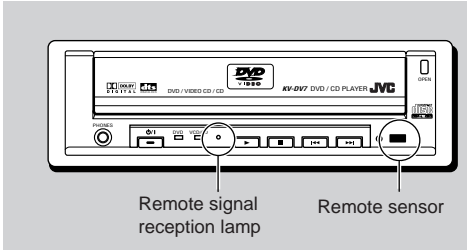

- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

**WARNING:**


- Store the batteries in a place which children cannot reach.  
If a child accidentally swallows the batteries, immediately consult a doctor.
- Do not recharge, short, disassemble or heat the batteries or dispose of in a fire.  
Doing any of these things may cause the batteries to give off heat, crack or start a fire.
- Do not leave the batteries with other metallic materials.  
Doing this may cause the batteries to give off heat, crack or start a fire.
- When throwing away or saving batteries, wrap in tape and insulate; otherwise, it may cause the batteries to give off heat, crack or start a fire.
- Do not poke the batteries with tweezers or similar tools.  
Doing this may cause the batteries to give off heat, crack or start a fire.

## Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.


### 1. Remove the battery holder.

- 1) Push out the battery holder in the direction indicated by the arrow using a ball-point pen or a similar tool.
- 2) Remove the battery holder.

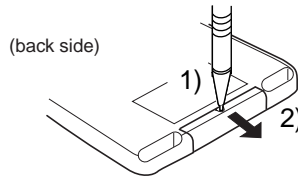


### 2. Place the battery.

Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

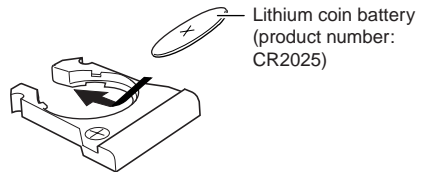

### 3. Return the battery holder.

Insert again the battery holder pushing it until you hear a clicking sound.

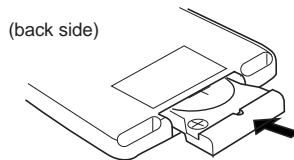



# BASIC PLAYBACK

The following marks used in this manual indicate the discs to be used.



## Starting playback




**1** Press **POWER** to turn on the power.

**POWER**



The lamps on the buttons on the unit light up.

**2** Press **OPEN** on the unit. The loading slot cover opens.

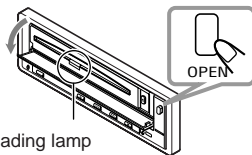


Disc loading lamp

DO NOT force the cover open by hand.

**3** Insert a disc into the loading slot.

The unit draws in the disc automatically.

- When the power is off, you cannot insert a disc.

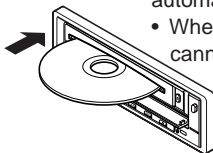



DO NOT insert a disc while the disc loading lamp is flashing\* or is not lit\*\*.

- \* Flashing: while loading or ejecting a disc
- \*\* Not lit: when a disc has been loaded.

**4** Close the slot cover by hand.


The disc type is automatically detected and the detected disc lamp (DVD, VCD/CD) lights up, and playback starts automatically.

 - It takes a while to detect the disc type.

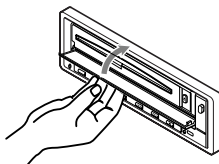

Disc lamps

If a menu appears while playing a DVD or VCD with PBC function, see "MENU-DRIVEN PLAYBACK" on page 12.

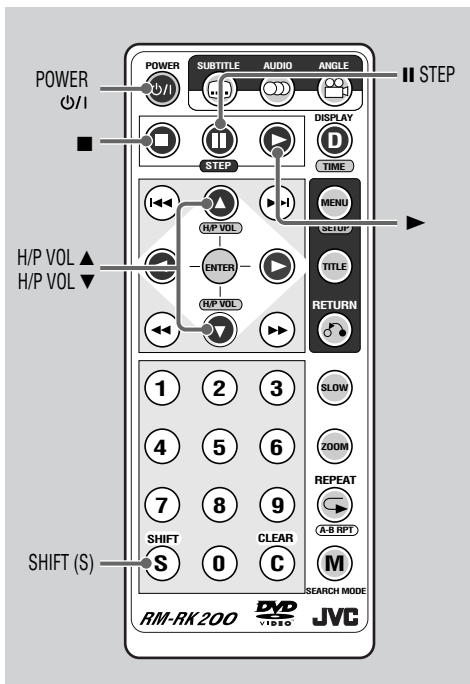

Before performing any operations, make sure the following....

- Check the connection with the TV and with the car receiver.
- Turn on the TV and the receiver.
- Select this unit (auxiliary or external input) as the playback source on the receiver.
- Select the correct input where this unit is connected.
- For DVD playback, you can change the Setup Menu setting to your preference. (See pages 20 – 28.)

If " " appears on the screen when pressing a button, the disc cannot accept an operation you have tried to do.



## To stop playback temporarily

Press **II** (STEP). A still picture appears while playing a DVD or VCD.

- You can advance the still picture frame by frame by pressing the button repeatedly. (See page 18.)

To resume playback, press **▶**.

## To stop playback

Press **■**.

If you are playing back a DVD or VCD, this unit can memorize the end point ("■" appears for a while on the screen), and when you start playback again, playback begins from where it has been stopped. (Resume play)



## To eject a disc

- 1 Press **OPEN** on the unit to open the slot cover.
- 2 Press **▲** on the unit (inside the slot cover). The disc automatically comes out of the loading slot.

## To locate a particular chapter or track

You can move to another chapter or track while playing a disc.

- Press **▶▶** to go ahead to the beginning of the next track.  
Each time you press the button consecutively, the beginning of the next tracks is located and played back.
- Press **◀◀** to go back to the beginning of the current track.  
Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

*If you press and hold the button, you can fast-forward (by holding **▶▶**) or fast-reverse the play (by holding **◀◀**).*

## Listening with headphones

- 1 Connect the headphones to the PHONES jack on the unit.
- 2 While holding **SHIFT (S)**, then press **H/P VOL ▲** or **H/P VOL ▼** to adjust the headphones volume.

DO NOT use the headphones while driving. It is dangerous to shut off the outside sounds while driving.

## About sounds reproduced through the rear terminals

### • Through AUDIO (L/R):

Analog stereo signals are output.

When playing a source encoded with Dolby Digital\* (**Dolby DIGITAL**), multichannel signals are mixed to the left and right front channel signals, then output.

– You cannot reproduce the sound encoded with DTS Digital Surround\*\* (**DTS DIGITAL SURROUND**).


### • Through DIGITAL OUT:

Digital signals (Linear PCM, Dolby Digital, DTS Digital Surround) are output through this terminal. (For more details, see page 35.)

To reproduce the multichannel sounds such as Dolby Digital and DTS Digital Surround, connect an amplifier or a decoder compatible with these multichannel sources to this terminal, and set "DIGITAL OUT" correctly. (See page 22.)

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992–1997 Dolby Laboratories. All rights reserved.

\*\* Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. "DTS" is a registered trademark of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

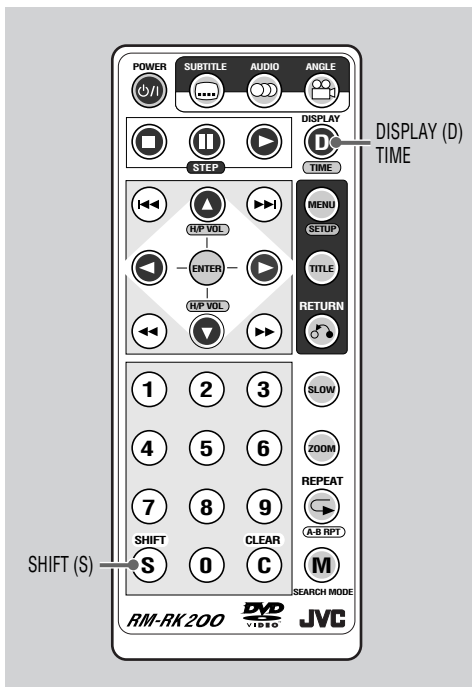

**When a VCD or CD is loaded:**

On-screen bar goes off.

\* This appears only while a VCD is loaded.

**About the indications on the on-screen bar**

Indications shown on the on-screen bar vary depending on the disc type and the signals recorded on the loaded disc.

**Showing the on-screen bar**



You can show the following information on the screen while a disc is loaded.

To show the disc information, press **DISPLAY (D)/TIME**.



Each time you press the button, the following on-screen bar appears in sequence.

**When a DVD is loaded:**

On-screen bar goes off.

**When a DVD is loaded**

- ① : Current title and the total number of the titles on the disc.  
(Ex.: 1st title is playing out of 3 titles recorded.)
- ② : Current chapter and the total number of the chapters recorded on the disc.  
(Ex.: 1st chapter is playing out of 25 chapters recorded.)
- ③ : Playing time or the remaining time.  
(Ex.: Playing time of the title. See page 9 for more details.)
- ④ : Indicates whether the disc contains multi-angle views.  
(Ex.: When only main angle-view is recorded on the disc without any multi-angle views. See page 11 for more details.)
- ⑤ : Current operation mode.  
(Ex.: This appears while playing a disc.)





 
⑥ : Indicates whether the disc contains subtitles.  
(Ex.: When no subtitle is recorded on the disc. See page 10 for more details.)

⑦ : Current selected audio language and the total number of the audio languages recorded on the disc.  
(Ex.: "ENGLISH" is selected as the only recorded audio language on the disc. See page 11 for more details.)

⑧ : Sound mode — Linear PCM (stereo), Dolby Digital, and DTS Digital Surround.  
(Ex.: When the disc is encoded with Dolby Digital.)

⑨ : Repeat play mode.  
(Ex.: When Repeat play mode is set to "OFF." See page 16 for more details.)

### When a VCD or CD is loaded



\* This appears only while a VCD is loaded.

① : Current track and the total number of the tracks on the disc.  
(Ex.: 1st track is playing out of 3 tracks recorded.)

② : Playing time or the remaining time.  
(Ex.: Playing time of the track. See the right column for more details.)

③ : Repeat play mode.  
(Ex.: When Repeat play mode is set to "OFF." See pages 16 and 17 for more details.)

④ : Appears only while loading a VCD. Indicates whether the VCD is recorded with the PBC function (PBC) or without (PBC).  
(Ex.: When PBC function is recorded.)

⑤ : Current operation mode.  
(Ex.: This appears while playing a disc.)

## Checking the playing time


You can also show the elapsed playing time or the remaining time.

To show the on-screen bar and to change the playing time information, press **DISPLAY (D)/TIME** while holding **SHIFT (S)**.




Each time you press the button, the playing time information changes on the on-screen bar.

### When a DVD is loaded

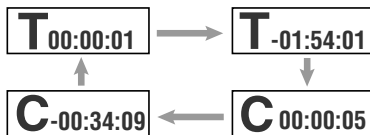

Elapsed playing time of the current **title** →  
Remaining time of the current **title** →  
Elapsed playing time of the current **chapter** →  
Remaining time of the current **chapter** →  
(Back to the beginning)

### When a VCD or CD is loaded

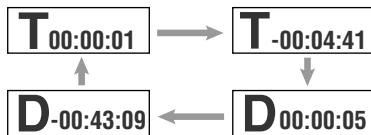




Elapsed playing time of the current **track** →  
Remaining time of the current **track** →  
Elapsed playing time of the current **disc** →  
Remaining time of the current **disc** →  
(Back to the beginning)

To erase the on-screen bar, press **DISPLAY (D)/TIME** twice while playing a DVD, or once while playing a VCD or CD.

- It is not required to hold down **SHIFT (S)** to erase the on-screen bar.



Some DVDs contain several audio languages, subtitles, and multi-angle views. When you find the following marks on the DVD or its package, you can select these elements recorded on the DVD.

	<p>Subtitles are recorded on the disc. The number inside the mark indicates the total number of the recorded subtitles.</p>
	<p>Several audio languages are recorded on the disc. The number inside the mark indicates the total number of the recorded audio languages.</p>
	<p>Multi-angle views are recorded on the disc. The number inside the mark indicates the total number of the recorded multi-angle views.</p>


## Selecting subtitles



 While playing a disc containing subtitles in different languages, you can select the subtitle to be displayed on the screen.


- You can set your favorite subtitle language as the initial language shown on the screen. (See page 21.)

### Select a desired subtitle language.



The on-screen menu bar appears on the screen. Each time you press the button, the subtitle language changes.

Ex.: When the disc has 3 selections — English, French, Spanish and no subtitle (OFF)

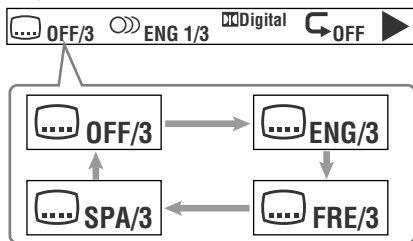

To erase the on-screen bar, press **DISPLAY (D)/TIME**.

## Selecting audio languages



While playing a disc containing audio languages (sound tracks), you can select the language (sound) to listen to.


- You can set your favorite audio language as the initial audio language shown on the screen. (See page 20.)

### Select a desired audio language (sound).



The on-screen menu bar appears on the screen. Each time you press the button, the audio language changes.

Ex.: When the disc has 3 selections — English, French, and Spanish

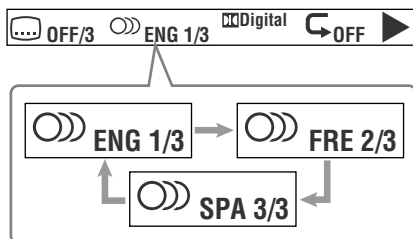


To erase the on-screen bar, press **DISPLAY (D)/TIME**.

## Selecting multi-angle views




 
While playing a disc containing multi-angle views, you can view the same scene at different angles.

### Select a desired view angle.



The on-screen menu bar appears on the screen. Each time you press the button, the view angle changes.

Ex.: When the disc has 3 multi-angle views

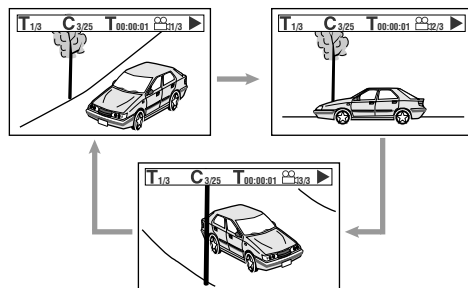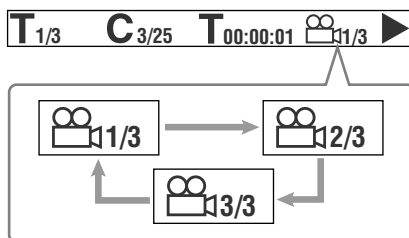

To erase the on-screen bar, press **DISPLAY (D)/TIME** twice.



# MENU-DRIVEN PLAYBACK

## Menu operations



 
Menu-driven playback is possible while playing back a DVD with menu-driven features or a VCD with the PBC function.

### While playing a DVD:

DVD discs generally have their own menus or title lists. A Menu usually contains various information about the disc and playback selections. On the other hand, a title list usually contains titles of movies and songs recorded.


#### 1 Press MENU/SETUP or TITLE.

A menu or title list will appear on the screen.



#### 2 Select a desired item on the menu or on the title list, using Cursor buttons (▲/▼/▶/◀) and ENTER.

The unit starts playback of the selected item.

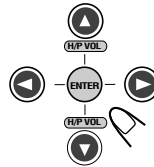


- On some discs, you can also select items by pressing the **Number** buttons corresponding to the item numbers listed.

### To erase the menu or title list

Press **RETURN** ⏪ until it goes off from the screen.

- If “⊘” appears on the screen when pressing **MENU** in step 1, the disc does not have a menu.
- If “⊘” appears on the screen when pressing **TITLE** in step 1, the disc does not have a title list.

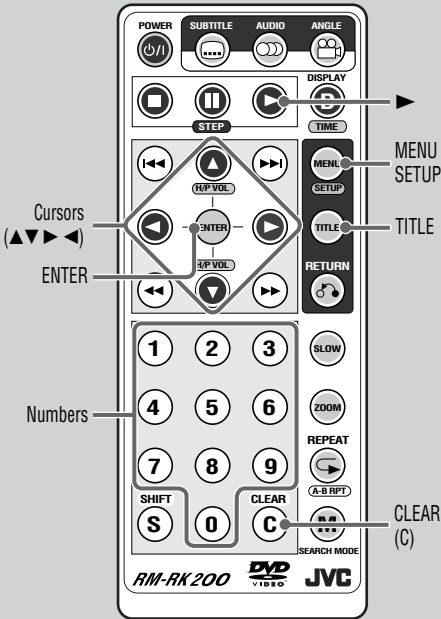



## While playing a VCD:

The Playback Control function (PBC) allows you to operate the VCD using menus.

When you start playback, a menu will automatically appear on the screen.


- A menu may be a list of items, divided screens, or some moving pictures. (See "PBC operation concept" to the right.)

### Select a desired item on the menu.

- When a list of items is displayed on the screen, press the **Number** buttons to select an item.
- When "▶" or "SELECT" is displayed on the screen, press ▶ (or **ENTER** if pressing ▶ does not work) to start playback.


#### How to select items using the Number buttons

- To select number 5, press **5**, then **ENTER**.
- To select number 10, press **1**, **0**, then **ENTER**.
- To select number 23, press **2**, **3**, then **ENTER**.

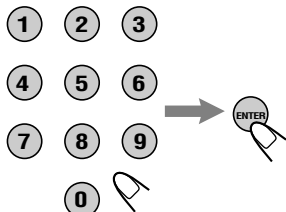

- To cancel a mis-entry, press **CLEAR (C)**. Each time you press the button, the last entry will be erased.

## PBC operation concept

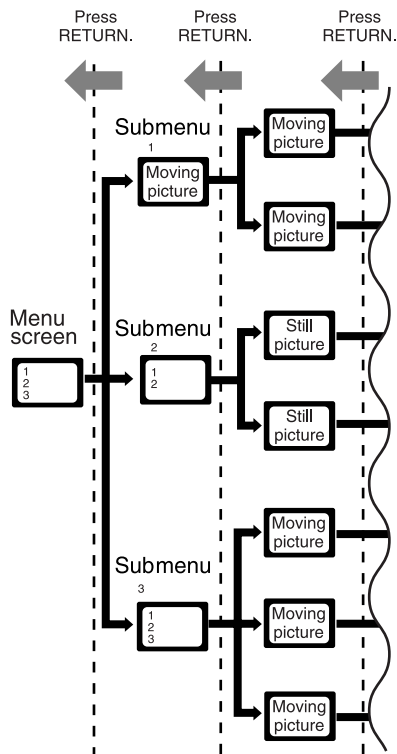

## To return to the previous menu

Press **RETURN** ↵.

## To cancel the PBC playback

You can cancel the menu-driven operations (PBC function):


- 1 Press **■** to stop playback.
- 2 Press the **Number** buttons to select a track, then press **ENTER**.

Normal playback starts from the selected track.

- You can also turn on and off the PBC playback by pressing **MENU/SETUP** repeatedly.



# SEARCH FUNCTIONS

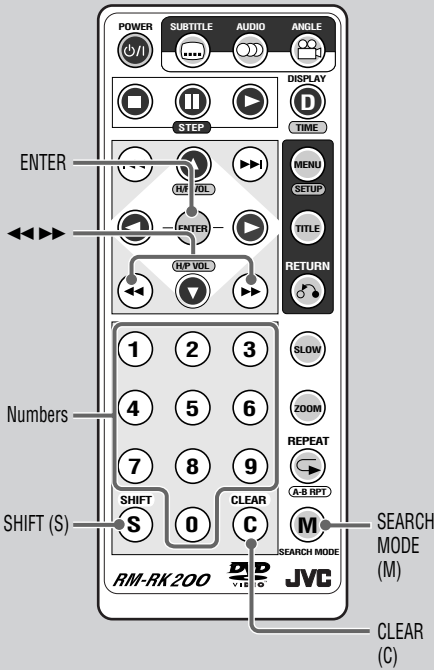

## Searching for a particular point




You can search for a particular portion while playing a disc — Forward/Reverse Search.

### Forward Search

To fast-forward the chapter or track, press **▶▶** while playing a disc.



Each time you press the button, the search speed changes as follows:

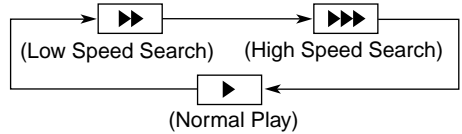

#### When playing a DVD or VCD


- No sound comes out during High Speed Search.
- When Low Speed Search sound setting is "ON," sounds come out during Low Speed Search. (See page 24.)

### Reverse Search

To reverse the chapter or track, press **◀◀** while playing a disc.



Each time you press the button, the search speed changes as follows:

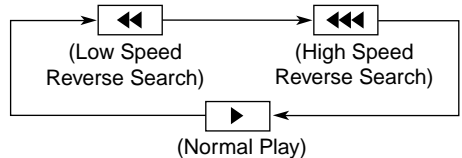

#### When playing a DVD or VCD

No sound comes out during Reverse Search.



# Locating a particular point directly



You can use the following Search Modes to locate a particular portion directly while playing a disc.

- For DVD: Title Search, Chapter Search, and Time Search
- For VCD and CD: Track Search and Time Search


## 1 Press SEARCH MODE (M) to select Search Mode.

The on-screen bar appears on the screen.



SEARCH MODE

When a DVD is playing:

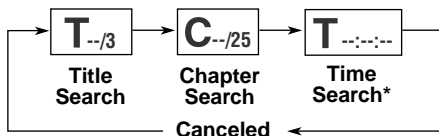

When a VCD or CD is playing:




\* Time Search can be performed only within the current title (for DVD) and the current track (for VCD and CD).

### When Search Mode is canceled

You can use the number buttons to directly select the title number (for DVD) and track number (for VCD and CD).

## 2 Press the Number buttons then ENTER to select a desired title, chapter, track or playing time.

The unit starts playback of the selected item.

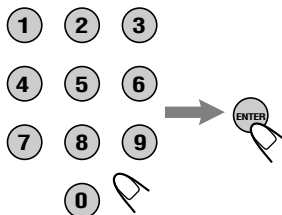

### How to input the title, chapter, and track number

Press the **Number** buttons corresponding to the number, then press **ENTER** to start its playback.

- To select number 5, press **5**, then **ENTER**.
- To select number 10, press **1**, **0**, then **ENTER**.
- To select number 23, press **2**, **3**, then **ENTER**.

### How to input the playing time

Press the **Number** buttons to input the playing time, then press **ENTER** to start playback at the selected elapsed playing time.

- To input time "00:45:23," press **4**, **5**, **2**, **3**, then **ENTER**.
- To input time "01:23:45," press **1**, **2**, **3**, **4**, **5**, then **ENTER**.
- To cancel a mis-entry, press **CLEAR (C)**. Each time you press the button, the last entry will be erased.

To erase the on-screen bar, press **DISPLAY (D)/TIME**.



# REPEAT PLAYBACK

ENGLISH



## Playing Repeatedly



### Repeat Play

You can repeat a chapter, track, or disc.


To repeat playback, press **REPEAT** (↶)/A-B RPT while playing or pausing.

#### REPEAT



The on-screen bar appears. Each time you press the button, the repeat mode indication on the on-screen bar changes as follows:


#### When a DVD is playing:

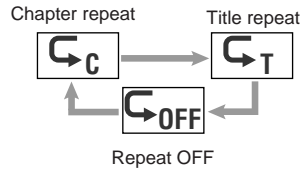

- Chapter repeat: Current chapter will be repeated.
- Title repeat: Current title will be repeated.
- Repeat OFF: Repeat play is canceled.

\* On some DVDs, repeat play may be canceled by the disc itself.

#### When a VCD is playing:

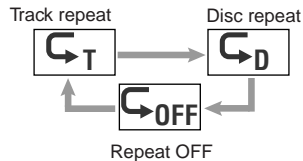

- Track repeat: Current track will be repeated.
- Disc repeat: All the tracks in the disc will be repeated.
- Repeat OFF: Repeat play is canceled.

\* While playing back a VCD using the PBC function, Repeat play cannot be used.



**When a CD is playing\*:**

- Disc repeat: All the tracks in the disc will be repeated.
- Track repeat: Current track will be repeated.

\* When you start playing back a CD, Disc repeat is always activated first.


To erase the on-screen bar, press **DISPLAY (D)/TIME**.

**A-B Repeat**

While playing, you can also select a portion you want to repeat.

- When playing a DVD, A-B Repeat is not performed between different chapters or different titles.


**1** While holding **SHIFT (S)**, press **REPEAT (↶)/A-B RPT** to select the start point.

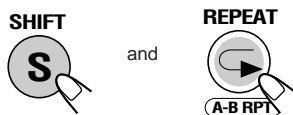

The on-screen bar appears, and the repeat mode indication changes as follows:



 **2** While holding **SHIFT (S)**, press **REPEAT (↶)/A-B RPT** again to select the end point.




The repeat mode indication changes as follows, and A-B Repeat begins.

The unit automatically locates point A and starts repeated playback of the portion between points A and B.



Ex.: When viewing a picture

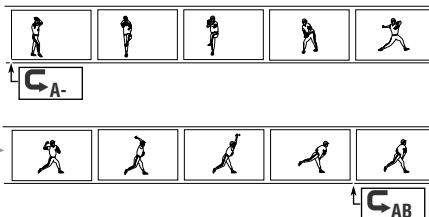

To cancel A-B Repeat, press **REPEAT (↶)/A-B RPT** once while holding **SHIFT (S)**.

To erase the on-screen bar, press **DISPLAY (D)/TIME**.

If "⊘" appears on the screen when pressing **REPEAT (↶)/A-B RPT** in step 1, A-B Repeat cannot be used on the selected portion.

- On some DVDs, A-B Repeat may not be used even within the same chapter. This is due to their disc structures, and not a malfunction of the unit.



# SPECIAL EFFECTS PLAYBACK

ENGLISH

 
## Slow-Motion Playback



You can enjoy slow-motion playback while playing a DVD or VCD.

**To start Slow-motion Playback**, press **SLOW** while playing a DVD or VCD.

Each time you press the button, the slow motion speed changes as follows:



### To resume normal play

Press **SLOW** repeatedly until normal play resumes.

## Frame-by-frame Playback



You can advance the picture frame by frame.

### 1 Press **STEP** once during play.



A still picture appears on the screen.


### 2 Press **STEP** repeatedly to advance the picture frame by frame.



Each time you press the button, the picture advances frame by frame.

### To resume normal play

Press **▶**.

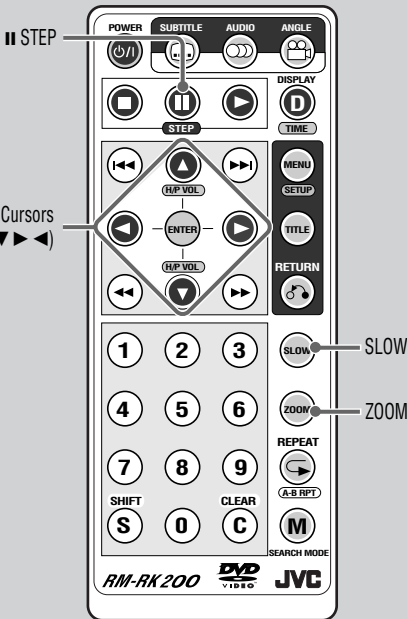



# Zoom






 
**2** Move the enlarged portion on the screen, using Cursor buttons (▲/▼/▶/◀).

You can zoom up a particular portion of the picture while playing a DVD and VCD.

- You can select the start point of zoom and adjust how precisely the zoomed-up portion is moved. (See page 27.)


**1** Press ZOOM to zoom in to the picture.

Each time you press the button, the picture is enlarged as follows:

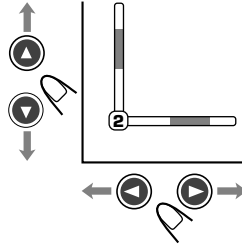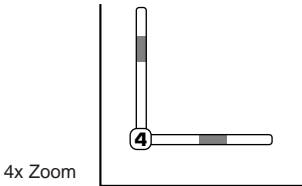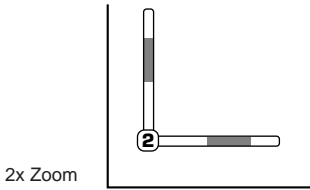

To cancel Zoom, press ZOOM repeatedly until normal size screen appears.

Ex.: When 2x Zoom is selected

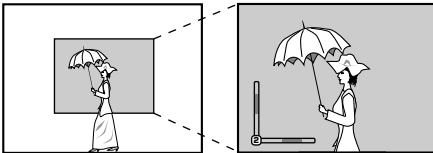


### When playing a VCD

You can only select 2x Zoom.



# DVD SETUP MENU

ENGLISH

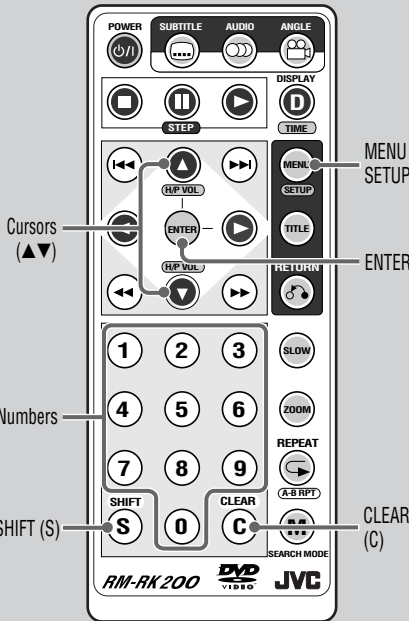

You can store the initial selection for subtitle languages, audio languages (sound), and other settings using the Setup Menu.

- DVD Setup menu can only be displayed while a disc is not playing.

## Setting initial audio language

You can select the initial language for audio sound.


 
However, in the following cases, the original language will be selected as the initial language regardless of your setting.

- If the language you have selected is not recorded on the disc.
- If the disc is programmed to be played back in the original language.

To go back to the previous screen during the procedure, press **RETURN** ⏪.


### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen. (“LANGUAGES” must be selected – highlighted.)

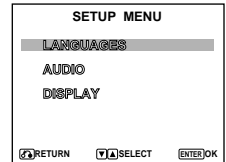


### 2 Press **ENTER**.

Language menu appears. (“AUDIO” must be selected – highlighted.)

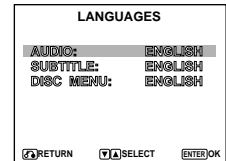


### 3 Press **ENTER** again.

Audio Language selecting screen appears.

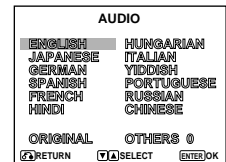



#### 4 Press Cursor ▼ (or ▲) to select a desired language, then press ENTER.

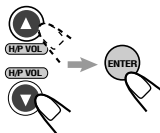

- To use the original language on the disc, select "ORIGINAL."

If a language you want is not listed on the screen, follow the procedure below;

- 1 Press ▲ or ▼ to select "OTHERS."
- 2 Press ENTER.
- 3 Press the **Number** buttons to enter the language code number you want.
  - See "LANGUAGE CODES" on page 30.

Ex.: To select Finnish as the initial language, press **7, 0, 7, 3**, then **ENTER**.

- To cancel a mis-entry, press **CLEAR (C)**. Each time you press the button, the last entry will be erased.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.

## Setting initial subtitle language


 
You can select the initial language for subtitles. However, in the following cases, the original language will be selected as the initial language regardless of your setting.

- If the language you have selected is not recorded on the disc.
- If the disc is programmed to be played back in the original language.

To go back to the previous screen during the procedure, press **RETURN** ⏪.


#### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen. ("LANGUAGES" must be selected – highlighted.)

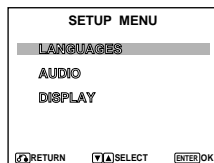



#### 2 Press **ENTER**.

Language menu appears.

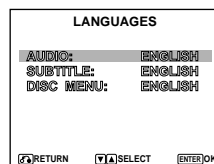


#### 3 Press Cursor ▼ (or ▲) to select "SUBTITLE," then press **ENTER**.

Subtitle Language selecting screen appears.

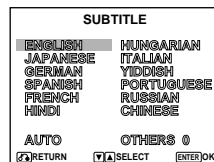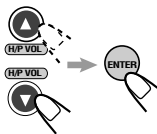

#### 4 Press Cursor ▼ (or ▲) to select a desired language, then press **ENTER**.

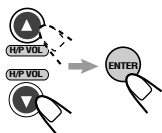

- To use the same language as the initial audio language, select "AUTO."

If a language you want is not listed on the screen, see the left column.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.



# Setting initial disc menu language

You can select the initial language for the disc menu.


 
However, in the following cases, the disc menu will be displayed in the original language on the disc regardless of your setting.

- If the language you have selected is not recorded on the disc.
- If the disc is programmed to be played back in the original language.

To go back to the previous screen during the procedure, press **RETURN** ⏪.


## 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen. ("LANGUAGES" must be selected – highlighted.)

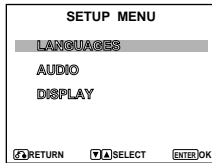



## 2 Press **ENTER**.

Language menu appears.

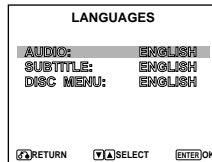


## 3 Press **Cursor ▼ (or ▲)** to select "DISC MENU," then press **ENTER**.

Disc Menu Language selecting screen appears.

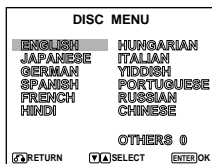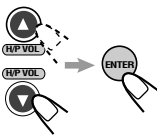

## 4 Press **Cursor ▼ (or ▲)** to select a desired language, then press **ENTER**.

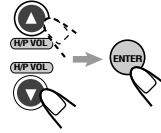

If a language you want is not listed on the screen, see page 21.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.



# Setting digital audio output

 When connecting an amplifier or a decoder to the DIGITAL OUT terminal, set it as recommended – STREAM, LPCM, or OFF (see step 3).

To go back to the previous screen during the procedure, press **RETURN** ⏪.



## 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

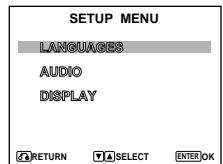

## 2 Press **Cursor ▼ (or ▲)** to select "AUDIO," then press **ENTER**.


Audio menu appears. ("DIGITAL OUT" must be selected – highlighted.)

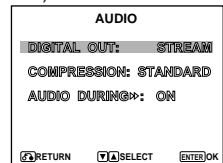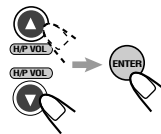




### 3 Press ENTER.

Digital Out selecting screen appears.

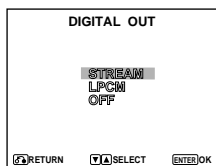

### 4 Press Cursor ▼ (or ▲) to select an appropriate output, then press ENTER.

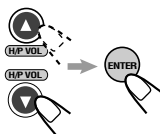

- **STREAM:** Select this when connecting an amplifier or a decoder compatible with Dolby Digital and with DTS Digital Surround.
- **LPCM:** Select this when connecting an amplifier or a decoder incompatible with Dolby Digital.
- **OFF:** Select this when you use the AUDIO L/R (analog) jacks on the rear.

**Only with this setting, you can enjoy original high-quality sound of disc whose sampling frequency is 96 kHz through the AUDIO L/R jacks. (No signal will be output from the DIGITAL OUT terminal.)**

For more detailed information about the output signals, see page 35.

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).


 
## Setting compression

You can compress the dynamic range (difference between the maximum and minimum sound levels) while playing a source encoded with Dolby Digital. This is useful when listening at a low volume level.

To go back to the previous screen during the procedure, press RETURN ↵.



### 1 While holding SHIFT (S), press MENU/SETUP.

Setup Menu appears on the screen.

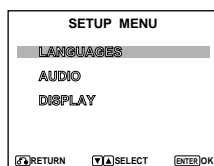



### 2 Press Cursor ▼ (or ▲) to select "AUDIO," then press ENTER.

Audio menu appears.

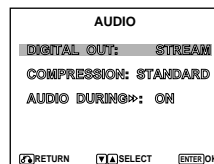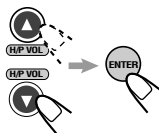

### 3 Press Cursor ▼ (or ▲) to select "COMPRESSION," then press ENTER.


Compression Rate selecting screen appears.

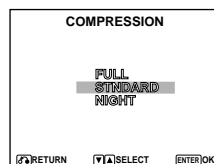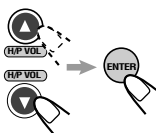

TO BE CONTINUED



**4** Press Cursor  $\blacktriangledown$  (or  $\blacktriangle$ ) to select a desired setting, then press ENTER.

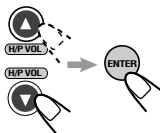

- **FULL:** Select this not to apply compression (full dynamic range as recorded on the original disc).
- **STANDARD:** Select this to reduce the dynamic range a little.
- **NIGHT:** Select this to apply compression fully (useful at a low volume).

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.

## Setting audio output during Low Speed Search


 
You can turn on or off the sound during Low Speed Search on a DVD and VCD.

- Regardless of this setting, sound always comes out during Low Speed Search on a CD.

To go back to the previous screen during the procedure, press **RETURN**  $\curvearrowright$ .



**1** While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

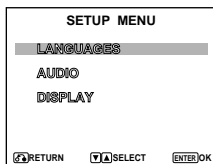



**2** Press Cursor  $\blacktriangledown$  (or  $\blacktriangle$ ) to select "AUDIO," then press ENTER.

Audio menu appears.

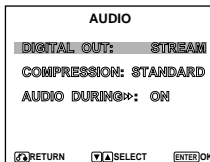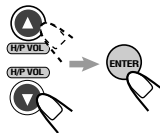


**3** Press Cursor  $\blacktriangledown$  (or  $\blacktriangle$ ) to select "AUDIO DURING  $\blacktriangleright\blacktriangleright$ ," then press ENTER.

Sound on/off selecting screen appears.

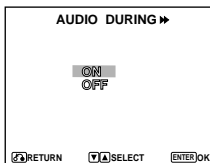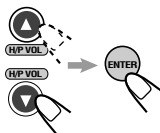

**4** Press Cursor  $\blacktriangledown$  (or  $\blacktriangle$ ) to select a desired setting, then press ENTER.

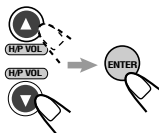

- **ON:** Sounds come out during Low Speed Search\*.
- **OFF:** No sounds come out during Low Speed Search.

\* Some sounds will be skipped during Low Speed Search.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.





## Setting monitor type

Set the monitor type when you watch a wide screen picture.


 
- This setting takes effect only when playing back a DVD recorded with 16:9 wide screen video signal.

To go back to the previous screen during the procedure, press **RETURN** .

### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.



Setup Menu appears on the screen.

**SHIFT**

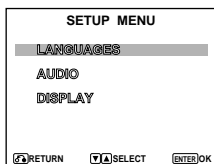


### 2 Press **Cursor ▼ (or ▲)** to select “**DISPLAY**,” then press **ENTER**.

Display menu appears. (“**MONITOR TYPE**” must be selected – highlighted.)

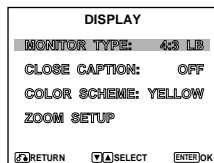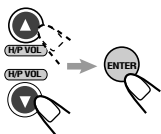


### 3 Press **ENTER**.


Monitor type selecting screen appears.

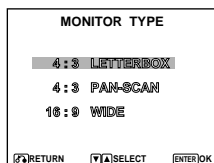


### 4 Press **Cursor ▼ (or ▲)** to select a desired setting, then press **ENTER**.

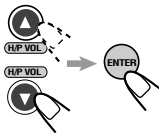


- **4:3 LETTERBOX**: Select this when viewing on TV whose aspect ratio is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

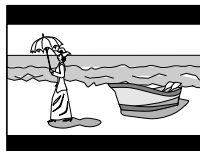

- **4:3 PAN-SCAN**: Select this when viewing on TV whose aspect ratio is 4:3. While viewing a wide screen picture, the black bars do not appear, however, the left and right edge sides of the pictures will not be shown on the screen.

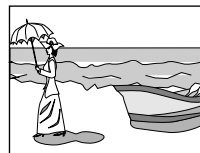

- **16:9 WIDE**: Select this when viewing on TV whose aspect ratio is 16:9.

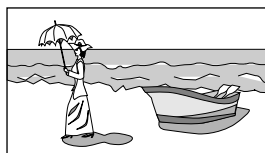

- **Even if “4:3 PAN-SCAN” is selected**, the screen size may become “4:3 LETTERBOX” while playing some DVDs. This depends on how the DVD is programmed and recorded.
- **If a disc (or some portions of the disc) is recorded with the video signals of 4:3 aspect ratio**, this setting does not take effect. The pictures are displayed with full 4:3 aspect ratio or with 4:3 Letter box.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.



## Setting closed caption


Some discs have closed captions. You can set whether you will display the close captions or not.

- To show the closed captions on the TV, you have to use a TV with a built-in closed-caption decoder, or to connect a closed-caption decoder in between this unit and a TV.

To go back to the previous screen during the procedure, press **RETURN**


### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

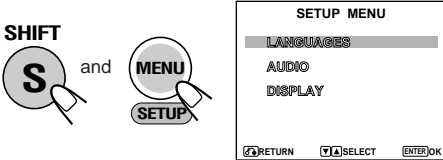


### 2 Press **Cursor ▼ (or ▲)** to select “**DISPLAY**,” then press **ENTER**.

Display menu appears.

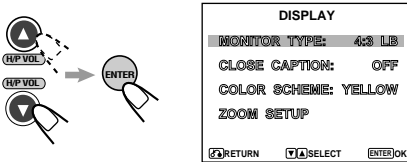


### 3 Press **Cursor ▼ (or ▲)** to select “**CLOSE CAPTION**,” then press **ENTER**.

Closed-caption on/off selecting screen appears.

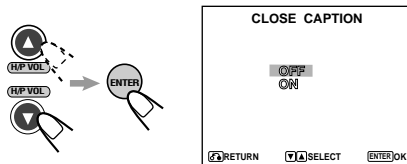

### 4 Press **Cursor ▼ (or ▲)** to select a desired setting, then press **ENTER**.

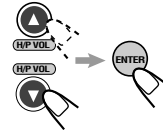

- **ON**: Select this to display the close captions when you start playback.
- **OFF**: Select this not to display the close captions when you start playback.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.


## Changing the color of the on-screen bar

You can change the color of the on-screen bar displayed on the top of the screen, by selecting the color – yellow, green, blue, or red.

To go back to the previous screen during the procedure, press **RETURN**


### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

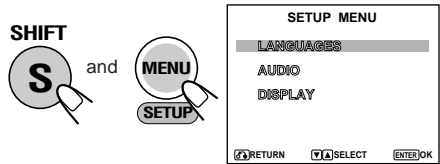


### 2 Press **Cursor ▼ (or ▲)** to select “**DISPLAY**,” then press **ENTER**.

Display menu appears.

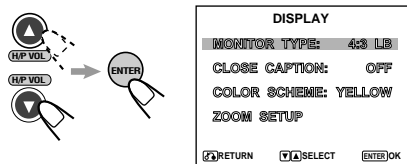




- 3** Press Cursor ▼ (or ▲) to select “COLOR SCHEME,” then press ENTER.

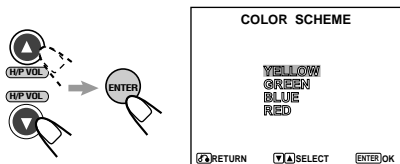

- 4** Press Cursor ▼ (or ▲) to select a desired color, then press ENTER.

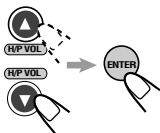

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).


## Setting zoom preference

You can change the zoom setting to your preference – where to start the zoom and how to move the zoomed-up portion.

To go back to the previous screen during the procedure, press RETURN ↵.


- 1** While holding SHIFT (S), press MENU/SETUP.

Setup Menu appears on the screen.

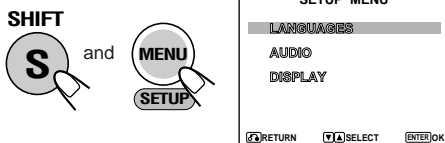


- 2** Press Cursor ▼ (or ▲) to select “DISPLAY,” then press ENTER.

Display menu appears.

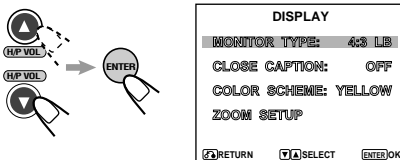

- 3** Press Cursor ▼ (or ▲) to select “ZOOM SETUP,” then press ENTER.

Zoom Setup screen appears. (“START POINT” must be selected – highlighted.)

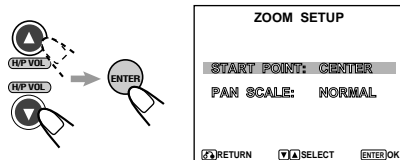


TO BE CONTINUED




### 4 Press ENTER again.

Start Point selecting screen appears.

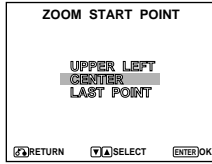

### 5 Press Cursor ▼ (or ▲) to select a desired setting, then press ENTER.


You can select the start point of zoom.

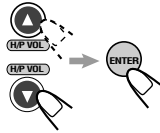

- **UPPER LEFT:** When you press ZOOM, the upper left portion of the picture is zoomed up first.
- **CENTER:** When you press ZOOM, the center portion of the picture is zoomed up first.
- **LAST POINT:** When you press ZOOM, the last zoomed-up portion of the picture is zoomed up.

### 7 Press Cursor ▼ (or ▲) to select a desired setting, then press ENTER.

You can select the movement amount (speed) of the zoomed-up portion.


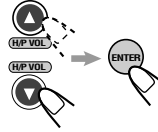


- **NORMAL:** Select this to move at normal speed to another portion of the picture.
- **ROUGH:** Select this to move faster to another portion of the picture. (Rough movement)
- **FINE:** Select this to move slower to another portion of the picture. (Fine movement)

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).

### 6 Press Cursor ▼ (or ▲) to select “PAN SCALE,” then press ENTER.

Pan Scale selecting screen appears.

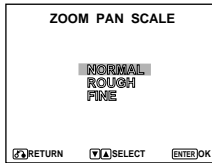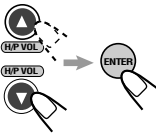



## Handling discs


### How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

- Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).


- Make sure to store discs into the cases after use.

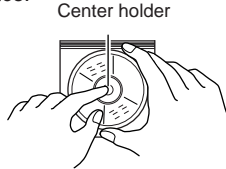

Center holder


### To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.

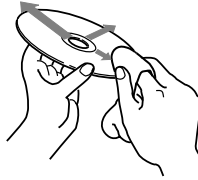

### To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc. To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

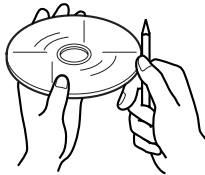

## Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

### CAUTIONS:

- Do not insert 8 cm discs (single discs) into the loading slot. (Such discs cannot be ejected.)
- Do not insert any disc of unusual shape — like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose discs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzene, etc.) to clean discs.

### About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the disc, but will be annoying.

We recommend that you stop disc play while driving on such rough roads.



# LANGUAGE CODES

ENGLISH


6565 Afar  
 6566 Abkhazian  
 6570 Afrikaans  
 6577 Amharic  
 6582 Arabic  
 6583 Assamese  
 6589 Aymara  
 6590 Azerbaijani  
 6665 Bashkir  
 6669 Byelorussian  
 6671 Bulgarian  
 6672 Bihari  
 6673 Bislama  
 6678 Bengali; Bangla  
 6679 Tibetan  
 6682 Breton  
 6765 Catalan  
 6779 Corsican  
 6783 Czech  
 6789 Welsh  
 6865 Danish  
 6869 German  
 6890 Bhutani  
 6976 Greek  
 6978 English  
 6979 Esperanto  
 6983 Spanish  
 6984 Estonian  
 6985 Basque  
 7065 Persian  
 7073 Finnish  
 7074 Fiji  
 7079 Faeroese  
 7082 French  
 7089 Frisian  
 7165 Irish  
 7168 Scots Gaelic  
 7176 Galician  
 7178 Guarani  
 7185 Gujarati  
 7265 Hausa  
 7273 Hindi  
 7282 Croatian  
 7285 Hungarian  
 7289 Armenian  
 7365 Interlingua  
 7375 Knupiak  
 7378 Indonesian  
 7383 Icelandic  
 7384 Italian  
 7385 Inuktitut (Eskimo)  
 7387 Hebrew

7465 Japanese  
 7473 Yiddish  
 7487 Javanese  
 7565 Georgian  
 7575 Kazakh  
 7576 Greacenlandic  
 7577 Cambodian  
 7578 Kannada  
 7579 Korean  
 7583 Kashmiri  
 7585 Kurdish  
 7589 Kirghiz  
 7665 Latin  
 7678 Lingala  
 7679 Laothian  
 7684 Lithuainnian  
 7686 Latvian, Lettish  
 7771 Malagasy  
 7773 Maori  
 7775 Macedonian  
 7776 Malayalam  
 7778 Mongolian  
 7779 Moldavian  
 7782 Marathi  
 7783 Malay  
 7784 Maltese  
 7789 Burmese  
 7865 Nauru  
 7869 Nepali  
 7876 Dutch  
 7879 Norwegian  
 7967 Occitan  
 7977 Afan Oromo  
 7982 Oriya  
 8065 Punjabi  
 8076 Polish  
 8083 Pashto, Pushto  
 8084 Portuguese  
 8185 Quechua  
 8277 Rhaeto-Romance  
 8278 Kirundi  
 8279 Romanian  
 8285 Russian  
 8287 Kinya, Rwanda  
 8365 Sanskrit  
 8368 Sindhi  
 8371 Sangro  
 8372 Serbo-Croatian  
 8373 Singhalese  
 8375 Slovak  
 8376 Slovenian  
 8377 Samoan

8378 Shona  
 8379 Somali  
 8381 Albanian  
 8382 Serbian  
 8383 Siswati  
 8384 Sesotho  
 8385 Sundanese  
 8386 Swedish  
 8387 Swahili  
 8465 Tamil  
 8469 Telugu  
 8471 Tajik  
 8472 Thai  
 8473 Tigrinya  
 8475 Turkmen  
 8476 Tagalog  
 8478 Setswana  
 8479 Tonga  
 8482 Turkish  
 8483 Tsonga  
 8484 Tatar  
 8487 Twi  
 8571 Uigur  
 8575 Ukrainian  
 8582 Urdu  
 8590 Uzbek  
 8673 Vietnamese  
 8679 Volapuk  
 8779 Wolof  
 8872 Xhosa  
 8979 Yoruba  
 9065 Zhuang  
 9072 Chinese  
 9085 Zulu


### 4:3 Letterbox Screen

This is one method for displaying a wide screen picture on a conventional sized (4:3) TV. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

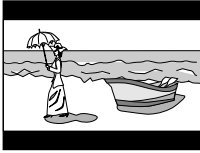

### 4:3 Pan-Scan Screen

This is one method for displaying a wide screen picture on a conventional sized (4:3) TV. While viewing a wide screen picture, the left and right edges of the pictures will not be shown on the screen.

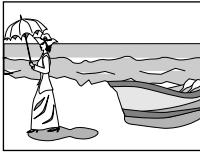

### Dolby Digital

This is a digital audio compression technology that was developed by Dolby Laboratories. Dolby Digital encoding method (so-called discrete 5.1 channel digital audio format) records and compresses the left front channel, right front channel, center channel, left rear channel, right rear channel, and LFE channel (total 6 channels, but LFE channel is counted as 0.1 channel, therefore called 5.1 channels) signals digitally. Each channel is completely independent from other channel signals to avoid interference, therefore, you can obtain much better sound quality with stereo and surround effects. To reproduce these original surround signals, you need to connect an amplifier or a decoder compatible with Dolby Digital.

### DTS Digital Surround

Another discrete 5.1 channel digital audio format, available on CD, LD, and DVD software, developed by Digital Theater Systems, Inc. Compared to Dolby Digital, audio compression rate is relatively low. This fact allows DTS Digital Surround format to add breadth and depth to the reproduced sounds. As a result, DTS Digital Surround features natural, solid and clear sound. To reproduce these surround signals, you need to connect an amplifier or a decoder compatible with DTS Digital Surround.

### Linear PCM

This is a digital recording format that is used for audio CDs.

### Playback Control (VCD)

When a VCD has the PBC (Playback Control) function, you can enjoy menu-driven operations and high-resolution still pictures.

### Sampling Frequency, Quantization Bits

When analog signals are converted into digital signals, they are divided into many points and digitized. This dividing method is called "sampling." The sampling frequency indicates how many points one second is divided into – for example, for CD sound, one second is divided into 44100 points since its sampling frequency is 44.1 kHz. On the other hand, the number of quantization bits indicates the volume size used to memorize each divided point. The larger this number is, the clearer the sound can be reproduced.

### Titles and Chapters (DVD)

A DVD is divided into several titles (large divisions), and each title is divided into chapters (smaller divisions). These divisions are assigned their particular numbers, so that they are easily accessed.

### Tracks (VCD, CD)


VCDs and CDs are divided into tracks. Each track has its own number so that it is easily accessed.



# LOCATION OF THE BUTTONS

ENGLISH

## Remote controller

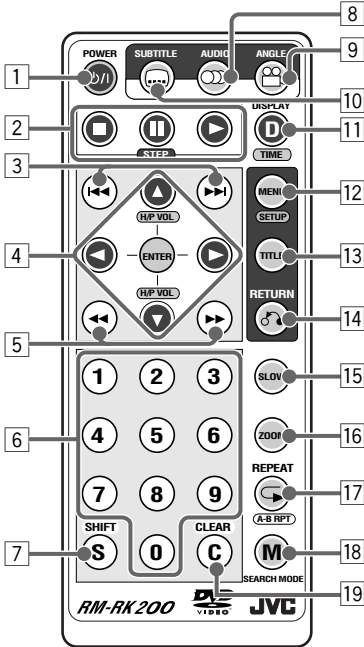


- 1 **POWER** (standby/on) button
- 2 **Disc operation buttons**  
■ (stop), II (pause) STEP, ► (play)
- 3 / (reverse search/forward search) buttons
- 4 **Menu operation buttons**  
▲ / ▼ / ◀ / ▶ (cursors), ENTER  
• ▲ / ▼ also function as H/P VOL (headphones volume) buttons while pressed with **SHIFT (S)** button.
- 5 / (reverse/fast forward) buttons
- 6 **Number buttons**
- 7 **SHIFT (S)** button
- 8 **AUDIO** button
- 9 **ANGLE** button
- 10 **SUBTITLE** button
- 11 **DISPLAY (D)/TIME** button  
• Also functions as **TIME** button while pressed with **SHIFT (S)** button.
- 12 **MENU/SETUP** button  
• Also functions as **SETUP** button while pressed with **SHIFT (S)** button.
- 13 **TITLE** button
- 14 **RETURN** button
- 15 **SLOW** button
- 16 **ZOOM** button
- 17 **REPEAT** /A-B RPT button  
• Also functions as **A-B RPT** button while pressed with **SHIFT (S)** button.
- 18 **SEARCH MODE (M)** button
- 19 **CLEAR (C)** button





## Control panel

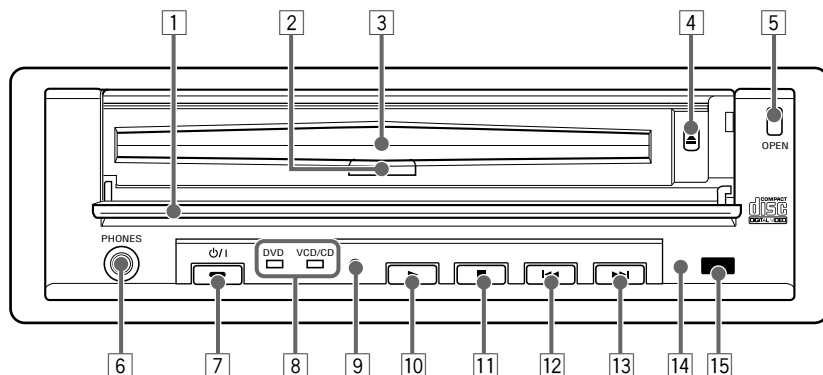

- 1 **Slot cover**
- 2 **Disc loading lamp**  
This lamp goes off when the disc type is detected.
- 3 **Loading slot**
- 4 **▲ (eject) button**
- 5 **OPEN button**
- 6 **PHONES jack**
- 7  **$\phi$ /I (standby/on) button and lamp**  
The lamp always lights up when the ignition key is on.
- 8 **Disc lamps (DVD, VCD/CD)**  
These lamps indicate the type of the disc loaded.
- 9 **Remote signal reception lamp**  
This lamp flashes when receiving the remote control signals.
- 10 **▶ (play) button and lamp**  
The lamp lights up when the power is on.
- 11 **■ (stop) button and lamp**  
The lamp lights up when the power is on.
- 12 **◀◀ (reverse search) button and lamp**  
The lamp lights up when the power is on.
- 13 **▶▶ (forward search) button and lamp**  
The lamp lights up when the power is on.
- 14 **Reset button**
- 15 **Remote sensor**



# TROUBLESHOOTING

ENGLISH

What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• Playback cannot start after inserting a disc.	The disc is inserted upside down.	Insert the disc correctly.
• Sound and picture are sometimes interrupted or distorted.	You are driving on rough roads.	Stop playing a disc while driving on rough roads.
	The disc is scratched.	Change the disc.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
	You are playing a disc with DTS Digital Surround.	This unit cannot output DTS sound without connecting a decoder compatible with DTS Digital Surround.
• No picture appears on the screen.	The video cord is not connected correctly.	Connect the video cord correctly.
	An incorrect input has been selected on the TV or monitor.	Select a correct input on the TV or monitor.
• The left and right edges of the picture are missing on the screen.	“4:3 PAN-SCAN (PS)” is selected when viewing on a conventional TV (aspect ratio 4:3).	Select “4:3 LETTERBOX (LB)” (See page 25.)
• No subtitle appears on the display though you have selected the initial subtitle language.	_____	Some DVDs are programmed to always display no subtitle initially. If this happens, press <b>SUBTITLE</b> after starting play.
• Audio language is different from the one you have selected as the initial audio language.	_____	Some DVDs are programmed to always use the original language initially. If this happens, press <b>AUDIO</b> after starting play.
• Disc can be neither played back nor ejected.	The built-in microcomputer may function incorrectly due to noise, etc.	Turn off the power, then turn it again.
• This unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button to reset the unit. (See page 2.)

# SPECIFICATIONS

## AUDIO SECTION

Frequency Response:  
 DVD, fs=48 kHz: 16 Hz to 22 000 Hz  
 DVD, fs=96 kHz: 16 Hz to 44 000 Hz  
 VCD, CD: 16 Hz to 20 000 Hz  
 Dynamic Range: 93 dB  
 Signal-to-Noise Ratio: 95 dB  
 Pickup wave length: 650 nm  
 Wow and Flutter: Less than measurable limit  
 Audio output level:  
 Analog (AUDIO L/R): 1.5 Vrms  
 Digital (DIGITAL OUT):  
 Signal wave length: 660 nm  
 Output level: -21 dBm to -15 dBm

## VIDEO SECTION

Color system: NTSC  
 Video output (composite): 1 Vp-p/75 Ω

## GENERAL

Power Requirement:  
 Operating Voltage: DC 14.4 V  
 (11 V to 16 V allowance)  
 Grounding System: Negative ground  
 Allowable Operating Temperature:  
 0°C to +40°C  
 (32°F to 104°F)  
 Dimensions (W x H x D):  
 Unit Size:  
 178 mm x 50.5 mm x 167 mm  
 (7-1/16" x 2" x 6-5/8")  
 Installation Size:  
 182 mm x 52 mm x 150 mm  
 (7-3/16" x 2-1/16" x 5-15/16")  
 Panel Size: 188 mm x 58 mm x 13.4 mm  
 (7-7/16" x 2-5/16" x 9/16")  
 Mass: 1.4 kg (3.1 lbs) (excluding accessories)

*Design and specifications subject to change without notice.*

If a kit is necessary for your car, consult a telephone directory for the nearest car audio speciality shop.

## Output signals through the DIGITAL OUT terminal

They differ depending on the "DIGITAL OUT" setting on the Setup Menu.

DIGITAL OUT Playback Disc	Output Signals		
	STREAM	LPCM	OFF
DVD 48 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM	None
96 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM	None
with <b>Dolby Digital</b>	Dolby Digital bitstream	Down mix (2 channels)	None
with <b>DTS Digital Surround</b>	DTS bitstream	None	None
<b>Video CD, Audio CD</b>	44.1 kHz, 16 bit Linear PCM	44.1 kHz, 16 bit Linear PCM	None
<b>Auido CD with DTS</b>	DTS bitstream	DTS bitstream	None



**JVC**  
**MOBILE**  
ENTERTAINMENT

<http://www.jvcmobile.com>

*Visit us on-line for*

*Technical Support & Customer Satisfaction Survey.*

**US RESIDENTS ONLY**

**Having TROUBLE with operation?  
Please reset your unit**

**Refer to page of How to Reset  
Still having trouble??**

**USA ONLY**

**Call 1-800-252-5722**

<http://www.jvcservice.com>

**We can help you!**

**JVC**


VICTOR COMPANY OF JAPAN, LIMITED

# CAUTION / VORSICHT / PRECAUTION

To prevent noises, connect the monitor's controller unit (KV-M700) and this unit (KV-DV7) using a wire (supplied)—be sure to connect the metallic parts.

Verbinden Sie die Steuereinheit des Monitors (KV-M700) und dieses Gerät (KV-DV7) mit einem (mitgeliefert) Draht, um Geräusche zu vermeiden. Achten Sie darauf, daß Sie metallische Teile miteinander verbinden.

*Pour éviter les bruits, connectez le contrôleur de moniteur (KV-M700) et cet appareil (KV-M700) en utilisant un fil (fourni) — en prenant soin de connecter le fil aux parties métalliques.*

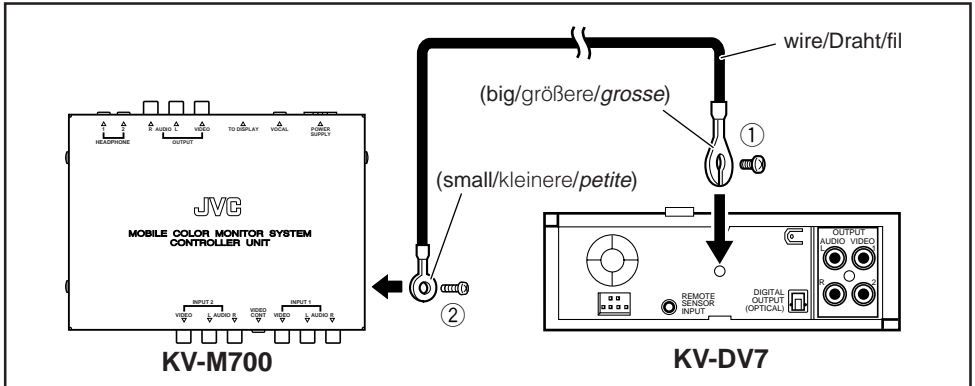

## ENGLISH

- ① Attach one terminal (big) of the supplied wire to the center hole on KV-DV7's rear panel, using a screw (M5 x 6 mm: supplied).
- ② Remove one screw from the side panel of KV-M700's controller unit, and attach the other terminal (small) of the supplied wire using the removed screw.

## DEUTSCH

- ① Befestigen Sie das (größere) Ende des mitgelieferten Drahts an der mittleren Bohrung auf der Rückseite des KV-DV7. Verwenden Sie hierzu die zum Lieferumfang gehörende Schraube (M5 x 6 mm: mitgeliefert).
- ② Drehen Sie eine Schraube aus der Seitenblende der Steuereinheit des KV-M700 heraus, und befestigen Sie das andere (kleinere) Ende des Drahts mit dieser herausgedrehten Schraube.

## FRANÇAIS

- ① Attachez une extrémité (la plus grosse) du fil fourni au trou central sur le panneau arrière du KV-DV7 en utilisant une vis (M5 x 6 mm: fournie).
- ② Retirez une vis du panneau latéral du contrôleur du KV-M700 et attachez l'autre extrémité (la plus petite) du fil fourni en utilisant la vis que vous venez de retirer.

Notice the following information will help you solve the problems.  
Keep this IMPORTANT sheet together with the INSTRUCTIONS book.


- **After installing the unit**
  - Follow "To reset the microcomputer" described below.
- **If the unit does not operate**
  - Follow "To reset the microcomputer" described below.

## To reset the microcomputer

Press the reset button on the front panel using a ball-point pen or a similar tool.  
This will reset the built-in microcomputer.


**NOTE:** If you reset the unit during play, the playback mode selections (e.g. repeat play mode setting), you have selected for the current disc will be reset to the initial settings.

- During DVD playback, the disc menu selection will be also reset to the initial disc settings.

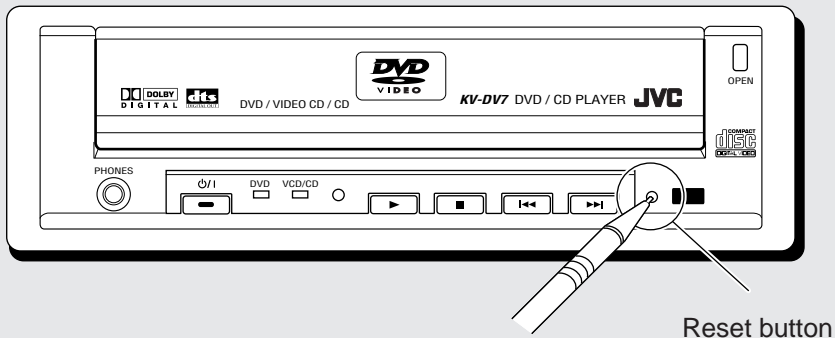

# CAUTION / ACHTUNG / ATTENTION / LET OP

Disc loading slot / Ladeschlitzes / Trappe à disques / Laadopening

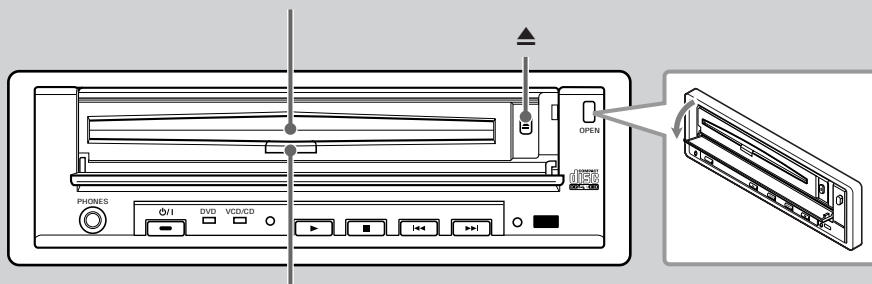

Disc loading lamp / Disc-Ladeleuchte / Témoin de charge de disque / Lampje voor geplaatste disk

## ENGLISH

**DO NOT** insert a disc while the disc loading lamp is flashing or is not lit.

When the disc loading lamp is not lit, press ▲ to check whether a disc is in the disc loading slot before inserting a disc.

- *If a disc is in the disc loading slot, it comes out, and you can replace it with another disc.*
- *If no disc is in the disc loading slot, the disc loading lamp lights up, and you can insert a disc.*

## DEUTSCH

**KEINE** Disc einlegen, wenn die Disc-Ladeleuchte blinkt oder nicht leuchtet.

Wenn die Disc-Ladeleuchte nicht leuchtet, drücken Sie die Taste ▲, um zu prüfen, ob sich eine Disc im Ladeschacht befindet, bevor Sie eine Disc einlegen.

- *Wenn sich eine Disc im Ladeschacht befindet, wird sie ausgeworfen, und Sie können eine andere Disc einlegen.*
- *Wenn sich keine Disc im Ladeschacht befindet, leuchtet die Disc-Ladeleuchte, und Sie können eine Disc einlegen.*

## FRANÇAIS

**N'INTRODUISEZ PAS** de disque si le témoin de charge de disque clignote ou reste éteint.

Quand le témoin de charge de disque n'est pas allumé, appuyez sur ▲ pour vérifier si un disque se trouve dans la fente d'insertion de disque.

- *Si un disque se trouve dans la fente, il est éjecté et vous pouvez le remplacer par un autre.*
- *Si aucun disque ne se trouve dans la fente, le témoin de charge de disque s'allume et vous pouvez insérer un disque.*


## NEDERLANDS

**Plaats GEEN** disk als het lampje voor geplaatste disk knippert of uit is.

Druk als het lampje voor geplaatste disk bij de lade niet aan is, op ▲ en ga na of de lade vrij is alvorens een disk in de lade te plaatsen.

- *Als er zich een disk in de lade bevindt, komt deze naar buiten geschoven en kunt u deze door een andere disk vervangen.*
- *Als er zich geen disk in de lade bevindt, gaat het lampje bij de lade aan en kunt u er een disk in plaatsen.*



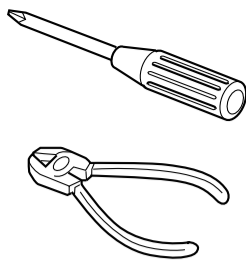

#### ENGLISH

#### DEUTSCH

#### FRANÇAIS

#### NEDERLANDS

## WARNING

- **DO NOT INSTALL THE UNIT IN A LOCATION WHICH OBSTRUCTS DRIVING, VISIBILITY OR WHICH IS PROHIBITED BY APPLICABLE LAWS AND REGULATIONS.**

If the unit is installed in a location which obstructs forward visibility or operation of the air bag or other safety equipment or which interferes with operation of the vehicle, it may cause an accident.

- **NEVER USE BOLTS OR NUTS FROM THE VEHICLE'S SAFETY DEVICES FOR INSTALLATION.**

If bolts or nuts from the steering wheel, brakes or other safety devices are used for installation of the unit, it may cause an accident.

- **ATTACH THE WIRES CORRECTLY.**

If the wiring is not correctly performed, it may cause a fire or an accident. In particular, be sure to run and secure the lead wire so that it does not get tangled with a screw or the moving portion of a seat rail.

- **USE WITH DC 12 V NEGATIVE GROUND VEHICLES.**

This unit is only for use in a DC 12 V negative ground vehicle.

It cannot be used in large trucks or diesel vehicles which are DC 24 V vehicles.

If it is used in the wrong type of vehicle, it may cause a fire or accident.

- **To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.**
- **Avoid installing the unit in the following places**

- Where it would hinder your safety driving.
- Where it would be exposed to direct sunlight or heat directly from the heater or placed in an extremely hot place.
- Where it would be subject to rain, water splashes or excessive humidity.
- Where it would be subject to dust.
- Where it would be positioned on an unstable place.
- Where it could damage the car's fittings.
- Where proper ventilation would not be maintained, such as under a floor mat.

## WARNUNGEN

- **INSTALLIEREN SIE DAS GERÄT NICHT AN EINEM ORT, AN DEM DAS FÜHREN DES FAHRZEUGS ODER DIE SICHT BEEINTRÄCHTIGT WIRD ODER DER AUFGRUND GELTENDER GESETZE UND VERORDNUNGEN UNZULÄSSIG IST.**

Wenn Sie das Gerät an einem Ort installieren, an dem die Voraussicht oder der Betrieb des Airbags oder anderer Sicherheitseinrichtungen des Fahrzeugs beeinträchtigt wird oder das Führen des Fahrzeugs gestört wird, kann es die Ursache für einen Unfall sein.

- **VERWENDEN SIE NIEMALS SCHRAUBEN ODER MUTTERN DER SICHERHEITSEINRICHTUNGEN DES FAHRZEUGS ZUR INSTALLATION.**

Wenn Schrauben oder Muttern des Lenkrads, der Bremsen oder anderer Sicherheitseinrichtungen zur Installation des Geräts verwendet werden, kann ein Unfall verursacht werden.

- **BRINGEN SIE DIE DRÄHTE ORDNUNGSGEMÄSS AN.**

Wenn die Verkabelung nicht richtig durchgeführt wird, entsteht hierdurch möglicherweise ein Feuer oder Unfall. Achten Sie insbesondere darauf, das Kabel so zu verlegen und zu sichern, daß es sich nicht mit einer Schraube oder dem beweglichen Teil einer Sitzschiene verheddert.

- **VERWENDEN SIE DAS GERÄT NUR IN FAHRZEUGEN MIT 12-V-GLEICHSTROMSYSTEM UND NEGATIVER ERDUNG.**

Dieses Gerät darf nur in Fahrzeugen mit einem 12-V-Gleichstromsystem und Negativer Erdung verwendet werden.

Es darf nicht in großen Lkw oder Dieselfahrzeugen mit 24-V-Gleichstromsystemen verwendet werden. Wenn das Gerät im falschen Fahrzeugtyp verwendet wird, kann es ein Feuer oder einen Unfall verursachen.

- **Um einen Kurzschluß zu vermeiden, empfiehlt es sich, den negativen Pol der Batterie abzutrennen und alle elektrischen Anschlüsse vorzunehmen, bevor das Gerät installiert wird. Wenn Sie sich nicht sicher sind, wie das Gerät installiert wird, lassen Sie es von einem qualifizierten Techniker einbauen.**
- **Installieren Sie das Gerät nicht an solchen Orten:**

- an denen die Fahrsicherheit gefährdet wäre.
- an denen es direkter Sonneneinstrahlung oder Hitze einwirkung durch die Heizung ausgesetzt wäre. Installieren Sie es auch nicht an einem extrem heißen Ort.
- an denen es Regen, Wasserspritzern oder übermäßiger Feuchtigkeit ausgesetzt wäre.
- an denen es Staub ausgesetzt wäre.
- die instabil sind.
- an denen die Fahrzeugarmaturen beschädigt werden könnten.
- an denen keine ordnungsgemäße Belüftung aufrechterhalten werden kann, z.B. unterhalb von Bodenmatten.

## AVERTISSEMENT

- **N'INSTALLEZ PAS L'APPAREIL DANS UN ENDROIT QUI GENE LA CONDUITE, LA VISIBILITE OU QUI EST INTERDIT PAR LE CODE DE LA ROUTE ET LES REGLEMENTS.**

Si l'appareil était installé à un emplacement gênant la visibilité avant, ou le déploiement du sac à air, et autres dispositifs de sécurité, ou à un emplacement gênant pour la conduite du véhicule, comme près du levier des vitesses ou de la pédale du frein, cela risquerait de provoquer des accidents.

- **NE JAMAIS UTILISER POUR L'INSTALLATION DES BOULONS OU DES ECROUS PROVENANT DES DISPOSITIFS DE SECURITE DU VEHICULE.**

Si l'on utilisait pour l'utilisation de l'appareil des boulons et des écrous cannibalisés du volant, des freins ou autres dispositifs de sécurité, cela risquerait de provoquer des accidents.

- **ATTACHER LES CORDONS CORRECTEMENT.**

Si le câblage n'est pas exécuté correctement, cela risque de provoquer un incendie ou autre accident. Veiller, en particulier, à tirer et attacher les fils en sorte qu'ils ne s'accrochent pas à une vis ou ne se coincent dans les parties mobiles des rails des sièges.

- **USAGE SUR LES VEHICULES DE 12 V CC AVEC NEGATIF A LA MASSE.**

Cet appareil ne peut pas être utilisé que sur les véhicules de 12 V CC avec négatif à la masse. Il ne peut pas être utilisé sur les gros camions ou les véhicules diesel de 24 V CC.

S'il était utilisé sur un type de véhicule inadéquat cela risquerait de provoquer un incendie ou autres accidents.

- **Pour éviter les courts-circuits, nous recommandons que vous déconnectiez la borne négative de la batterie et réalisez toutes les connexions électriques avant d'installer l'appareil. Si vous n'êtes pas sûr de savoir comment installer cet appareil correctement, faites-le installer par un technicien qualifié.**
- **Évitez d'installer l'appareil dans les endroits suivants**

- Où il peut gêner la conduite de la voiture.
- Où il est exposé à la lumière directe du soleil, à la chaleur directe du chauffage ou placé dans un endroit très chaud.
- Où il est sujet à la pluie, aux éclaboussures ou à une humidité excessive.
- Où il est sujet à la poussière.
- Où il est positionné dans un endroit instable.
- Où il peut endommager les accessoires de la voiture.
- Où une ventilation correcte ne peut pas être maintenue, comme sous un tapis de sol.

## WAARSCHUWING

- **INSTALLEER DE EENHEID NIET OP EEN PLAATS WAAR DIT HET RIJDEN, OF HET UITZICHT BELEMMERT, OF WAAR DIT BIJ WET OF ANDERE REGELGEVING IS VERBODEN.**

Als de eenheid op een plaats is geïnstalleerd waar dit het uitzicht op de weg belemmert, dit de werking van de airbag of dit andere veiligheidsvoorzieningen hindert, of waar het besturen van het voertuig in gevaar wordt gebracht, kan dit tot een ongeval lijden.

- **GEBRUIK NOOIT SCHROEVEN OF MOEREN VOOR DE INSTALLATIE DIE NODIG ZIJN VOOR DE VEILIGHEIDSVORZIENINGEN VAN DE AUTO.**

Als schroeven of moeren van het stuur, de rem of andere veiligheidsvoorzieningen worden gebruikt voor de installatie van de eenheid, kan dit tot een ongeval lijden.

- **SLUIT DE BEDRADING OP DE JUISTE WIJZE AAN.**

Als de bedrading verkeerd wordt aangesloten, kan dit tot brand of een ongeval lijden. Let er met name op dat de stroomvoorzieningskabel nergens achter blijft steken of in contact komt met de bewegende delen van de rails van de stoelen.

- **ALLEEN GEBRUIKEN IN COMBINATIE MET VOERTUIGEN DIE WERKEN MET EEN NEGATIEVE AARDING VAN 12 V GELIJKSTROOM.**

Dit eenheidsysteem is alleen bedoeld voor voertuigen die zijn gebaseerd op een negatieve aarding van 12 V gelijkstroom.

Het systeem kan niet worden gebruikt in vrachtwagens of diesels, die met 24 V gelijkstroom werken.

Wanneer dit systeem in een verkeerd type voertuig wordt gebruikt, kan dit tot brand of een ongeval lijden.


- **Ter voorkoming van kortsluiting, raden we aan dat u de negatieve aansluiting van de accu losmaakt en daarna alle benodigde verbindingen tot stand brengt alvorens de eenheid te installeren. Als u niet zeker weet hoe u de eenheid moet installeren, kunt u dit beter door een erkend vakman laten doen.**
- **Installeer de eenheid niet op de volgende plaatsen:**

- waar deze een gevaar vormt voor het besturen van de auto.
- waar deze wordt blootgesteld aan direct zonlicht, een verwarming of een andere hittebron.
- waar deze wordt blootgesteld aan regen, spatwater of extreme vochtigheid.
- waar deze wordt blootgesteld aan stof.
- waar deze op een instabiele ondergrond komt te staan.
- waar deze de auto kan beschadigen.
- waar geen ventilatie is, zoals onder een vloermat.


## Parts list for installation and connection

The following parts are provided for this unit. After checking them, please set them correctly.


Sleeve  
Halterung  
Manchon  
Huis

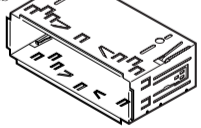

Trim plate  
Frontrahmen  
Plaque d'assemblage  
Sierplaat

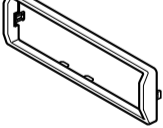

Mounting brackets  
Haltewinkel  
Ferrures de montage  
Bevestigingsbeugels

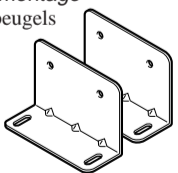

Screws (M5 x 6 mm)  
Schrauben (M5 x 6 mm)  
Vis (M5 x 6 mm)  
Schroeven (M5 x 6 mm)



 
Tapping screws (M5 x 20 mm)  
Blechschrauben (M5 x 20 mm)  
Vis auto-taraudeuses (M5 x 20 mm)  
Tapschroeven (M5 x 20 mm)



Remote sensor unit  
Fernbedienungs-Sensoreinheit  
Unité de capteur de télécommande  
Sensor voor bediening op afstand



Power cord  
Spannungsversorgungskabel  
Cordon d'alimentation  
Stroomkabel



Handles  
Griffe  
Poignées  
Hendels



## Liste des pièces pour l'installation et raccordement

Les pièces suivantes sont fournies avec cet appareil. Après vérification, veuillez les placer correctement.

 
Velcro tape  
Klettband  
Bande velcro  
Hechtstrip



Remote control data cord  
Fernbedienungs-Datenkabel  
Cordon de données de télécommande  
Afstandsbedienings snoer



Audio/video cord  
Audio/Video-Kabel  
Câble audio/vidéo  
Audio-/videokabel



Lock nut (M5)  
Sicherungsmutter (M5)  
Ecrou d'arrêt (M5)  
Contra-moer (M5)




Washer (ø5)  
Unterlegscheibe (ø5)  
Rondelle (ø5)  
Sluistring (ø5)



## Lijst van onderdelen die u bij installatie en aansluiting nodig hebt

 De volgende onderdelen worden bij het apparaat geleverd. Installeer ze op de juiste wijze, nadat u ze hebt gecontroleerd.

Remote controller  
Fernbediening  
Télécommande  
Afstandsbediening



Battery  
Batterie  
Pile  
Batterij



CR2025

Mounting bolt (M5 x 20 mm)  
Befestigungsschrauben (M5 x 20 mm)  
Boulon de montage (M5 x 20 mm)  
Bevestigingsbout (M5 x 20 mm)



Rubber cushion  
Gummipuffer  
Amortisseur en caoutchouc  
Rubberdop



## TROUBLESHOOTING

- **The fuse blows.**  
\* Are the red and black leads connected correctly?
- **Power cannot be turned on.**  
\* Is the yellow lead connected?
- **Picture does not come on screen.**  
\* Is the video cord correctly connected?
- **Sound does not come out.**  
\* Is the audio cord correctly connected?

## FEHLERSUCHE

- **Die Sicherung brennt durch.**  
\* Sind das rote und das schwarze Kabel ordnungsgemäß angeschlossen?
- **Die Stromversorgung kann nicht eingeschaltet werden.**  
\* Ist das gelbe Kabel angeschlossen?
- **Auf dem Bildschirm erscheint kein Bild.**  
\* Ist das Video-Kabel richtig angeschlossen?
- **Kein Ton.**  
\* Ist das Audio-Kabel richtig angeschlossen?

## EN CAS DE DIFFICULTES

- **Le fusible saute.**  
\* Les fils rouge et noir sont-ils raccordés correctement?
- **L'appareil ne peut pas être mise sous tension.**  
\* Le fil jaune est-elle raccordée?
- **Aucune image n'apparaît sur l'écran.**  
\* Le câble vidéo est-il bien branché ?
- **Aucun son ne sort.**  
\* Le câble vidéo est-il bien branché ?

## PROBLEMEN OPLOSSEN

- **De zekering brandt door.**  
\* Zijn de rode en zwarte kabels goed aangesloten?
- **De stroom kan niet worden ingeschakeld.**  
\* Is de gele kabel aangesloten?
- **Er is geen beeld op het scherm.**  
\* Is de videokabel goed aangesloten?
- **Er is geen geluid te horen.**  
\* Is de audiokabel goed aangesloten?



## INSTALLATION

- The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC IN-CAR ENTERTAINMENT or a company supplying kits.

## EINBAU

- Die folgende Abbildung zeigt einen typischen Einbau. Dennoch müssen Sie entsprechend Ihrem jeweiligen Auto Anpassungen vornehmen. Bei irgendwelchen Fragen oder wenn Sie Informationen hinsichtlich des Einbausatzes brauchen, wenden Sie sich an ihren JVC Autoradiohändler oder ein Unternehmen das diese Einbausätze vertreibt.

## INSTALLATION

- L'illustration suivante est un exemple d'installation typique. Cependant, vous devez faire les ajustements correspondant à votre voiture particulière. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

## INSTALLATIE

- Op de volgende afbeelding kunt u zien hoe de installatie, normaal gesproken, in zijn werk gaat. U moet echter bij de installatie rekening houden met de bijzonderheden van uw eigen auto. Neem bij vragen of voor meer bijzonderheden over inbouwpakketten contact op met uw JVC car audio dealer of een dealer of een bedrijf dat inbouwpakketten levert.

### Recommended installation: Installing the unit under the passenger's seat

To avoid internal heat buildup inside the unit, do not attach it under a floor mat.

- 1 Attach the mounting brackets to the main unit.
- 2 Drill 4 holes where you want to attach the main unit.
  - Be careful not to damage the wiring or parts under the floor.

Then, fix the main unit using the tapping screws.

**Note:** When installing the monitor's controller unit, do not place it on KV-DV7.

### Empfohlener Einbau: Einbau des Geräts unter dem Beifahrersitz

Damit es zu keinem Hitzeaufbau im Gerät kommt, darf es nicht unter einer Bodenmatte angebracht werden.

- 1 Die Haltewinkel am Hauptgerät anbringen.
- 2 Dort 4 Löcher bohren, wo das Hauptgerät angebracht werden soll.
  - Darauf achten, dass keine Kabel oder andere Teile unter dem Boden dabei beschädigt werden.

Befestigen Sie das Hauptgerät anschließend mit den Blechschrauben.

**Hinweis:** Wenn Sie die Steuereinheit des Monitors installieren, bringen Sie sie nicht auf dem KV-DV7 an.

### Installation recommandée: Installation de l'appareil sous le siège du passager avant

Pour éviter toute accumulation de chaleur à l'intérieur de cet appareil, ne le fixez pas sous un tapis de plancher.

- 1 Fixez les ferrures de montage sur l'appareil principal.
- 2 Percez 4 trous à l'emplacement où vous souhaitez fixer l'appareil principal.
  - Faites très attention de ne pas endommager le câblage ou les composants qui se trouvent sous le plancher.

Ensuite, fixez l'appareil principal à l'aide des vis auto-taraudeuses.

**Remarque:** Lors de l'installation du contrôleur de moniteur, ne le placez pas sur le KV-DV7.



### Aanbevolen installatie: Installeer de eenheid onder de stoel van de bijrijder

Om warmteontwikkeling in de eenheid te voorkomen, wordt afgeraden de eenheid onder de vloermat te installeren.

- 1 Maak de bevestigingsbeugels op de hoofdeenheid vast.
- 2 Maak 4 gaatjes op de plaats waar u de hoofdeenheid wilt installeren.
  - Let erop dat u geen draden of onderdelen onder de vloer raakt.

Bevestig de hoofdeenheid vervolgens met behulp van de tapschroeven.

**Opmerking:** Let er bij het plaatsen van de controller-eenheid voor de monitor op dat u deze niet op de KV-DV7 plaatst.

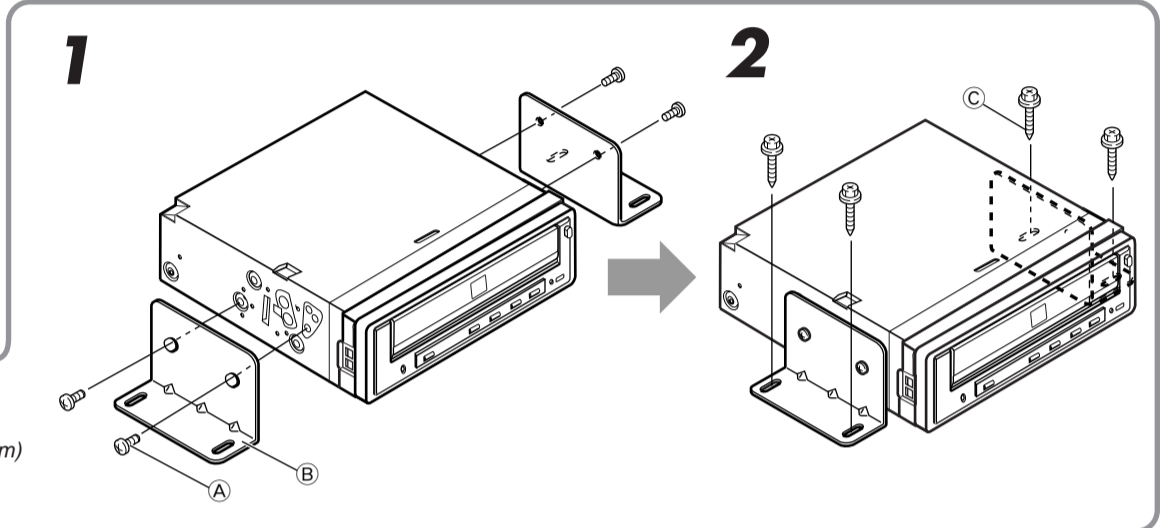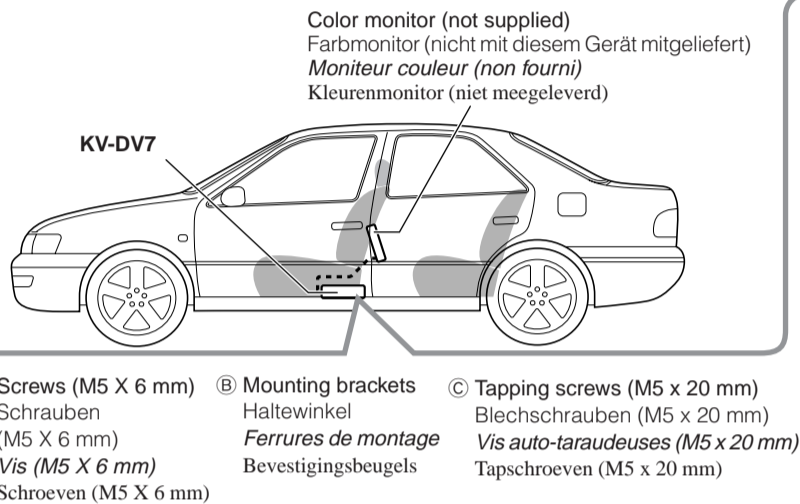

### When installing the unit into the dashboard

- 1 Attach the trim plate.
- 2 Install the sleeve into the dashboard.
  - \* After the sleeve is correctly installed into the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.
- 3 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.
- 4 Do the required electrical connections.
- 5 Slide the unit into the sleeve until it is locked by pressing the four corners of the trim plate.

### Wenn das Gerät im Armaturenbrett eingebaut werden soll


- 1 Befestigen Sie die Frontrahmen.
- 2 Die Halterung im Armaturenbrett einbauen.
  - \* Nach dem korrekten Einbau der Halterung im Armaturenbrett, die entsprechenden Riegel umknicken, um die Halterung an ihrem Platz zu sichern, siehe Abbildung.
- 3 Die Befestigungsschraube an der Rückseite des Gerätekörpers befestigen und das Ende der Schraube mit einem Gummipuffer abdecken.
- 4 Nehmen Sie die erforderlichen elektrischen Anschlüsse vor.
- 5 Schieben Sie das Gerät in die Halterung. Das Gerät wird verriegelt, indem Sie auf die vier Ecken des Frontrahmen drücken.

### En cas d'installation de cet appareil sur le tableau de bord

- 1 Fixez la plaque d'assemblage.
- 2 Installer le manchon dans le tableau de bord.
  - \* Après installation correcte du manchon dans le tableau de bord, plier les bonnes pattes pour maintenir fermement le manchon en place, comme montré.
- 3 Monter le boulon de montage sur l'arrière du corps de l'appareil puis passer l'amortisseur en caoutchouc sur l'extrémité du boulon.
- 4 Réalisez les connexions électriques.
- 5 Faites glisser l'appareil dans le manchon jusqu'à ce qu'il soit verrouillé en appuyant sur les quatre coins de la plaque d'assemblage.

### Als u de eenheid in het dashboard installeert

- 1 Bevestig de verstelbare plaat.
- 2 Installeer het huis in het dashboard.
  - \* Nadat het huis op de juiste wijze in het dashboard is geplaatst, moet u de palletjes, zoals afgebeeld, stevig op hun plaats duwen.
- 3 Maak de bevestigingsbout aan de achterkant van het apparaat vast en plaats de rubberdop over het uiteinde van de bout.
- 4 Breng de vereiste elektrische verbindingen tot stand.
- 5 Wanneer u de eenheid in de ombouw schuift, kunt u deze vastzetten door op de vier hoeken van de bevestigingsplaten te drukken.

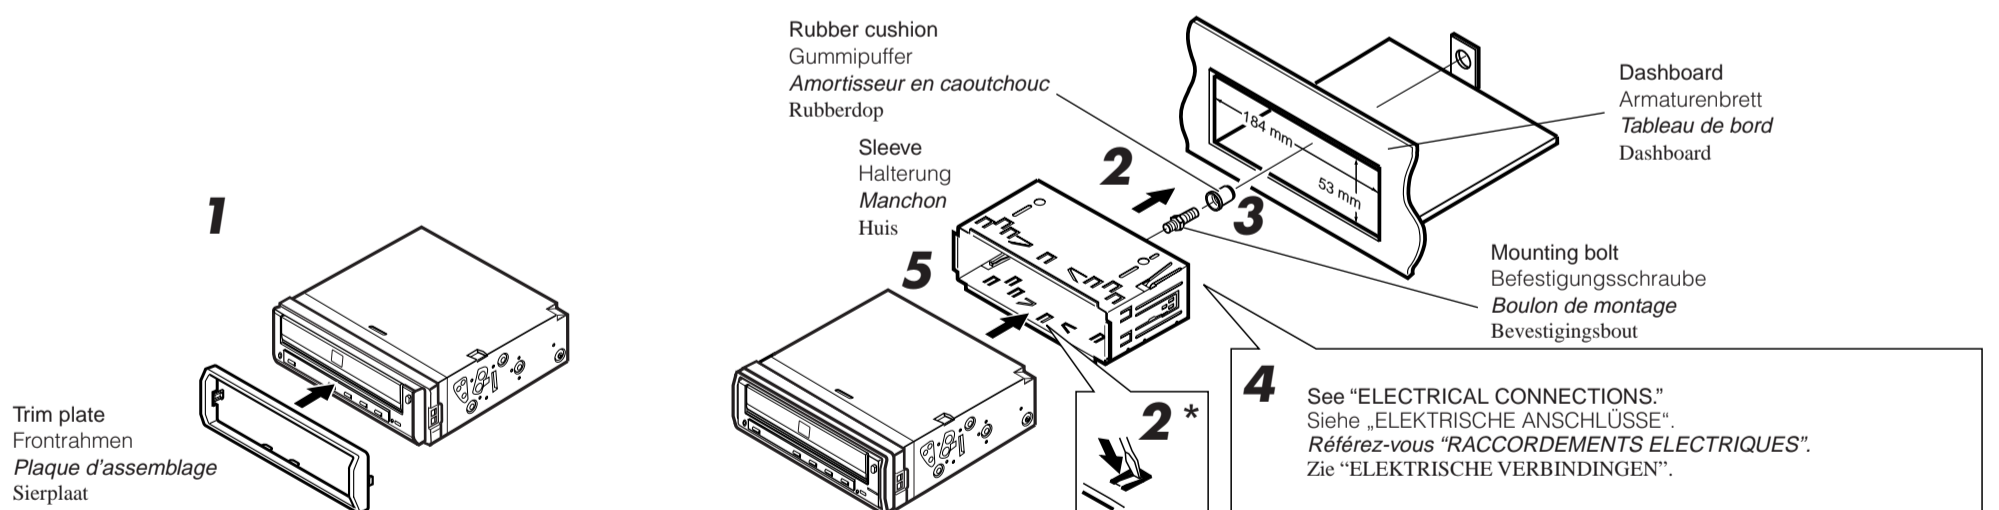

### Removing the unit

- Before removing the unit, release the rear section.
- 1 Remove the trim plate.
  - 2 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. **(Be sure to keep the handles for future use.)**

### Ausbau des Geräts



- Vor dem Ausbau des Geräts den hinteren Teil freigeben.
- 1 Den Frontrahmen abnehmen.
  - 2 Die 2 Griffe in die Schlitzte wie gezeigt stecken. Dann die Griffe behutsam auseinander ziehen und das Gerät herausziehen. **(Die Griffe nach dem Einbau für späteren Gebrauch aufbewahren.)**

### Retrait de l'appareil

- Avant de retirer l'appareil, libérer la section arrière.
- 1 Retirer la plaque d'assemblage.
  - 2 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. **(S'assurer de conserver les poignées pour une utilisation ultérieure.)**


### Extracción de la unidad

- Antes de extraer la unidad, libere la sección trasera.
- 1 Retire la placa de guarnición.
  - 2 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe gentilmente las manijas y extraiga la unidad. **(Asegúrese de conservar las manijas voor als u deze in de toekomst nodig hebt.)**

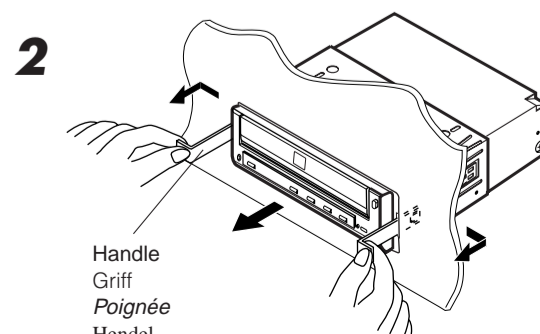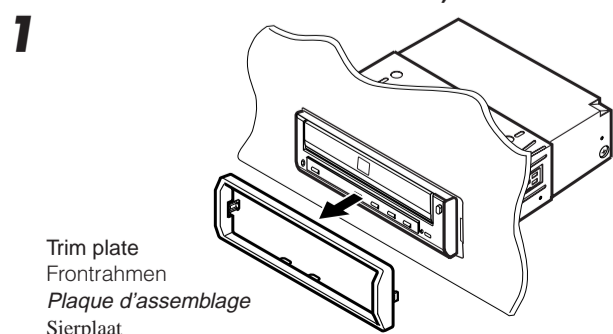




- When using the optional stay
- Beim Verwenden der Anker-Option
- Lors de l'utilisation du hauban en option
- Wanneer u de steun gebruikt (facultatief)

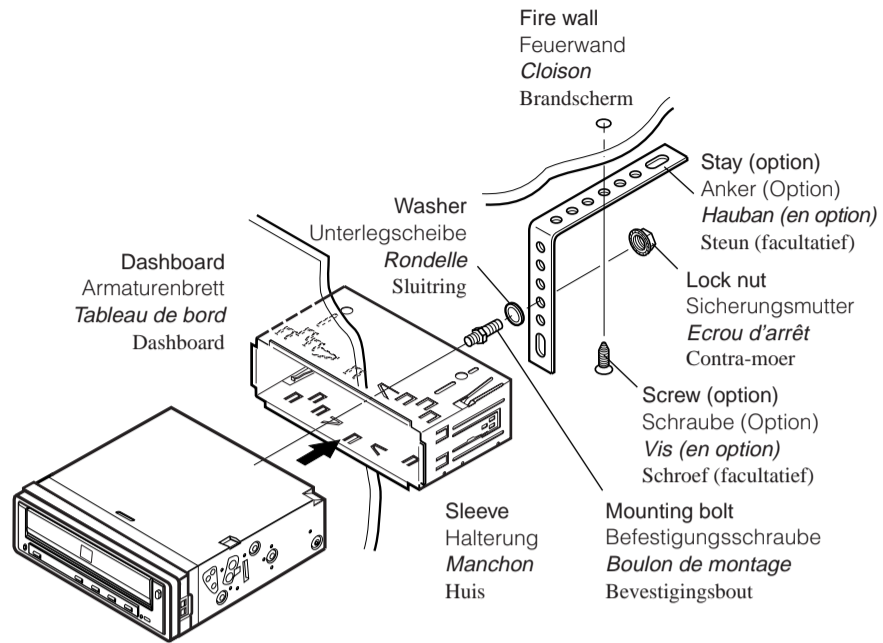

- When installing the unit with the car receiver in the dashboard
  - Wenn das Gerät mit dem Empfänger im Armaturenbrett eingebaut werden soll
  - En cas d'installation de cet appareil avec le récepteur mobile implanté sur le tableau de bord
  - Als u de eenheid samen met de auto-ontvanger in het dashboard wilt installeren
- In a Toyota for example, install the unit together with the car receiver.  
 Beispiel: In einem Toyota das Gerät zusammen mit dem Empfänger einbauen.  
 Dans une Toyota, par exemple, installez cet appareil avec le récepteur automobile.  
 De eenheid kan bijvoorbeeld in een Toyota samen met de auto-ontvanger worden geïnstalleerd.

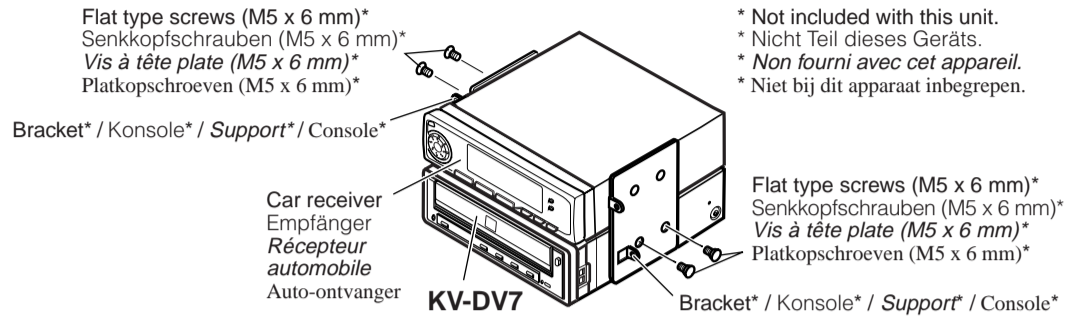

**Note:** When installing the unit on the mounting brackets, make sure to use the 6 mm-long screws. If longer screws are used, they could damage the unit.  
**Hinweis:** Beim Anbringen des Gerät an der Konsole sicherstellen, daß 6 mm lange Schrauben verwendet werden. Werden längere Schrauben verwendet, können sie das Gerät beschädigen.  
**Remarque:** Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 6 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.  
**Opmerking:** Wanneer u het apparaat aan de bevestigingsklem vastmaakt, moet u de 6 mm lange schroeven gebruiken. Als u langere schroeven gebruikt, kan het apparaat worden beschadigd.

**ELECTRICAL CONNECTIONS**

**ELEKTRISCHE ANSCHLÜSSE**

**RACCORDEMENTS ELECTRIQUES**

**ELEKTRISCHE VERBINDINGEN**

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

Zur Vermeidung von Kurzschlüssen empfehlen wir, daß Sie den negativen Batterieanschluß abtrennen und alle elektrischen Anschlüsse herstellen, bevor das Gerät eingebaut wird. Sind Sie sich über den richtigen Einbau des Geräts nicht sicher, lassen Sie es von einem qualifizierten Techniker einbauen.

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

Om kortsluiting te voorkomen adviseren wij u om de minpool van de accu los te maken en alle elektrische verbindingen tot stand te brengen voordat u het apparaat in de auto installeert. Als u niet zeker weet hoe u dit apparaat moet installeren, kunt u dit beter door een daartoe gekwalificeerde technicus laten doen.

**Note:** This unit is designed to operate on 12 V DC, **NEGATIVE ground electrical systems.** If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC IN-CAR ENTERTAINMENT.

**Hinweis:** Dieses Gerät ist für den Betrieb in **elektrischen Anlagen mit 12 V Gleichstrom und (-) Erdung** ausgelegt. Verfügt Ihr Fahrzeug nicht über diese Anlage, ist ein Spannungsinverter erforderlich, der bei JVC Autoradiohändler erworben werden kann.

**Remarque:** Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 V à masse **NEGATIVE.** Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

**Opmerking:** Dit apparaat mag worden gebruikt bij elektrische systemen die werken op 12 V **gelijkstroom met negatieve aarding.** Als uw auto niet is uitgerust met een dergelijk systeem, is een spanningsomzetter vereist. Dit instrument kan worden aangeschaft bij JVC car audio dealers.

- Replace the fuse with one of the specified ratings. If the fuse blows frequently, consult your JVC IN-CAR ENTERTAINMENT.
- If noise is a problem... This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's rear ground terminal (see connection diagram) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC IN-CAR ENTERTAINMENT.

- Die Sicherung mit einer der entsprechenden Nennleistung ersetzen. Brennt die Sicherung häufig durch, wenden Sie sich an ihren JVC Autoradiohändler.
- Sind Störgeräusche ein Problem... Dieses Gerät enthält ein Störfilter im Stromkreis. Bei manchen Fahrzeugen kann jedoch ein Klicken oder andere unerwünschte Störgeräusche auftreten. Sollte das der Fall sein, die hintere Erdungsanschlussklemme (siehe Schaltplan) des Geräts am Fahrwerk des Fahrzeugs anschließen, dabei kürzere und dickere Kabel wie beispielsweise Kupfergeflecht oder Stahldraht verwenden. Bleibt Störgeräusch bestehen, wenden Sie sich an Ihren JVC Autoradiohändler.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème... Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la borne arrière de masse de l'appareil au châssis de la voiture (voir le schéma de raccordement) en utilisant des cordons les plus gros et les plus courts possible. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.

- Vervang de zekering door een exemplaar met het aangegeven vermogen. Als de zekering vaak doorslaat, moet u uw JVC car audio dealer raadplegen.
- Als u geluidsproblemen hebt... De krachtschakeling van dit apparaat heeft een ingebouwd geluidsfilter. In sommige voertuigen zijn tikgeluiden of andere ongewenste geluiden te horen. Als dit gebeurt, moet u de massaklem aan de achterkant (zie aansluitingsschema) aan het chassis van de auto vastmaken met behulp van een kortere en dikkere kabel, zoals kopermanteldraad of tellerkabel. Als het geluid niet verdwijnt, moet u contact opnemen met uw JVC car audio dealer.

**Typical Connections / Typische Anschlüsse / Raccordements typiques / Normale verbindingen**

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.

**Vor dem Anschließen:** Die Verdrahtung im Fahrzeug sorgfältig überprüfen. Falsche Anschlüsse können ernsthafte Schäden am Gerät hervorrufen.

**Avant de commencer la connexion:** vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil.

**Alvorens de verbindingen tot stand te brengen:** moet u de bedrading in de auto zorgvuldig. Het apparaat kan door verkeerde verbindingen ernstige schade oplopen.


- 1 Connect the colored leads of the power cord in the following sequence.
  - ① Black: ground
  - ② Yellow: to car battery (constant 12 V)
  - ③ Red: to an accessory terminal in the fuse block or to the remote control lead of JVC car receiver
- 2 Finally connect the wiring harness to the unit.

- 1 Schließen Sie die farbigen Kabel des Spannungsversorgungskabels in der folgenden Reihenfolge an.
  - ① Schwarz: an Erde
  - ② Gelb: an die Autobatterie (12 V Gleichstrom)
  - ③ Rot: an einem Zusatzgeräteanschluß im Sicherungsblock oder am Fernbedienungsleiter des JVC-Empfängers im Fahrzeug
- 2 Schließen Sie zum Schluß den Kabelbaum an das Gerät an.

- 1 Connectez les fils de couleur du cordon d'alimentation dans l'ordre suivant.
  - ① Noir: à la masse
  - ② Jaune: à la batterie de la voiture (12 V constant)
  - ③ Rouge: sur une borne d'accessoire du porte-fusible ou sur le conducteur de la télécommande du récepteur automobile JVC
- 2 Finalement, connectez le faisceau de fils à l'appareil.

- 1 Sluit de gekleurde draden van de stroomkabel in deze volgorde aan.
  - ① Zwart: aarde
  - ② Geel: naar de accu van de auto (constant 12 V)
  - ③ Rood: naar de uitgang van een accessoire in het zekeringenblok of naar de kabel van de afstandsbediening van een auto-ontvanger van JVC
- 2 Sluit tot slot de bedrading naar de eenheid aan.


Rear ground terminal / Hintere Erdungsanschlussklemme / Borne arrière de masse / Massaklem aan achterkant

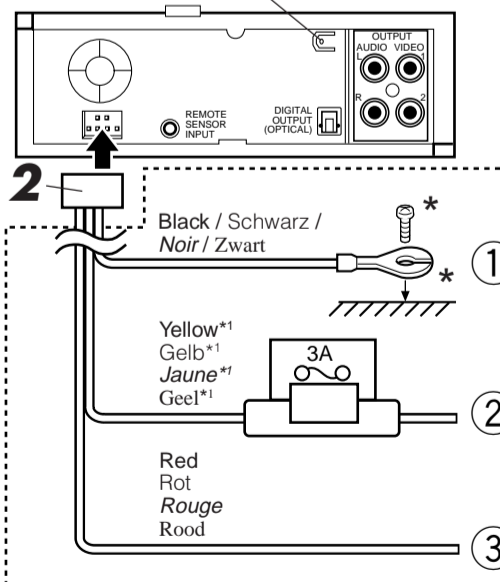

- 1 Before checking the operation of this unit prior to installation, this lead must be connected, otherwise power cannot be turned on. **Do connect the fuse (3A) when you need to shorten this lead.**
- 1: Vor der Überprüfung der Funktionsfähigkeit des Geräts vor dem Einbau, muß diese Leitung angeschlossen werden, da sonst die Stromversorgung nicht eingeschaltet werden kann. **Setzen Sie unbedingt die Sicherung (3 A) ein, wenn Sie dieses Kabel verkürzen müssen.**
- 1: Pour vérifier le fonctionnement de cet appareil avant installation, ce fil doit être raccorder, sinon l'appareil ne peut pas être mis sous tension. **Vous devez brancher le fusible (3 A) lorsqu'il vous faut raccourcir ce fil.**
- 1: Voordat u controleert of het apparaat werkt (alvorens het te installeren), moet deze draad aangesloten zijn. Als dit niet het geval is, kan de stroom niet worden ingeschakeld. **Sluit de zekering (3 A) aan als u besluit de kabel in te korten.**

- ① To metallic body or chassis of the car  
Zur Metallkarosserie oder zum Fahrwerk des Fahrzeugs  
Vers corps métallique ou châssis du véhicule  
Naar de metalen ombouw of chassis van de auto
- ② To a live terminal in the fuse block connecting to the car battery (bypassing the ignition switch)  
Zu einem stromführenden Anschluß im Sicherungsblock, der an die Autobatterie angeschlossen ist (Umgehen des Zündschalters)  
À une borne sous tension du porte-fusible connectée à la batterie de la voiture (en dérivant l'interrupteur d'allumage)  
Naar een aansluiting in het zekeringenblok die op de accu is aangesloten (waarbij de ontsteking wordt omzeilt)
- ③ To an accessory terminal in the fuse block or to the remote control lead of JVC car receiver.  
Zu einem Zusatzgeräteanschluß im Sicherungsblock oder zum Fernbedienungskabel des JVC-Empfängers im Fahrzeug.  
Sur une borne d'accessoire du porte-fusible ou sur le conducteur de la télécommande du récepteur automobile JVC.  
Naar de uitgang van een accessoire in het zekeringenblok of naar de kabel van de afstandsbediening van een auto-ontvanger van JVC.

- \* Not included with this unit. Wird nicht mit Gerät mitgeliefert. Non fourni avec cet appareil. Niet bij het apparaat inbegrepen.

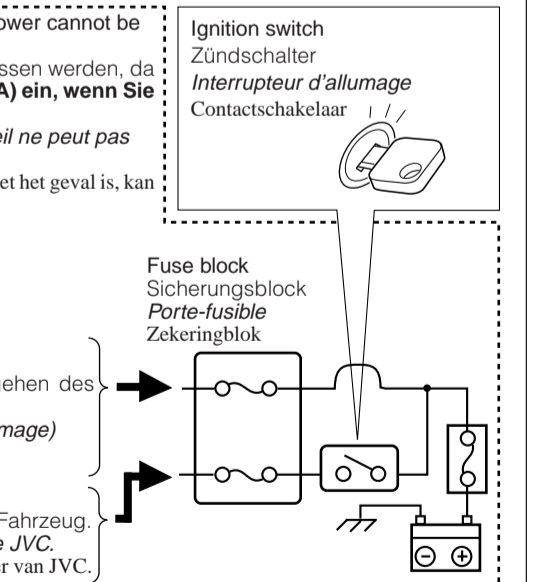


**Connecting the leads / Anschließen der Leitungen / Raccordement des fils / Aansluiting van de gekleurde draden**

Twist the core wires when connecting. Die Kerndrähte beim Anschließen verdrehen. Torsader les âmes des fils en les raccordant. Draai de kerndraden om elkaar heen wanneer u ze wilt aansluiten.

Solder the core wires to connect them securely. Die Kerndrähte anlöten, um sie fest anzuschließen. Souder les âmes des fils pour les raccorder entre eux de façon sûre. Soldeer de kerndraden zodat ze stevig vast zitten.

**CAUTION / VORSICHT / PRECAUTION / LET OP!:**

 - To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Zur Vermeidung eines Kurzschlusses die Anschlußklemmen der NICHT VERWENDETEN Leitungen mit Isolierklebeband umwickeln.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante.
- Om kortsluiting te voorkomen, moet u de aansluitklemmen van ONGEBRUIKTE gekleurde draden met isolatieband bedekken.





## CONNECTING THE EXTERNAL COMPONENTS

The following diagram shows the connection with JVC's color monitor KV-M700, as an example.

- For connecting other devices, refer also to the manuals supplied with them.

About sounds reproduced through the rear terminals

### Through AUDIO (L/R):

Analog stereo signals are output.

When playing a source encoded with Dolby Digital\* (Dolby Digital) or with MPEG Audio, multichannel signals are mixed to the left and right front channel signals, then output.

– You cannot reproduce the sound encoded with DTS Digital Surround\*\* (DTS).

### Through DIGITAL OUT:

Digital signals (Linear PCM, Dolby Digital, DTS Digital Surround) are output through this terminal. (For more details, see page 35 on the Instructions.)

To reproduce the multichannel sounds such as Dolby Digital and DTS Digital Surround, connect an amplifier or a decoder compatible with these multichannel sources to this terminal, and set "DIGITAL OUT" correctly (see page 22 of the Instructions.)

– When playing a source encoded with MPEG Audio, multichannel signals are mixed to the left and right front channel signals, then output.

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992–1997 Dolby Laboratories. All rights reserved.

\*\* Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. "DTS" is a registered trademark of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

## ANSCHLIESSEN EXTERNER KOMponentEN

Das folgende Diagramm zeigt die Anschlüsse beim JVC Farbmonitor KV-M700 als ein Beispiel.

- Zum Anschließen anderer Geräte siehe die mit ihnen mitgelieferten Handbücher.

Über Sound, der an den hinteren Anschlüssen abgegeben wird

### Über AUDIO (L/R):

Am Ausgang steht ein Audio-Stereo-Signal an. Bei der Wiedergabe einer Quelle, die mit Dolby Digital\* (Dolby Digital) oder MPEG-Audio kodiert ist, werden Mehrkanalsignale auf die Signale der linken und rechten vorderen Kanäle gemischt und dann ausgegeben.

– Sound, der mit DTS Digital Surround\*\* (DTS) kodiert ist, kann nicht wiedergegeben werden.

### Über DIGITAL OUT:

An diesem Anschluss stehen digitale Signale an (Linear PCM, Dolby Digital, DTS Digital Surround). (Weitere Einzelheiten siehe Seite 35 in der Bedienungsanleitung.)

Um den Mehrkanal-Sound wie Dolby Digital und DTS Digital Surround wiederzugeben, müssen Sie einen mit diesen Mehrkanal-Quellen kompatiblen Verstärker oder Decoder an diesen Ausgang anschließen und „DIGITAL OUT“ richtig einstellen (siehe Seite 22 in der Bedienungsanleitung).

– Bei der Wiedergabe einer Quelle, die mit MPEG-Audio kodiert ist, werden Mehrkanalsignale auf die Signale der linken und rechten vorderen Kanäle gemischt und dann ausgegeben.

\* In Lizenz von Dolby Laboratories hergestellt. „Dolby“ und das Doppel-D-Symbol sind Warenzeichen der Dolby Laboratories. Vertrauliche, unveröffentlichte Schriften. ©1992–1997 Dolby Laboratories. Alle Rechte vorbehalten.

\*\* Hergestellt unter einer Lizenz von Digital Theater Systems, Inc. US-Patent Nr. 5.451.942, 5.956.674, 5.974.380, 5.978.762. Weitere weltweite Patente sind erteilt bzw. angemeldet. „DTS“ ist ein eingetragenes Warenzeichen von Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. Alle Rechte vorbehalten.

## CONNEXION DES APPAREILS EXTERIEURS

Le schéma suivant montre à titre d'exemple la connexion avec le moniteur couleurs KV-M700 de JVC.

- Pour le raccordement d'autres appareils, consultez également les manuels qui les accompagnent.

Quelques renseignements sur les sons reproduits par les bornes arrière

### Par le biais de la sortie AUDIO (L/R):

Production de signaux analogiques en stéréo. Lorsque vous écoutez une source à sons codés en Dolby Digital\* (Dolby Digital) ou sous le format MPEG Audio, les signaux provenant de canaux multiples se mélangent aux signaux des canaux avant gauche et droit, avant d'être transmis.

– Vous ne pouvez pas reproduire le son codé en DTS Digital Surround\*\* (DTS).

### Par le biais de la sortie DIGITAL OUT:

Les signaux numériques (linéaires à modulation codée d'impulsions, en Dolby Digital et en DTS Digital Surround) sortent par cette borne. (Pour de plus amples détails, consultez la page 35 de ce manuel d'instructions.)

Pour reproduire les sons à canaux multiples comme, par exemple, en Dolby Digital et en DTS Digital Surround, branchez un amplificateur ou décodeur compatible avec ces sources à canaux multiples sur cette prise puis programmez correctement la sortie "DIGITAL OUT" (consultez la page 22 de ce manuel d'instructions).

– Lorsque vous écoutez une source codée en MPEG Audio, les signaux provenant de canaux multiples se mélangent aux signaux des canaux avant gauche et droit, avant d'être transmis.

\* Fabriqué sous licence de Dolby Laboratories. "Dolby" et le symbole double D sont des marques de commerce de Dolby Laboratories. Œuvres confidentielles non publiées. ©1992–1997 Dolby Laboratories. Tous droits réservés.

\*\* Fabriqué sous licence de Digital Theater Systems, Inc. No de brevet aux Etats-Unis 5.451.942, 5.956.674, 5.974.380, 5.978.762 et brevets mondiaux émis ou en cours d'homologation. "DTS" est une marque de fabrique de Digital Theater Systems, Inc. Copyright 1996, 2000. Digital Theater Systems, Inc. Tous droits réservés.

## DE EXTERNE ONDERDELEN AANSLUITEN

De volgende illustratie geeft bij wijze van voorbeeld de aansluiting naar de KV-M700-kleurenmonitor van JVC weer.

- Raadpleeg voor het aansluiten van andere apparaten de handleidingen van de desbetreffende apparaten.

Over geluid dat via de aansluitpunten aan de achterzijde wordt gereproduceerd

### Via AUDIO (L/R):

Er worden analoge stereosignalen gereproduceerd. Als u een afspeler afspeelt die is gecodeerd met Dolby Digital\* (Dolby Digital) of met MPEG-audio worden de multichannel-signalen gemengd met de signalen van het rechter- en linkerkanaal en daarna uitgevoerd.

– Het is niet mogelijk om geluid te reproduceren dat met DTS Digital Surround\*\* (DTS).


### Through DIGITAL OUT:

Digitale signalen (Linear PCM, Dolby Digital, DTS Digital Surround) worden via deze uitgang uitgevoerd. (Zie pagina 35 van de Instructies voor meer informatie.) Als u multichannel-signalen zoals Dolby Digital en DTS Digital Surround wilt reproduceren, moet u een versterker of decoder die compatibel is met deze multichannel-bronnen op deze aansluitpunten aansluiten en de juiste instelling voor "DIGITAL OUT" kiezen (zie pagina 22 van de Instructies).

– Als u een afspeler afspeelt die met MPEG-audio is gecodeerd, worden de multichannel-signalen gemengd met de signalen van het rechter- en linkerkanaal, en daarna uitgevoerd.

\* Vervaardigd in licentie van Dolby Laboratories. "Dolby" en het dubbel D-symbool zijn handelsmerken van Dolby Laboratories. Vertrouwelijk ongepubliceerd materiaal. ©1992–1997 Dolby Laboratories. Alle rechten voorbehouden.

\*\* Vervaardigd onder licentie van Digital Theater Systems, Inc. US-patentnummer 5.451.942, 5.956.674, 5.974.380, 5.978.762 en andere wereldwijde patenten zijn verleend of aangevraagd. DTS is een geregistreerd handelsmerk van Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. Alle rechten voorbehouden.

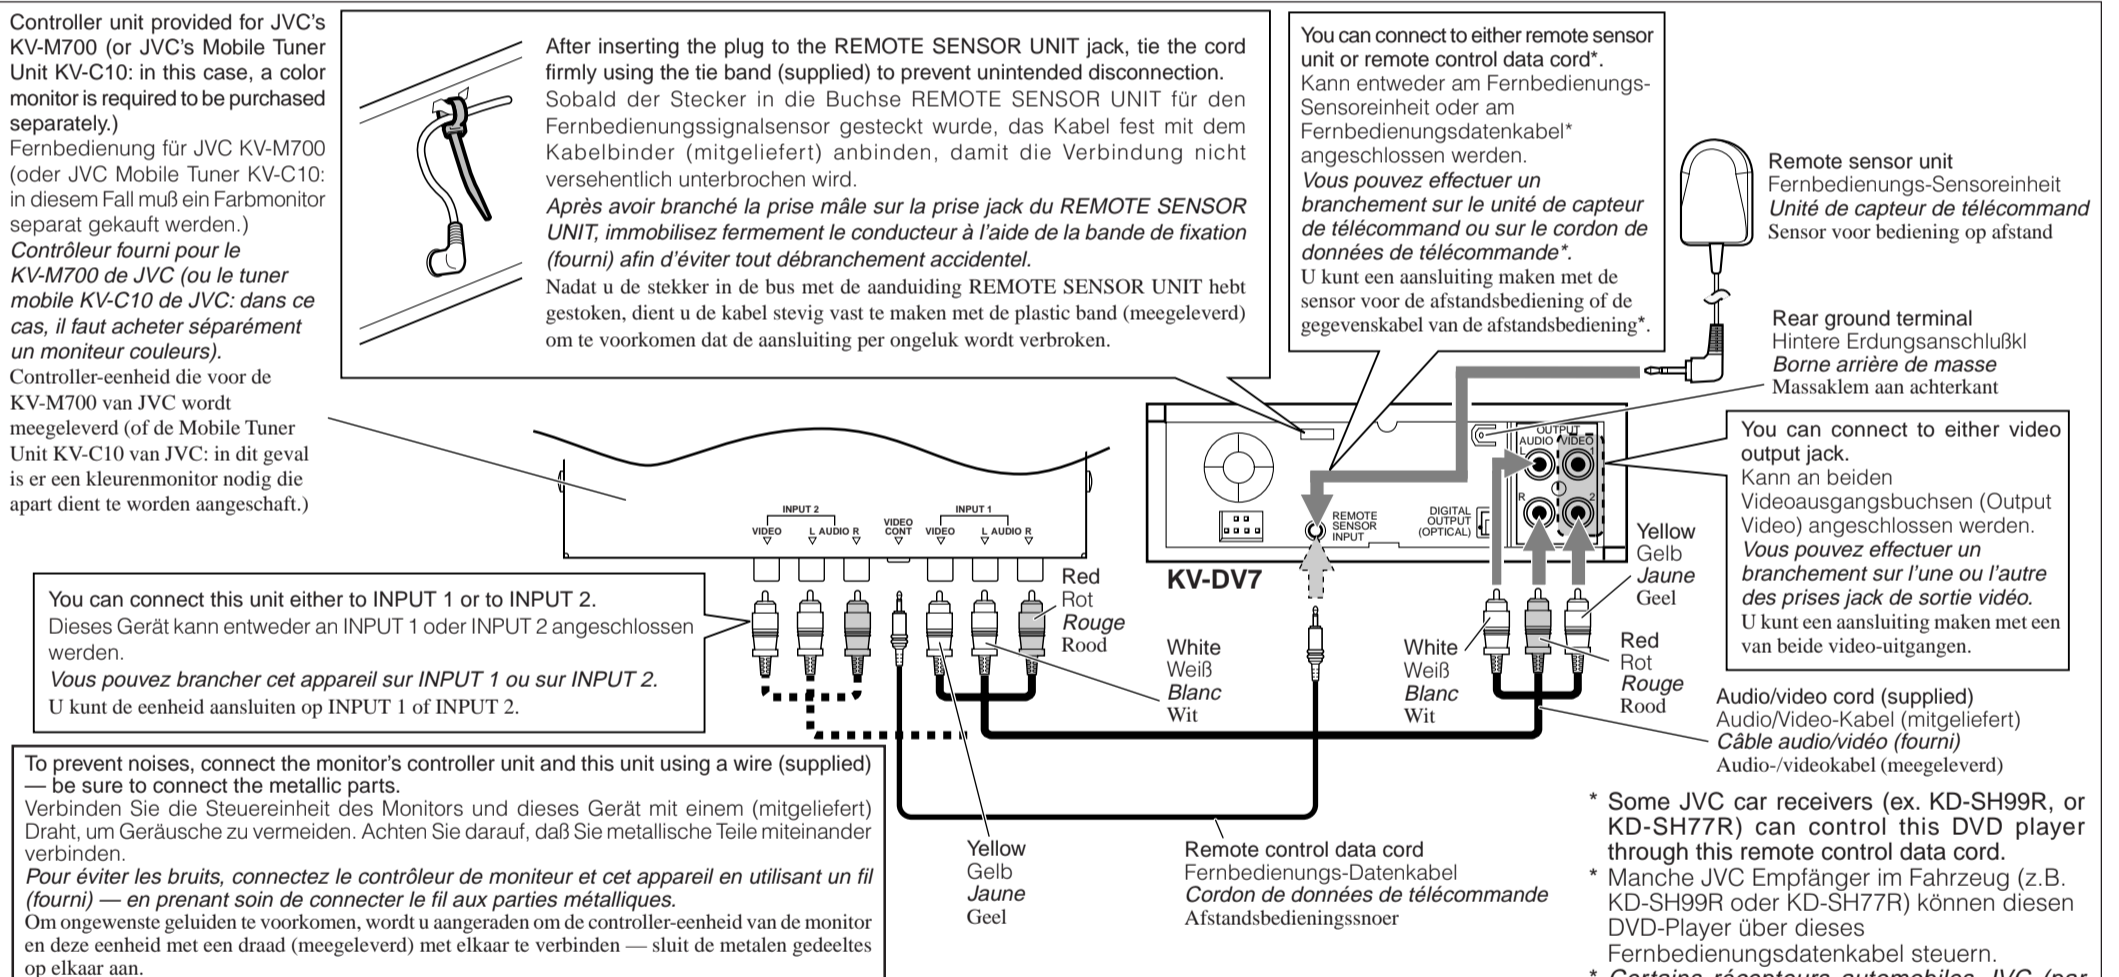

### How to install the remote control unit

- When installing the remote control unit, avoid any area subject to direct sunlight. Select an area where the remote sensor unit can receive remote signals through its front face.
- Before fixing the velcro tape, make sure the remote control unit functions properly, placing it at the selected position.
- Wipe clean the selected area on the dashboard, etc. sufficiently, and after removing the protective sheet from the velcro tape, fix the remote sensor unit to the dashboard, etc. firmly.

### Einbau des Fernbedienungsempfängers

- Beim Einbau der Fernbedienung darauf achten, dass sie nicht von direktem Sonnenlicht bestrahlt werden kann. Einen Anbringungsort auswählen, wo der Fernbedienungs-Sensoreinheit die Signale über seine Frontblende empfangen kann.
- Sicherstellen, dass die Fernbedienung richtig funktioniert, wenn sie an ihrem künftigen Anbringungsort liegt, bevor das Klebband angebracht wird.
- Den ausgewählten Anbringungsort am Armaturenbrett usw. gründlich sauber wischen. Die Schutzfolie vom Klebband abziehen und den Fernbedienungs-Sensoreinheit fest am Armaturenbrett usw. anbringen.

### Mode d'installation de la télécommande

- Lors de l'installation de la télécommande, évitez toute zone qui est soumise aux rayons directs du soleil. Choisissez un endroit où la télécommande peut recevoir des signaux à distance par le biais de sa face avant.
- Avant de fixer la bande Velcro, vérifiez que la télécommande fonctionne correctement en la plaçant à l'emplacement choisi.
- Essuyez la zone sélectionnée sur le tableau de bord, etc., de façon suffisante puis, après avoir retiré la feuille de protection de la bande Velcro, fixez l'unité de capteur de télécommande fermement sur le tableau de bord, etc.



### To enjoy the original 5.1 channel sounds encoded with Dolby Digital or with DTS Digital Surround


Audio/video control amplifier or the decoder compatible with the multichannel digital sources  
Audio/Video-Verstärker oder Decoder kompatibel mit Mehrkanal-Digitalquellen  
Amplificateur de commande audio/vidéo ou décodeur compatible avec les sources numériques à canaux multiples  
Audio-/video-versterker of decoder die compatibel is met de digitale multikanaalbronnen

### Zum Genießen des Original-5,1-Kanaltons kodiert in Dolby Digital mit DTS Digital Surround

Digital optical cable (not supplied)  
Digitales optisches Kabel (nicht mit diesem Gerät mitgeliefert)  
Câble optique numérique (non fourni)  
Optische digitale kabel (niet meegeleverd)

### Pour profiter des sons d'origine sur 5,1 canaux codés en Dolby Digital ou en DTS Digital Surround

Genieten van de oorspronkelijke 5,1-kanaals geluiden die met Dolby Digital of met DTS Digital Surround zijn gecodeerd

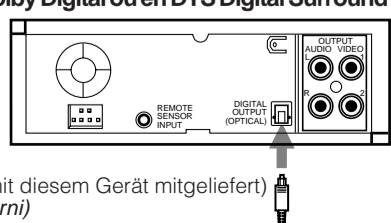

# JVC



ENGLISH

DEUTSCH

FRANÇAIS

NEDERLANDS

## DVD/CD PLAYER DVD-/CD-SPIELER LECTEUR DVD/CD DVD/CD SPELER

# KV-DV7



For installation and connections, refer to the separate manual.

Angaben zu Einbau und Verkabelung entnehmen Sie bitte der gesonderten Anleitung.

Pour l'installation et les raccordements, se référer au manuel séparé.

Zie de afzonderlijke handleiding voor details aangaande het installeren en verbinden van het toestel.

## INSTRUCTIONS

BEDIENUNGSANLEITUNG  
MANUEL D'INSTRUCTIONS  
GEBRUIKSAANWIJZING

### For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_


Serial No. \_\_\_\_\_

LVT0631-001A

[E]

# Position And Reproduction Of Labels

Bottom panel of the main unit

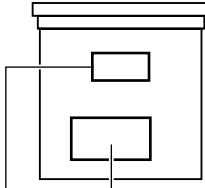

Name/Rating plate



Caution:

This product contains a laser component of higher laser class than Class 1.

Warning label, placed inside the unit

<b>CAUTION:</b> Invisible laser radiation when open and interlock failed or defeated. <b>AVOID DIRECT EXPOSURE TO BEAM.</b>	<b>ADVARSEL:</b> Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå direkte udsættelse for stråling. (e)	<b>VARNING:</b> Osynlig laserstråling når denne del er åben og spærren er afkoblet. Betragt ej strålen. (d)	<b>VARO:</b> Avattaessa ja suojauslaitteiden ohittettävissä olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)
---	---	---	--

## WARNINGS

- **DO NOT** install any unit in locations where;
  - it may obstruct the steering wheel and gearshift lever operations, as this may result in a traffic accident.
  - it may obstruct the operation of safety devices such as air bags, as this may result in a fatal accident.
  - it may obstruct visibility.
- **DO NOT** operate any unit while manipulating the steering wheel, as this may result in a traffic accident.
- The driver must not watch the monitor while driving.
  - If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.
- **DO NOT** use the headphones while driving. It is dangerous to shut off the outside sounds while driving.
- If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.

## IMPORTANT FOR LASER PRODUCTS

### Precautions:

#### 1. CLASS 1 LASER PRODUCT

1. **CAUTION:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
2. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
3. **CAUTION:** This DVD/CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading discs. It is dangerous to defeat the safety switches.
4. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION: DO NOT insert a disc while the disc loading lamp is flashing or is not lit. (See page 6.)**

### Note:

For security reasons, a numbered ID card is provided with this unit, and the same ID number is imprinted on the unit's chassis. Keep the card in a safe place, as it will help the authorities to identify your unit if stolen.


## How to reset your unit

Press the reset button on the front panel using a ball-point pen or a similar tool. This will reset the built-in microcomputer.

### NOTE:

If you reset the unit during play, the playback mode selections (e.g. repeat play mode setting), you have selected for the current disc will be reset to the initial settings.

- During DVD playback, the disc menu selection will be also reset to the initial disc settings.

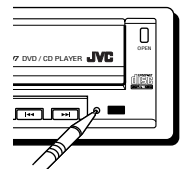



Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

# CONTENTS

How to reset your unit .....	2	<b>SPECIAL EFFECTS PLAYBACK .....</b>	<b>18</b>
<b>INTRODUCTION .....</b>	<b>4</b>	• Slow-Motion Playback .....	18
<b>PREPARATION .....</b>	<b>5</b>	• Frame-by-frame Playback .....	18
Installing the battery .....	5	• Zoom .....	19
<b>BASIC PLAYBACK .....</b>	<b>6</b>	<b>DVD SETUP MENU .....</b>	<b>20</b>
Starting playback .....	6	Setting initial audio language .....	20
• Listening with headphones .....	7	Setting initial subtitle language .....	21
Showing the on-screen bar .....	8	Setting initial disc menu language .....	22
• Checking the playing time .....	9	Setting digital audio output .....	22
<b>DVD PLAYBACK .....</b>	<b>10</b>	Setting compression .....	23
Selecting subtitles .....	10	Setting audio output during	
Selecting audio languages .....	11	Low Speed Search .....	24
Selecting multi-angle views .....	11	Setting monitor type .....	25
<b>MENU-DRIVEN PLAYBACK .....</b>	<b>12</b>	Setting closed caption .....	26
Menu operations .....	12	Changing the color of the on-screen bar ..	26
• While playing a DVD .....	12	Setting zoom preference .....	27
• While playing a VCD .....	13	<b>MAINTENANCE .....</b>	<b>29</b>
<b>SEARCH FUNCTIONS .....</b>	<b>14</b>	Handling discs .....	29
Searching for a particular point .....	14	<b>LANGUAGE CODES .....</b>	<b>30</b>
• Forward Search .....	14	<b>GLOSSARY .....</b>	<b>31</b>
• Reverse Search .....	14	<b>LOCATION OF THE BUTTONS .....</b>	<b>32</b>
Locating a particular point directly .....	15	• Remote controller .....	32
<b>REPEAT PLAYBACK .....</b>	<b>16</b>	• Control panel .....	33
Playing repeatedly .....	16	<b>TROUBLESHOOTING .....</b>	<b>34</b>
• Repeat Play .....	16	<b>SPECIFICATIONS .....</b>	<b>35</b>
• A-B Repeat .....	17		

**CAUTION on Volume Setting**

*Discs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a disc and adjust it as required during playback.*

**BEFORE USE**

**\* For safety...**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

**\* Temperature inside the car...**

*If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.*



# INTRODUCTION

ENGLISH

## About this manual

This manual mainly explains operations using the buttons on the remote control. You can also use the buttons on the control panel for the same operations if they have the similar or same marks.

### Discs you can play:

Disc Type	Mark (Logo)	Video Format	Region Code Number*
DVD Video		PAL	2 ALL
Video CD	 Video CD		—
Audio CD		—	—

- On some discs, their actual operations may be different from what is explained in this manual.
- The following discs cannot be played back;
  - DVD-Audio, DVD-ROM, DVD-RAM, DVD-R, DVD-RW, CD-ROM, CD-R, CD-RW, CD-I (CD-I Ready), Photo CD, etc.
 Playing back these discs will generate noise and damage the speakers.

#### \* Note on Region Code

DVD players and DVD Video discs have their own Region Code numbers. This unit only can play back DVD discs whose Region Code numbers include "2."

Examples:



## Disc structure – DVD, Video CD (VCD) and Audio CD (CD)


A DVD disc consists of **Titles**, and each title may be divided into some **Chapters**. (See Example 1.) For example, if a DVD disc contains some movies, each movie may have its own title number, and it may be further divided into some chapters.

On the other hand, a VCD or CD consists of **Tracks**. (See Example 2.)


In general, each song has its own track number. (On some discs, each track may also be divided by **Indexes**.)

When playing back a VCD with Playback Control (PBC) function, you can select what to view using the menu shown on the monitor. (While operating a Video CD using the menu, some of the functions such as Repeat and Track Search may not work.)

 Example 1: DVD disc




Example 2 : Video CD/Audio CD

 



Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.
- The remote signal reception lamp flashes when the unit receives a remote control signal from the remote controller.

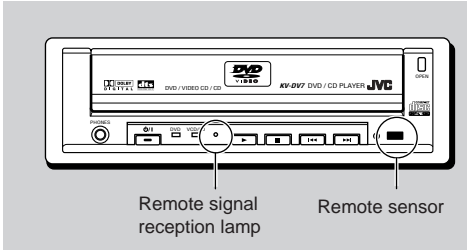

- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

**WARNING:**


- Store the batteries in a place which children cannot reach.  
*If a child accidentally swallows the batteries, immediately consult a doctor.*
- Do not recharge, short, disassemble or heat the batteries or dispose of in a fire.  
*Doing any of these things may cause the batteries to give off heat, crack or start a fire.*
- Do not leave the batteries with other metallic materials.  
*Doing this may cause the batteries to give off heat, crack or start a fire.*
- When throwing away or saving batteries, wrap in tape and insulate; otherwise, it may cause the batteries to give off heat, crack or start a fire.
- Do not poke the batteries with tweezers or similar tools.  
*Doing this may cause the batteries to give off heat, crack or start a fire.*

## Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.


### 1. Remove the battery holder.

- 1) Push out the battery holder in the direction indicated by the arrow using a ball-point pen or a similar tool.
- 2) Remove the battery holder.

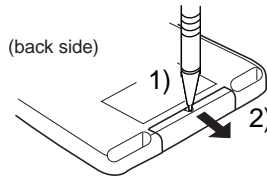


### 2. Place the battery.

Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

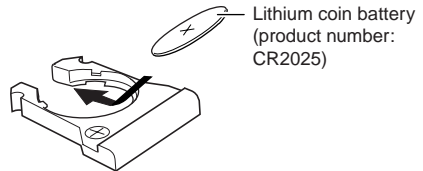

### 3. Return the battery holder.


Insert again the battery holder pushing it until you hear a clicking sound.

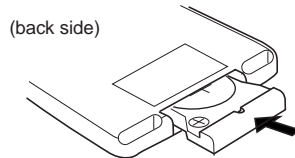



# BASIC PLAYBACK

The following marks used in this manual indicate the discs to be used.

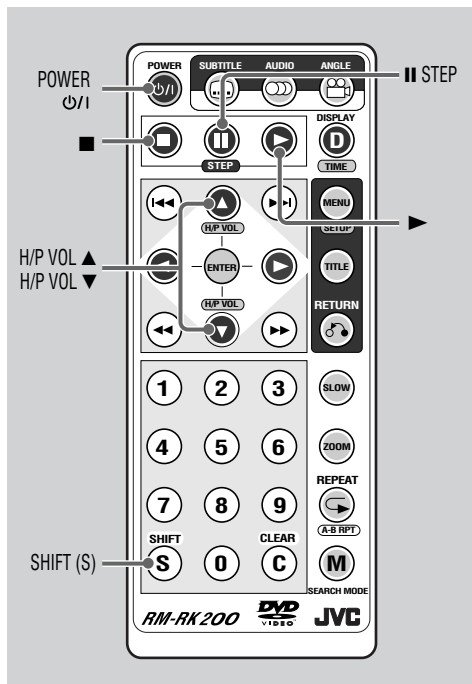

**Before performing any operations, make sure the following....**


- Check the connection with the TV and with the car receiver.
- Turn on the TV and the receiver.
- Select this unit (auxiliary or external input) as the playback source on the receiver.
- Select the correct input where this unit is connected.
- **For DVD playback, you can change the Setup Menu setting to your preference. (See pages 20 – 28.)**

If “ $\odot$ ” appears on the screen when pressing a button, the disc cannot accept an operation you have tried to do.


## Starting playback



**1 Press POWER  $\odot/\odot$  to turn on the power.**

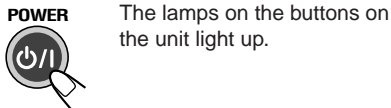


**2 Press OPEN on the unit.**  
The loading slot cover opens.

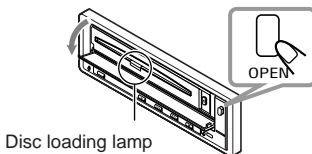

DO NOT force the cover open by hand.

**3 Insert a disc into the loading slot.**

The unit draws in the disc automatically.

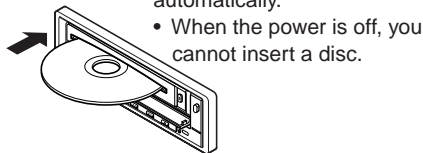


DO NOT insert a disc while the disc loading lamp is flashing\* or is not lit\*\*.

\* Flashing: while loading or ejecting a disc  
 \*\* Not lit: when a disc has been loaded.

**4 Close the slot cover by hand.**

The disc type is automatically detected and the detected disc lamp (DVD, VCD/CD) lights up, and playback starts automatically.

- It takes a while to detect the disc type.

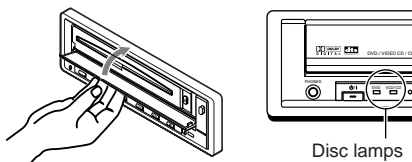

If a menu appears while playing a DVD or VCD with PBC function, see “MENU-DRIVEN PLAYBACK” on page 12.



## To stop playback temporarily

Press **II** (STEP). A still picture appears while playing a DVD or VCD.

- You can advance the still picture frame by frame by pressing the button repeatedly. (See page 18.)

To resume playback, press **▶**.

## To stop playback

Press **■**.

If you are playing back a DVD or

VCD, this unit can memorize the end point ("■" appears for a while on the screen), and when you start playback again, playback begins from where it has been stopped. (Resume play)



## To eject a disc

- 1 Press **OPEN** on the unit to open the slot cover.
- 2 Press **▲** on the unit (inside the slot cover). The disc automatically comes out of the loading slot.

## To locate a particular chapter or track

You can move to another chapter or track while playing a disc.

- Press **▶▶** to go ahead to the beginning of the next track.  
Each time you press the button consecutively, the beginning of the next tracks is located and played back.
- Press **◀◀** to go back to the beginning of the current track.  
Each time you press the button consecutively, the beginning of the previous tracks is located and played back.

*If you press and hold the button, you can fast-forward (by holding **▶▶**) or fast-reverse the play (by holding **◀◀**).*

## Listening with headphones


- 1 Connect the headphones to the PHONES jack on the unit.
- 2 While holding **SHIFT (S)**, then press **H/P VOL ▲** or **H/P VOL ▼** to adjust the headphones volume.


DO NOT use the headphones while driving. It is dangerous to shut off the outside sounds while driving.

## About sounds reproduced through the rear terminals

### • Through AUDIO (L/R):

Analog stereo signals are output.

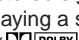When playing a source encoded with Dolby Digital\* () or with MPEG Audio, multichannel signals are mixed to the left and right front channel signals, then output.

– You cannot reproduce the sound encoded with DTS Digital Surround\*\* (.

### • Through DIGITAL OUT:


Digital signals (Linear PCM, Dolby Digital, DTS Digital Surround) are output through this terminal. (For more details, see page 35.)

To reproduce the multichannel sounds such as Dolby Digital and DTS Digital Surround, connect an amplifier or a decoder compatible with these multichannel sources to this terminal, and set "DIGITAL OUT" correctly. (See page 22.)

–When playing a source encoded with MPEG Audio, multichannel signals are mixed to the left and right front channel signals, then output.

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992–1997 Dolby Laboratories. All rights reserved.

\*\* Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. "DTS" is a registered trademark of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

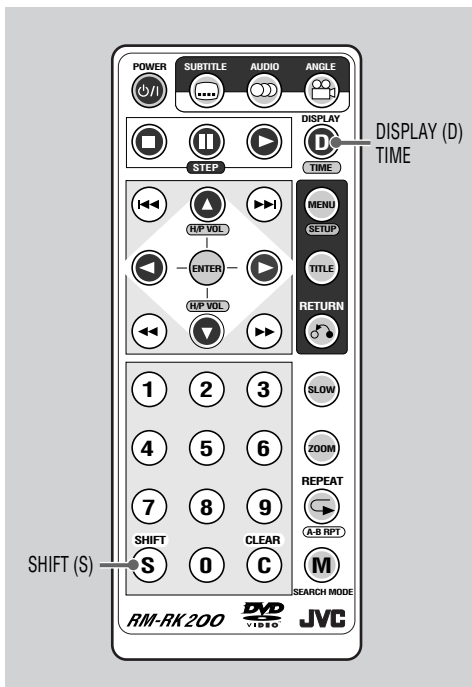

**When a VCD or CD is loaded:**

On-screen bar goes off.

\* This appears only while a VCD is loaded.

**About the indications on the on-screen bar**

Indications shown on the on-screen bar vary depending on the disc type and the signals recorded on the loaded disc.

**Showing the on-screen bar**



You can show the following information on the screen while a disc is loaded.

To show the disc information, press **DISPLAY (D)/TIME**.



Each time you press the button, the following on-screen bar appears in sequence.

**When a DVD is loaded:**

On-screen bar goes off.

**When a DVD is loaded**

- ① : Current title and the total number of the titles on the disc.  
(Ex.: 1st title is playing out of 3 titles recorded.)
- ② : Current chapter and the total number of the chapters recorded on the disc.  
(Ex.: 1st chapter is playing out of 25 chapters recorded.)
- ③ : Playing time or the remaining time.  
(Ex.: Playing time of the title. See page 9 for more details.)
- ④ : Indicates whether the disc contains multi-angle views.  
(Ex.: When only main angle-view is recorded on the disc without any multi-angle views. See page 11 for more details.)
- ⑤ : Current operation mode.  
(Ex.: This appears while playing a disc.)



 
⑥ : Indicates whether the disc contains subtitles.  
(Ex.: When no subtitle is recorded on the disc. See page 10 for more details.)

⑦ : Current selected audio language and the total number of the audio languages recorded on the disc.  
(Ex.: "ENGLISH" is selected as the only recorded audio language on the disc. See page 11 for more details.)

⑧ : Sound mode — Linear PCM (stereo), Dolby Digital, and DTS Digital Surround.  
(Ex.: When the disc is encoded with Dolby Digital.)

⑨ : Repeat play mode.  
(Ex.: When Repeat play mode is set to "OFF." See page 16 for more details.)

### When a VCD or CD is loaded



\* This appears only while a VCD is loaded.

① : Current track and the total number of the tracks on the disc.  
(Ex.: 1st track is playing out of 3 tracks recorded.)

② : Playing time or the remaining time.  
(Ex.: Playing time of the track. See the right column for more details.)

③ : Repeat play mode.  
(Ex.: When Repeat play mode is set to "OFF." See pages 16 and 17 for more details.)

④ : Appears only while loading a VCD. Indicates whether the VCD is recorded with the PBC function (PBC) or without ( PBC ).  
(Ex.: When PBC function is recorded.)

⑤ : Current operation mode.  
(Ex.: This appears while playing a disc.)

## Checking the playing time


You can also show the elapsed playing time or the remaining time.

To show the on-screen bar and to change the playing time information, press **DISPLAY (D)/TIME** while holding **SHIFT (S)**.



Each time you press the button, the playing time information changes on the on-screen bar.

### When a DVD is loaded

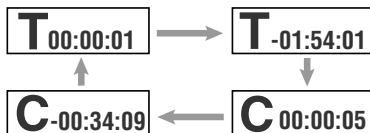

Elapsed playing time of the current **title** →  
Remaining time of the current **title** →  
Elapsed playing time of the current **chapter** →  
Remaining time of the current **chapter** →  
(Back to the beginning)


### When a VCD or CD is loaded






Elapsed playing time of the current **track** →  
Remaining time of the current **track** →  
Elapsed playing time of the current **disc** →  
Remaining time of the current **disc** →  
(Back to the beginning)

To erase the on-screen bar, press **DISPLAY (D)/TIME** twice while playing a DVD, or once while playing a VCD or CD.

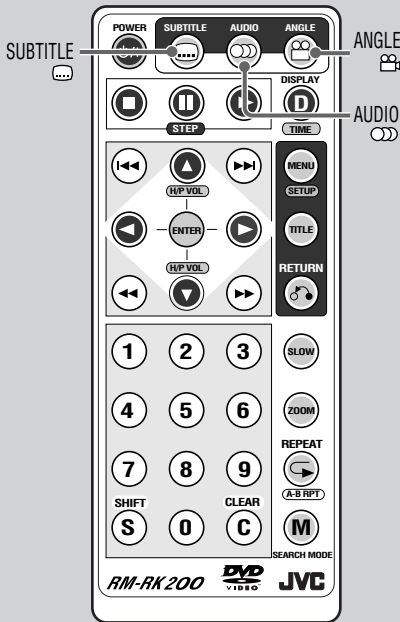- It is not required to hold down **SHIFT (S)** to erase the on-screen bar.



Some DVDs contain several audio languages, subtitles, and multi-angle views. When you find the following marks on the DVD or its package, you can select these elements recorded on the DVD.

	<p>Subtitles are recorded on the disc. The number inside the mark indicates the total number of the recorded subtitles.</p>
	<p>Several audio languages are recorded on the disc. The number inside the mark indicates the total number of the recorded audio languages.</p>
	<p>Multi-angle views are recorded on the disc. The number inside the mark indicates the total number of the recorded multi-angle views.</p>


## Selecting subtitles



 While playing a disc containing subtitles in different languages, you can select the subtitle to be displayed on the screen.


- You can set your favorite subtitle language as the initial language shown on the screen. (See page 21.)

### Select a desired subtitle language.



The on-screen menu bar appears on the screen. Each time you press the button, the subtitle language changes.

Ex.: When the disc has 3 selections — English, French, Spanish and no subtitle (OFF)

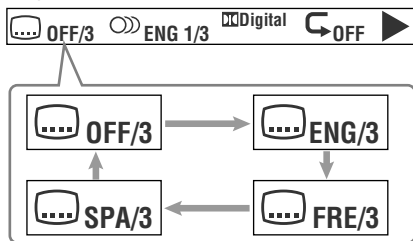

To erase the on-screen bar, press **DISPLAY (D)/TIME**.

## Selecting audio languages



While playing a disc containing audio languages (sound tracks), you can select the language (sound) to listen to.


- You can set your favorite audio language as the initial audio language shown on the screen. (See page 20.)

### Select a desired audio language (sound).



The on-screen menu bar appears on the screen. Each time you press the button, the audio language changes.

Ex.: When the disc has 3 selections — English, French, and Spanish

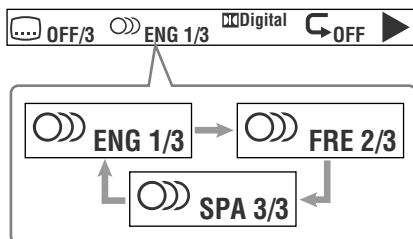


To erase the on-screen bar, press **DISPLAY (D)/TIME**.

## Selecting multi-angle views




 
While playing a disc containing multi-angle views, you can view the same scene at different angles.

### Select a desired view angle.



The on-screen menu bar appears on the screen. Each time you press the button, the view angle changes.

Ex.: When the disc has 3 multi-angle views

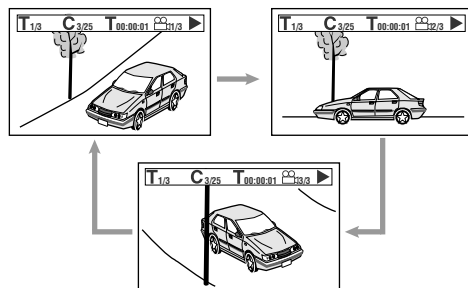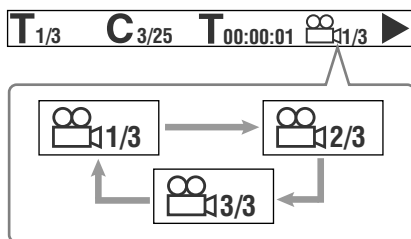

To erase the on-screen bar, press **DISPLAY (D)/TIME** twice.



# MENU-DRIVEN PLAYBACK

## Menu operations



 
Menu-driven playback is possible while playing back a DVD with menu-driven features or a VCD with the PBC function.

### While playing a DVD:

DVD discs generally have their own menus or title lists. A Menu usually contains various information about the disc and playback selections. On the other hand, a title list usually contains titles of movies and songs recorded.


#### 1 Press MENU/SETUP or TITLE.

A menu or title list will appear on the screen.



#### 2 Select a desired item on the menu or on the title list, using Cursor buttons (▲/▼/▶/◀) and ENTER.

The unit starts playback of the selected item.

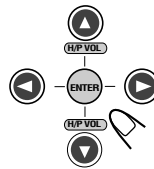


- On some discs, you can also select items by pressing the **Number** buttons corresponding to the item numbers listed.

### To erase the menu or title list

Press **RETURN** ⏪ until it goes off from the screen.

- If “⊘” appears on the screen when pressing **MENU** in step 1, the disc does not have a menu.
- If “⊘” appears on the screen when pressing **TITLE** in step 1, the disc does not have a title list.

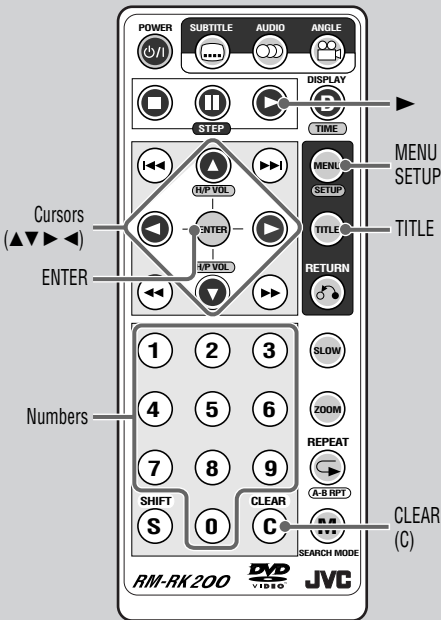



## While playing a VCD:

The Playback Control function (PBC) allows you to operate the VCD using menus. When you start playback, a menu will automatically appear on the screen.


- A menu may be a list of items, divided screens, or some moving pictures. (See “PBC operation concept” to the right.)

### Select a desired item on the menu.

- When a list of items is displayed on the screen, press the **Number** buttons to select an item.
- When “▶” or “SELECT” is displayed on the screen, press ▶ (or **ENTER** if pressing ▶ does not work) to start playback.


#### How to select items using the Number buttons

- To select number 5, press **5**, then **ENTER**.
- To select number 10, press **1**, **0**, then **ENTER**.
- To select number 23, press **2**, **3**, then **ENTER**.

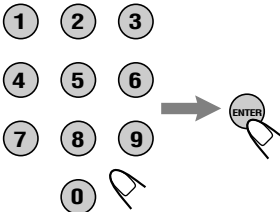

- To cancel a mis-entry, press **CLEAR (C)**. Each time you press the button, the last entry will be erased.

## PBC operation concept

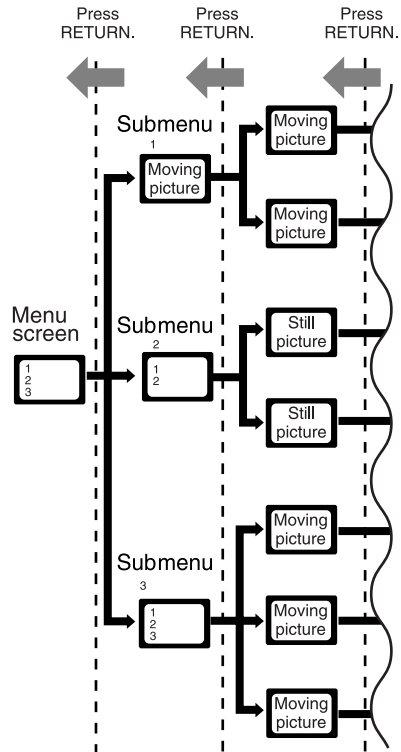

## To return to the previous menu

Press **RETURN** ↵.

## To cancel the PBC playback

You can cancel the menu-driven operations (PBC function):

- 1 Press **■** to stop playback.
- 2 Press the **Number** buttons to select a track, then press **ENTER**.


Normal playback starts from the selected track.

- You can also turn on and off the PBC playback by pressing **MENU/SETUP** repeatedly.





# SEARCH FUNCTIONS

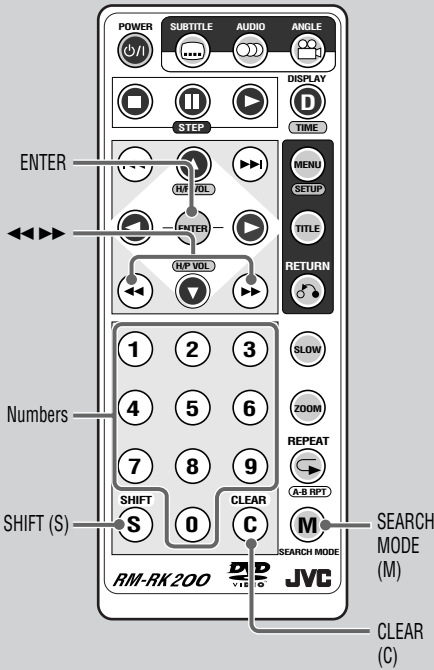


## Searching for a particular point




You can search for a particular portion while playing a disc — Forward/Reverse Search.

### Forward Search

 To fast-forward the chapter or track, press **▶▶** while playing a disc.



Each time you press the button, the search speed changes as follows:

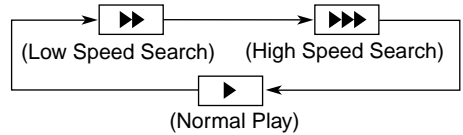


#### When playing a DVD or VCD


- No sound comes out during High Speed Search.
- When Low Speed Search sound setting is "ON," sounds come out during Low Speed Search. (See page 24.)

### Reverse Search

 To reverse the chapter or track, press **◀◀** while playing a disc.



Each time you press the button, the search speed changes as follows:

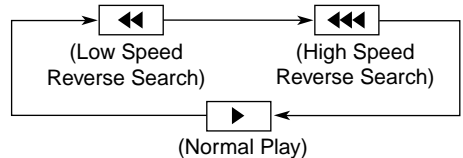

#### When playing a DVD or VCD

No sound comes out during Reverse Search.



# Locating a particular point directly



You can use the following Search Modes to locate a particular portion directly while playing a disc.

- For DVD: Title Search, Chapter Search, and Time Search
- For VCD and CD: Track Search and Time Search


## 1 Press SEARCH MODE (M) to select Search Mode.

The on-screen bar appears on the screen.



SEARCH MODE

When a DVD is playing:

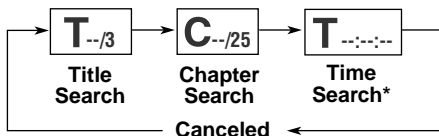

When a VCD or CD is playing:




\* Time Search can be performed only within the current title (for DVD) and the current track (for VCD and CD).

### When Search Mode is canceled

You can use the number buttons to directly select the title number (for DVD) and track number (for VCD and CD).

## 2 Press the Number buttons then ENTER to select a desired title, chapter, track or playing time.

The unit starts playback of the selected item.

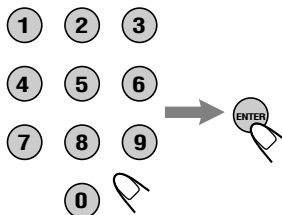

### How to input the title, chapter, and track number

Press the **Number** buttons corresponding to the number, then press **ENTER** to start its playback.

- To select number 5, press **5**, then **ENTER**.
- To select number 10, press **1**, **0**, then **ENTER**.
- To select number 23, press **2**, **3**, then **ENTER**.

### How to input the playing time

Press the **Number** buttons to input the playing time, then press **ENTER** to start playback at the selected elapsed playing time.


- To input time "00:45:23," press **4**, **5**, **2**, **3**, then **ENTER**.
- To input time "01:23:45," press **1**, **2**, **3**, **4**, **5**, then **ENTER**.
- To cancel a mis-entry, press **CLEAR (C)**. Each time you press the button, the last entry will be erased.

To erase the on-screen bar, press **DISPLAY (D)/TIME**.



# REPEAT PLAYBACK

ENGLISH

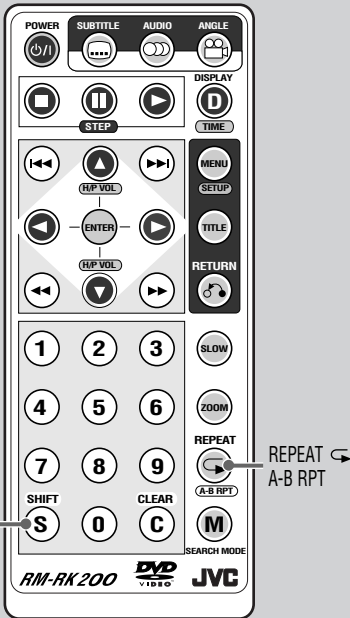

## Playing Repeatedly



### Repeat Play

You can repeat a chapter, track, or disc.


To repeat playback, press **REPEAT** (↶)/**A-B RPT** while playing or pausing.

#### REPEAT



The on-screen bar appears. Each time you press the button, the repeat mode indication on the on-screen bar changes as follows:


#### When a DVD is playing:

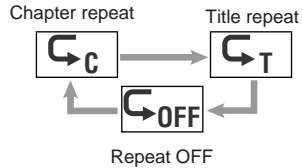

- Chapter repeat: Current chapter will be repeated.
- Title repeat: Current title will be repeated.
- Repeat OFF: Repeat play is canceled.

\* On some DVDs, repeat play may be canceled by the disc itself.

#### When a VCD is playing:

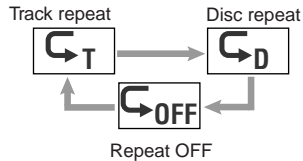

- Track repeat: Current track will be repeated.
- Disc repeat: All the tracks in the disc will be repeated.
- Repeat OFF: Repeat play is canceled.

\* While playing back a VCD using the PBC function, Repeat play cannot be used.

**When a CD is playing\*:**

- Disc repeat: All the tracks in the disc will be repeated.
- Track repeat: Current track will be repeated.

\* When you start playing back a CD, Disc repeat is always activated first.

 
To erase the on-screen bar, press **DISPLAY (D)/TIME**.

**A-B Repeat**

While playing, you can also select a portion you want to repeat.

- When playing a DVD, A-B Repeat is not performed between different chapters or different titles.


- 1 While holding **SHIFT (S)**, press **REPEAT (↶)/A-B RPT** to select the start point.



The on-screen bar appears, and the repeat mode indication changes as follows:



 - 2 While holding **SHIFT (S)**, press **REPEAT (↶)/A-B RPT** again to select the end point.




The repeat mode indication changes as follows, and A-B Repeat begins.

The unit automatically locates point A and starts repeated playback of the portion between points A and B.



Ex.: When viewing a picture

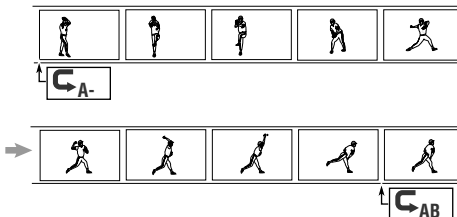

To cancel A-B Repeat, press **REPEAT (↶)/A-B RPT** once while holding **SHIFT (S)**.

To erase the on-screen bar, press **DISPLAY (D)/TIME**.

If "⊘" appears on the screen when pressing **REPEAT (↶)/A-B RPT** in step 1, A-B Repeat cannot be used on the selected portion.

- On some DVDs, A-B Repeat may not be used even within the same chapter. This is due to their disc structures, and not a malfunction of the unit.



# SPECIAL EFFECTS PLAYBACK

 
## Slow-Motion Playback



You can enjoy slow-motion playback while playing a DVD or VCD.

**To start Slow-motion Playback**, press **SLOW** while playing a DVD or VCD.

Each time you press the button, the slow motion speed changes as follows:



### To resume normal play

Press **SLOW** repeatedly until normal play resumes.

## Frame-by-frame Playback



You can advance the picture frame by frame.

### 1 Press **STEP** once during play.



A still picture appears on the screen.


### 2 Press **STEP** repeatedly to advance the picture frame by frame.



Each time you press the button, the picture advances frame by frame.

### To resume normal play

Press **▶**.

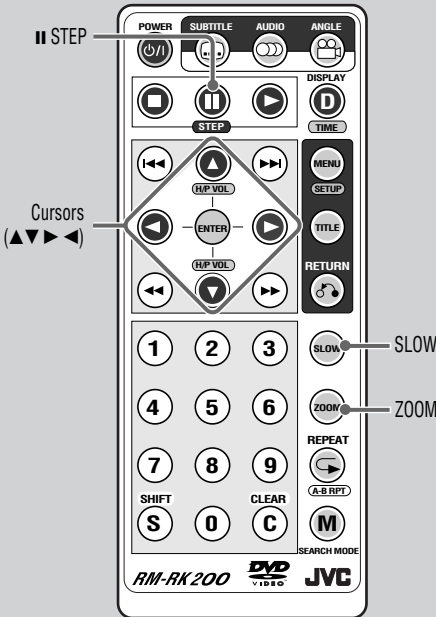



# Zoom



## 2 Move the enlarged portion on the screen, using Cursor buttons (▲/▼/▶/◀).




 
You can zoom up a particular portion of the picture while playing a DVD and VCD.

- You can select the start point of zoom and adjust how precisely the zoomed-up portion is moved. (See page 27.)

### 1 Press ZOOM to zoom in to the picture.




Each time you press the button, the picture is enlarged as follows:

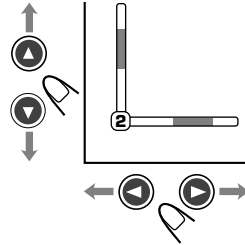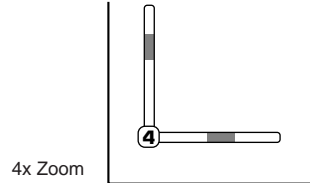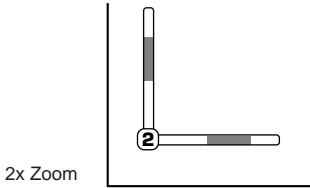

To cancel Zoom, press ZOOM repeatedly until normal size screen appears.

Ex.: When 2x Zoom is selected

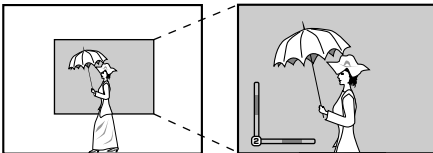


**When playing a VCD**  
 You can only select 2x Zoom.



# DVD SETUP MENU

ENGLISH

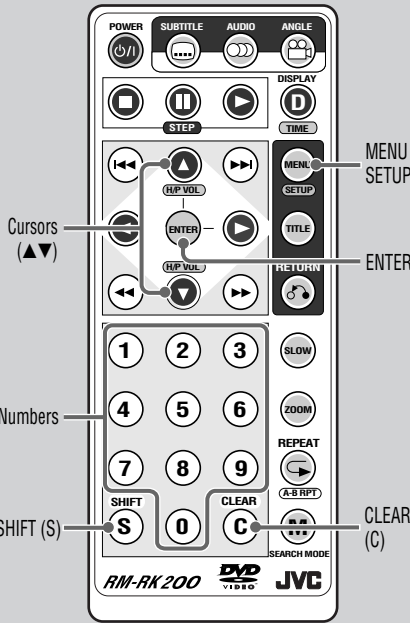

You can store the initial selection for subtitle languages, audio languages (sound), and other settings using the Setup Menu.

- DVD Setup menu can only be displayed while a disc is not playing.

## Setting initial audio language

You can select the initial language for audio sound.


 
However, in the following cases, the original language will be selected as the initial language regardless of your setting.

- If the language you have selected is not recorded on the disc.
- If the disc is programmed to be played back in the original language.

To go back to the previous screen during the procedure, press **RETURN** ⏪.


### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen. ("LANGUAGES" must be selected – highlighted.)

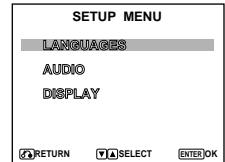


### 2 Press **ENTER**.

Language menu appears. ("AUDIO" must be selected – highlighted.)

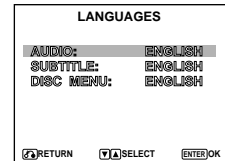


### 3 Press **ENTER** again.

Audio Language selecting screen appears.

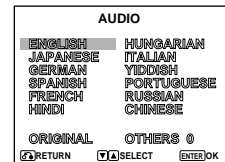



- 4** Press **Cursor** ▼ (or ▲) to select a desired language, then press **ENTER**.

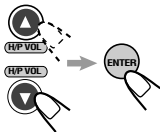

- To use the original language on the disc, select "ORIGINAL."

If a language you want is not listed on the screen, follow the procedure below;

- 1 Press ▲ or ▼ to select "OTHERS."
- 2 Press **ENTER**.
- 3 Press the **Number** buttons to enter the language code number you want.
  - See "LANGUAGE CODES" on page 30.

Ex.: To select Finnish as the initial language, press **7, 0, 7, 3**, then **ENTER**.

- To cancel a mis-entry, press **CLEAR (C)**. Each time you press the button, the last entry will be erased.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.

## Setting initial subtitle language


 
You can select the initial language for subtitles. However, in the following cases, the original language will be selected as the initial language regardless of your setting.

- If the language you have selected is not recorded on the disc.
- If the disc is programed to be played back in the original language.

To go back to the previous screen during the procedure, press **RETURN** ↵.


- 1** While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen. ("LANGUAGES" must be selected – highlighted.)

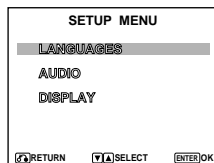



- 2** Press **ENTER**.

Language menu appears.

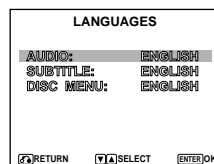


- 3** Press **Cursor** ▼ (or ▲) to select "SUBTITLE," then press **ENTER**.

Subtitle Language selecting screen appears.

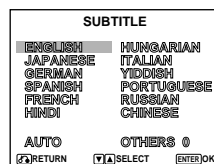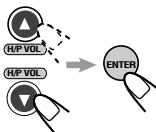

- 4** Press **Cursor** ▼ (or ▲) to select a desired language, then press **ENTER**.

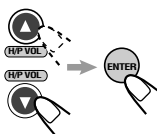

- To use the same language as the initial audio language, select "AUTO."

If a language you want is not listed on the screen, see the left column.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.





# Setting initial disc menu language

You can select the initial language for the disc menu.


 
However, in the following cases, the disc menu will be displayed in the original language on the disc regardless of your setting.

- If the language you have selected is not recorded on the disc.
- If the disc is programmed to be played back in the original language.

To go back to the previous screen during the procedure, press **RETURN** ↵.


## 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen. ("LANGUAGES" must be selected – highlighted.)

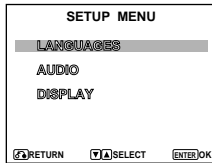



## 2 Press **ENTER**.

Language menu appears.

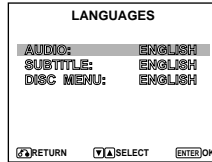


## 3 Press **Cursor ▼ (or ▲)** to select "DISC MENU," then press **ENTER**.

Disc Menu Language selecting screen appears.

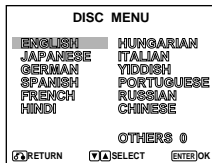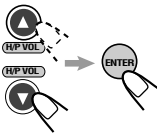

## 4 Press **Cursor ▼ (or ▲)** to select a desired language, then press **ENTER**.

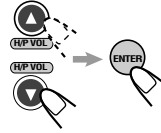

If a language you want is not listed on the screen, see page 21.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.



# Setting digital audio output

 When connecting an amplifier or a decoder to the DIGITAL OUT terminal, set it as recommended – STREAM, LPCM, or OFF (see step 3).

To go back to the previous screen during the procedure, press **RETURN** ↵.



## 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

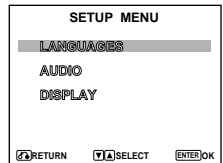

## 2 Press **Cursor ▼ (or ▲)** to select "AUDIO," then press **ENTER**.


Audio menu appears. ("DIGITAL OUT" must be selected – highlighted.)

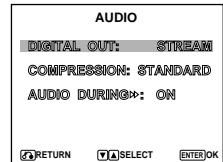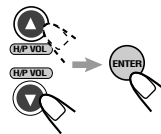




### 3 Press ENTER.

Digital Out selecting screen appears.

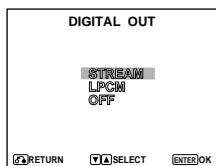

### 4 Press Cursor ▼ (or ▲) to select an appropriate output, then press ENTER.

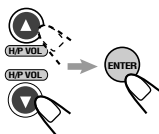

- **STREAM:** Select this when connecting an amplifier or a decoder compatible with Dolby Digital and with DTS Digital Surround.
- **LPCM:** Select this when connecting an amplifier or a decoder incompatible with Dolby Digital and with MPEG Audio.
- **OFF:** Select this when you use the AUDIO L/R (analog) jacks on the rear.

**Only with this setting, you can enjoy original high-quality sound of disc whose sampling frequency is 96 kHz through the AUDIO L/R jacks. (No signal will be output from the DIGITAL OUT terminal.)**

For more detailed information about the output signals, see page 35.

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).


 
## Setting compression

You can compress the dynamic range (difference between the maximum and minimum sound levels) while playing a source encoded with Dolby Digital. This is useful when listening at a low volume level.

To go back to the previous screen during the procedure, press RETURN ↵.



### 1 While holding SHIFT (S), press MENU/SETUP.

Setup Menu appears on the screen.

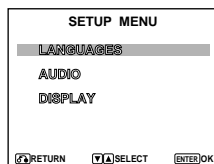



### 2 Press Cursor ▼ (or ▲) to select "AUDIO," then press ENTER.

Audio menu appears.

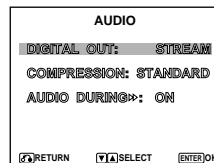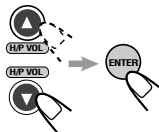

### 3 Press Cursor ▼ (or ▲) to select "COMPRESSION," then press ENTER.


Compression Rate selecting screen appears.

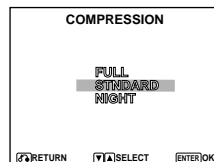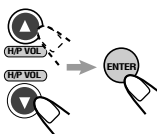

TO BE CONTINUED



**4** Press Cursor ▼ (or ▲) to select a desired setting, then press ENTER.

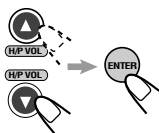

- **FULL:** Select this not to apply compression (full dynamic range as recorded on the original disc).
- **STANDARD:** Select this to reduce the dynamic range a little.
- **NIGHT:** Select this to apply compression fully (useful at a low volume).

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).

## Setting audio output during Low Speed Search


 
You can turn on or off the sound during Low Speed Search on a DVD and VCD.

- Regardless of this setting, sound always comes out during Low Speed Search on a CD.

To go back to the previous screen during the procedure, press RETURN .



**1** While holding SHIFT (S), press MENU/SETUP.

Setup Menu appears on the screen.

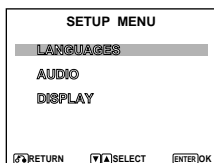



**2** Press Cursor ▼ (or ▲) to select “AUDIO,” then press ENTER.

Audio menu appears.

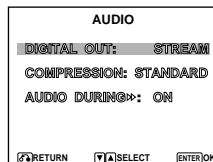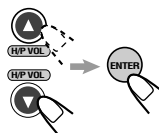


**3** Press Cursor ▼ (or ▲) to select “AUDIO DURING ►►,” then press ENTER.

Sound on/off selecting screen appears.

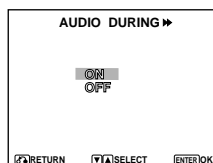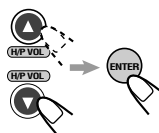

**4** Press Cursor ▼ (or ▲) to select a desired setting, then press ENTER.

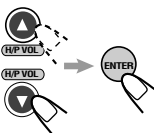

- **ON:** Sounds come out during Low Speed Search\*.
- **OFF:** No sounds come out during Low Speed Search.

\* Some sounds will be skipped during Low Speed Search.

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).



# Setting monitor type


 
Set the monitor type when you watch a wide screen picture.

- This setting takes effect only when playing back a DVD recorded with 16:9 wide screen video signal.

To go back to the previous screen during the procedure, press **RETURN** .



## 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

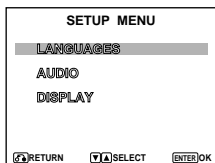


## 2 Press **Cursor ▼ (or ▲)** to select **“DISPLAY,”** then press **ENTER**.

Display menu appears. (“MONITOR TYPE” must be selected – highlighted.)

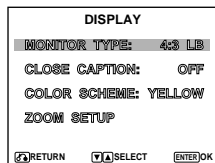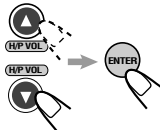


## 3 Press **ENTER**.


Monitor type selecting screen appears.

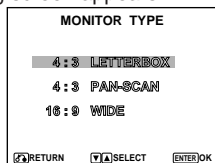


## 4 Press **Cursor ▼ (or ▲)** to select a desired setting, then press **ENTER**.

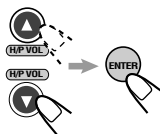


- **4:3 LETTERBOX:** Select this when viewing on TV whose aspect ratio is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

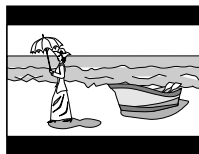

- **4:3 PAN-SCAN:** Select this when viewing on TV whose aspect ratio is 4:3. While viewing a wide screen picture, the black bars do not appear, however, the left and right edge sides of the pictures will not be shown on the screen.

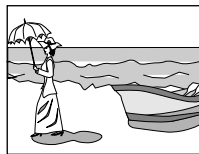

- **16:9 WIDE:** Select this when viewing on TV whose aspect ratio is 16:9.

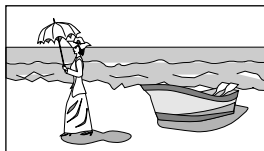

- **Even if “4:3 PAN-SCAN” is selected,** the screen size may become “4:3 LETTERBOX” while playing some DVDs. This depends on how the DVD is programmed and recorded.
- **If a disc (or some portions of the disc) is recorded with the video signals of 4:3 aspect ratio,** this setting does not take effect. The pictures are displayed with full 4:3 aspect ratio or with 4:3 Letter box.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.



## Setting closed caption


 
Some discs have closed captions. You can set whether you will display the close captions or not.

- To show the closed captions on the TV, you have to use a TV with a built-in closed-caption decoder, or to connect a closed-caption decoder in between this unit and a TV.

To go back to the previous screen during the procedure, press **RETURN**



### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

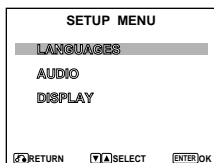



### 2 Press **Cursor ▼ (or ▲)** to select “**DISPLAY**,” then press **ENTER**.

Display menu appears.

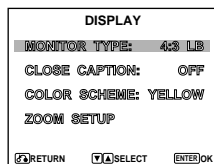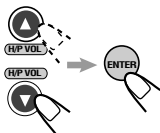


### 3 Press **Cursor ▼ (or ▲)** to select “**CLOSE CAPTION**,” then press **ENTER**.

Closed-caption on/off selecting screen appears.

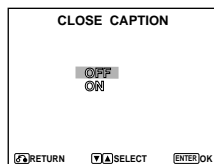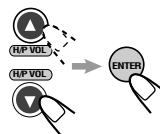

### 4 Press **Cursor ▼ (or ▲)** to select a desired setting, then press **ENTER**.

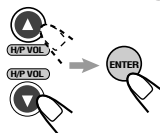

- **ON**: Select this to display the close captions when you start playback.
- **OFF**: Select this not to display the close captions when you start playback.

To erase the Setup Menu screen, press **MENU/SETUP** while holding **SHIFT (S)**.



## Changing the color of the on-screen bar

 You can change the color of the on-screen bar displayed on the top of the screen, by selecting the color – yellow, green, blue, or red.

To go back to the previous screen during the procedure, press **RETURN**



### 1 While holding **SHIFT (S)**, press **MENU/SETUP**.

Setup Menu appears on the screen.

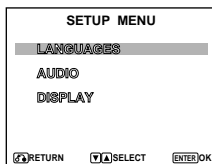


### 2 Press **Cursor ▼ (or ▲)** to select “**DISPLAY**,” then press **ENTER**.

Display menu appears.

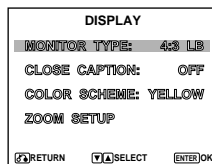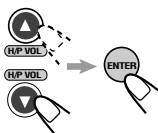




- 3** Press Cursor ▼ (or ▲) to select “COLOR SCHEME,” then press ENTER.

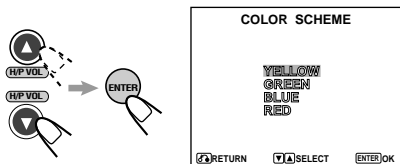

- 4** Press Cursor ▼ (or ▲) to select a desired color, then press ENTER.

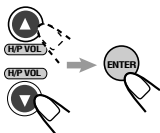

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).


## Setting zoom preference

You can change the zoom setting to your preference – where to start the zoom and how to move the zoomed-up portion.

To go back to the previous screen during the procedure, press RETURN ↵.


- 1** While holding SHIFT (S), press MENU/SETUP.

Setup Menu appears on the screen.

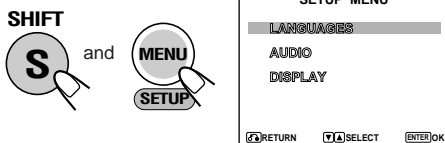


- 2** Press Cursor ▼ (or ▲) to select “DISPLAY,” then press ENTER.

Display menu appears.

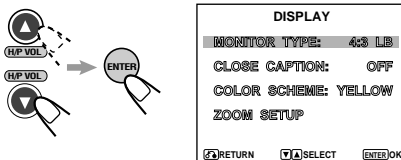

- 3** Press Cursor ▼ (or ▲) to select “ZOOM SETUP,” then press ENTER.

Zoom Setup screen appears. (“START POINT” must be selected – highlighted.)

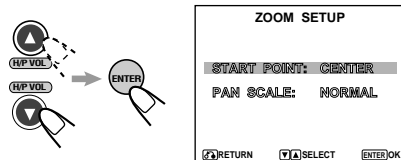


TO BE CONTINUED




### 4 Press ENTER again.

Start Point selecting screen appears.

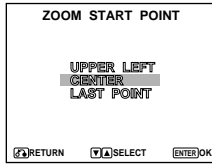

### 5 Press Cursor ▼ (or ▲) to select a desired setting, then press ENTER.


You can select the start point of zoom.

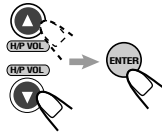

- **UPPER LEFT:** When you press ZOOM, the upper left portion of the picture is zoomed up first.
- **CENTER:** When you press ZOOM, the center portion of the picture is zoomed up first.
- **LAST POINT:** When you press ZOOM, the last zoomed-up portion of the picture is zoomed up.

### 7 Press Cursor ▼ (or ▲) to select a desired setting, then press ENTER.

You can select the movement amount (speed) of the zoomed-up portion.


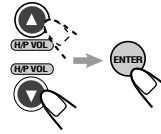


- **NORMAL:** Select this to move at normal speed to another portion of the picture.
- **ROUGH:** Select this to move faster to another portion of the picture. (Rough movement)
- **FINE:** Select this to move slower to another portion of the picture. (Fine movement)

To erase the Setup Menu screen, press MENU/SETUP while holding SHIFT (S).

### 6 Press Cursor ▼ (or ▲) to select "PAN SCALE," then press ENTER.

Pan Scale selecting screen appears.

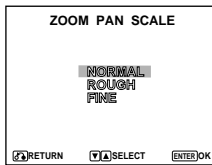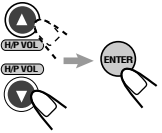



## Handling discs


### How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

- Always hold the disc by the edges. Do not touch its recording surface.


When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

- Make sure to store discs into the cases after use.

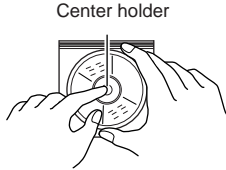

### To keep discs clean


A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.

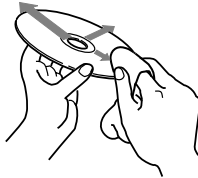

### To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.

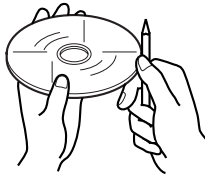

### Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the unit may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

#### CAUTIONS:

- Do not insert 8 cm discs (single discs) into the loading slot. (Such discs cannot be ejected.)
- Do not insert any disc of unusual shape — like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose discs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzene, etc.) to clean discs.

#### About mistracking:

*Mistracking may result from driving on extremely rough roads. This does not damage the unit and the disc, but will be annoying.*

*We recommend that you stop disc play while driving on such rough roads.*






# LANGUAGE CODES

ENGLISH

6565	Afar	7465	Japanese	8378	Shona
6566	Abkhazian	7473	Yiddish	8379	Somali
6570	Afrikaans	7487	Javanese	8381	Albanian
6577	Amharic	7565	Georgian	8382	Serbian
6582	Arabic	7575	Kazakh	8383	Siswati
6583	Assamese	7576	Graeaenlandic	8384	Sesotho
6589	Aymara	7577	Cambodian	8385	Sundanese
6590	Azerbaijani	7578	Kannada	8386	Swedish
6665	Bashkir	7579	Korean	8387	Swahili
6669	Byelorussian	7583	Kashmiri	8465	Tamil
6671	Bulgarian	7585	Kurdish	8469	Telugu
6672	Bihari	7589	Kirghiz	8471	Tajik
6673	Bislama	7665	Latin	8472	Thai
6678	Bengali; Bangla	7678	Lingala	8473	Tigrinya
6679	Tibetan	7679	Laothian	8475	Turkmen
6682	Breton	7684	Lithuainnian	8476	Tagalog
6765	Catalan	7686	Latvian, Lettish	8478	Setswana
6779	Corsican	7771	Malagasy	8479	Tonga
6783	Czech	7773	Maori	8482	Turkish
6789	Welsh	7775	Macedonian	8483	Tsonga
6865	Danish	7776	Malayalam	8484	Tatar
6869	German	7778	Mongolian	8487	Twi
6890	Bhutani	7779	Moldavian	8571	Uigur
6976	Greek	7782	Marathi	8575	Ukrainian
6978	English	7783	Malay	8582	Urdu
6979	Esperanto	7784	Maltese	8590	Uzbek
6983	Spanish	7789	Burmese	8673	Vietnamese
6984	Estonian	7865	Nauru	8679	Volapuk
6985	Basque	7869	Nepali	8779	Wolof
7065	Persian	7876	Dutch	8872	Xhosa
7073	Finnish	7879	Norwegian	8979	Yoruba
7074	Fiji	7967	Occitan	9065	Zhuang
7079	Faeroese	7977	Afan Oromo	9072	Chinese
7082	French	7982	Oriya	9085	Zulu
7089	Frisian	8065	Punjabi		
7165	Irish	8076	Polish		
7168	Scots Gaelic	8083	Pashto, Pushto		
7176	Galician	8084	Portuguese		
7178	Guarani	8185	Ouechua		
7185	Gujarati	8277	Rhaeto-Romance		
7265	Hausa	8278	Kirundi		
7273	Hindi	8279	Romanian		
7282	Croatian	8285	Russian		
7285	Hungarian	8287	Kinya, Rwanda		
7289	Armenian	8365	Sanskrit		
7365	Interlingua	8368	Sindhi		
7375	Knupiak	8371	Sangro		
7378	Indonesian	8372	Serbo-Croatian		
7383	Icelandic	8373	Singhalese		
7384	Italian	8375	Slovak		
7385	Inuktitut (Eskimo)	8376	Slovenian		
7387	Hebrew	8377	Samoan		


### 4:3 Letterbox Screen

This is one method for displaying a wide screen picture on a conventional sized (4:3) TV. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

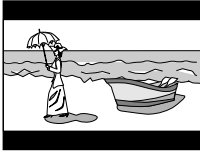

### 4:3 Pan-Scan Screen

This is one method for displaying a wide screen picture on a conventional sized (4:3) TV. While viewing a wide screen picture, the left and right edges of the pictures will not be shown on the screen.

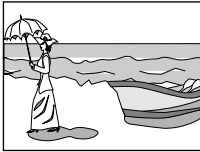

### Dolby Digital

This is a digital audio compression technology that was developed by Dolby Laboratories. Dolby Digital encoding method (so-called discrete 5.1 channel digital audio format) records and compresses the left front channel, right front channel, center channel, left rear channel, right rear channel, and LFE channel (total 6 channels, but LFE channel is counted as 0.1 channel, therefore called 5.1 channels) signals digitally. Each channel is completely independent from other channel signals to avoid interference, therefore, you can obtain much better sound quality with stereo and surround effects. To reproduce these original surround signals, you need to connect an amplifier or a decoder compatible with Dolby Digital.

### DTS Digital Surround

Another discrete 5.1 channel digital audio format, available on CD, LD, and DVD software, developed by Digital Theater Systems, Inc. Compared to Dolby Digital, audio compression rate is relatively low. This fact allows DTS Digital Surround format to add breadth and depth to the reproduced sounds. As a result, DTS Digital Surround features natural, solid and clear sound. To reproduce these surround signals, you need to connect an amplifier or a decoder compatible with DTS Digital Surround.

### Linear PCM

This is a digital recording format that is used for audio CDs.

### MPEG-Audio

Audio coding format used for PAL/SECAM DVD software. (MPEG stands for "Moving Picture Experts Group" and has been originally developed for compressing video signals.)

### Playback Control (VCD)

When a VCD has the PBC (Playback Control) function, you can enjoy menu-driven operations and high-resolution still pictures.

### Sampling Frequency, Quantization Bits

When analog signals are converted into digital signals, they are divided into many points and digitized. This dividing method is called "sampling." The sampling frequency indicates how many points one second is divided into – for example, for CD sound, one second is divided into 44100 points since its sampling frequency is 44.1 kHz. On the other hand, the number of quantization bits indicates the volume size used to memorize each divided point. The larger this number is, the clearer the sound can be reproduced.

### Titles and Chapters (DVD)

A DVD is divided into several titles (large divisions), and each title is divided into chapters (smaller divisions). These divisions are assigned their particular numbers, so that they are easily accessed.


### Tracks (VCD, CD)

VCDs and CDs are divided into tracks. Each track has its own number so that it is easily accessed.



# LOCATION OF THE BUTTONS


## Remote controller

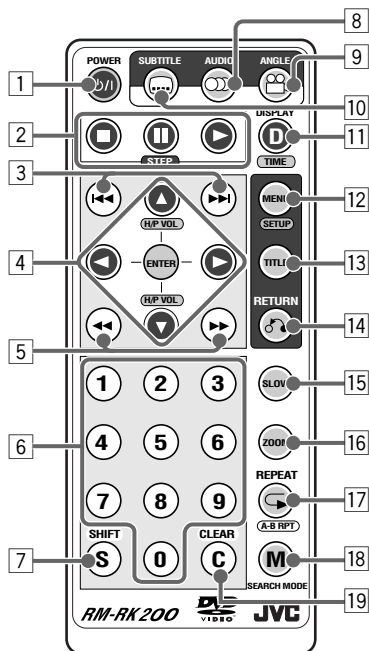

- 1 **POWER** (standby/on) button
- 2 **Disc operation buttons**  
■ (stop), II (pause) STEP, ► (play)
- 3 **◀◀ / ▶▶** (reverse search/forward search) buttons
- 4 **Menu operation buttons**  
▲ / ▼ / ◀ / ▶ (cursors), ENTER  
• ▲ / ▼ also function as **H/P VOL** (headphones volume) buttons while pressed with **SHIFT (S)** button.
- 5 **◀◀ / ▶▶** (reverse/fast forward) buttons
- 6 **Number buttons**
- 7 **SHIFT (S)** button
- 8 **AUDIO** button
- 9 **ANGLE** button
- 10 **SUBTITLE** button
- 11 **DISPLAY (D) / TIME** button  
• Also functions as **TIME** button while pressed with **SHIFT (S)** button.
- 12 **MENU/SETUP** button  
• Also functions as **SETUP** button while pressed with **SHIFT (S)** button.
- 13 **TITLE** button
- 14 **RETURN** button
- 15 **SLOW** button
- 16 **ZOOM** button
- 17 **REPEAT** /A-B RPT button  
• Also functions as **A-B RPT** button while pressed with **SHIFT (S)** button.
- 18 **SEARCH MODE (M)** button
- 19 **CLEAR (C)** button



## Control panel

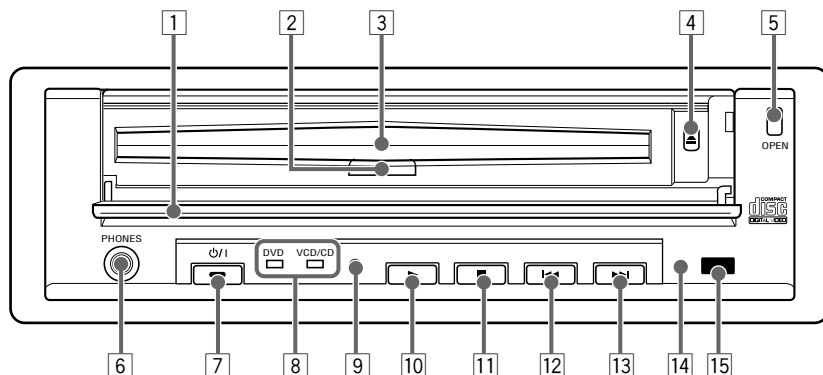



- 1 **Slot cover**
- 2 **Disc loading lamp**  
This lamp goes off when the disc type is detected.
- 3 **Loading slot**
- 4 **▲ (eject) button**
- 5 **OPEN button**
- 6 **PHONES jack**
- 7  **$\phi$ /I (standby/on) button and lamp**  
The lamp always lights up when the ignition key is on.
- 8 **Disc lamps (DVD, VCD/CD)**  
These lamps indicate the type of the disc loaded.
- 9 **Remote signal reception lamp**  
This lamp flashes when receiving the remote control signals.
- 10 **▶ (play) button and lamp**  
The lamp lights up when the power is on.
- 11 **■ (stop) button and lamp**  
The lamp lights up when the power is on.
- 12 **◀◀ (reverse search) button and lamp**  
The lamp lights up when the power is on.
- 13 **▶▶ (forward search) button and lamp**  
The lamp lights up when the power is on.
- 14 **Reset button**
- 15 **Remote sensor**



# TROUBLESHOOTING

What appears to be trouble is not always serious. Check the following points before calling a service center.

Symptoms	Causes	Remedies
• Playback cannot start after inserting a disc.	The disc is inserted upside down.	Insert the disc correctly.
• Sound and picture are sometimes interrupted or distorted.	You are driving on rough roads.	Stop playing a disc while driving on rough roads.
	The disc is scratched.	Change the disc.
	Connections are incorrect.	Check the cords and connections.
• Sound cannot be heard from the speakers.	The volume is turned to the minimum level.	Adjust it to the optimum level.
	Connections are incorrect.	Check the cords and connections.
	You are playing a disc with DTS Digital Surround.	This unit cannot output DTS sound without connecting a decoder compatible with DTS Digital Surround.
• No picture appears on the screen.	The video cord is not connected correctly.	Connect the video cord correctly.
	An incorrect input has been selected on the TV or monitor.	Select a correct input on the TV or monitor.
• The left and right edges of the picture are missing on the screen.	“4:3 PAN-SCAN (PS)” is selected when viewing on a conventional TV (aspect ratio 4:3).	Select “4:3 LETTERBOX (LB).” (See page 25.)
• No subtitle appears on the display though you have selected the initial subtitle language.	_____	Some DVDs are programed to always display no subtitle initially. If this happens, press <b>SUBTITLE</b>  after starting play.
• Audio language is different from the one you have selected as the initial audio language.	_____	Some DVDs are programed to always use the original language initially. If this happens, press <b>AUDIO</b>  after starting play.
• Disc can be neither played back nor ejected.	The built-in microcomputer may function incorrectly due to noise, etc.	Turn off the power, then turn it again.
• This unit does not work at all.	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button to reset the unit. (See page 2.)

# SPECIFICATIONS

## AUDIO SECTION

Frequency Response:  
 DVD, fs=48 kHz: 16 Hz to 22 000 Hz  
 DVD, fs=96 kHz: 16 Hz to 44 000 Hz  
 VCD, CD: 16 Hz to 20 000 Hz  
 Dynamic Range: 93 dB  
 Signal-to-Noise Ratio: 95 dB  
 Pickup wave length: 650 nm  
 Wow and Flutter: Less than measurable limit  
 Audio output level:  
 Analog (AUDIO L/R): 1.5 Vrms  
 Digital (DIGITAL OUT):  
 Signal wave length: 660 nm  
 Output level: -21 dBm to -15 dBm

## GENERAL

Power Requirement:  
 Operating Voltage: DC 14.4 V  
 (11 V to 16 V allowance)  
 Grounding System: Negative ground  
 Allowable Operating Temperature: 0°C to +40°C  
 Dimensions (W x H x D):  
 Unit Size:  
 178 mm x 50.5 mm x 167 mm  
 (7-1/16" x 2" x 6-5/8")  
 Installation Size:  
 182 mm x 52 mm x 150 mm  
 (7-3/16" x 2-1/16" x 5-15/16")  
 Panel Size: 188 mm x 58 mm x 13.4 mm  
 (7-7/16" x 2-5/16" x 9/16")  
 Mass: 1.4 kg (3.1 lbs) (excluding accessories)

## VIDEO SECTION

Color system: PAL  
 Video output (composite): 1 Vp-p/75 Ω

*Design and specifications subject to change without notice.*

## Output signals through the DIGITAL OUT terminal

They differ depending on the "DIGITAL OUT" setting on the Setup Menu.

DIGITAL OUT Playback Disc	Output Signals		
	STREAM	LPCM	OFF
DVD 48 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM	None
96 kHz, Linear PCM	48 kHz, Linear PCM	48 kHz, Linear PCM	None
with <b>Dolby Digital</b>	Dolby Digital bitstream	Down mix (2 channels)	None
with <b>DTS Digital Surround</b>	DTS bitstream	None	None
with <b>MPEG Audio</b>	Down mix (2 channels)	Down mix (2 channels)	None
<b>Video CD, Audio CD</b>	44.1 kHz, 16 bit Linear PCM	44.1 kHz, 16 bit Linear PCM	None
<b>Audio CD with DTS</b>	DTS bitstream	DTS bitstream	None

**Having TROUBLE with operation?**

**Please reset your unit**

Refer to page of How to reset your unit

**Haben Sie PROBLEME mit dem Betrieb?**

**Bitte setzen Sie Ihr Gerät zurück**

Siehe Seite Zurücksetzen des Geräts

**Vous avez des PROBLÈMES de fonctionnement?**

**Réinitialisez votre appareil**

Référez-vous à la page intitulée Comment réinitialiser votre appareil

**Hebt u PROBLEMEN met de bediening?**

**Stel het apparaat terug**

Zie de pagina met de paragraaf Het apparaat terugstellen

**JVC**


VICTOR COMPANY OF JAPAN, LIMITED

# CAUTION / VORSICHT / PRECAUTION

To prevent noises, connect the monitor's controller unit (KV-M700) and this unit (KV-DV7) using a wire (supplied)—be sure to connect the metallic parts.

Verbinden Sie die Steuereinheit des Monitors (KV-M700) und dieses Gerät (KV-DV7) mit einem (mitgeliefert) Draht, um Geräusche zu vermeiden. Achten Sie darauf, daß Sie metallische Teile miteinander verbinden.

*Pour éviter les bruits, connectez le contrôleur de moniteur (KV-M700) et cet appareil (KV-M700) en utilisant un fil (fourni) — en prenant soin de connecter le fil aux parties métalliques.*

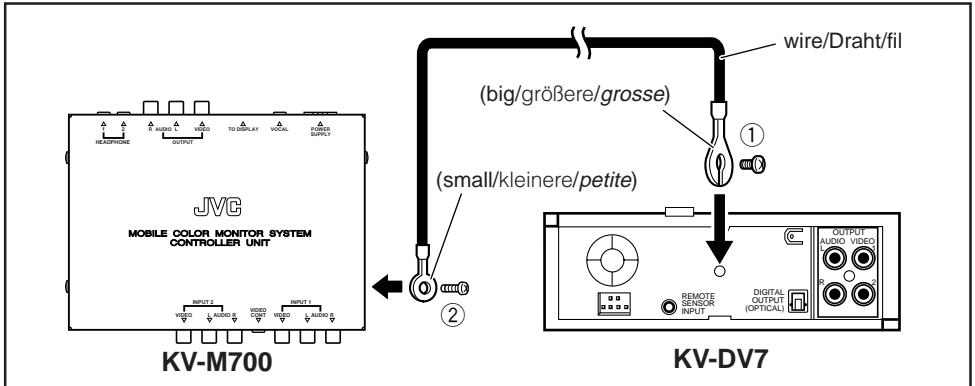

## ENGLISH

- ① Attach one terminal (big) of the supplied wire to the center hole on KV-DV7's rear panel, using a screw (M5 x 6 mm: supplied).
- ② Remove one screw from the side panel of KV-M700's controller unit, and attach the other terminal (small) of the supplied wire using the removed screw.

## DEUTSCH

- ① Befestigen Sie das (größere) Ende des mitgelieferten Drahts an der mittleren Bohrung auf der Rückseite des KV-DV7. Verwenden Sie hierzu die zum Lieferumfang gehörende Schraube (M5 x 6 mm: mitgeliefert).
- ② Drehen Sie eine Schraube aus der Seitenblende der Steuereinheit des KV-M700 heraus, und befestigen Sie das andere (kleinere) Ende des Drahts mit dieser herausgedrehten Schraube.


## FRANÇAIS

- ① *Attachez une extrémité (la plus grosse) du fil fourni au trou central sur le panneau arrière du KV-DV7 en utilisant une vis (M5 x 6 mm: fournie).*
- ② *Retirez une vis du panneau latéral du contrôleur du KV-M700 et attachez l'autre extrémité (la plus petite) du fil fourni en utilisant la vis que vous venez de retirer.*



# CAUTION / ACHTUNG / ATTENTION / LET OP

Disc loading slot / Ladeschlitzes / Trappe à disques / Laadopening

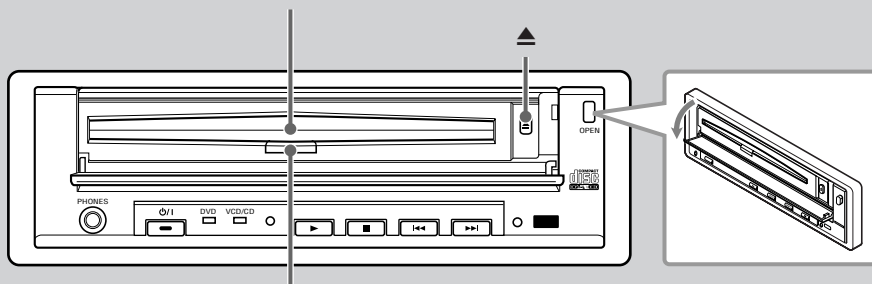

Disc loading lamp / Disc-Ladeleuchte / Témoin de charge de disque / Lampje voor geplaatste disk

## ENGLISH

**DO NOT** insert a disc while the disc loading lamp is flashing or is not lit.

When the disc loading lamp is not lit, press ▲ to check whether a disc is in the disc loading slot before inserting a disc.

- *If a disc is in the disc loading slot, it comes out, and you can replace it with another disc.*
- *If no disc is in the disc loading slot, the disc loading lamp lights up, and you can insert a disc.*

## DEUTSCH

**KEINE** Disc einlegen, wenn die Disc-Ladeleuchte blinkt oder nicht leuchtet.

Wenn die Disc-Ladeleuchte nicht leuchtet, drücken Sie die Taste ▲, um zu prüfen, ob sich eine Disc im Ladeschacht befindet, bevor Sie eine Disc einlegen.

- *Wenn sich eine Disc im Ladeschacht befindet, wird sie ausgeworfen, und Sie können eine andere Disc einlegen.*
- *Wenn sich keine Disc im Ladeschacht befindet, leuchtet die Disc-Ladeleuchte, und Sie können eine Disc einlegen.*

## FRANÇAIS

**N'INTRODUISEZ PAS** de disque si le témoin de charge de disque clignote ou reste éteint.

Quand le témoin de charge de disque n'est pas allumé, appuyez sur ▲ pour vérifier si un disque se trouve dans la fente d'insertion de disque.


- *Si un disque se trouve dans la fente, il est éjecté et vous pouvez le remplacer par un autre.*
- *Si aucun disque ne se trouve dans la fente, le témoin de charge de disque s'allume et vous pouvez insérer un disque.*

## NEDERLANDS

**Plaats GEEN** disk als het lampje voor geplaatste disk knippert of uit is.

Druk als het lampje voor geplaatste disk bij de lade niet aan is, op ▲ en ga na of de lade vrij is alvorens een disk in de lade te plaatsen.

- *Als er zich een disk in de lade bevindt, komt deze naar buiten geschoven en kunt u deze door een andere disk vervangen.*
- *Als er zich geen disk in de lade bevindt, gaat het lampje bij de lade aan en kunt u er een disk in plaatsen.*

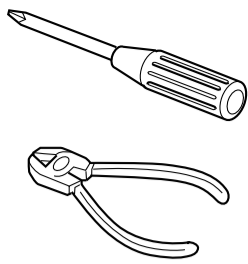

#### ENGLISH

#### DEUTSCH

#### FRANÇAIS

#### NEDERLANDS

## WARNING

- **DO NOT INSTALL THE UNIT IN A LOCATION WHICH OBSTRUCTS DRIVING, VISIBILITY OR WHICH IS PROHIBITED BY APPLICABLE LAWS AND REGULATIONS.**

If the unit is installed in a location which obstructs forward visibility or operation of the air bag or other safety equipment or which interferes with operation of the vehicle, it may cause an accident.

- **NEVER USE BOLTS OR NUTS FROM THE VEHICLE'S SAFETY DEVICES FOR INSTALLATION.**

If bolts or nuts from the steering wheel, brakes or other safety devices are used for installation of the unit, it may cause an accident.

- **ATTACH THE WIRES CORRECTLY.**

If the wiring is not correctly performed, it may cause a fire or an accident. In particular, be sure to run and secure the lead wire so that it does not get tangled with a screw or the moving portion of a seat rail.

- **USE WITH DC 12 V NEGATIVE GROUND VEHICLES.**

This unit is only for use in a DC 12 V negative ground vehicle.

It cannot be used in large trucks or diesel vehicles which are DC 24 V vehicles.

If it is used in the wrong type of vehicle, it may cause a fire or accident.

- **To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.**
- **Avoid installing the unit in the following places**

- Where it would hinder your safety driving.
- Where it would be exposed to direct sunlight or heat directly from the heater or placed in an extremely hot place.
- Where it would be subject to rain, water splashes or excessive humidity.
- Where it would be subject to dust.
- Where it would be positioned on an unstable place.
- Where it could damage the car's fittings.
- Where proper ventilation would not be maintained, such as under a floor mat.

## WARNUNGEN

- **INSTALLIEREN SIE DAS GERÄT NICHT AN EINEM ORT, AN DEM DAS FÜHREN DES FAHRZEUGS ODER DIE SICHT BEEINTRÄCHTIGT WIRD ODER DER AUFGRUND GELTENDER GESETZE UND VERORDNUNGEN UNZULÄSSIG IST.**

Wenn Sie das Gerät an einem Ort installieren, an dem die Voraussicht oder der Betrieb des Airbags oder anderer Sicherheitseinrichtungen des Fahrzeugs beeinträchtigt wird oder das Führen des Fahrzeugs gestört wird, kann es die Ursache für einen Unfall sein.

- **VERWENDEN SIE NIEMALS SCHRAUBEN ODER MUTTERN DER SICHERHEITSEINRICHTUNGEN DES FAHRZEUGS ZUR INSTALLATION.**

Wenn Schrauben oder Muttern des Lenkrads, der Bremsen oder anderer Sicherheitseinrichtungen zur Installation des Geräts verwendet werden, kann ein Unfall verursacht werden.

- **BRINGEN SIE DIE DRÄHTE ORDNUNGSGEMÄSS AN.**

Wenn die Verkabelung nicht richtig durchgeführt wird, entsteht hierdurch möglicherweise ein Feuer oder Unfall. Achten Sie insbesondere darauf, das Kabel so zu verlegen und zu sichern, daß es sich nicht mit einer Schraube oder dem beweglichen Teil einer Sitzschiene verheddert.

- **VERWENDEN SIE DAS GERÄT NUR IN FAHRZEUGEN MIT 12-V-GLEICHSTROMSYSTEM UND NEGATIVER ERDUNG.**

Dieses Gerät darf nur in Fahrzeugen mit einem 12-V-Gleichstromsystem und Negativer Erdung verwendet werden.

Es darf nicht in großen Lkw oder Dieselfahrzeugen mit 24-V-Gleichstromsystemen verwendet werden. Wenn das Gerät im falschen Fahrzeugtyp verwendet wird, kann es ein Feuer oder einen Unfall verursachen.

- **Um einen Kurzschluß zu vermeiden, empfiehlt es sich, den negativen Pol der Batterie abzutrennen und alle elektrischen Anschlüsse vorzunehmen, bevor das Gerät installiert wird. Wenn Sie sich nicht sicher sind, wie das Gerät installiert wird, lassen Sie es von einem qualifizierten Techniker einbauen.**
- **Installieren Sie das Gerät nicht an solchen Orten:**

- an denen die Fahrsicherheit gefährdet wäre.
- an denen es direkter Sonneneinstrahlung oder Hitze einwirkung durch die Heizung ausgesetzt wäre. Installieren Sie es auch nicht an einem extrem heißen Ort.
- an denen es Regen, Wasserspritzern oder übermäßiger Feuchtigkeit ausgesetzt wäre.
- an denen es Staub ausgesetzt wäre.
- die instabil sind.
- an denen die Fahrzeugarmaturen beschädigt werden könnten.
- an denen keine ordnungsgemäße Belüftung aufrechterhalten werden kann, z.B. unterhalb von Bodenmatten.

## AVERTISSEMENT

- **N'INSTALLEZ PAS L'APPAREIL DANS UN ENDROIT QUI GENE LA CONDUITE, LA VISIBILITE OU QUI EST INTERDIT PAR LE CODE DE LA ROUTE ET LES REGLEMENTS.**

Si l'appareil était installé à un emplacement gênant la visibilité avant, ou le déploiement du sac à air, et autres dispositifs de sécurité, ou à un emplacement gênant pour la conduite du véhicule, comme près du levier des vitesses ou de la pédale du frein, cela risquerait de provoquer des accidents.

- **NE JAMAIS UTILISER POUR L'INSTALLATION DES BOULONS OU DES ECROUS PROVENANT DES DISPOSITIFS DE SECURITE DU VEHICULE.**

Si l'on utilisait pour l'utilisation de l'appareil des boulons et des écrous cannibalisés du volant, des freins ou autres dispositifs de sécurité, cela risquerait de provoquer des accidents.

- **ATTACHER LES CORDONS CORRECTEMENT.**

Si le câblage n'est pas exécuté correctement, cela risque de provoquer un incendie ou autre accident. Veiller, en particulier, à tirer et attacher les fils en sorte qu'ils ne s'accrochent pas à une vis ou ne se coincent dans les parties mobiles des rails des sièges.

- **USAGE SUR LES VEHICULES DE 12 V CC AVEC NEGATIF A LA MASSE.**

Cet appareil ne peut pas être utilisé que sur les véhicules de 12 V CC avec négatif à la masse. Il ne peut pas être utilisé sur les gros camions ou les véhicules diesel de 24 V CC.

S'il était utilisé sur un type de véhicule inadéquat cela risquerait de provoquer un incendie ou autres accidents.

- **Pour éviter les courts-circuits, nous recommandons que vous déconnectiez la borne négative de la batterie et réalisez toutes les connexions électriques avant d'installer l'appareil. Si vous n'êtes pas sûr de savoir comment installer cet appareil correctement, faites-le installer par un technicien qualifié.**
- **Évitez d'installer l'appareil dans les endroits suivants**

- Où il peut gêner la conduite de la voiture.
- Où il est exposé à la lumière directe du soleil, à la chaleur directe du chauffage ou placé dans un endroit très chaud.
- Où il est sujet à la pluie, aux éclaboussures ou à une humidité excessive.
- Où il est sujet à la poussière.
- Où il est positionné dans un endroit instable.
- Où il peut endommager les accessoires de la voiture.
- Où une ventilation correcte ne peut pas être maintenue, comme sous un tapis de sol.

## WAARSCHUWING

- **INSTALLEER DE EENHEID NIET OP EEN PLAATS WAAR DIT HET RIJDEN, OF HET UITZICHT BELEMMERT, OF WAAR DIT BIJ WET OF ANDERE REGELGEVING IS VERBODEN.**

Als de eenheid op een plaats is geïnstalleerd waar dit het uitzicht op de weg belemmert, dit de werking van de airbag of dit andere veiligheidsvoorzieningen hindert, of waar het besturen van het voertuig in gevaar wordt gebracht, kan dit tot een ongeval lijden.

- **GEBRUIK NOOIT SCHROEVEN OF MOEREN VOOR DE INSTALLATIE DIE NODIG ZIJN VOOR DE VEILIGHEIDSVORZIENINGEN VAN DE AUTO.**

Als schroeven of moeren van het stuur, de rem of andere veiligheidsvoorzieningen worden gebruikt voor de installatie van de eenheid, kan dit tot een ongeval lijden.

- **SLUIT DE BEDRADING OP DE JUISTE WIJZE AAN.**

Als de bedrading verkeerd wordt aangesloten, kan dit tot brand of een ongeval lijden. Let er met name op dat de stroomvoorzieningskabel nergens achter blijft steken of in contact komt met de bewegende delen van de rails van de stoelen.

- **ALLEEN GEBRUIKEN IN COMBINATIE MET VOERTUIGEN DIE WERKEN MET EEN NEGATIEVE AARDING VAN 12 V GELIJKSTROOM.**

Dit eenheidsysteem is alleen bedoeld voor voertuigen die zijn gebaseerd op een negatieve aarding van 12 V gelijkstroom.

Het systeem kan niet worden gebruikt in vrachtwagens of diesels, die met 24 V gelijkstroom werken.

Wanneer dit systeem in een verkeerd type voertuig wordt gebruikt, kan dit tot brand of een ongeval lijden.


- **Ter voorkoming van kortsluiting, raden we aan dat u de negatieve aansluiting van de accu losmaakt en daarna alle benodigde verbindingen tot stand brengt alvorens de eenheid te installeren. Als u niet zeker weet hoe u de eenheid moet installeren, kunt u dit beter door een erkend vakman laten doen.**
- **Installeer de eenheid niet op de volgende plaatsen:**

- waar deze een gevaar vormt voor het besturen van de auto.
- waar deze wordt blootgesteld aan direct zonlicht, een verwarming of een andere hittebron.
- waar deze wordt blootgesteld aan regen, spatwater of extreme vochtigheid.
- waar deze wordt blootgesteld aan stof.
- waar deze op een instabiele ondergrond komt te staan.
- waar deze de auto kan beschadigen.
- waar geen ventilatie is, zoals onder een vloermat.


## Parts list for installation and connection

The following parts are provided for this unit. After checking them, please set them correctly.


Sleeve  
Halterung  
Manchon  
Huis

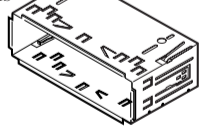

Trim plate  
Frontrahmen  
Plaque d'assemblage  
Sierplaat

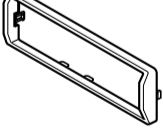

Mounting brackets  
Haltewinkel  
Ferrures de montage  
Bevestigingsbeugels

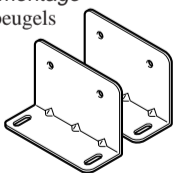

Screws (M5 x 6 mm)  
Schrauben (M5 x 6 mm)  
Vis (M5 x 6 mm)  
Schroeven (M5 x 6 mm)



 
Tapping screws (M5 x 20 mm)  
Blechschrauben (M5 x 20 mm)  
Vis auto-taraudeuses (M5 x 20 mm)  
Tapschroeven (M5 x 20 mm)



Remote sensor unit  
Fernbedienungs-Sensoreinheit  
Unité de capteur de télécommande  
Sensor voor bediening op afstand



Power cord  
Spannungsversorgungskabel  
Cordon d'alimentation  
Stroomkabel



Handles  
Griffe  
Poignées  
Hendels



## Liste des pièces pour l'installation et raccordement

Les pièces suivantes sont fournies avec cet appareil. Après vérification, veuillez les placer correctement.

 
Velcro tape  
Klettband  
Bande velcro  
Hechtstrip



Remote control data cord  
Fernbedienungs-Datenkabel  
Cordon de données de télécommande  
Afstandsbedienings snoer



Audio/video cord  
Audio/Video-Kabel  
Câble audio/vidéo  
Audio-/videokabel



Lock nut (M5)  
Sicherungsmutter (M5)  
Ecrou d'arrêt (M5)  
Contra-moer (M5)




Washer (ø5)  
Unterlegscheibe (ø5)  
Rondelle (ø5)  
Sluitring (ø5)



## Lijst van onderdelen die u bij installatie en aansluiting nodig hebt

 De volgende onderdelen worden bij het apparaat geleverd. Installeer ze op de juiste wijze, nadat u ze hebt gecontroleerd.

Remote controller  
Fernbediening  
Télécommande  
Afstandsbediening



Battery  
Batterie  
Pile  
Batterij



CR2025

Mounting bolt (M5 x 20 mm)  
Befestigungsschrauben (M5 x 20 mm)  
Boulon de montage (M5 x 20 mm)  
Bevestigingsbout (M5 x 20 mm)



Rubber cushion  
Gummipuffer  
Amortisseur en caoutchouc  
Rubberdop



## TROUBLESHOOTING

- **The fuse blows.**  
\* Are the red and black leads connected correctly?
- **Power cannot be turned on.**  
\* Is the yellow lead connected?
- **Picture does not come on screen.**  
\* Is the video cord correctly connected?
- **Sound does not come out.**  
\* Is the audio cord correctly connected?

## FEHLERSUCHE

- **Die Sicherung brennt durch.**  
\* Sind das rote und das schwarze Kabel ordnungsgemäß angeschlossen?
- **Die Stromversorgung kann nicht eingeschaltet werden.**  
\* Ist das gelbe Kabel angeschlossen?
- **Auf dem Bildschirm erscheint kein Bild.**  
\* Ist das Video-Kabel richtig angeschlossen?
- **Kein Ton.**  
\* Ist das Audio-Kabel richtig angeschlossen?

## EN CAS DE DIFFICULTES

- **Le fusible saute.**  
\* Les fils rouge et noir sont-ils raccordés correctement?
- **L'appareil ne peut pas être mise sous tension.**  
\* Le fil jaune est-elle raccordée?
- **Aucune image n'apparaît sur l'écran.**  
\* Le câble vidéo est-il bien branché ?
- **Aucun son ne sort.**  
\* Le câble vidéo est-il bien branché ?

## PROBLEMEN OPLOSSEN

- **De zekering brandt door.**  
\* Zijn de rode en zwarte kabels goed aangesloten?
- **De stroom kan niet worden ingeschakeld.**  
\* Is de gele kabel aangesloten?
- **Er is geen beeld op het scherm.**  
\* Is de videokabel goed aangesloten?
- **Er is geen geluid te horen.**  
\* Is de audiokabel goed aangesloten?



## INSTALLATION

- The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC IN-CAR ENTERTAINMENT or a company supplying kits.

## EINBAU

- Die folgende Abbildung zeigt einen typischen Einbau. Dennoch müssen Sie entsprechend Ihrem jeweiligen Auto Anpassungen vornehmen. Bei irgendwelchen Fragen oder wenn Sie Informationen hinsichtlich des Einbausatzes brauchen, wenden Sie sich an ihren JVC Autoradiohändler oder ein Unternehmen das diese Einbausätze vertreibt.

## INSTALLATION

- L'illustration suivante est un exemple d'installation typique. Cependant, vous devez faire les ajustements correspondant à votre voiture particulière. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

## INSTALLATIE

- Op de volgende afbeelding kunt u zien hoe de installatie, normaal gesproken, in zijn werk gaat. U moet echter bij de installatie rekening houden met de bijzonderheden van uw eigen auto. Neem bij vragen of voor meer bijzonderheden over inbouwpakketten contact op met uw JVC car audio dealer of een dealer of een bedrijf dat inbouwpakketten levert.

### Recommended installation: Installing the unit under the passenger's seat

To avoid internal heat buildup inside the unit, do not attach it under a floor mat.

- 1 Attach the mounting brackets to the main unit.
- 2 Drill 4 holes where you want to attach the main unit.
  - Be careful not to damage the wiring or parts under the floor.

Then, fix the main unit using the tapping screws.

**Note:** When installing the monitor's controller unit, do not place it on KV-DV7.

### Empfohlener Einbau: Einbau des Geräts unter dem Beifahrersitz

Damit es zu keinem Hitzeaufbau im Gerät kommt, darf es nicht unter einer Bodenmatte angebracht werden.

- 1 Die Haltewinkel am Hauptgerät anbringen.
- 2 Dort 4 Löcher bohren, wo das Hauptgerät angebracht werden soll.
  - Darauf achten, dass keine Kabel oder andere Teile unter dem Boden dabei beschädigt werden.

Befestigen Sie das Hauptgerät anschließend mit den Blechschrauben.

**Hinweis:** Wenn Sie die Steuereinheit des Monitors installieren, bringen Sie sie nicht auf dem KV-DV7 an.

### Installation recommandée: Installation de l'appareil sous le siège du passager avant

Pour éviter toute accumulation de chaleur à l'intérieur de cet appareil, ne le fixez pas sous un tapis de plancher.

- 1 Fixez les ferrures de montage sur l'appareil principal.
- 2 Percez 4 trous à l'emplacement où vous souhaitez fixer l'appareil principal.
  - Faites très attention de ne pas endommager le câblage ou les composants qui se trouvent sous le plancher.

Ensuite, fixez l'appareil principal à l'aide des vis auto-taraudeuses.

**Remarque:** Lors de l'installation du contrôleur de moniteur, ne le placez pas sur le KV-DV7.



### Aanbevolen installatie: Installeer de eenheid onder de stoel van de bijrijder

Om warmteontwikkeling in de eenheid te voorkomen, wordt afgeraden de eenheid onder de vloermat te installeren.

- 1 Maak de bevestigingsbeugels op de hoofdeenheid vast.
- 2 Maak 4 gaatjes op de plaats waar u de hoofdeenheid wilt installeren.
  - Let erop dat u geen draden of onderdelen onder de vloer raakt.

Bevestig de hoofdeenheid vervolgens met behulp van de tapschroeven.

**Opmerking:** Let er bij het plaatsen van de controller-eenheid voor de monitor op dat u deze niet op de KV-DV7 plaatst.

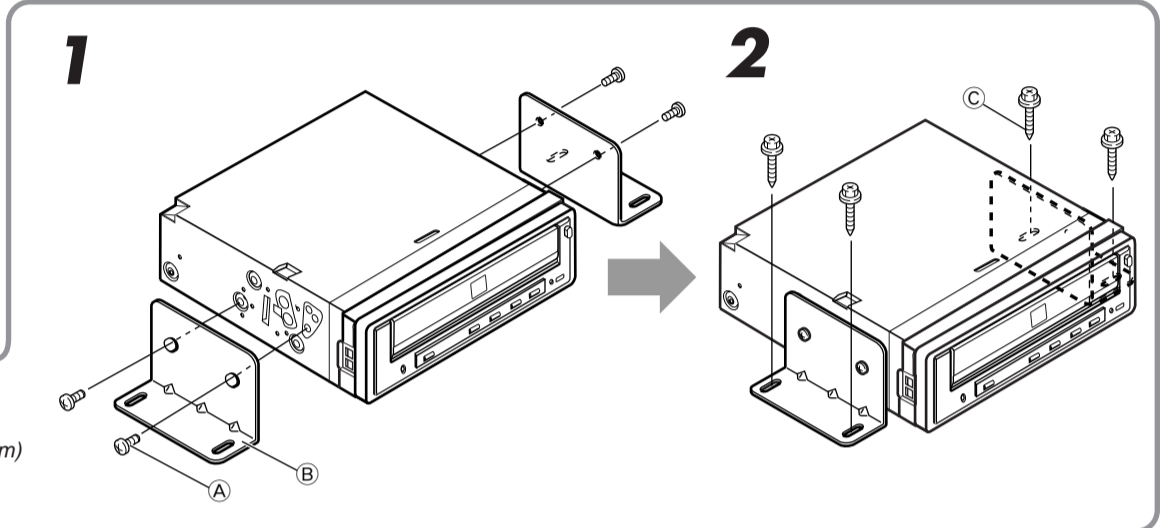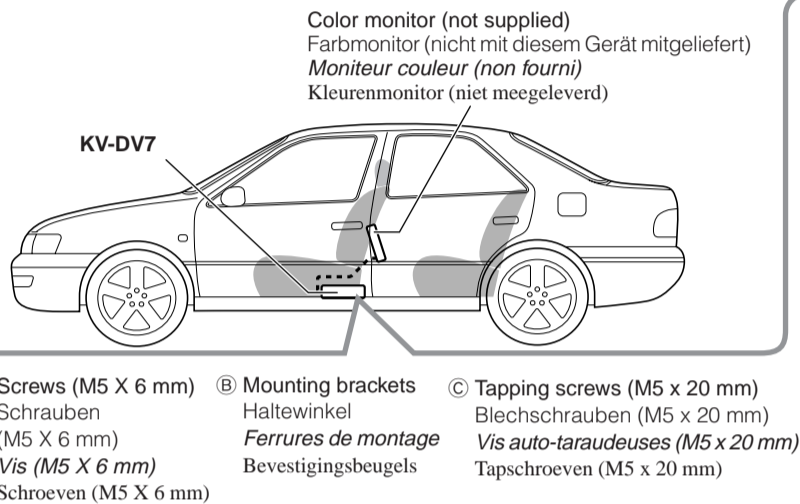

### When installing the unit into the dashboard

- 1 Attach the trim plate.
- 2 Install the sleeve into the dashboard.
  - \* After the sleeve is correctly installed into the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.
- 3 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.
- 4 Do the required electrical connections.
- 5 Slide the unit into the sleeve until it is locked by pressing the four corners of the trim plate.

### Wenn das Gerät im Armaturenbrett eingebaut werden soll


- 1 Befestigen Sie die Frontrahmen.
- 2 Die Halterung im Armaturenbrett einbauen.
  - \* Nach dem korrekten Einbau der Halterung im Armaturenbrett, die entsprechenden Riegel umknicken, um die Halterung an ihrem Platz zu sichern, siehe Abbildung.
- 3 Die Befestigungsschraube an der Rückseite des Gerätekörpers befestigen und das Ende der Schraube mit einem Gummipuffer abdecken.
- 4 Nehmen Sie die erforderlichen elektrischen Anschlüsse vor.
- 5 Schieben Sie das Gerät in die Halterung. Das Gerät wird verriegelt, indem Sie auf die vier Ecken des Frontrahmen drücken.

### En cas d'installation de cet appareil sur le tableau de bord

- 1 Fixez la plaque d'assemblage.
- 2 Installer le manchon dans le tableau de bord.
  - \* Après installation correcte du manchon dans le tableau de bord, plier les bonnes pattes pour maintenir fermement le manchon en place, comme montré.
- 3 Monter le boulon de montage sur l'arrière du corps de l'appareil puis passer l'amortisseur en caoutchouc sur l'extrémité du boulon.
- 4 Réalisez les connexions électriques.
- 5 Faites glisser l'appareil dans le manchon jusqu'à ce qu'il soit verrouillé en appuyant sur les quatre coins de la plaque d'assemblage.

### Als u de eenheid in het dashboard installeert

- 1 Bevestig de verstelbare plaat.
- 2 Installeer het huis in het dashboard.
  - \* Nadat het huis op de juiste wijze in het dashboard is geplaatst, moet u de palletjes, zoals afgebeeld, stevig op hun plaats duwen.
- 3 Maak de bevestigingsbout aan de achterkant van het apparaat vast en plaats de rubberdop over het uiteinde van de bout.
- 4 Breng de vereiste elektrische verbindingen tot stand.
- 5 Wanneer u de eenheid in de ombouw schuift, kunt u deze vastzetten door op de vier hoeken van de bevestigingsplaten te drukken.

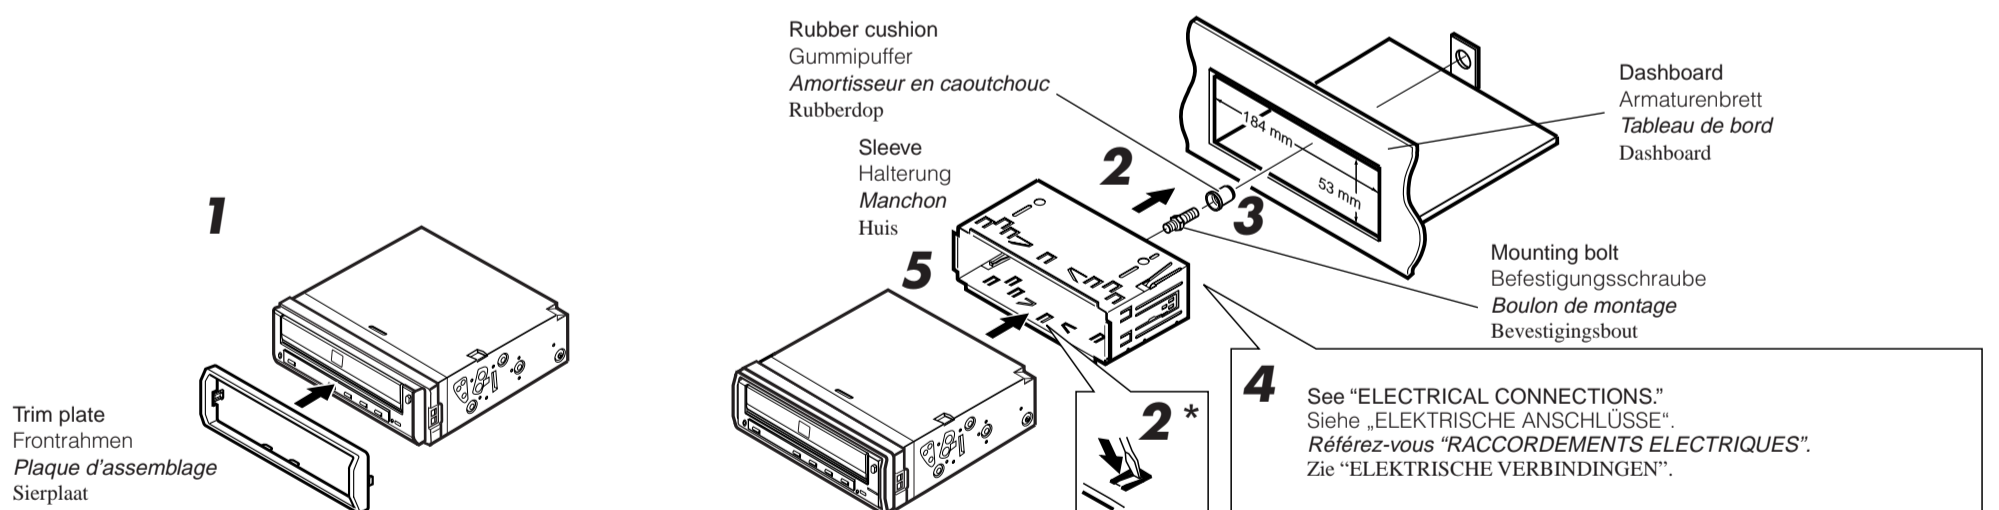

### Removing the unit

- Before removing the unit, release the rear section.
- 1 Remove the trim plate.
  - 2 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. **(Be sure to keep the handles for future use.)**

### Ausbau des Geräts



- Vor dem Ausbau des Geräts den hinteren Teil freigeben.
- 1 Den Frontrahmen abnehmen.
  - 2 Die 2 Griffe in die Schlitzte wie gezeigt stecken. Dann die Griffe behutsam auseinander ziehen und das Gerät herausziehen. **(Die Griffe nach dem Einbau für späteren Gebrauch aufbewahren.)**

### Retrait de l'appareil

- Avant de retirer l'appareil, libérer la section arrière.
- 1 Retirer la plaque d'assemblage.
  - 2 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. **(S'assurer de conserver les poignées pour une utilisation ultérieure.)**


### Extracción de la unidad

- Antes de extraer la unidad, libere la sección trasera.
- 1 Retire la placa de guarnición.
  - 2 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe gentilmente las manijas y extraiga la unidad. **(Asegúrese de conservar las manijas voor als u deze in de toekomst nodig hebt.)**

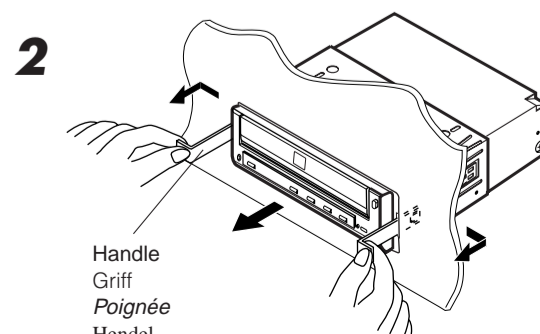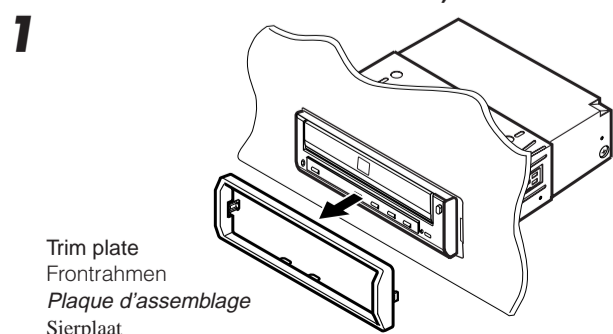




- When using the optional stay
- Beim Verwenden der Anker-Option
- Lors de l'utilisation du hauban en option
- Wanneer u de steun gebruikt (facultatief)

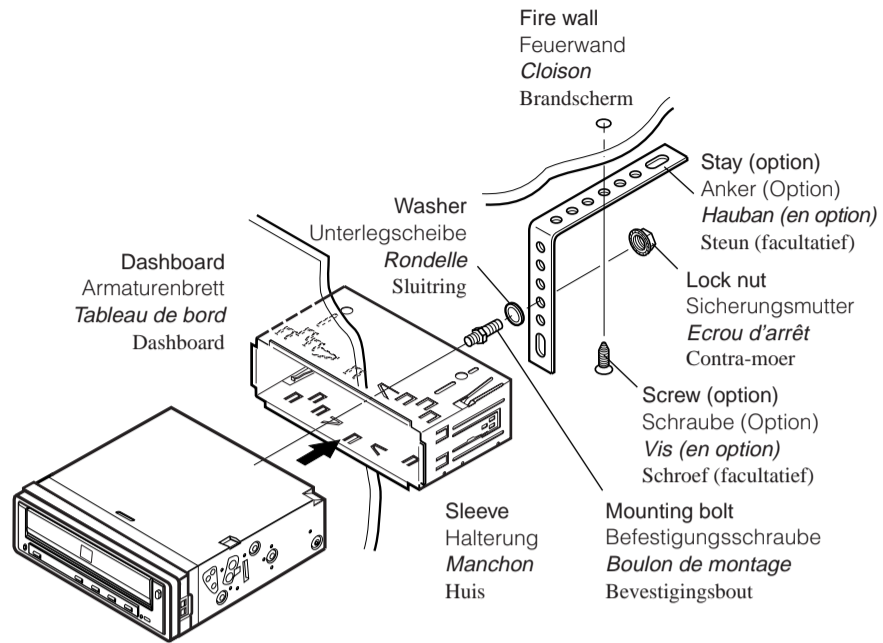

- When installing the unit with the car receiver in the dashboard
  - Wenn das Gerät mit dem Empfänger im Armaturenbrett eingebaut werden soll
  - En cas d'installation de cet appareil avec le récepteur mobile implanté sur le tableau de bord
  - Als u de eenheid samen met de auto-ontvanger in het dashboard wilt installeren
- In a Toyota for example, install the unit together with the car receiver.  
 Beispiel: In einem Toyota das Gerät zusammen mit dem Empfänger einbauen.  
 Dans une Toyota, par exemple, installez cet appareil avec le récepteur automobile.  
 De eenheid kan bijvoorbeeld in een Toyota samen met de auto-ontvanger worden geïnstalleerd.

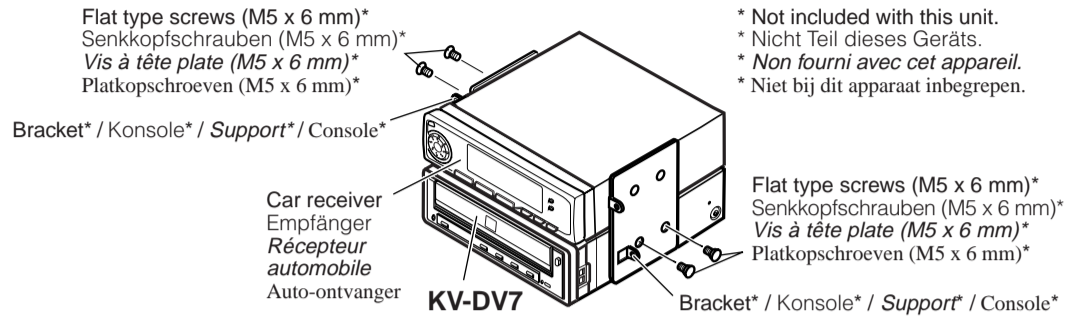

**Note:** When installing the unit on the mounting brackets, make sure to use the 6 mm-long screws. If longer screws are used, they could damage the unit.  
**Hinweis:** Beim Anbringen des Gerät an der Konsole sicherstellen, daß 6 mm lange Schrauben verwendet werden. Werden längere Schrauben verwendet, können sie das Gerät beschädigen.  
**Remarque:** Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 6 mm. Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.  
**Opmerking:** Wanneer u het apparaat aan de bevestigingsklem vastmaakt, moet u de 6 mm lange schroeven gebruiken. Als u langere schroeven gebruikt, kan het apparaat worden beschadigd.

**ELECTRICAL CONNECTIONS**

**ELEKTRISCHE ANSCHLÜSSE**

**RACCORDEMENTS ELECTRIQUES**

**ELEKTRISCHE VERBINDINGEN**

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

Zur Vermeidung von Kurzschlüssen empfehlen wir, daß Sie den negativen Batterieanschluß abtrennen und alle elektrischen Anschlüsse herstellen, bevor das Gerät eingebaut wird. Sind Sie sich über den richtigen Einbau des Geräts nicht sicher, lassen Sie es von einem qualifizierten Techniker einbauen.

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

Om kortsluiting te voorkomen adviseren wij u om de minpool van de accu los te maken en alle elektrische verbindingen tot stand te brengen voordat u het apparaat in de auto installeert. Als u niet zeker weet hoe u dit apparaat moet installeren, kunt u dit beter door een daartoe gekwalificeerde technicus laten doen.

**Note:** This unit is designed to operate on 12 V DC, **NEGATIVE** ground electrical systems. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC IN-CAR ENTERTAINMENT.

**Hinweis:** Dieses Gerät ist für den Betrieb in **elektrischen Anlagen mit 12 V Gleichstrom und (-) Erdung** ausgelegt. Verfügt Ihr Fahrzeug nicht über diese Anlage, ist ein Spannungsinverter erforderlich, der bei JVC Autoradiohändler erworben werden kann.

**Remarque:** Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 V à masse **NEGATIVE**. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

**Opmerking:** Dit apparaat mag worden gebruikt bij elektrische systemen die werken op 12 V **gelijkstroom met negatieve aarding**. Als uw auto niet is uitgerust met een dergelijk systeem, is een spanningsomzetter vereist. Dit instrument kan worden aangeschaft bij JVC car audio dealers.

- Replace the fuse with one of the specified ratings. If the fuse blows frequently, consult your JVC IN-CAR ENTERTAINMENT.
- If noise is a problem... This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's rear ground terminal (see connection diagram) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC IN-CAR ENTERTAINMENT.

- Die Sicherung mit einer der entsprechenden Nennleistung ersetzen. Brennt die Sicherung häufig durch, wenden Sie sich an ihren JVC Autoradiohändler.
- Sind Störgeräusche ein Problem... Dieses Gerät enthält ein Störfilter im Stromkreis. Bei manchen Fahrzeugen kann jedoch ein Klicken oder andere unerwünschte Störgeräusche auftreten. Sollte das der Fall sein, die **hintere Erdungsanschlußklemme** (siehe Schaltplan) des Geräts am Fahrwerk des Fahrzeugs anschließen, dabei kürzere und dickere Kabel wie beispielsweise Kupfergeflecht oder Stahldraht verwenden. Bleibt Störgeräusch bestehen, wenden Sie sich an Ihren JVC Autoradiohändler.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème... Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la borne arrière de masse de l'appareil au châssis de la voiture (voir le schéma de raccordement) en utilisant des cordons les plus gros et les plus courts possible. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.

- Vervang de zekering door een exemplaar met het aangegeven vermogen. Als de zekering vaak doorslaat, moet u uw JVC car audio dealer raadplegen.
- Als u geluidsproblemen hebt... De krachtschakeling van dit apparaat heeft een ingebouwd geluidsfilter. In sommige voertuigen zijn tikgeluiden of andere ongewenste geluiden te horen. Als dit gebeurt, moet u de **massaklem aan de achterkant** (zie aansluitingsschema) aan het chassis van de auto vastmaken met behulp van een kortere en dikkere kabel, zoals kopermanteldraad of tellerkabel. Als het geluid niet verdwijnt, moet u contact opnemen met uw JVC car audio dealer.

**Typical Connections / Typische Anschlüsse / Raccordements typiques / Normale verbindingen**

**Before connecting:** Check the wiring in the vehicle carefully. Incorrect connection may cause serious damage to this unit.

**Vor dem Anschließen:** Die Verdrahtung im Fahrzeug sorgfältig überprüfen. Falsche Anschlüsse können ernsthafte Schäden am Gerät hervorrufen.

**Avant de commencer la connexion:** vérifiez attentivement le câblage du véhicule. Une connexion incorrecte peut endommager sérieusement l'appareil.

**Alvorens de verbindingen tot stand te brengen:** moet u de bedrading in de auto zorgvuldig. Het apparaat kan door verkeerde verbindingen ernstige schade oplopen.


- 1 Connect the colored leads of the power cord in the following sequence.
  - ① Black: ground
  - ② Yellow: to car battery (constant 12 V)
  - ③ Red: to an accessory terminal in the fuse block or to the remote control lead of JVC car receiver
- 2 Finally connect the wiring harness to the unit.

- 1 Schließen Sie die farbigen Kabel des Spannungsversorgungskabels in der folgenden Reihenfolge an.
  - ① Schwarz: an Erde
  - ② Gelb: an die Autobatterie (12 V Gleichstrom)
  - ③ Rot: an einem Zusatzgeräteanschluß im Sicherungsblock oder am Fernbedienungsleiter des JVC-Empfängers im Fahrzeug
- 2 Schließen Sie zum Schluß den Kabelbaum an das Gerät an.

- 1 Connectez les fils de couleur du cordon d'alimentation dans l'ordre suivant.
  - ① Noir: à la masse
  - ② Jaune: à la batterie de la voiture (12 V constant)
  - ③ Rouge: sur une borne d'accessoire du porte-fusible ou sur le conducteur de la télécommande du récepteur automobile JVC
- 2 Finalement, connectez le faisceau de fils à l'appareil.

- 1 Sluit de gekleurde draden van de stroomkabel in deze volgorde aan.
  - ① Zwart: aarde
  - ② Geel: naar de accu van de auto (constant 12 V)
  - ③ Rood: naar de uitgang van een accessoire in het zekeringenblok of naar de kabel van de afstandsbediening van een auto-ontvanger van JVC
- 2 Sluit tot slot de bedrading naar de eenheid aan.


Rear ground terminal / Hintere Erdungsanschlußkl / Borne arrière de masse / Massaklem aan achterkant

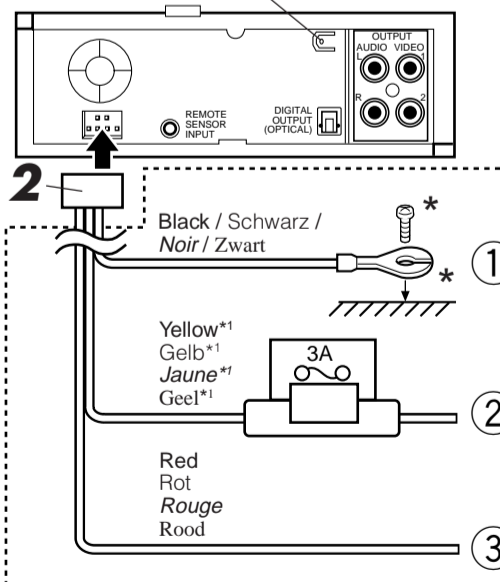

- 1 Before checking the operation of this unit prior to installation, this lead must be connected, otherwise power cannot be turned on. **Do connect the fuse (3A) when you need to shorten this lead.**
- 1: Vor der Überprüfung der Funktionsfähigkeit des Geräts vor dem Einbau, muß diese Leitung angeschlossen werden, da sonst die Stromversorgung nicht eingeschaltet werden kann. **Setzen Sie unbedingt die Sicherung (3 A) ein, wenn Sie dieses Kabel verkürzen müssen.**
- 1: Pour vérifier le fonctionnement de cet appareil avant installation, ce fil doit être raccorder, sinon l'appareil ne peut pas être mis sous tension. **Vous devez brancher le fusible (3 A) lorsqu'il vous faut raccourcir ce fil.**
- 1: Voordat u controleert of het apparaat werkt (alvorens het te installeren), moet deze draad aangesloten zijn. Als dit niet het geval is, kan de stroom niet worden ingeschakeld. **Sluit de zekering (3 A) aan als u besluit de kabel in te korten.**

- ① To metallic body or chassis of the car  
Zur Metallkarosserie oder zum Fahrwerk des Fahrzeugs  
Vers corps métallique ou châssis du véhicule  
Naar de metalen ombouw of chassis van de auto
- ② To a live terminal in the fuse block connecting to the car battery (bypassing the ignition switch)  
Zu einem stromführenden Anschluß im Sicherungsblock, der an die Autobatterie angeschlossen ist (Umgehen des Zündschalters)  
À une borne sous tension du porte-fusible connectée à la batterie de la voiture (en dérivant l'interrupteur d'allumage)  
Naar een aansluiting in het zekeringenblok die op de accu is aangesloten (waarbij de ontsteking wordt omzeilt)
- ③ To an accessory terminal in the fuse block or to the remote control lead of JVC car receiver.  
Zu einem Zusatzgeräteanschluß im Sicherungsblock oder zum Fernbedienungskabel des JVC-Empfängers im Fahrzeug.  
Sur une borne d'accessoire du porte-fusible ou sur le conducteur de la télécommande du récepteur automobile JVC.  
Naar de uitgang van een accessoire in het zekeringenblok of naar de kabel van de afstandsbediening van een auto-ontvanger van JVC.

\* Not included with this unit. Wird nicht mit Gerät mitgeliefert. Non fourni avec cet appareil. Niet bij het apparaat inbegrepen.

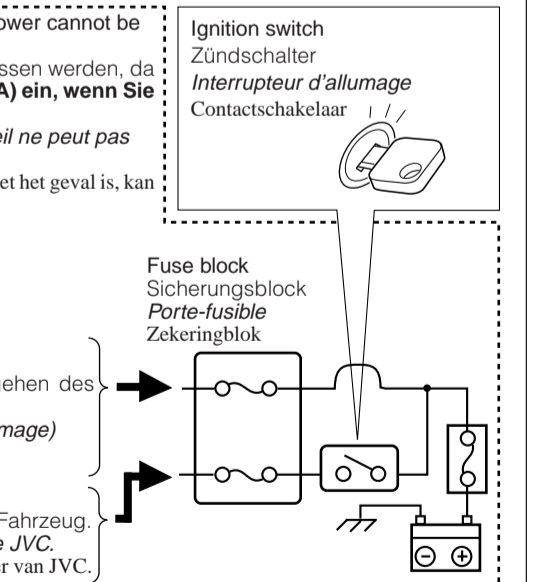


**Connecting the leads / Anschließen der Leitungen / Raccordement des fils / Aansluiting van de gekleurde draden**

Twist the core wires when connecting. Die Kerndrähte beim Anschließen verdrehen. Torsader les âmes des fils en les raccordant. Draai de kerndraden om elkaar heen wanneer u ze wilt aansluiten.

Solder the core wires to connect them securely. Die Kerndrähte anlöten, um sie fest anzuschließen. Souder les âmes des fils pour les raccorder entre eux de façon sûre. Soldeer de kerndraden zodat ze stevig vast zitten.

**CAUTION / VORSICHT / PRECAUTION / LET OP!:**

 - To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Zur Vermeidung eines Kurzschlusses die Anschlußklemmen der NICHT VERWENDETEN Leitungen mit Isolierklebeband umwickeln.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante.
- Om kortsluiting te voorkomen, moet u de aansluitklemmen van ONGEBRUIKTE gekleurde draden met isolatieband bedekken.





## CONNECTING THE EXTERNAL COMPONENTS

The following diagram shows the connection with JVC's color monitor KV-M700, as an example.

- For connecting other devices, refer also to the manuals supplied with them.

About sounds reproduced through the rear terminals

### Through AUDIO (L/R):

Analog stereo signals are output. When playing a source encoded with Dolby Digital\* (Dolby Digital) or with MPEG Audio, multichannel signals are mixed to the left and right front channel signals, then output.

– You cannot reproduce the sound encoded with DTS Digital Surround\*\* (DTS).

### Through DIGITAL OUT:

Digital signals (Linear PCM, Dolby Digital, DTS Digital Surround) are output through this terminal. (For more details, see page 35 on the Instructions.)

To reproduce the multichannel sounds such as Dolby Digital and DTS Digital Surround, connect an amplifier or a decoder compatible with these multichannel sources to this terminal, and set "DIGITAL OUT" correctly (see page 22 of the Instructions.)

– When playing a source encoded with MPEG Audio, multichannel signals are mixed to the left and right front channel signals, then output.

\* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. © 1992–1997 Dolby Laboratories. All rights reserved.

\*\* Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. "DTS" is a registered trademark of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

## ANSCHLIESSEN EXTERNER KOMponentEN

Das folgende Diagramm zeigt die Anschlüsse beim JVC Farbmonitor KV-M700 als ein Beispiel.

- Zum Anschließen anderer Geräte siehe die mit ihnen mitgelieferten Handbücher.

Über Sound, der an den hinteren Anschlüssen abgegeben wird

### Über AUDIO (L/R):

Am Ausgang steht ein Audio-Stereo-Signal an. Bei der Wiedergabe einer Quelle, die mit Dolby Digital\* (Dolby Digital) oder MPEG-Audio kodiert ist, werden Mehrkanalsignale auf die Signale der linken und rechten vorderen Kanäle gemischt und dann ausgegeben.

– Sound, der mit DTS Digital Surround\*\* (DTS) kodiert ist, kann nicht wiedergegeben werden.

### Über DIGITAL OUT:

An diesem Anschluss stehen digitale Signale an (Linear PCM, Dolby Digital, DTS Digital Surround). (Weitere Einzelheiten siehe Seite 35 in der Bedienungsanleitung.)

Um den Mehrkanal-Sound wie Dolby Digital und DTS Digital Surround wiederzugeben, müssen Sie einen mit diesen Mehrkanal-Quellen kompatiblen Verstärker oder Decoder an diesen Ausgang anschließen und „DIGITAL OUT“ richtig einstellen (siehe Seite 22 in der Bedienungsanleitung).

– Bei der Wiedergabe einer Quelle, die mit MPEG-Audio kodiert ist, werden Mehrkanalsignale auf die Signale der linken und rechten vorderen Kanäle gemischt und dann ausgegeben.

\* In Lizenz von Dolby Laboratories hergestellt. „Dolby“ und das Doppel-D-Symbol sind Warenzeichen der Dolby Laboratories. Vertrauliche, unveröffentlichte Schriften. ©1992–1997 Dolby Laboratories. Alle Rechte vorbehalten.

\*\* Hergestellt unter einer Lizenz von Digital Theater Systems, Inc. US-Patent Nr. 5.451.942, 5.956.674, 5.974.380, 5.978.762. Weitere weltweite Patente sind erteilt bzw. angemeldet. „DTS“ ist ein eingetragenes Warenzeichen von Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. Alle Rechte vorbehalten.

## CONNEXION DES APPAREILS EXTERIEURS

Le schéma suivant montre à titre d'exemple la connexion avec le moniteur couleurs KV-M700 de JVC.

- Pour le raccordement d'autres appareils, consultez également les manuels qui les accompagnent.

Quelques renseignements sur les sons reproduits par les bornes arrière

### Par le biais de la sortie AUDIO (L/R):

Production de signaux analogiques en stéréo. Lorsque vous écoutez une source à sons codés en Dolby Digital\* (Dolby Digital) ou sous le format MPEG Audio, les signaux provenant de canaux multiples se mélangent aux signaux des canaux avant gauche et droit, avant d'être transmis.

– Vous ne pouvez pas reproduire le son codé en DTS Digital Surround\*\* (DTS).

### Par le biais de la sortie DIGITAL OUT:

Les signaux numériques (linéaires à modulation codée d'impulsions, en Dolby Digital et en DTS Digital Surround) sortent par cette borne. (Pour de plus amples détails, consultez la page 35 de ce manuel d'instructions.)

Pour reproduire les sons à canaux multiples comme, par exemple, en Dolby Digital et en DTS Digital Surround, branchez un amplificateur ou décodeur compatible avec ces sources à canaux multiples sur cette prise puis programmez correctement la sortie "DIGITAL OUT" (consultez la page 22 de ce manuel d'instructions).

– Lorsque vous écoutez une source codée en MPEG Audio, les signaux provenant de canaux multiples se mélangent aux signaux des canaux avant gauche et droit, avant d'être transmis.

\* Fabriqué sous licence de Dolby Laboratories. "Dolby" et le symbole double D sont des marques de commerce de Dolby Laboratories. Œuvres confidentielles non publiées. ©1992–1997 Dolby Laboratories. Tous droits réservés.

\*\* Fabriqué sous licence de Digital Theater Systems, Inc. No de brevet aux Etats-Unis 5.451.942, 5.956.674, 5.974.380, 5.978.762 et brevets mondiaux émis ou en cours d'homologation. "DTS" est une marque de fabrique de Digital Theater Systems, Inc. Copyright 1996, 2000. Digital Theater Systems, Inc. Tous droits réservés.

## DE EXTERNE ONDERDELEN AANSLUITEN

De volgende illustratie geeft bij wijze van voorbeeld de aansluiting naar de KV-M700-kleurenmonitor van JVC weer.

- Raadpleeg voor het aansluiten van andere apparaten de handleidingen van de desbetreffende apparaten.

Over geluid dat via de aansluitpunten aan de achterzijde wordt gereproduceerd

### Via AUDIO (L/R):

Er worden analoge stereosignalen gereproduceerd. Als u een afspeler afspeelt die is gecodeerd met Dolby Digital\* (Dolby Digital) of met MPEG-audio worden de multichannel-signalen gemengd met de signalen van het rechter- en linkerkanaal en daarna uitgevoerd.

– Het is niet mogelijk om geluid te reproduceren dat met DTS Digital Surround\*\* (DTS).


### Through DIGITAL OUT:

Digitale signalen (Linear PCM, Dolby Digital, DTS Digital Surround) worden via deze uitgang uitgevoerd. (Zie pagina 35 van de Instructies voor meer informatie.) Als u multichannel-signalen zoals Dolby Digital en DTS Digital Surround wilt reproduceren, moet u een versterker of decoder die compatibel is met deze multichannel-bronnen op deze aansluitpunten aansluiten en de juiste instelling voor "DIGITAL OUT" kiezen (zie pagina 22 van de Instructies).

– Als u een afspeler afspeelt die met MPEG-audio is gecodeerd, worden de multichannel-signalen gemengd met de signalen van het rechter- en linkerkanaal, en daarna uitgevoerd.

\* Vervaardigd in licentie van Dolby Laboratories. "Dolby" en het dubbel D-symbool zijn handelsmerken van Dolby Laboratories. Vertrouwelijk ongepubliceerd materiaal. ©1992–1997 Dolby Laboratories. Alle rechten voorbehouden.

\*\* Vervaardigd onder licentie van Digital Theater Systems, Inc. US-patentnummer 5.451.942, 5.956.674, 5.974.380, 5.978.762 en andere wereldwijde patenten zijn verleend of aangevraagd. DTS is een geregistreerd handelsmerk van Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. Alle rechten voorbehouden.

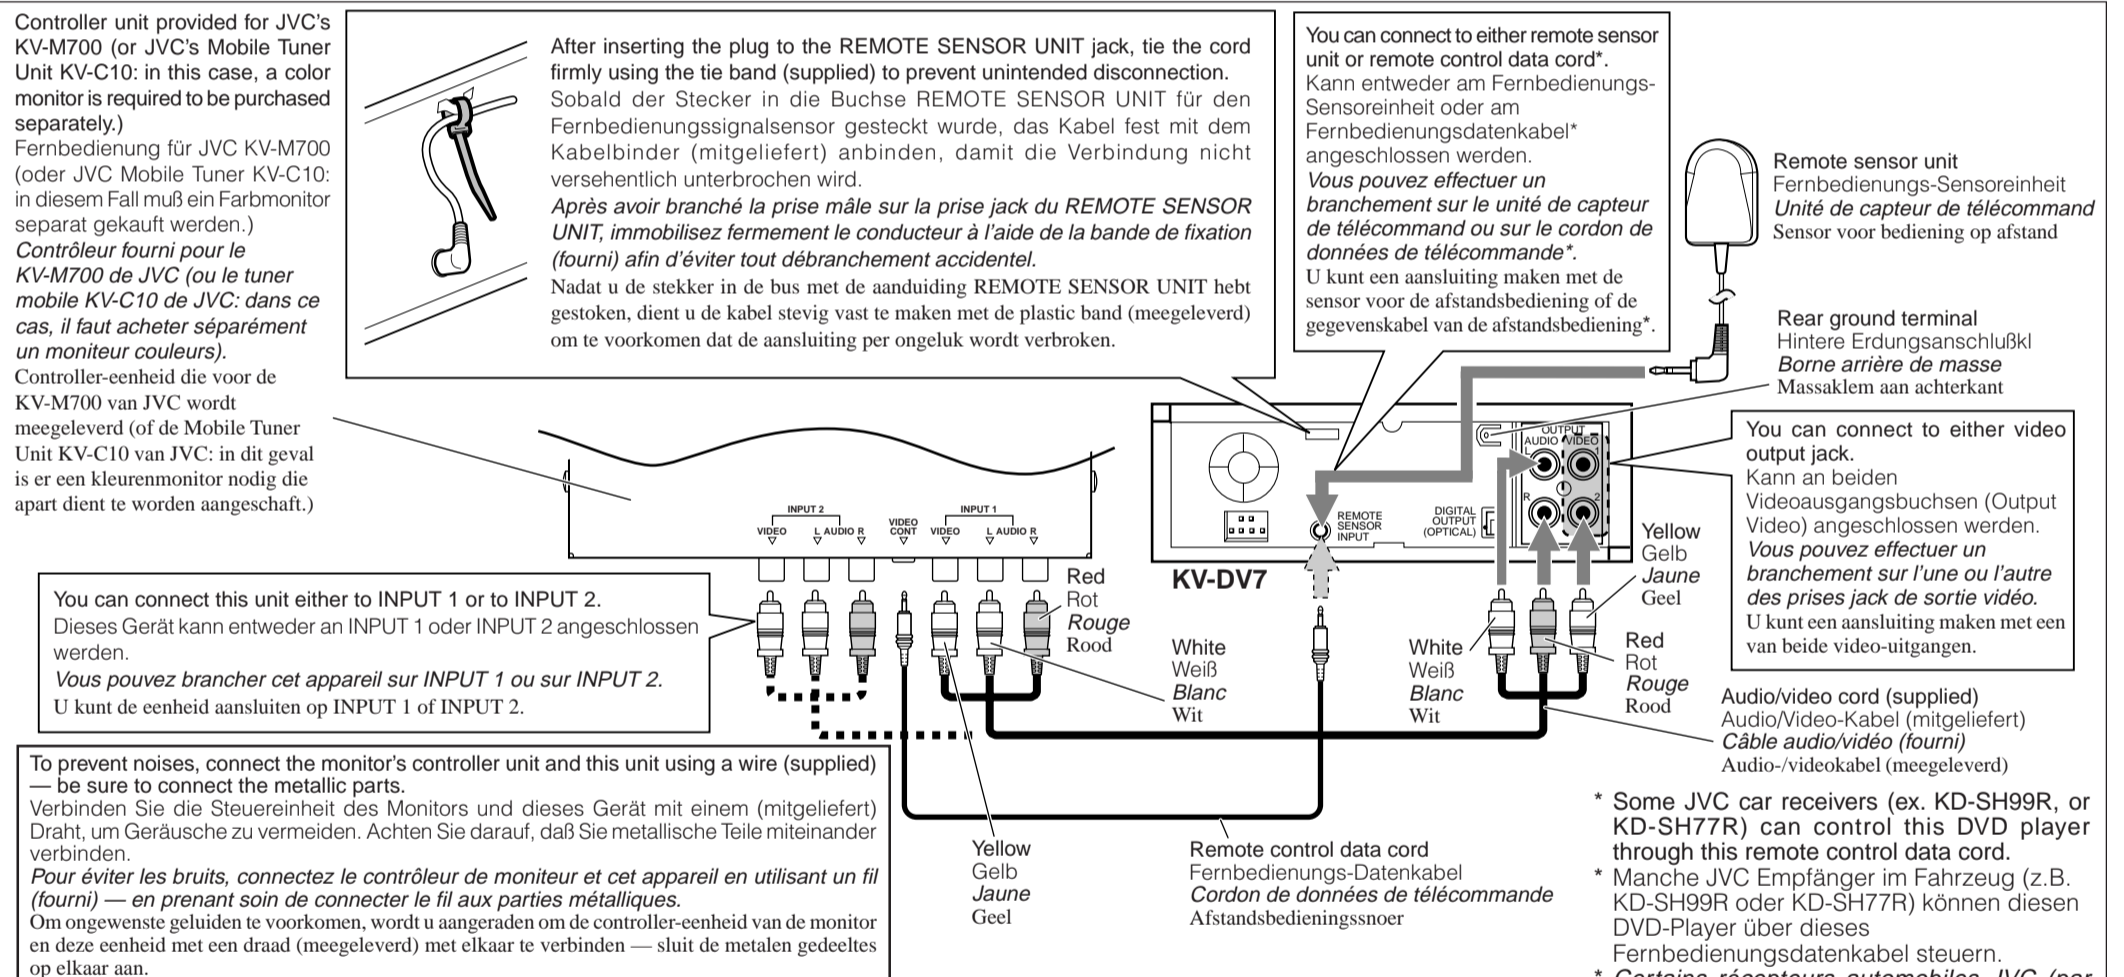

## How to install the remote control unit

- When installing the remote control unit, avoid any area subject to direct sunlight. Select an area where the remote sensor unit can receive remote signals through its front face.
- Before fixing the velcro tape, make sure the remote control unit functions properly, placing it at the selected position.
- Wipe clean the selected area on the dashboard, etc. sufficiently, and after removing the protective sheet from the velcro tape, fix the remote sensor unit to the dashboard, etc. firmly.

## Einbau des Fernbedienungsempfängers

- Beim Einbau der Fernbedienung darauf achten, dass sie nicht von direktem Sonnenlicht bestrahlt werden kann. Einen Anbringungsort auswählen, wo der Fernbedienungs-Sensoreinheit die Signale über seine Frontblende empfangen kann.
- Sicherstellen, dass die Fernbedienung richtig funktioniert, wenn sie an ihrem künftigen Anbringungsort liegt, bevor das Klebband angebracht wird.
- Den ausgewählten Anbringungsort am Armaturenbrett usw. gründlich sauber wischen. Die Schutzfolie vom Klebband abziehen und den Fernbedienungs-Sensoreinheit fest am Armaturenbrett usw. anbringen.

## Mode d'installation de la télécommande

- Lors de l'installation de la télécommande, évitez toute zone qui est soumise aux rayons directs du soleil. Choisissez un endroit où la télécommande peut recevoir des signaux à distance par le biais de sa face avant.
- Avant de fixer la bande Velcro, vérifiez que la télécommande fonctionne correctement en la plaçant à l'emplacement choisi.
- Essuyez la zone sélectionnée sur le tableau de bord, etc., de façon suffisante puis, après avoir retiré la feuille de protection de la bande Velcro, fixez l'unité de capteur de télécommande fermement sur le tableau de bord, etc.



## To enjoy the original 5.1 channel sounds encoded with Dolby Digital or with DTS Digital Surround

Audio/video control amplifier or the decoder compatible with the multichannel digital sources  
Audio/Video-Verstärker oder Decoder kompatibel mit Mehrkanal-Digitalquellen  
Amplificateur de commande audio/vidéo ou décodeur compatible avec les sources numériques à canaux multiples  
Audio-/video-versterker of decoder die compatibel is met de digitale multikanalbronnen

## Zum Genießen des Original-5,1-Kanaltons kodiert in Dolby Digital mit DTS Digital Surround

Digital optical cable (not supplied)  
Digitales optisches Kabel (nicht mit diesem Gerät mitgeliefert)  
Câble optique numérique (non fourni)  
Optische digitale kabel (niet meegeleverd)

## Pour profiter des sons d'origine sur 5,1 canaux codés en Dolby Digital ou en DTS Digital Surround

Genieten van de oorspronkelijke 5,1-kanalaal geluiden die met Dolby Digital of met DTS Digital Surround zijn gecodeerd

