 


COMPACT VHS CAMCORDER JVC GR-SXM58 GR-SXM48 GR-FXM38 GR-SX24 GR-FX14



Dear Customer, Thank you for purchasing the JVC Compact VHS camcorder. Before use, please read "PRECAUTIONS" (pg. 3, 4) to ensure safe use of this product.

 
Automatic Demonstration Automatic demonstration takes place when "DEMO MODE" is set to "ON" (factory-prest). Available when the Power Switch is set to "ON" or "OFF".

Getting Started Hook on the BATTERY RELEASE Switch. Press in. BATTERY RELEASE Switch.

INDEX AC Adapter pg. 6, 26 Animation Recording pg. 21 Auto Date Record pg. 19 Auto Focus pg. 18 Auto Shut Off pg. 11

INDEX (continued) BATTERY PACK pg. 26 Brighten the Image pg. 18 Brighten the LCD Monitor pg. 11


CONTROLS, CONNECTORS AND INDICATORS

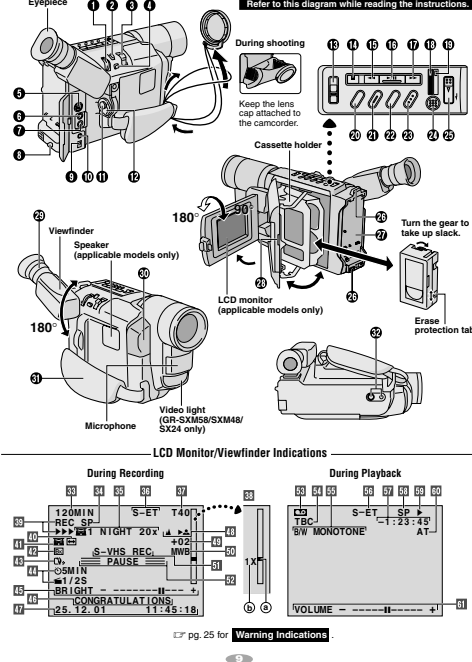

Refer to this diagram while reading the instructions.

Zooming To produce the zoom in/out effect. Digital circuitry extends the maximum magnification offered by optical zoom. This system is called Digital Zoom.

 PROVIDED ACCESSORIES

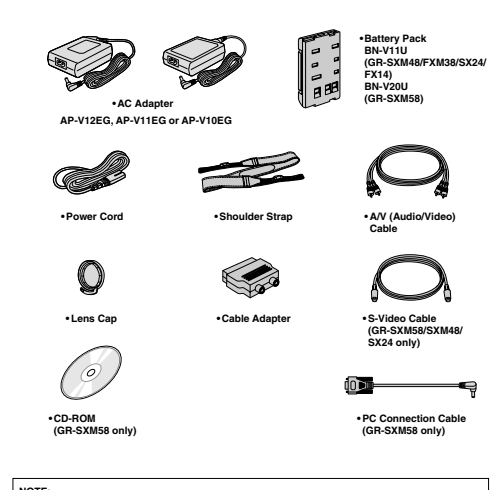

NOTE: In order to maintain optimum performance of the camcorder, provided cables may be equipped with one or more core filter. If a cable has only one core filter, the end that is closest to the filter should be connected to the camcorder.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

GETTING STARTED

Hook on the BATTERY RELEASE Switch. Press in. BATTERY RELEASE Switch. To AC outlet. To DC IN connector. AC Adapter.

CHARGING THE BATTERY PACK 1) Hook the end of the battery pack to the camcorder and push the battery in until it locks in place.

CHARGING THE BATTERY PACK (continued) BATTERY PACK CHARGING TIME

CHARGING THE BATTERY PACK (continued) MENU Wheel, TRACKING, Snapshot Button, 5-Second Recording Button, etc.

RECORDING

1 Remove the lens cap. Set the Power Switch to "ON" or "OFF". Shooting while using the viewfinder. Make sure the LCD monitor is closed and locked.

PRECAUTIONS

SAFETY PRECAUTIONS IMPORTANT Connection to the mains supply in the United Kingdom. DO NOT cut out the mains plug from this equipment.

RECORDING (continued)

1 Press the Power Switch to "ON". 2 Press the MENU Wheel to "MENU". Screen appears.

PLAYBACK

1 Load a tape (pg. 8, "Loading/Unloading A Cassette"). 2 Set the Power Switch to "STOP". To start playback temporarily (Still Playback), press [PAUSE].

RECORDING (continued)

1 Press the Power Switch to "ON". 2 Press the MENU Wheel to "MENU". Screen appears.

PRECAUTIONS (continued)

When the equipment is installed in a cabinet or on a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm or more on both sides, on top and at the rear).

RECORDING (continued)

1 Press the Power Switch to "ON". 2 Press the MENU Wheel to "MENU". Screen appears.

RECORDING (continued)

1 Press the Power Switch to "ON". 2 Press the MENU Wheel to "MENU". Screen appears.

RECORDING (continued)

1 Press the Power Switch to "ON". 2 Press the MENU Wheel to "MENU". Screen appears.

