

Connector Panel

4 DC OUT Terminal

This is the DC 5V, 1.5A power source output terminal.
Please do not connect this terminal to devices other than those designated by the manufacturer.
For enquiries pertaining to the designated devices, please consult with your authorized dealer.

Adjustments and Settings Using Menus

"Clamp"

This can be used if the screen of the PC/workstation is unstable in that it dims and brightens.
Set the position of the clamp pulse to Back porch ("BP") or Sync tip ("ST").
Normally, "BP" is used.
Values: "ST", "BP" ["BP"]

Troubleshooting


Symptom	Probable cause	Corrective action	Page
Video image does not appear, or audio sound does not occur.	Is "Brightness" adjusted correctly?	• Adjust "Brightness" using the menu.	37

Supplementary Explanation

Editing and projecting logo

"Capt. in prog. (Approx. 2min)"

The image is being read into the projector. During this time interval, the projector will not respond to any command signal inputted by the user.

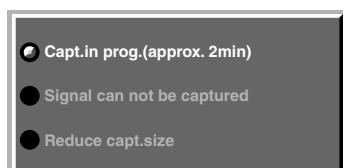

"Signal can not be captured"

Clear the message with the EXIT button and input appropriate signals.

"Reduce capt. size"

Clear the message with the EXIT button and decrease the signal size.
※ Depending on the image content, there will be cases where certain signals cannot be captured while others of the same size can be.


APOLOGIES AND AMENDMENTS

A few errors have been found in the instruction manual. Please accept our apologies and note the amended version as follows:

Adjustments and Settings Using Menus


The Menu Structure

Video Input selection

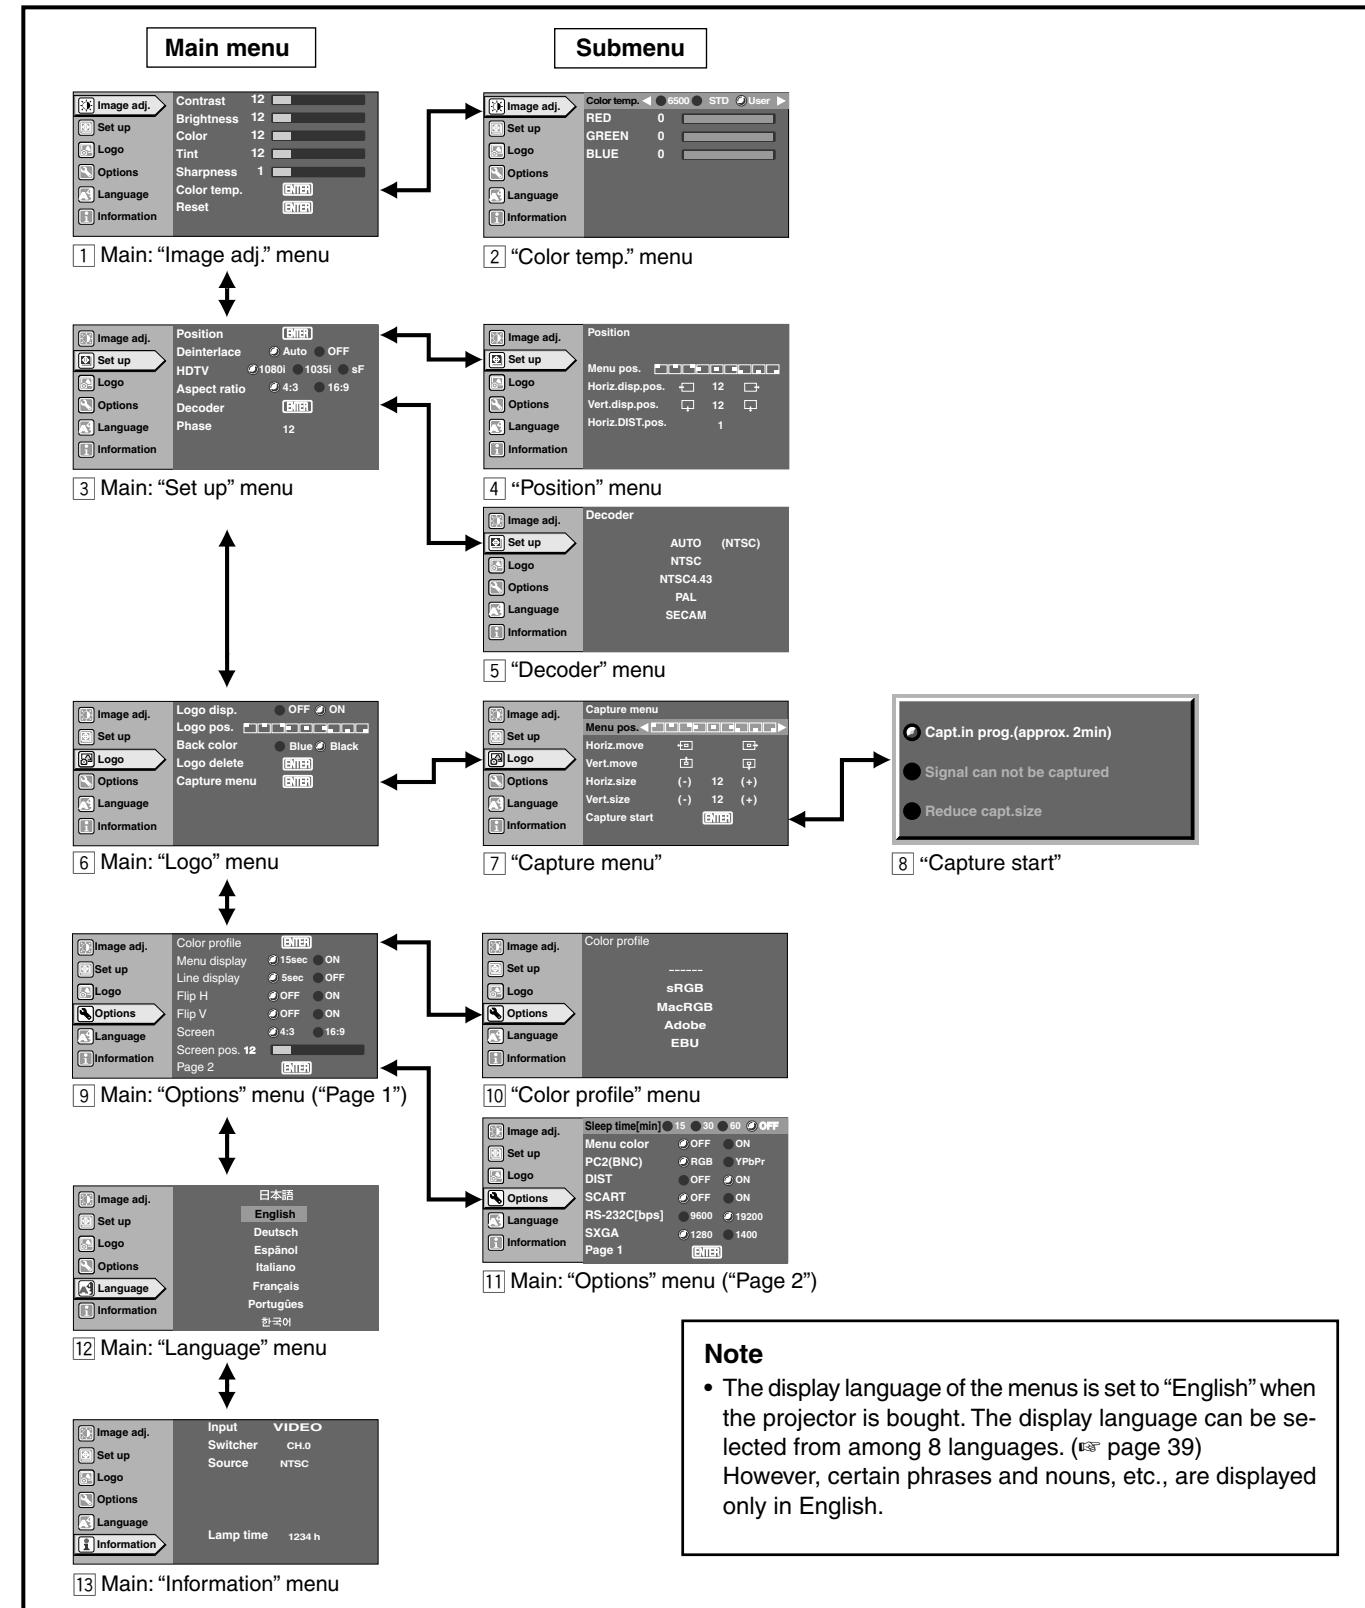

Adjustments and Settings Using Menus

When PC input is selected

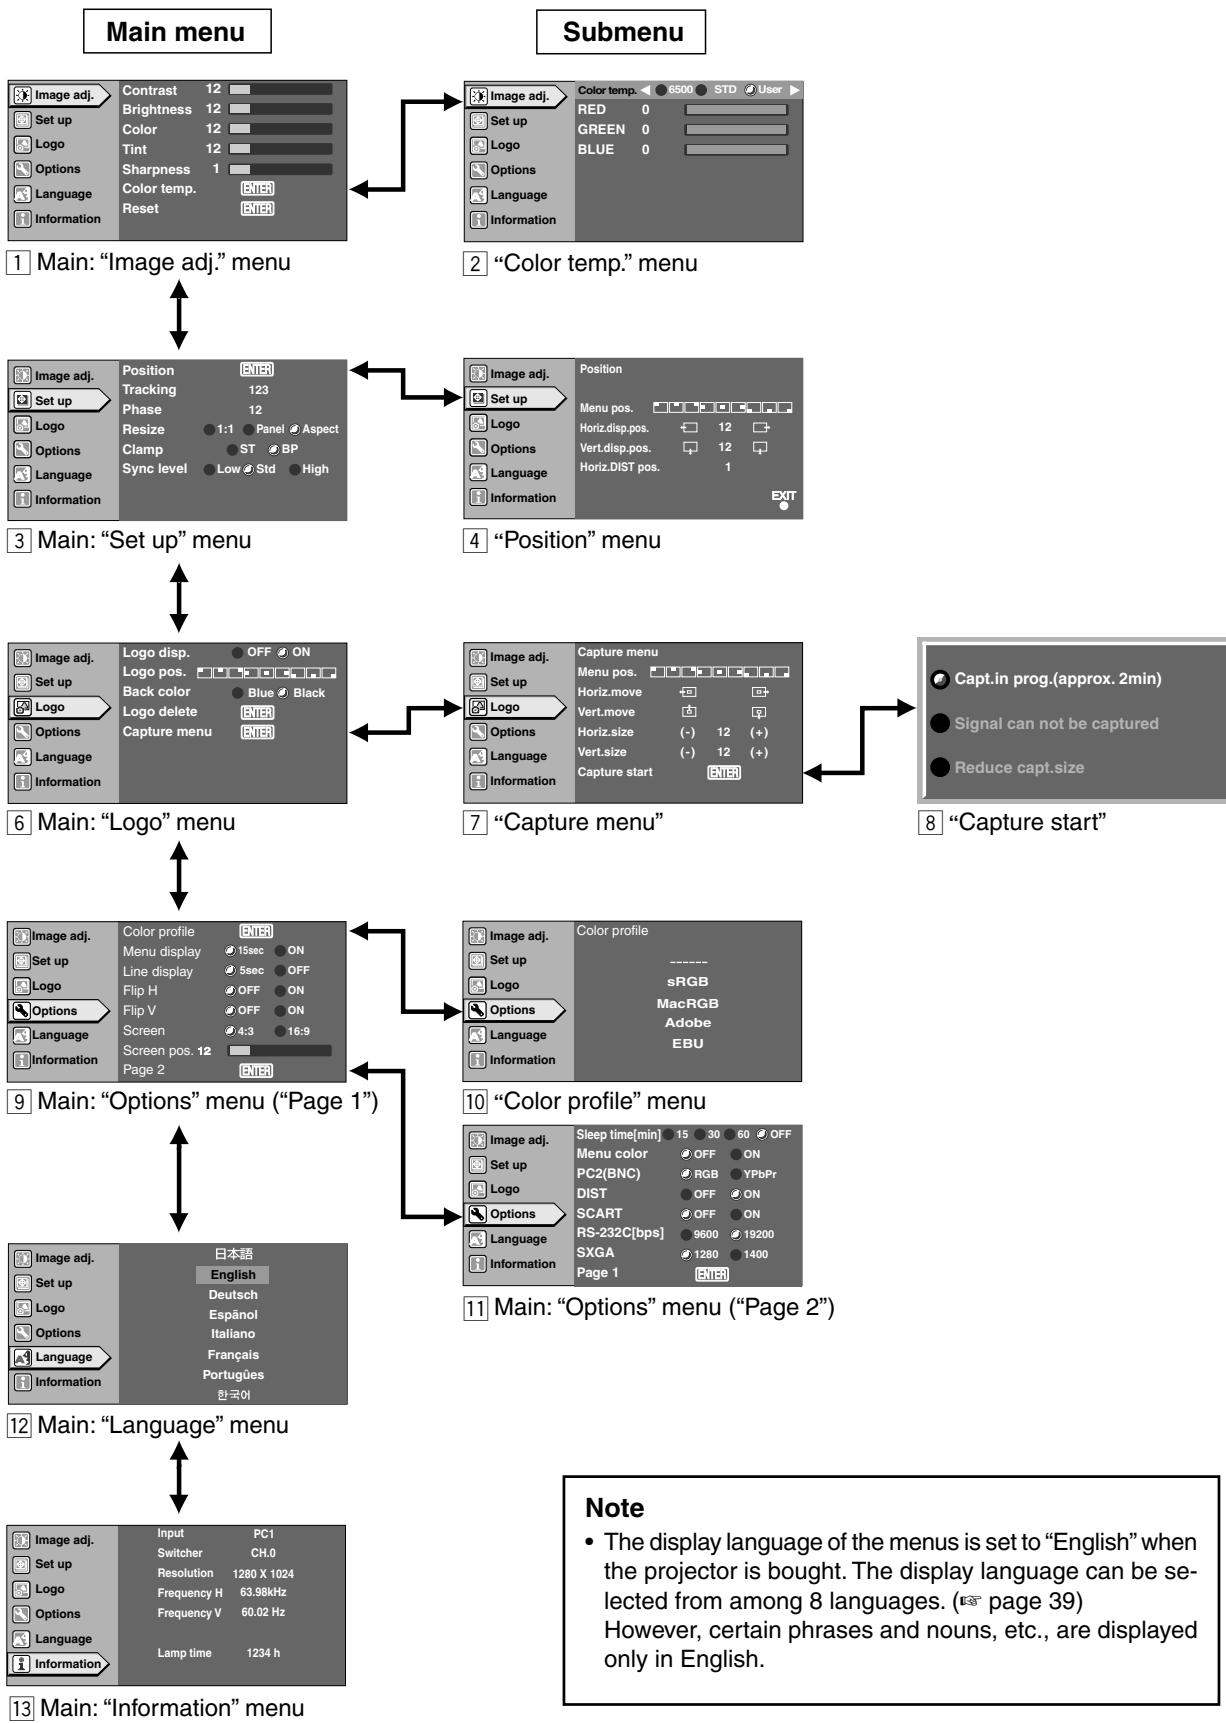

Adjustments and Settings Using Menus

When no image signal is inputted

