
 


JVC

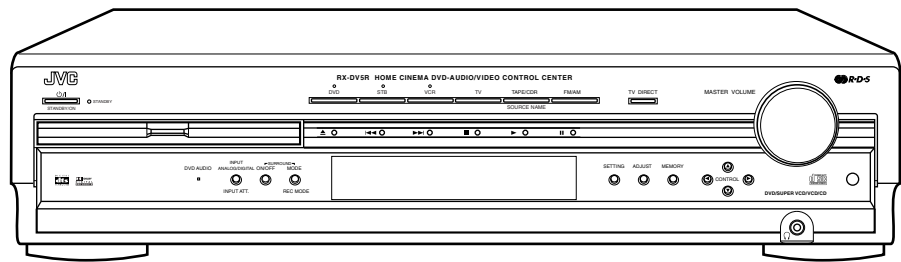

HOME CINEMA DVD-AUDIO/VIDEO CONTROL CENTER

RX-DV5RSL

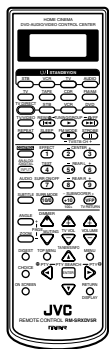

INSTRUCTIONS

For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

LVT0876-003A

[B]

Warnings, Cautions and Others

IMPORTANT for the U.K.

DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

BE SURE to replace the fuse only with an identical approved type, as originally fitted.

If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT

DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.

The wires in the mains lead on this product are coloured in accordance with the following code:

Blue : Neutral
Brown : Live

As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IF IN DOUBT—CONSULT A COMPETENT ELECTRICIAN.


CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

Caution— /I STANDBY/ON button!

Disconnect the mains plug to shut the power off completely. The

 /I STANDBY/ON button in any position does not disconnect the mains line. The power can be remote controlled.

CAUTION

- Do not block the ventilation openings or holes.
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids such as vases, shall be placed on the apparatus.

Caution: Proper Ventilation

To avoid risk of electric shock and fire and to protect from damage.

Locate the apparatus as follows:

Front: No obstructions open spacing.


Sides: No obstructions in 10 cm from the sides.

Top: No obstructions in 10 cm from the top.

Back: No obstructions in 15 cm from the back

Bottom: No obstructions, place on the level surface.

In addition, maintain the best possible air circulation as illustrated.

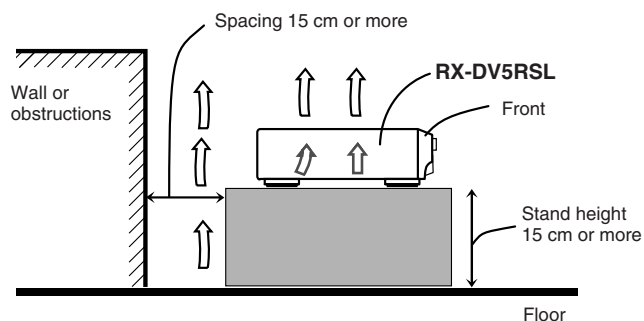


IMPORTANT FOR LASER PRODUCTS

REPRODUCTION OF LABELS

① CLASSIFICATION LABEL ON EXTERIOR SURFACE

② WARNING LABEL INSIDE THE UNIT

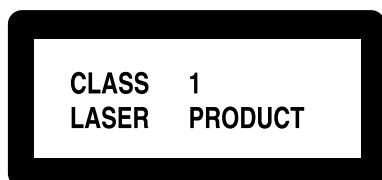

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)

VARNING : Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)

VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

1. CLASS 1 LASER PRODUCT

2. **CAUTION**: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

3. **CAUTION**: Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

SAFETY INSTRUCTIONS

“SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way—switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

— NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case -this could result in a fatal electrical shock.;


— NEVER guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!

Table of Contents

Parts Identification	2	■ Front speaker output balance—"BAL"	28
Front Panel	2	■ Tone—"BASS" and "TREBLE"	28
Remote Control	3	■ Speaker output levels—"SUBWFR," "CENTER," "REAR L," and "REAR R"	28
Getting Started	4	■ DAP effect level—"EFFECT"	28
Before Installation	4	Creating Realistic Sound Fields	29
Checking the Supplied Accessories	4	Activating Surround Mode	31
Putting Batteries in the Remote Control	4	Selecting Surround Modes	31
Connecting the FM and AM Antennas	5	Adjusting Surround Mode Using Remote Control	32
Connecting the Speakers	6	DVD Player Operations	33
Connecting Audio/Video Components	7	Disc Information	33
■ About connecting cables/cords	7	Using the On-screen Bar	35
■ Cassette deck/CD recoder connection	8	Basic Operation through the On-screen Bar	36
■ Digital connection	8	Changing the Time Indication	36
■ SCART connection	9	Locating a Desired Scene from the Disc Menu	37
Basic Operations	11	Selecting a View Angle—ANGLE	38
1 Turn On the Power	11	Changing the Languages—SUBTITLE and AUDIO	39
2 Select the Source to Play	11	Playing from a Specified Position on a Disc	41
3 Adjust the Volume	11	■ Locating a desired chapter/track— Chapter/Track Search	41
Turning Off the Sounds Temporarily	12	■ Locating a desired position—Time Search	41
Turning Off the Power with the Sleep Timer	12	■ Locating a desired scene—DIGEST	42
Changing the Display Brightness	12	Special Picture Playback	43
Activating TV Direct	12	■ Frame-by-frame playback	43
Selecting the Analog or Digital Input Mode	13	■ Showing continuous still pictures—STROBE	43
Changing the Digital Input Mode Manually	13	■ Playing back in slow-motion	43
Attenuating the Input Signal	14	■ Zooming in—ZOOM	43
Changing the Source Name	14	■ Changing the VFP setting—VFP	44
Activating the Recording Mode	14	Program Playback and Random Playback	45
Basic DVD Player Operations	15	Repeat Playback	46
1 Open the Disc Tray	15	Additional Information for DVD AUDIO	47
2 Load a Disc	15	Special Playback for DVD AUDIO	47
3 Start Playback	15	MP3 Disc Playback	49
4 Adjust the Volume	16	Basic Operations	49
5 Activate Realistic Sound Field	16	Operations through the MP3 CONTROL Screen	50
6 Select Surround Mode	16	Repeat Playback	50
7 Stop Playback	16	JPEG Disc Playback	51
8 Turn Off the Power (into Standby)	16	Slide-show Playback	51
Tuner Operations	17	Operations through the JPEG CONTROL Screen	52
Tuning into Stations Manually	17	Repeat Playback	52
Using Preset Tuning	17	Choice Menu Operations	53
Selecting the FM Reception Mode	18	Operation Buttons	53
Using the RDS (Radio Data System) to Receive FM Stations	19	Configuration of Choice Menu	53
Searching for a Program by PTY Codes	20	Operating Procedure	54
Switching to Broadcast Program of Your Choice Temporarily	21	■ LANGUAGE menu	55
■ How the Enhanced Other Network function actually works	21	■ PICTURE menu	55
■ Description of the PTY codes	22	■ AUDIO menu	56
• Language code list	22	• SPK. SETTING menu	57
Basic Settings	23	■ OTHERS menu	58
Operation Buttons	23	Restricting Playback by Parental Lock	59
Operating Procedure	23	■ Setting Parental Lock	59
■ Speaker information—"SUBWFR," "FRNT SP," "CNTR SP," and "REAR SP"	24	■ Changing the setting of Parental Lock	60
■ Speaker distance —"FRNT D," "CNTR D," and "REAR D"	24	■ Releasing Parental Lock temporarily	60
■ Crossover frequency—"CROSS"	25	• Country/Area codes list for Parental Lock	61
■ Low frequency effect attenuator—"LFE"	25	Glossary for DVD Player	62
■ Dynamic range compression—"D.COMP"	25	Operating JVC's Audio/Video Components	63
■ Digital input (DIGITAL IN) terminals—"DGT"	25	Operating Audio Components	63
■ Auto surround—"AUTO SR"	26	Operating Video Components	64
■ Auto mode—"MODE"	26	Operating Other Manufacturers' Equipment	65
Sound Adjustments	27	Changing the Preset Signal Codes	65
Operation Buttons	27	Maintenance	68
Operating Procedure	27	Troubleshooting	69
		Specifications	72

Parts Identification


Front Panel

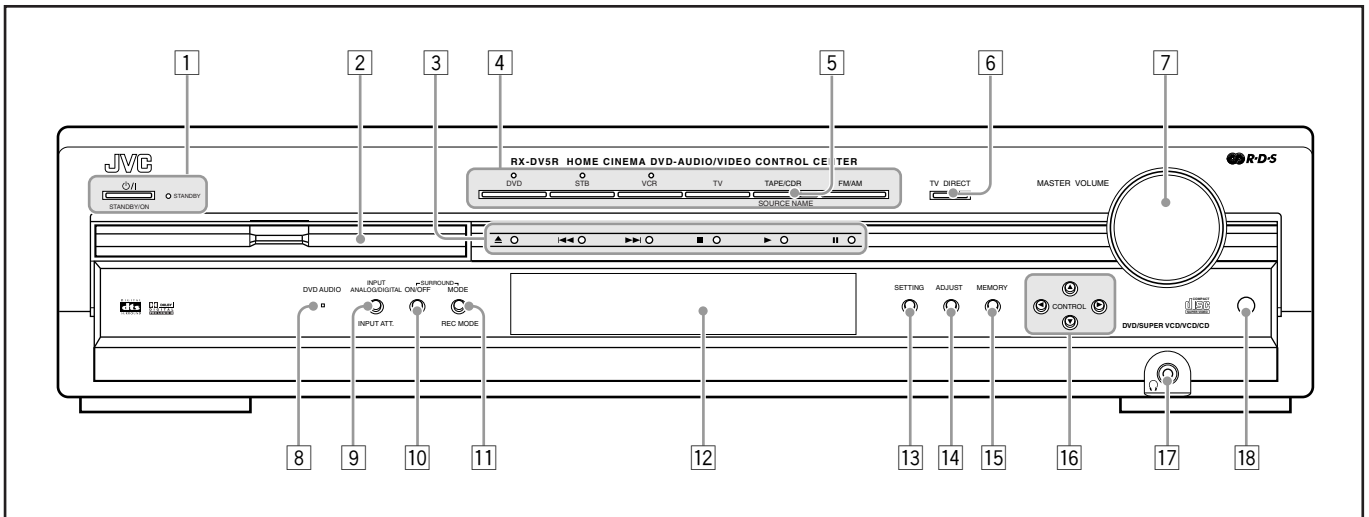

See pages in the parentheses for details.

- | | |
|---|---|
| <ul style="list-style-type: none"> 1 \odot/I STANDBY/ON button and STANDBY lamp (11) 2 Disc tray and illumination lamp (15) 3 DVD player operation buttons
 <ul style="list-style-type: none"> \blacktriangle (open/close), \ll (reverse skip), \gg (forward skip), \blacksquare (stop), \blacktriangleright (play), \parallel (pause) 4 Source selecting buttons and lamps (11, 12) <ul style="list-style-type: none"> • DVD, STB, VCR, TV, TAPE/CDR, FM/AM 5 SOURCE NAME button (14) 6 TV DIRECT button (12) 7 MASTER VOLUME control (11, 16) 8 DVD AUDIO lamp (47) 9 INPUT ANALOG/DIGITAL button (13)
 INPUT ATT. (attenuator) button (14) | <ul style="list-style-type: none"> 10 SURROUND ON/OFF button (16, 31) 11 SURROUND MODE button (16, 31)
 REC MODE button (14) 12 Display
 <ul style="list-style-type: none"> • For details, see “Display” below. 13 SETTING button (23 – 26) 14 ADJUST button (27, 28) 15 MEMORY button (17) 16 CONTROL \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons (17, 18, 23 – 28) 17 Ω (phones) jack (11) 18 Remote sensor |
|---|---|


Display

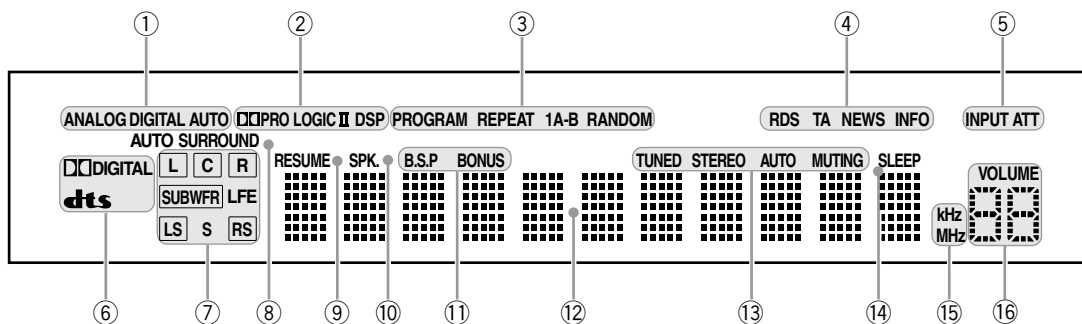

- | | |
|---|--|
| <ul style="list-style-type: none"> 1 Input mode indicators (13) <ul style="list-style-type: none"> • ANALOG, DIGITAL AUTO 2 Surround mode indicators (29, 30) <ul style="list-style-type: none"> • \square PRO LOGIC II, DSP 3 Play mode indicators (45, 46, 50, 52) <ul style="list-style-type: none"> • PROGRAM, REPEAT 1A-B, RANDOM 4 RDS indicators (19) <ul style="list-style-type: none"> • RDS, TA, NEWS, INFO 5 INPUT ATT indicator (14) 6 Sound signal indicators (13) <ul style="list-style-type: none"> • \square DIGITAL (Dolby Digital), \square DTS (DTS Digital Surround) 7 Signal and speaker indicators (31) <ul style="list-style-type: none"> • L, C, R, SUBWFR (Subwoofer), LFE (Low Frequency Effect), LS, S, RS | <ul style="list-style-type: none"> 8 Surround indicators (31) <ul style="list-style-type: none"> • AUTO SURROUND, SURROUND 9 RESUME indicator (16) 10 SPK. (speaker) indicator (11) 11 DVD AUDIO indicators (47) <ul style="list-style-type: none"> • B.S.P (Browsable Still Pictures), BONUS 12 Main display 13 Tuner mode indicators (17, 18) <ul style="list-style-type: none"> • TUNED, STEREO, AUTO MUTING 14 SLEEP indicator (12) 15 Frequency unit indicators <ul style="list-style-type: none"> • MHz (for FM station), kHz (for AM station) 16 VOLUME indication |
|---|--|

Parts Identification

Remote Control

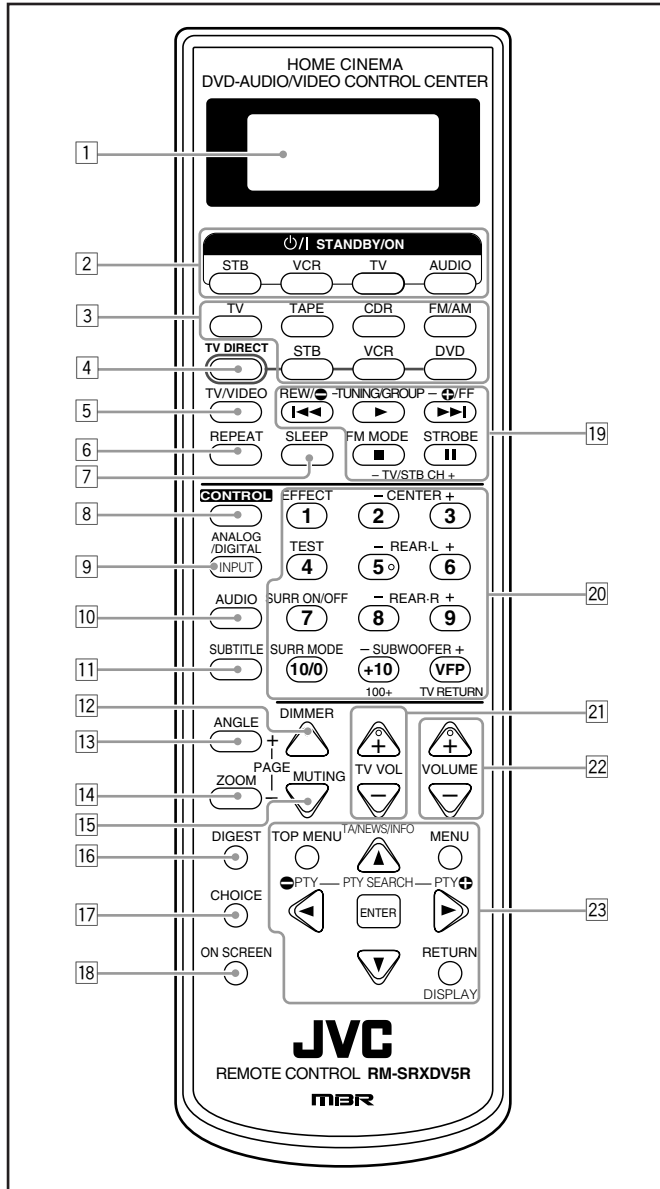

See pages in the parentheses for details.

- 1 Operation mode display
- 2 O/I STANDBY/ON buttons (11, 64 – 67)
 - STB, VCR, TV, AUDIO
- 3 Source selecting buttons (11, 13, 63 – 67)
 - TV, TAPE, CDR, FM/AM, STB, VCR, DVD
- 4 TV DIRECT button (12)
- 5 TV/VIDEO button (15, 64, 65)
- 6 REPEAT button (50, 52)
- 7 SLEEP button (12)
- 8 CONTROL button (28, 31, 32, 47, 48)
- 9 ANALOG/DIGITAL INPUT button (13)
- 10 AUDIO button (39, 40)
- 11 SUBTITLE button (39)
- 12 DIMMER button (12)
- 13 ANGLE button (38)
 - PAGE + button (48)
- 14 ZOOM button (43)
 - PAGE – button (48)
- 15 MUTING button (12)
- 16 DIGEST button (42)
- 17 CHOICE button (53, 54)
- 18 ON SCREEN button (35, 36, 38 – 42, 45, 46)
- 19 Multi operation buttons
 - $\lll, \ggg, \blacksquare, \text{II}, \text{REW}, \text{FF}$
 - TUNING \oplus and \ominus buttons (17)
 - GROUP \oplus and \ominus buttons (47)
 - FM MODE button (18)
 - STROBE button (43)
 - TV/STB CH (channel) + and – buttons (64, 65)
- 20 Number buttons
 - For selecting preset channels (18)
 - For adjusting sound (28, 32, 63)
 - For operating audio/video components (63 – 67)
 - SURR (surround) ON/OFF button (16, 31)
 - SURR (surround) MODE button (16, 31)
 - VFP button (44)
 - TV RETURN button (64)
- 21 TV VOL (volume) + and – buttons (64, 65)
- 22 VOLUME + and – buttons (11, 16)
- 23 Menu operation buttons
 - TOP MENU button (37)
 - MENU button (37)
 - RETURN button (37)
 - ENTER button
 - Cursor $\blacktriangle/\blacktriangledown/\blacktriangleright/\blacktriangleleft$ buttons
- RDS operation buttons
 - TA/NEWS/INFO button (21)
 - PTY SEARCH button (20)
 - PTY \oplus and \ominus buttons (20)
 - DISPLAY button (19)

When you press one of the following buttons, the remote control operation mode appears on the operation mode display for about two hours.

Ex. : When you press FM/AM



This mark appears while the remote control is transmitting the signal to the unit.

Button	Operation mode
TV	TV
TAPE	TAPE
CDR	CDR
FM/AM	TUNER
STB	STB
VCR	VCR
DVD	DVD

Button	Operation mode
CONTROL	Each time you press the button, the operation mode changes as follows: <div style="text-align: center;"> </div>

Getting Started

Before Installation

General Precautions

- DO NOT insert any metal object into the unit.
- DO NOT disassemble the unit or remove screws, covers, or cabinet.
- DO NOT expose the unit to rain or moisture.

Locations

- Install the unit in a location that is level and protected from moisture.
- The temperature around the unit must be between 5°C and 35°C.
- Make sure there is good ventilation around the unit. Poor ventilation could cause overheating and damage the unit.

Handling the unit

- DO NOT touch the power cord with wet hands.
- DO NOT pull on the power cord to unplug it. When unplugging the cord, always grasp the plug so as not to damage the cord.
- Keep the power cord away from the connecting cords and the antenna. The power cord may cause noise or screen interference. It is recommended to use a coaxial cable for antenna connection, since it is well-shielded against interference.
- When a power failure occurs, or when you unplug the power cord, the preset settings such as preset FM or AM channels and sound adjustments may be erased in a few days.

Checking the Supplied Accessories

Check to be sure you have all of the following supplied accessories. The number in the parentheses indicates the quantity of the pieces supplied.

- Remote Control (1)
- Batteries (2)
- AM Loop Antenna (1)
- FM Antenna (1)


If anything is missing, contact your dealer immediately.

Putting Batteries in the Remote Control


Before using the remote control, put two supplied batteries first.

- When using the remote control, aim the remote control directly at the remote sensor on the unit.


1 On the back of the remote control, remove the battery cover.

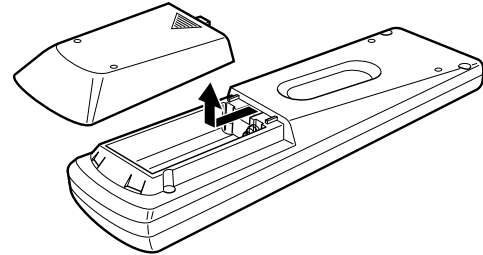

2 Insert batteries. Make sure to match the polarity: (+) to (+) and (-) to (-).

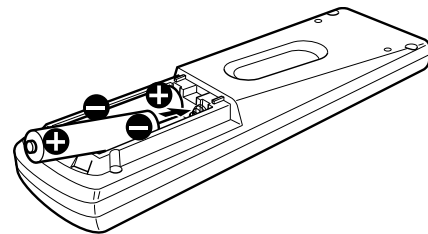

3 Replace the cover.

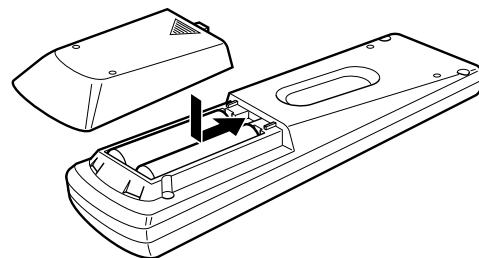

If the range or effectiveness of the remote control decreases, replace the batteries. Use two R6P(SUM-3)/AA(15F) type dry-cell batteries.


CAUTION:

Follow these precautions to avoid leaking or cracking cells:

- Place batteries in the remote control so they match the polarity: (+) to (+) and (-) to (-).
- Use the correct type of batteries. Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Getting Started

Connecting the FM and AM Antennas

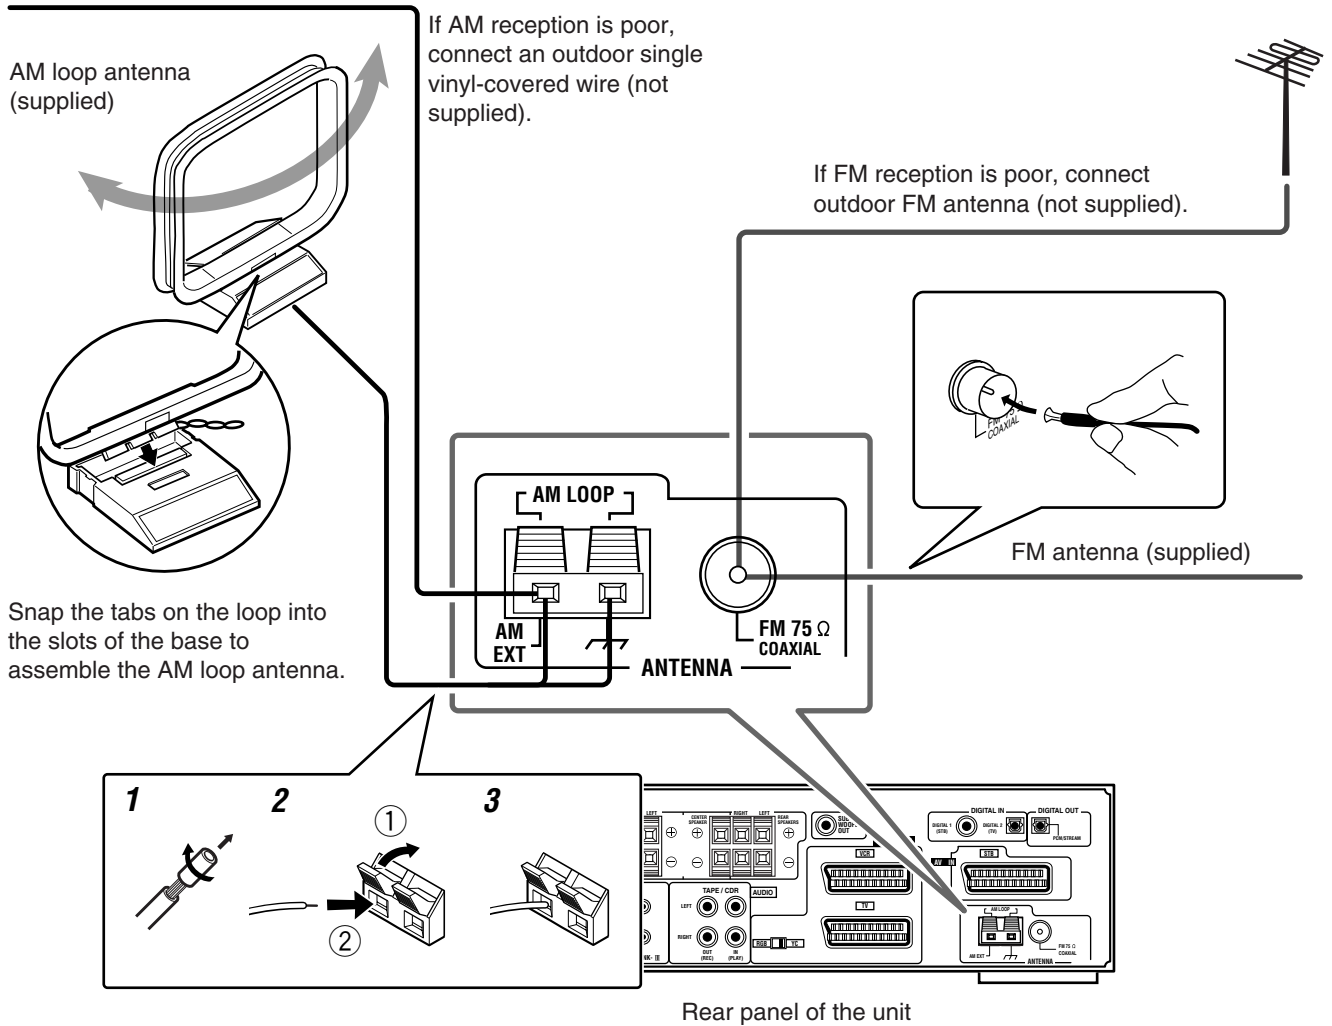

AM antenna connection

Connect the AM loop antenna supplied to the AM LOOP terminals.

- 1 Remove the insulation if the AM loop antenna wire is covered with vinyl.
- 2 Press and hold the clamp of the terminal (①), then insert the wire (②).
- 3 Release the clamp.

Turn the loop until you have the best reception.

- If the reception is poor, connect an outdoor single vinyl-covered wire (not supplied) to the AM EXT terminal. Keep the AM loop antenna connected.

FM antenna connection

Connect the FM antenna supplied to the FM 75 Ω COAXIAL terminal as temporary measure.

Extend the supplied FM antenna horizontally.

- If the reception is poor, connect an outdoor FM antenna (not supplied). Before attaching a 75 Ω antenna with a coaxial type connector (IEC or DIN 45325), disconnect the supplied FM antenna.

Note:

- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. This could cause poor reception.


Connecting the Speakers

After connecting the front, center and rear speakers, and/or a subwoofer, set the speaker setting information properly to obtain the best possible Surround effect. For details, see page 24.

CAUTIONS:



- Use speakers with the SPEAKER IMPEDANCE indicated by the speaker terminals (8 – 16 Ω).
- DO NOT connect more than one speaker to one speaker terminal.

Connecting the front, center, and rear speakers

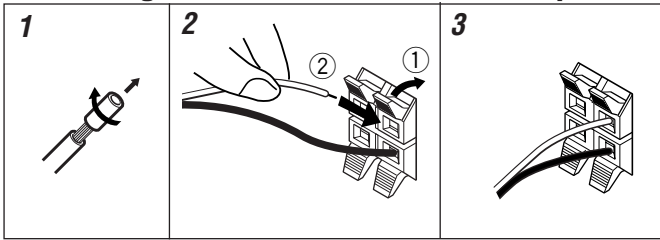


For each speaker, connect the (+) and (–) terminals on the rear panel to the (+) and (–) terminals marked on the speakers respectively.

- 1 Cut, twist and remove the insulation at the end of each speaker cord (not supplied).
- 2 Press and hold the clamp of the speaker terminal (1), then insert the speaker cord (2).
- 3 Release the clamp.

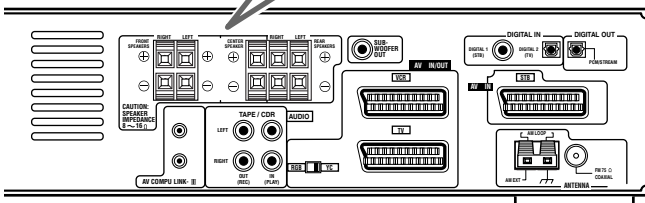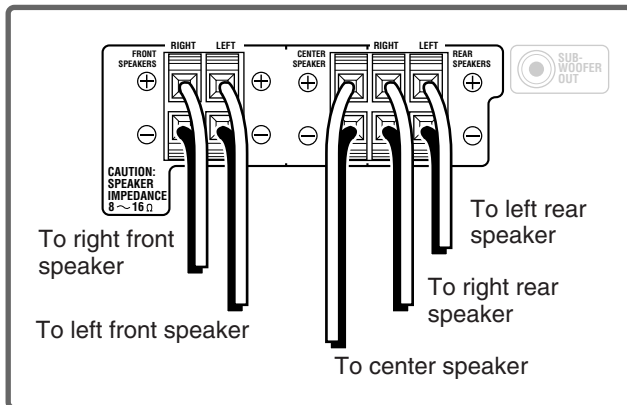

Connecting the subwoofer speaker

By connecting a subwoofer, you can enhance the bass or reproduce the original LFE signals recorded in the digital software.

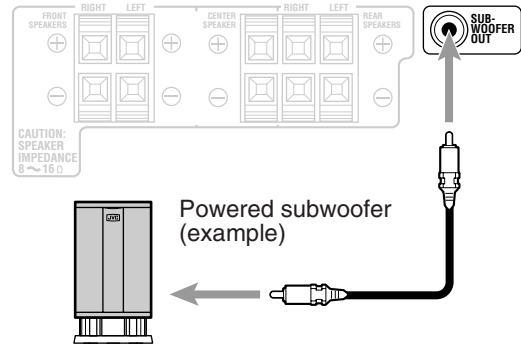


Connect the input jack of a powered subwoofer to the SUBWOOFER OUT jack on the rear panel, using a cable with RCA plugs (not supplied).

- Refer also to the manual supplied with your subwoofer.

Note:

- You can place a subwoofer wherever you like since bass sound is non-directional. Normally place it in front of you.

Speaker Layout Diagram

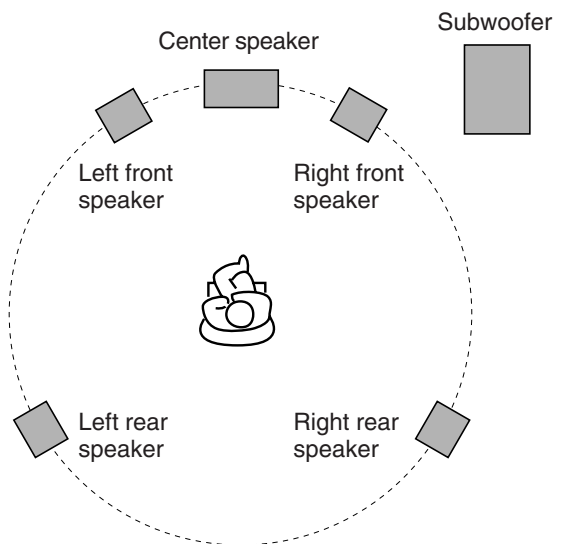

To obtain the best possible sound from this system, place all the speakers except the subwoofer at the same distance from the listening position with each speaker's front faced toward the listener.

Then, change the subwoofer and speaker settings to fit your listening conditions (see page 24).

Getting Started


Connecting Audio/Video Components

Turn off all the components and the unit before connection.

About connecting cables/cords

For SCART connections

The SCART cable is not supplied with this unit. Use the cables supplied with the other components or purchase them at your dealer.

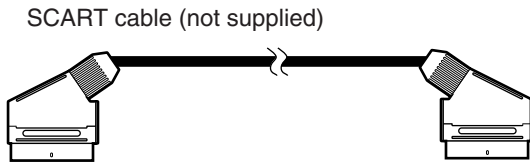

For an analogue decoder

To watch or record a scrambled program on your VCR, connect the analogue decoder to your VCR and select the scrambled channel on your VCR. If there is not an appropriate terminal for the decoder on your VCR, connect the decoder to your TV. Refer also to the manuals supplied with these equipments.

For recording pictures from STB


When you connect an STB and a VCR directly with a SCART cable, you can enjoy recording the pictures from the STB onto VCR without using menu screens of STB. For details, refer also to the manuals supplied with the STB.

For digital sounds

To enjoy the digital sounds, use both the SCART cable connection and the digital connection (see page 8).

For audio connections

Connect the external components to this unit with the audio cords. Use the cord supplied with the other components or purchase them at your dealer.

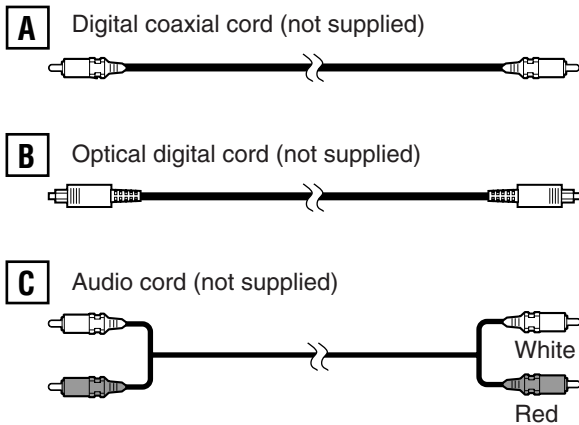


- When the unit is shipped from the factory, the DIGITAL IN terminals are set for use with the following components:
 - DIGITAL 1 (coaxial): For STB
 - DIGITAL 2 (optical): For TV
- If you connect CDR, change the digital input (DIGITAL IN) terminal setting (see “Digital input (DIGITAL IN) terminals” on page 25) and the source name (see “Changing the Source Name” on page 14) correctly.
- Select the digital input mode correctly (see “Selecting the Analog or Digital Input Mode” on page 13).

If you connect a sound-enhancing device such as a graphic equalizer between the source components and this unit, the sound output through this unit may be distorted.


Turn off all the components and the unit before connection.

Illustrations of the input/output terminals are typical examples. When you connect other components, refer also to their manuals since the terminal names actually printed on the rear vary among the components.

■ Cassette deck/CD recorder connection

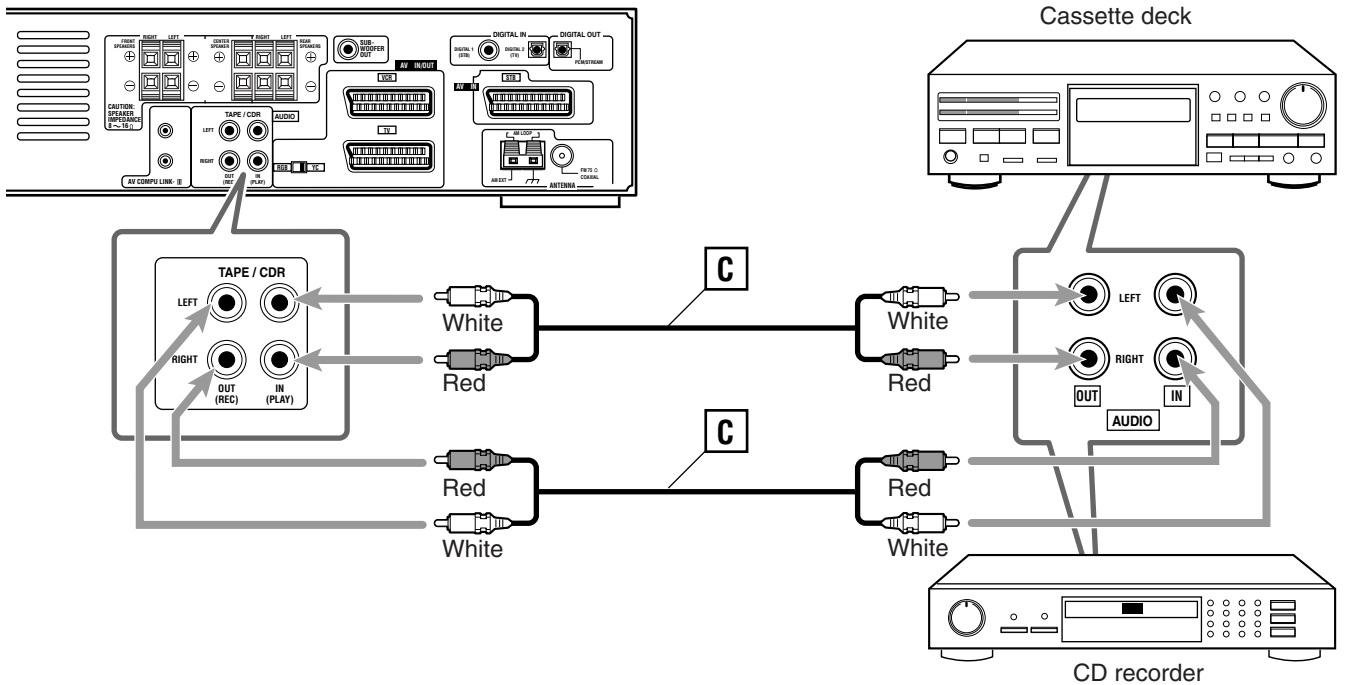

■ Digital connection

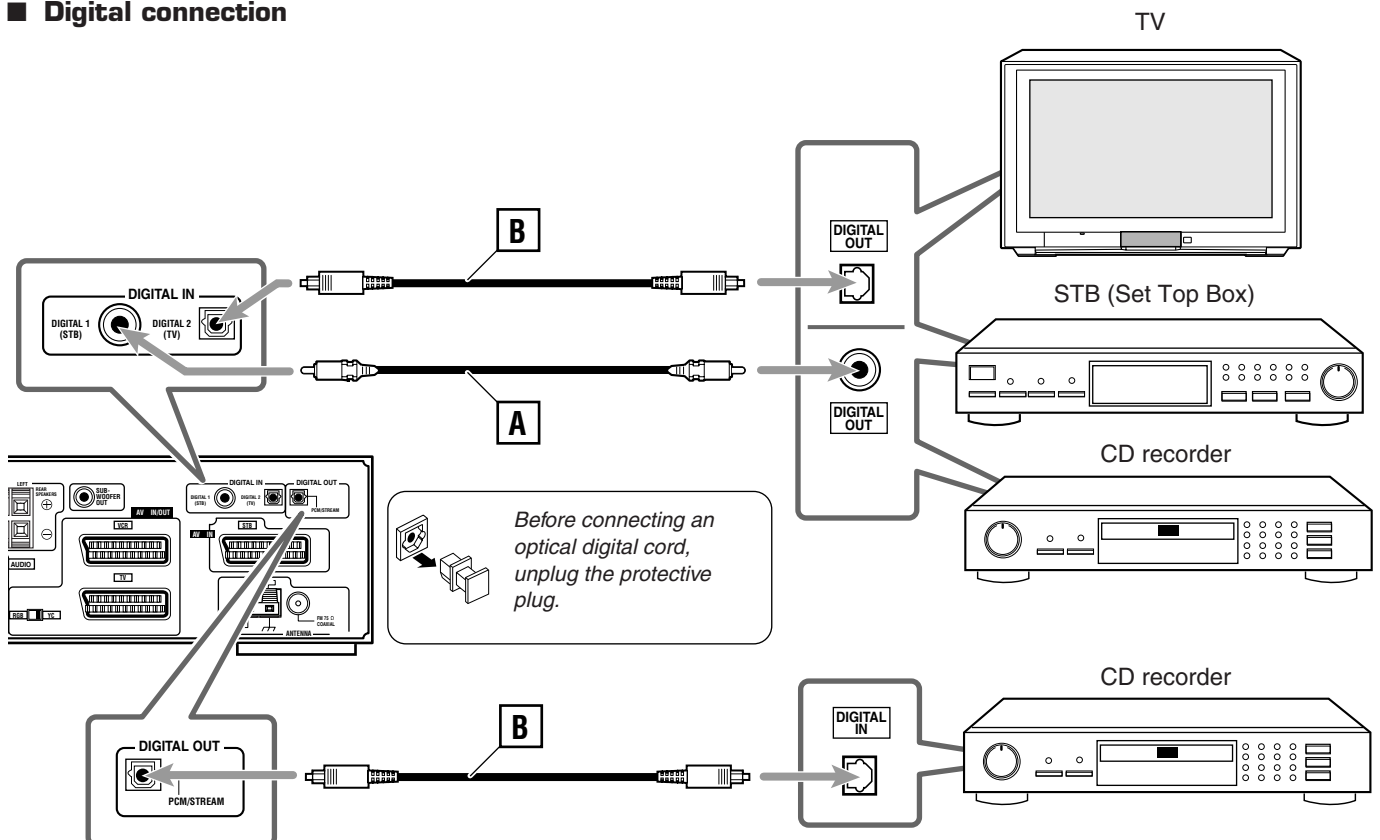


Getting Started

Turn off all the components and the unit before connection.

Illustrations of the input/output terminals below are typical examples. When you connect other components, refer also to their manuals since the terminal names actually printed on the rear vary among the components.

■ SCART connection

DO NOT connect a TV through a VCR or a TV with a built-in VCR; otherwise, the picture may be distorted.

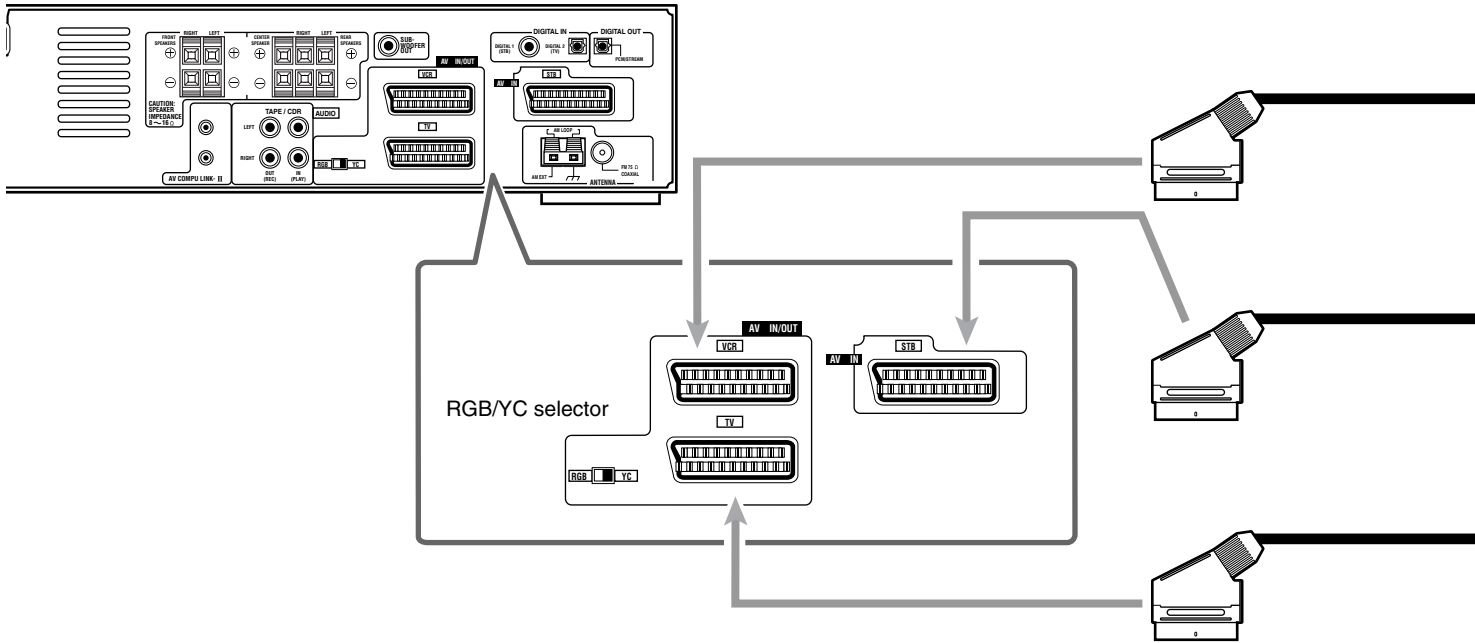

Setting the RGB/YC selector

Set the RGB/YC selector as follows while the unit is turned off:




- When the TV is compatible with RGB signal, set to “RGB.”
- When the TV is compatible with S-video signal, set to “YC.”
- When the TV is compatible with composite video signal only, set to “RGB.”

Note:
 • If you change the RGB/YC selector setting while the unit is turned on, this setting will not take effect until the unit is turned off.

SCART Terminal Specifications

			TV	VCR	STB
IN	AUDIO	L/R	○	○	○
	VIDEO	Composite	○	○	○
		S-video	—	○	○
		RGB	—	○	○
OUT	AUDIO	L/R	○*1	○*1	
	VIDEO	Composite	○*1*2	○*1*2	
		S-video	○*2	—	
		RGB	○*2	—	
T-V LINK			○*3	○*3	○*3

- *1 The signals input from a SCART terminal cannot be output through the same SCART terminal.
- *2 The video format of the output video signals are consistent with that of the input video signals. For example, if S-video signals are input to this unit, no signals other than S-video signals can be output from this unit. Refer to the manuals supplied with the video components to check the setting of the input/output video signals.
- *3 The signals for T-V LINK function are always going through the unit.

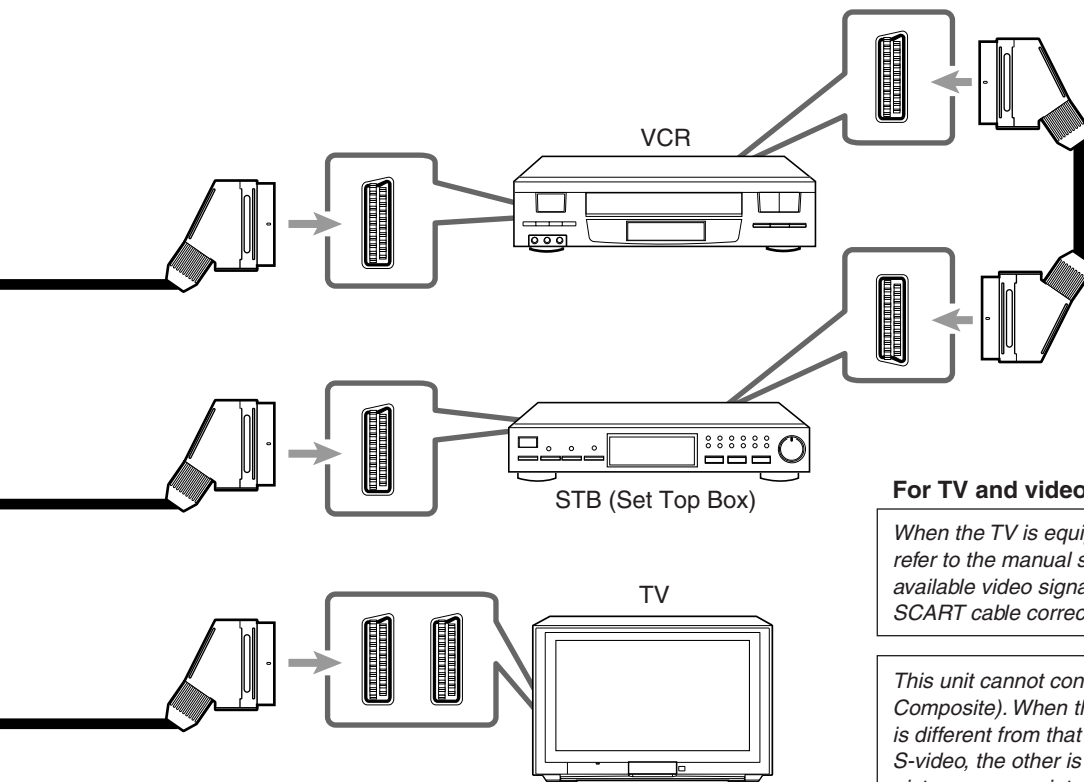

For TV and video format

When the TV is equipped with the plural SCART terminals, refer to the manual supplied with the TV to check the available video signals for each terminal, then connect SCART cable correctly.

This unit cannot convert the video signals (S-video or Composite). When the video signal of one video component is different from that of the other (for example, one is S-video, the other is Composite), you may not see the pictures appropriately. In this case, unify the video signals of all the video components into S-video or Composite, or you need to switch the video signal of TV each time you change the source.

For T-V LINK

- You can use T-V LINK function if you connect the T-V LINK compatible TV and VCR to this unit with a fully wired SCART cables. For details on T-V LINK, refer also to the manuals supplied with the TV and the VCR.
- Connect SCART cable to EXT-2 terminal on your JVC's T-V LINK compatible TV for T-V LINK function.
- Some TV, VCR, and STB support this type of data communication. For complete details, refer also to the manuals supplied with these equipments.

Now, you can plug the power cord of the unit into the AC outlet.

CAUTIONS:


- Do not touch the power cord with wet hands.
- Do not pull on the power cord to unplug the cord. When unplugging the cord, always grasp the plug so as not to damage the cord.

Notes:


- Keep the power cord away from the connecting cords and the antenna cables. The power cord may cause noise or screen interference.
- The preset settings such as preset channels and sound adjustment may be erased in a few days in the following cases:
 - When you unplug the power cord.
 - When a power failure occurs.

Basic Operations

1 Turn On the Power

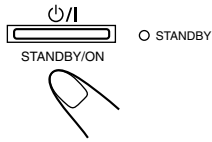

On the front panel

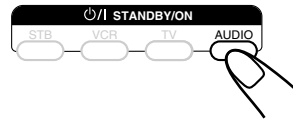

From the remote control


Press **STANDBY/ON** on the front panel or **STANDBY/ON AUDIO** on the remote control.

The STANDBY lamp goes off and the illumination lamp lights up. The current source name appears on the display.

- If the built-in DVD player is the current source, “READING” appears while the unit is detecting the type of the loaded disc (see page 33).
 - Playback starts automatically when you load some DVD VIDEO.
 - “NO DISC” appears on the display when no disc is loaded.

To turn off the power (into standby)

Press **STANDBY/ON** on the front panel or **STANDBY/ON AUDIO** on the remote control again. The illumination lamp goes off and the STANDBY lamp lights up.

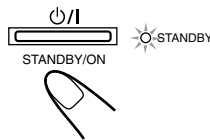


Note:

- A small amount of the power is consumed even in standby mode. To turn off the power completely, unplug the AC power cord.

2 Select the Source to Play



On the front panel

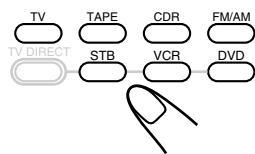


From the remote control

Press one of the source selecting buttons.

DVD	: Select the built-in DVD player.
STB*	: Select the STB.
VCR	: Select the VCR.
TV*	: Select the TV tuner.
TAPE/CDR*	: Select the cassette deck or the CD recorder (front panel ONLY).
TAPE	: Select the cassette deck (remote control ONLY**).
CDR*	: Select the CD recorder (remote control ONLY**).
FM/AM	: Select an FM or AM broadcast.

When you press one of the buttons listed above, the remote control operation mode appears on the operation mode display for about 2 hours.

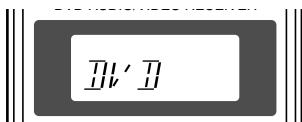

Ex.: When you press DVD

Notes:

* Register the digital input terminal setting (see “Digital input (DIGITAL IN) terminals” on page 25) and digital input mode setting correctly (see “Selecting the Analog or Digital Input Mode” on page 13). Source name and “DIGITAL” will be shown on the display when you select the source.


**When the source name is not assigned correctly, these buttons cannot work (see “Changing the Source Name” on page 14).

3 Adjust the Volume

On the front panel:

To increase the volume, turn MASTER VOLUME clockwise.

To decrease the volume, turn MASTER VOLUME counterclockwise.

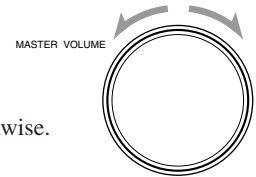

From the remote control:

To increase the volume, press and hold VOLUME +.

To decrease the volume, press and hold VOLUME -.



CAUTION:

Always set the volume to the minimum before starting any sources. If the volume is set at a high level, the sudden blast of sound energy can permanently damage your hearing and/or ruin your speakers.

Notes:

- The volume level can be adjusted within the range of “0” (minimum) to “50” (maximum).
- When DVD is selected as the source with your TV turned on, the volume level indication appears on the TV.

Listening with headphones

Connect a pair of headphones to the Ω (phones) jack on the front panel. This cancels the Surround mode currently selected, deactivates speakers, and activates the HEADPHONE mode.

The SPK. indicator goes off from the display.

- Disconnecting a pair of headphones from the Ω (phones) jack cancels the HEADPHONE mode and activates speakers.

HEADPHONE mode

When using the headphones, the following signals are output regardless of your speaker setting:

- For 2-channel sources, the front left and right channel signals are output directly from the left and right headphones.
- For multichannel sources, the front left and right, center and rear channel signals are down-mixed and then output from the headphones without missing bass element.
- **For DVD AUDIO ONLY:** When the multichannel track cannot be down-mixed, only signals of the front left and right channel are output.

CAUTION:

Be sure to turn down the volume:

- Before connecting or putting on headphones, as high volume can damage both the headphones and your hearing.
- Before removing headphones, as high volume may output from the speakers.

Turning Off the Sounds Temporarily

 
From the remote control ONLY



Press **MUTING** to mute the sound.

“MUTING” appears on the display and the volume turns off (the VOLUME indication goes off).

- When DVD is selected as the source with your TV turned on, “VOLUME –” appears on the TV.

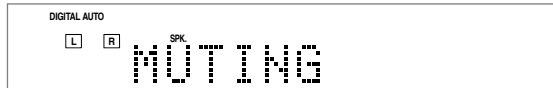

To restore the sound

Press **MUTING** again.

- Pressing **VOLUME +** or **–** on the remote control (or turn **MASTER VOLUME** on the front panel) also restores the sound.

Turning Off the Power with the Sleep Timer


From the remote control ONLY



Press **SLEEP** repeatedly.

The **SLEEP** indicator lights up on the display.

- Each time you press the button, the shut-off time changes as follows:

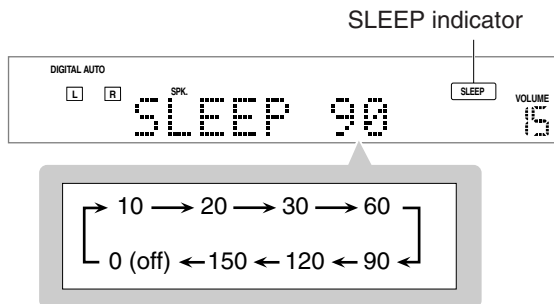

When the shut-off time comes

The unit is turned off automatically.

To check or change the remaining time until the shut-off time

Press **SLEEP** once.

The remaining time (in minutes) until the shut-off time appears.

- To change the shut-off time, press **SLEEP** repeatedly.

To cancel the Sleep Timer

Press **SLEEP** repeatedly until “**SLEEP 0**” appears on the display. (The **SLEEP** indicator goes off.)

- Turning off the unit also cancels the Sleep Timer.

Note:

- If Sleep Timer and Auto Standby (see page 58) are used at a time, one with the early shut-off time will turn off the unit.

Changing the Display Brightness

From the remote control ONLY



 
Press **DIMMER** to dim the display.

- Each time you press the button, the display and illumination lamp dim and brighten alternately.

Activating TV Direct



On the front panel

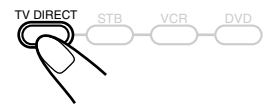

From the remote control

You can use this unit as a DVD player and an AV selector while the unit is not turned on. When this function is activated, the pictures and sounds go from the video components to the TV through this unit. In this case, you can use the video components and the TV as if they were connected directly—TV Direct.

- This function takes effect only when the video components and TV are connected to this unit with SCART cables.
- This function takes effect for the following sources—DVD, STB, and VCR.
- This unit can be automatically turned on or off, and/or select the source automatically when you set the Auto Function mode to “**AUTO1**” or “**AUTO2**.” For details, see “Auto mode” on page 26.

To activate (or deactivate) TV Direct, follow the procedure below:

1 Press **TV DIRECT**.

All the indications disappear (except when DVD is selected as the source), then the source lamp currently selected lights up.

2 Turn on the video component and TV.

3 Press one of the source selecting buttons—**DVD**, **STB**, or **VCR**.

The lamp corresponding to the selected source lights up.



Ex. : When DVD is selected.

To cancel TV Direct and turn off the unit, press

⏻/STANDBY/ON (or **⏻/STANDBY/ON AUDIO** on the remote control).

The unit is turned off and the **STANDBY** lamp lights up.

To cancel TV Direct and turn on the unit, press **TV DIRECT**.

Notes:

- When TV Direct is activated, you cannot enjoy any of the sound effects this unit produces, and cannot use the speakers connected to this unit.
- You can use **T-V LINK** function between TV and VCR while the TV Direct is activated.


Basic Operations

Selecting the Analog or Digital Input Mode

When you have connected digital source components using both the analog connection and the digital connection methods (see pages 7 to 10), you can select the input mode.

- Before selecting the digital input mode, register the digital input terminal setting correctly (see “Digital input (DIGITAL IN) terminals” on page 25).

1 Press one of the source selecting buttons (STB, TV, or CDR) for which you want to change the input mode.

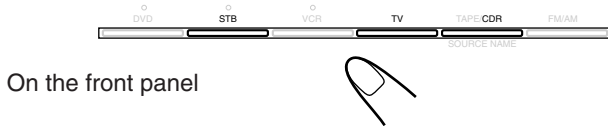

Note:

- You cannot change the input mode when selecting DVD as the source. Digital input is always used for the built-in DVD player.

2 Press INPUT ANALOG/DIGITAL (INPUT ATT.) on the front panel or ANALOG/DIGITAL INPUT on the remote control.




On the front panel

From the remote control

The current input mode appears on the display.

- Each time you press the button, the input mode alternates between the analog input (“ANALOG”*) and the digital input (“DGTL AUTO”).

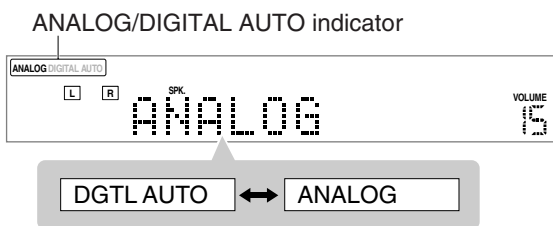

* “ANALOG” is the initial setting except for the built-in DVD player.

DGTL AUTO : Select this for the digital input mode.
The DIGITAL AUTO indicator lights up.
The unit automatically detects the incoming signal format, then the sound signal indicator for the detected signal—**DIGITAL** or **dts** lights up; otherwise, no sound signal indicators light up.

ANALOG : Select this for the analog input mode.
The ANALOG indicator lights up.

Changing the Digital Input Mode Manually

If the following symptoms occur while Dolby Digital or DTS Digital Surround software is played back, you can change the digital input mode:


- Sound does not come out at the beginning of playback.
- Noise comes out while searching for or skipping chapters or tracks.

On the front panel



Press CONTROL ► (or ◀) to select “DGTL D.D.” or “DGTL DTS” while “DGTL AUTO” still remains on the display.

- Each time you press the button, the digital input mode changes as follows:

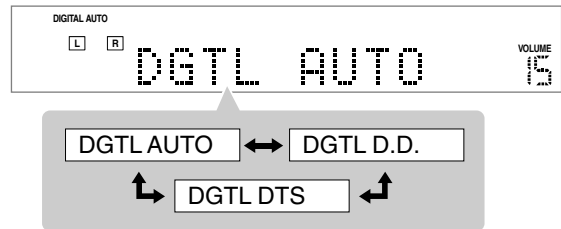

- DGTL AUTO** : Normally select this.
The DIGITAL AUTO indicator lights up.
The unit automatically detects the incoming signal format, then the sound signal indicator for the detected signal lights up.
- DGTL D.D.** : Select this for playing back software encoded with Dolby Digital.
The **DIGITAL** indicator lights up*.
- DGTL DTS** : Select this for playing back software encoded with DTS Digital Surround.
The **dts** indicator lights up*.

* These indicators flash when no signal or the signal without the proper format is played back.

When DVD is selected as the source, you can also change the digital input mode by pressing ANALOG/DIGITAL INPUT repeatedly on the remote control.



Notes:

- When “DGTL AUTO” cannot recognize the incoming signals, no sound signal indicators light up on the display.
- When you turn off the unit or select another source, “DGTL DTS” and “DGTL D.D.” are canceled.
The digital input mode is automatically reset to “DGTL AUTO.”

Attenuating the Input Signal

When the input level of the **analog source** is too high, the sounds will be distorted. If this happens, you need to attenuate the input signal level to prevent the sound distortion.


- You have to make this adjustment for each **analog source**.

On the front panel ONLY



Press and hold **INPUT ATT. (INPUT ANALOG/DIGITAL)** until the **INPUT ATT indicator lights up on the display**.

- Each time you press and hold the button, the Input Attenuator turns on (“ATT ON”) or off (“ATT NORMAL”)*.

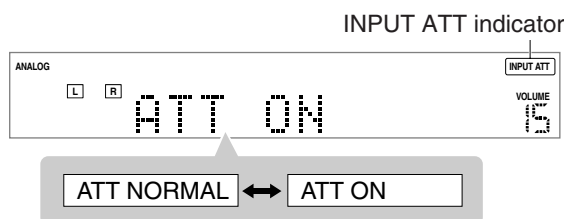

* “ATT NORMAL” is the initial setting.

 
ATT NORMAL : Normally select this. The analog sound is not attenuated.

ATT ON : Select this when the analog sound is distorted.

Changing the Source Name

When you connect an CD recorder to the TAPE/CDR jacks on the rear panel, change the source name which will be shown on the display.


On the front panel ONLY

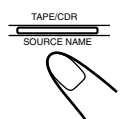

Ex. : When changing the source name from “TAPE” to “CDR”

1 Press **TAPE/CDR (SOURCE NAME)** to select as the source.

2 Press and hold **SOURCE NAME (TAPE/CDR)** until “ASSGN. CDR” appears on the display.

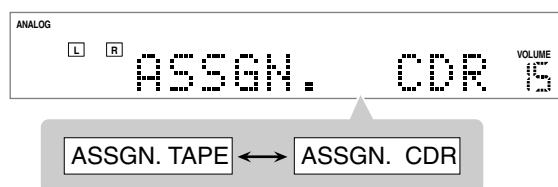

To change the source name to “TAPE”

Press and hold **SOURCE NAME (TAPE/CDR)** until “ASSGN. TAPE” appears on the display in step **2**.

Note:

 
- Without changing the source name, you can still use the connected components. However, there may be some inconveniences:
 - The unexpected source name will appear on the display when you press **TAPE/CDR (SOURCE NAME)** on the front panel.
 - The **CDR** or **TAPE** button on the remote control cannot work for selecting the source.
 - You cannot use the digital input (see page 8) for the CD recorder.

Activating the Recording Mode

When you play back the multichannel sources, Recording mode enables you to record the sounds without missing surround elements by down-mixing the center and rear channel signals into the front channel signals.

- For DVD AUDIO ONLY:** When the multichannel track cannot be down-mixed, this function does not take effect.
- When the multichannel software is played back with Recording mode activated, the sounds are down-mixed and come out through the front speakers only.

On the front panel ONLY

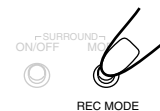

Press and hold **REC MODE (SURROUND MODE)** until “RECMODE ON” appears on the display.

- Each time you press and hold the button, Recording mode is activated (“RECMODE ON”) and deactivated (“RECMODE OFF”*) alternately.

* “RECMODE OFF” is the initial setting.

RECMODE OFF : Normally select this. The down-mixing is canceled.

RECMODE ON : Select this for recording the down-mixed sounds.

When recording with VCR:

You can record the picture on your video tape without the volume level indication when Recording mode is activated.

- When you do not want to record the on-screen guide icons, see page 58.
- The choice menu and on-screen bar are always recorded when they appear on the TV.

CAUTION:

When the front speakers are small, the output sound may be distorted by Recording mode. In this case, decrease the volume until the sound distortion diminishes.

Notes:


- When you turn off the unit or select another source, Recording mode is canceled (“RECMODE OFF”).
- Sound adjustments (see pages 27 and 28) and Surround modes (see pages 29 to 32) do not affect the recording.
- The following buttons do not work while Recording mode is activated (“RECMODE ON”):
 - SETTING** and **ADJUST** on the front panel.
 - SURROUND ON/OFF** and **SURROUND MODE** on the front panel.
 - Number** buttons for adjusting sound on the remote control.

Basic DVD Player Operations

For details about DVD player operations, see pages 33 to 48.

- You can also play back MP3 and JPEG files. See pages 49 to 52.

- When using the remote control, press DVD to change the remote control operation mode to the DVD player operation.

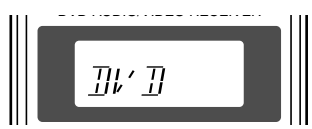

1 Open the Disc Tray

Before turning on the unit, turn on your TV and select the correct video input (see the manual supplied with your TV).

- When you use a JVC's TV, you can turn on your TV by pressing \odot /I STANDBY/ON TV on the remote control and select the video input by pressing TV/VIDEO. (If your TV is not a JVC's, see "Operating Other Manufacturers' Equipment" on page 65.)
- For changing the OSD messages—the information on the TV—into the desired language, see pages 53 and 55.

On the front panel ONLY



Press \blacktriangle .


The unit is turned on and the disc tray opens.

The STANDBY lamp goes off and the illumination lamp lights up.

- When a disc is already loaded, pressing \blacktriangleright turns on the unit and starts playing back the loaded disc.

2 Load a Disc

Place a disc correctly with its label side up.

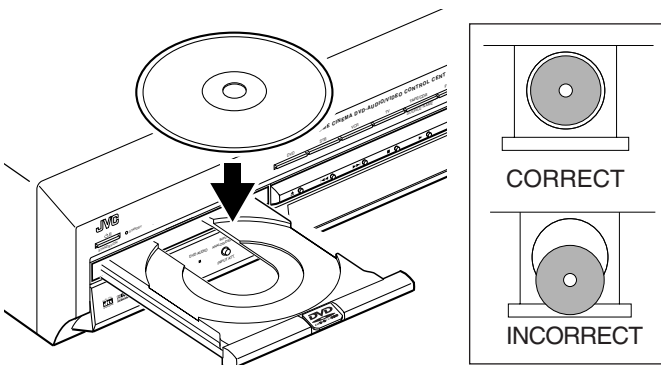

3 Start Playback



On the front panel



From the remote control

Press \blacktriangleright .

The disc tray closes and the unit starts playing back the loaded disc.

- You can also close the disc tray by pressing \blacktriangle on the front panel.

By pressing the following buttons, you can pause, advance, or reverse playback, and locate the beginning of the title, chapter, or track.



On the front panel

From the remote control



To stop playback temporarily

Press \parallel .

- Pressing \blacktriangleright starts playback again.

To move back the playback position by 10 seconds (for DVD VIDEO only)

Press \blacktriangleleft during DVD VIDEO playback.

The unit moves the playback position about 10 seconds before the current position, then resumes playback.

To advance or reverse playback rapidly

Press and hold $\blacktriangleright\blacktriangleright$ or $\blacktriangleleft\blacktriangleleft$.

While you are pressing and holding $\blacktriangleright\blacktriangleright$ (or $\blacktriangleleft\blacktriangleleft$), the unit advances (or reverses: for DVD VIDEO and audio CD) playback 5 times as fast as the normal speed. When you press and hold $\blacktriangleright\blacktriangleright$ (or $\blacktriangleleft\blacktriangleleft$) further, the playback speed changes up to 20 times as fast as the normal speed.

- Releasing the button resumes the normal playback.

To locate the beginning of the chapter or track

Press $\blacktriangleright\blacktriangleright$ or $\blacktriangleleft\blacktriangleleft$.

Press $\blacktriangleright\blacktriangleright$ (or $\blacktriangleleft\blacktriangleleft$) to locate the beginning of the next (current or previous) chapter or track.


To locate the chapter or track using the number buttons

Press the number buttons (1–10, +10) to select the number of the desired chapter or track.

Ex. : To select 3, press 3.

To select 11, press +10, then 1.

To select 20, press +10, then 10.

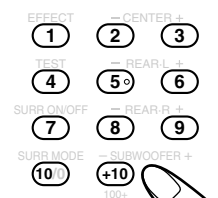

From the remote control ONLY


About indication on the display while playing back a disc

While you are playing back a disc, the playback information appears on the display as follows:


Ex. : When DVD VIDEO is loaded



Ex. : When audio CD is loaded

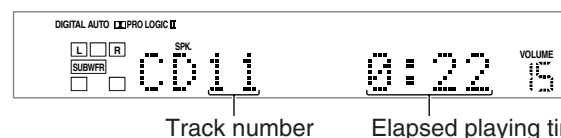

4 Adjust the Volume

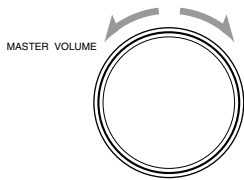

On the front panel



From the remote control

For details, see “Basic Operations” on page 11.

5 Activate Realistic Sound Field

You can activate Surround mode for creating realistic sound fields.

- You can activate Surround mode automatically when the digital multichannel source (Dolby Digital or DTS Digital Surround software) or 2-channel matrix source (Dolby Surround software) is played back—Auto Surround (see page 26).

When you activate or deactivate Surround mode manually, do the following procedures:

 
On the front panel:

Press **SURROUND ON/OFF**.



From the remote control:

1) Press **CONTROL** repeatedly so that “**SOUND**” appears on the operation mode display.

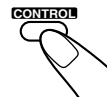

2) Press **SURR ON/OFF**.



 
- Each time you press SURROUND ON/OFF on the front panel or SURR ON/OFF on the remote control, Surround mode is activated and deactivated alternately.

6 Select Surround Mode

When the **PRO LOGIC II** or **DSP** indicator is lit, you can select various Surround modes (see page 31).



On the front panel

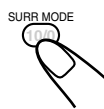

From the remote control

Press **SURROUND MODE (REC MODE)** on the front panel or **SURR MODE** on the remote control.

- When you enjoy digital multichannel source such as Dolby Digital or DTS Digital Surround software, you cannot change Surround mode. When you enjoy Dolby Digital or DTS Digital Surround 2-channel including 2-channel matrix source such as Dolby Surround software, you can select Surround mode from between **PRO LOGIC II MOVIE** and **PRO LOGIC II MUSIC** (see page 31).

7 Stop Playback



On the front panel



From the remote control

Press **■**.

Playback stops.

The unit memorizes the point where you stop playback and the **RESUME** indicator lights up on the display (except when an audio CD is loaded).

While the **RESUME** indicator is lit on the display, you can start playback from the memorized point by pressing **▶**—Resume play.

About Resume play

This unit can memorize the point when you operate the following procedures:

- Pressing **■** during playback—Pressing **▶** starts Resume play
- Changing the source—Pressing **DVD** or **▶** starts Resume play
- Turning off the unit (including Sleep Timer)—Pressing **▶** starts Resume play

Once you start Resume play, the **RESUME** indicator goes off (the unit clears the memorized point).

The unit also clears the memorized point when you operate the following procedures:

- Starting Resume play
- Pressing **■** (while the **RESUME** indicator is lit on the display)
- Selecting a track by pressing **▶▶** or **◀◀** for video CD and super VCD when playback stops
- Selecting program or random playback
- Pressing **TOP MENU**
- Ejecting the loaded disc
- Turning on the unit by pressing **⏻/⏻** **STANDBY/ON** on the front panel or **⏻/⏻** **STANDBY/ON AUDIO** on the remote control.

You can cancel Resume play (see “OTHERS menu” on page 58).

To remove the loaded disc


Press **▲**.

The disc tray opens.


To close the disc tray

Press **▲** again.

8 Turn Off the Power (into Standby)

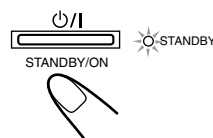

On the front panel

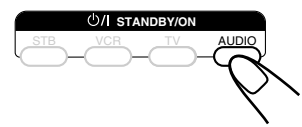

From the remote control

Press **⏻/⏻** **STANDBY/ON** on the front panel or **⏻/⏻** **STANDBY/ON AUDIO** on the remote control.

The unit is turned off and the **STANDBY** lamp lights up on the front panel.

- If you press the button while the disc tray is open, the disc tray closes automatically, then the unit is turned off.
- A small amount of power is consumed even in standby mode. To turn off the power completely, unplug the AC power cord.

Tuner Operations

Tuning into Stations Manually

 
On the front panel:

1 Press FM/AM to select the band.

The last received station of the selected band is tuned in.


The CONTROL buttons now work for tuner operations.

- Each time you press the button, the band alternates between FM and AM.

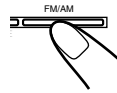


Ex.: When selecting the FM band

2 Press CONTROL ▼ (or ▲) repeatedly until “< TUNING >” appears on the display.

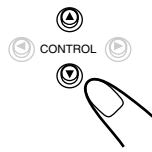

3 While “< TUNING >” still remains on the display, press repeatedly or hold CONTROL ► (or ◀) until you find the frequency you want.

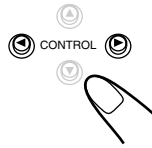

- Pressing (or holding) CONTROL ► increases the frequencies.
- Pressing (or holding) CONTROL ◀ decreases the frequencies.

From the remote control:

1 Press FM/AM.

“TUNER” appears on the operation mode display.



2 Press repeatedly or hold TUNING ⊕ or ⊖ until you find the frequency you want.

- Pressing (or holding) TUNING ⊕ increases the frequencies.
- Pressing (or holding) TUNING ⊖ decreases the frequencies.

Notes:

- When you hold and release CONTROL ► (or TUNING ⊕ on the remote control) or CONTROL ◀ (or TUNING ⊖ on the remote control), the frequency keeps changing until a certain station is tuned in.
- When a station of sufficient signal strength is tuned in, the TUNED indicator lights up on the display.
- When an FM stereo program is received, the STEREO indicator also lights up.

Using Preset Tuning

Once a station is assigned to a channel number, the station can be quickly tuned. You can preset up to 30 FM and 15 AM stations.

■ To store the preset stations

Before you start, remember...

 
There is a time limit in doing the following steps.

If the setting is canceled before you finish, start from step 2 again.

On the front panel ONLY:

1 Tune into the station you want to preset (see “Tuning into Stations Manually”).


- If you want to store the FM reception mode for this station, select the FM reception mode you want. See “Selecting the FM Reception Mode” on page 18.

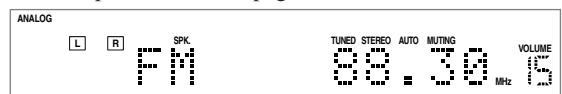



Ex.: When selecting the FM band

2 Press MEMORY.

 The channel number position starts flashing on the display for about 5 seconds.

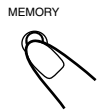

 
3 Press CONTROL ► (or ◀) to select a channel number while the channel number position is flashing.

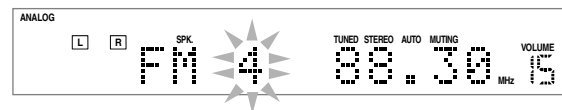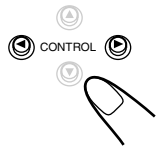

4 Press MEMORY again while the selected channel number is flashing on the display.

The station is assigned to the selected channel number.

 - The selected channel number stops flashing and then the frequency starts flashing.

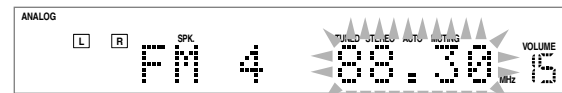

5 Press CONTROL ► (or ◀) to select another frequency you want to store while the frequency is flashing on the display.

6 Repeat steps 2 to 5 until you store all the stations you want.

To erase a stored preset station

Storing a new station on a used channel number erases the previously stored one.

 
■ To tune in a preset station

On the front panel:

1 Press FM/AM to select the band.



The last received station of the selected band is tuned in.

The CONTROL buttons now work for tuner operations.

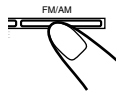


Ex. : When selecting the FM band

 2 Press CONTROL ▼ (or ▲) repeatedly until “< PRESET >” appears on the display.

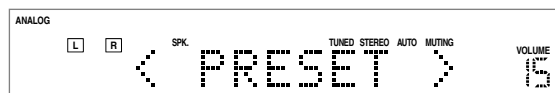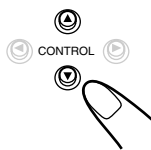

3 While “< PRESET >” still remains on the display, press CONTROL ► (or ◀) to select a preset channel number you want.

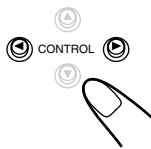

- Pressing (or holding) CONTROL ► increases the preset channel numbers.
- Pressing (or holding) CONTROL ◀ decreases the preset channel numbers.

From the remote control:

- 1 Press FM/AM.
“TUNER” appears on the operation mode display.



The last received station of the selected band is tuned in.
The number buttons now work for tuner operations.

- 2 Press the number buttons to select a preset channel number.
 - For channel number 5, press 5.
 - For channel number 15, press +10 then 5.
 - For channel number 30, press +10, +10, then 10.

Selecting the FM Reception Mode

When an FM stereo broadcast is hard to receive or noisy, you can change the FM reception mode while receiving an FM broadcast.

- You can store the FM reception mode for each preset station.


Before you start, remember...

There is a time limit in doing the following steps.


If the setting is canceled before you finish, start from step 1 again.

On the front panel:

- 1 While listening to an FM station, press CONTROL ▼ (or ▲) repeatedly until “< FM MODE >” appears on the display.

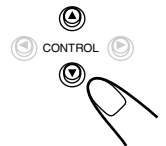

- 2 While “< FM MODE >” still remains on the display, press CONTROL ► (or ◀) to select “MONO.”

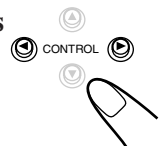

- Each time you press the button, the FM reception mode alternates between “AUTO MUTING”* and “MONO.”



AUTO MUTING ↔ MONO

- * “AUTO MUTING” is the initial setting. If you have already changed the setting, “MONO” will be shown.

AUTO MUTING: Normally select this.

When a program is broadcasted in stereo, you will hear stereo sound; when in monaural, you will hear monaural sounds. This mode is also useful to suppress static noise between stations. The AUTO MUTING indicator lights up on the display.

MONO

: Select this to improve the reception (but stereo effect will be lost).
In this mode, you will hear noise while tuning into the stations. The AUTO MUTING indicator goes off from the display. (The STEREO indicator also goes off.)

To restore the stereo effect

Repeat step 1, then select “AUTO MUTING” in step 2.

From the remote control:

- 1 Press FM/AM to select an FM station.
Number buttons now work for tuner operations.
- 2 Press FM MODE.
 - Each time you press the button, the FM reception mode alternates between “AUTO MUTING” and “MONO.”

Tuner Operations

Using the RDS (Radio Data System) to Receive FM Stations

RDS allows FM stations to send an additional signal along with their regular program signals. For example, the stations send their station names, as well as information about what type of program they broadcast, such as sports or music, etc.

When tuned in to an FM station which provides the RDS service, the RDS indicator lights up on the display.



With the unit, you can receive the following types of RDS signals:


PS (Program Service)	: Shows commonly known station names.
PTY (Program Type)	: Shows types of broadcast programs.
RT (Radio Text)	: Shows text messages the station sends.
Enhanced Other Networks	: See page 21.

Notes:

- RDS is not available for AM broadcasts.
- RDS may not operate correctly if the station tuned is not transmitting RDS signal properly or if the signal strength is weak.

Operation Buttons

You can use the following buttons for RDS operations:

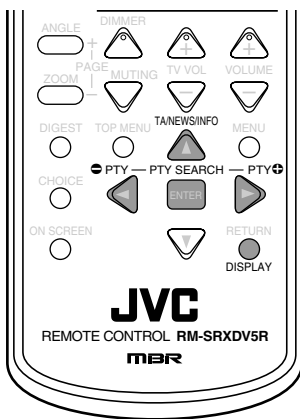


- When using the remote control, press FM/AM to change the remote control operation mode to the tuner.




What information can RDS signals provide?

You can see the RDS signals the station sends on the display.

 Press DISPLAY while listening to an FM station to show the RDS signals.

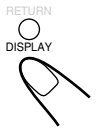

 - Each time you press the button, the display changes to show you the following information:

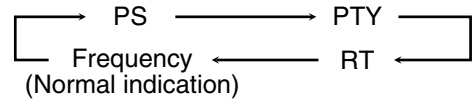

PS (Program Service):

While searching, "PS" appears and then the station names will be displayed. "NO PS" appears if no signal is sent.

PTY (Program Type):

While searching, "PTY" appears and then the type of the broadcast program will be displayed. "NO PTY" appears if no signal is sent.

RT (Radio Text):

While searching, "RT" appears and then text messages the station sends will be displayed. "NO RT" appears if no signal is sent.

Frequency:

Station frequency (non-RDS service).

About characters shown on the display

When PS, PTY, or RT signals appear on the display window, some special characters and marks may not be displayed correctly.

Note:

- If searching finishes at once, "PS," "PTY," and "RT" will not appear on the display.

Searching for a Program by PTY Codes

One of the advantages of the RDS service is that you can locate a particular kind of program from the preset channels (see page 17) by specifying the PTY codes.

To search for a program using the PTY codes

Before you start, remember...

- The PTY Search is only applicable to preset stations.
- To stop searching any time during the process, press PTY SEARCH while searching.
- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

1 Press PTY SEARCH while listening to an FM station.

“PTY SELECT” flashes on the display.



2 Press PTY + or PTY - until the PTY code you want appears on the display, while “PTY SELECT” is flashing.

- For details, see “Description of the PTY codes” on page 22.



3 Press PTY SEARCH again, while the PTY code selected in the previous step is still on the display.

While searching, “SEARCH” and the selected PTY code alternate on the display.

The unit searches 30 preset FM stations, stops when it finds the one you have selected, and tunes in that station.



To continue searching after the first stop

Press PTY SEARCH again while the indications on the display are flashing.

If no program is found, “NOT FOUND” appears on the display.

PTY codes



Tuner Operations

Switching to Broadcast Program of Your Choice Temporarily

Another convenient RDS service is called “Enhanced Other Networks.”

This allows the unit to switch temporarily to a broadcast program of your choice (TA, NEWS, and/or INFO) from a different station except in the following cases:

- When you are listening to non-RDS stations (all AM stations, some FM stations and other sources).
- When the unit is in standby mode or in TV Direct.

 
Before you start, remember...

- The Enhanced Other Networks function is only applicable to preset stations.

Press **TA/NEWS/INFO** repeatedly until the program type you want appears on the display.



- Each time you press the button, the display changes to show the following:

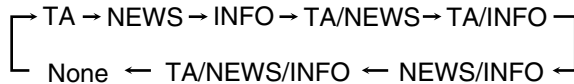

TA	: Traffic Announcement in your area.
NEWS	: News.
INFO	: Program the purpose of which is to impart advice in the widest sense.

How the Enhanced Other Networks function actually works:

CASE 1

If there is no station broadcasting the program you have selected

The unit continues tuning in the current station.



When a station starts broadcasting the program you have selected, the unit automatically switches to the station. The indicator of received PTY code starts flashing.



When the program is over, the unit goes back to the previously tuned station, but the Enhanced Other Networks function still remains activated.

CASE 2

If the FM station you are listening to is broadcasting the program you have selected

The unit continues to receive the station but the indicator of received PTY code starts flashing.



When the program is over, the indicator of received PTY code stops flashing and remains lit, but the Enhanced Other Networks function still remains activated.

To stop listening to the program selected by Enhanced Other Networks

Press **TA/NEWS/INFO** repeatedly again so that the program type (TA/NEWS/INFO) indicator goes off from the display. The unit exits from Enhanced Other Networks standby mode and goes back to the previously selected station.

When an emergency broadcast (Alarm ! signal) is sent from an FM station

The unit automatically tunes in to the station except in the following cases:

- When you are listening to non-RDS stations (all AM stations, some FM stations and other sources).
- When the unit is in standby mode or TV Direct.

While receiving an emergency broadcast, “Alarm !” appears on the display.

The TEST signal is used for equipment test—whether it can receive the Alarm ! signal correctly

The TEST signal makes the unit work in the same way as the Alarm ! signal does. If the TEST signal is received, the unit automatically switches to the station broadcasting the TEST signal. While receiving the TEST signal, “TEST” appears on the display.

Notes:

- *Enhanced Other Networks data sent from some stations may not be compatible with this unit.*
- *Enhanced Other Networks does not function for some FM stations with RDS service.*
- *While listening to a program tuned in to by the Enhanced Other Networks function, the station does not change even if another networks station starts broadcasting a program of the same Enhanced Other Networks data.*
- *While listening to a program tuned in to by the Enhanced Other Networks function, you can only use the TA/NEWS/INFO and DISPLAY as the buttons for the tuner operations.*
- *If the stations alternate intermittently between the station tuned in by the Enhanced Other Networks function and the current station, press TA/NEWS/INFO repeatedly to cancel the Enhanced Other Networks function.*
If you do not press the button, the current station is received finally, and the unit turns off the indication for the Enhanced Other Networks data type from the display.

Description of the PTY codes:

News:	News.
Affairs:	Topical program expanding or enlarging upon the news—debate, or analysis.
Info:	Programs the purpose of which is to impart advice in the widest sense.
Sport:	Programs concerned with any aspect of sports.
Educate:	Educational programs.
Drama:	All radio plays and serials.
Culture:	Programs concerning any aspect of national or regional culture, including language, theater, etc.
Science:	Programs about natural sciences and technology.
Varied:	Used for mainly speech-based programs such as quizzes, panel games and personality interviews.
Pop M:	Commercial music of current popular appeal.
Rock M:	Rock music.
Easy M:	Current contemporary music considered to be “easy-listening.”
Light M:	Instrumental music, and vocal or choral works.
Classics:	Performances of major orchestral works, symphonies, chamber music, etc.
Other M:	Music not fitting into any of the other categories.
Weather:	Weather reports and forecasts.
Finance:	Stock Market reports, commerce, trading etc.
Children:	Programs targeted at a young audience.

Social:	Programs about sociology, history, geography, psychology and society.
Religion:	Religious programs.
Phone In:	Involving members of the public expressing their views either by phone or at a public forum.
Travel:	Travel information.
Leisure:	Programs about recreational activities.
Jazz:	Jazz music.
Country:	Songs which originate from, or continue the musical tradition of the American Southern States.
Nation M:	Current popular music of the nation or region in that country’s language.
Oldies:	Music from the so-called “golden age” of popular music.
Folk M:	Music which has its roots in the musical culture of a particular nation.
Document:	Programs concerning factual matters, presented in an investigative style.
TEST:	Broadcasts for testing emergency broadcast equipment or unit.
Alarm !:	Emergency announcement.

Classification of the PTY codes for some FM stations may be different from the above list.

Basic Settings

Some of the following settings are required after connecting and positioning your speakers while others will make operations easier. You can set the items by using the SETTING button and CONTROL ▲/▼/◀/▶ buttons on the front panel.

Setting items:

- Speaker information for front, center, rear speakers, and subwoofer*
- Crossover frequency*
- Digital input (DIGITAL IN) terminals
- Speaker distance for front, center, and rear speakers*
- Low frequency effect attenuator*
- Dynamic range compression*
- Auto surround
- Auto mode

Note:

* You can also set these items using the Choice menu (see pages 53 to 58).

Operation Buttons

To do the basic settings for this unit, use the buttons on the front panel.




On the front panel ONLY

Button	To do
SETTING	Display the setting indications on the display*.
CONTROL ▲/▼	Select an item on the display. Each time you press the button, the indication changes as illustrated below.
CONTROL ▶/◀	Adjust the selected item.

• When no operation is done for about 5 seconds, the indications on the display will disappear.

* Pressing SETTING repeatedly also changes the indication.

Configuration of the indications on the display

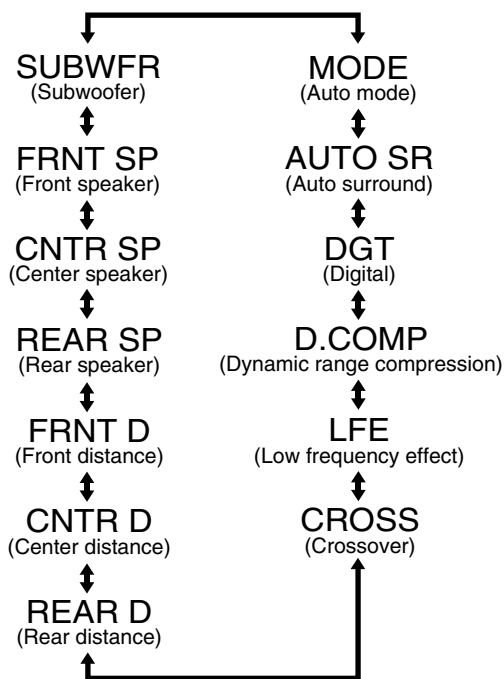

Operating Procedure

 
Ex. : When setting the digital input (DIGITAL IN) terminals.

Before you start, remember...


There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

1 Press SETTING.

The CONTROL buttons now work for basic settings. The setting item selected previously appears on the display.

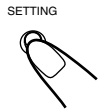



2 Press CONTROL ▼ (or ▲) repeatedly until "DGT (Digital)" (with the current setting)* appears on the display.

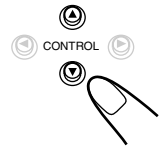

* "1STB 2TV" is the initial setting. If you have already changed the setting, another combination will be shown.

3 Press CONTROL ▶ (or ◀) to select the appropriate digital terminal setting.

• Each time you press the button, the indication changes as follows:

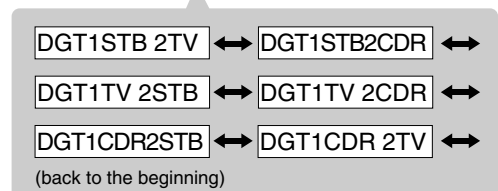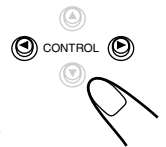

■ **Speaker information—“SUBWFR (subwoofer),” “FRNT SP (front speaker),” “CNTR SP (center speaker),” and “REAR SP (rear speaker)”**

To obtain the best possible effect from the Surround modes (see pages 29 to 32), register the following information after all connections are completed.

● **For subwoofer:**



Select one of the following settings:

YES : Select this when a subwoofer is connected.

NO : Select this when no subwoofer is used.

Notes:

- “NO” is the initial setting.
- If you have selected “NO” for the subwoofer, you can only select “LARGE” for the front speakers.

● **For front speakers, center speaker, and rear speakers:**



Select one of the following settings for each speaker:

LRG (large) : Select this when the speaker size is relatively large.

 
 
SML (small) : Select this when the speaker size is relatively small.

NO : Select this when you have not connected a speaker. (Not selectable for the front speakers)

Notes:

- “LRG (large)” is the initial setting for the front speakers, “SML (small)” for the center and rear speakers.
- Keep the following comment in mind as reference when adjusting the settings.
 - If the size of the cone speaker unit built in your speaker is greater than 12 cm, select “LRG (large),” and if it is smaller than 12 cm, select “SML (small).”
- If you have selected “SML (small)” for the front speakers, you cannot select “LRG (large)” for the center and rear speakers.


■ **Speaker distance—“FRNT D (front distance),” “CNTR D (center distance),” and “REAR D (rear distance)”**

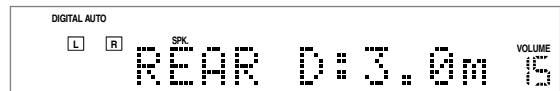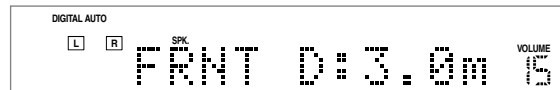

The distance from your listening point to the speakers is another important element to obtain the best possible surround sound of the Surround modes.

You need to set the distance from your listening point to the speakers. By referring to the speaker distance setting, this unit automatically sets the delay time of the sound through each speaker so that sounds through all the speakers can reach you at the same time.

Set the distance from the listening point within the range of 0.3 m to 9.0 m, in 0.3 m interval.

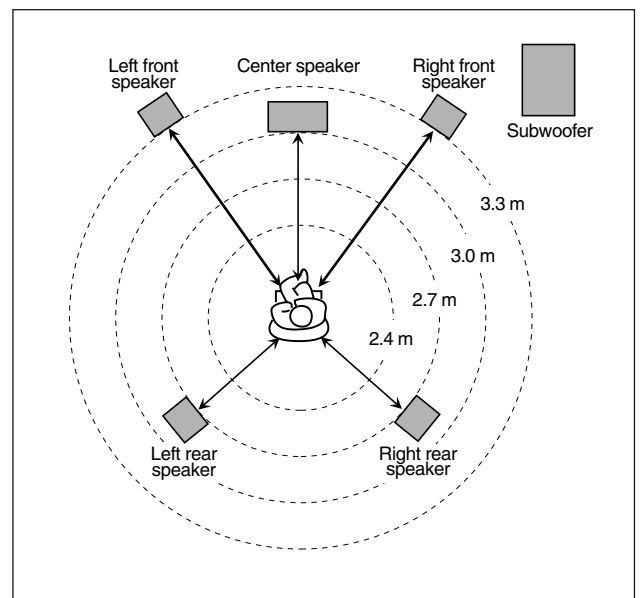


Ex. : In this case,
 set “FRNT D” to “3.3m,”
 set “CNTR D” to “3.0m” and
 set “REAR D” to “2.7m.”

Notes:

- “3.0m” is the initial setting. If you have already changed the setting, another setting will be shown.
- If you have selected “NO” for the center and rear speakers setting, you cannot set the speaker distance for the center and rear speakers.

Basic Settings

 ■ Crossover frequency—“CROSS (crossover)”

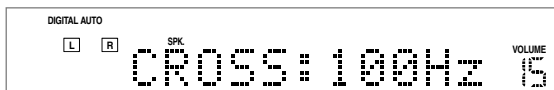

Small speakers cannot reproduce the bass sounds efficiently. If you use a small speaker in any position, this unit automatically reallocates the bass sound elements assigned to the small speaker to the large speakers.

To use this function properly, set the crossover frequency level according to the size of the small speaker connected.

- If you have selected “LRG (large)” for all speakers, this function will not take effect.

Select one of the following settings:

80Hz : Select this frequency when the cone speaker unit built in the speaker is about 12 cm.

100Hz : Select this frequency when the cone speaker unit built in the speaker is about 10 cm.

120Hz : Select this frequency when the cone speaker unit built in the speaker is about 8 cm.

Notes:

- “100Hz” is the initial setting. If you have already changed the setting, another frequency will be shown.
- Crossover frequency is not valid for the HEADPHONE mode.

■ Low frequency effect attenuator—“LFE”



If the bass sound is distorted while playing back software encoded with **Dolby Digital** or **DTS Digital Surround**, set the LFE level to eliminate distortion.

- This function takes effect only when the LFE signals come in.

Select one of the following settings:

0dB : Normally select this.

-10dB : Select this when the bass sound is distorted.

Note:

- “0dB” is the initial setting. If you have already changed the setting, “-10dB” will be shown.

■ Dynamic range compression—“D.COMP”



You can compress the dynamic range (difference between maximum sound and minimum sound) of the reproduced sound. This is useful when enjoying surround sound at night.

- This function takes effect only when playing back a source encoded with **Dolby Digital**.

Select one of the following settings:

OFF : Select this when you want to enjoy surround with its full dynamic range. (No effect applied.)

MID : Select this when you want to reduce the dynamic range a little.

MAX : Select this when you want to apply the compression effect fully. (Useful at night.)

Note:

- “MID” is the initial setting. If you have already changed the setting, another setting will be shown.

■ Digital input (DIGITAL IN) terminals—“DGT”



When you use the digital input terminals, register what components are connected to which terminals (DIGITAL IN 1/ DIGITAL IN 2). So, the correct source name will appear when you select the digital source.

Set the appropriate digital terminal setting.

- Each time you press CONTROL ► or ◀, the display changes as follows:

1 STB 2 TV ⇄ 1 STB 2 CDR ⇄ 1 TV 2 STB ⇄
1 TV 2 CDR ⇄ 1 CDR 2 STB ⇄ 1 CDR 2 TV ⇄
(back to the beginning)

Notes:

- “1STB 2TV” is the initial setting. If you have already changed the setting, another combination will be shown.
- If you want to connect a CD recorder to the digital input terminal, change the source name to “CDR” from “TAPE.” For details, see “Changing the Source Name” on page 14.

■ Auto surround—“AUTO SR”



Surround mode is automatically activated when the digital multichannel source such as Dolby Digital or DTS Digital Surround software or 2-channel matrix source such as Dolby Surround is played back.

You can enjoy Surround mode simply by selecting the source (with digital input selected for that source)—Auto Surround.

 
Select one of the following settings:

- ON** : The AUTO SURROUND indicator always lights up on the display.
- If multichannel signals come in, an appropriate Surround mode will be turned on.
 - If Dolby Digital 2-channel or DTS 2-channel including surround signals come in, “PL II MOVIE” will be selected.
 - If Dolby Digital 2-channel or DTS 2-channel signals without surround signals come in, “STEREO” will be selected.
 - If the other signals come in, nothing will change.
- OFF** : Select this to deactivate Auto Surround.

Notes:

- “ON” is the initial setting. If you have already changed the setting, “OFF” will be shown.
- This function does not take effect in the following cases:
 - While playing an analog source.
 - While selecting “DGTL D.D.” or “DGTL DTS” as the fixed digital input mode (see page 13).
- If you press SURROUND ON/OFF (SURR ON/OFF on the remote control) with Auto Surround activated, Auto Surround will be canceled temporarily for the currently selected source. Auto Surround setting will be restored in the following cases:
 - When you turn off and on the unit,
 - When you change the source,
 - When you change the analog/digital input, and
 - When you reset “AUTO SR” to “ON” again.

■ Auto mode—“MODE”

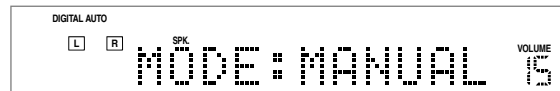

You can turn on this unit and select the source automatically by turning on the video components connected to this unit—Auto mode.

- This function takes effect only when the video components and TV are connected to this unit with SCART cables.
- This function takes effect for the following sources—DVD, STB, and VCR.

Select one of the following settings:

- AUTO1** : When a video component is turned on while the unit is on, the unit selects the video component as the source automatically.
- AUTO2** : • **When a video component is turned on**
 – while the unit is off, the unit changes the mode into TV Direct and selects the video component as the source automatically.
 – while the unit is on or TV Direct is activated, the unit selects the video component as the source automatically.
- **When a video component is turned off**
 – while TV Direct is activated or the unit is on with one of the video components selected as the source, the unit selects the previously selected video component as the source automatically.
- MANUAL** : Select the source manually.

Notes:

- “MANUAL” is the initial setting. If you have already changed the setting, other settings will be shown.
- When selecting VCR as the source, “AUTO1” or “AUTO2” may not work if you only turn on the VCR. If it happens, you may need to start playback to activate Auto mode.

Sound Adjustments

The following settings are required after connecting and positioning your speakers.

You can adjust the items by using the ADJUST button and CONTROL ▲/▼/◀/▶ buttons on the front panel.

Adjustment items:

- Front speaker output balance*
- DAP effect level
- Tone*
- Speaker output levels*

Notes:

- The setting contents of adjustment items are memorized for each source.
- * You can also set these items using the Choice menu (see pages 53 to 58).

Operation Buttons

To do the basic settings for this unit, use the buttons on the front panel.




On the front panel ONLY*

Button	To do
ADJUST	Display the adjustment indications on the display**.
CONTROL ▲/▼	Select an item on the display. Each time you press the button, the indication changes as illustrated below.
CONTROL ▶/◀	Adjust the selected item.

- When no operation is done for about 5 seconds, the indications on the display will disappear.
- * You can also make sound adjustment except for front speakers output balance from the remote control.
- ** Pressing ADJUST repeatedly also changes the indication.

Configuration of the indications on the display

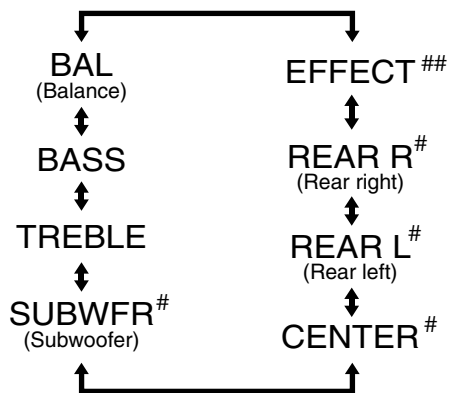

- # These indications appear only when the corresponding speakers information for each speaker is set to other than "NO."
- ## "EFFECT" appears only when one of DAP modes (see pages 29 to 32) is activated.

Operating Procedure

Ex. : When setting the front speaker output balance.

Before you start, remember...


There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

1 Press ADJUST.

The CONTROL buttons now work for sound adjustments. The setting item selected previously appears on the display.





2 Press CONTROL ▼ (or ▲) repeatedly until "BAL (Balance)" (with the current setting)* appears on the display.

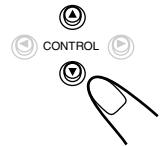

* "CENTER" is the initial setting. If you have already changed the setting, another setting will be shown.

3 Press CONTROL ▶ (or ◀) to adjust the front speaker balance.

• Each time you press the button, the indication changes as follows:

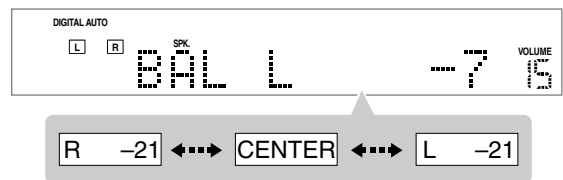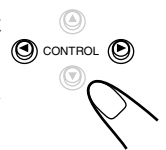

■ Front speaker output balance —“BAL (balance)”



If the sounds you hear from the front right and left speakers are unequal, you can adjust the speaker output balance.

Adjust the output balance appropriately from the listening point within the range of R (Right) –21 to CENTER (0) or CENTER (0) to L (Left) –21.

Note:

- “CENTER” is the initial setting. If you have already changed the setting, another setting will be shown.

■ Tone—“BASS” and “TREBLE”



You can adjust the bass and treble sounds as you like.

Adjust the tone within the range of –10 to +10 in 2 steps intervals.

Note:

- “0” is the initial setting. If you have already changed the setting, another setting will be shown.

Adjusting sound from the remote control

- 1 Press CONTROL repeatedly so that “SOUND” appears on the operation mode display.



Number buttons now work for sound adjustments.

- 2 Adjust the level as follows:

- To adjust subwoofer, press SUBWOOFER + or –.
- To adjust center speaker, press CENTER + or –.
- To adjust left rear speaker, press REAR•L + or –.
- To adjust right rear speaker, press REAR•R + or –.
- To adjust the effect level (for DAP mode), press EFFECT.

 
 
About auto memory

This unit memorizes the settings for each source:

- when you turn off the power (see page 11)
- when you change the source (see page 11)
- when you change the analog/digital input mode (see page 13)
- when you change the source name (see page 14)

When you change the source, the memorized settings for the newly selected source are automatically recalled.

■ Speaker output levels—“SUBWFR (subwoofer),” “CENTER,” “REAR L (left),” and “REAR R (right)”

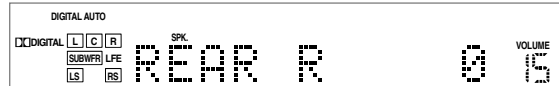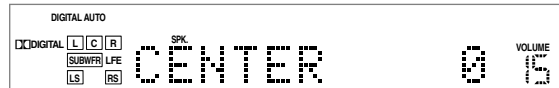

You can adjust the speaker output levels if you have set the speaker information appropriately.

- You can adjust the output level for center and/or rear speakers only when one of proper Surround modes is activated (see page 31).

Adjust the speaker output level within the range of –10 to +10 in 1 step interval.

Note:

- “0” is the initial setting. If you have already changed the setting, another setting will be shown.

■ DAP effect level—“EFFECT”



While one of DAP modes is activated (the DSP indicator lights up on the display), you can adjust the effect level. For details about DAP modes, see pages 29 to 32.

Adjust the effect level within the range of 1 to 5.

Note:

- “3” is the initial setting. If you have already changed the setting, another setting will be shown.

The following can be stored for each source:

- Analog/digital input mode (see page 13)
- Input attenuator mode (see page 14)
- Front speaker output balance (see above or page 56)
- Speaker output level (see above or page 57)
- Tone adjustment (see above or page 56)
- DAP effect level (see above)
- Surround mode selection (see page 31)

Note:

- If the source is FM or AM, you can assign a different setting for each band.

Creating Realistic Sound Fields

You can use the following Surround modes to reproduce a realistic sound field:

- **Dolby Surround**
 - Dolby Pro Logic II
 - Dolby Digital
- **DTS Digital Surround**
- **DAP (Digital Acoustic Processor) modes**
- **All Channel Stereo**

For DVD AUDIO multichannel surround, see page 47.

■ **Dolby Surround**

 
Dolby Pro Logic II*

Dolby Pro Logic II has newly developed multichannel playback format to decode into 5.1-channel from all 2-channel sources—stereo source and Dolby Digital encoded source.

Matrix-based encoding/decoding method for Dolby Pro Logic II makes no limitation for the cutoff frequency of the rear treble and enables stereo rear sound compared to conventional Dolby Pro Logic.

- **You cannot select Dolby Pro Logic II when playing back DVD AUDIO.**


Dolby Pro Logic II enables to reproduce spacious sound from original sound without adding any new sounds and tonal colorations. Dolby Pro Logic II has two modes—**Movie mode** and **Music mode**:

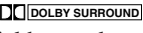Pro Logic II Movie (PL II MOVIE)—suitable for reproduction of Dolby Surround encoded sources bearing the mark  and stereo television sources. You can enjoy sound field very close to the one created with discrete 5.1-channel sounds.

Pro Logic II Music (PL II MUSIC)—suitable for reproduction of any 2-channel stereo music sources. You can enjoy wide and deep sound by using this mode.

- When Dolby Pro Logic II is activated, the  PRO LOGIC II indicator lights up on the display.

Dolby Digital*

Used to reproduce multichannel sound tracks of the software encoded with Dolby Digital ().


- To enjoy the software encoded with Dolby Digital, connect the source component using the digital terminal on the rear of this unit. (See page 8.)

Dolby Digital 5.1-channel encoding method (so-called discrete multichannel digital audio format) records and digitally compresses the left front channel, right front channel, center channel, left rear channel, right rear channel, and LFE channel signals. Since each channel is completely independent from the other channel signals to avoid interference, you can obtain much better sound quality with much stereo and surround effects.

Note:

- *Dolby Digital or DTS software can be roughly grouped into two categories—multichannel (up to 5.1-channel) and 2-channel software. To enjoy surround sounds while playing Dolby Digital 2-channel or DTS software, you can use Dolby Pro Logic II.*

■ **DTS Digital Surround****


Used to reproduce multichannel sound tracks of the software encoded with DTS Digital Surround ().

- To enjoy the software encoded with DTS Digital Surround, connect the source component using the digital terminal on the rear of this unit. (See page 8.)

DTS Digital Surround is another discrete multichannel digital audio format available on CD, LD, and DVD software.

Compared to Dolby Digital, audio compression ratio is relatively low. This fact allows DTS Digital Surround format to add breadth and depth to the reproduced sounds. As a result, DTS Digital Surround features natural, solid and clear sound.

Typical Multichannel (5.1-channel) reproduction

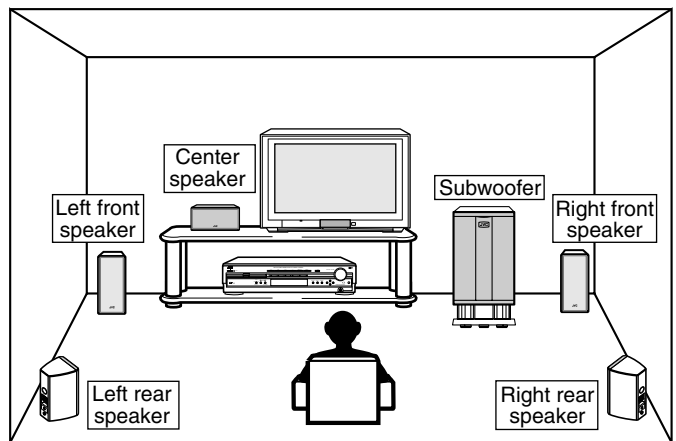

■ **DAP (Digital Acoustic Processor) modes**

DAP modes have been designed to create important acoustic surround elements.

- **You cannot select DAP modes when playing back DVD AUDIO.**

The sound heard in a live club, dance club, hall or pavilion consists of direct sound and indirect sound—early reflections and reflections from behind. Direct sounds reach the listener directly without any reflection. On the other hand, indirect sounds are delayed by the distances of the ceiling and walls (see the diagram on the next page). These indirect sounds are important elements of the acoustic surround effects. The DAP mode can reproduce a realistic sound field by adding these indirect sounds.

DAP modes can be used when the front and rear speakers are connected to this unit (without respect to the center speaker connection: no sound comes out of the center speaker even if it is connected).

* Manufactured under license from Dolby Laboratories. "Dolby," "Pro Logic," and the double-D symbol are trademarks of Dolby Laboratories.

** Manufactured under license from Digital Theater Systems, Inc. US PAT. No. 5,451,942 and other world-wide patents issued and pending. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. Copyright 1996 Digital Theater Systems, Inc. All rights reserved.

The following DAP modes are provided for this unit:

LIVE CLUB	: Gives the feeling of a live music club with a low ceiling.
DANCE CLUB	: Gives a throbbing bass beat.
HALL	: Gives clear vocal and the feeling of a concert hall.
PAVILION	: Gives the spacious feeling of a pavilion with a high ceiling.

These DAP modes can be used to add the acoustic surround effects while reproducing 2-channel stereo software, either analog or Linear PCM digital signal, and can give you a real “being there” feeling.

- When one of the DAP modes is selected, the DSP indicator lights up on the display.

■ All Channel Stereo

This mode can reproduce a larger stereo sound field using all the connected (and activated) speakers.



- **You cannot select All Channel Stereo when playing back DVD AUDIO.**

All Channel Stereo can be used when the front and rear speakers are connected to this receiver without respect to the center speaker connection.

If the center speaker is connected and activated, the same phases of the front left and right signals are mixed and output through the center speaker.

All Channel Stereo can be used while reproducing 2-channel stereo software, either analog or Linear PCM digital signal.

- When All Channel Stereo is selected, the DSP indicator lights up on the display.

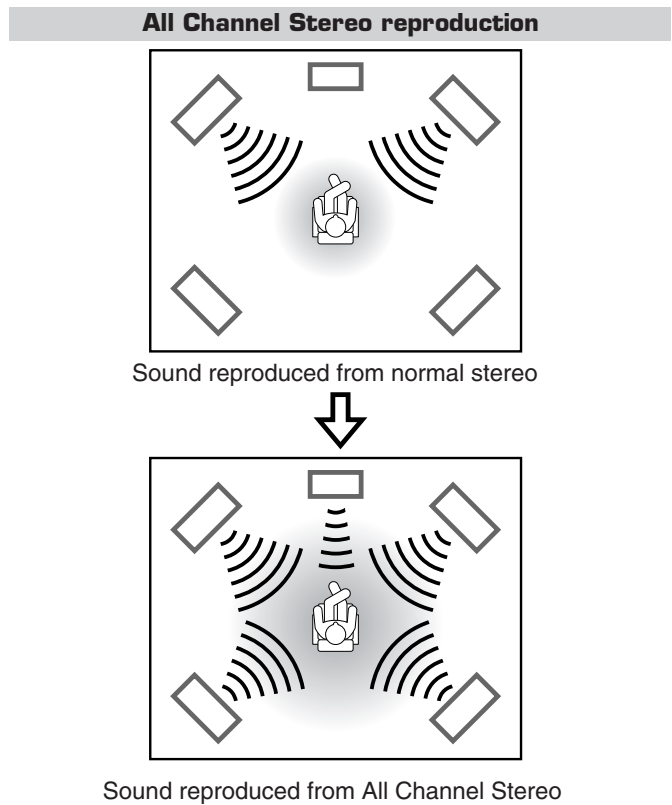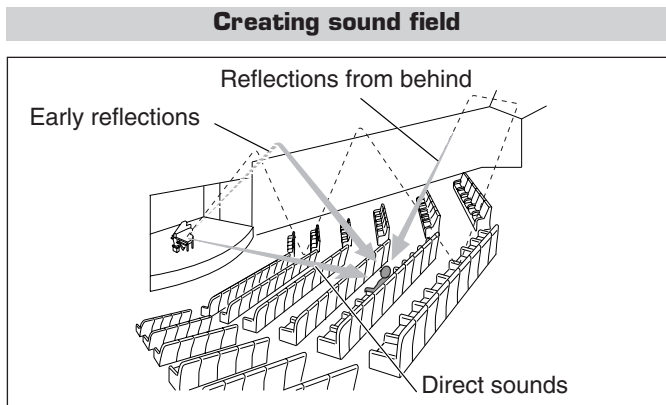

Available Surround modes for each input signal

○: Possible ×: Impossible

Modes Signals	STEREO	DOLBY DIGITAL	DTS SURROUND	PL II MOVIE	PL II MUSIC	LIVE CLUB	DANCE CLUB	HALL	PAVILION	ALL CH ST.
Dolby Digital (Multichannel)	○	○	×	×	×	×	×	×	×	×
Dolby Digital (2-channel)	○	×	×	○	○	×	×	×	×	×
Dolby Surround (matrix 2-ch)	○	×	×	○	○	×	×	×	×	×
DTS Digital Surround (Multichannel)	○	×	○	×	×	×	×	×	×	×
DTS Digital Surround (2-channel)	○	×	×	○	○	×	×	×	×	×
Linear PCM	○	×	×	○	○	○	○	○	○	○
Analog	○	×	×	○	○	○	○	○	○	○

Creating Realistic Sound Fields

Activating Surround Mode

When Auto Surround is set to “OFF” or 2-channel source other than Dolby Surround software is played back, activate Surround mode manually.

Make sure that you have set the speakers information correctly (see page 24 or 57).

- If only front speakers are connected, you cannot activate any Surround mode.

On the front panel:

Press SURROUND ON/OFF.

The SURROUND indicator lights up on the display (when Auto Surround is set to “OFF”).

 
- Each time you press the button, Surround mode is activated or deactivated alternately.



From the remote control:

1 Press CONTROL repeatedly so that “SOUND” appears on the operation mode display.

Number buttons now work for sound adjustments.

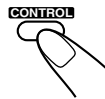

2 Press SURR ON/OFF.

 
 
The SURROUND indicator lights up on the display (when Auto Surround is set to “OFF”).

- Each time you press the button, Surround mode is activated or deactivated alternately.



About SURROUND indicators

- When Auto Surround is set to “ON,” the AUTO SURROUND indicator always lights up on the display.
- When you activate Surround mode manually with Auto Surround set to “OFF,” the SURROUND indicator lights up on the display.

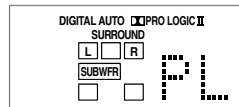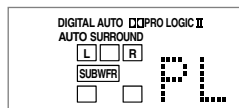

Selecting Surround Modes

When 2-channel source is played back with Surround mode activated, you can select another Surround mode.

Available Surround modes will vary depending on the number of the connected speakers and the playback sound.

Make sure that you have set the speaker information correctly (see page 24 or 57).

- You cannot change Surround mode when playing back DVD AUDIO.
- If rear speakers are not connected, you cannot use DAP modes and the All Channel Stereo.

On the front panel:

Press SURROUND MODE.

 
- Each time you press the button, Surround mode is changed as illustrated below:



From the remote control:


1 Press CONTROL repeatedly so that “SOUND” appears on the operation mode display.

Number buttons now work for sound adjustments.

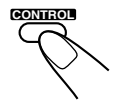


2 Press SURR MODE.

 - Each time you press the button, Surround mode is changed as illustrated below:

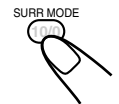

When 5 or 4 (except center speaker) speakers are connected:

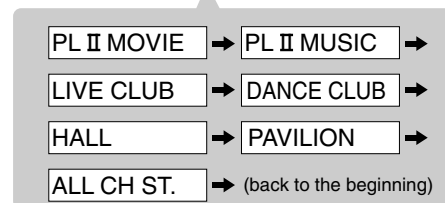


When 3 (except rear speakers) speakers are connected or Dolby Digital including matrix source is played back:



Signal and speaker indicators on the display

The following signal indicators light up —:

- L, R : • When digital input is selected: Light up when the signals corresponding to each channel come in.
• When analog input is selected: Always light up.
- C, LS, RS : Light up when the signals corresponding to each channel come in.
- S : Lights up when the monaural rear channel signal or Dolby Surround encoded signal comes in.
- LFE : Lights up when the LFE channel signal comes in.

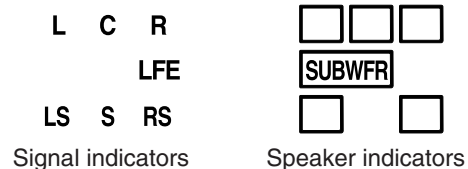

The speaker indicators light up as follows:

- The subwoofer speaker indicator (SUBWFR) lights up when “SUBWFR” is set to “YES” (see page 24) or “USE” (see page 57).
- The other speaker indicators light up only when the corresponding speaker is activated, and also when required for the current playback.

Adjusting Surround Mode Using Remote Control

When playing back the source with Surround mode, you can adjust the speaker output levels for Surround modes.

Once you have adjusted the Surround modes, the adjustment is memorized for each source.


- You can also adjust Surround modes using the Choice menu (see pages 53 to 58) or buttons on the front panel (see page 24).
- When using test tone, you can adjust the speaker output levels without playback sounds.

1 Select and play back software you like.

2 Activate and select Surround mode.

- When 2-channel source is played back, you can select Surround modes.

3 Adjust the sound.

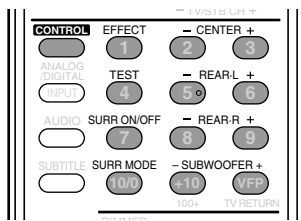

- Press CONTROL repeatedly so that “SOUND” appears on the operation mode display.

Number buttons now work for the sound adjustment.



- Adjust the speaker output levels as follows:

To adjust center speaker, press CENTER +/-.*

To adjust left rear speaker, press REAR•L +/-.

To adjust right rear speaker, press REAR•R +/-.

To adjust subwoofer, press SUBWOOFER +/-.

To adjust the effect level, press EFFECT.**

The name for the item currently adjusted appears on the display. For details, see the illustrations of “Speaker output levels” on page 28.

Notes:


- You can adjust the speaker output levels for the activated speakers ONLY (the speaker indicators are lit on the display).
- You cannot adjust the output levels of center speaker when one of DAP modes is activated.
- You can adjust the effect level only when one of DAP modes is activated.
- Before operating the DVD player using remote control, press DVD to change the remote control operation mode to DVD.

For using test tone

- Press CONTROL.
- Press TEST.

The playback sound stops during playback.

“TEST L” starts flashing on the display and a test tone comes out of the speakers in the following order:

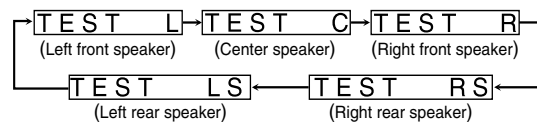

- Adjust the speaker output level as follows:

To adjust center speaker, press CENTER +/-.

To adjust left rear speaker, press REAR•L +/-.

To adjust right rear speaker, press REAR•R +/-.

Notes:

- You cannot adjust the speaker output levels if you have set the speaker information to “NO.”
- No test tone comes out of the speaker when its speaker information is set to “NO.”
- When you press EFFECT or SUBWOOFER +/-, the test tone stops.

- Press TEST to stop the test tone.

The test tone stops.

- When no operation is done, the test tone stops automatically in about 1 minute.

Relation between Surround modes and adjustable items

○: Possible ×: Impossible

Mode \ Item	TEST	CENTER	REAR•L	REAR•R	SUBWOOFER	EFFECT
Dolby Digital	○	○	○	○	○	×
DTS Digital Surround	○	○	○	○	○	×
Dolby Pro Logic II	○	○	○	○	○	×
DAP	○	×	○	○	○	○
All Channel Stereo	○	○	○	○	○	×

Note:

- You cannot adjust the speakers which are not used by the selected Surround mode.

DVD Player Operations

Disc Information








■ Playable Disc Types

This unit has been designed to play back the following discs:

DVD VIDEO, DVD AUDIO, Video CD (VCD), Super Video CD (SVCD), audio CD, CD-R, and CD-RW.

- This unit can also play back MP3 and JPEG files recorded on CD-R and CD-RW. For details about MP3, see “MP3 Disc Playback” on pages 49 and 50 and about JPEG, see “JPEG Disc Playback” on pages 51 and 52.
- This instruction refers to Video CD as VCD, Super Video CD as SVCD, and audio CD as CD.

Discs you can play:

Disc Type	DVD VIDEO	DVD AUDIO	VCD	SVCD	CD	CD-R	CD-RW
Mark (Logo)			 Video CD	 VIDEO CD			

• The following discs cannot be played back:

DVD-ROM, DVD-RAM, DVD-RW, CD-ROM, CD-I (CD-I Ready), Photo CD, etc.

Playing back these discs will generate noise and damage the speakers.

- On some DVD VIDEO, DVD AUDIO, VCD, or SVCD, their actual operations may be different from what is explained in this manual. This is due to the disc programming and disc structure, but not a malfunction of this unit.
- You can play back DVD-R recorded with the DVD VIDEO format, but some may not be played back because of the disc characteristics or recording conditions.

Note on Region Code

DVD players and DVD VIDEO have their own Region Code numbers. This unit can play back only DVD VIDEO recorded with the color system of PAL whose Region Code numbers include “2.”



If a DVD VIDEO with the wrong Region Code numbers is loaded, “REGION CODE ERROR!” appears on the TV and playback cannot start.

IMPORTANT : Before playing a disc, make sure of the following...

- Check the connection with the TV.
- Turn on the TV and select the correct input mode on the TV to view the pictures or on-screen indications on the TV screen.
- For disc playback, you can change the initial setting to your preference. (See pages 53 to 62.)

If “⊘” appears on the TV screen when you press a button, the disc cannot accept an operation you have tried to do, or data required for that operation is not recorded on the disc.

NOTICE : In some cases, without showing “⊘”, operations will not be accepted.

Notes on CD-R and CD-RW

- User-edited CD-R (Recordable) and CD-RW (ReWritable) can be played back only if they are already “**finalized.**”
- The unit can play back CD-R or CD-RW recorded on a personal computer if they have been recorded in the **audio CD format.**

The unit can also play back CD-R or CD-RW if MP3 files or JPEG files are recorded on them.


However, they may not be played back because of their disc characteristics, recording conditions, or damage or stain on them. Especially, the configuration and characteristics of an MP3 disc or a JPEG disc is determined by the writing (encoding) software and hardware used for recording. Therefore, due to the software and hardware used, the following symptoms may occur:

- Some discs may not be played back.
- Some tracks on an MP3 disc are skipped and may not be played back normally.
- Some files on a JPEG disc may be played back distortedly.
- Before playing back CD-R or CD-RW, read their instructions or cautions carefully.
- CD-RW may require a longer readout time. It is caused by the fact that the reflectance of CD-RW is lower than for regular audio CD.

■ Disc structure


DVD VIDEO consists of “titles,” and each title may be divided into some “chapters” (see Example 1).

For example, if DVD VIDEO contains some movies, each movie may have its own **title** number and it may be further divided into some **chapters**. In DVD VIDEO Karaoke, each song may have its own **title** number, but it may not be further divided into **chapters**.

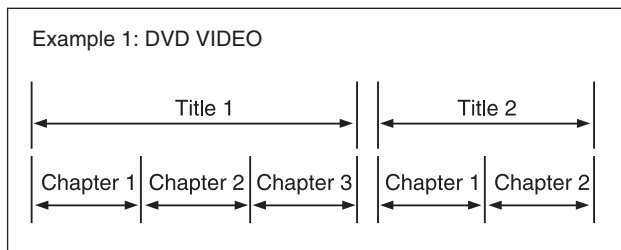


DVD AUDIO consists of “groups,” and each group may be divided into some “tracks” (see Example 2).

Some DVD AUDIO also contain a “bonus group” that can be played back by entering the “key number” (a kind of password). Usually the contents of “bonus group” are not opened to the public. Note that most DVD AUDIO include other information in addition to audio, such as still pictures, movies, and text.

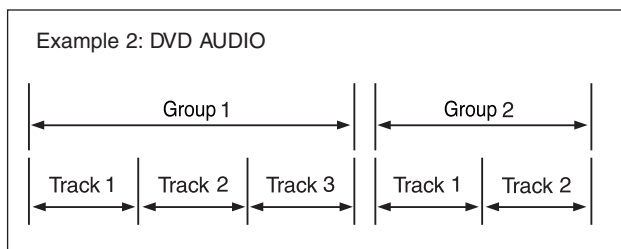

VCD, SVCD, and CD consist of “tracks” (see Example 3).

In general, each track has its own **track** number. (On some discs, each track may also be divided by Indexes. This unit is not compatible with Index function.)

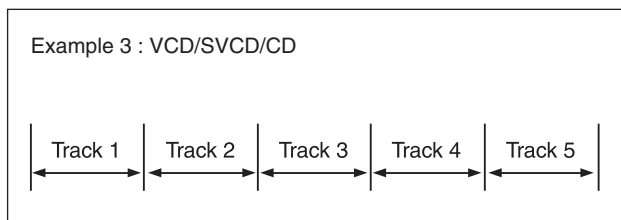

■ Playback Control function (PBC)


The Playback Control function allows you to enjoy menu-driven operation.

Menu-driven playback

A selection menu is displayed when you start playing VCD and SVCD with the Playback Control feature. The selection menu shows a list of numbers for selection. Some discs may show moving pictures or a divided screen.

You can interact with the screen using a menu display to select and play an entry.

See the example illustration on the right about basic feature of menu-driven playback (for details about the operation through the menu, see also page 37).

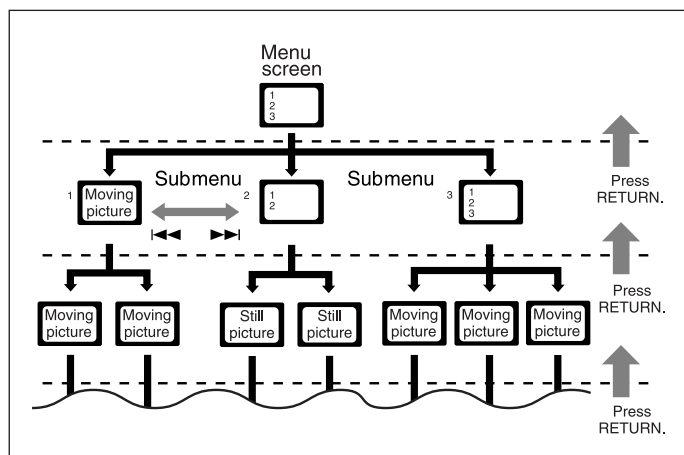

Note:

- While operating VCD or SVCD using the menu, some of the functions such as repeat play may not work.

DVD Player Operations

This section explains advanced operations of the built-in DVD player using the remote control. For MP3 playback, see pages 49 and 50, and for JPEG playback, see pages 51 and 52.

Before using the remote control, press DVD so that “DVD” appears on the operation mode display.

- See also “Basic DVD Player Operations” on pages 15 and 16.
- show which types of disc are available for the operation.
- Turn on your TV and select the correct input mode on the TV.



If “” appears on the TV when you press a button, the disc cannot accept an operation you have tried to do, or data required for that operation is not recorded on the disc.


Using the On-screen Bar

You can check the information of a disc while the disc is loaded and use some functions through the on-screen bar.




Press ON SCREEN.

- Each time you press the button, the on-screen bar changes as shown to the right:

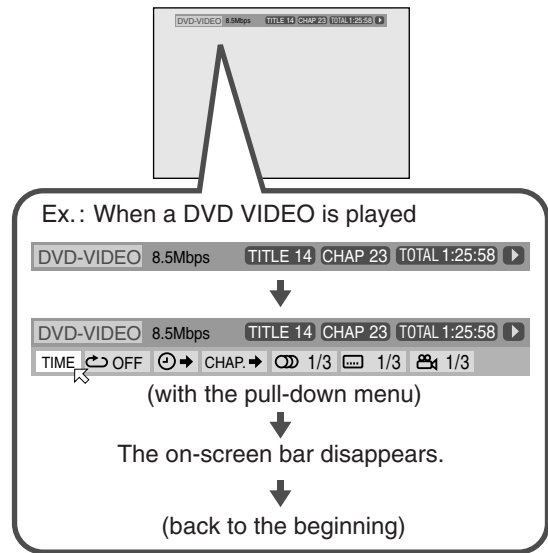

Contents of the on-screen bar with the pull-down menu

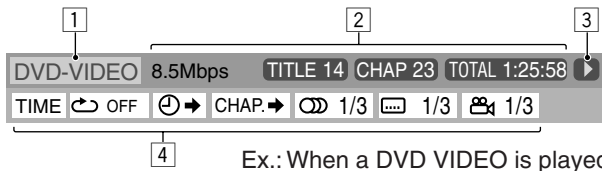

Ex.: When a DVD VIDEO is played

1 Disc type

2 Playback information

Indications	Meanings	Available discs
Mbps	shows the current transfer rate (Megabits per second).	
TITLE 14	shows the current title.	
CHAP 23	shows the current chapter.	
GROUP 1	shows the current group.	
TRACK 14	shows the current track.	
TOTAL 1:25:58	shows the elapsed playing time.	All discs

3 Playback conditions for all types of disc


Indications	Meanings
	Playback
	Fast forward/Fast reverse
	Forward/reverse slow-motion
	Pause
	Stop

4 Operation icons (on the pull-down menu)

Indications	Meanings	Available discs
TIME	Select this to change the time indication. See page 36.	All discs
	Select this to repeat playback. See page 46.	
	Select this for time search. See page 41.	
CHAP. →	Select this for chapter search. See page 41.	
TRACK →	Select this for track search. See page 41.	
1/3	Select this to change the audio language or channel. See pages 39 and 40.	
1/3	Select this to change subtitle language. See page 39.	
1/3	Select this to change the view angle. See page 38.	
PAGE 1/15	Select this to change the page. See page 48.	
PROG.	Select this for the program play. See page 45.	
RND.	Select this for the random play. See page 45.	

Basic Operation through the On-screen Bar

Ex. : When selecting the repeat mode for DVD VIDEO

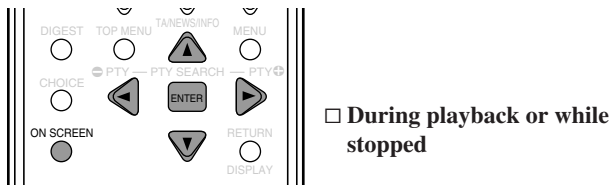

1 Press ON SCREEN twice.

The on-screen bar with pull-down menu appears on the TV.



2 Press cursor ► (or ◀) repeatedly to move to TIME.



3 Press ENTER.

The pop-up window appears under the pull-down menu.



4 Press cursor ▼ (or ▲) to select the desired option in the pop-up window.

- Each time you press the button, the options change.



5 Press ENTER.

The setting changes and the pop-up window goes off.



To turn off the on-screen bar

Press ON SCREEN.

Note:

- See the pages for the detail of each function.

Changing the Time Indication

You can change the time information in the on-screen bar and the display window on the center unit.



1 Press ON SCREEN twice.

The on-screen bar appears on the TV.

2 Press cursor ► (or ◀) to move to TIME.

3 Press ENTER.

- Each time you press the button, the time indication changes as follows:

TOTAL ⇒ **T. (total) REM** ⇒ **TIME** ⇒ **REM** ⇒
(back to the beginning)

TOTAL : Elapsed time of the disc

T. REM : Remaining time of the disc

TIME : Elapsed playing time of the current chapter/track

REM : Remaining time of the current chapter/track

To turn off the on-screen bar

Press ON SCREEN.

Notes:

- The time indication in the on-screen bar changes as follows:
EX. :

TOTAL 1:25:58 ⇒ T.REM 0:45:41 ⇒ TIME 0:25:58 ⇒
REM 0:18:14 ⇒ (back to the beginning)

The indication on the display also changes.

- While playing VCD, SVCD, or CD, the indication of the hour digit does not appear.

DVD Player Operations

Locating a Desired Scene from the Disc Menu

Using the disc menu, you can start playing a title, chapter, or track you specify.

If the on-screen bar is shown on the TV, press ON SCREEN repeatedly to turn off the on-screen bar.


From the DVD menu

DVD VIDEO/DVD AUDIO generally have their own menus which show the disc contents. These menus contain various items such as titles of movies, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene by using these menus.



1 Press TOP MENU or MENU.

The DVD menu appears on the TV. (The menu usually appears on the TV automatically after loading the disc.)

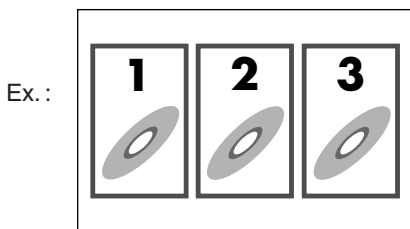

DVD VIDEO/DVD AUDIO normally has a “top” menu when it contains more than one title/group. In this case, press TOP MENU to show the title menu.

Some DVD VIDEO/DVD AUDIO may also have a different menu which is shown by pressing the MENU button.

See the instructions of each DVD VIDEO/DVD AUDIO for its particular menu.

2 Use cursor ▲/▼/▶/◀ to select a desired item, then press ENTER.


The unit starts playback of the selected item.

- With some discs, you can also select items by entering the corresponding number using number buttons.

From the VCD/SVCD menu with PBC

VCD or SVCD recorded with PBC has its own menus such as a list of the tracks. (After loading such a disc, “PBC” appears on the display.) You can locate the specific track by using the menu (see also page 34).

- Before using the remote control, press DVD to change the remote control operation mode.

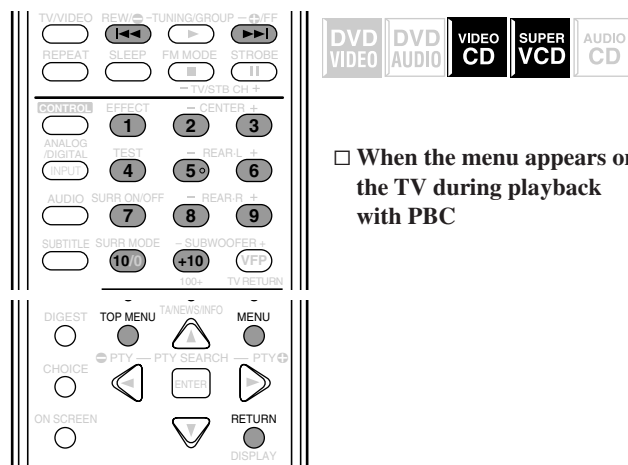


Press number buttons (1–10, +10) to select the number of the desired item.

The unit starts playback from the selected item.

Ex. : To select 3, press 3.

To select 11, press +10, then 1.

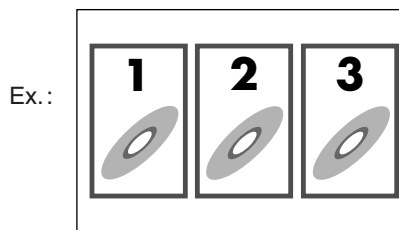

To return to the menu

Press RETURN.

When “NEXT” or “PREVIOUS” is shown on the TV screen:

To go to the next page, press ▶▶.

To return to the previous page, press ◀◀.

To play back PBC-compatible VCD/SVCD without PBC

Start playback by pressing the number buttons while playback is stopped.

The elapsed playing time appears on the display instead of “PBC.”

To restore PBC


Press TOP MENU or MENU.

“PBC” appears again on the display.


About indication on the display while playing back a VCD/SVCD

While you are playing back a VCD/SVCD recorded with PBC, playback information appears on the display as follows:


Ex. : When VCD is played back using PBC

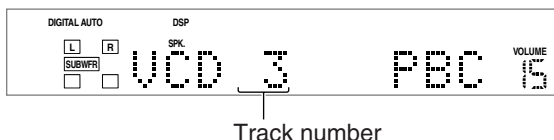

Ex. : When VCD is played back without using PBC

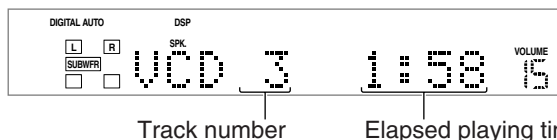

Selecting a View Angle—ANGLE


While playing back DVD VIDEO/DVD AUDIO containing multi-view angles, you can enjoy the same scene in different angles. The  icon appears at the beginning of playback when the current scene has multi-view angles.

Selecting a view angle




1 Press ANGLE.

The following pop-up window appears on the TV.
Ex. : The first view angle is selected out of 3 view angles recorded.

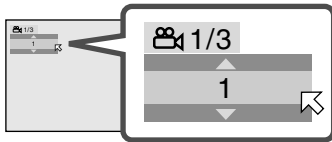

2 Press ANGLE repeatedly to select the desired view angle.

• Each time you press the button, the angle of the scene changes.
Ex. : 1/3 ⇒ 2/3 ⇒ 3/3 ⇒ (back to the beginning)

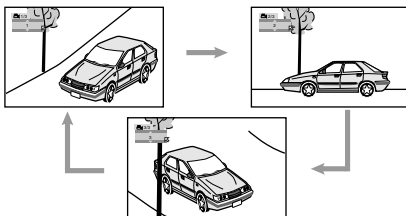

The pop-up window goes off if no operation is done for about 5 seconds.

Using the on-screen bar:

1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor (or) repeatedly to move in the pull-down menu, then press ENTER.

The following pop-up window appears under the pull-down menu.
Ex. : The first view angle is selected out of 3 view angles recorded.



3 Press cursor (or) repeatedly to select the desired view angle.

- Each time you press the button, the angle of the scene changes.


4 Press ENTER.

The pop-up window goes off.

To turn off the on-screen bar


Press ON SCREEN.

Showing all view angles on the TV

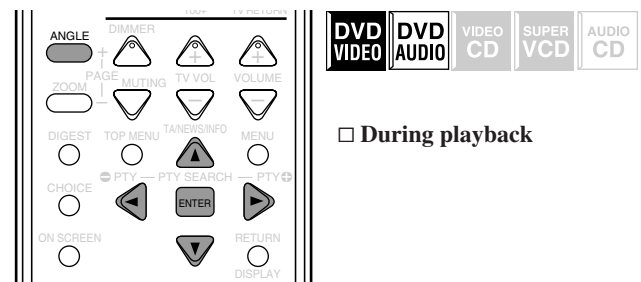

1 Press and hold ANGLE for a few seconds.

Up to 9 pictures of the different camera angles recorded on a disc appear on the TV screen.
Ex. : When 3 view angles are recorded.

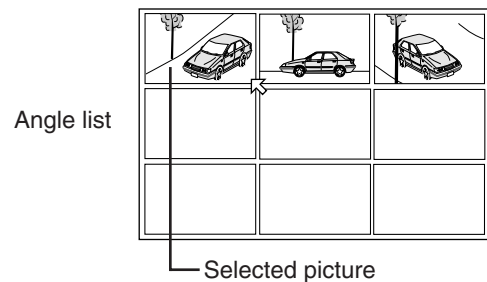


2 Press cursor , , , or repeatedly to move to the desired view.

3 Press ENTER.

The angle list goes off, and playback starts at the selected view angle.

Notes:

- While the angle list is shown on the TV, you cannot listen to the sound.
- If "" appears on the TV, the current scene does not contain multi-view angles.

DVD Player Operations

Changing the Languages—SUBTITLE and AUDIO

While playing back DVD VIDEO/DVD AUDIO/SVCD containing subtitles in different languages, you can select the subtitle language to be displayed on the TV.

The icon appears at the beginning of playback when the current scene has plural subtitles.

When DVD VIDEO/DVD AUDIO contains audio languages (soundtrack), you can select the language (soundtrack) to listen to. The icon appears at the beginning of playback when the current scene has plural audio languages.

- You can also select the audio channel(s) of VCD or SVCD.


Selecting the subtitle language



1 Press SUBTITLE.

The following pop-up window appears on the TV.

Ex.: “ENGLISH” is selected among 3 subtitle languages recorded.

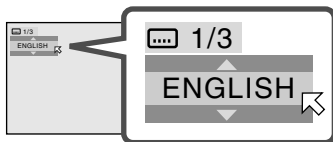

2 Press SUBTITLE repeatedly to select the desired subtitle language.

- Each time you press the button, the subtitle language changes.

The pop-up window goes off if no operation is done for about 5 seconds.

Using the on-screen bar:

1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor ► (or ◀) repeatedly to move to in the pull-down menu, then press ENTER.

The following pop-up window appears under the pull-down menu.

Ex.: “ENGLISH” is selected among 3 subtitle languages recorded.



3 Press cursor ▼ (or ▲) repeatedly to select the desired subtitle language.

- Each time you press the button, the subtitle language changes.

4 Press ENTER.

The pop-up window goes off.


To turn off the on-screen bar

Press ON SCREEN.

Notes:

- For DVD VIDEO/DVD AUDIO: Some subtitle languages are abbreviated in the pop-up window. See “Language code list” on page 56.
- For SVCD: SVCD can contain up to four subtitles. Pressing SUBTITLE changes the subtitles regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subtitle is recorded.)
- If appears on the TV, the current scene does not contain plural subtitles.


Selecting the audio language

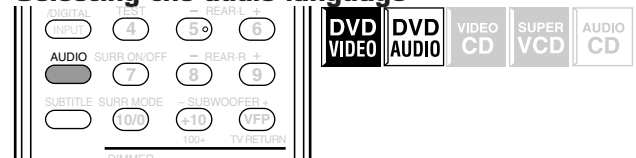

1 Press AUDIO.

The following pop-up window appears on the TV.

Ex.: “ENGLISH” is selected among 3 audio languages recorded.

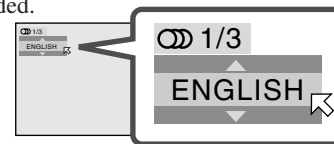

2 Press AUDIO repeatedly to select the desired audio language.

- Each time you press the button, the audio language changes.

The pop-up window goes off if no operation is done for about 5 seconds.

 
Using the on-screen bar:

1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor ► (or ◀) repeatedly to move to in the pull-down menu, then press ENTER.

The following pop-up window appears under the pull-down menu.

Ex.: “ENGLISH” is selected among 3 audio languages recorded.

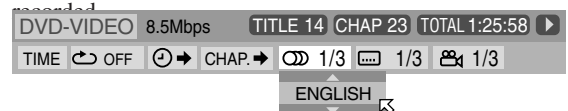

3 Press cursor ▼ (or ▲) repeatedly to select the desired audio language.

- Each time you press the button, the audio language changes.

4 Press ENTER.

The pop-up window goes off.

To turn off the on-screen bar


Press ON SCREEN.

Notes:

- Some audio languages are abbreviated in the pop-up window. See "Language code list" on page 56.
- If "⊘" appears on the TV, the current scene does not contain plural audio languages.

■ Selecting the audio channel


When playing back some Karaoke VCDs or SVCDs, you can enjoy Karaoke by selecting the audio channel to play.

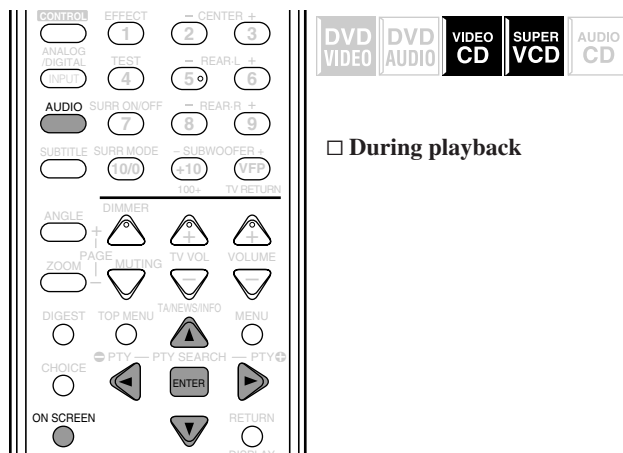

1 Press AUDIO.

The following pop-up window appears on the TV.

Ex. : "ST" (stereo) is selected.

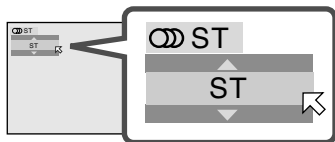

2 Press AUDIO repeatedly to select the desired audio channel.

- Each time you press the button, the audio channel changes.

For VCD :

Ex. :

ST ⇨ L ⇨ R ⇨ (back to the beginning)

ST : To listen to normal stereo playback.

L : To listen to the L (left) audio channel.

R : To listen to the R (right) audio channel.

For SVCD :

Ex. :

ST 1 ⇨ ST 2 ⇨ L 1 ⇨ R 1 ⇨ L 2 ⇨ R 2 ⇨
(back to the beginning)

ST 1/ST 2 : To listen to normal stereo playback of ST 1 or ST 2 channel.

L 1/L 2 : To listen to the L (left) 1 or 2 audio channel.

R 1/R 2 : To listen to the R (right) 1 or 2 audio channel.

The pop-up window goes off if no operation is done for about 5 seconds.

 
Using the on-screen bar:

1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor ► (or ◀) repeatedly to move to in the pull-down menu, then press ENTER.

The following pop-up window appears under the pull-down menu.

Ex. : "ST" (stereo) is selected.

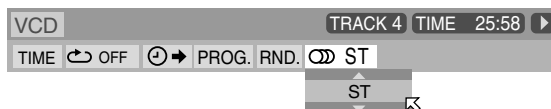

3 Press cursor ▼ (or ▲) repeatedly to select the desired audio channel(s).

- Each time you press the button, the audio channels change.

4 Press ENTER.

The pop-up window goes off.

To turn off the on-screen bar

Press ON SCREEN.

DVD Player Operations


Playing from a Specified Position on a Disc

You can start playing a title, chapter, or track you specify. You can also play a disc from the specified time.

Locating a desired chapter/track—Chapter/Track Search

When playing back DVD VIDEO/DVD AUDIO, you can search for the chapter/track number to be played.

- Before using the remote control, press DVD to change the remote control operation mode.

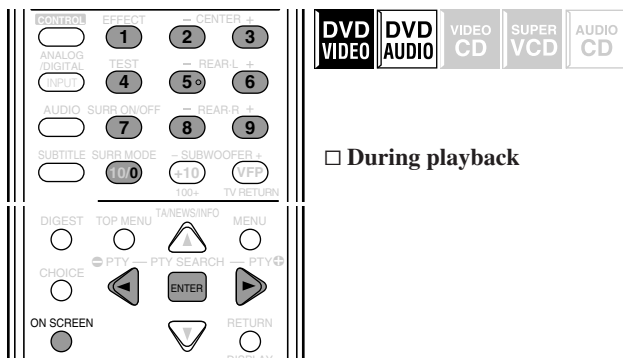


1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.


2 Press cursor ► (or ◀) repeatedly to move to CHAP.► or TRACK► in the pull-down menu, then press ENTER.

The following pop-up window appears under the pull-down menu.

 Ex. : When DVD VIDEO is loaded.

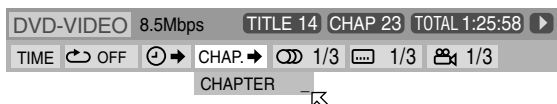

Ex. : When DVD AUDIO is loaded.

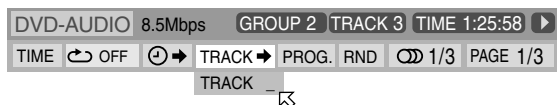 

3 Press the number buttons (0–9) to enter the desired chapter/track number.

- Ex. : To select chapter/track number 8, press 8.
- To select chapter/track number 10, press 1 then 0.
- To select chapter/track number 37, press 3 then 7.

- To correct a misentry

Repeat step 3 until the desired number appears in the pop-up window.

4 Press ENTER.

The unit starts playback from the selected chapter/track.

To turn off the on-screen bar
Press ON SCREEN.


Notes:

- The 10/0 button works only as “0” in this function.
- The +10 button is not used in this function.
- You can select up to the 99th chapter/track.

Locating a desired position—Time Search

You can start playing at your desired position by specifying the elapsed playing time from the beginning of the current title up to “9:59:59” (for DVD VIDEO/DVD AUDIO), or from the beginning of the disc up to “99:59” (for VCD/SVCD/CD).

- Before using the remote control, press DVD to change the remote control operation mode.

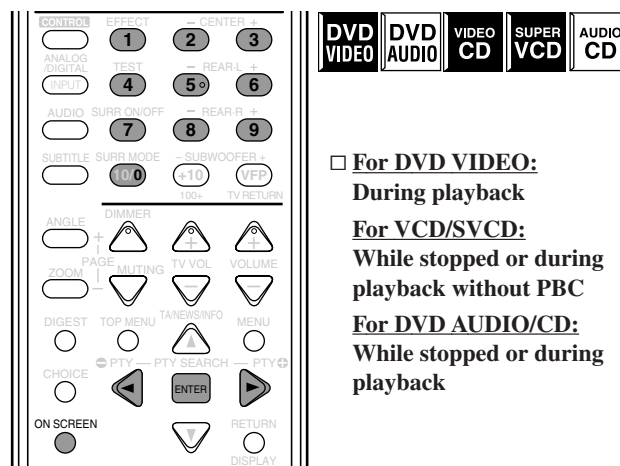

- For DVD VIDEO:

During playback

For VCD/SVCD:

While stopped or during playback without PBC

 
For DVD AUDIO/CD:

While stopped or during playback

1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor ► (or ◀) repeatedly to move to in the pull-down menu, then press ENTER.

The following pop-up window appears under the pull-down menu.

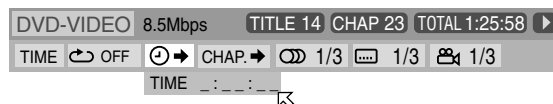

3 Use the number buttons (0–9) to enter the time.

Ex. : To play back from a point of 1 (hours): 02 (minutes): 49 (seconds) from the beginning



- To correct a misentry

Press cursor ◀ repeatedly until the wrong number is erased, then press the number buttons to enter the correct number.

4 Press ENTER.

The unit starts playback from the specified time.


To turn off the on-screen bar
Press ON SCREEN.

Notes:

- The 10/0 button works only as "0" in this function.
- The +10 button is not used in this function.
- You can specify the time in hours/minutes/seconds for DVD VIDEO/ DVD AUDIO, and in minutes/seconds for VCD/SVCD/CD.

Locating a desired scene—DIGEST

The unit can display the opening scenes of each title or chapter on a DVD VIDEO or each track of a VCD/SVCD. You can select a desired title, chapter, or track from the opening scenes shown on the TV screen.

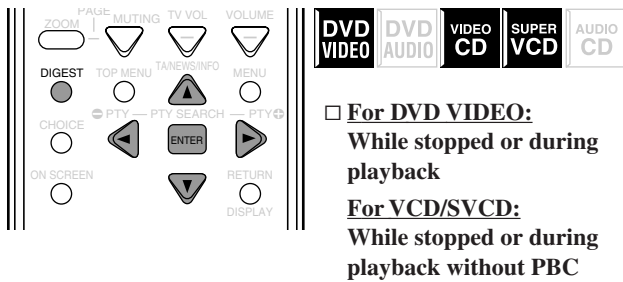

1 Press DIGEST.

Up to 9 opening scenes are displayed.

Selected scene



- **While DVD VIDEO is stopped :**
The opening scenes of each title appear on the TV screen.
- **During DVD VIDEO playback :**
The opening scenes of each chapter in the current title appear on the TV screen.
- **When VCD or SVCD is loaded :**
The opening scenes of each track appear on the TV screen.

2 Press cursor ▲/▼/▶/◀ to move to the desired scene.

- If there are more than 9 scenes, the digest screen will have more than one page.

To show other pages of the digest screen

To display the previous page, select the left top scene, then press cursor ◀.



To display the next page, select the right bottom scene, then press cursor ▶.

OR

Press ▶▶ to display the next page.
Press ◀◀ to display the previous page.

3 Press ENTER.

The unit starts playback from the selected scene.

Note:

- For some discs, it may take some time before all the scenes appear on the TV screen.

DVD Player Operations

Special Picture Playback

This unit provides special picture playback functions including frame-by-frame, strobe, slow-motion, and zoom.

■ Frame-by-frame playback

- Before using the remote control, press DVD to change the remote control operation mode.



Press **II (STROBE)** repeatedly.

- Each time you press the button, the still picture advances to the next frame.

To return to normal playback

Press **▶**.

Note:

- You can also perform the above operation using **II** on the front panel.

■ Showing continuous still pictures—STROBE

- Before using the remote control, press DVD to change the remote control operation mode.



1 Press **STROBE (II)** at the point you want to view as continuous pictures.


Playback pauses.

2 Press and hold **STROBE (II)** for a few seconds.

The same 9 frames (still pictures) appear on the TV screen. You can advance the frames one by one in the following step.

3 Press **STROBE (II)** once.

The picture in the middle on the top row shows an advanced frame from the one on the left.

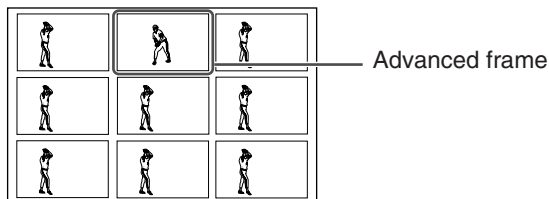

- Pressing the button repeatedly advances the frames one by one.
- Pressing **▶** instead of **STROBE (II)** advances each frame at normal playback speed with a time delay over the all 9 frames. (The sound is muted.)

To return to the normal screen


Press and hold **STROBE (II)** for a few seconds.

Notes:

- If you press and hold **STROBE (II)** for a few seconds during playback, 9 still pictures also appear but they advance in normal playback speed with a time delay. (The sound is muted.)
- You can also perform the above operation using **II** on the front panel.

■ Playing back in slow-motion

- Before using the remote control, press DVD to change the remote control operation mode.

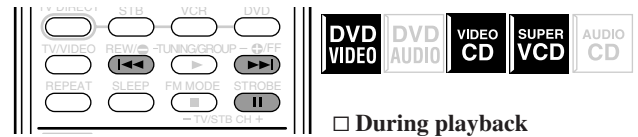

1 Press **II (STROBE)** at the point where you want to start playback in slow-motion.

Playback pauses.

2 Press and hold **▶▶▶** or **◀◀◀**.

To play back in forward slow-motion, press and hold **▶▶▶**.

To play back in reverse slow-motion (for DVD VIDEO only), press and hold **◀◀◀**.

- Each time you press and hold the button, the playback speed changes as follows:

Forward:



Reverse (for DVD VIDEO only):



To pause slow-motion playback

Press **II (STROBE)**.


To return to normal playback

Press **▶**.

Note:



- You cannot listen to the sound during slow-motion playback.

■ Zooming in—ZOOM

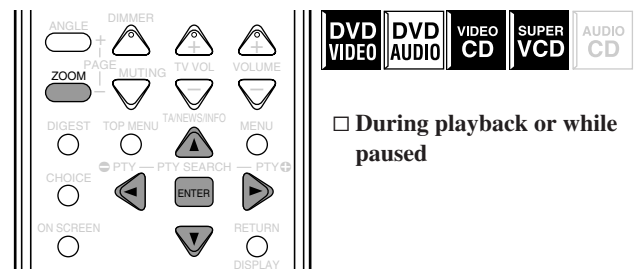

Press **ZOOM**.

 
- Each time you press the button, the magnification changes as follows:

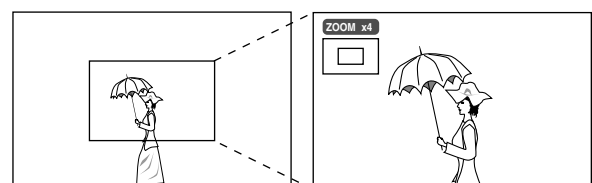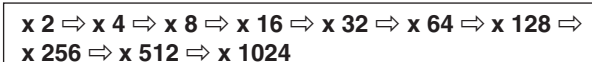

Ex.: When x4 zoom is selected

To move the zoomed-in position

Press cursor ▲/▼/►/◀.

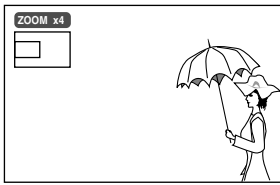

To return to normal playback

Press ENTER.


Note:

- While being zoomed in, the picture may look coarse.

■ Changing the VFP setting—VFP

The VFP (Video Fine Processor) function enables you to adjust the picture based on the picture tone, or personal preference.


- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- Before using the remote control, press DVD to change the remote control operation mode.

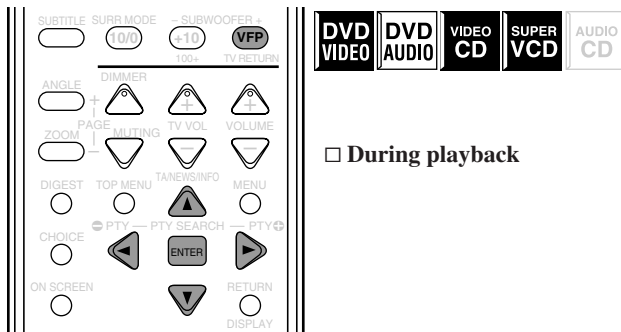

During playback

1 Press VFP.


The current VFP setting screen appears on the TV.

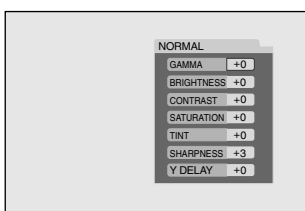

Ex.: When "NORMAL" is selected

2 Press cursor ► (or ◀) repeatedly to select the VFP mode.

 - Each time you press the button, the VFP mode changes as follows.

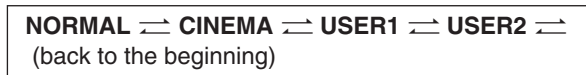

- NORMAL** : Normally select this.
- CINEMA** : Suitable for a movie source.
- USER1 and USER2** : You can adjust parameters that affect the appearance of picture and store the settings (see the right).


To turn off the VFP setting screen

Press VFP.

To adjust the appearance of the picture

When selecting "USER1" or "USER2," you can adjust the appearance of picture.

1 Press VFP, then press cursor ► (or ◀) repeatedly to select "USER1" or "USER2."

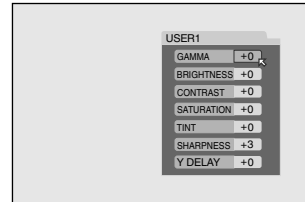


2 Press cursor ▼ (or ▲) repeatedly to select a parameter you want to adjust.

Adjust gradually to show preferable appearance by confirming the picture.

- GAMMA** : Controls the brightness of neutral tints while maintaining the brightness of dark and bright portions (−4 to +4).
- BRIGHTNESS** : Controls the brightness of the screen (−16 to +16).
- CONTRAST** : Controls the contrast of the screen (−16 to +16).
- SATURATION** : Controls the color depth of the screen (−16 to +16).
- TINT** : Controls the tint of the screen (−16 to +16).
- SHARPNESS** : Controls the sharpness of the screen (+0 to +3).
- Y DELAY** : Controls the color gap of the screen (−2 to +2).

3 Press ENTER.

The VFP setting screen disappears and the following pop-up window appears on the TV.

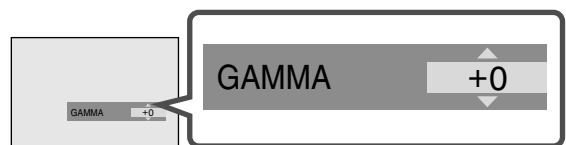

Ex.: When "GAMMA" is selected

4 Press cursor ▼ (or ▲) repeatedly to change the setting, then press ENTER.

The current VFP setting screen appears again.

5 Repeat steps 2 to 4 to adjust other parameters.

To turn off the VFP setting screen

Press VFP.

To activate your setting

Press VFP, then press cursor ► (or ◀) repeatedly to select "USER1" or "USER2."

Note:

- The VFP setting screen disappears if no operations are done for more than about 10 seconds.

DVD Player Operations

Program Playback and Random Playback


You can play tracks on DVD AUDIO/VCD/SVCD/CD in the desired order or in the random order.

- You cannot use Resume play for the program or random playback.

■ Playing back in the desired order

You can play up to 99 tracks in the desired order.

- You may program the same tracks more than once.
- Before using the remote control, press DVD to change the remote control operation mode.

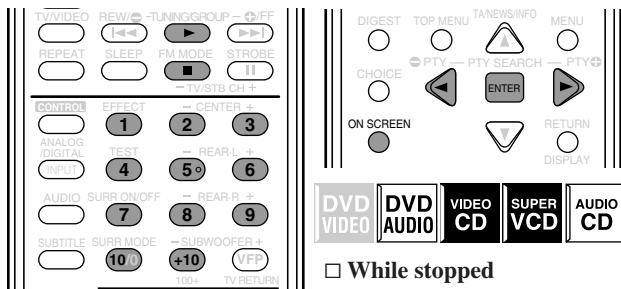


1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor ► (or ◀) repeatedly to move **PROG.** in the on-screen bar, then press ENTER.

The program screen appears on the TV and the PROGRAM indicator lights up on the display.

- 10 steps appear at a time on the program screen.

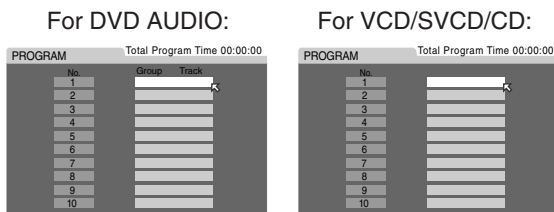


3 Press the number buttons (1–10, +10) to enter a track/group you want to program.

Ex. : To select the track/group number 3, press 3.

To select the track/group number 14, press +10 then 4.

To select the track/group number 40, press +10, +10, +10 then 10.

- For DVD AUDIO ONLY: Enter a group number and a track number in order.
- When you enter a track/group number that does not exist on the loaded disc, your entry is ignored.
- The total program time is shown at the top of the program screen on the display.

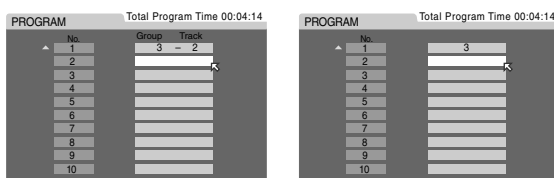

4 Repeat step 3 to program the next steps.

- Each time you enter a track number in the step at the bottom of the program screen, the next steps appear.

5 Press ►.

Playback starts in the programmed order.

To erase a step

Press cursor ▲ (or ▼) to move **PROG.** to the desired step, then press ■.

- To program the next steps again, press cursor ▼ repeatedly to move **PROG.** to the blank step, then repeat step 3.

To stop the program playback

Press ■.

- When VCD or SVCD is played back, the program screen appears again.
- To edit your program, repeat steps 3 and 4.

To cancel the program playback mode

Clear the program you made as follows:

- Press ■ to stop playback.
 - Press ON SCREEN to turn on the on-screen bar.
 - Press ■.
- You can also clear the program by ejecting the disc or turning off the unit.

To turn off the on-screen bar

Press ON SCREEN repeatedly.

Note:

- When all the programmed tracks have been played, the program playback stops.

■ Playing back tracks in random order



1 Press ON SCREEN repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor ► (or ◀) repeatedly to move **RND.** in the on-screen bar, then press ENTER.

The RANDOM indicator lights up on the display and playback starts in random order.

To stop the random playback

Press ■.

The random playback is canceled.

- When all tracks have been played once, the random playback is also canceled.

Notes:


- The same track will not be played more than once during the random playback.
- During the random playback, you can skip back to the beginning of the current track by pressing ◀◀, but cannot skip back to the tracks that have been played.
- During the random playback, pressing ENTER with **RND.** selected in the on-screen bar cancels the random playback and continues playback in the normal order.

Repeat Playback

You can repeat playback of the current title or chapter (for DVD VIDEO), group or track (for DVD AUDIO), or track (for VCD/SVCD/CD).

You can also repeat playback of a desired portion.

Repeating a current title, chapter, or all tracks



For DVD VIDEO:
During playback

For VCD/SVCD:
During playback or while stopped without PBC

For DVD AUDIO/CD:
During playback or while stopped

1 Press **ON SCREEN** repeatedly until the on-screen bar with pull-down menu appears on the TV.


 


2 Press cursor **▶** (or **◀**) repeatedly to move  to  in the on-screen bar, then press **ENTER**.
The following pop-up window appears under the on-screen bar.



3 Press cursor **▼** (or **▲**) repeatedly to select the repeat mode, then press **ENTER**.

- Each time you press cursor **▼** (or **▲**), the repeat mode changes as follows:

For DVD VIDEO:

CHAPTER  TITLE  A-B  OFF 
(back to the beginning)

For DVD AUDIO/VCD/SVCD/CD:

TRACK  ALL/GROUP  A-B  OFF 
(back to the beginning)

- CHAPTER** : Repeats the current chapter (the REPEAT 1 indicator lights up on the display)
- TRACK** : Repeats the current track (the REPEAT 1 indicator lights up on the display)
- TITLE** : Repeats the current title (the REPEAT indicator lights up on the display)
- ALL/GROUP** : Repeats all the tracks on the disc, in the group, or of the program (the REPEAT indicator lights up on the display)
- A-B** : Repeats a desired portion (see the right column)
- OFF** : Select this to cancel the repeat mode

- You can directly change the repeat mode (except A-B) for the current chapter, title, track, or disc by pressing **REPEAT** on the remote control.



Notes:

- If you select "ALL" during random playback, the all tracks of the disc are played repeatedly in random order.
- "A-B" cannot be selected during the program and random playback or while a disc is not played back.

To turn off the on-screen bar

Press **ON SCREEN**.

To cancel the repeat playback

Select "OFF" in step **3**, then press **ENTER**.

Repeating a desired part

You can repeat playback of a desired portion by specifying the beginning (point A) and the ending (point B).



During playback

1 Press **ON SCREEN** repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor **▶** (or **◀**) repeatedly to move  to  in the on-screen bar, then press **ENTER**.
The following pop-up window appears under the on-screen bar.



3 Press cursor **▼** (or **▲**) repeatedly to select "A-B."

 
4 Press **ENTER** at the beginning of the portion you want to repeat (point A).

The following display appears in the on-screen bar.
The REPEAT A indicator also lights up on the display.



5 Press **ENTER** at the end of the portion you want to repeat (point B).

A-B repeat playback starts. The selected part of the disc (between point A and B) is played repeatedly.
During repeat A-B playback, the REPEAT A-B indicator lights up on the display.

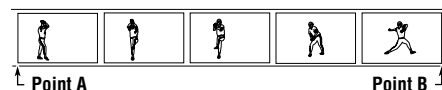

To turn off the on-screen bar

Press **ON SCREEN**.

To cancel the A-B repeat playback

Select "OFF" in step **3**, then press **ENTER**.

Note:

- While playing back DVD VIDEO, A-B repeat playback is possible only within the same title.

DVD Player Operations


Additional Information for DVD AUDIO

About indication on the front panel

The unit has various indications for DVD AUDIO.


When DVD AUDIO is loaded

The DVD AUDIO lamp lights up on the front panel.

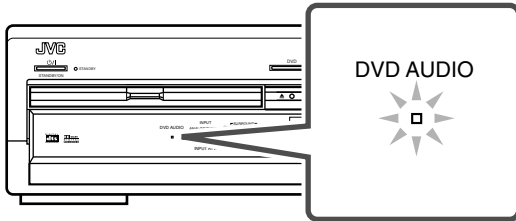

When playing back DVD AUDIO

The following indications appear on the display.

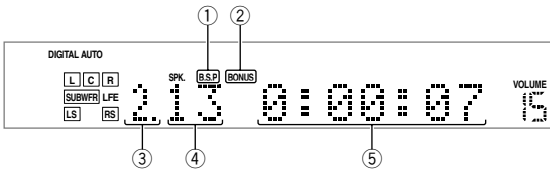

1 B.S.P (Browsable Still Picture) indicator

: Lights when you play back still pictures. See “Selecting a still picture” on page 48.

2 BONUS indicator

: Lights when the loaded DVD AUDIO has a bonus group. See “Playing back a bonus group” on page 48.

3 Group indication

: Shows the current group number. See “Selecting the group” on this page.

4 Track indication


: Shows the current track number.

5 Elapsed playing time

Activating Surround mode

When playing back the high-resolution multichannel sound, you can activate Surround mode manually.

- When Auto surround is set to “ON,” Surround mode is activated automatically for the multichannel sound.

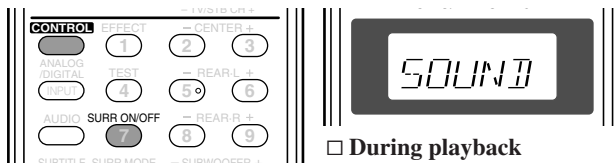

Press **CONTROL** repeatedly so that “**SOUND**” appears on the operation mode display, then press **SURR ON/OFF**.


- Each time you press SURR ON/OFF, Surround mode is activated or deactivated alternately.
- You can also use the SURROUND ON/OFF button on the front panel to activate or deactivate Surround mode.

Notes:

- When playing back DVD AUDIO, you cannot select the following Surround modes:
 - Pro Logic II,
 - DAP modes, and
 - All Channel Stereo.
- For the multichannel track which can be mixed down:
 - When “NONE” is selected as the speaker setting for the center or rear speakers, the current multichannel track is mixed down to the front speaker channels.
- For the multichannel track which cannot be mixed down:
 - When you try to deactivate Surround mode during playback, “MULTI CH” appears on the display and Surround mode still remains.
 - When you start playback with Surround mode deactivated, “LR ONLY” appears on the display. In this case, you cannot listen to the sounds other than left and right front channels.

Special Playback for DVD AUDIO

Selecting the group

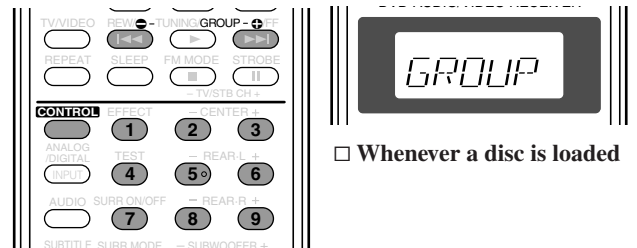

□ Whenever a disc is loaded

Press **CONTROL** repeatedly so that “**GROUP**” appears on the operation mode display, then press **GROUP** \oplus or \ominus to select the desired group.

- You can also select the group by pressing number buttons (1-9).


Note:

- When you select the bonus group, the key number entry indication appears (see page 48).

■ Selecting a still picture


Most DVD AUDIO include still pictures, which usually appear in turn automatically during playback according to the playback sequence.

You can change the picture (turn the page) manually when the current still picture has selectable pages.

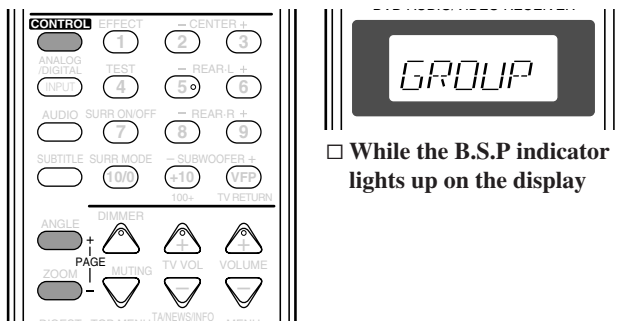

Press **CONTROL** repeatedly so that “GROUP” appears on the operation mode display, then press **PAGE +** or **-** to select the desired page.

Using the on-screen bar:

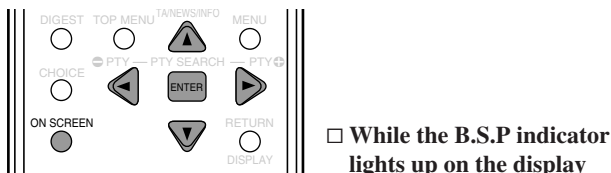

1 Press **ON SCREEN** repeatedly until the on-screen bar with pull-down menu appears on the TV.

2 Press cursor **▶** (or **◀**) repeatedly to move **PAGE** in the on-screen bar, then press **ENTER**. The following pop-up window appears under the on-screen bar.



3 Press cursor **▼** (or **▲**) repeatedly to select the desired page.


To turn off the on-screen bar
Press **ON SCREEN**.

■ Playing back a bonus group

Some DVD AUDIO have a special group called “bonus group” whose contents are not opened to the public. The bonus group is always assigned to the last group of a disc (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).

To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. A way of getting the key number depends on discs.

After getting the key number, you can play back the bonus group by the following procedure.

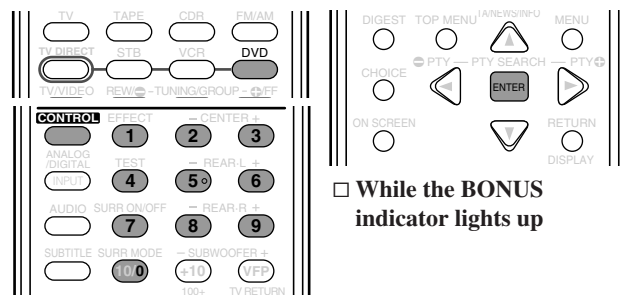

1 Press **CONTROL** repeatedly so that “GROUP” appears on the operation mode display, then press the number buttons to select a bonus group.

The key number entry indication appears as follows:

On the TV



On the display



2 Press **DVD** on the remote control to change the remote control operation mode to “DVD.”

3 Enter the key number using the number buttons (0-9), then press **ENTER**.

When you enter the correct key number, the unit starts playing back the bonus group and the BONUS indicator goes off.

- If you enter the wrong number, enter the number again.

To turn off the key number entry

Perform one of the following:

- Press **■**,
- Open the disc tray, or
- Turn off the unit.

Opening the disc tray or turning off the unit also erases the memory of the key number, while pressing **■** does not erase the memory.

Notes:

- If you specify a track in the bonus group for the program playback, the key number entry indication in step 1 appears for entering the key number.
- In the random playback mode, tracks in the bonus group are not played back.

MP3 Disc Playback

This unit can play back MP3 files on a CD-R or CD-RW. We call such a disc “MP3 disc” in this instruction.

- Before using the remote control, press DVD to change the remote control operation mode for the MP3 disc operations.
- Turn on your TV and select the correct input mode on the TV.

If “⊗” appears on the TV when you press a button, the disc cannot accept an operation you have tried to do.


What is MP3?

MP3 is an abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. MP3 is simply a file format with a data compression. By using MP3 format, one CD-R or CD-RW can contain about 10 times as many songs as a regular CD can.

Disc structure

On an MP3 disc, each song (material) is recorded as a file. Files are usually grouped into a folder. Folders can also include other folders, creating hierarchical folder layers.

This unit simplifies the hierarchical construction of a disc and manages files and folders by “tracks” and “groups.”

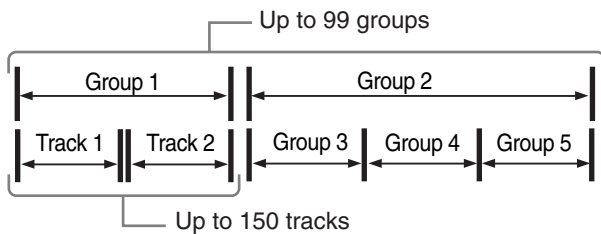

This unit can recognize up to 150 tracks per group and up to 99 groups per disc (up to 14,850 tracks in total). Since the unit ignores the tracks whose numbers are exceeding 150 and the groups whose numbers are exceeding 99, they cannot be played back.

- If there are any type of files other than MP3 files in a folder, those files are also counted in the total file number.

Notes:

- MP3 discs (either CD-R or CD-RW) require a longer readout time than normal discs. (It depends on the complexity of the folder/file configuration.)
- When making an MP3 disc, select ISO 9660 Level 1 or Level 2 as the disc format.
- This unit supports “multi-session” discs (up to 5 sessions).
- This unit cannot play “packet write” discs.
- This unit can play MP3 files only with the following file extensions: “.MP3,” “.Mp3,” “.mP3,” and “.mp3.”
- ID3* tags cannot be shown on the display.
 - * An MP3 file can contain file information called “ID3 Tag” where its album name, performer, track title, etc. are recorded. There are two versions—ID3v1 (ID3 Tag version 1) and ID3v2 (ID3 Tag version 2).
- It is recommended that you make each MP3 file at sampling rate of 44.1 kHz and at bit rate of 128 kbps. The unit cannot play back the files made at bit rate of under 64 kbps.
- If both MP3 files and JPEG files are recorded on a disc, set the MP3/JPEG setting in the PICTURE menu to “MP3.” (See page 56.)
- Some MP3 discs may not be played back because of their disc characteristics or recording conditions.


Notes:

- The following functions are not available to MP3 disc playback: Program playback, random playback, fast-forward/reverse playback, on-screen bar, and choice menus
- Some tracks on an MP3 disc are skipped and may not be played back normally.

Basic Operations

You can also use the buttons on the front panel if they have the similar names as those on the remote control.


- Before using the remote control, press DVD to change the remote control operation mode.

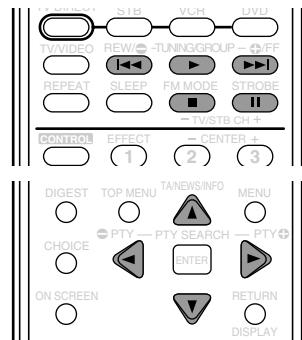

Starting playback

Load an MP3 disc, then press ►.

The unit starts playback. The MP3 CONTROL screen appears on the TV (see page 50).

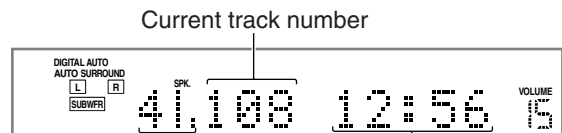

Current group number Elapsed playing time (minutes:seconds) of the current track during playback

When all tracks in a group have been played, the unit plays tracks in the next group.

Stopping playback temporarily

Press II.

To start playback again

Press ►.

Selecting groups or tracks

To skip groups forward

Press cursor ►.

To skip groups backward

Press cursor ◀.

To skip tracks forward

Press ►► or cursor ▼ as many times as required.

To skip to the beginning of the current track

Press ◀◀ once.

To skip tracks backward

Press ◀◀ or cursor ▲ as many times as required.


Stopping playback completely

Press ■.

Operations through the MP3 CONTROL Screen

You can search for and play the desired groups and tracks through the MP3 CONTROL screen shown on TV.

MP3 CONTROL screen

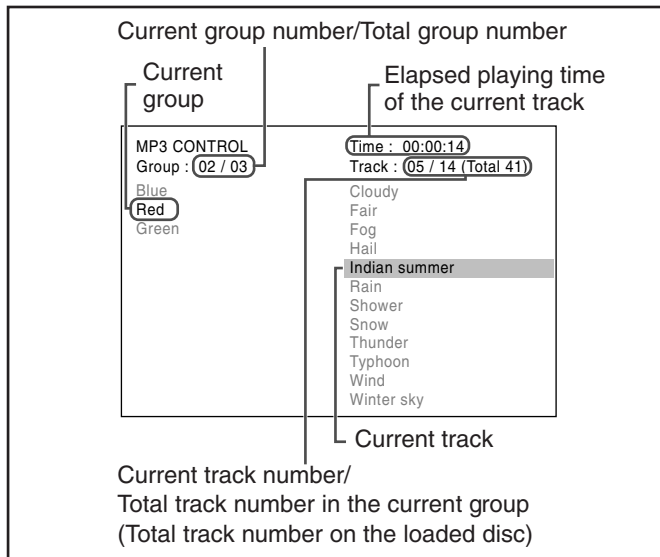


Notes:

- Some group and track names may not be displayed correctly because of their recording conditions.
- The order of groups and tracks on an MP3 disc may be displayed differently from the order displayed on your personal computer.
- Up to 12 groups and tracks are displayed on the TV at a time. Pressing cursor \blacktriangle / \blacktriangledown / \blacktriangleright / \blacktriangleleft repeatedly shows the hidden groups and tracks one by one.

Operations

- Before using the remote control, press DVD to change the remote control operation mode.

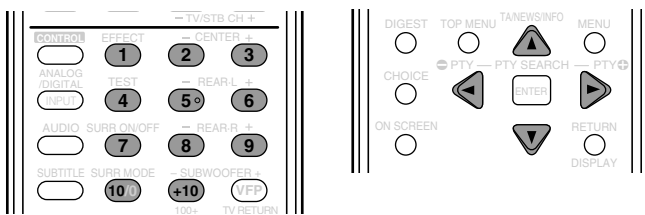

To select or skip groups during playback

To select the next groups (or skip groups forward)

Press cursor \blacktriangleright repeatedly.

To select the previous groups (or skip groups backward)

Press cursor \blacktriangleleft repeatedly.

To select or skip tracks during playback

To select the next tracks (or skip tracks forward)

Press cursor \blacktriangledown repeatedly.

To select the previous tracks (or skip tracks backward)

Press cursor \blacktriangle repeatedly.

To start playback by specifying a track number

Press the number buttons (1 – 10, +10) to enter the track number.

Ex. : To select the track number 3, press 3.

To select the track number 14, press +10 then 4.


To select the track number 24, press +10, +10, then 4.

To select the track number 110, press +10 ten times, then 10.

The entered number appears in the track number indication, then playback starts from the specified track.

Repeat Playback

You can repeat playback of the current track, group, or all the tracks on the loaded disc.

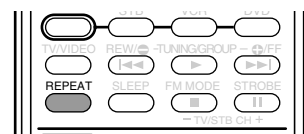

During playback or while stopped

From the remote control ONLY:

Press REPEAT.

The repeat indication appears on the MP3 CONTROL screen and the REPEAT indicator lights up on the display.

- Each time you press the button, the repeat mode changes as follows:

REPEAT TRACK \rightleftarrows REPEAT GROUP \rightleftarrows REPEAT ALL \rightleftarrows the indication goes off \rightleftarrows (back to the beginning)

REPEAT TRACK : Repeats the current track

REPEAT GROUP : Repeats the current group

REPEAT ALL : Repeats all the tracks on the disc

To cancel repeat mode

Press REPEAT repeatedly until the repeat indication goes off from the MP3 CONTROL screen (the REPEAT indicator also goes off from the display).

JPEG Disc Playback

This unit can play back JPEG files on a CD-R or CD-RW. We call such a disc “JPEG disc” in this instruction.

- Before using the remote control, press DVD to change the remote control operation mode for the JPEG disc operations.
- Turn on your TV and select the correct input mode on the TV.

If “” appears on the TV when you press a button, the disc cannot accept an operation you have tried to do.


What is JPEG?

A still-picture data compression system proposed by the Joint Photographic Expert Group, which features little distortion in image quality in spite of its high compression ratio.

Disc structure

On a JPEG disc, each still picture (material) is recorded as a file. Files are usually grouped into a folder. Folders can also include other folders, creating hierarchical folder layers.

This unit simplifies the hierarchical construction of a disc and manages folders by “groups.”

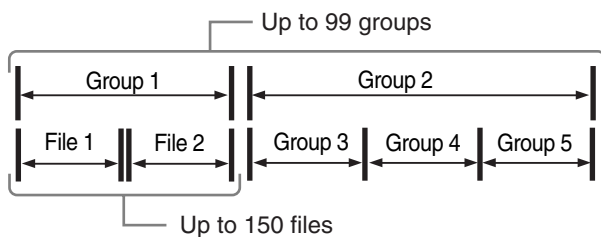

This unit can recognize up to 150 files per group and up to 99 groups per disc (up to 14,850 files in total). Since the unit ignores the files whose numbers are exceeding 150 and the groups whose numbers are exceeding 99, they cannot be played back.

- If there are any type files other than JPEG files in a folder, those files are also counted in the total file number.

Notes:


- JPEG discs (either CD-R or CD-RW) require a longer readout time than normal discs. (It depends on the complexity of the folder/file configuration.)
- When making a JPEG disc, select ISO 9660 Level 1 or Level 2 as the disc format.
- This unit supports “multi-session” discs (up to 5 sessions).
- This unit cannot play “packet write” discs.
- The unit can play JPEG files only with the following file extensions: “.jpg”, “.jpeg”, “.JPG”, “.JPEG” and any uppercase and lowercase combinations (such as “.Jpg”).
- It is recommended you to record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a longer time to be shown.)
- If both JPEG files and MP3 files are recorded on a disc, set the MP3/JPEG setting in the PICTURE menu to “JPEG.” (See page 56.)
- This system can play only baseline JPEG files*. Progressive JPEG files* or lossless JPEG files* cannot be played.
 - * – Baseline JPEG format: Used for digital cameras, web, etc.
 - Progressive JPEG format: Used for web.
 - Lossless JPEG format: An old type and rarely used now.
- Some JPEG discs may not be played back because of their disc characteristics or recording conditions.

Slide-show Playback

You can play back the still pictures one after another automatically—slide-show playback.

You can also use the buttons on the front panel if they have the similar names as those on the remote control.

- Before using the remote control, press DVD to change the remote control operation mode.

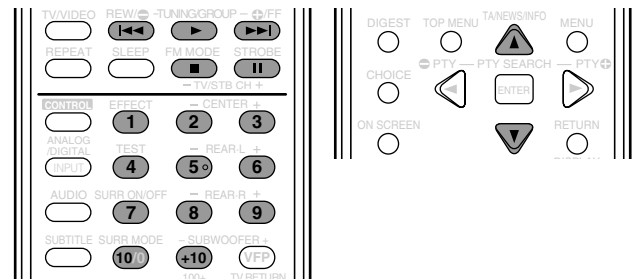

Starting slide-show playback

Load a JPEG disc, then press **▶**.

The slide-show playback starts. Each file (still picture) is shown on the TV for about 3 seconds, then changed to the next file one after another.

When all files in a group have been played back, the unit plays back files in the next group.

Stopping slide-show playback temporarily

Press **■**.

You can zoom in on the still picture (see page 52).

To start slide-show playback again

Press **▶**.

To start the slide-show playback by specifying a file number

Press the number buttons (1 – 10, +10) to enter the file number.

Ex. : To select the file number 3, press 3.

To select the file number 14, press +10 then 4.

To select the file number 24, press +10, +10, then 4.

To select the file number 110, press +10 ten times, then 10.

The selected file number appears in the file number indication, then the slide-show playback starts from the file you have specified.

Selecting files or groups

To skip pictures (files) forward

Press **▶▶** or cursor **▼** as many times as required.

To skip pictures (files) backward

Press **◀◀** or cursor **▲** as many times as required.

Stopping slide-show playback completely

Press **■**.

The JPEG CONTROL screen appears on the TV.

- For how to operate through the JPEG CONTROL screen, see “Operations through the JPEG CONTROL Screen” on page 52.


Notes:

- The following functions are not available to the slide-show playback: program playback, random playback, repeat playback, fast-forward/reverse playback, on-screen bar, and choice menus.
- If a black screen continuously appears in the slide-show playback: the file currently played may be non-baseline JPEG file. In this case, select a playable file (a baseline JPEG file) again (e.g., pressing ■ or MENU to open the JPEG CONTROL screen, etc.). Note that it may take a long time to select another file.
- Some files on a JPEG disc may be distorted during playback.

Operations through the JPEG CONTROL Screen


You can search for and show the desired groups and files through the JPEG CONTROL screen.

■ JPEG CONTROL screen

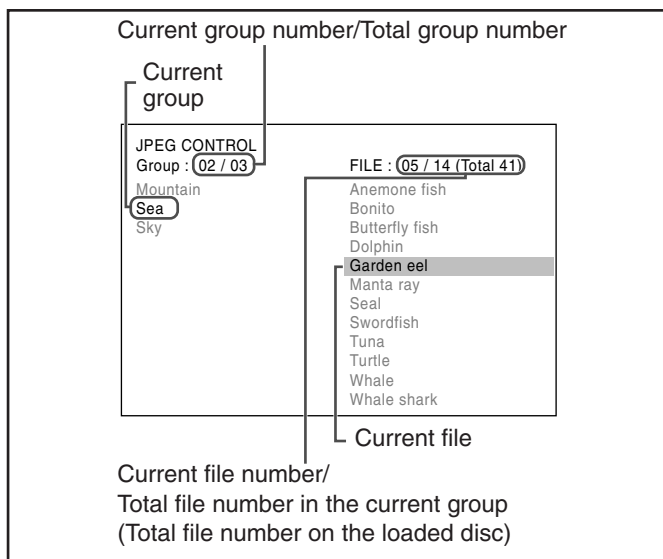

Notes:

- You can check the group number and the file number on the display window.
- Some group and file names may not be displayed correctly because of the recording condition.
- The order of groups and files on a JPEG disc may be displayed differently from the order displayed on your personal computer.
- Up to 12 groups and files are displayed on the TV at a time. Pressing cursor ▲/▼/▶/◀ repeatedly shows the hidden groups and files one by one.
- Before using the remote control, press DVD to change the remote control operation mode.

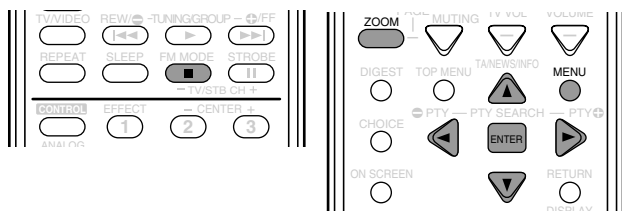

■ To select a group

Press cursor ▶ (or ◀) repeatedly.

■ To select a file

Press cursor ▼ (or ▲) repeatedly.

■ To show the selected file

Press ENTER.

- When the still picture has been shown on the TV thoroughly, you can zoom in or out the still picture (see pages 43 and 44).
- If you press ▶, the slide-show playback starts from the selected file.

■ Zooming in on the still picture

Press ZOOM.

To move the zoomed-in position

Press cursor ▲/▼/▶/◀.

To return to normal playback

Press ENTER.


See also pages 43 and 44.

■ To return to the JPEG CONTROL screen

Press MENU or ■.

Repeat Playback

You can repeat playback of the current group or all the files on the loaded disc.

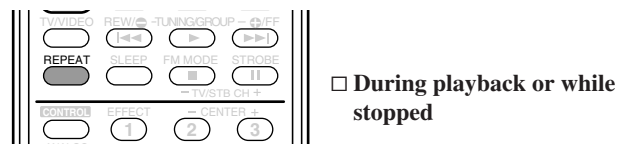

From the remote control ONLY:

Press REPEAT.

The repeat indication appears on the JPEG CONTROL screen and the REPEAT indicator lights up on the display.

- Each time you press the button, the repeat mode changes as follows:

REPEAT GROUP ⇄ REPEAT ALL ⇄
the indication goes off ⇄ (back to the beginning)

REPEAT GROUP : Repeats the current group

REPEAT ALL : Repeats all the files on the disc

To cancel repeat mode

Press REPEAT repeatedly until the repeat indication goes off from the JPEG CONTROL screen (the REPEAT indicator also goes off from the display).

Choice Menu Operations

You can adjust the initial settings through the choice menu on the TV.

Before operating the choice menu, select the source you want to adjust by pressing source selecting button.


- When selecting FM or AM as the source, you cannot use the choice menu.
- When selecting the source other than DVD, FM, and AM, you can use the AUDIO and SPK. SETTING menus. The audio adjustments are memorized for each source.
- When activating TV Direct, you can use the LANGUAGE, PICTURE, and OTHERS menus for the build-in DVD player.

Notes:

- You need to turn on your TV and select the correct input mode on the TV.
- You can only use the remote control for the choice menu operations.
- You can change the language used in the choice menu. See page 55.
- You cannot show the choice menu when an MP3 disc or a JPEG disc is loaded.

Operation Buttons

To do the operations in this choice menu, use the buttons on the remote control.

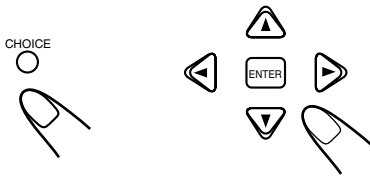

From the remote control ONLY


Button	To do
CHOICE	Display the choice menu on the TV. Each time you press the button, the choice menu is turned on and off alternately.
▲/▼	Select an item.
▶/◀	Adjust the selected item on the choice menu.
ENTER	Move to the submenu of the selected item or decide the setting.

Configuration of Choice Menu

The choice menu has the following menus:


LANGUAGE menu (see page 55)

You can select the initial language for the disc menu, audio, and subtitle. You can also select the language used on the TV screen while operating this unit.

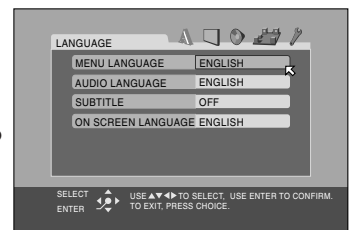


PICTURE menu (see page 55)

You can select the desired options concerning a picture or monitor screen.

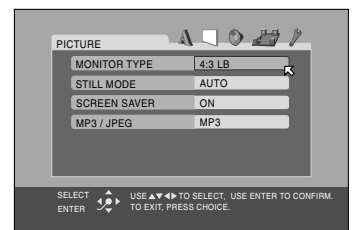


AUDIO menu (see page 56)

You can adjust the sound settings of this unit through this menu.

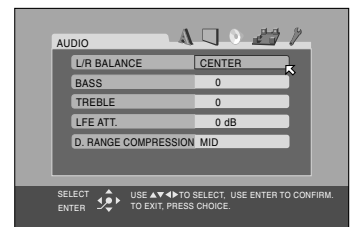


SPK. SETTING menu (see page 57)

You can adjust the speaker settings. You can also adjust the output level of the speakers.

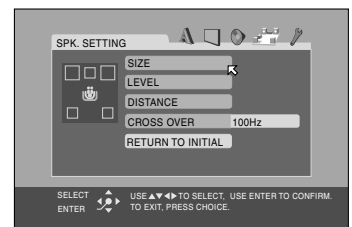

OTHERS menu (see page 58)

You can change the settings for some of the functions. To set Parental Lock, use this menu.

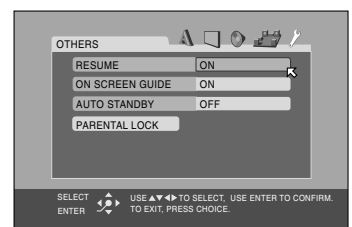


Operating Procedure

Ex. : When setting on-screen language.

Before operating the choice menu, press DVD to change the source to DVD.


1 Press CHOICE.

The LANGUAGE menu appears on the TV.

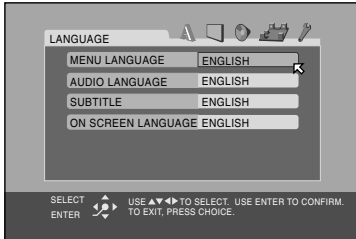


- Each time you press cursor ► (or ◀), the menu changes.

2 Press cursor ▼ (or ▲) repeatedly to move to "ON SCREEN LANGUAGE."

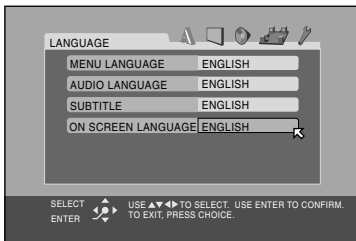


3 Press ENTER.

The pop-up window appears, listing the selectable options.

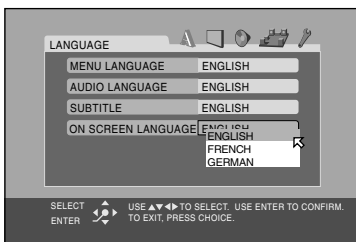


4 Press cursor ▼ (or ▲) repeatedly to select the desired option.

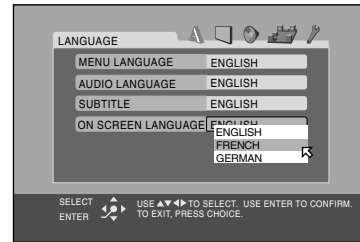

Ex. : When "FRENCH" is selected.

5 Press ENTER to finish the setting.

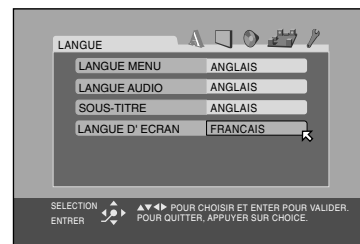

To set other items on the same choice menu

Repeat steps 2 to 5.

To move to another choice menu

Press cursor ► (or ◀) repeatedly to select a choice menu you want to set up.

To return to the normal screen


Press CHOICE.

Note:

- Some items in the choice menu consist of submenus for setting up various options. Pressing ENTER makes the submenus for the selected item appear on the TV. You can set the items using cursor ▲/▼ and ENTER (as explained in steps 4 and 5 above).

Choice Menu Operations

■ LANGUAGE menu

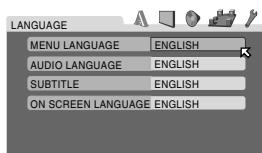

You can select “MENU LANGUAGE,” “AUDIO LANGUAGE,” and “SUBTITLE” only before playback.

● MENU LANGUAGE

Some discs have multiple languages.

Select one of the languages or language codes from AA to ZU (see “Language code list” on page 56) as the menu language.

● AUDIO LANGUAGE

Some discs have multiple audio languages.

Select one of the languages or language codes from AA to ZU (see “Language code list” on page 56).

● SUBTITLE

Some discs have multiple subtitle languages.

Select one of the languages or language codes from AA to ZU (see “Language code list” on page 56) or “OFF (no subtitle).”


Note:

- When the language you have selected for MENU LANGUAGE, AUDIO LANGUAGE, or SUBTITLE is not recorded on a disc, the original language is used as the initial language automatically.

● ON SCREEN LANGUAGE

Select one of the languages shown on the TV.

■ PICTURE menu

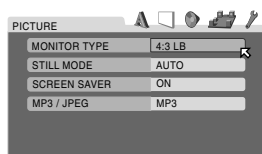

● MONITOR TYPE

You can select the monitor type to match your TV when you play DVD VIDEO recorded in the picture’s width/height ratio of 16:9.

Select one of the following settings:

16:9 NORMAL (Wide television conversion) :

Select this when the aspect ratio of your TV is fixed to 16:9 (wide TV). The unit automatically adjusts the screen width of the output signal correctly when playing back a picture whose aspect ratio is 4:3.

16:9 AUTO (Wide television conversion) :

Select this when the aspect ratio of your TV is 16:9 (wide TV).

4:3 LB (Letter Box conversion) :

Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

4:3 PS (Pan Scan conversion) :

 
Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



Ex.: 4:3 LB

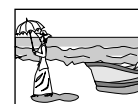

Ex.: 4:3 PS

- Even if “4:3 PS” is selected, the screen size may become “4:3 LB” with some DVD VIDEO. This depends on how they are recorded.
- When you select “16:9 NORMAL” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

● STILL MODE

You can change “STILL MODE” to get better pictures when the playback picture is unclear or noisy, or the loose oblique lines appear on the TV screen.

Select one of the following settings:

AUTO : Normally select this. The unit detects the source type of picture (video source or film source) on the current disc, and selects the appropriate mode automatically.

FIELD : Select this when playing back a video source disc.

FRAME : Select this when playing back a film source disc.

● SCREEN SAVER

You can activate or deactivate the screen saver function.

Select one of the following settings:

ON : The picture on the TV becomes dark when no operation is done for 5 minutes.

OFF : The screen saver function does not work.


● **MP3/JPEG**

If both MP3 files and JPEG files are recorded on a disc, you can select which files to play.

Select one of the following settings:

-
- MP3** : Select this for playing MP3 files.
-
- JPEG** : Select this for playing JPEG files.
-

■ **AUDIO menu**

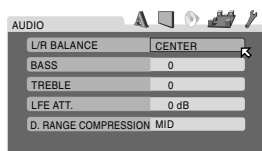

You can also adjust the following items using the front panel or remote control (see pages 23 to 28).

● **L/R BALANCE**

Adjust the output balance between the left front speaker and right front speaker within the range of “R-21” to “CENTER” or “CENTER” to “L-21.”

● **BASS**

Adjust the bass tone level from the front speakers within the range of -10 to +10 in 2 step intervals.

● **TREBLE**

Adjust the treble tone level from the front speakers within the range of -10 to +10 in 2 step intervals.

● **LFE ATT.**

The Low Frequency Effect Attenuater diminishes the distortion of the bass sound from the subwoofer while playing back a disc with Dolby Digital or DTS Digital Surround.

Select one of the following settings:

-
- 10 dB** : Select this to diminish the distortion of the bass sound from the subwoofer.
-
- 0 dB** : Select this to cancel this function.
-

● **D. RANGE COMPRESSION**

You can enjoy a powerful sound at night even at a low volume level when listening to the sound with Dolby Digital.

Select one of the following settings:


-
- MAX** : Select this when you want to apply the compression effect fully (useful at midnight).
-
- MID** : Select this when you want to reduce the dynamic range a little.
-
- OFF** : Select this when you want to enjoy surround with its full dynamic range (no effect applied).
-

Language code list

AA	Afar	FA	Persian	KM	Cambodian	OM	(Afan) Oromo	SU	Sundanese
AB	Abkhazian	FI	Finnish	KN	Kannada	OR	Oriya	SV	Swedish
AF	Afrikaans	FJ	Fiji	KO	Korean (KOR)	PA	Panjabi	SW	Swahili
AM	Ameharic	FO	Faroese	KS	Kashmiri	PL	Polish	TA	Tamil
AR	Arabic	FY	Frisian	KU	Kurdish	PS	Pashto, Pushto	TE	Telugu
AS	Assamese	GA	Irish	KY	Kirghiz	PT	Portuguese	TG	Tajik
AY	Aymara	GD	Scots Gaelic	LA	Latin	QU	Quechua	TH	Thai
AZ	Azerbaijani	GL	Galician	LN	Lingala	RM	Rhaeto-Romance	TI	Tigrinya
BA	Bashkir	GN	Guarani	LO	Laothian	RN	Kirundi	TK	Turkmen
BE	Byelorussian	GU	Gujarati	LT	Lithuanian	RO	Rumanian	TL	Tagalog
BG	Bulgarian	HA	Hausa	LV	Latvian, Lettish	RU	Russian	TN	Setswana
BH	Bihari	HI	Hindi	MG	Malagasy	RW	Kinyarwanda	TO	Tonga
BI	Bislama	HR	Croatian	MI	Maori	SA	Sanskrit	TR	Turkish
BN	Bengali, Bangla	HU	Hungarian	MK	Macedonian	SD	Sindhi	TS	Tsonga
BO	Tibetan	HY	Armenian	ML	Malayalam	SG	Sangho	TT	Tatar
BR	Breton	IA	Interlingua	MN	Mongolian	SH	Serbo-Croatian	TW	Twi
CA	Catalan	IE	Interlingue	MO	Moldavian	SI	Singhalese	UK	Ukrainian
CO	Corsican	IK	Inupiak	MR	Marathi	SK	Slovak	UR	Urdu
CS	Czech	IN	Indonesian	MS	Malay (MAY)	SL	Slovenian	UZ	Uzbek
CY	Welsh	IS	Icelandic	MT	Maltese	SM	Samoan	VI	Vietnamese
DA	Danish	IW	Hebrew	MY	Burmese	SN	Shona	VO	Volapuk
DZ	Bhutani	JI	Yiddish	NA	Nauru	SO	Somali	WO	Wolof
EL	Greek	JW	Javanese	NE	Nepali	SQ	Albanian	XH	Xhosa
EO	Esperanto	KA	Georgian	NL	Dutch	SR	Serbian	YO	Yoruba
ET	Estonian	KK	Kazakh	NO	Norwegian	SS	Siswati	ZU	Zulu
EU	Basque	KL	Greenlandic	OC	Occitan	ST	Sesotho		


Choice Menu Operations

■ SPK. SETTING menu

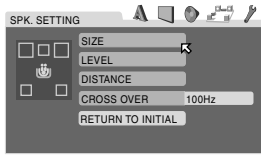

● SIZE

Select this to enter the SIZE submenu.

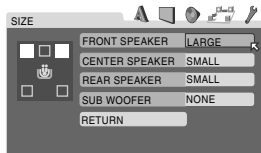

FRONT SPEAKER, CENTER SPEAKER, and REAR SPEAKER

Select one of the following settings for each speaker:

LARGE (LRG) : Select this when the speaker size is relatively large.

SMALL (SML) : Select this when the speaker size is relatively small.

NONE (NO) : Select this when you have not connected a speaker. (Not selectable for the front speakers)

SUBWOOFER

Select one of the following settings:

USE (YES) : Select this when a subwoofer is connected.


NONE (NO) : Select this when no subwoofer is used.

RETURN

Select this to return to SPK. SETTING menu.

Notes:

- Keep the following comment in mind as reference when adjusting speaker settings.
 - If the size of the cone speaker unit built in your speaker is greater than 12 cm, select “LARGE,” and if it is smaller than 12 cm, select “SMALL.”
- If you have selected “SMALL” for the front speakers, you cannot select “LARGE” for the center and rear speakers.
- If you have selected “NONE” for subwoofer, you cannot select “SMALL” for the front speakers.
- You can take advantage of the speaker diagrams on the left part of the SPK. SETTING menu to set the speaker.
 - The speaker diagram for the selected speaker is highlighted.
 - The size of the speaker diagram is changed according to your setting.

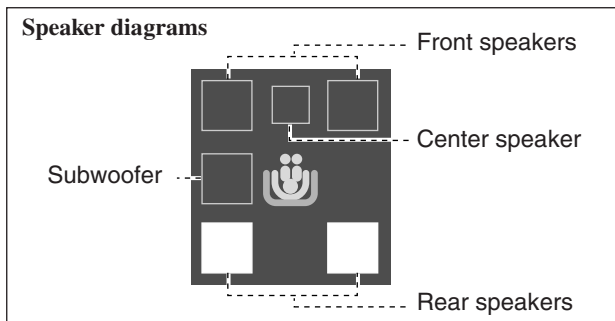

● LEVEL

Select this to enter the LEVEL submenu.



CENTER SPEAKER, LEFT REAR SPEAKER, RIGHT REAR SPEAKER, and SUB WOOFER

Adjust the speaker output level within the range of –10 dB to +10 dB for each speaker in 1 step interval.

TEST TONE

Select this to start or stop test tone.

RETURN


Select this to return to SPK. SETTING menu.

Notes:

- When “NONE” is selected for the center speaker, rear speakers and/or subwoofer on the SIZE menu, “–” appears instead of the current setting. In this case, you cannot adjust the output level of those speakers.
- You can adjust the output level for center speaker and/or rear speakers only when one of proper Surround modes are activated (see page 31).
- When “NONE” is selected for the center and/or rear speakers, the test tone does not come out of those speakers.

● DISTANCE

Select this to enter the DISTANCE submenu.

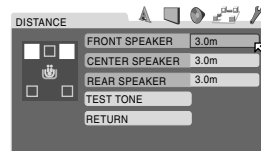

FRONT SPEAKER, CENTER SPEAKER, and REAR SPEAKER

For each speaker, set the distance from the listening point within the range of 0.3 m to 9.0 m, in 0.3 m interval.

TEST TONE

Select this to start or stop test tone.

RETURN

Select this to return to SPK. SETTING menu.

Notes:

- When “NONE” is selected for the center speaker and rear speakers on the SIZE menu, “–” appears instead of the current setting. In this case, you cannot adjust the speaker distance of those speakers.
- When “NONE” is selected for the center speaker and/or rear speakers on the SIZE menu, the test tone does not come out of those speakers.

● CROSS OVER

When you use a small speaker in any position, this unit automatically reallocates the bass sound elements assigned to the small speaker to the large speakers.

To use this function properly, set this crossover frequency level according to the size of the smallest speaker connected.

- If you have selected “LRG (large)” or “LARGE” for all speakers, this function will not take effect.

Select one of the following settings:

120Hz : Select this frequency when the cone speaker unit built in the speaker is about 8 cm.


100Hz : Select this frequency when the cone speaker unit built in the speaker is about 10 cm.

80Hz : Select this frequency when the cone speaker unit built in the speaker is about 12 cm.

● RETURN TO INITIAL

Select this to reset all speaker settings to the initial settings.

■ OTHERS menu

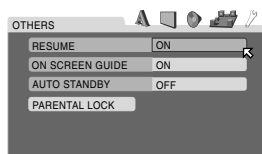

● RESUME

You can activate or deactivate the resume play function of the built-in DVD player.







Select one of the following settings:

ON : Select this to activate this function.

OFF : Select this to deactivate it.

● ON SCREEN GUIDE

You can activate or deactivate the following on-screen guide icons:

- For multi-view angles : 
- For plural subtitles : 
- For plural audio languages : 
- For playback status :  ,  ,  ,  , etc.

The on-screen guide icons appear on the TV at the beginning of the playback with this function turned on.

When recording the picture with VCR, set “OFF” to avoid recording the indications above on your video tape.

- The choice menu and on-screen bar can be recorded even though this function is set to “OFF.”

Select one of the following settings:

ON : Select this to activate this function.

OFF : Select this to deactivate it.

- Subtitles (see page 39) and the information for zooming in (see pages 43 and 44) appear on the display even though this setting is “OFF.”

● AUTO STANDBY

When the playback of the disc on the built-in DVD player ends and no operation is done for more than the selected time, the unit is turned off automatically.

- This function takes effect only when DVD is selected as the source.

Select one of the following settings:

60 : Select this to turn off the unit if no operation is done within 60 minutes.

30 : Select this to turn off the unit if no operation is done within 30 minutes.

OFF : Select this to deactivate it.

- If Sleep Timer (see page 12) and Auto Standby are used at a time, one with the early shut-off time will turn off the unit.

● PARENTAL LOCK

You can restrict playback of DVD VIDEO containing violent scenes and those not suitable for your family members.

- You can select “PARENTAL LOCK” only before playback.

Select this to enter the PARENTAL LOCK submenu.
(See pages 59 and 60.)

Choice Menu Operations

Restricting Playback by Parental Lock

You can restrict playback of DVD VIDEO containing violent scenes and those not suitable for your family members. Nobody can play such a disc unless this function is canceled.


- This setting takes effect only for the DVD VIDEO containing the Parental Lock level information—Level 1 (most restrictive) to Level 8 (least restrictive).
- You can set the Parental Lock only while playback is stopped.

■ Setting Parental Lock

1 Press **CHOICE**, then press cursor **▶** (or **◀**) to display the **OTHERS** menu.


2 Press cursor **▼** (or **▲**) repeatedly to move **⏏** to “**PARENTAL LOCK**,” then press **ENTER**.

The **PARENTAL LOCK** submenu appears on the TV.

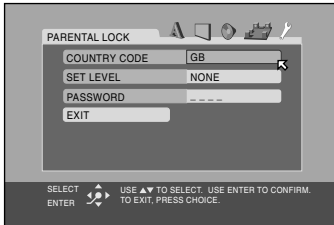

3 Press cursor **▼** (or **▲**) repeatedly to move **⏏** to “**COUNTRY CODE**,” then press **ENTER**.

The submenu for setting the country code appears.

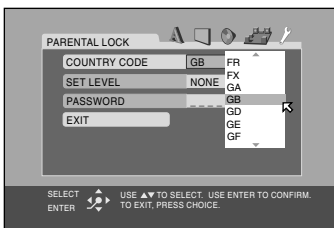


4 Press cursor **▼** (or **▲**) repeatedly to select the country code, then press **ENTER**.

See “Country/Area codes list for Parental Lock” on page 61.

⏏ moves to “**SET LEVEL**.”

5 Press **ENTER**.


The pop-up window for setting level appears.

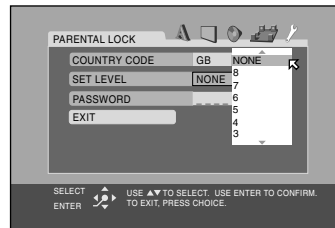

6 Press cursor **▼** (or **▲**) repeatedly to select the level of restriction, then press **ENTER**.

⏏ moves to “**PASSWORD**.”

- The smaller the value of level is, the more restrictive the Parental Lock level is.
- Select “**NONE**” to cancel this function.

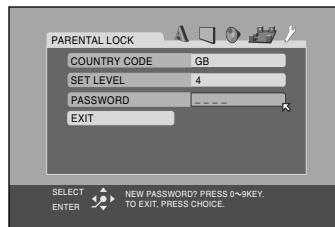

7 Press the number buttons (**0–9**) to enter a four digit number as your password, then press **ENTER**.

⏏ moves to “**EXIT**.”

8 Press **ENTER**.

OTHERS menu resumes.

To return to the normal screen

Press **CHOICE**.

Note:

- Remember your password or make a note of it. You need to enter your password to change the setting or release the lock. To change the setting, see page 60.


■ Changing the setting of Parental Lock

1 Press **CHOICE**, then press cursor **▶** (or **◀**) to display the **OTHERS** menu.

2 Press cursor **▼** (or **▲**) repeatedly to move **↔** to “**PARENTAL LOCK**,” then press **ENTER**.

The **PARENTAL LOCK** submenu appears on the TV.

- You can only move **↔** to “**PASSWORD**” or to “**EXIT**” before you enter your password.

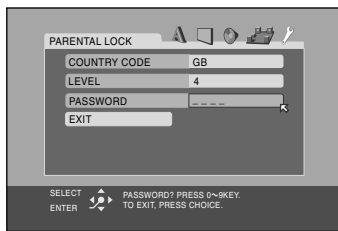

3 Press the number buttons (0–9) to enter your password, then press **ENTER**.

- If you enter a wrong password, “**WRONG! RETRY ... PRESS 0~9KEY**” appears on the **PARENTAL LOCK** submenu. You cannot go to next steps before you enter the correct password.

4 Press cursor **▼** (or **▲**) repeatedly to move **↔** to the item you want to change, then press **ENTER**.

5 Press cursor **▼** (or **▲**) repeatedly to change the setting, then press **ENTER**.

6 Press the number buttons (0–9) to enter your password, then press **ENTER**.


The new setting is stored.

Notes:

- You cannot set the Parental Lock before you set your password.
- If you exit from the **PARENTAL LOCK** submenu before setting your password in step **6**, the new country code and parental level will not become effective, and the old country code and parental level remain effective.
- When you enter wrong passwords more than three times, **↔** moves to “**EXIT**” automatically and cursor **▼** (or **▲**) does not work. Press **ENTER** to exit from the **PARENTAL LOCK** submenu, then start from step **1** again.
- If you forget your password, enter “8888.”

■ Releasing Parental Lock temporarily

When you set a strict parental level, some discs may not be played back at all. When you load such a disc and try to play it, the following display appears on the TV. You can release Parental Lock temporarily.

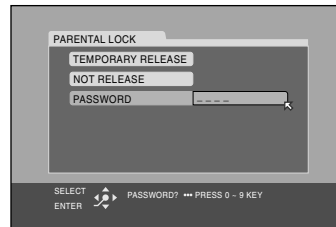

1 Press cursor **▼** (or **▲**) repeatedly to move **↔** to “**TEMPORARY RELEASE**,” then press **ENTER**. **↔** moves to “**PASSWORD**.”

- If you do not want to release Parental Lock temporarily, select “**NOT RELEASE**” by pressing cursor **▼** (or **▲**), then press **ENTER**. To eject the disc, press **▲**.

2 Press number buttons (0–9) to enter your password, then press **ENTER**.

Playback starts.

- If you enter a wrong password, “**WRONG! RETRY ... PRESS 0~9KEY**” appears on the **PARENTAL LOCK** submenu. You cannot play the disc before you enter the correct password.

Note:

- When you enter wrong passwords more than three times, **↔** moves to “**NOT RELEASE**” automatically and cursor **▼** (or **▲**) does not work. Press **▲** to remove the disc.

Choice Menu Operations

Country/Area codes list for Parental Lock

AD	Andorra	ER	Eritrea	LA	Lao People's Democratic Republic	RW	Rwanda
AE	United Arab Emirates	ES	Spain			SA	Saudi Arabia
AF	Afghanistan	ET	Ethiopia	LB	Lebanon	SB	Solomon Islands
AG	Antigua and Barbuda	FI	Finland	LC	Saint Lucia	SC	Seychelles
AI	Anguilla	FJ	Fiji	LI	Liechtenstein	SD	Sudan
AL	Albania	FK	Falkland Islands (Malvinas)	LK	Sri Lanka	SE	Sweden
AM	Armenia	FM	Micronesia (Federated States of)	LR	Liberia	SG	Singapore
AN	Netherlands Antilles			LS	Lesotho	SH	Saint Helena
AO	Angola	FO	Faroe Islands	LT	Lithuania	SI	Slovenia
AQ	Antarctica	FR	France	LU	Luxembourg	SJ	Svalbard and Jan Mayen
AR	Argentina	FX	France, Metropolitan	LV	Latvia	SK	Slovakia
AS	American Samoa	GA	Gabon	LY	Libyan Arab Jamahiriya	SL	Sierra Leone
AT	Austria	GB	United Kingdom	MA	Morocco	SM	San Marino
AU	Australia	GD	Grenada	MC	Monaco	SN	Senegal
AW	Aruba	GE	Georgia	MD	Moldova, Republic of	SO	Somalia
AZ	Azerbaijan	GF	French Guiana	MG	Madagascar	SR	Suriname
BA	Bosnia and Herzegovina	GH	Ghana	MH	Marshall Islands	ST	Sao Tome and Principe
BB	Barbados	GI	Gibraltar	ML	Mali	SV	El Salvador
BD	Bangladesh	GL	Greenland	MM	Myanmar	SY	Syrian Arab Republic
BE	Belgium	GM	Gambia	MN	Mongolia	SZ	Swaziland
BF	Burkina Faso	GN	Guinea	MO	Macau	TC	Turks and Caicos Islands
BG	Bulgaria	GP	Guadeloupe	MP	Northern Mariana Islands	TD	Chad
BH	Bahrain	GQ	Equatorial Guinea	MQ	Martinique	TF	French Southern Territories
BI	Burundi	GR	Greece	MR	Mauritania	TG	Togo
BJ	Benin	GS	South Georgia and the South Sandwich Islands	MS	Montserrat	TH	Thailand Code Language
BM	Bermuda			MT	Malta	TJ	Tajikistan
BN	Brunei Darussalam	GT	Guatemala	MU	Mauritius	TK	Tokelau
BO	Bolivia	GU	Guam	MV	Maldives	TM	Turkmenistan
BR	Brazil	GW	Guinea-Bissau	MW	Malawi	TN	Tunisia
BS	Bahamas	GY	Guyana	MX	Mexico	TO	Tonga
BT	Bhutan	HK	Hong Kong	MY	Malaysia	TP	East Timor
BV	Bouvet Island	HM	Heard Island and McDonald Islands	MZ	Mozambique	TR	Turkey
BW	Botswana			NA	Namibia	TT	Trinidad and Tobago
BY	Belarus	HN	Honduras	NC	New Caledonia	TV	Tuvalu
BZ	Belize	HR	Croatia	NE	Niger	TW	Taiwan
CA	Canada	HT	Haiti	NF	Norfolk Island	TZ	Tanzania, United Republic of
CC	Cocos (Keeling) Islands	HU	Hungary	NG	Nigeria		
CF	Central African Republic	ID	Indonesia	NI	Nicaragua	UA	Ukraine
CG	Congo	IE	Ireland	NL	Netherlands	UG	Uganda
CH	Switzerland	IL	Israel	NO	Norway	UM	United States Minor Outlying Islands
CI	Côte d'Ivoire	IN	India	NP	Nepal		
CK	Cook Islands	IO	British Indian Ocean Territory	NR	Nauru	US	United States
CL	Chile			NU	Niue	UY	Uruguay
CM	Cameroon	IQ	Iraq	NZ	New Zealand	UZ	Uzbekistan
CN	China	IR	Iran (Islamic Republic of)	OM	Oman	VA	Vatican City State (Holy See)
CO	Colombia	IS	Iceland	PA	Panama		
CR	Costa Rica	IT	Italy	PE	Peru	VC	Saint Vincent and the Grenadines
CU	Cuba	JM	Jamaica	PF	French Polynesia		
CV	Cape Verde	JO	Jordan	PG	Papua New Guinea	VE	Venezuela
CX	Christmas Island	JP	Japan	PH	Philippines	VG	Virgin Islands (British)
CY	Cyprus	KE	Kenya	PK	Pakistan	VI	Virgin Islands (U.S.)
CZ	Czech Republic	KG	Kyrgyzstan	PL	Poland	VN	Viet Nam
DE	Germany	KH	Cambodia	PM	Saint Pierre and Miquelon	VU	Vanuatu
DJ	Djibouti	KI	Kiribati	PN	Pitcairn	WF	Wallis and Futuna Islands
DK	Denmark	KM	Comoros	PR	Puerto Rico	WS	Samoa
DM	Dominica	KN	Saint Kitts and Nevis	PT	Portugal	YE	Yemen
DO	Dominican Republic	KP	Korea, Democratic People's Republic of	PW	Palau	YT	Mayotte
DZ	Algeria			PY	Paraguay	YU	Yugoslavia
EC	Ecuador	KR	Korea, Republic of	QA	Qatar	ZA	South Africa
EE	Estonia	KW	Kuwait	RE	Réunion	ZM	Zambia
EG	Egypt	KY	Cayman Islands	RO	Romania	ZR	Zaire
EH	Western Sahara	KZ	Kazakhstan	RU	Russian Federation	ZW	Zimbabwe

Glossary for DVD Player

Aspect ratio

The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3 and that of wide-screen TVs is 16:9.

Chapter

The smallest division on DVD VIDEO. It is a division of a title and similar to a track for CD or VCD.

Component video signal

A video signal system where parts of information necessary for reproducing image signal comprised of the three primary colors of light are transmitted via separate signal lines. Types of signal, such as R/G/B, Y/Pb/Pr, etc., are available.

Composite video signal

A video signal comprised of three kinds of signals combined: an image signal made up of luminance and chrominance signals using the frequency multiplication technique, burst signal providing the basis for color reproduction, and synchronization signal.

Disc menu

A screen display prepared for allowing selection of images, sounds, subtitles, multi-angle, etc. recorded on DVD VIDEO.

JPEG

A still-picture data compression system proposed by the Joint Photographic Expert Group, which features little distortion in image quality in spite of its high compression ratio.

Letter box

A method of displaying wide images like movies in on a 4:3 TV screen with no part of the image deleted by placing black bands on the top and bottom of the screen. This name has derived from the screen form looking literally like a letter box.

Linear PCM (PCM: Pulse Code Modulation)

A system for converting analog sound signal to digital signal for later processing with no data compression used in conversion.

MP3

A file format with a sound data compression system. "MP3" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. By using MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

Multi-angle

By recording multiple scenes progressing at the same time in a single title, the user can select view angles. This feature is called the multi-angle function.

Multichannel

DVD VIDEO has been designed to have each soundtrack constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

Multilanguage

When a title is created to cope with multiple languages, it is generally called a multilanguage title.

Parental Lock

A feature of this system to automatically determine whether or not to reproduce particular DVD VIDEO software by comparing its parental level (a measure of undesirability of scenes, etc. from educational viewpoint) set for the software beforehand with that set on this system by the user; if the software's level is less restrictive than the user-set level, it will be reproduced.

Playback control (PBC)

Refers to the signal recorded on VCD/SVCD for controlling reproduction. By using menu screens recorded on VCD/SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

Region code

A system for allowing discs to be played back only in the regions designated beforehand. All the countries in the world are divided into six regions and each region is identified by a specified region code (or region number). If the region code of a disc matches that of a player, the player can play back the disc.

Sampling frequency

Frequency of sampling data when analog data is converted to digital data. Sampling frequency numerically represents how many times the original analog signal is sampled per second.

Surround

A system for creating three-dimensional sound fields full of realism by arranging multiple speakers around the listener.

Transfer rate

The rate of transferring digital data. Usually the measure is in bit per second (bps). The DVD system applies a variable transfer rate system for high efficiency.

Operating JVC's Audio/Video Components

You can operate JVC's audio and video components with this unit's remote control, since control signals for JVC's components are preset in the remote control.


Operating Audio Components

To operate JVC's audio components using this remote control

- Aim the remote control directly at the remote sensor on the unit.
- To operate a source with the remote control, the source must be selected using the source selecting buttons on the remote control.
- Refer also to the manuals supplied with your components.

Sound control section (Amplifier)

After pressing CONTROL repeatedly to show "SOUND" on the operation mode display, you can perform the following operations:

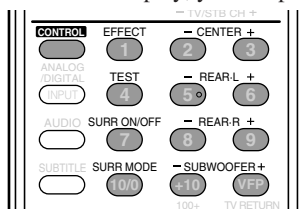


- SURR ON/OFF** : Turns on or off the Surround modes—Dolby Digital, DTS Digital Surround, and Dolby Pro Logic II.
- SURR MODE** : Selects the Surround modes.
- TEST** : Turns on or off the test tone output.
- CENTER + or -** : Adjusts the center speaker channel output level.
- REAR•L + or -** : Adjusts the left rear speaker channel output level.
- REAR•R + or -** : Adjusts the right rear speaker channel output level.
- SUBWOOFER + or -** : Adjusts subwoofer channel output level.
- EFFECT** : Selects the effect level.

Note:

- After adjusting sounds, press the source selecting button to operate your target source by using number buttons; otherwise, number buttons cannot be used for operating your target source.

Tuner

You can always perform the following operations:

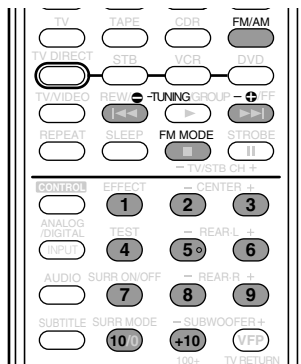


- FM/AM** : Tunes into the last selected FM or AM station.
- Each time you press the button, the band changes between FM and AM alternately.

After pressing FM/AM, you can perform the following operations on a tuner:

- 1 - 10, +10** : Selects a preset channel number directly.
For channel number 5, press 5.
For channel number 15, press +10, then 5.
For channel number 20, press +10, then 10.
- TUNING + or -** : Tunes into stations.
- FM MODE** : Changes the FM reception mode.


When FM is selected as the band, you can perform the following operations for RDS:

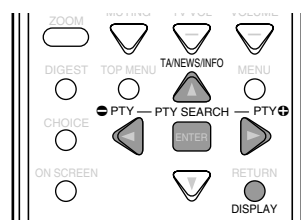

- DISPLAY** : Displays the RDS information.
- PTY SEARCH/PTY + or -** : Searches for PTY codes
- TA/NEWS/INFO** : Selects programs for the Enhanced Other Network function.

CD recorder

After pressing CDR, you can perform the following operations on a CD player and a CD recorder:

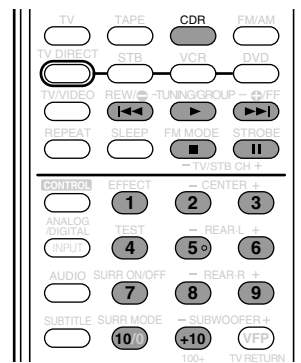

- ▶** : Starts playing.
- ◀◀** : Returns to the beginning of the current (or previous) track.
- ▶▶** : Skips to the beginning of the next track.
- : Stops playing.
- ||** : Pauses playing. To release it, press ▶.
- 1 - 10, +10** : Selects a track number directly.
For track number 5, press 5.
For track number 15, press +10, then 5.
For track number 20, press +10, then 10.
For track number 30, press +10, +10, then 10.

Note:

- When you start recording on the CD recorder, use the buttons on the CD recorder itself or on the remote control supplied with it.


Operating Video Components

To operate JVC's video components using this remote control

- Some JVC's VCRs can accept two types of the control signals—remote codes "A" and "B." Before using this remote control, make sure that the remote control code of the connected VCR is set to code "A."
- To operate the video component(s) using the remote control, aim the remote control directly at the remote sensor on each component, not on this unit.

■ TV

You can always perform the following operations:

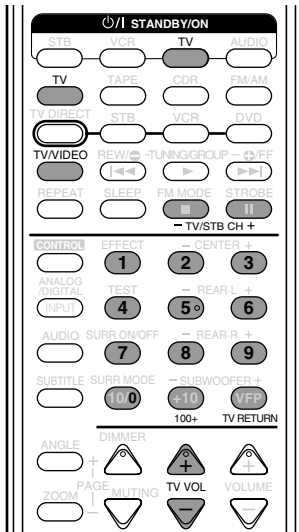


- ⏻/STANDBY/ON TV** : Turns on or off the TV.
TV VOL + or - : Adjusts the volume.
TV/VIDEO : Sets the input mode (either TV or VIDEO).

After pressing TV, you can perform the following operations on a TV:

- TV/STB CH + or -** : Changes the channels.
1 - 9, 0, 100+ : Selects the channels.
 For channel number 5, press 5.
 For channel number 10, press 1, then 0.
 For channel number 23, press 2, then 3.
 For channel number 135, press 100+, 3, then 5.
TV RETURN : Alternates between the previously selected channel and the current channel.

■ VCR

You can always perform the following operations:

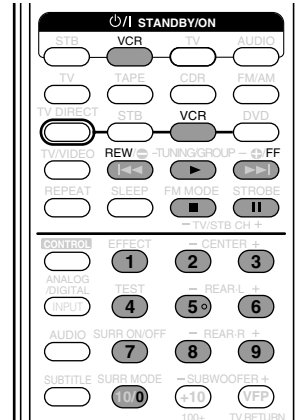

⏻/STANDBY/ON VCR : Turns on or off the VCR.

After pressing VCR, you can perform the following operations on a VCR:

- 1 - 9, 0** : Selects the TV channels on a VCR.
 For channel number 5, press 5.
 For channel number 10, press 1, then 0.
 For channel number 23, press 2, then 3.
▶ : Starts playing.
REW : Rewinds a tape.
FF : Fast-winds a tape.
■ : Stops operations.
|| : Pauses playing. To release it, press ▶.

Operating Other Manufacturers' Equipment

This remote control supplied with the unit can transmit control signals for other manufacturers' TVs, STBs, and VCRs. By changing the transmittable signals from preset ones to other manufacturers', you can operate other manufacturers' components using this remote control.


Changing the Preset Signal Codes

To operate other manufacturers' equipment using this remote control


- Aim the remote control directly at the remote sensor on each equipment.
- To operate a source with the remote control, the source must be selected using source selecting buttons on the remote control.
- Refer also to the manuals supplied with your equipment.

To change the transmittable signals for operating other manufacturers' TV

1. Press and hold  STANDBY/ON TV.

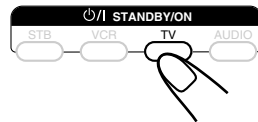


 2. Press TV.

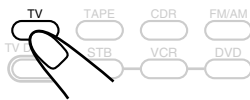


3. Enter the manufacturer's code using the number buttons (1-9, 0).

See the right to find the code.

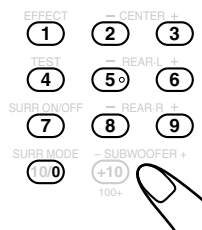

4. Release  STANDBY/ON TV.

 You can perform the following operations on the TV:

-  STANDBY/ON TV : Turns on or off the TV.
- TV VOL + or - : Adjusts the volume.
- TV/VIDEO : Sets the input mode (either TV or VIDEO).

After pressing TV, you can perform the following operations on a TV:

- TV/STB CH + or - : Changes the channels.
- 1 - 9, 0, 100+ : Selects the channels.
 - For channel number 5, press 5.
 - For channel number 10, press 1, then 0.
 - For channel number 23, press 2, then 3.
 - For channel number 135, press 100+, 3, then 5.

TV RETURN will function as the ENTER button if your equipment requires pressing ENTER after selecting a channel number.

Notes:

- Refer also to the manual supplied with your TV.
- All the functions listed on the left may not be assigned to the buttons for some TVs.
- If you cannot change the channels of some TVs by pressing the number buttons, press TV/STB CH + or - for changing the channels.

5. Try to operate your TV by pressing

 STANDBY/ON TV.

When your TV turns on or off, you have entered the correct code.

If there are more than one code listed for your brand of TV, try each one until the correct one is entered.

Manufactures' codes for TV

Manufacturer	Codes
JVC	00*, 02, 13, 14, 47, 74
Akai	01, 02
Blaupunkt	03, 04
Fisher	01, 05
Grundig	03, 06, 07
Hitachi	08 - 10, 49
Iraddio	02
Itt/Nokia	11, 12
Loewe	06, 15, 16
Magnavox	08, 17, 49
Mets	50 - 53
Mitsubishi	08, 18 - 20
Miver	21
Nordmende	22, 23
Okano	15
Panasonic	24 - 27, 76
Philips	15, 17, 28, 75
Quelle	52 - 67
RCA/PROSC	08, 24, 29 - 31, 48
SABA	32, 33, 68 - 70
Samsung	06, 08, 16, 34, 35, 49
Sanyo	01, 05
Schneider	02, 15, 36
Sharp	37, 38, 77
Sony	39
Telefunken	40 - 42, 69
Thomson	71, 72
Toshiba	37, 43, 44
Zenith	45, 46


*"00" is the initial JVC code.

Note:


- Manufacturers' codes are subject to change without notice. If they are changed, this remote control cannot operate the equipment.

■ **To change the transmittable signals for operating other manufacturers' STB**

1. **Press and hold**
 ⏻/STANDBY/ON STB.

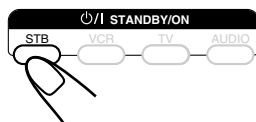


2. **Press STB.**

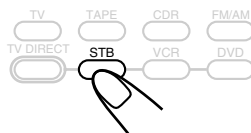

3. **Enter the manufacturer's code using the number buttons (1-9, 0).**

See the right to find the code.

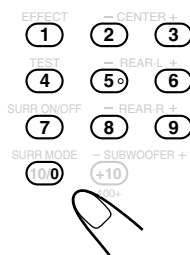

4. **Release** ⏻/STANDBY/ON STB.

You can turn on and off the STB:

⏻/STANDBY/ON STB : Turns on or off the STB.

After pressing STB, you can perform the following operations on an STB:

TV/STB CH + or - : Changes the channels.

1 - 9, 0, 100+ : Selects the channels.

For channel number 5, press 5.

For channel number 10, press 1, then 0.

For channel number 23, press 2, then 3.

For channel number 135, press 100+, 3, then 5.

TV RETURN will function as the ENTER button if your equipment requires pressing ENTER after selecting a channel number.

Note:

- Refer also to the manual supplied with your STB.

5. **Try to operate your STB by pressing**

⏻/STANDBY/ON STB.

When your STB turns on or off, you have entered the correct code.

If there are more than one code listed for your brand of STB, try each one until the correct one is entered.

Manufactures' codes for STB

Manufacturer	Codes
JVC	56*, 57, 67
Amstrad	43 - 49
Blaupunkt	30
Echostar	50, 51, 67
General Instrument	29
Goldstar	31
Grundig	32, 33
Hemlin/Re	01 - 05
Hirschmann	48, 52 - 55
Instrument	68
Itt/Nokia	34
Jerrold/G	06 - 14
Kathrein	52, 58 - 63
NEC	35, 36
Oak	15 - 17
Orbitech	48
Panasonic	18 - 20
Philips	37, 38
Pioneer	21, 22
RCA	65
Samsung	39, 40
Schwaiger	61, 64
Scientiff	23 - 25
Siemens	41, 42
Sony	66
Technisat	48
Tocom	26
Zenith	27, 28

*"56" is the initial JVC code.


Note:

- Manufacturers' codes are subject to change without notice. If they are changed, this remote control cannot operate the equipment.


Operating Other Manufacturers' Equipment

■ To change the transmittable signals for operating other manufacturers' VCR

1. Press and hold \odot /I STANDBY/ON VCR.

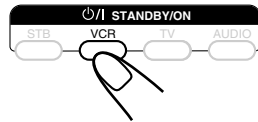


2. Press VCR.

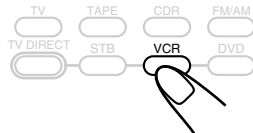

3. Enter the manufacturer's code using the number buttons (1-9, 0).

See the right to find the code.

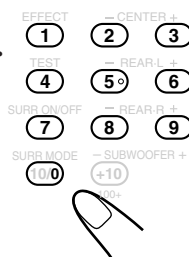

4. Release \odot /I STANDBY/ON VCR.

You can turn on and off the VCR:

\odot /I STANDBY/ON VCR : Turns on or off the VCR.

After pressing VCR, you can perform the following operations on a VCR:

1 - 9, 0 : Selects the TV channels on a VCR.

For channel number 5, press 5.

For channel number 10, press 1, then 0.

For channel number 23, press 2, then 3.

TV RETURN will function as the ENTER button if your equipment requires pressing ENTER after selecting a channel number.

▶ : Starts playing.

REW : Rewinds a tape.

FF : Fast-winds a tape.

■ : Stops operations.

|| : Pauses playing. To release it, press ▶.

Note:

- Refer also to the manual supplied with your VCR.

5. Try to operate your VCR by pressing

\odot /I STANDBY/ON VCR.

When your VCR turns on or off, you have entered the correct code.

If there are more than one code listed for your brand of VCR, try each one until the correct one is entered.

Manufactures' codes for VCR

Manufacturer	Codes
JVC	00*, 26 - 29, 58
Aiwa	01, 02
Bell&Howell	03
Blaupunkt	04, 05
CGM	06, 07
Emerson	08, 10 - 12, 64, 65
Fisher	03, 14 - 17
Funai	01
GE	18 - 20
Goldstar	07
Goodmans	13, 21
Grundig	06, 22
Hitachi	18, 23 - 25, 66
Loewe	07, 21
Magnavox	04, 19, 24
Mitsubishi	30 - 35
NEC	26, 27
Nokia	03, 36
Nordmende	38
Orion	09
Panasonic	19, 24, 39, 40
Philips	04, 19, 21, 24, 41, 42
Phonola	21
RCA/PROSC	04, 18, 19, 23, 24, 43 - 45
SABA	38, 46
Samsung	45, 47, 59, 61 - 63
Sanyo	03, 48, 49
Sharp	37, 50
Siemens	03, 51
Sony	52 - 54
Telefunken	55, 60
Toshiba	43, 44
Zenith	56, 57

*"00" is the initial JVC code.

Note:

- Manufacturers' codes are subject to change without notice. If they are changed, this remote control cannot operate the equipment.

Maintenance

To get the best performance of the system, keep your discs and mechanism clean.

General Notes

In general, you will have the best performance by keeping your discs and mechanism clean.


- Store discs in their cases, and keep them in cabinets or on shelves.

Handling Discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.



- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

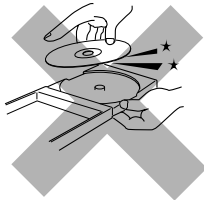

Cleaning Discs

Wipe the disc with a soft cloth in a straight line from center to edge.



DO NOT use any solvent—such as conventional record cleaner, spray, thinner, or benzine—to clean the disc.

Cleaning the Unit

- Stains on the unit
Should be wiped off with a soft cloth. If the unit is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the unit may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following.
 - DO NOT wipe it with a hard cloth.
 - DO NOT wipe it strong.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substances such as insecticides to it.
 - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

Troubleshooting

Use this chart to help you solve daily operational problems. If there is any problem you cannot solve, contact your dealer.

■ General

PROBLEM	POSSIBLE CAUSE	SOLUTION
The power does not come on.	The power cord is not plugged in.	Plug the power cord into an AC outlet.
No sound from speakers.	Speaker signal cables are not connected.	Check speaker wiring and reconnect if necessary.
	The audio cable is not connected properly.	Connect the cord properly (see pages 7 to 10).
	An incorrect source is selected.	Select the correct source.
	Muting is activated.	Press MUTING to cancel the muting.
	An incorrect input mode (analog or digital) is selected.	Select the correct input mode (analog or digital).
Sound from one speaker only.	Connections are incorrect.	Check connections.
	The balance is set to one extreme.	Adjust the balance properly (see pages 28 or 56).
"OVERLOAD" starts flashing on the display.	Speakers are overloaded because of high volume.	<ol style="list-style-type: none"> 1. Press ⏻/STANDBY/ON on the front panel to turn off the unit. 2. Stop the playback source. 3. Turn on the unit again, and adjust the volume.
	Speakers are overloaded because of short circuit of speaker terminals.	<p>Press ⏻/STANDBY/ON on the front panel to turn off the unit, then check the speaker wiring.</p> <p>If "OVERLOAD" does not disappear, unplug the AC power cord, then plug it back again.</p> <p>If speaker wiring is not short-circuited, contact your dealer.</p>
The STANDBY lamp lights up after turning on the power, but soon the unit turns off (into standby mode).	The unit is overloaded because of a high voltage.	Press ⏻/STANDBY/ON on the front panel to turn off the unit. After unplugging the power cord, consult your dealer.
Remote control does not operate as you intend.	The remote control is not ready for your intended operation.	Press CONTROL (see page 28) or a source selecting button first, then press the buttons you want to use.
Remote control does not work.	It is too far from the unit, or is not facing the unit.	Come closer to the unit. Operate the remote control within 7 m from the unit.
	There is an obstruction hiding the remote sensor on the unit.	Remove the obstruction.
	The remote control is not aimed at the remote sensor on the unit or components.	Aim the remote control at the remote sensor on each component you want to operate.
	The batteries have been inserted into the wrong way round (+/-).	Insert the batteries correctly.
	Batteries are weak.	Replace batteries.
	The remote control signals are not set correctly.	Enter the correct manufacturers' code (see pages 65 to 67).

■ For DVD Player

PROBLEM	POSSIBLE CAUSE	SOLUTION
No picture is displayed on the TV.	The SCART cable is not connected correctly.	Connect the cord correctly (see pages 9 and 10).
	TV input selection is incorrect.	Select the correct input on the TV.
	The disc is not playable.	Replace the disc (see page 33).
No sound is heard and "NO AUDIO" appears on the display.	The loaded disc may be illegally copied.	Consult with the disc vendor.
A disc cannot be played.	The unit's and disc's Region Code numbers are incompatible.	Replace the disc (see page 33).
	Parental Lock is in use.	Enter your password to change the parental level (see pages 59 and 60).
A disc cannot be played and "0:00" is displayed on the display window.	The disc is loaded with its label and data sides inverted.	Insert the disc correctly (see page 15).
	The unplayable disc is loaded.	Replace the disc (see page 33).
Video and audio are distorted.	The disc is scratched or dirty.	Replace or clean the disc (see page 68).
	A VCR is connected between the unit and the TV.	Connect the unit and TV directly.
	"STILL MODE" may not be set appropriately for the current disc.	Select other setting of "STILL MODE" (see page 55).
"MULTI CH" or "L/R ONLY" appears on the display.	The current track prohibits you from playing back with stereo sound.	Activate Surround mode (see page 47) or listen to another track.
The picture does not fit the TV screen properly.	"MONITOR TYPE" is not set correctly.	Set the monitor type correctly (see page 55).
	The TV is not set correctly.	Set the TV correctly.
No subtitle appears on the TV screen though you have selected as your initial subtitle language.		Some discs are programed to always display no subtitle initially. If this happens, press SUBTITLE on the remote control after starting play (see page 39).
Audio language is different from the one you have selected as your initial audio language.		Some discs are programed to always use the original language initially. If this happens, press AUDIO on the remote control after starting play (see pages 39 and 40).

Troubleshooting

■ For Tuner

PROBLEM	POSSIBLE CAUSE	SOLUTION
Hard to listen to broadcast because of noise.	The AM loop antenna is too close to the unit.	Change the position and direction of the AM loop antenna.
	The supplied FM antenna is not properly extended and positioned.	Extend the FM antenna at the best position.
Continuous hiss or buzzing during FM reception.	Incoming signal is too weak.	Connect an outdoor FM antenna or contact your dealer.
	The station is too far away.	Select a new station.
	An incorrect antenna is used.	Check with your dealer to be sure you have a correct antenna.
	Antennas are not connected properly.	Check connections.
Occasional cracking noise during FM reception.	Ignition noise from automobiles.	Move the antenna farther from automobile traffic.

■ For MP3

PROBLEM	POSSIBLE CAUSE	SOLUTION
A disc cannot be played.	No MP3 files are recorded on the disc.	Replace the disc.
	The disc is unplayable (such as CD-ROM).	
	MP3 files do not have the correct file extension—.mp3, .Mp3, .mP3, or .MP3 in their file names.	Add the file extension—.mp3, .Mp3, .mP3, or .MP3—to their file names (see page 49).
	MP3 files are made at bit rate under 64 kbps.	This unit cannot play back such files. Replace the disc.
	MP3 files are not recorded in the format compliant with ISO 9660 Level 1 or 2.	Replace the disc. (Record MP3 files using a compliant application.)
No MP3 files except JPEG files are played.	The MP3/JPEG setting is set to “JPEG.”	When both MP3 files and JPEG files are recorded on a disc, to play MP3 files, set the MP3/JPEG setting to “MP3” (see page 56).

■ For JPEG

PROBLEM	POSSIBLE CAUSE	SOLUTION
A disc cannot be played.	No JPEG files are recorded on the disc.	Replace the disc.
	The disc is unplayable (such as CD-ROM).	
	JPEG files do not have the correct file extension in their file names.	Add the file extension—.jpg, .jpeg, .JPG, .JPEG or any uppercase and lowercase combination (such as “.Jpg”)—to their file names (see page 51).
	JPEG files are not made with baseline JPEG format.	This unit cannot play back such files. Replace the disc.
	JPEG files are not recorded in the format compliant with ISO 9660 Level 1 or 2.	Replace the disc. (Record JPEG files using a compliant application.)
No JPEG files except MP3 files are played.	The MP3/JPEG setting is set to “MP3.”	When both MP3 files and JPEG files are recorded on a disc, to play JPEG files, set the MP3/JPEG setting to “JPEG” (see page 56).

Amplifier

Output Power	At Stereo operation:	
	Front channels:	80 W per channel, min. RMS, driven into 8 Ω at 1 kHz, with no more than 0.9% total harmonic distortion. (IEC268-3/DIN)
	At Surround operation:	
	Front channels:	80 W per channel, min. RMS, driven into 8 Ω at 1 kHz, with no more than 0.8% total harmonic distortion.
	Center channel:	80 W, min. RMS, driven into 8 Ω at 1 kHz, with no more than 0.8% total harmonic distortion.
	Rear channels:	80 W per channel, min. RMS, driven into 8 Ω at 1 kHz, with no more than 0.8% total harmonic distortion.

Audio

Audio Input Sensitivity/Impedance (1 kHz):	TV, TAPE/CDR, STB, VCR:	240 mV/47 kΩ
Audio Input (DIGITAL IN)* :	Coaxial: DIGITAL 1 (STB):	0.5 V(p-p)/75 Ω
	Optical: DIGITAL 2 (TV):	-21 dBm to -15 dBm (660 nm ±30 nm)
	*Corresponding to Linear PCM, Dolby Digital, and DTS Digital Surround (with sampling frequency—32 kHz, 44.1 kHz, 48 kHz).	
Signal-to-Noise Ratio (*66 IHF/DIN):	TV, TAPE/CDR, STB, VCR:	87 dB/67 dB
Frequency Response (8 Ω):	TV, TAPE/CDR, STB, VCR:	20 Hz to 20 kHz (±1 dB)
Tone Control:	Bass (100 Hz):	±10 dB ±2 dB
	Treble (10 kHz):	±10 dB ±2 dB

Video

Video Input Sensitivity/Impedance (1 kHz):		
Composite video:	STB IN, VCR IN:	1 V(p-p)/75 Ω
S-video:	STB IN, VCR IN:	(Y:luminance): 1 V(p-p)/75 Ω (C:chrominance): 0.286 V(p-p)/75 Ω
RGB:	STB IN, VCR IN:	0.7 V(p-p)/75 Ω
Video Output Level/Impedance (1 kHz):		
Composite video:	VCR OUT, TV OUT:	1 V(p-p)/75 Ω
S-video:	TV OUT:	(Y:luminance): 1 V(p-p)/75 Ω (C:chrominance): 0.286 V(p-p)/75 Ω
RGB:	TV OUT:	0.7 V(p-p)/75 Ω
Color System:	PAL	
Horizontal Resolution:	500 lines	
Signal-to-Noise Ratio (S/N):	63 dB	
Synchronize:	Negative	

FM tuner (IHF)


Tuning Range:	87.50 MHz to 108.00 MHz
---------------	-------------------------

AM tuner

Tuning Range:	MW: 522 kHz to 1 629 kHz
---------------	--------------------------

General

Power Requirements:	AC 230V \sim , 50 Hz
Power Consumption:	180 W (in operation) 2 W (in standby mode)
Dimensions (W x H x D):	435 mm x 100 mm x 403.5 mm
Mass:	7.9 kg

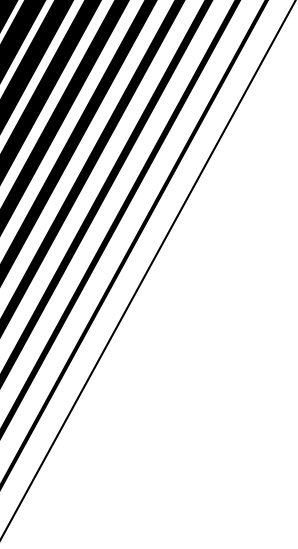

JVC
VICTOR COMPANY OF JAPAN, LIMITED