

JVC



DVD/CD RECEIVER

KD-DV5000

ENGLISH

RECEPTOR CON DVD/CD




KD-DV5000

ESPAÑOL

RECEPTEUR DVD/CD

KD-DV5000

FRANÇAIS

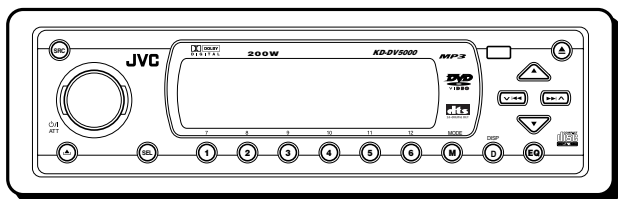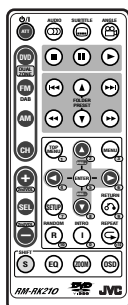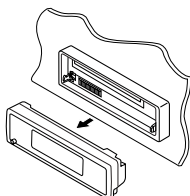

- This unit is equipped with the display demonstration. To cancel it, see page 9.
- Esta unidad está equipada con demostración en la pantalla. Para cancelarla, consulte la página 9.
- Cet appareil est équipé d'une fonction de démonstration des affichages. Pour l'annuler, référez-vous à la page 9.

For installation and connections, refer to the separate manual.

Para la instalación y las conexiones, refiérase al manual separado.

Pour l'installation et les raccordements, se référer au manuel séparé.

INSTRUCTIONS

MANUAL DE INSTRUCCIONES
MANUEL D'INSTRUCTIONS

For customer Use:

Enter below the Model No. and Serial No. which are located on the top or bottom of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

LVT1053-001A

[J]

INFORMATION (For U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT FOR LASER PRODUCTS

Precautions:

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user-serviceable parts inside. Leave all servicing to qualified service personnel.
4. **CAUTION:** This DVD/CD player uses invisible laser radiation, however, is equipped with safety switches to prevent radiation emission when unloading discs. It is dangerous to defeat the safety switches.
5. **CAUTION:** Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.


How to reset your unit

After detaching the control panel, press the reset button on the panel holder using a ball-point pen or similar tool. This will reset the built-in microcomputer.

Note:

If you reset the unit during play, the playback mode selections (e.g. repeat play mode setting), you have selected for the current disc will be reset to the initial settings.

- *During DVD playback, the disc menu selection will also be reset to the initial disc settings.*

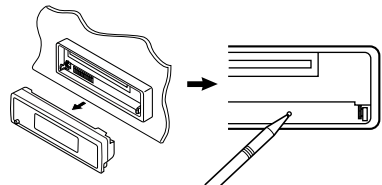

Thank you for purchasing a JVC product. Please read all instructions carefully before operation, to ensure your complete understanding and to obtain the best possible performance from the unit.

WARNINGS

- **DO NOT** install any unit in locations where;
 - it may obstruct the steering wheel and gearshift lever operations, as this may result in a traffic accident.
 - it may obstruct the operation of safety devices such as air bags, as this may result in a fatal accident.
 - it may obstruct visibility.
- **DO NOT** operate any unit while manipulating the steering wheel, as this may result in a traffic accident.
- The driver must not watch the monitor while driving.
 - If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.
- The driver must not put on the headphones while driving. It is dangerous to shut off the outside sounds while driving.
- If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.
- If the parking brake is not engaged, “DRIVER MUST NOT WATCH THE MONITOR WHILE DRIVING.” appears on the monitor, and no playback picture will be shown.
 - This warning appears only when the parking brake wire is connected to the parking brake system built in the car (refer to the Installation/Connection Manual).


CAUTION: DO NOT insert a disc while the disc loading lamp is flashing or is not lit. (See page 18.)

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing use only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

CAUTION on Volume Setting:

Discs produce very little noise compared with other sources. If the volume level is adjusted for the tuner, for example, the speakers may be damaged by the sudden increase in the output level. Therefore, lower the volume before playing a disc and adjust it as required during playback.

Caution:

If the temperature inside the car is below 0°C (32°F), the movement of animation and text scroll will be halted on the display to prevent the display from being blurred.  (LOW TEMP.) indicator appears on the display.

When the temperature increases, and the operating temperature is resumed, these functions will start working again.

BEFORE USE

*** For safety....**

- Do not raise the volume level too much, as this will block outside sounds, making driving dangerous.
- Stop the car before performing any complicated operations.

*** Temperature inside the car....**

If you have parked the car for a long time in hot or cold weather, wait until the temperature in the car becomes normal before operating the unit.

CONTENTS


How to reset your unit	2	DVD SETUP MENU	43
LOCATION OF THE BUTTONS	5	Basic setting procedure	43
Control panel	5	SOUND ADJUSTMENTS	47
Remote controller	6	Adjusting the sound	47
Preparing the remote controller	7	Selecting preset sound modes (iEQ: intelligent equalizer)	48
BASIC OPERATIONS	8	Storing your own sound adjustments	49
Turning on the power	8	OTHER MAIN FUNCTIONS	50
Canceling the display demonstration	9	Changing the general settings (PSM)	50
Setting the clock	9	Selecting the dimmer mode	54
Activating the level meter	10	Changing the display color	55
RADIO OPERATIONS	11	Assigning names to the sources	57
Listening to the radio	11	Detaching the control panel	58
Storing stations in memory	13	CD CHANGER OPERATIONS	59
Tuning in to a preset station	14	Playing discs	59
Changing the display pattern	15	Selecting the playback modes	63
PLAYABLE DISCS	16	EXTERNAL COMPONENT OPERATIONS	65
BASIC DISC PLAYBACK	18	Playing an external component	65
Starting playback	18	ADDITIONAL INFORMATION	66
Locating a particular title/chapter/track	20	LANGUAGE CODES	67
Locating a particular folder	21	GLOSSARY	68
DVD/VCD SPECIAL FUNCTIONS	22	TROUBLESHOOTING	69
Selecting subtitles	22	MAINTENANCE	72
Selecting audio languages	23	Handling discs	72
Selecting multi-angle views	23	SPECIFICATIONS	73
Menu operations	24		
Zoom in	25		
ADVANCED DISC OPERATIONS	26		
Searching for a particular point	26		
Playing in various play modes	28		
DUAL ZONE OPERATIONS	30		
Listening with headphones	30		
OSD DISC OPERATIONS	32		
Operations on the monitor screen	32		
OTHER DISC OPERATIONS	35		
Basic disc playback	35		
Locating a title/chapter/track on a disc	36		
Selecting a folder/track to play using the lists	37		
Selecting playback modes	38		
Prohibiting disc ejection	41		
Changing the display pattern	41		

LOCATION OF THE BUTTONS



Control panel

ENGLISH

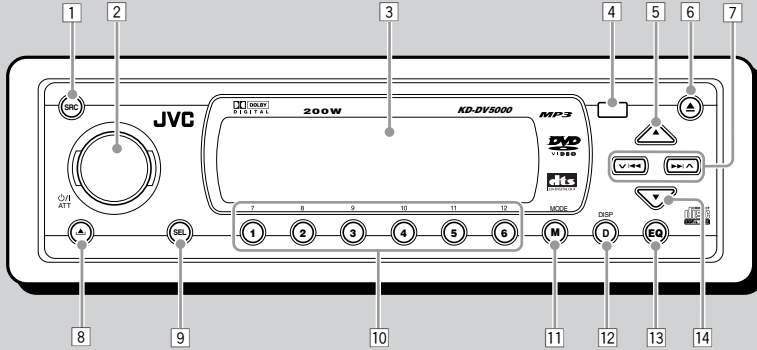

Refer to the pages in parentheses for details.

- 1 SRC (source) button (8, 57, 59, 65)
- 2 • Φ /I ATT (standby/on/attenuator) button (8)
 - Control dial
- 3 Display window
- 4 Remote sensor
- 5 \blacktriangle (up) button
 - Functions as the Play button for DVDs and VCDs.


- 6 \blacktriangle (eject) button (20, 35)
- 7 \blacktriangledown | \blacktriangleleft | \blacktriangleright | \blacktriangle buttons
- 8 \blacktriangle (control panel release) button (58)
- 9 SEL (select) button
- 10 Number buttons
- 11 MODE (M) button
- 12 DISP (D) (display) button (10, 15, 41, 60, 65)
- 13 EQ (equalizer) button (10, 48)
- 14 \blacktriangledown (down) button
 - Functions as the Stop button for DVDs and VCDs.

How to use the MODE (M) button

If you press MODE (M), the unit goes into functions mode. While in functions mode, the number buttons work as different function buttons.

- The \blacktriangle / \blacktriangledown buttons also work as +10/-10 buttons after pressing MODE (M).

Ex.: When the source is the tuner

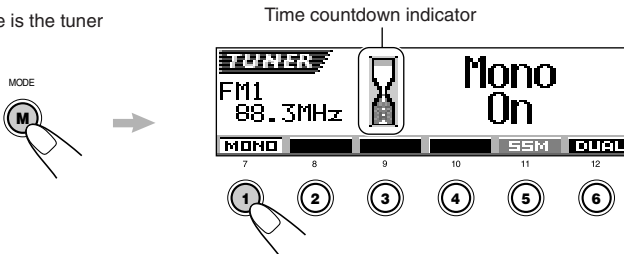


To use these buttons for original functions again after pressing MODE (M), wait for 5 seconds without pressing any of these buttons until the functions mode is cleared.

- Pressing MODE (M) again also clears the functions mode.



Remote controller

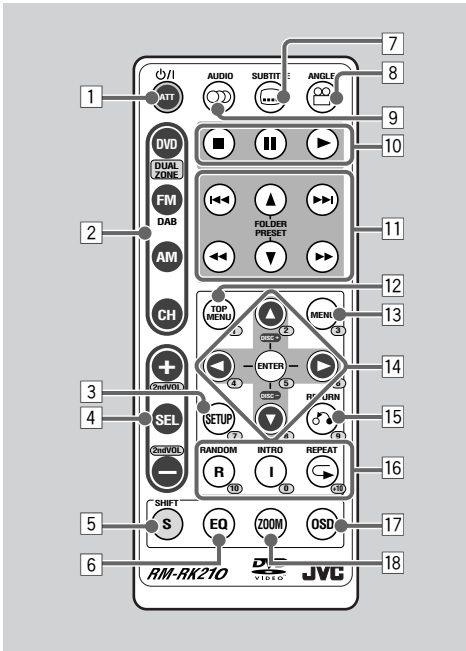

IMPORTANT:
If "Dual Zone" is turned "On" (see page 30), the remote controller only functions for operating the DVD/CD player.

Refer to the pages in parentheses for details.

- 1 **⏻/ATT** (standby/on/attenuator) button
- 2 Source selection button
DVD, FM, AM, and CH
 - DVD button also functions as the DUAL ZONE button while pressed with SHIFT (S) button. (30)
 - FM button also functions to change the FM bands. Each time you press the button, FM band changes to FM1, FM2, and FM3 in sequence.
 - FM button does not function as the DAB button for this model.
 - CH button does not function if no CD changer is connected.

- 3] * **SETUP** button (43)
- 4 Basic sound setting buttons
SEL, +, and -
 - The +/- buttons normally function as the volume adjustment buttons.
 - The +/- buttons also function as the 2ndVOL +/- buttons when pressed with SHIFT (S) button. (31)
- 5 **SHIFT (S)** button
- 6 **EQ** (equalizer) button (48)
 - This button does not work for selecting the level meter.
- 7 **SUBTITLE** button (22)
- 8 **ANGLE** button (23)
- 9 **AUDIO** button (23)
- 10 Disc basic operation buttons (20)
 - (stop), **⏸** (pause), **▶** (play)
- 11 Disc advanced operation buttons
◀◀ / ▶▶ (reverse search/forward search)
 - The **◀◀ / ▶▶** buttons also work for searching for stations.
 - ◀◀ / ▶▶** (reverse/fast forward)
 - FOLDER PRESET ▲ / ▼**
 - The **FOLDER PRESET ▲ / ▼** buttons also work for selecting the preset stations.
- 12] * **TOP MENU** button (24)
- 13] * **MENU** button (24)
- 14] * Menu operation buttons
Cursor (**▲ / ▼ / ◀ / ▶**), and **ENTER**
- 15] * **RETURN** button (24)
- 16] * Play mode buttons (28, 29, 63, 64)
RANDOM (R), **INTRO (I)**, and **REPEAT (↺)**
- 17 **OSD** button (32)
- 18 **ZOOM** button (25)


* *These buttons function as the number buttons when pressed with SHIFT (S) button.*



Preparing the remote controller

Before using the remote controller:

- Aim the remote controller directly at the remote sensor on the main unit. Make sure there is no obstacle in between.

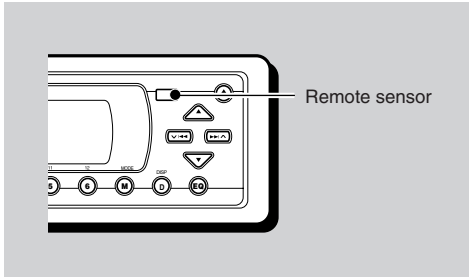


- Do not expose the remote sensor to strong light (direct sunlight or artificial lighting).

Installing the battery

When the controllable range or effectiveness of the remote controller decreases, replace the battery.


1. Remove the battery holder.

- 1) Push out the battery holder in the direction indicated by the arrow using a ball-point pen or a similar tool.
- 2) Remove the battery holder.

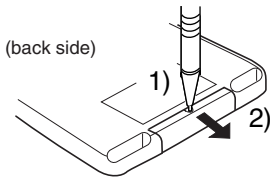


2. Place the battery.

Slide the battery into the holder with the + side facing upwards so that the battery is fixed in the holder.

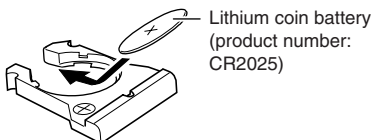

3. Return the battery holder.

Insert again the battery holder pushing it until you hear a clicking sound.

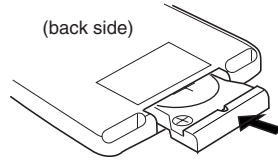

WARNING:

- Store the battery in a place where children cannot reach.
If a child accidentally swallows the battery, consult a doctor immediately.
- Do not recharge, short, disassemble or heat the battery or dispose of it in a fire.
Doing any of these things may cause the battery to give off heat, crack or start a fire.
- Do not leave the battery with other metallic materials.
Doing this may cause the battery to give off heat, crack or start a fire.
- When throwing away or saving the battery, wrap it in tape and insulate; otherwise, the battery may start to give off heat, crack or start a fire.
- Do not poke the battery with tweezers or similar tools.
Doing this may cause the battery to give off heat, crack or start a fire.


CAUTION:

DO NOT leave the remote controller in a place (such as dashboards) exposed to direct sunlight for a long time. Otherwise, it may be damaged.




BASIC OPERATIONS

ENGLISH

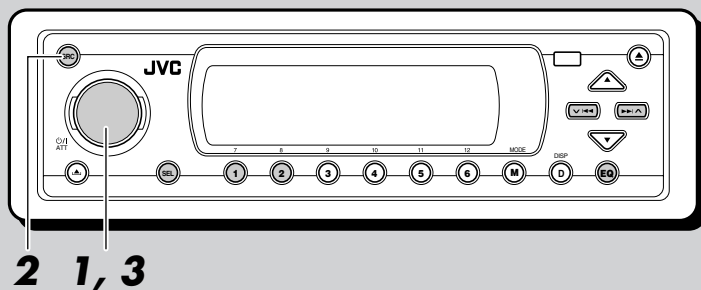

Turning on the power

 1 Turn on the power.




Note on One-Touch Operation:

When you select a source in step 2 below, the power automatically comes on. You do not have to press this button to turn on the power.

2 Select the source.



 Each time you press the button, the source changes as follows.



To operate the tuner (FM or AM), see pages 11 – 15.

To play a disc, see pages 16 – 46.

To operate the CD changer, see pages 59 – 64.


To operate the external component (LINE IN), see page 65.

*1 If a disc is not in the loading slot, you cannot select "DISC" as the source to play.

*2 Without connecting a CD changer, you cannot select it as the source to play.

*3 To select "LINE IN," select "Line In" for the "Ext Input" setting on page 53.

3 Adjust the volume.

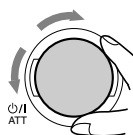

Volume level appears.



Current sound (iEQ) mode (see page 48)

4 Adjust the sound as you want. (See pages 47 – 49.)

Note:

While playing a source, you can also show the level meter on the display. For details, see "Activating the level meter" on page 10.

To drop the volume in a moment

Press **P/I ATT** briefly while listening to any source. "ATT" starts flashing on the display, and the volume level will drop in a moment.

To resume the previous volume level, press the button briefly again.

- If you turn the control dial, you can also restore the sound.

To turn off the power

Press **P/I ATT** for more than 1 second.

- If you turn off the power while listening to a disc, playback will start from where playback has been stopped previously, next time you turn on the power.



Canceling the display demonstration

When shipped from the factory, display demonstration has been activated, and starts automatically when no operations are done for about 20 seconds.


- It is recommended to cancel the demonstration before you use the unit for the first time.

To cancel the display demonstration, follow the procedure below:

- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (PSM: see page 51.)**



- 2 Press number button 1 to select "MOVIE"—Movie category of the PSM settings.**

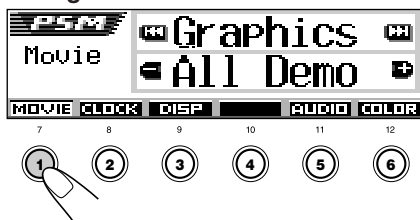

The "Graphics" setting screen appears on the display.

- 3 Select "Off."**



- 4 Finish the setting.**



To activate the display demonstration, repeat the same procedure and select "All Demo" or "Int Demo" in step 3.

- For more details, see "To set the movie demonstration—Graphics" on page 52.


Setting the clock

You can also set the clock system to 24 hours or 12 hours.

- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (PSM: see page 51.)**



- 2 Press number button 2 to select "CLOCK"—Clock category of the PSM settings.**

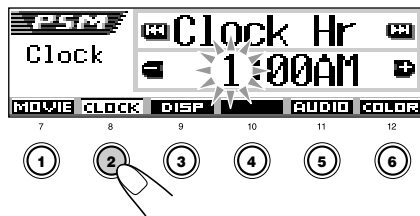



The "Clock Hr" setting screen appears on the display.

- 3 Adjust the hour.**



- 4 Set the minute.**

- 1 Select "Clock Min (minute)."
- 2 Adjust the minute.

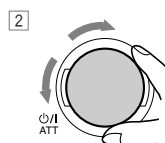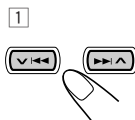

CONTINUED ON THE NEXT PAGE



5 Set the clock system.

- 1 Select "24H/12H."
- 2 Adjust "24Hours" or "12Hours."



6 Finish the setting.



To check the current clock time when the unit is turned off, press DISP (D).

The power turns on and the clock time is shown for about 5 seconds, then the power turns off.

Activating the level meter

You can show the level meters on the display while playing any source. This unit is equipped with three level meter patterns.

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step 1 again.

1 Press EQ (equalizer) twice.



 
Last selected level meter appears on the display.

- If you press the button only once, the sound selection screen appears (see page 48).

2 Select the level meter pattern you want.




As you turn the control dial, the level meters change as follows:




Meter 1:

 The audio level meter fluctuates vertically.



Meter 2:

 
The speaker on the display vibrates as input audio level changes.



Meter 3:

The left and right audio level meters appear.

 - If the display pattern is changed, only one audio level meter will be shown.




Off:

No level meter is shown. The source animation appears.

NOTICE:

The illustrations of the display used in this manual are mainly of the initial setting when shipped from the factory. If you have changed the display patterns or some PSM items, the actual displays you see will be different.

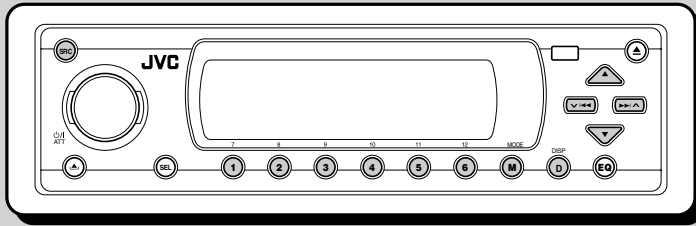

The operations of this section are mainly explained using the buttons on the control panel. When the remote controller can be used for the same operations, it is then explained.

Listening to the radio

You can use either automatic searching or manual searching to tune in to a particular station.

 
Searching for a station automatically: Auto search

This operation is also possible from the remote controller.

1 Select the band (FM1 – 3, AM).



- 1 Press SRC (source) repeatedly to select the tuner.
- 2 Press and hold SRC. Each time you press and hold the button, the band changes.



Selected band appears.

 


Lights up when receiving an FM stereo broadcast with sufficient signal strength.

Note:

This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

2 Start searching for a station.



To search for stations of higher frequencies



To search for stations of lower frequencies

When a station comes in, searching stops.

To stop searching before a station is received, press the same button you have pressed for searching.

 
When using the remote controller

1 Press FM or AM.

- When selecting the FM bands, press FM repeatedly until the band you want is selected.



2 Press >>> or <<< to start searching.






Searching for a station manually: Manual search

1 Select the band (FM1 – 3, AM).



 
- 1 Press SRC (source) repeatedly to select the tuner.
- 2 Press and hold SRC. Each time you press and hold the button, the band changes.




Note:

This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

2 Press and hold ►► | ▲ or ▼ | ◀◀ until “Manual Search” starts flashing on the display.

 

 3 Tune in to a station you want while “Manual Search” is flashing.



To tune in to stations of higher frequencies

To tune in to stations of lower frequencies

- If you release your finger from the button, the manual mode automatically turns off after 5 seconds.
- If you hold down the button, the frequency keeps changing (in 200 kHz intervals for FM and 10 kHz for AM) until you release the button.


When an FM stereo broadcast is hard to receive:

- 1 Press MODE (M) to enter the functions mode while listening to an FM stereo broadcast. “Mode” appears on the display.



- 2 Press number button 1 to select “Mono On” while “Mode” is still on the display. Each time you press the button, “Mono On” and “Mono Off” appears alternately.

See page 30 for this function.

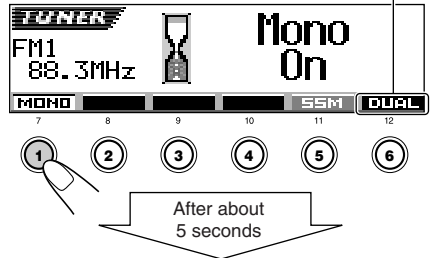

The display returns to the source indication screen.



When “Mono On” is selected, the MONO indicator appears, and the sound you hear becomes monaural but the reception will be improved.

Storing stations in memory

You can use one of the following two methods to store broadcasting stations in memory.

- Automatic preset of FM stations: SSM (Strong-station Sequential Memory)
- Manual preset of both FM and AM stations

 
FM station automatic preset: SSM

You can preset 6 local FM stations in each FM band (FM1, FM2, and FM3).

1 Select the FM band (FM1 – 3) you want to store FM stations into.



- 1 Press SRC (source) repeatedly to select the tuner.
- 2 Press and hold SRC. Each time you press and hold the button, the band changes.



Note:

This receiver has three FM bands (FM1, FM2, FM3). You can use any one of them to listen to an FM broadcast.

2 Start automatic preset.


- 1 Press MODE (M) to enter the functions mode.

MODE

“Mode” appears on the display.



- 2 Press and hold number button 5 while “Mode” is still on the display.

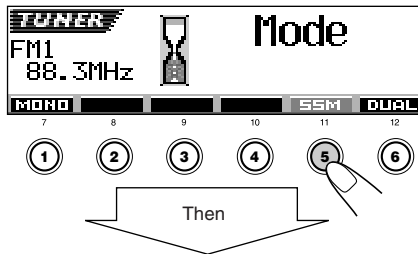

“-SSM-” appears, then disappears when automatic preset is over.

Local FM stations with the strongest signals are searched and stored automatically in the band number you have selected (FM1, FM2, or FM3). These stations are preset in the number buttons—No.1 (lowest frequency) to No.6 (highest frequency).

Manual preset

 
You can preset up to 6 stations in each band (FM1, FM2, FM3, and AM) manually.

Ex.: Storing an FM station of 92.5 MHz into the preset number 1 of the FM1 band.

1 Select the band (FM1 – 3, AM) you want to store stations into (in this example, FM1).




- 1 Press SRC (source) repeatedly to select the tuner.
- 2 Press and hold SRC. Each time you press and hold the button, the band changes.





2 Tune in to a station (in this example, of 92.5 MHz).

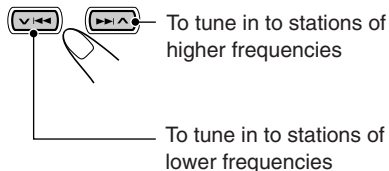

3 Press and hold the number button (in this example, 1) for more than 2 seconds.



The display pattern automatically changes like the above pattern (see page 15). The preset number flashes for about 5 seconds, then the previous display pattern resumes.

4 Repeat the above procedure to store other stations into other preset numbers.

Notes:

- A previously preset station is erased when a new station is stored in the same preset number.
- Preset stations are erased when the power supply to the memory circuit is interrupted (for example, during battery replacement). If this occurs, preset the stations again.

Tuning in to a preset station

 
You can easily tune in to a preset station. Remember that you must store stations first. If you have not stored them yet, see “Storing stations in memory” on pages 13 and 14.

Selecting a preset station directly


1 Select the band (FM1 – 3, AM).



- 1 Press SRC (source) repeatedly to select the tuner.
- 2 Press and hold SRC. Each time you press and hold the button, the band changes.



 2 Select the number (1 – 6) for the preset station you want.



Note:

You can also use the ▲ (up) or ▼ (down) button on the unit to select the next or previous preset stations. Each time you press the ▲ (up) or ▼ (down) button, the next or previous preset station is tuned in.

When using the remote controller

1 Press FM or AM.

- When selecting the FM bands, press FM repeatedly until the band you want is selected.



2 Press the number buttons (1 to 6) while holding SHIFT (S).



Note:

You can also use the PRESET (FOLDER) ▲ / ▼ buttons for selecting a preset station.

 
Selecting a preset station using the preset station list

If you forget which stations are stored in which preset numbers, you can check the preset station list, then select your desired station.



1 Select the band (FM1 – 3, AM).



- 1 Press SRC (source) repeatedly to select the tuner.
- 2 Press and hold SRC. Each time you press and hold the button, the band changes.



  
2 Press and hold ▲ (up) or ▼ (down) until the preset station list for the current band (FM1, FM2, FM3, or AM) appears on the display.



Notes:

- You can show the other FM band preset station lists (FM1, FM2, or FM3) by pressing ▲ (up) or ▼ (down).
- If a name has been assigned to a station, it will be shown instead of the station frequency.

 3 Select the number (1 – 6) for the preset station you want.



Changing the display pattern

By pressing DISP (D), you can change the information shown on the display.



Each time you press the button, the display patterns change as follows:



Appears only when selecting a preset station number.



Clock time



If a name has been assigned to a station, it will be shown instead of "NO NAME."











PLAYABLE DISCS

ENGLISH

Discs you can play:

Disc Type	Mark (Logo)	Video Format	Region Code*
DVD Video	 	NTSC	1 ALL
Video CD	 		_____
Audio CD	 	_____	_____
MP3 disc	CD-Rs or CD-RWs including MP3 files with the file extension code <mp3>. They must be recorded in the format compliant with ISO 9660 Level 1, ISO 9660 Level 2, Romeo, and Joliet.		

- On some discs, the actual operations may be different from what is explained in this manual.
- The following discs cannot be played back;
 - DVD-Audio, DVD-ROM, DVD-RAM, DVD-R, DVD-RW, CD-ROM, CD-I (CD-I Ready), Photo CD, etc.
 Playing back these discs will generate noise and damage the speakers.

* Note on Region Code

DVD players and DVD Video discs have their own Region Code numbers. This unit can only play back DVD discs whose Region Code numbers include "1."



Examples:

If you insert a DVD Video disc of an incorrect Region Code


"REGION CODE ERROR!" appears on the monitor, and "Please Eject" flashes on the display. (If the control panel is not yet closed, the disc ejects automatically.)

Disc structure

DVD

A DVD disc consists of **Titles**, and each title may be divided into **Chapters**.

For example, if a DVD disc contains some movies, each movie may have its own title number, and it may be further divided into chapters.

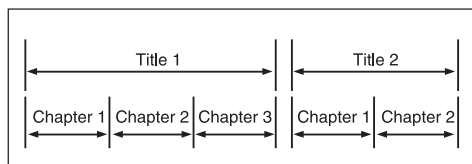


Video CD (VCD) and Audio CD (CD)

On the other hand, a VCD or CD consists of **Tracks**.

In general, each song has its own track number. (On some discs, each track may also be divided by **Indexes**.)

When playing back a VCD with the Playback Control (PBC) function, you can select what to view using the menu shown on the monitor. (While operating a VCD using the menu, some of the functions such as Repeat and Track Search may not work.)

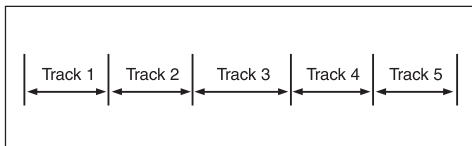


MP3 discs

MP3 is an abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. MP3 is simply a file format with a data compression. By using MP3 format, one CD-R or CD-RW can contain 10 times as much data as a regular CD can.

On an MP3 disc, files (also called “tracks” and both words are used interchangeably in this manual) are usually grouped into a folder. Folders can also include other folders, creating hierarchical layers of folders.

This unit can recognize up to 150 files per folder, and up to 99 folders per disc (up to 14,850 files). The unit ignores those exceeding the maximum number and cannot play them back.

- All folders on the disc are counted in the total number of 150, even a folder which does not include any MP3 files.

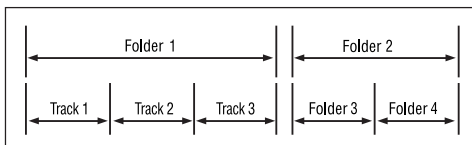

Notes for MP3 disc

- MP3 discs require a longer readout time, which differs due to the complexity of the folder/file configuration.
- This unit supports “multi-session” discs.
- This unit cannot play “packet write” discs.
- The unit can play MP3 files with the correct extension code—<.mp3> (case insensitive—any combination of upper and/or lower is acceptable)
- It is recommended that MP3 files be recorded at a sample rate of 44.1 kHz and at a data transfer rate of 128 kbps.
- If a file has a file name consisting of more than 62 characters, it will neither be recognized nor played back.
- For more information about MP3 discs, see “A Guide to MP3” (separate volume).

About sounds reproduced through the rear terminals

- **Through the analog terminals (Speaker out/LINE OUT/2nd AUDIO OUT):**

2-channel signal is emitted.

When playing a multi-channel encoded disc, multi-channel signals are downmixed.

(AUDIO—ANALOG DOWN MIX: see page 46)

- **Through DIGITAL OUT (optical):**

Digital signals (Linear PCM, Dolby Digital*, DTS**) are emitted through this terminal.

(For more details, see page 71.)

To reproduce multi-channel sounds such as Dolby Digital and DTS, connect an amplifier or a decoder compatible with these multi-channel sources to this terminal, and set “DIGITAL AUDIO OUTPUT” to the correct value. (See page 46.)

- **About Dual Zone**

While you are listening to the radio, CD changer, or external component through the speakers built into your car compartment, you can listen to the playback sound of this DVD/CD player using the headphones connected to the 2nd AUDIO OUT plug at the same time.


- For details, see “DUAL ZONE OPERATIONS” on page 30.

* Manufactured under license from Dolby Laboratories. “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.


** “DTS” and “DTS Digital Out” are trademarks of Digital Theater Systems, Inc.



BASIC DISC PLAYBACK

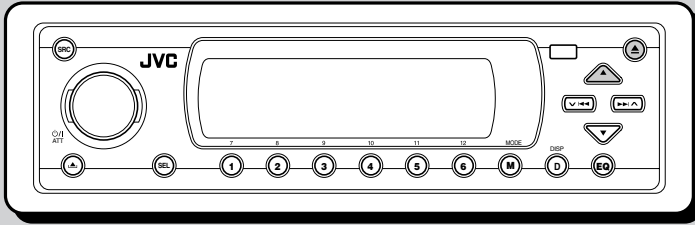

The following marks used in this manual indicate the playable discs.

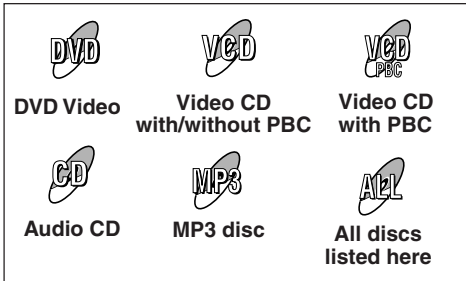

Before performing any operations, make sure the following...


- Turn on the monitor for playing a DVD or VCD. If you turn on the monitor, you can also control the CD and MP3 playback by referring to the monitor screen.
- For DVD playback, you can change the Setup Menu setting to your preference. (See pages 43 – 46.)
- When you want to operate the DVD/CD player using the buttons on the control panel, see “OTHER DISC OPERATIONS” on pages 35 to 42.

If “⊘” appears on the monitor when pressing a button, the disc cannot accept an operation you have tried to do.


- In some cases, without showing “⊘,” operations will not be accepted.

Starting playback

1 Open the control panel.

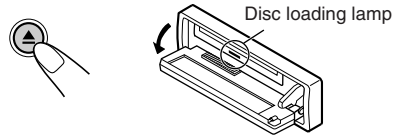

2 Insert a disc into the loading slot.

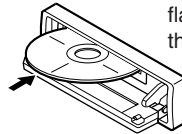


The disc loading lamp start flashing, and the unit draws in the disc automatically.


DO NOT insert a disc while the disc loading lamp is flashing* or is not lit**.

* Flashing: while loading or ejecting a disc
** Not lit: when a disc has been loaded.

3 Close the control panel by hand.

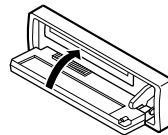

 
The disc type is automatically detected, and playback starts automatically. (If a disc is CD, VCD without the PBC function, or MP3, playback will be repeated until you stop it.)



- If a menu appears while playing a DVD or VCD with PBC function, see “Menu operations” on page 24.




• Display indications when inserting a DVD:

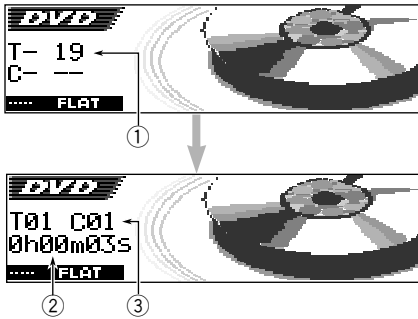


- ① Total title number
- ② Elapsed playing time of the current title
- ③ Current title number and chapter number

• Display indications when inserting a VCD or CD:

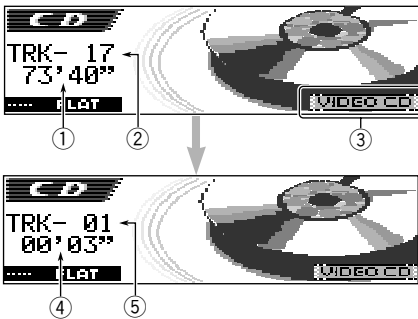

- ① Total playback time of the disc
- ② Total track number
- ③ VIDEO CD indicator: appears only when playing back a Video CD.
- ④ Elapsed playing time of the current track
- ⑤ Current track number

• Display indications when inserting an MP3 disc

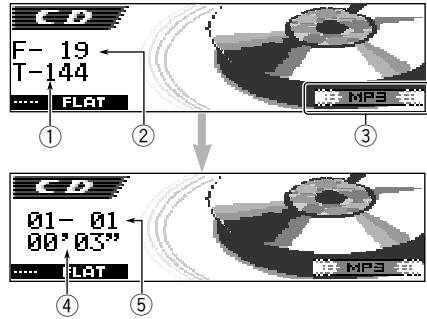

- ① Total track number
- ② Total folder number
- ③ MP3 indicator
- ④ Elapsed playing time of the current track
- ⑤ Current folder number and track number

Note:

When a new folder starts playing, its folder name is shown on the display (the display pattern automatically changes for a while—see page 42.)

Notes:

- When a disc is already in the loading slot, selecting “DISC” as the source starts disc play.
- This unit cannot read or play an MP3 file without the extension code <mp3>.
- When a disc is inserted upside down, the disc automatically ejects (if the control panel is open).
If the control panel is closed, the source changes to the previously selected source, “Please Eject” flashes on the display.



To stop playback temporarily

Press **II** on the remote controller. "Pause" flashes on the display.



- For DVD and VCD only: A still picture appears.

Frame by Frame Playback—You can advance the still picture frame by frame by pressing the **II** repeatedly.

To resume normal speed, press **▶**.

Slow Motion Playback— You can advance the still picture in slow motion by pressing **▶▶** or **◀◀**. Each time you press the button, the search speed changes as follows:



1/32 → 1/16 → 1/8 → 1/4 → 1/2

To resume normal speed, press **▶**.

Notes:

- No sound comes out during Reverse Slow Motion Playback
- When playing a VCD, Reverse Slow Motion Playback is prohibited.

To replay the previous scenes —One Touch Replay



Press **▶** on the remote controller (or **▲** (up) on the control panel) during play. The playback position moves back about 10 seconds before the current position.

Notes:

- This function works only within the same title.
- For some DVDs, this function does not work.

To stop playback

Press **■** on the remote controller.

- Except for MP3 discs: This unit can remember the end point (until the disc is ejected), and when you start playback again, playback begins from where it has been stopped. (Resume play)
- For MP3 discs: This unit can remember the last playing track (until the disc is ejected), and when you start playback again, playback begins from the beginning of the same track.

To eject a disc

Press **▲** on the control panel.

Playback stops and the control panel flips down. The disc comes out of the loading slot.

Locating a particular title/ chapter/track

To go to the next or previous chapter/tracks



• For DVD: During play or pause

Press **▶▶** to go ahead to the beginning of the next chapter/track. Each time you press the button, the beginning of the next chapter/track is located (and played back).

Press **◀◀** to go back to the beginning of the current chapter/track. Each time you press the button, the beginning of the previous chapter/track is located (and played back).

Note:

Playback will not start automatically if you locate the chapter/track while a disc is pausing or not playing.




To locate a particular title/chapter/track directly



- For DVD: During play or pause—select a chapter
While stopped—select a title
- For VCD: While PBC (see page 24) is not in use.

From the remote controller:

While holding SHIFT (S), press number buttons to select a title, chapter, or track number you want.

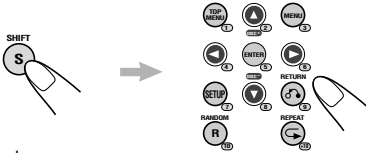


Examples:

- To select number 5, press 5 while pressing SHIFT (S).
- To select number 10, press 10 while pressing SHIFT (S).
- To select number 23, press +10, +10, then 3 while pressing SHIFT (S).

Notes:

- If you directly select the track number for a VCD with the PBC function while it is not playing, playback starts with PBC function canceled. (See page 24).
- Playback will not start automatically if you select a chapter or track during pause.

 Locating a particular folder



Press FOLDER (PRESET) ▲ to select the next folder. Each time you press the button, the next folder is located and the first track in it starts playing.

Press FOLDER (PRESET) ▼ to select the previous folder. Each time you press the button, the previous folder is located and the first track in it starts playing.

Note:

If a folder does not contain any MP3 tracks, it is skipped.

On-screen guide icons



During play, the following guide icons may appear for a while on the monitor.

- : Appears at the beginning of a scene containing multi-subtitle languages (for DVD only).
- : Appears at the beginning of a scene containing multi-audio languages (for DVD only).
- : Appears at the beginning of a scene containing multi-angle views (for DVD only).
- : Appears when you press ►.
- : Appears when you press II.
- : Appears when you start forward slow motion. (Slow motion speed also appears.) (for DVD and VCD only).
- : Appears when you start reverse slow motion. (Slow motion speed also appears.) (for DVD only).
- : Appears when you start forward search. (Search speed also appears.)
- : Appears when you start reverse search. (Search speed also appears.)
- : Appears when you select repeat mode (see page 28).



DVD/VCD SPECIAL FUNCTIONS

ENGLISH

Selecting subtitles




While playing a disc containing subtitles in different languages, you can select which subtitle to display.

- You can also set your favorite subtitle language as the initial language shown on the monitor. (See pages 43 to 45.)

Select a desired subtitle language.




The following pop-up window appears on the monitor. Each time you press the button, the subtitle language changes.

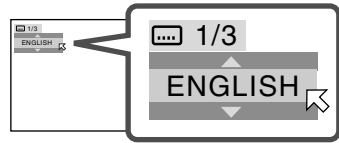

Ex. When the disc has 3 selections—
English, French, Spanish and no subtitle (OFF)

Notes:

- When the pop-up window is shown, you can also select the subtitle languages by pressing cursor buttons (▲/▼).
- For some DVDs and VCDs, changing the subtitle language without using the disc menu is prohibited.

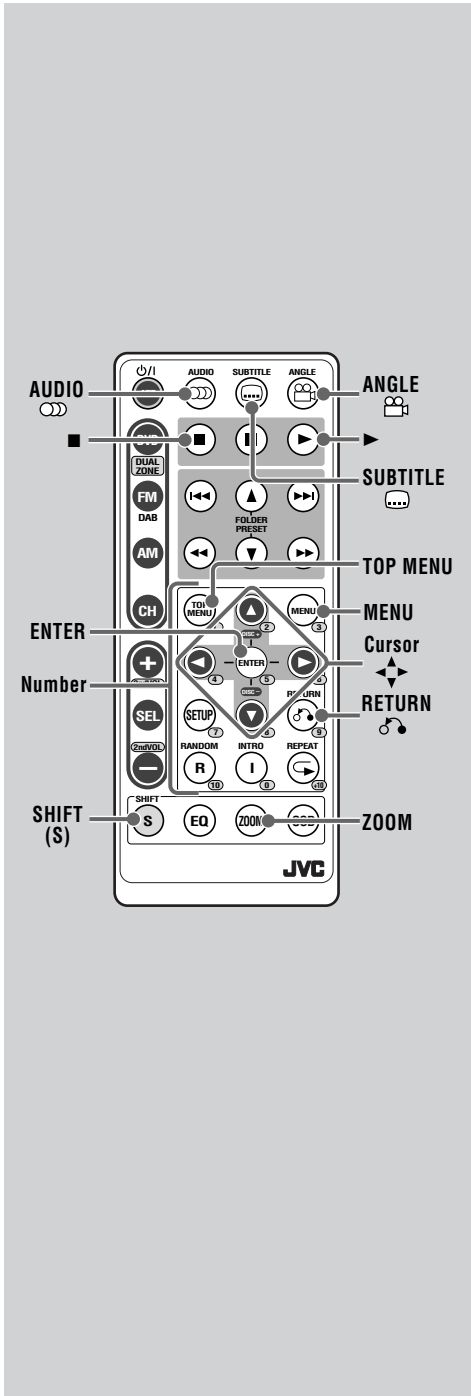



Selecting audio languages



For DVD:

While playing a disc containing multiple audio languages (ex. English, French, Spanish), you can select the language to listen to.

- You can also set your favorite language as the initial audio language. (See pages 43 to 45.)

For VCD:


When you play a VCD, you can select the audio channel to play. This is convenient when playing a Karaoke VCD.

Select a desired audio language (or audio channel).




The following pop-up window appears on the monitor. Each time you press the button, the audio language (or audio channel) changes.

• For DVD:

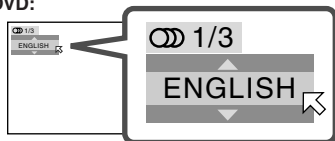

Ex. When the disc has 3 selections—English, French, and Spanish

• For VCD:

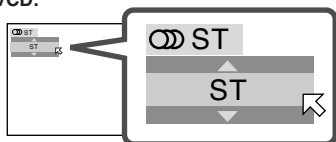

- ST: To listen to normal stereo (left/right) playback.
- L: To listen to the L (left) audio channel.
- R: To listen to the R (right) audio channel.

Notes:

- When the pop-up window is shown, you can also select the audio languages (or audio channels) by pressing cursor buttons (▲/▼).
- For some DVDs and VCDs, changing the audio language (or audio channel) without using the disc menu is prohibited.

Selecting multi-angle views




While playing a disc containing multi-angle views, you can view the same scene at different angles.

Select a desired view angle.



The following pop-up window appears on the monitor. Each time you press the button, the view angle changes.

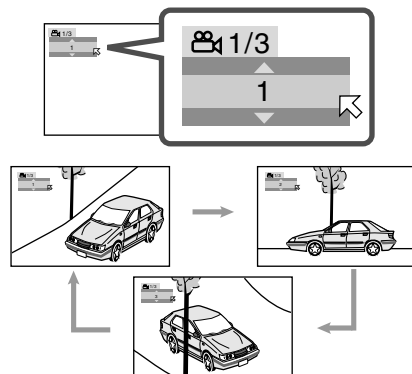

Ex.: When the disc has 3 multi-angle views

Note:

When the pop-up window is shown, you can also select the multi-angle views by pressing cursor buttons (▲/▼).



Menu operations



 
Menu-driven playback is possible while playing back a DVD with menu-driven features or a VCD with the PBC (PlayBack Control) function.

While playing a DVD:

DVD discs generally have their own menus or title lists. A title list usually contains titles of movies and songs recorded. On the other hand, a menu usually contains various information about the disc and playback selections.


1 Press TOP MENU or MENU.

A title list or menu will appear on the monitor.



2 Select the item you want from the menu or the title list, by pressing cursor buttons (▲ / ▼ / ► / ◀) then ENTER.

The unit starts playback of the selected item.

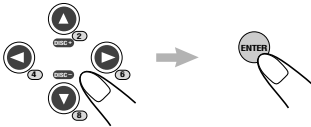

- On some discs, you can also select items by pressing the number buttons corresponding to the item numbers listed.

To cancel the title list or menu

Press TOP MENU or MENU.

If "⊘" appears on the monitor in step 1, the disc does not have a title list or menu.

While playing a VCD:

The PBC (PlayBack Control) function allows you to operate the VCD using menus. When you start playback, a menu will automatically appear on the monitor.

- A menu may be a list of items, divided screens, or some moving pictures.

Select the item you want from the menu.

- When a list of items is displayed on the monitor, press the number buttons to select an item.
- When "►" or "SELECT" is displayed on the monitor, press ► (or ENTER if pressing ► does not work) to start playback.

How to select items using the number buttons

- To select number 5, press 5 while pressing SHIFT (S).
- To select number 10, press 10 while pressing SHIFT (S).
- To select number 23, press +10, +10, then 3 while pressing SHIFT (S).

To return to the previous menu

Press RETURN ↵.

 


To cancel the PBC playback

You can cancel the menu-driven operations (PBC function):

- 1 Press ■ to stop playback.
- 2 Press number buttons to select a track. Normal playback starts from the selected track.

To resume the PBC function again, press TOP MENU or MENU.






Zoom in



You can zoom into a particular portion of the picture while playing a DVD or VCD.

2 Move the zoomed-in portion on the monitor.

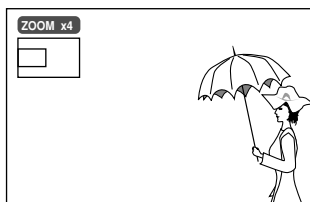


1 Zoom in to the picture.



The pop-up window appears on the monitor to show the current magnification. Each time you press the button, magnification change as follows:

→ x 2 → x 4 → x 8 → x 1 → x 2 → x 4 → x 8 → ...

Ex. When "ZOOM x4" is selected

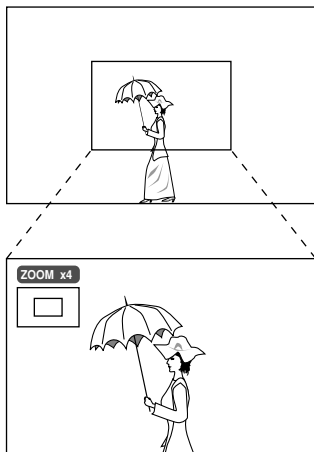

Note:


While zoomed in, the picture may look coarse.

To cancel Zoom, press ENTER or press ZOOM repeatedly until "ZOOM x1" appears.



ADVANCED DISC OPERATIONS

ENGLISH

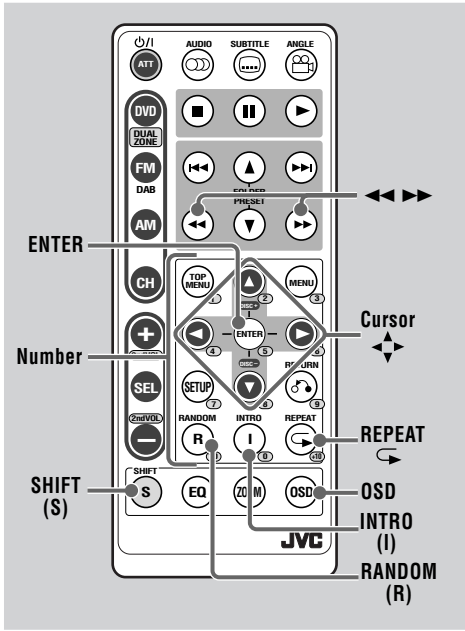

Notes:

* "x60" is only for DVD.

- When playing an MP3 disc, no sound comes out during Search.
- When playing a DVD or VCD, no sound comes out during x5, x10, x20, and x60 Search.
- Reverse Search stops automatically when it reaches the beginning of the disc. Playback resumes at normal speed.

Time Search



You can start playing a particular point by specifying the elapsed playing time of the current title (for DVD) and of the disc (CD and VCD).

- For DVD: During play or pause.
- For VCD: While PBC (see page 24) is not in use.

1 Press OSD twice.



The on-screen bar appears on the monitor.

- For details on the on-screen bar, see pages 32 and 33.




2 Move to (Time Search), then press ENTER.



The time entry window appears.

3 Press number buttons (0 to 9) to enter the time while holding SHIFT (S).

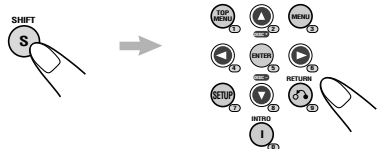

Searching for a particular point

Forward/Reverse Search



You can search for a particular point while playing a disc.

To fast-forward or reverse the chapter or track, press or while playing a disc.



Each time you press the button, the search speed changes as follows:

x2 → x5 → x10 → x20 → x60*

To resume normal speed, press .

When using the buttons on the control panel Press and hold or while playing a disc.

 
The search speed changes: x2 → x10.

- If you release the button, normal speed playback resumes.




Example (for DVD VIDEO)

To play back from 2(H):34(M):00(S)
Press number buttons 2, 3, then 4.




 To play back from 58(M):00(S)
Press number buttons 0, 5, then 8.



Example (for Video CD/Audio CD)

 To play back from 23(M):40(S)
Press number buttons 2, 3, then 4.



You do not have to press "0" to enter the trailing zeros.

To correct a mistake

Press cursor button ◀ repeatedly to move back to the digit where you entered a wrong number, and reenter the correct one.

4 Finish entry.



The unit starts playback from the specified time.

To erase the on-screen bar, press OSD once.

Chapter Search



You can select a specific chapter when a DVD is inserted.

1 Press OSD twice.



The on-screen bar appears on the monitor.

- For details about the on-screen bar, see pages 32 and 33.




2 Move [CHAP.] to [CHAP.] (Chapter Search), then press ENTER.



The chapter number entry window appears.

3 Press number buttons (0 to 9) to enter the chapter number while holding SHIFT (S).

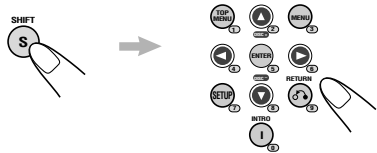

- To select number 5, press 5 while pressing SHIFT (S).
- To select number 10, press 1, then 0 while pressing SHIFT (S).
- To select number 23, press 2, then 3 while pressing SHIFT (S).

To correct a mistake

- To correct a two digit number, enter the correct number again.
- To correct a single digit number, press 0 first, then enter the correct number.

4 Finish entry.



The unit starts playback from the selected chapter.

To erase the on-screen bar, press OSD once.



Playing in various play modes

You can use any of three methods to activate various play modes.

- Using the direct buttons on the remote controller.
- Using the on-screen bar (see page 32).
- Using the buttons on the control panel (see page 38).

In the following explanation, how to use the direct buttons on the remote controller is explained.

Repeat Play



You can repeat a title, chapter, track, or disc endlessly.

- For VCD: While PBC (see page 24) is not in use.

Select the repeat mode you want.



The menu bar icon appears on the monitor to show the selected mode. Each time you press the button, the repeat mode changes as follows:

- For DVD:

- CHAP: Current (or specified) chapter will be repeated.
 - CHAP indicator appears on the monitor.
- TITLE: Current title will be repeated.
 - TITLE indicator appears on the monitor.
- OFF: Repeat Play is canceled.
 - OFF indicator appears on the monitor.

- For VCD/CD:

- TRACK: Current (or specified) track will be repeated.
 - TRACK indicator appears on the monitor.
- OFF: Track Repeat is canceled. All the tracks in the disc will be repeated.
 - OFF indicator appears on the monitor.

- For MP3:

- TRACK: Current (or specified) track will be repeated.
 - "REPEAT TRACK" appears on the MP3 CONTROL screen (see page 34).
- FOLDER: All the tracks in the current (or specified) folder will be repeated.
 - "REPEAT FOLDER" appears on the MP3 CONTROL screen (see page 34).
- OFF: Track Repeat and Folder Repeat is canceled. All the tracks in the disc will be repeated.

Notes:

- On some DVDs, Repeat Play may be canceled by the disc itself.
- On CD, VCD, and MP3 discs, Repeat Play mode cannot be turned off.
- Repeat Play mode will be canceled when you start playing back a VCD with the PBC function.



Random Play



You can play back tracks on a disc (or in a folder for MP3 discs) at random.


- For VCD: While PBC (see page 24) is not in use.

Select the random mode you want.



The menu bar icon appears on the monitor to show the selected mode. Each time you press the button, the random mode changes as follows:

 - For CD/VCD:



- DISC: All the tracks in the disc will be played at random.
 - **RND** indicator on the menu bar (see page 33) is highlighted in blue.
- OFF: Random Play is canceled.

- For MP3:



- FOLDER: All the tracks in the folder will be played at random, then move to the next folder and so on.
 - “RND FOLDER” appears on the MP3 CONTROL screen (see page 34).
- DISC: All the tracks in the disc will be played at random.
 - “RND DISC” appears on the MP3 CONTROL screen (see page 34).
- OFF: Random Play is canceled.

Intro Scan



You can play back the first 15 seconds of each track sequentially.


- For VCD: While PBC (see page 24) is not in use.

Select the intro scan mode you want.




The menu bar icon appears on the monitor to show the selected mode. Each time you press the button, the intro scan mode changes as follows:

 - For CD/VCD:



- TRACK: The beginnings of all the tracks in the disc will be played.
 - **INTRO** indicator on the menu bar (see page 33) is highlighted in blue.
- OFF: Intro Scan is canceled.

 
- For MP3:



- TRACK: The beginnings of all the tracks in the disc will be played.
 - “INTRO TRACK” appears on the MP3 CONTROL screen (see page 34).
- FOLDER: The beginnings of the first tracks in all folders will be played.
 - “INTRO FOLDER” appears on the MP3 CONTROL screen (see page 34).
- OFF: Intro Scan is canceled.



DUAL ZONE OPERATIONS

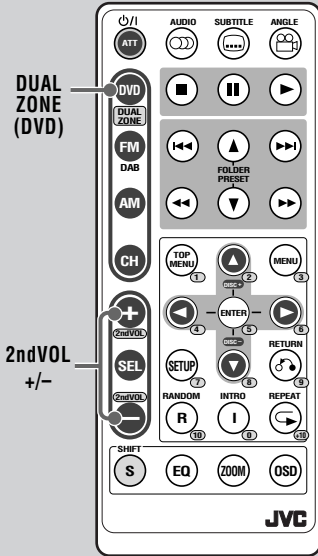

Listening with headphones



By connecting headphones to the 2nd AUDIO OUT plug on the rear, you can listen to the playback sound through the DVD/CD player while listening to another source (except AM) through the speakers.


 
You can activate Dual Zone while listening to any source.

- You can operate the DVD/CD player using the remote controller.

1 While holding SHIFT (S), press DUAL ZONE (DVD) to activate Dual Zone.



Each time you press DUAL ZONE (DVD), Dual Zone is turned "On" and "Off" alternately.

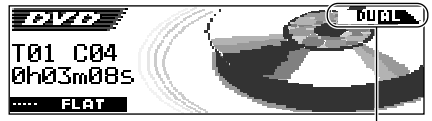

DUAL indicator appears.

- DO NOT put on the headphones while driving a car. It is dangerous to shut off the outside sounds while driving.
- DO NOT put on the headphones before adjusting the headphone volume level properly; otherwise, it may damage your hearing.

For Dual Zone operations, aim the remote controller at the remote sensor on the receiver as usual, not at the monitor.

The source automatically changes to "DISC."

To select a different source (except AM) to listen through the speakers, press SRC on the control panel. By using the buttons on the control panel, you can operate the newly selected source without affecting Dual Zone operations.



2 Adjust the headphone volume through the 2nd AUDIO OUT plug.



3 Operate the DVD/CD player using the remote controller by referring to the monitor screen.

- When Dual Zone is in use, you can only operate the DVD/CD player using the remote controller.

To control the other sources (except AM) while Dual Zone is activated, use the buttons on the control panel.

On the control panel:


 
 
You can also activate and deactivate Dual Zone, but can neither control the DVD/CD player nor adjust the headphone volume level.

- **To adjust the headphone level**, use the remote controller.

- 1 Press MODE (M) to enter the functions mode while listening to any source.
“Mode” appears on the display.



- 2 Press number button 6 while “Mode” is still on the display.

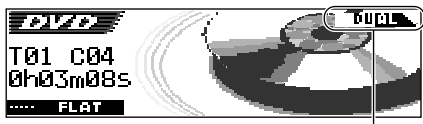

DUAL indicator appears.

The source automatically changes to “DISC.”

To cancel Dual Zone operations, repeat steps 1 and 2 (“Dual Zone Off” appears on the display.)

When the sounds through the rear speakers are troublesome while listening with the headphones

You can deactivate the rear speaker sound output.


- See also “Changing the general settings (PSM)” on page 50.
- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.
 - 2 Press number button 5 to select “AUDIO”—Audio category of the PSM settings.
 - 3 Press ►► ▲ or ▼ ◄◄ to select “Rear SPK.”
 - 4 Turn the control dial counterclockwise to select “Off.”
 - 5 Press SEL (select) to finish the setting.

To reactivate the rear speakers, repeat the same procedure and select “On” in step 4 by turning the control dial clockwise.



OSD DISC OPERATIONS

ENGLISH

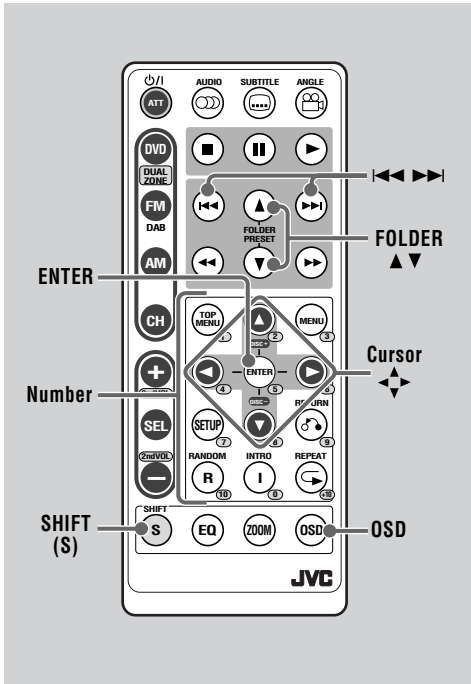

Operations on the monitor screen



You can show the on-screen bar on the monitor, and operate the disc using the on-screen bar.

Basic procedure for DVD, VCD and CD

1 Press OSD once.



A status bar for the type of disc inserted appears on the monitor.
• For details, see the left column.

Note:

When you start playing a CD, the status bar automatically appears.

2 Press OSD again.

 


A menu bar appears under the status bar.
• For details about the items on the menu bar, see page 33.

• For DVD



• For VCD



• For CD



Note:

While playing a CD Text, the disc information will also be shown on the monitor. (The maximum number of the characters shown on the monitor is 64, while 255 characters on the display of the receiver.)

Status bars for DVD, VCD, and CD

• For DVD

• For VCD/CD

- ① Disc type—DVD-VIDEO, VCD, CD
- ② Audio signal format type (only for DVD)
- ③ Current title number (only for DVD)
- ④ Current chapter number (only for DVD)
- ⑤ Time information
- ⑥ Current operation mode—▶, ||, ■, ▶▶, etc.
- ⑦ Current track number

Note:

While operating an MP3 disc on the monitor screen, see page 34.




3 Move to an item on the menu bar, then press ENTER.



The pull-down window for the selected items appears.



Ex. When selecting  (Repeat) for a DVD

When you select **INTRO** or **RND.**, the pull-down window does not appear. Skip the following steps.

- See the following explanation.

4 Select an option or enter a chapter number.

- For details, see the following explanation for each item.

5 Finish the setting.



The pull-down window goes off.

To erase the on-screen bar, press OSD once.

What you can do on the on-screen bars




TIME Change the time information on the status bar. Each time you press ENTER in step 4, the following time information alternately appears.

For DVD:


- TOTAL: Current title elapsed time
- T.REM: Current title remaining time
- TIME: Current chapter elapsed time
- REM: Current chapter remaining time

For VCD and CD:


- TIME: Current chapter elapsed time
- REM: Current track remaining time
- TOTAL: Disc elapsed time
- T.REM: Disc remaining time

 Select the Repeat Play modes. Each time you press cursor  or  in step 4, the repeat mode changes.




- For available repeat modes, see page 28.

 Activate Time Search. Press the number buttons to enter the elapsed time to a particular point in step 4.




- For details, see page 26.

CHAP.  Activate Chapter Search (only for DVD). Press the number buttons to enter a chapter number in step 4.




- For details, see page 27.

 Select multi-audio sound (for DVD) or playback channel (for VCD). Each time you press cursor  or  in step 4, multi-audio or playback channel changes.

- For details, see page 23.

 Select the subtitles (only for DVD). Each time you press cursor  or  in step 4, the subtitles change.

- For details, see page 22.

 Select the multi-angle views (only for DVD). Each time you press cursor  or  in step 4, the multi-angle view change.

- For details, see page 23.

INTRO Turns on and off Intro Scan (only for VCD and CD). Each time you press ENTER in step 3, Intro Scan modes change.

- For details, see page 29.

RND. Turns on and off Random Play (only for VCD and CD). Each time you press ENTER in step 3, Random Play modes change.

- For details, see page 29.



Basic procedure for MP3 discs



While playing an MP3 disc, the following MP3 CONTROL screen always shows on the monitor. By referring to this screen, you can easily operate the MP3 disc.

- Up to 32 characters can be shown for the file names on the monitor, while 62 characters on the display of the receiver.
- For more details about MP3 discs, refer to "A Guide to MP3" (separate volume).

MP3 CONTROL screen

The diagram shows the MP3 CONTROL screen with the following elements and callouts:

- 1:** REPEAT TRACK button
- 2:** Time: 00:03:08
- 3:** Cursor (highlighted position) pointing to the first track in the list.
- 4:** Folder: 01 / 10
- 5:** Folder names: spring, summer, fall, winter, sea
- 6:** Track list starting with begonia.mp3

MP3 CONTROL

Folder : 01 / 10
spring
summer
fall
winter
sea

Title : Begonia
Artist : Annie Lim
Album : Flowers

REPEAT TRACK

Time : 00:03:08

Track : 01 / 30 (Total 128)
begonia.mp3
german chamomile.mp3
kiwi fruit.mp3
orchard grass.mp3
petunia.mp3
north pole.mp3
begonia2.mp3
german chamomile2.mp3
kiwi fruit2.mp3
orchard grass2.mp3
petunia2.mp3
north pole2.mp3

- 1 Currently activated play mode
- 2 Elapsed playing time of the current track
- 3 Cursor (highlighted position)
- 4 ID3 Tag information (see page 68)
- 5 Folder column—folder names
(Ex. The first folder is selected out of 10 folders)
• Only 5 folders can be listed at a time.
- 6 Track column—track names
(Ex. The first track is selected out of 30 tracks in the current folder. 128 tracks are included in the disc)
• Only 12 tracks can be listed at a time.

Operations from the remote controller:

To select (highlight) a "Folder" column or "Track" column on the screen, press cursor ► or ◀.

To select a folder, press cursor ▲ or ▼ when the cursor (highlighted position) is in the "Folder" column.

If there are unshown folders, they will appear in this column as you selecting folders.

- By pressing FOLDER (PRESET) ▲ or FOLDER (PRESET) ▼, you can change the folder without respect to the cursor (highlighted) position.

To select a track, press cursor ▲ or ▼ when the cursor (highlighted position) is in the "Track" column.

If there are unshown tracks, they will appear in this column as you selecting tracks.

- By pressing ►► or ◀◀, you can change the tracks without respect to the cursor (highlighted) position.

To select Repeat Play modes, press REPEAT (↺) repeatedly until the Repeat Play mode you want appears on the screen.

- For details about the Repeat Play modes, see page 28.

To select Random Play modes, press RANDOM (R) repeatedly until the Random Play mode you want appears on the screen.


- For details about the Random Play modes, see page 29.

To select Intro Scan modes, press INTRO (I) repeatedly until the Intro Scan mode you want appears on the screen.

- For details about the Intro Scan modes, see page 29.

Note:

When using the buttons on the control panel, you can use various methods for performing the above operations. These different methods are explained in "OTHER DISC OPERATIONS" on pages 35 to 42.

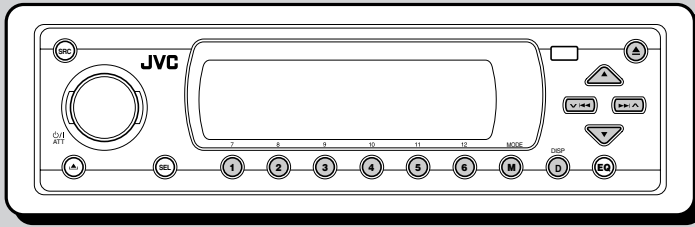

In this section, you can learn how to use the buttons on the control panel in order to operate the DVD/CD player.

Basic disc playback

To stop playback



Press ▼ (down).

- This unit can remember the end point, and when you start playback again, playback begins from where it has been stopped. (Resume play)

To start playback again



Press ▲ (up).

Playback begins from where it has been stopped.

Normally disc playback automatically starts in the following cases:

- **When you insert a disc**
Playback starts from the beginning of the disc.
- **When change the source to "DISC" (DVD/CD player) if a disc has been inserted**
Playback starts from where it has been stopped. (Resume play)

Note:

If you press the button during DVD playback, the playback position moves back about 10 seconds before the current position. (See page 20: One Touch Replay)


To eject a disc



Press ▲.

Playback stops and the control panel flips down. The disc comes out of the loading slot.

To fast-forward or reverse the chapter/track (Forward/Reverse Search)

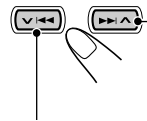

Press and hold ►►|▲, while playing a disc, to fast-forward the chapter/track. The search speed changes: x2 → x10.


Press and hold ▼|◄◄, while playing a disc, to reverse the chapter/track. The search speed changes: x2 → x10.

Notes:

- When playing an MP3 disc, no sound comes out during Search.
- When playing a DVD or VCD, no sound comes out during x10 Search.
- Reverse Search stops automatically when it reaches the beginning of the disc. Playback resumes at normal speed.

To go to the next or previous chapter/tracks

- For DVD: During play or pause.

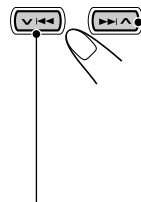

Press ►►|▲ briefly to go ahead to the beginning of the next chapter/track. Each time you press the button consecutively, the beginning of the next chapter/track is located and played back.

Press ▼|◄◄ briefly to go back to the beginning of the current chapter/track.

Each time you press the button consecutively, the beginning of the previous chapter/track is located and played back.

Note:

Playback will not start automatically if you locate the chapter/track while a disc is pausing or not playing.

 


Locating a title/chapter/track on a disc



To locate a particular title/chapter/track directly

- For DVD: During play or pause—select a chapter
While stopped—select a title
- For VCD: While PBC (see page 24) is not in use.



Press the number button corresponding to the title/chapter/track number to start its playback.

- To select a number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than 1 second.

Notes:

- If you directly select the track number for a VCD with the PBC function while it is not playing, playback starts with PBC function canceled. (See page 24).
- Playback will not start automatically if you select a chapter or track during pause.

To go to a chapter/track quickly



- For DVD: During play or pause.
- For VCD: While PBC (see page 24) is not in use.

- 1 Press MODE (M) to enter the functions mode.
“Mode” appears on the display.

MODE



While playing a DVD:



 
While playing a VCD or CD:



While playing an MP3 disc:



- 2 Press ▲ (up) or ▼ (down), while “Mode” is still on the display. First time you press ▲ (up) or ▼ (down), the chapter/track skips to the nearest higher or lower chapter/track with a chapter/track number of an even multiple ten (ex. 10th, 20th, 30th). Then, each time you press the button, you can skip 10 chapters/tracks (see “How to go to the desired chapter/track quickly” that follows).




Notes:

- For CD and VCD: If you perform this operation while a disc is not playing, playback will not start automatically.
- Except for DVD: After the last track, the first track will be selected, and vice versa.
- While playing an MP3 disc, this operation is possible only within a folder.




How to go to the desired chapter/track quickly


- Ex. 1: To select chapter/track number 32 while playing chapter/track number 6

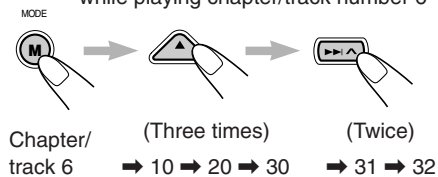

- Ex. 2 :To select chapter/track number 8 while playing chapter/track number 36

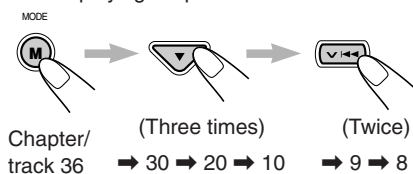

To skip to the next or previous folder

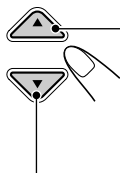

Press ▲ (up) while playing a disc to skip to the next folder. Each time you press the button consecutively, the next folder is located and the first track in the folder starts playing.

Press ▼ (down) while playing a disc to skip back to the previous folder. Each time you press the button consecutively, the previous folder is located and the first track in the folder starts playing.

Note:

If the folder does not contain any MP3 tracks, it is skipped.

Selecting a folder/track to play using the lists

 


You can show the folder name and track name lists on the display while playing a disc, then select the folder or track you want.

To select a folder and start playback

- 1 Press and hold ▲ (up) or ▼ (down) so that the folder name list of the inserted disc appears on the display.

The name of the currently playing folder will be highlighted on the display.




Current folder number



Notes:

- The display can show only six items at a time. You can show the other items on the next lists by pressing ▲ (up) or ▼ (down).
- If you press ▶▶|▲ or ▼|◀◀, the track name list of the current playing folder appears. (See the following column.)
- Only folders including MP3 tracks will be listed.

 
- 2 Select the number (1 – 6) for the folder you want to play.





To select a track and start playback



- 1 Press and hold ▲ (up) or ▼ (down) so that the folder name list of the inserted disc appears on the display.

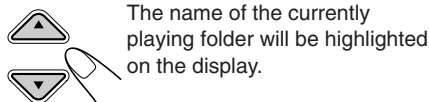


Current folder number



 - 2 Press ►► ▲ or ▼ ◀◀ to show the track list of the current folder.

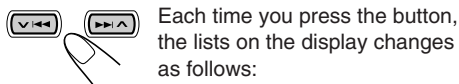


Current track number

 

Note:

The display can shows only six items at a time. You can show the other items on the next lists by pressing ▲ (up) or ▼ (down).

 - 3 Select the number (1 – 6) for the track you want to play.



Selecting playback modes

Repeat Play



 
You can repeat a title, chapter, track, or disc.

- For DVD: During play or pause.
- For VCD: While PBC (see page 24) is not in use.

- 1 Press MODE (M) to enter the functions mode. "Mode" appears on the display.




Ex. While playing a CD



Ex. While playing a DVD


- 2 Press number button 2, while "Mode" is still on the display. Each time you press the button, repeat play mode changes as follows:

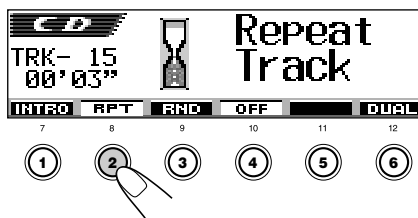

Ex. While playing a CD



 • For DVD:




- Chapter: Current (or specified) chapter will be repeated.
 - **C-RPT** indicator appears on the display.
- Title: Current title will be repeated.
 - **T-RPT** indicator appears on the display.
- Off: Repeat Play is canceled.

To cancel Repeat Play, select “Repeat Off” by pressing number button 2 repeatedly or press number button 4 in step 2.

Notes:

- On some DVDs, Repeat Play may be canceled by the disc itself.
- On CD, VCD, and MP3 discs, Repeat Play mode cannot be turned off.
- Repeat Play mode will be canceled when you start playing back a VCD with the PBC function.

 • For CD/VCD:



- Track: Current (or specified) track will be repeated.
 - **T-RPT** indicator appears on the display.
- Off: All the tracks in the disc will be repeated.

Random Play

 


You can play back tracks on a disc (or in a folder) at random.


- 1 Press MODE (M) to enter the functions mode. “Mode” appears on the display.
- 2 Press number button 3, while “Mode” is still on the display. Each time you press the button, Random Play mode changes as follows:



• For MP3:




- Track: Current (or specified) track will be repeated.
 - **T-RPT** indicator appears on the display.
- Folder: All the tracks in the current (or specified) folder will be repeated.
 - **F-RPT** indicator appears on the display.
- Off: All the tracks in the disc will be repeated.

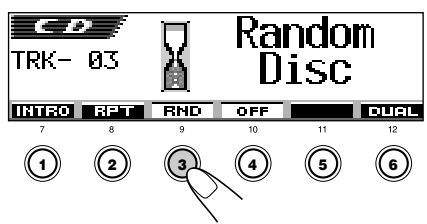

Ex. While playing a CD




 • For CD:



- Disc: All the tracks in the disc will be played at random.
 - **RND** indicator appears on the display.
- Off: Random Play is canceled.

 • For MP3:



- Folder: All the tracks in the folder will be played at random, then move to the next folder and so on.
 - **RND** indicator appears on the display.
- Disc: All the tracks in the disc will be played at random.
 - **RND** indicator appears on the display.
- Off: Random Play is canceled.

To cancel Random Play, select “Random Off” by pressing number button 3 repeatedly or press number button 4 in step 2.

Intro Scan




You can play back the first 15 seconds of each track sequentially.


- 1 Press MODE (M) to enter the functions mode. “Mode” appears on the display.



- 2 Press number button 1, while “Mode” is still on the display. Each time you press the button, Intro Scan play mode changes as follows:

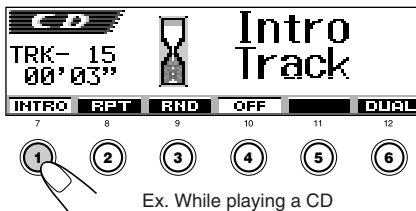


• For CD:

 

- Track: The beginnings of all the tracks in the disc will be played.
 - **INT** indicator appears on the display.
- Off: Intro Scan is canceled.

 • For MP3:



- Track: The beginnings of all the tracks in the disc will be played.
 - **INT** indicator appears on the display.
- Folder: The beginnings of the first tracks in all folders will be played.
 - **INT** indicator appears on the display.
- Off: Intro Scan is canceled.

To cancel Intro Scan, select “Intro Off” by pressing number button 1 repeatedly or press number button 4 in step 2.



Prohibiting disc ejection

You can prohibit disc ejection and can lock a disc in the loading slot.

While pressing SRC, press and hold ϕ /I ATT for more than 2 seconds.



"No Eject" flashes on the display for about 5 seconds, and the disc is locked and cannot be ejected.

To cancel the prohibition and unlock the disc While pressing SRC, press ϕ /I ATT again for more than 2 seconds.

"Eject OK" flashes on the display for about 5 seconds, and the disc is unlocked.



Changing the display pattern

By pressing DISP (D), you can change the information shown on the display.

- If the information cannot be shown at a time, it will scroll on the display. Some characters or symbols will not be shown (will be blanked or substituted) on the display.




Each time you press the button, the display patterns change as follows:

While playing a DVD:



While playing a VCD:

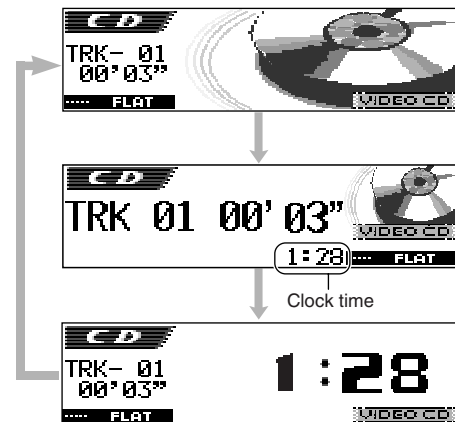




While playing a CD Text (or CD):



While playing an MP3 disc:

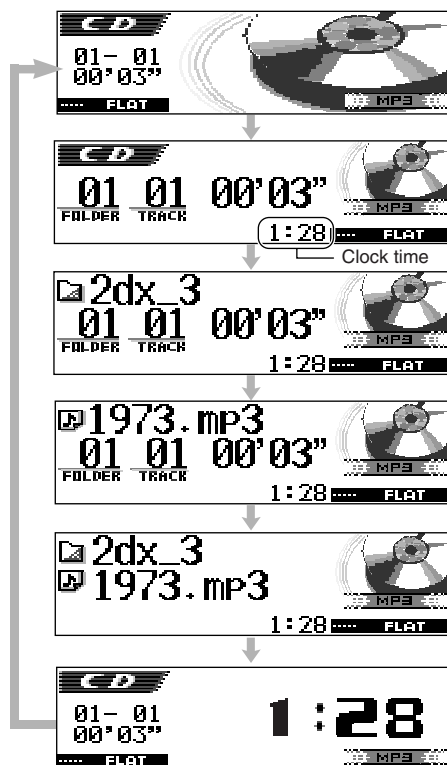


The above diagram shows examples of the display when "Tag" is set to "Off."

Notes:

- When the disc title/performer is shown, the (disc) indicator lights up. When the track title is shown, the (track) indicator lights up.
- If no name is assigned to the conventional CD, "NO NAME" will appear. To assign a name to a conventional CD, see page 57.
- If no disc title/performer or no track title is recorded for the CD Text, "NO NAME" will appear.


Notes:

- When the folder name is shown, the (folder) indicator lights up. When the file name is shown, the (file) indicator lights up.
- If "Tag" is set to "On" (see page 52), ID3 tag information will appear on the display if the disc has an ID3 tag. The (disc) indicator appears for album name/performer; while the (track) indicator appears for track title.

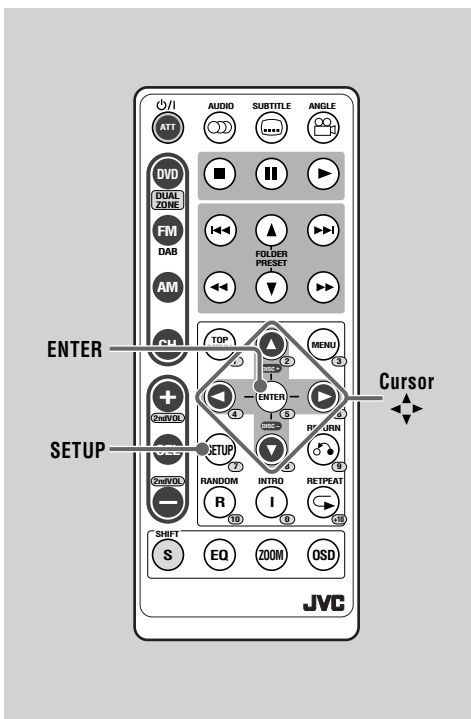



Basic setting procedure

1 Show the Setup menu (LANGUAGE menu) on the monitor.

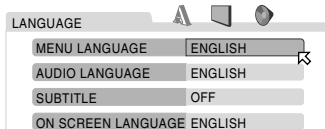



2 Select which Setup menu screen you want to use.

 Each time you press the button, the Setup menus change as follows:

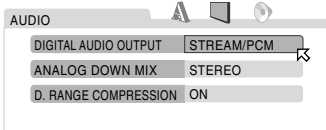

Ex. When selecting the AUDIO screen

  3 Move (cursor) to an item you want to set up.




Ex. When selecting ANALOG DOWN MIX

4 Press ENTER.



 The pop-up window listing the selectable options appear on the screen.



CONTINUED ON THE NEXT PAGE


You can store the initial selection for subtitle languages, audio languages, and other settings using the Setup Menu.

- DVD Setup menu can only be displayed while a disc, except MP3 disc, is inserted and selected for the playback source.

The following operations are only possible using the remote controller, and by referring to the monitor screen.



5 Move (cursor) to select an option.

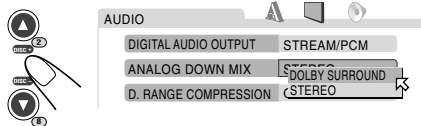


To set other items on the same menu screen

Repeat steps 3 to 6.

To set other items on other menu screens

Repeat steps 2 to 6.

 
6 Confirm and enter your selection.



To return to the normal screen


Press SETUP.

LANGUAGE

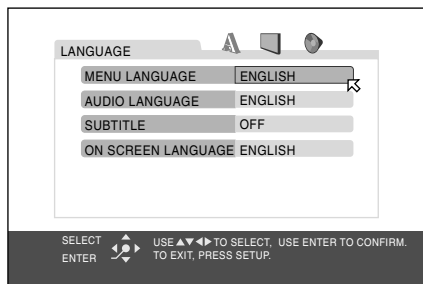


You can select the initial languages for the disc menu, audio, and subtitle. You can also select the language for the Setup menu and some indications shown on the monitor.

PICTURE

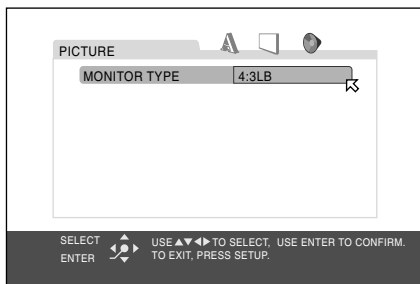



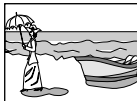
You can select the desired options concerning picture size on the monitor.

AUDIO

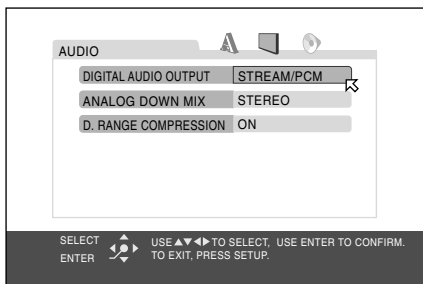

You can adjust the output sounds through this unit.

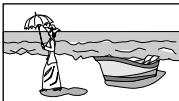

	Items	For what and options
LANGUAGE	MENU LANGUAGE *1	Select the initial disc menu language. ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, and language codes from AA to ZU (see page 67).
	AUDIO LANGUAGE *1	Select the initial audio language. ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, and language codes from AA to ZU (see page 67).
	SUBTITLE *1	Select the initial subtitle language. OFF (no subtitles), ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, and language codes from AA to ZU (see page 67).
	ON SCREEN LANGUAGE	Select the language for the Setup menu and some indications shown on the monitor. ENGLISH, SPANISH, and FRENCH
PICTURE	<p>MONITOR TYPE</p>  <p>16:9</p>  <p>4:3 LB</p>  <p>4:3 PS</p>	<p>Select the monitor type to watch a wide screen picture on your monitor.</p> <ul style="list-style-type: none"> • 16:9 NORMAL *2 Select this when the aspect ratio of your monitor is 16:9 and it does not have the screen size adjustment function. • 16:9 AUTO Select this when the aspect ratio of your monitor is 16:9 and it has the screen size adjustment function. • 4:3 LB (Letter Box) Select this when the aspect ratio of your monitor is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen. • 4:3 PS (Pan Scan) *3 Select this when the aspect ratio of your monitor is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.

*1 • When the language you have selected is not recorded on a disc, the original language is automatically used as the initial language. In addition, for some discs, the initial languages settings will not work as you set due to their internal disc programming.

• While playing (or pausing), you cannot change these languages. After you change any of these language settings, eject the disc and insert it (or another disc) again so that your setting takes effect.

*2 When you select "16:9 NORMAL" for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

*3 Even if "4:3 PS" is selected, the screen size may become "4:3 LB" with some DVDs. This depends on how they are recorded.



Items	For what and options
DIGITAL AUDIO OUTPUT	<p>Select the signal format to be emitted through the DIGITAL OUT (Optical) terminal on the rear.</p> <ul style="list-style-type: none">• PCM ONLY Select this when connecting an amplifier or a decoder incompatible with Dolby Digital and DTS, or connecting to a recording device.• DOLBY DIGITAL/PCM Select this when connecting an amplifier or a decoder compatible with Dolby Digital.• STREAM/PCM Select this when connecting an amplifier or a decoder compatible with Dolby Digital and DTS.
ANALOG DOWN MIX	<p>When playing back a multi-channel DVD disc, this setting affects the sounds reproduced through the analog terminals.</p> <ul style="list-style-type: none">• STEREO Normally select this to enjoy and reproduce conventional 2-channel stereo sound from the original multi-channel sounds.• DOLBY SURROUND Select this when you want to enjoy multi-channel surround audio by connecting an amplifier compatible with Dolby Surround to this receiver.
D.RANGE COMPRESSION	<p>You can enjoy a powerful sound at low or middle volume levels while playing a Dolby Digital software.</p> <ul style="list-style-type: none">• AUTO: Select this to apply the effect to multi-channel encoded software (excluding 1 channel and 2 channel software).• ON: Select this to always use this function.



Operations of this section are explained using the buttons on the control panel unless mentioned otherwise.

Adjusting the sound


 
You can adjust the sound characteristics to your preference.

- “Vol Adj” setting is required for each source except FM. Before starting “Vol Adj,” select an appropriate source for which you want to make an adjustment.

1 Select the item you want to adjust.



Each time you press the button, the adjustable items change as follows:

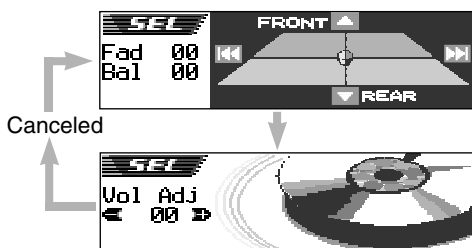


Note:

You can also use the SEL button on the remote controller to call up the fader/balance adjustment screen.

2 Make adjustments.

 - **To adjust fader and balance—Fad, Bal:** You can make these two adjustments at the same time, by referring to the indication on the display.



- Press ▲ (up) or ▼ (down) to adjust the fader.
- Press ►► | ▲ or ▼ | ◀◀ to adjust the balance.



Note:


You can also use the ►► | ▲ or ▼ | ◀◀ buttons and FOLDER PRESET ▲ (up) or FOLDER PRESET ▼ (down) on the remote controller for adjustment.

- **To adjust the input level of each source—Vol Adj:**

This setting is required for each source except FM. Before making an adjustment, select an appropriate source for which you want to make an adjustment.

Once you have made an adjustment, it is memorized, and you will not need to adjust the volume level each time you change the source.

Adjust to match the input level to the FM sound level.

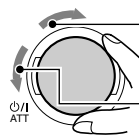

To increase the level

To decrease the level

Indication	To do:	Range
Fad*	Adjust the front and rear speaker balance.	R06 (Rear only) F06 (Front only)
Bal	Adjust the left and right speaker balance.	L06 (Left only) R06 (Right only)
Vol Adj	Adjust and store the input level of each source.	-12 (min.) +12 (max.)

* If you are using a two-speaker system, set the fader level to “00.”



Selecting preset sound modes (iEQ: intelligent equalizer)

You can select a preset sound mode (iEQ: intelligent equalizer) suitable to the music genre.

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step **1** again.


Available sound modes:

- | | |
|--|---------------------------------------|
| • FLAT
(Flat) | • Country
(Country music) |
| • H.ROCK
(Hard Rock) | • REGGAE
(Reggae) |
| • R & B
(Rhythm and Blues) | • CLASSIC
(Classical music) |
| • POP
(Popular music) | • USER 1 |
| • JAZZ
(Jazz music) | • USER 2 |
| • DANCE
(Dance music) | • USER 3 |

1 Press EQ (equalizer) once.



 Last selected sound mode is called up.




Ex.: If you have selected "Flat" previously


- If you press the button twice, the level meter selection screen appears (see page 10).

2 Press the number button to select the sound mode you want.

 - This unit has two sound mode selection screens. To move to the other screen, press ▲ (up) or ▼ (down).



Press ▲ (up) or ▼ (down).

 

To cancel the preset sound mode, select "FLAT" in step **2**.

To exit from the preset sound mode (iEQ), press EQ (equalizer) repeatedly or wait for about 5 seconds.

Note:

For details about the preset settings of each sound mode, see page 66.

 


Storing your own sound adjustments

You can adjust the sound modes to your preference and store your own adjustments in memory (User 1, User 2, and User 3).

- There is a time limit in doing the following procedure. If the setting is canceled before you finish, start from step 1 again.


1 Press EQ (equalizer) once.



Ex.: When you have selected "Country" previously


- If you press the button twice, the level meter selection screen appears (see page 10).

 2 Select the sound mode you want to adjust.




- This unit has two sound mode selection screens. To move to the other screen, press ▲ (up) or ▼ (down).

 
3 Enter the sound adjustment mode.



 The following sound mode adjustment screen appears on the display.



4 Make adjustments as you like.

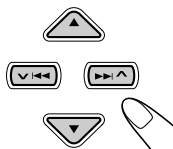

1) Press ►►, ▲ or ▼ ◀◀ to select the frequency band—60Hz, 150Hz, 400Hz, 1kHz, 2.4kHz, 6kHz, 12kHz.

 
2) Press ▲ (up) or ▼ (down) to adjust the level of the selected band within the range of -05 to +05.

3) Repeat steps 1) and 2) to adjust the other frequency bands.

5 Store the adjustment you made.





The confirmation message appears—whether you want to store the adjustment.



If you want to cancel the adjustments, press EQ (equalizer).

- Adjustment you made remains effective until you select another sound mode.

  6 Select one of the user sound modes (User 1, User 2, or User 3) you want to store into.



Ex.: When you select "User 1"



OTHER MAIN FUNCTIONS

Operations of this section are explained using the buttons on the control panel unless mentioned otherwise.

Changing the general settings (PSM)

 
You can change the items listed in the table on page 51 by using the PSM (Preferred Setting Mode) control.

- The PSM items are grouped into five categories—MOVIE, CLOCK, DISP (display), AUDIO, and COLOR.



Basic Procedure

Ex. To change “Contrast”

- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.




 - 2 Press number button (in this example, 3) to select one of the PSM categories.

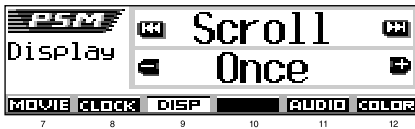


The first-listed item in the selected category appears.

 - 3 Select the PSM item you want to adjust.



- By pressing $\blacktriangleright \blacktriangle$ or $\blacktriangleleft \blacktriangleright$ repeatedly, you can also move to other categories.

- 4 Adjust the PSM item selected.

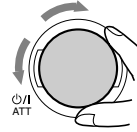

- 5 Repeat steps 2 to 4 to adjust the other PSM items if necessary.

- 6 Finish the setting.





Preferred Setting Mode (PSM) items

		Indications	Selectable values/items		Factory-preset settings	See page
MOVIE	Graphics	Movie demonstration	All Demo ↔ Int Demo ↙ ↘ Off ↙ ↘		All Demo	9, 52
	KeyIn CFM	Key in confirmation	Long ↔ Short ↙ ↘ Off ↙ ↘		Long	52
CLOCK	Clock Hr	Hour adjustment	1 – 12 (0 – 23)		1 (1:00)	9
	Clock Min	Minute adjustment	00 – 59		00 (1:00)	9
	24H/12H	24 hours or 12 hours	12Hours	24Hours	12Hours	10
DISP (display)	Scroll	Scroll mode	Once ↔ Auto ↙ ↘ Off ↙ ↘		Once	52
	Dimmer	Dimmer mode	↔ Auto ↔ Off ↔ ↙ Time Set ↔ On ↘		Auto	54
	From–To^{*1}	Dimmer time setting	Any time – Any time		6PM – 7AM	54
	Contrast	Contrast	1 – 10		5	52
	LCD Type	Display type	Positive ↔ Negative ↙ ↘ Auto ↙ ↘		Auto	52
	Font Type	Font type	1	2	1	52
	Tag	Tag display	Off	On	On	52
AUDIO	Beep	Key-touch tone	Off	On	On	53
	Ext Input^{*2}	External component	Changer	Line In	Changer	53
	Rear SPK	Rear speaker output	Off	On	On	31
COLOR	All SRC	Selected source	See page 55 for details		Every	55
	User	User color selection	Day	Night	Day	56
	R	Red	00 – 11		Day: 07/Night: 05	56
	G	Green	00 – 11		Day: 07/Night: 05	56
	B	Blue	00 – 11		Day: 07/Night: 05	56

*1 Displayed only when “Dimmer” is set to “Time Set.”

*2 Displayed only when one of the following sources is selected—FM, AM, and CD.



To set the movie demonstration—Graphics

When shipped from the factory, the movie has been activated.

- All Demo: If no operation is done for about 20 seconds, the movie demonstration starts automatically.
- Int Demo: If no operation is done for about 20 seconds, the movie demonstration and playback source indication appears alternately on the display.
- Off: Cancels the movie demonstration.

To select the source animation on the display—KeyIn CFM

When changing the source, the display shows the source animation. You can select the source animation on the display according to your preference.

- Long: A long source animation appears.
- Short: A short source animation appears.
- Off: Cancels the source animation.

To select the scroll mode—Scroll

You can select the scroll mode for the disc information (when the entire text cannot be shown at once).

- Once: Scrolls only once.
- Auto: Repeats the scroll (in 5-second intervals).
- Off: Cancels scroll mode.

Note:

Even if the scroll mode is set to “Off,” you can scroll the display by pressing DISP (D) for more than one second.

To adjust the display contrast level—Contrast

You can adjust the display contrast level among 1 to 10.

Adjust it to make the display indications clear and legible.

To select the display illumination pattern—LCD Type

You can select the display illumination patterns according to your preference.

- Auto: Positive pattern will be selected during the day time (depending on the “Dimmer” setting); on the other hand, negative pattern will be used during the night time (depending on the “Dimmer” setting).
- Positive: Positive (normal) pattern of the display.
- Negative: Negative pattern of the display.

To select the font on the display—Font Type

You can change the font types used on the display. Select either “1” or “2” according to your preference.

To turn the tag display on or off—Tag

An MP3 file can contain file information called “ID3 Tag” where its album name, performer, track title, etc. are recorded.

There are two versions—ID3v1 (ID3 Tag version 1) and ID3v2 (ID3 Tag version 2). Only ID3v1 can be shown.

- On: Turns on the ID3 tag display while playing MP3 files.
 - If an MP3 file does not have ID3 tags, folder name and file name appear.

Note:

If you change the setting from “Off” to “On” while playing an MP3 file, the tag display will be activated when the next file starts playing.

- Off: Turns off the ID3 tag display while playing MP3 files. (Only the folder name and file name can be shown.)



To turn on/off the key-touch tone—Beep

You can deactivate the key-touch tone if you do not want it to beep each time you press a button.

- On: Activates the key-touch tone.
- Off: Deactivates the key-touch tone.

To select the external component to use—Ext Input

You can connect an external component to the CD changer jack on the rear using the Line Input Adapter KS-U57 (not supplied).

To use the external component as the playback source through this unit, you need to select which component—CD changer or external component—to use.

- Changer: To use the CD changer.
- Line In: To use the external component other than CD changer.

Note:

For connecting the Line Input Adapter KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).

You can use the following table to keep memo of your own PSM settings.

MOVIE	Graphics			
	KeyIn CFM			
CLOCK	Clock Hr			
	Clock Min			
	24H/12H			
DISP (display)	Scroll			
	Dimmer			
	From-To			
	Contrast			
	LCD Type			
	Font Type			
	Tag			
AUDIO	Beep			
	Rear SPK			
	Ext Input			
COLOR	All SRC			
	CD			
	Changer			
	Line in			
	FM			
	AM			
	User Day	R	G	B
	User Night	R	G	B



Selecting the dimmer mode

You can dim the display at night automatically or as you set the timer. When shipped from the factory, Auto Dimmer mode is activated.

 
Note:

Auto Dimmer supplied with this unit may not work correctly on some vehicles, particularly on those having a control dial for dimming. In this case, select any setting other than "Auto."

1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (PSM: See pages 51.)




2 Press number button 3 to select "DISP"—Display category of the PSM settings.



3 Press >>> ^ or v <<< to select "Dimmer."



4 Set the dimmer mode to your preference.

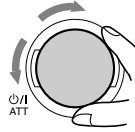



- Auto: Activates Auto Dimmer. When you turn on the car head lights, the display automatically dims.
- Off: Cancels Auto Dimmer.
- On: Always dims the display.
- Time Set: Used to set the timer for the dimmer function.

Note:

Selecting "Auto" or "Time Set" may change the display pattern to the "Negative" or "Positive" pattern if "LCD Type" is set to "Auto."

- If you select "Time Set," go to the following steps to set the timer.
- If you select any setting other than "Time Set," go to step 7 to finish the setting.

  5 Select "From-To" to set the timer for the dimmer mode.



6 Set the timer.

- 1 Turn the control dial to select the start time.
- 2 Press >>> ^ once.
- 3 Turn the control dial to select the end time.

7 Finish the setting.





Changing the display color

You can set the display color using the PSM control. You can select your favorite color for each source (or for all sources). You can also create your own colors, and set them as the display color.

 
Setting the desired color for each source

Once you have set the color for each source (or for all sources), the display illuminates in the selected color when the source is selected.

- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.** (PSM: See pages 51.)





- 2 Press number button 6 to select "COLOR"—Color category of the PSM settings.**




The "All SRC" setting screen appears on the display.

  - 3 Select the source—All SRC, CD, Changer (Line), FM, or AM—that you want to set the display color for.**



*1 When you select "All SRC," the same color will be used for all sources.
 *2 Either component which is selected in the "Ext Input" setting appears.

- 4 Select the display color.**

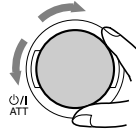

As you turn the control dial, the colors change as follows:

- Every*1 ⇄ Aqua ⇄ Sky ⇄ Sea ⇄
 Leaves ⇄ Grass ⇄ Red ⇄ Rose ⇄
 Amber ⇄ Honey ⇄ Violet ⇄ Cotton ⇄
 Snow ⇄ User*2 ⇄ (back to the beginning)

*1 When you select "Every," the color changes every 2 seconds (changing to every color listed above except "User").
 *2 When you select "User," the user-edited colors—"Day" and "Night" will be applied. (See page 56.)

- 5 Repeat steps 3 and 4 to select the color for each source (except when selecting "All SRC" in step 3).**

- If you want to apply different colors to the different sources, select any source other than "All SRC" before finish the setting.

- 6 Finish the setting.**





Creating your own color—User

You can create your own colors—“Day” and “Night,” and select them as the display color for any desired source.

- Day: Can be used as your user color during the day time (while the headlights are turned off), or as set by the timer—“From – To.”
- Night: Can be used as your user color during the night time (while the headlights are turned on), or as set by the timer—“From – To.”

1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display. (PSM: See pages 51.)



2 Press number button 6 to select “COLOR”—Color category of the PSM settings.



The source/color selecting screen appears on the display.

 
3 Select “User” as a color.




The user color will be applied to the currently selected source (the one shown on the upper portion of the display. In this example “All SRC”).

To select which source to apply your user color to, select the target source first by pressing ▲ (up) or ▼ (down), before selecting “User” in this step.


4 Select the user color adjustment screen.



 One of the user color adjustment screens appears. “User Day” or “User Night” is shown on the left side of the display.



5 Select either “Day” or “Night” to make an adjustment for.

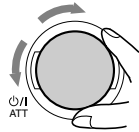

6 Adjust the selected user color.

1) Press ►► ▲ or ▼ ◀◀ to select one of three primary colors—“R” (red), “G” (green), and “B” (blue).



2) Press ▲ (up) or ▼ (down) to adjust the selected primary color.

You can adjust within the range of 00 to 11.

3) Repeat steps 1) and 2) to adjust the other primary colors.

7 Repeat steps 5 and 6 to adjust the other user colors—“Day” or “Night.”

8 Finish the setting.





Assigning names to the sources

You can assign names to station frequencies, CDs (both in this unit and in the CD changer), and the external component.

After assigning a name, it will appear on the display when you select the source.

Sources	Maximum number of characters
Station frequencies	Up to 10 characters (up to 30 station frequencies including both FM and AM)
CDs*	Up to 32 characters (up to 40 discs)
External component	Up to 8 characters

* You can assign a name only to conventional CDs.

1 Select a source you want to assign a name to.



When you select a source, the power automatically comes on.

2 While pressing DISP (D), press and hold SEL (select) for more than 2 seconds.

 


Ex.: When you select "DISC" as the source


3 Select the character set you want while the first character position is flashing.



Each time you press the button, the character set changes as follows:




4 Select a character.

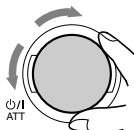

- About the available characters, see page 66.

 5 Move the cursor to the next (or previous) character position.



6 Repeat steps 3 to 5 until you finish entering the name.

7 Finish the procedure while the last selected character is flashing.



To erase entered characters

Insert spaces using the same procedure described above.

Notes:

- When you try to assign a name to the 41st disc or to the 31st station frequency, "Name Full" appears and you cannot enter the text entry mode. In this case, delete unwanted names before assignment.
- When the CD changer is connected, you can assign names to CDs in the CD changer. These names can also be shown on the display if you insert the CDs in this unit.



Detaching the control panel


You can detach the control panel when leaving the car.

When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.


Detaching the control panel

Before detaching the control panel, be sure to turn off the power.


- 1** Unlock the control panel.

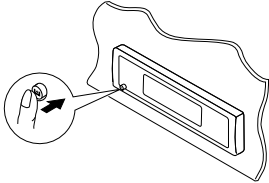

- 2** Pull the control panel out of the unit.

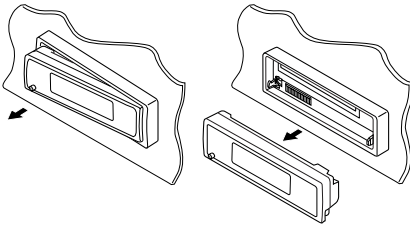


- 3** Put the detached control panel into the provided case.

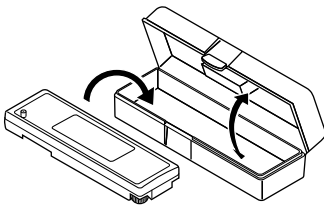


Attaching the control panel

- 1** Insert the right side of the control panel into the groove on the panel holder.

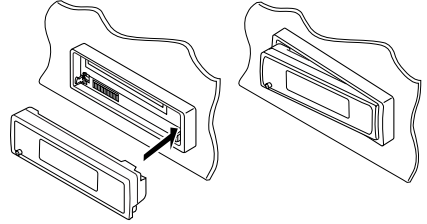


- 2** Press the left side of the control panel to fix it to the panel holder.

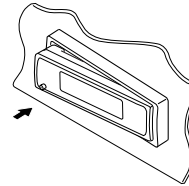


Note on cleaning the connectors:

If you frequently detach the control panel, the connectors will deteriorate.

To minimize this possibility, periodically wipe the connectors with a cotton swab or cloth moistened with alcohol, being careful not to damage the connectors.

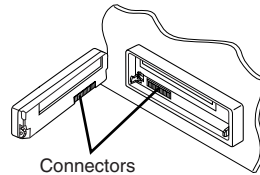

CD CHANGER OPERATIONS

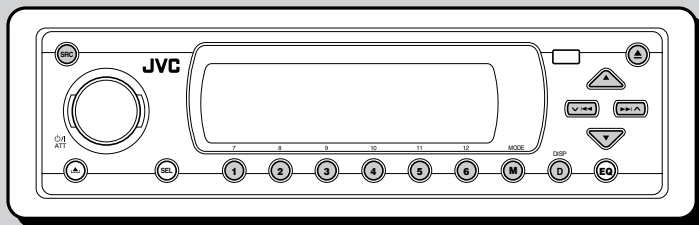

Operations of this section are explained using the buttons on the control panel unless mentioned otherwise.

We recommend that you use the JVC MP3-compatible CD changer with your unit.

By using this CD changer, you can play back your original CD-Rs (Recordable) and CD-RWs (Rewritable) recorded either in audio CD format or in MP3 format.

- You can also connect other CH-X series CD changers (except CH-X99 and CH-X100). However, they are not compatible with MP3 discs, so you cannot play back MP3 discs.
- You cannot use the KD-MK series CD changers with this unit.

Before operating your CD changer:

- Refer also to the Instructions supplied with your CD changer.
- If no discs are in the magazine of the CD changer or the discs are inserted upside down, "No Disc" will flash on the display. If this happens, remove the magazine and position the discs correctly.
- If no magazine is loaded in the CD changer, "No Magazine" flashes on the display. If this happens, insert the magazine in the CD changer.
- If "Reset 1" – "Reset 8" flashes on the display, something is wrong with the connection between this unit and the CD changer. If this happens, check the connection and make sure the cords are connected firmly. Then, press the reset button of the CD changer.

Note:

You cannot play back a DVD and a VCD on the CD changer.

Playing discs

Select the CD changer (CD-CH).




Each time you press the button, the source changes as described on page 8. When you select a source, the power automatically comes on.

Notes:

- You can also use the CH button on the remote controller.
- If you have changed the "Ext Input" setting to "Line In" (see page 53), you cannot select the CD changer.

When the current disc is an MP3 disc:

Playback starts from the first folder of the current disc once file check is completed.

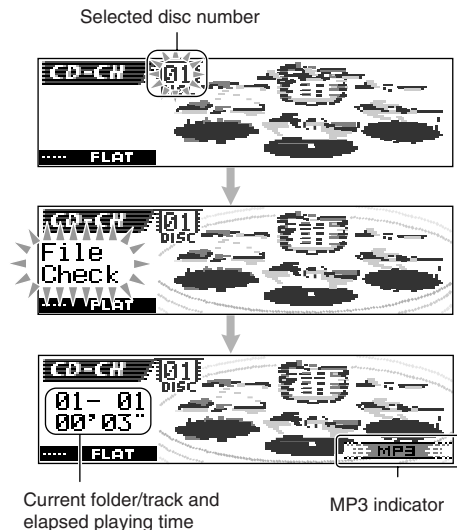

Current folder/track and elapsed playing time

MP3 indicator

- **When the current disc is a CD:**
Playback starts from the first track of the current disc.

Selected disc number



Current track and elapsed playing time

Note:

If you change the source, CD changer play also stops. Next time you select the CD changer as the source, CD changer play starts from where playback has been stopped previously.

To change the display information

While playing back a disc, you can change the disc information shown on the display.

 


Press DISP (D) repeatedly. Each time you press the button, the display changes.

- For details, see pages 41 and 42.

To go to a particular disc directly

Press the number button corresponding to the disc number to start its playback (while the CD changer is playing).




- To select a disc number from 1 – 6:
Press 1 (7) – 6 (12) briefly.
- To select a disc number from 7 – 12:
Press and hold 1 (7) – 6 (12) for more than one second.

Note:

You can also use the DISC +/- buttons on the remote controller to select a disc.


To fast-forward or reverse the track

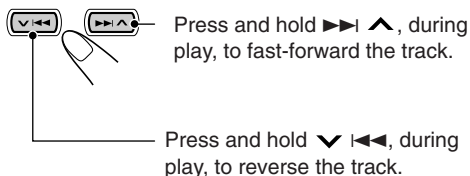

Note:

During this operation on an MP3 disc, you can only hear intermittent sounds. (The elapsed playing time also changes intermittently on the display.)

To go to the next or previous tracks

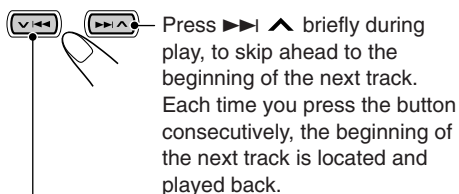

Press **▼** **◀◀** briefly during play, to skip back to the beginning of the current track. Each time you press the button consecutively, the beginning of the previous track is located and played back.

This operation is only possible when using JVC MP3-compatible CD changer (CH-X1500).

 
To go to a track quickly

- 1 Press MODE (M) to enter the functions mode while playing a disc.

MODE "Mode" appears on the display.



- 2 Press ▲ (up) or ▼ (down).



To skip 10 tracks* forward to the last track



To skip 10 tracks* backward to the first track

- * The first time you press ▲ (up) or ▼ (down) button, the track skips to the nearest higher or lower track with a track number of an even multiple ten (ex. 10th, 20th, 30th).


Then each time you press the button, you can skip 10 tracks (see "How to go to the desired track quickly" on the right column).

Notes:


- After the last track, the first track will be selected, and vice versa.
- If the current playing disc is an MP3 disc, tracks are skipped within the same folder.

How to go to the desired track quickly

- Ex. 1: To select track number 32 while playing track number 6

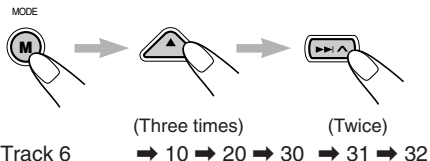

- Ex. 2: To select track number 8 while playing track number 36

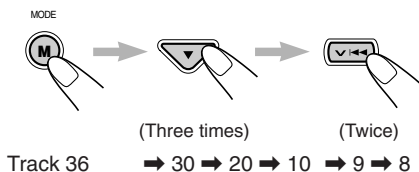

To skip to the next or previous folder (only for MP3 discs)



Press ▲ (up) while playing an MP3 disc, to go to the next folder.

Each time you press the button consecutively, the next folder is located, and the first track in the folder starts playback.

Press ▼ (down) while playing an MP3 disc, to go to the previous folder.

Each time you press the button consecutively, the previous folder is located, and the first track in the folder starts playback.

Note:

 
 
If the folder does not contain any MP3 tracks, it is skipped.

To select a disc using the disc lists

If you forget what discs are loaded in the CD changer, you can show the disc title list and select a disc in the list shown on the display.

- The display can show only six disc names at a time.

- 1 While playing a disc, press and hold ▲ (up) or ▼ (down) until a disc name list appears on the display.




Selected disc number


Note:

If a disc has a disc title (CD Text) or an assigned disc name, it will be shown on the display. However, if the disc has not been played before, its disc number will appear.

 - 2 Press ▲ (up) or ▼ (down) to show the other disc name list, if necessary.




 - 3 Select the number (1 – 6) for the disc you want to play.




While playing an MP3 disc, you can also show the folder list(s) and track list(s) on the display, then select a folder or track.

 
- 1 While playing an MP3 disc, press and hold ▲ (up) or ▼ (down) until a disc name list appears on the display.



 - 2 Press ►► ▲ or ▼ ◀◀ to show a folder list of the current disc or track list of the current folder.



 Each time you press the button, lists on the display changes as follows:




Current folder number



Ex.: When folder list is selected

 Current track number




Ex.: When track list is selected

Note:

The display can show only six items at a time. You can show the other items on the next lists by pressing ▲ (up) or ▼ (down).

 - 3 Press the number button for the disc, folder, or track you want to play.



Selecting the playback modes

To play back tracks repeatedly (Repeat Play)

From the remote controller:



Press REPEAT (↻) repeatedly until the Repeat Play mode you want is selected.

On the control panel:

 
- 1 Press MODE (M) to enter the functions mode during play. "Mode" appears on the display.



- 2 Press number button 2 repeatedly while "Mode" is still on the display. Each time you press the button, Repeat Play mode changes as follows:



For MP3 discs:






For CDs:



Note:

MP3 indicator also lights up if the current playing disc is an MP3 disc.

Mode	Active indicator	Plays repeatedly
Repeat Track	 RPT indicator lights up.	The current (or specified) track.
Repeat Folder*	 RPT indicator lights up.	All tracks of the current (or specified) folder of the current disc.
Repeat Disc	 RPT indicator lights up.	All tracks of the current (or specified) disc.

* "Repeat Folder" is only applicable for MP3 disc.

To cancel Repeat Play, select "Repeat Off" by pressing number button 2 repeatedly or press number button 4 in step 2.

To play back tracks at random (Random Play)

From the remote controller:



Press RANDOM (R) repeatedly until the Random Play mode you want is selected.

 
On the control panel:

- 1 Press MODE (M) to enter the functions mode during play. "Mode" appears on the display.






2 Press number button 3 repeatedly while "Mode" is still on the display. Each time you press the button, Random Play mode changes as follows:



For MP3 discs:

 

For CDs:



Note:

MP3 indicator also lights up if the current playing disc is an MP3 disc.

Mode	Active indicator	Plays at random
Random Folder*	RND indicator lights up.	All tracks of the current folder, then tracks of the next folder and so on.
Random Disc	RND indicator lights up.	All tracks of the current (or specified) disc.
Random All	ALL RND indicator lights up.	All tracks of all discs inserted in the magazine.

* "Random Folder" is only applicable for MP3 disc.

To cancel Random Play, select "Random Off" by pressing number button 3 repeatedly or press number button 4 in step 2.

To play back only intros (Intro Scan)

 
From the remote controller:



Press INTRO (I) repeatedly until the Intro Scan mode you want is selected.

On the control panel:


1 Press MODE (M) to enter the functions mode during play. "Mode" appears on the display.



2 Press number button 1 repeatedly while "Mode" is still on the display. Each time you press the button, Intro Scan mode changes as follows:



 For MP3 discs:



For CDs:




Note:

MP3 indicator also lights up if the current playing disc is an MP3 disc.

Mode	Active indicator	Plays the beginnings (15 seconds) of
Intro Track	INT indicator lights up.	All tracks of the current disc.
Intro Folder*	INT indicator lights up.	The first track of every folder of the current disc.
Intro Disc	INT indicator lights up.	The first tracks of the inserted discs.

* "Intro Folder" is only applicable for MP3 disc.

To cancel Intro Scan, select "Intro Off" by pressing number button 1 repeatedly or press number button 4 in step 2.

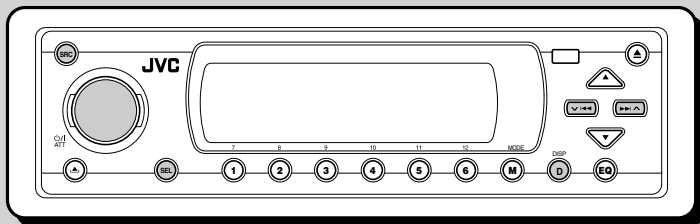

Operations of this section are explained using the buttons on the control panel unless mentioned otherwise.

Playing an external component

You can connect the external component to the CD changer jack on the rear using the Line Input Adapter KS-U57 (not supplied).

Preparation:

For connecting the Line Input Adapter KS-U57 and the external component, refer to the Installation/Connection Manual (separate volume).

Before operating the external component, select the correct external input correctly by following the procedure below.

- See also “Changing the general settings (PSM)” on page 50.

- 1 Press and hold SEL (select) for more than 2 seconds so that one of the PSM items appears on the display.
- 2 Press number button 5 to select “AUDIO”—Audio category of the PSM settings.
- 3 Press $\blacktriangleright\blacktriangleright$ \blacktriangle or \blacktriangledown $\blacktriangleleft\blacktriangleleft$ to select “Ext Input”*.
- 4 Turn the control dial clockwise to select “Line In.”
- 5 Press SEL (select) to finish the setting.

 
- For details, see “To select the external component to use—Ext Input” on page 53.

* Displayed only when one of the following sources is selected—FM, AM, and CD.

1 Select the external component (LINE IN).



Each time you press the button, the source changes as described on page 8. When you select a source, the power automatically comes on.



* Displayed only when one of the following sources is selected—FM, AM, and CD.

2 Turn on the connected component and start playing the source.

3 Adjust the volume.



4 Adjust the sound characteristics you want. (See pages 47 – 49.)

Note:

You can also change the display pattern by pressing DISP (D) repeatedly.



ADDITIONAL INFORMATION

Sound modes (preset frequency level settings)

The list below shows the preset frequency level settings for each sound mode.

- You can adjust the preset sound modes temporarily. However, your temporary adjustments will be reset when you select another sound mode.

Sound Mode	Preset equalizing values						
	60 Hz	150 Hz	400 Hz	1 kHz	2.4 kHz	6 kHz	12 kHz
Flat	00	00	00	00	00	00	00
Hard Rock	+03	+03	+01	00	00	+02	+01
R & B	+03	+02	+02	00	+01	+01	+03
Pop	00	+02	00	00	+01	+01	+02
Jazz	+03	+02	+01	+01	+01	+03	+02
Dance Music	+04	+02	00	-02	-01	+01	+01
Country	+02	+01	00	00	00	+01	+02
Reggae	+03	00	00	+01	+02	+02	+03
Classic	+02	+03	+01	00	00	+02	00
User 1	00	00	00	00	00	00	00
User 2	00	00	00	00	00	00	00
User 3	00	00	00	00	00	00	00

Available characters

You can use the following characters to assign names to stations, CDs, and external component. (See page 57.)

Capital letters

A	B	C	D	E
F	G	H	I	J
K	L	M	N	O
P	Q	R	S	T
U	V	W	X	Y
Z	space			

Small letters

a	b	c	d	e
f	g	h	i	j
k	l	m	n	o
p	q	r	s	t
u	v	w	x	y
z	space			

Numbers and symbols

0	1	2	3	4
5	6	7	8	9
!	"	#	\$	%
&	'	()	*
+	,	-	.	/
:	;	<	=	>
?	@	_	`	space

LANGUAGE CODES




Code	Language	Code	Language	Code	Language
AA	Afar	KA	Georgian	SN	Shona
AB	Abkhazian	KK	Kazakh	SO	Somali
AF	Afrikaans	KL	Greenlandic	SQ	Albanian
AM	Ameharic	KM	Cambodian	SR	Serbian
AR	Arabic	KN	Kannada	SS	Siswati
AS	Assamese	KO	Korean (KOR)	ST	Sesotho
AY	Aymara	KS	Kashmiri	SU	Sundanese
AZ	Azerbaijani	KU	Kurdish	SV	Swedish
BA	Bashkir	KY	Kirghiz	SW	Swahili
BE	Byelorussian	LA	Latin	TA	Tamil
BG	Bulgarian	LN	Lingala	TE	Telugu
BH	Bihari	LO	Laothian	TG	Tajik
BI	Bislama	LT	Lithuanian	TH	Thai
BN	Bengali, Bangla	LV	Latvian, Lettish	TI	Tigrinya
BO	Tibetan	MG	Malagasy	TK	Turkmen
BR	Breton	MI	Maori	TL	Tagalog
CA	Catalan	MK	Macedonian	TN	Setswana
CO	Corsican	ML	Malayalam	TO	Tonga
CS	Czech	MN	Mongolian	TR	Turkish
CY	Welsh	MO	Moldavian	TS	Tsonga
DA	Danish	MR	Marathi	TT	Tatar
DZ	Bhutani	MS	Malay (MAY)	TW	Twi
EL	Greek	MT	Maltese	UK	Ukrainian
EO	Esperanto	MY	Burmese	UR	Urdu
ET	Estonian	NA	Nauru	UZ	Uzbek
EU	Basque	NE	Nepali	VI	Vietnamese
FA	Persian	NL	Dutch	VO	Volapuk
FI	Finnish	NO	Norwegian	WO	Wolof
FJ	Fiji	OC	Occitan	XH	Xhosa
FO	Faroese	OM	(Afan) Oromo	YO	Yoruba
FY	Frisian	OR	Oriya	ZU	Zulu
GA	Irish	PA	Panjabi		
GD	Scots Gaelic	PL	Polish		
GL	Galician	PS	Pashto, Pushto		
GN	Guarani	PT	Portuguese		
GU	Gujarati	QU	Quechua		
HA	Hausa	RM	Rhaeto-Romance		
HI	Hindi	RN	Kirundi		
HR	Croatian	RO	Rumanian		
HU	Hungarian	RU	Russian		
HY	Armenian	RW	Kinyarwanda		
IA	Interlingua	SA	Sanskrit		
IE	Interlingue	SD	Sindhi		
IK	Inupiak	SG	Sangho		
IN	Indonesian	SH	Serbo-Croatian		
IS	Icelandic	SI	Singhalese		
IW	Hebrew	SK	Slovak		
JI	Yiddish	SL	Slovenian		
JW	Javanese	SM	Samoan		




4:3 Letterbox Screen

This is one method for displaying a wide screen picture on a conventional sized (4:3) TV. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

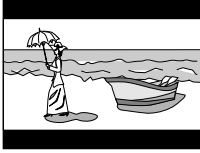

4:3 Pan-Scan Screen

This is one method for displaying a wide screen picture on a conventional sized (4:3) TV. While viewing a wide screen picture, the left and right edges of the pictures will not be shown on the screen.

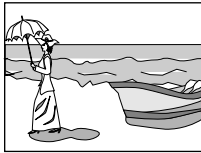

Dolby Digital

This is a digital audio compression technology that was developed by Dolby Laboratories. Dolby Digital encoding method (so-called discrete 5.1 channel digital audio format) records and compresses digitally signals of the left front channel, right front channel, center channel, left rear channel, right rear channel, and LFE channel (total 6 channels, but LFE channel is counted as 0.1 channel, therefore called 5.1 channels) signals digitally. Each channel is completely independent from other channel signals to avoid interference; therefore, you can obtain much better sound quality with stereo and surround effects.

To reproduce these original surround signals, you need to connect an amplifier or a decoder compatible with Dolby Digital.

DTS Digital Surround

This is another discrete 5.1 channel digital audio format, available on CD, LD, and DVD software, developed by Digital Theater Systems, Inc. Compared to Dolby Digital, the audio compression rate is relatively low. This fact allows DTS Digital Surround format to add breadth and depth to the reproduced sounds. As a result, DTS Digital Surround features natural, solid and clear sound.

To reproduce these surround signals, you need to connect an amplifier or a decoder compatible with DTS Digital Surround.

ID3 Tag (MP3)

An MP3 file can contain file information called "ID3 Tag" where its album name, performer, track title, etc. are recorded.

There are two versions—ID3v1 (ID3 Tag version 1) and ID3v2 (ID3 Tag version 2). Only ID3v1 can be shown.

Linear PCM

This is a digital recording format that is used for audio CDs.

Playback Control (VCD)

When a VCD has the PBC (Playback Control) function, you can use menu-driven operations and enjoy high-resolution still pictures.

Sampling Frequency, Quantization Bits

When analog signals are converted into digital signals, they are divided into many points and digitized. This dividing method is called "sampling." The sampling frequency indicates how many points one second is divided into—for example, for CD sound, one second is divided into 44100 points since its sampling frequency is 44.1 kHz. On the other hand, the number of quantization bits indicates the volume size used to memorize each divided point.

The larger this number is, the clearer the sound can be reproduced.

TROUBLESHOOTING



What appears to be trouble is not always serious. Check the following points before calling a service center.

	Symptoms	Causes	Remedies
General	<ul style="list-style-type: none"> • Sound cannot be heard from the speakers. 	The volume level is set to the minimum level.	Adjust it to the optimum level.
		Connections are incorrect.	Check the cords and connections.
	<ul style="list-style-type: none"> • This unit does not work at all. 	The built-in microcomputer may have functioned incorrectly due to noise, etc.	Press the reset button on the panel holder after detaching the control panel. (The clock setting and preset stations stored in memory are erased.) (See page 2.)
	<ul style="list-style-type: none"> • “Panel Connect Error” appears on the display. 	The control panel is not attach correctly and firmly.	Remove the control panel, wipe the connectors, then attach it again. (See page 58.)
	<ul style="list-style-type: none"> • No sound comes out of the 2nd AUDIO OUT plug. 	Dual Zone is not activated	Activate Dual Zone.
FM/AM	<ul style="list-style-type: none"> • SSM (Strong-station Sequential Memory) automatic preset does not work. 	Signals are too weak.	Store stations manually.
	<ul style="list-style-type: none"> • Static noise while listening to the radio. 	The antenna is not connected firmly.	Connect the antenna firmly.
	<ul style="list-style-type: none"> • AM band cannot be selected. 	Dual Zone is activated.	Deactivate Dual Zone.
Disc Playback	<ul style="list-style-type: none"> • Disc cannot be played back. 	Disc is inserted upside down.	Insert the disc correctly.
	<ul style="list-style-type: none"> • CD-R/CD-RW cannot be played back. • Tracks on the CD-R/CD-RW cannot be skipped. 	CD-R/CD-RW is not finalized.	<ul style="list-style-type: none"> • Insert a finalized CD-R/CD-RW. • Finalize the CD-R/CD-RW with the component which you used for recording.
	<ul style="list-style-type: none"> • Disc cannot be ejected. 	Disc is locked.	Unlock the disc. (See page 41.)
	<ul style="list-style-type: none"> • Disc cannot be recognized. 	The CD player may function incorrectly.	While holding SRC, press SEL for more than 2 seconds to eject the disc.



	Symptoms	Causes	Remedies
Disc Playback	<ul style="list-style-type: none"> Sound and picture are sometimes interrupted or distorted. 	You are driving on rough roads.	Stop playback while driving on rough roads.
		Disc is scratched.	Change the disc.
		Connections are incorrect.	Check the cords and connections.
	<ul style="list-style-type: none"> "No Disc" flashes on the display. 	No disc in the loading slot.	Insert a disc into the loading slot.
		Disc is inserted incorrectly.	Insert the disc correctly.
	<ul style="list-style-type: none"> No playback picture (DVD, VCD) appears on the monitor. 	Parking brake wire is not connected.	Connect the wire (see Installation/Connection Manual).
	<ul style="list-style-type: none"> No picture appears on the monitor at all. 	The video cord is not connected correctly.	Connect the video cord correctly
		An incorrect input has been selected on the TV or monitor.	Select a correct input on the TV or monitor.
	<ul style="list-style-type: none"> The left and right edges of the picture are missing on the screen. 	"4:3 PS" is selected when viewing on a conventional TV (aspect ratio 4:3).	Select "4:3 LB." (See page 45.)
	<ul style="list-style-type: none"> Disc can be neither played back nor ejected. 	The built-in microcomputer may function incorrectly due to noise, etc.	Turn off the power, then turn it on again.
	<ul style="list-style-type: none"> MP3 disc is skipped or cannot be played back. 	MP3 files do not have the extension code—mp3 in their file names.	Add the extension code —mp3 to their file names.
		MP3 files are not recorded in a format compliant with ISO 9660 Level 1, ISO 9660 Level 2, Romeo, or Joliet.	Change the disc. (Record MP3 files using a compliant application.)
	<ul style="list-style-type: none"> Noise is generated while playing an MP3 disc. 	The file played back is not an MP3 file (although it has the extension code—mp3).	Skip to another file or change the disc. (Do not add the extension code—mp3 to non-MP3 files.)
<ul style="list-style-type: none"> MP3 files cannot be played back in the order you have intended them to play. 	Playback order is determined when the files are recorded.	_____	
<ul style="list-style-type: none"> Elapsed playing time is not correct for an MP3 disc. 	This sometimes occurs during play. This is caused by how the files are recorded on the disc.	_____	



Symptoms	Causes	Remedies
<ul style="list-style-type: none"> • “No Disc” flashes on the display. 	No disc is in the magazine.	Insert discs into the magazine.
	Discs are inserted upside down.	Insert discs correctly.
	Discs are unplayable.	Insert playable discs.
	The current disc does not contain any MP3 files.	Insert a disc that contains MP3 files.
<ul style="list-style-type: none"> • “No Magazine” flashes on the display. 	No magazine is loaded in the CD changer.	Insert the magazine.
<ul style="list-style-type: none"> • “Reset 8” flashes on the display. 	This unit is not connected to the CD changer correctly.	Connect this unit and the CD changer correctly and press the reset button on the CD changer.
<ul style="list-style-type: none"> • “Reset 1” – “Reset 7” flashes on the display. 	_____	Press the reset button on the CD changer.
<ul style="list-style-type: none"> • The CD changer does not work at all. 	The built-in microcomputer may function incorrectly due to noise, etc.	Press the reset button on the panel holder after detaching the control panel. (The clock setting and preset stations stored in memory are erased.) (See page 2.)

CD Changer

Output signals through the DIGITAL OUT terminal

They differ depending on the “DIGITAL AUDIO OUT” setting on the Setup Menu.

DIGITAL AUDIO OUT Playback Disc	Output Signals		
	PCM ONLY	DOLBY DIGITAL/PCM	STREAM/PCM
DVD 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM *		
96 kHz, Linear PCM	None		
with Dolby Digital	48 kHz, 16 bit Linear PCM	Dolby Digital bitstream	
with DTS	48 kHz, 16 bit Linear PCM		DTS bitstream
Video CD, Audio CD	44.1 kHz, 16 bit Linear PCM		
Audio CD with DTS	44.1 kHz, 16 bit Linear PCM		DTS bitstream
MP3	Linear PCM		

* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the DIGITAL OUT terminal if the discs are not copy-protected.



Handling discs

This unit has been designed to reproduce DVD-Videos, VCDs, CDs, CD-Rs (Recordable), CD-RWs (Rewritable), and CD Texts.

• **This unit is also compatible with MP3 discs.**

How to handle discs

When removing a disc from its case, press down the center holder of the case and lift the disc out, holding it by the edges.

Center holder



• Always hold the disc by the edges. Do not touch its recording surface.

When storing a disc into its case, gently insert the disc around the center holder (with the printed surface facing up).

• Make sure to store discs into the cases after use.

To keep discs clean

A dirty disc may not play correctly. If a disc does become dirty, wipe it with a soft cloth in a straight line from center to edge.



To play new discs

New discs may have some rough spots around the inner and outer edges. If such a disc is used, this unit may reject the disc.

To remove these rough spots, rub the edges with a pencil or ball-point pen, etc.



Moisture condensation

Moisture may condense on the lens inside the CD player in the following cases:

- After starting the heater in the car.
- If it becomes very humid inside the car.

Should this occur, the CD player may malfunction. In this case, eject the disc and leave the unit turned on for a few hours until the moisture evaporates.

When playing a CD-R or CD-RW

Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.

- Use only “finalized” CD-Rs or CD-RWs.
- Some CD-Rs or CD-RWs may not play back on this unit because of their disc characteristics, and for the following reasons:
 - Discs are dirty or scratched.
 - Moisture condensation on the lens inside the unit.
 - The pickup lens inside the unit is dirty.
- CD-RWs may require a longer readout time since the reflectance of CD-RWs is lower than that of regular CDs.
- CD-Rs or CD-RWs are susceptible to high temperatures or high humidity, so do not leave them inside your car.
- Do not use the following CD-Rs or CD-RWs:
 - Discs with stickers, labels, or a protective seal stuck to the surface.
 - Discs on which labels can be directly printed by an ink jet printer.

Using these discs under high temperatures or high humidity may cause malfunctions or damage to discs. For example,

- Stickers or labels may shrink and warp a disc.
 - Stickers or labels may peel off so discs cannot be ejected.
 - Print on discs may get sticky.
- Read instructions or cautions about labels and printable discs carefully.

CAUTIONS:

- Do not insert any disc of unusual shape—like a heart or flower; otherwise, it will cause a malfunction.
- Do not expose discs to direct sunlight or any heat source or place them in a place subject to high temperature and humidity. Do not leave them in a car.
- Do not use any solvent (for example, conventional record cleaner, spray, thinner, benzene, etc.) to clean discs.

Warped disc



Sticker



Sticker residue

Disc



Stick-on label

AUDIO AMPLIFIER SECTION

Maximum Power Output:

Front: 50 W per channel

Rear: 50 W per channel

Continuous Power Output (RMS):

Front: 19 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Rear: 19 W per channel into 4 Ω , 40 Hz to 20 000 Hz at no more than 0.8% total harmonic distortion.

Load Impedance: 4 Ω (4 Ω to 8 Ω allowance)

Equalizer Control Range:

Frequencies: 60 Hz, 150 Hz, 400 Hz, 1 kHz, 2.4 kHz, 6 kHz, 12 kHz

Level: ± 10 dB

Signal-to-Noise Ratio: 70 dB

Audio output level:

Analog (2nd AUDIO OUT): 6 mW (at 16 Ω)

Digital (DIGITAL OUT: Optical):

Signal wave length: 660 nm

Output level: -21 dBm to -15 dBm

Line-Out Level/Impedance:

2.0 V/20 k Ω load (full scale)

Output Impedance: 1 k Ω

Color system: NTSC

Video output (composite): 1 V_{p-p}/75 Ω

TUNER SECTION

Frequency Range:

FM: 87.5 MHz to 107.9 MHz

AM: 530 kHz to 1 710 kHz

[FM Tuner]

Usable Sensitivity: 11.3 dBf (1.0 μ V/75 Ω)

50 dB Quieting Sensitivity: 16.3 dBf (1.8 μ V/75 Ω)

Alternate Channel Selectivity (400 kHz): 65 dB

Frequency Response: 40 Hz to 15 000 Hz

Stereo Separation: 35 dB

Capture Ratio: 1.5 dB

[AM Tuner]

Sensitivity: 20 μ V

Selectivity: 35 dB

DVD/CD PLAYER SECTION

Signal Detection System: Non-contact optical pickup (semiconductor laser)

Number of channels: 2 channels (stereo)

Frequency Response:

DVD, fs=48 kHz: 16 Hz to 22 000 Hz

DVD, fs=96 kHz: 16 Hz to 44 000 Hz

VCD, CD, MP3: 16 Hz to 20 000 Hz

Dynamic Range: 96 dB

Signal-to-Noise Ratio: 98 dB

Wow and Flutter: Less than measurable limit

MP3 recording format: MPEG 1/2 Audio Layer 3

Max. Bit rate: 320 Kbps

GENERAL

Power Requirement:

Operating Voltage:

DC 14.4 V (11 V to 16 V allowance)

Grounding System: Negative ground

Allowable Operating Temperature:

0°C to +40°C (32°F to 104°F)

Dimensions (W \times H \times D):

Installation Size (approx.):

182 mm \times 52 mm \times 158 mm

(7-3/16" \times 2-1/16" \times 6-1/4")

Panel Size (approx.):

188 mm \times 58 mm \times 12 mm

(7-7/16" \times 2-5/16" \times 1/2")

Mass (approx.):

1.7 kg (3.8 lbs) (excluding accessories)

Design and specifications are subject to change without notice.

If a kit is necessary for your car, consult a telephone directory for the nearest car audio speciality shop.

About mistracking:

Mistracking may result from driving on extremely rough roads. This does not damage the unit and the disc, but will be annoying.

We recommend that you stop disc play while driving on such rough roads.



JVC

MOBILE
ENTERTAINMENT

<http://www.jvcmobile.com>

Visit us on-line for

Technical Support & Customer Satisfaction Survey.

US RESIDENTS ONLY

**Having TROUBLE with operation?
Please reset your unit**

**Refer to page of How to Reset
Still having trouble??**

USA ONLY

Call 1-800-252-5722

<http://www.jvc.com>

We can help you!

JVC

VICTOR COMPANY OF JAPAN, LIMITED



EN, SP, FR

© 2003 VICTOR COMPANY OF JAPAN, LIMITED



0303MNMDWJEIN


JVC KD-DV5000

Installation/Connection Manual

Manual de instalación/conexión

Manuel d'installation/raccordement

LVT1053-002A
[J]

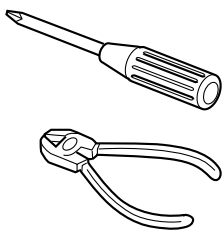

0303MNMMDWJEIN
EN, SP, FR

ENGLISH

- This unit is designed to operate on 12 V DC, NEGATIVE ground electrical systems.

WARNINGS

- DO NOT install any unit in locations where;
 - it may obstruct the steering wheel and gearshift lever operations, as this may result in a traffic accident.
 - it may obstruct the operation of safety devices such as air bags, as this may result in a fatal accident.
 - it may obstruct visibility.
- DO NOT operate any unit while manipulating the steering wheel, as this may result in a traffic accident.
- The driver must not watch the monitor while driving. If the driver watches the monitor while driving, it may lead to carelessness and cause an accident.
- The driver must not put on the headphones while driving. It is dangerous to shut off the outside sounds while driving.
- If you need to operate the unit while driving, be sure to look ahead carefully or you may be involved in a traffic accident.
- If the parking brake is not engaged, "DRIVER MUST NOT WATCH THE MONITOR WHILE DRIVING." appears on the monitor, and no playback picture will be shown.
 - This warning appears only when the parking brake wire is connected to the parking brake system built in the car.

ESPAÑOL

- Esta unidad está diseñada para funcionar con 12 V de CC, con sistemas eléctricos de masa NEGATIVA.

ADVERTENCIAS

- NO instale la unidad en los siguientes sitios:
 - Donde pueda obstruir la maniobra del volante de dirección y del cambio de engranajes, con el consiguiente riesgo de accidentes de tráfico.
 - Donde pueda obstruir el funcionamiento de dispositivos de seguridad tales como bolsas de aire, pues podría resultar en un accidente fatal.
 - Donde pueda obstruir la visibilidad.
- NO OPERE la unidad mientras está maniobrando el volante de dirección, pues podría producirse un accidente de tráfico.
- El conductor no debe mirar el monitor mientras conduce. Si el conductor mira el monitor mientras conduce puede descuidarse y causar un accidente.
- El conductor no deberá ponerse los auriculares mientras conduce. Es muy peligroso no escuchar los ruidos exteriores durante la conducción.
- Si necesita operar el receptor mientras conduce, asegúrese de mirar atentamente hacia adelante para no provocar un accidente de tráfico.
- Si no está aplicado el freno de estacionamiento, aparecerá en el monitor "DRIVER MUST NOT WATCH THE MONITOR WHILE DRIVING." (El conductor no debe mirar el monitor mientras conduce), y no se mostrará la imagen de reproducción.
 - Esta advertencia aparece únicamente cuando el cable del freno de estacionamiento se encuentra conectado al sistema del freno de estacionamiento incorporado al automóvil (refiérase al Manual de instalación/conexión).

FRANÇAIS

- Cet appareil est conçu pour fonctionner sur des sources de courant continu de 12 V à masse NEGATIVE.

AVERTISSEMENTS

- N'INSTALLEZ aucun élément dans les endroits suivants;
 - où il peut gêner l'accès au volant ou au levier de vitesse car cela peut entraîner un accident de la circulation.
 - où il peut gêner la manipulation de dispositifs de sécurité tels que les airbags car cela peut entraîner un accident fatal.
 - où il peut gêner la visibilité.
- NE COMMANDEZ pas l'appareil lors de la manipulation du volant car cela peut entraîner un accident de la circulation.
- Le conducteur ne doit pas regarder le moniteur lorsqu'il conduit. Regarder le moniteur lorsqu'on est au volant réduit considérablement la vigilance du conducteur et multiplie les risques d'accident.
- Le conducteur ne doit pas utiliser un casque d'écoute quand il est au volant. Il est en effet dangereux de bloquer les sons de la circulation routière pendant la conduite d'un véhicule.
- Si vous avez besoin de commander l'autoradio pendant que vous conduisez, continuez de regarder droit devant vous ou vous risquez de causer un accident de la circulation.
- Si le frein de stationnement n'est pas mis, "DRIVER MUST NOT WATCH THE MONITOR WHILE DRIVING." (Le conducteur ne doit pas regarder le moniteur lorsqu'il conduit.) apparaît sur le moniteur et l'image de lecture n'apparaît pas.
 - Cet avertissement apparaît uniquement quand le fil du frein de stationnement est connecté au système de frein de stationnement intégré à la voiture.

Parts list for installation and connection

The following parts are provided with this unit.
After checking them, please set them correctly.


Lista de piezas para instalación y conexión

Con esta unidad se suministran las siguientes piezas.
Después de inspeccionarlas, colóquelas correctamente.


Liste des pièces pour l'installation et raccordement

Les pièces suivantes sont fournies avec cet appareil.
Après vérification, veuillez les placer correctement.


Hard case/Control panel
Estuche duro/Panel de control
Etui de transport/Panneau de commande

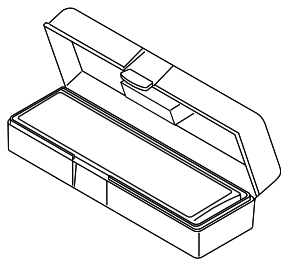


Sleeve
Cubierta
Manchon

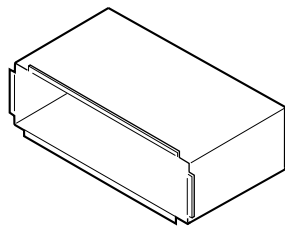


Trim plate
Placa de guarnición
Plaque d'assemblage

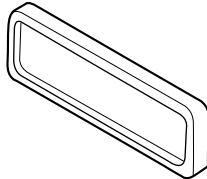

 Remote controller
Control remoto
Télécommande




Crimp connector
Sujeción
Cosse à sertir

 


Battery
Pila
Pile
CR2025



Power cord
Cordón de alimentación
Cordon d'alimentation

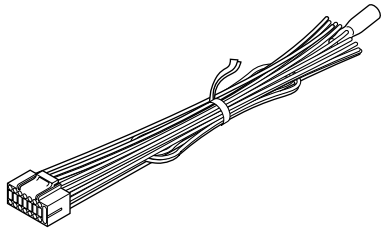

Handles
Manijas
Poignées

 

Lock nut—M5
Tuerca de seguridad—M5
Ecrou d'arrêt—M5



Washer—ø5
Arandela—ø5
Rondelle—ø5



Mounting bolt—M5 x 20 mm (M5 x 13/16")
Perno de montaje—M5 x 20 mm (M5 x 13/16 pulgada)
Boulon de montage—M5 x 20 mm (M5 x 13/16 pouces)



Rubber cushion
Cojín de goma
Amortisseur en caoutchouc



TROUBLESHOOTING

- **The fuse blows.**
 - * Are the red and black leads connected correctly?
- **Power cannot be turned on.**
 - * Is the yellow lead connected?
- **No sound from the speakers.**
 - * Is the speaker output lead short-circuited?
- **Sound is distorted.**
 - * Is the speaker output lead grounded?
 - * Are the "–" terminals of L and R speakers grounded in common?
- **Unit becomes hot.**
 - * Is the speaker output lead grounded?
 - * Are the "–" terminals of L and R speakers grounded in common?

LOCALIZACION DE AVERIAS

- **El fusible se quema.**
 - * ¿Están los conductores rojo y negro correctamente conectados?
- **No es posible conectar la alimentación.**
 - * ¿Está el cable amarillo conectado?
- **No sale sonido de los altavoces.**
 - * ¿Está el cable de salida del altavoz cortocircuitado?
- **El sonido presenta distorsión.**
 - * ¿Está el cable de salida del altavoz conectado a masa?
 - * ¿Están los terminales "–" de los altavoces L y R conectados a una masa común?
- **La unidad se calienta.**
 - * ¿Está el cable de salida del altavoz conectado a masa?
 - * ¿Están los terminales "–" de los altavoces L y R conectados a una masa común?

EN CAS DE DIFFICULTES

- **Le fusible saute.**
 - * Les fils rouge et noir sont-ils raccordés correctement?
- **L'appareil ne peut pas être mise sous tension.**
 - * Le fil jaune est-elle raccordée?
- **Pas de son des enceintes.**
 - * Le fil de sortie de d'enceinte est-il court-circuité?
- **Le son est déformé.**
 - * Le fil de sortie de d'enceinte est-il à la masse?
 - * Les bornes "–" des enceintes gauche et droit sont-elles mises ensemble à la masse?
- **L'appareil devient chaud.**
 - * Le fil de sortie de d'enceinte est-il à la masse?
 - * Les bornes "–" des enceintes gauche et droit sont-elles mises ensemble à la masse?

INSTALLATION (IN-DASH MOUNTING)


The following illustration shows a typical installation. However, you should make adjustments corresponding to your specific car. If you have any questions or require information regarding installation kits, consult your JVC car audio dealer or a company supplying kits.


INSTALACION (MONTAJE EN EL TABLERO DE INSTRUMENTOS)


La siguiente ilustración muestra una instalación típica. Sin embargo usted deberá efectuar los ajustes correspondientes a su automóvil. Si tiene alguna pregunta o necesita información acerca de las herramientas para instalación, consulte con su concesionario de JVC de equipos de audio para automóviles o a una compañía que suministra tales herramientas.


INSTALLATION (MONTAGE DANS LE TABLEAU DE BORD)

L'illustration suivante est un exemple d'installation typique. Cependant, vous devez faire les ajustements correspondant à votre voiture particulière. Si vous avez des questions ou avez besoin d'information sur des kits d'installation, consulter votre revendeur d'autoradios JVC ou une compagnie d'approvisionnement.

- 1 Before mounting:** Press  (Control Panel Release button) to detach the control panel if already attached.
* When shipped from the factory, the control panel is packed in the hard case.
- 2 Remove the trim plate.**
- 3 Remove the sleeve after disengaging the sleeve locks.**
 - Stand the unit.
Note: When you stand the unit, be careful not to damage the fuse on the rear.
 - Insert the 2 handles between the unit and the sleeve, as illustrated, to disengage the sleeve locks.
 - Remove the sleeve.
Note: Be sure to keep the handles for future use after installing the unit.
- 4 Install the sleeve into the dashboard.**
* After the sleeve is correctly installed in the dashboard, bend the appropriate tabs to hold the sleeve firmly in place, as illustrated.
- 5 Fix the mounting bolt to the rear of the unit's body and place the rubber cushion over the end of the bolt.**
- 6 Do the required electrical connections.**
- 7 Slide the unit into the sleeve.**
- 8 Attach the trim plate.**
- 9 Attach the control panel.**

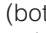- 1 Antes de instalar:** Pulse  (botón de liberación del panel de control) para desenganchar el panel de control, si ya está fijado.
* El panel de control se expide de fábrica dentro del estuche duro.
- 2 Retire la placa de guarnición.**
- 3 Retire la cubierta después de desenganchar los retenes de la cubierta.**
 - Ponga la unidad vertical.
Nota: Al poner la unidad vertical, tenga cuidado de no dañar el fusible provisto en la parte posterior.
 - Inserte las dos manijas entre la unidad y la cubierta tal como en la ilustración y desenganche los retenes de la cubierta.
 - Retire la cubierta.
Nota: Después de instalar la unidad, asegúrese de guardar las manijas para uso futuro.
- 4 Instale la cubierta en el tablero de instrumentos.**
* Después de que la cubierta esté correctamente instalada en el tablero de instrumentos, doble las lengüetas correspondientes para sostener la cubierta firmemente en su lugar, tal como se muestra.
- 5 Fije el perno de montaje en la parte trasera del cuerpo de la unidad y coloque el cojín de goma sobre el extremo del perno.**
- 6 Realice las conexiones eléctricas requeridas.**
- 7 Deslice la unidad dentro de la cubierta hasta que quede trabada.**
- 8 Coloque la placa de guarnición.**
- 9 Coloque el panel de control.**

- 1 Avant le montage:** Appuyer sur  (déblocage du panneau de commande) pour éventuellement détacher le panneau de commande.
* Lorsque ce panneau de commande sort d'usine, il est rangé dans un étui de transport.
- 2 Retirer la plaque d'assemblage.**
- 3 Libérer les verrous du manchon et retirer le manchon.**
 - Poser l'appareil à la verticale.
Remarque: Lorsque vous mettez l'appareil à la verticale, faire attention de ne pas endommager le fusible situé sur l'arrière.
 - Insérer les 2 poignées entre l'appareil et le manchon comme indiqué pour désengager les verrous de manchon.
 - Retirer le manchon.
Remarque: S'assurer de garder les poignées pour une utilisation ultérieure, après l'installation de l'appareil.
- 4 Installer le manchon dans le tableau de bord.**
* Après installation correcte du manchon dans le tableau de bord, plier les bonnes pattes pour maintenir fermement le manchon en place, comme montré.
- 5 Monter le boulon de montage sur l'arrière du corps de l'appareil puis passer l'amortisseur en caoutchouc sur l'extrémité du boulon.**
- 6 Réaliser les connexions électriques.**
- 7 Faites glisser l'appareil dans le manchon jusqu'à ce qu'il soit verrouillé.**
- 8 Attachez la plaque d'ajustage.**
- 9 Remonter le panneau de commande.**

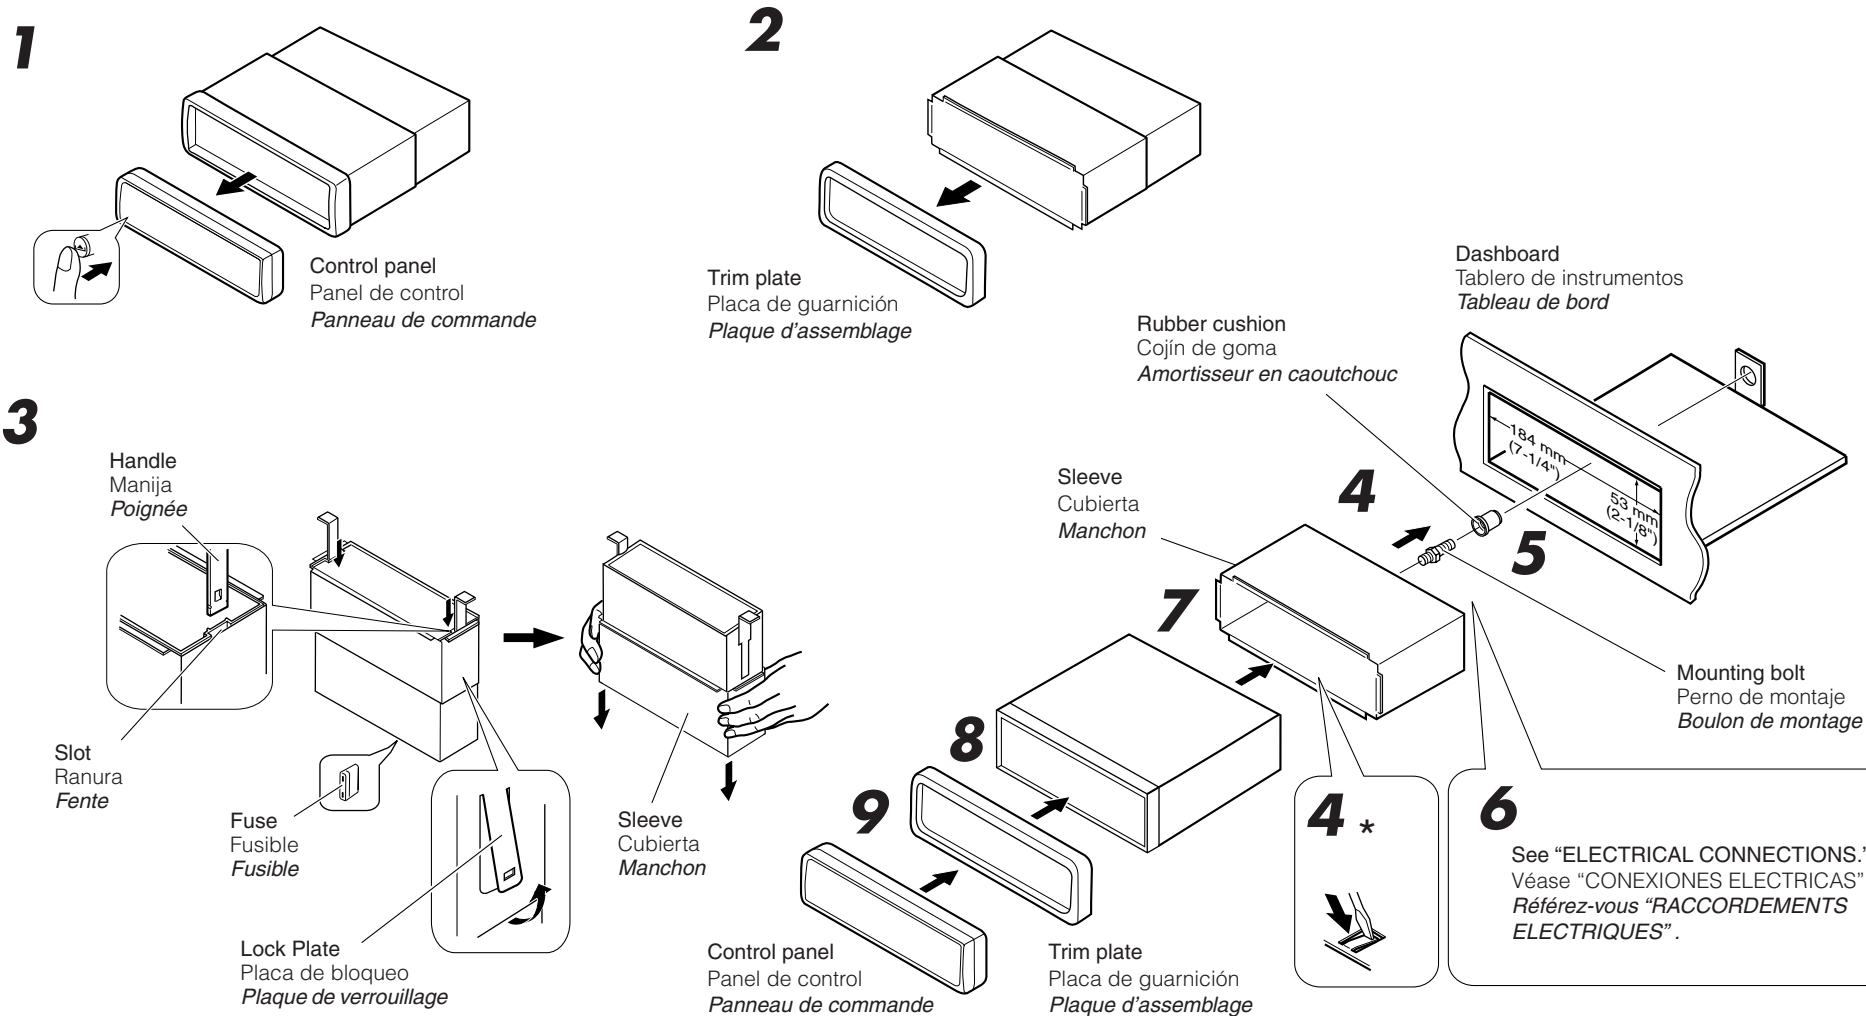



Connecting the leads / Conexión de los conductores / Raccordement des fils

Twist the core wires when connecting.
Retuerza los alambres de alma para conectarlos.
Torsader les âmes des fils en les raccordant.

Solder the core wires to connect them securely.
Suelde los alambres de alma para conectarlos con firmeza.
Soudez les âmes des fils pour les raccorder entre eux de façon sûre.

CAUTION / PRECAUCION / PRECAUTION:



- To prevent short-circuit, cover the terminals of the UNUSED leads with insulating tape.
- Para evitar cortocircuitos, cubra los cables NO UTILIZADOS con cinta aislante.
- Pour éviter les court-circuits, couvrir les bornes des fils qui ne sont PAS utilisés avec de la bande isolante.

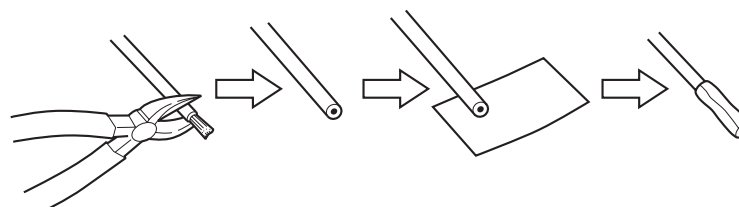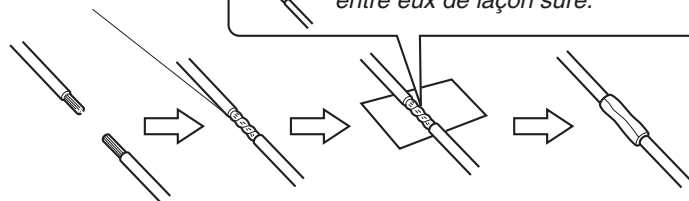

• When using the optional stay

• Cuando emplea un soporte opcional

• Lors de l'utilisation du hauban en option

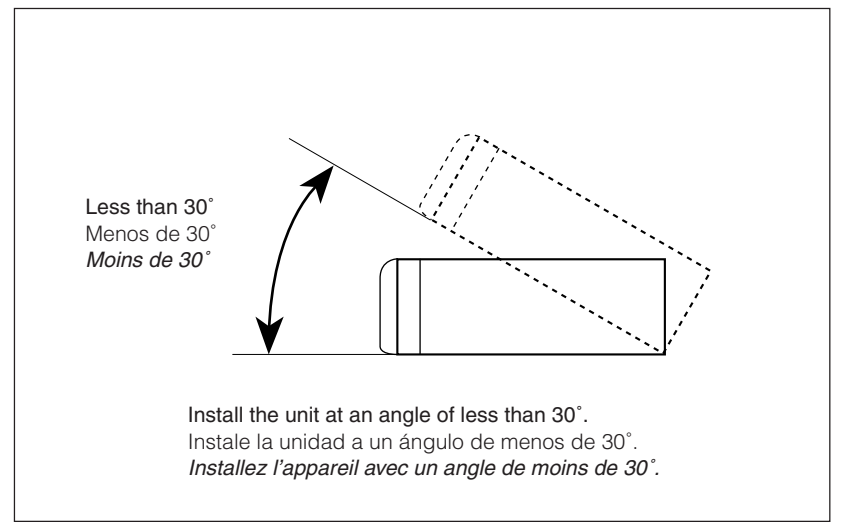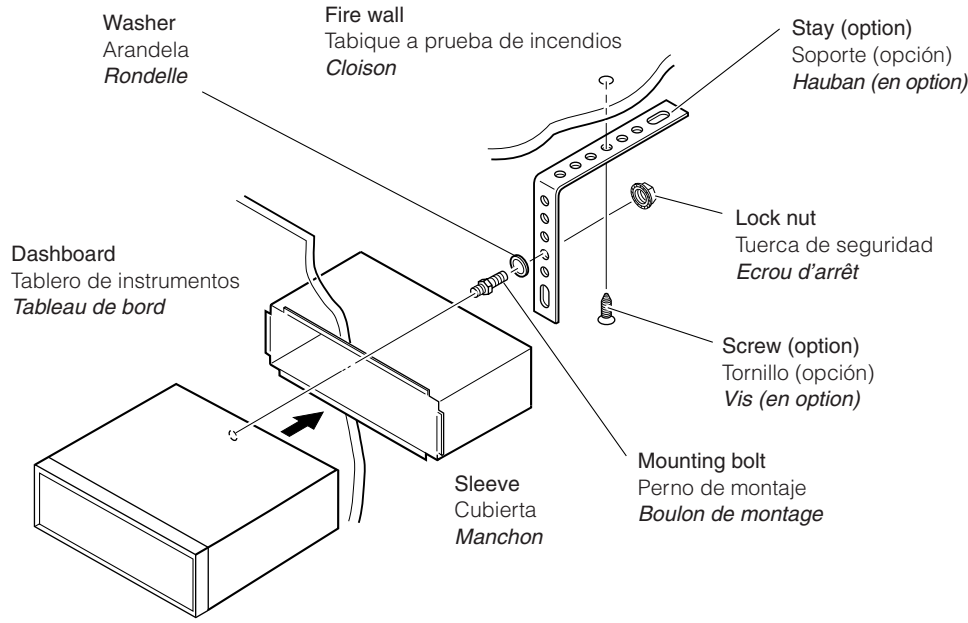

• When installing the unit without using the sleeve

In a Toyota for example, first remove the car radio and install the unit in its place.


• Instalación de la unidad sin utilizar la cubierta

En un Toyota por ejemplo, primero extraiga la radio del automóvil y luego instale la unidad en su lugar.

• Lors de l'installation de l'appareil sans utiliser de manchon

Par exemple dans une Toyota, retirer d'abord l'autoradio et installer l'appareil à la place.

Flat type screws—M5 x 8 mm (M5 x 3/8")*
Tornillos tipo plano—M5 x 8 mm (M5 x 3/8 pulgada)*
Vis à tête plate—M5 x 8 mm (M5 x 3/8 pouces)*

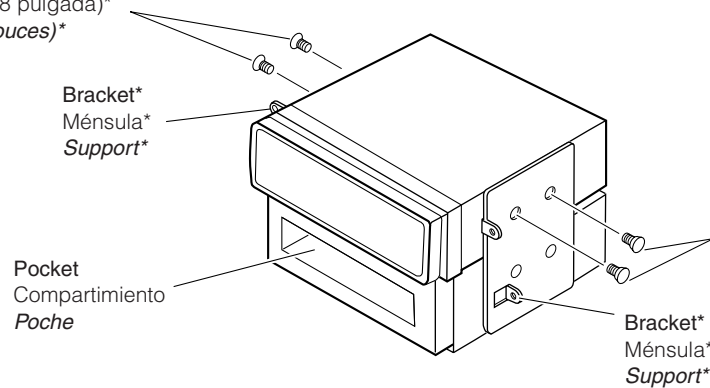

Flat type screws—M5 x 8 mm (M5 x 3/8")*
Tornillos tipo plano—M5 x 8 mm (M5 x 3/8 pulgada)*
Vis à tête plate—M5 x 8 mm (M5 x 3/8 pouces)*

* Not included with this unit.
* No suministrado con esta unidad.
* Non fourni avec cet appareil.

Note : When installing the unit on the mounting bracket, make sure to use the 8 mm (3/8")-long screws. If longer screws are used, they could damage the unit.

Nota : Cuando instala la unidad en la ménsula de montaje, asegúrese de utilizar los tornillos de 8 mm (3/8 pulgada) de longitud. Si se utilizan tornillos más largos, éstos pueden dañar la unidad.

Remarque: Lors de l'installation de l'appareil sur le support de montage, s'assurer d'utiliser des vis d'une longueur de 8 mm (3/8 pouces). Si des vis plus longues sont utilisées, elles peuvent endommager l'appareil.

Removing the unit

• Before removing the unit, release the rear section.

1 Remove the control panel.

2 Remove the trim plate.

3 Insert the 2 handles into the slots, as shown. Then, while gently pulling the handles away from each other, slide out the unit. **(Be sure to keep the handles after installing it.)**

Extracción de la unidad

• Antes de extraer la unidad, libere la sección trasera.

1 Extraiga el panel de control.

2 Retire la placa de guarnición.

3 Inserte las 2 manijas entre las ranuras, como se muestra. Luego, separe suavemente las manijas y extraiga la unidad. **(Asegúrese de conservar las manijas después de instalarlo.)**

Retrait de l'appareil


• Avant de retirer l'appareil, libérer la section arrière.

1 Retirer le panneau de commande.

2 Retirer la plaque d'assemblage.


3 Introduire les deux poignées dans les fentes, comme montré. Puis, tout en tirant doucement les poignées écartées, faire glisser l'appareil pour le sortir. **(S'assurer de conserver les poignées après l'installation de l'appareil.)**

1

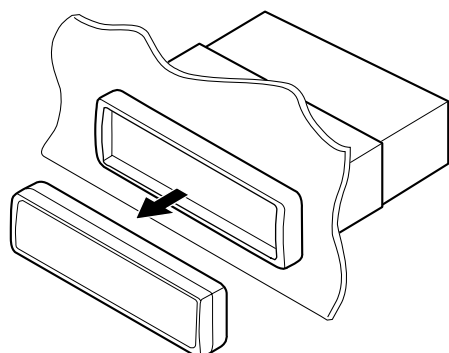


Control panel
Panel de control
Panneau de commande

2

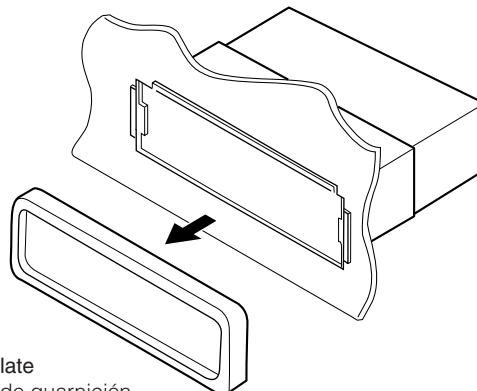

Trim plate
Placa de guarnición
Plaque d'assemblage

3

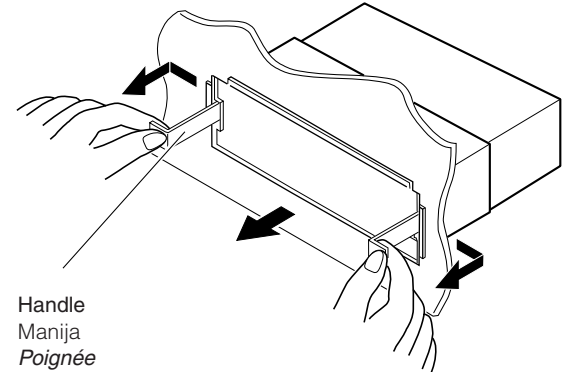

Handle
Manija
Poignée


ELECTRICAL CONNECTIONS

To prevent short circuits, we recommend that you disconnect the battery's negative terminal and make all electrical connections before installing the unit. If you are not sure how to install this unit correctly, have it installed by a qualified technician.

Note:

This unit is designed to operate only on **12 V DC, NEGATIVE ground electrical systems**. If your vehicle does not have this system, a voltage inverter is required, which can be purchased at JVC car audio dealers.

- Replace the fuse with one of the specified rating. If the fuse blows frequently, consult your JVC car audio dealer.
- If noise is a problem...
This unit incorporates a noise filter in the power circuit. However, with some vehicles, clicking or other unwanted noise may occur. If this happens, connect the unit's **rear ground terminal** (see connection diagram) to the car's chassis using shorter and thicker cords, such as copper braiding or gauge wire. If noise still persists, consult your JVC car audio dealer.
- Maximum input of the speakers should be more than 50 W at the rear and 50 W at the front, with an impedance of **4 Ω to 8 Ω**.
- **Be sure to ground this unit to the car's chassis.**
- The heat sink becomes very hot after use. Be careful not to touch it when removing this unit.

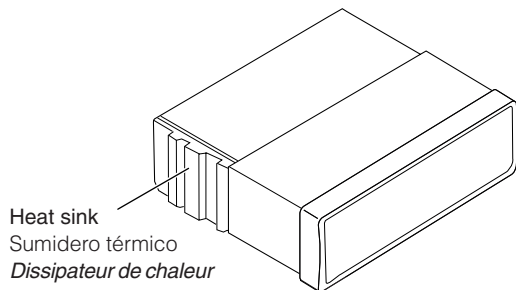

CONEXIONES ELECTRICAS

Para evitar cortocircuitos, recomendamos que desconecte el terminal negativo de la batería y que efectúe todas las conexiones eléctricas antes de instalar la unidad. Si usted no está seguro de cómo instalar correctamente la unidad, hágala instalar por un técnico cualificado.

Nota:

Esta unidad está diseñada para funcionar con **12 V de CC, con sistemas eléctricos de masa NEGATIVA** solamente. Si su vehículo no posee este sistema, será necesario un inversor de tensión, que puede ser adquirido en los concesionarios de JVC de equipos de audio para automóviles.

- Reemplace el fusible por uno con la corriente especificada. Si el fusible se quemase frecuentemente consulte con su concesionario de JVC de equipos de audio para automóviles.
- Si el ruido fuese un problema...
Esta unidad tiene un filtro de ruido en el circuito de alimentación. Sin embargo, en algunos vehículos, pueden producirse chasquidos u otros ruidos indeseados. En tal caso conecte el **terminal de tierra posterior** (véase diagrama de conexión) del receptor al chasis del automóvil, utilizando cordones más gruesos y cortos tales como alambre de cobre trenzado o de grueso calibre. Si el ruido persiste, consulte a su concesionario de JVC de equipos de audio para automóvil.
- La entrada máxima de los altavoces debe ser de más de 50 W en el trasero y 50 W en la frontal, con una impedancia de **4 Ω a 8 Ω**.
- **Asegúrese de conectar esta unidad a tierra en el chasis del automóvil.**
- El sumidero térmico estará muy caliente después del uso. Asegúrese de no tocarlo al desmontar esta unidad.

RACCORDEMENTS ELECTRIQUES

Pour éviter tout court-circuit, nous vous recommandons de débrancher la borne négative de la batterie et d'effectuer tous les raccordements électriques avant d'installer l'appareil. Si l'on n'est pas sûr de pouvoir installer correctement cet appareil, le faire installer par un technicien qualifié.

Remarque:

Cet appareil est conçu pour fonctionner sur des sources de courant continu de **12 V à masse NEGATIVE** seulement. Si votre véhicule n'offre pas ce type d'alimentation, il vous faut un convertisseur de tension, que vous pouvez acheter chez un revendeur d'autoradios JVC.

- Remplacer le fusible par un de la valeur précisée. Si le fusible saute souvent, consulter votre revendeur d'autoradios JVC.
- Si le bruit est un problème...
Cet appareil incorpore un filtre de bruit dans le circuit d'alimentation. Cependant, avec certains véhicules, quelques claquements ou autres bruits non désirés risquent de se produire. Si cela arrive, raccorder la borne arrière de masse de l'appareil au châssis de la voiture (voir le schéma de raccordement) en utilisant des cordons les plus gros et les plus courts possibles telle qu'une barre de cuivre ou une tresse. Si le bruit persiste, consulter votre revendeur d'autoradios JVC.
- La puissance admissible des enceintes devrait supérieure à 50 W à l'arrière et à 50 W l'avant, avec une impédance de **4 Ω à 8 Ω**.
- **S'assurer de raccorder la mise à la masse de cet appareil au châssis de la voiture.**
- Le dissipateur de chaleur devient très chaud après usage. Faire attention de ne pas le toucher en retirant cet appareil.

PRECAUTIONS on power supply and speaker connections:

- **DO NOT connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.**
- Connect the black lead (ground), yellow lead (to car battery, constant 12 V), and red lead (to an accessory terminal) correctly.
- BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.
 - If the speaker wiring in your car is as illustrated in Fig. 1 and Fig. 2 below, DO NOT connect the unit using that original speaker wiring. If you do, the unit will be seriously damaged. Redo the speaker wiring so that you can connect the unit to the speakers as illustrated in Fig. 3.
 - If the speaker wiring in your car is as illustrated in Fig. 3, you can connect the unit using the original speaker wiring in your car.
 - If you are not sure of the speaker wiring of your car, consult your car dealer.

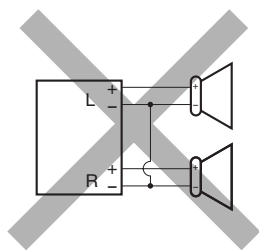


Fig. 1

PRECAUCIONES sobre las conexiones de la fuente de alimentación y de los altavoces:

- **NO conecte los conductores de altavoz del cable de alimentación a la batería de automóvil, pues podrían producirse graves daños en la unidad.**
- Conecte correctamente el conductor negro (a tierra), el conductor amarillo (a la batería del automóvil, 12 V constantes), y el conductor rojo (a un terminal de accesorio).
- ANTES de conectar a los altavoces los conductores de altavoz del cable de alimentación, verifique el conexionado de altavoz de su automóvil.
 - Si el conexionado de altavoz de su automóvil es como se indica en las Fig. 1 y Fig. 2 de abajo, NO conecte la unidad utilizando ese conexionado de altavoz original. Si lo hace, se producirán daños graves en la unidad. Vuelva a efectuar el conexionado de altavoz de manera que pueda conectar la unidad a los altavoces de la manera indicada en la Fig. 3.
 - Si el conexionado de altavoz de su automóvil es como se indica en la Fig. 3, podrá conectar la unidad utilizando el conexionado de altavoz original de su automóvil.
 - Si tiene dudas sobre el conexionado de altavoz de su automóvil, consulte con su concesionario.

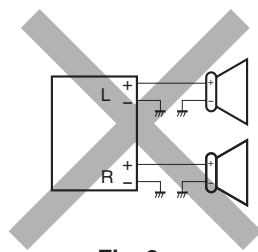


Fig. 2

PRECAUTIONS sur l'alimentation et la connexion des enceintes:

- **NE CONNECTEZ PAS les fils d'enceintes du cordon d'alimentation à la batterie; sinon, l'appareil serait sérieusement endommagé.**
- Connectez correctement le fil noir (à la masse), le fil jaune (à la batterie de la voiture, 12 V constant) et le fil rouge (à la prise accessoire).
- AVANT de connecter les fils d'enceintes du cordon d'alimentation aux enceintes, vérifiez le câblage des enceintes de votre voiture.
 - Si le câblage des enceintes de votre voiture est réalisé comme montré sur la Fig. 1 ou Fig. 2 ci-dessous, NE CONNECTEZ PAS l'appareil en utilisant ce câblage original d'enceintes. Si vous le faites, l'appareil sera sérieusement endommagé. Recommencez le câblage des enceintes de façon que vous puissiez connecter l'appareil aux enceintes comme montré sur la Fig. 3.
 - Si le câblage des enceintes de votre voiture est comme montré sur la Fig. 3, vous pouvez connecter l'appareil en utilisant ce câblage original d'enceintes pour votre voiture.
 - Si vous n'êtes pas sûrs du câblage d'enceintes de votre voiture, consultez le concessionnaire de votre voiture.

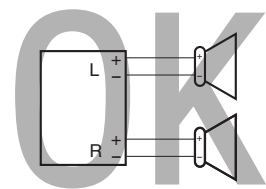


Fig. 3

About sounds reproduced through the rear terminals

- **Through the analog terminals (Speaker out/LINE OUT/2nd AUDIO OUT):**
2-channel signal is emitted.
When playing a multi-channel encoded disc, multi-channel signals are downmixed. (AUDIO—ANALOG DOWN MIX: see page 46 of the Instructions.)
- **Through DIGITAL OUT (optical):**
Digital signals (Linear PCM, Dolby Digital*, DTS**) are emitted through this terminal. (For more details, see page 71 of the Instructions.)
To reproduce multi-channel sounds such as Dolby Digital and DTS, connect an amplifier or a decoder compatible with these multi-channel sources to this terminal, and set "DIGITAL AUDIO OUTPUT" to the correct value. (See page 46 of the Instructions.)

* Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

** "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Acercas de los sonidos reproducidos a través de los terminales traseros

- **A través de los terminales analógicos (salida de altavoz/LINE OUT/2nd AUDIO OUT):**
Se emite la señal de 2 canales.
Cuando se reproduce un disco codificado multicanal, las señales multicanal se mezclan. (AUDIO—MEZCLA ANAÓGICA: véase la página 46 de las Instrucciones.)
- **A través de DIGITAL OUT (óptico):**
Las señales digitales (Linear PCM, Dolby Digital*, DTS**) se emiten a través de este terminal. (Para mayor información, véase la página 71 de las Instrucciones.)
Para reproducir sonidos multicanal, como Dolby Digital y DTS, conectar a este terminal un amplificador o decodificador compatible con estas fuentes multicanal, y ajustar "SALIDA DE AUDIO DIGITAL" al valor correcto. (Véase la página 46 de las Instrucciones.)

* Fabricado bajo licencia de Dolby Laboratories. "Dolby" y el símbolo con un doble D son marcas registradas de Dolby Laboratories.

** "DTS" y "DTS Digital Out" son marcas comerciales de Digital Theater Systems, Inc.

À propos des sons reproduits par les prises arrière

- **Par les prises analogiques (sortie des enceintes/LINE OUT/2nd AUDIO OUT):**
Un signal à deux canaux est émis.
Lors de la lecture d'un disque codé multicanal, les signaux multicanal sont sous-mixés. (AUDIO—MIX DEMUL. ANALOGIQUE: voir page 46 du manuel d'instructions.)
- **Par la prise DIGITAL OUT (optique):**
Les signaux numériques (Linear PCM, Dolby Digital*, DTS**) sont émis par cette prise. (Pour plus de détails, référez-vous à la page 71 du manuel d'instructions.)
Pour reproduire des sons multicanal, tels que le Dolby Digital et le DTS, connectez un amplificateur ou un décodeur compatible avec ces sources multicanal à cette prise, et réglez "SORTIE AUDIO NUM." sur la valeur correcte. (Voir page 46 du manuel d'instructions.)

* Fabriqué sous licence de Dolby Laboratories. "Dolby" et le symbole double D sont des marques de commerce de Dolby Laboratories.

** "DTS" et "DTS Digital Out" sont des marques de commerce de Digital Theater Systems, Inc.

A Typical Connections / Conexiones típicas / Raccordements typiques

Before connecting: Check the wiring in the vehicle carefully not to fail in connecting this unit. Incorrect connection may cause a serious damage to this unit.

The leads of the power cord and those of the connector from the car body may be different in color.

Antes de la conexión: Verifique atentamente el conexionado del vehículo para no cometer errores al conectar esta unidad. Una conexión incorrecta podría producir daños graves en la unidad. Los cordones del cable de alimentación y los del conector procedentes de la carrocería del automóvil podrían ser de diferentes en color.

Avant de commencer la connexion: vérifiez attentivement le câblage du véhicule pour ne pas connecter incorrectement cet appareil. Une connexion incorrecte peut endommager sérieusement l'appareil.

The fil du cordon d'alimentation et ceux des connecteurs du châssis de la voiture peuvent être différents en couleur.

1 Connect the colored leads of the power cord to the car battery, speakers and automatic antenna (if any) in the following sequence.

- ① Black: ground
- ② Yellow: to car battery (constant 12 V)
- ③ Red: to an accessory terminal
- ④ Blue with white stripe: to remote lead of other equipment or automatic antenna if any (200 mA max.)
- ⑤ Light green: To parking brake, metallic body or chassis of the car
- ⑥ Orange with white stripe: to car light control switch
- ⑦ Others: to speakers

2 Connect the antenna cord.

3 Finally connect the wiring harness to the unit.

1 Conecte los conductores de color del cable de alimentación a la batería del automóvil, altavoces y antena automática (si la hubiere) en la secuencia siguiente.

- ① Negro: a tierra
- ② Amarillo: a la batería del automóvil (12 V constantes)
- ③ Rojo: a un terminal de accesorio
- ④ Azul con rayas blancas: al conductor remoto de otro equipo o de la antena automática, si hubiere (máx. 200 mA)
- ⑤ Verde claro: al freno de estacionamiento, la carrocería metálica o el chasis del automóvil
- ⑥ Naranja con raya blanca: Al interruptor de control de las luces del automóvil
- ⑦ Otros: a los altavoces

2 Conecte el cable de antena.

3 Por último, conecte a la unidad el cableado preformado.


1 Connectez les fils de couleur du cordon d'alimentation à la batterie de la voiture, aux enceintes et à l'antenne automatique (s'il y en a une) dans l'ordre suivant.

- ① Noir: a la masse
- ② Jaune: a la batterie de la voiture (12 V constant)
- ③ Rouge: à la prise accessoire
- ④ Bleu à bande blanche: au fil de télécommande de l'autre appareil ou à l'antenne automatique s'il y en a une (200 mA max.)
- ⑤ Vert clair: Au frein de stationnement, corps métallique ou châssis du véhicule
- ⑥ Orange à bande blanche: à l'interrupteur d'éclairage de la voiture
- ⑦ Autres fils: aux enceintes

2 Connectez le cordon d'antenne.

3 Finalement, connectez le faisceau de fils à l'appareil.

Before connecting the CD changer, make sure that the unit is turned off.
Antes de conectar el cambiador de CD, asegúrese de que la unidad esté apagada.
Avant de connecter le changeur CD, s'assurer que l'unité est éteinte.

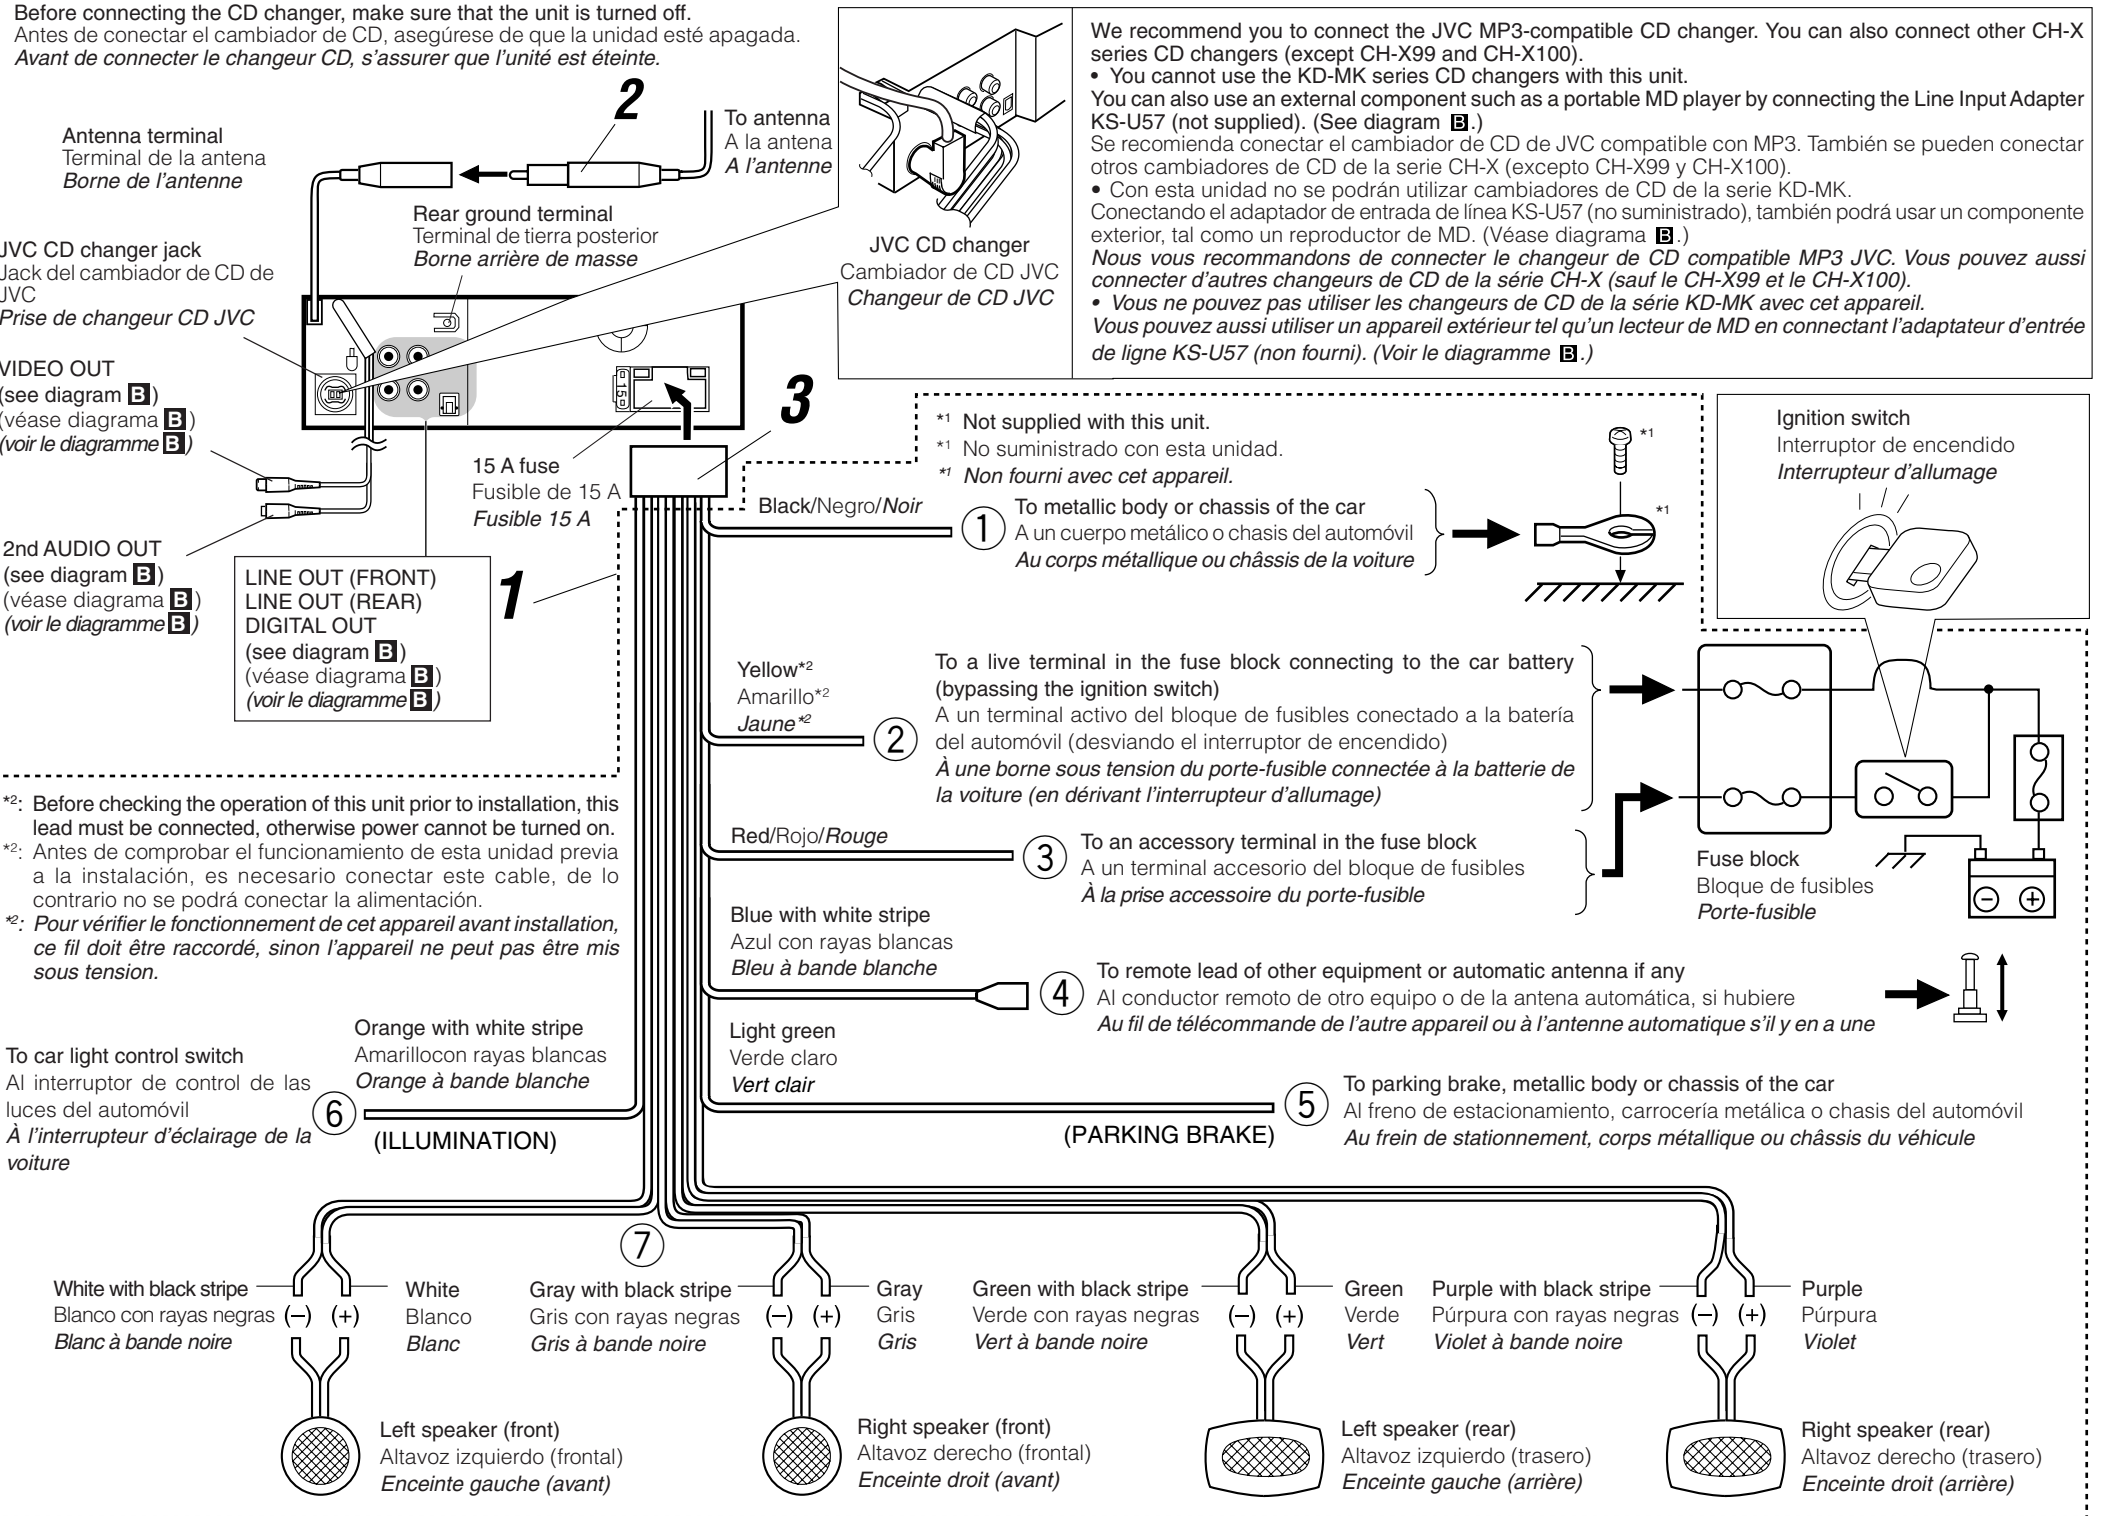

Connecting the parking brake wire / Conexión del cable del freno de estacionamiento / Connexion du cordon de frein de stationnement

When installing the monitor in a location where it can be seen by the driver


Al instalar el monitor en un lugar donde pueda ser visto por el conductor

Lorsqu'on installe le moniteur à un emplacement où il peut être vu du conducteur

Connect the parking brake wire to the parking brake system built in the car.

Conecte el cable del freno de estacionamiento al sistema de freno de estacionamiento del automóvil.

Connectez le fil de frein de stationnement au système de frein de stationnement.

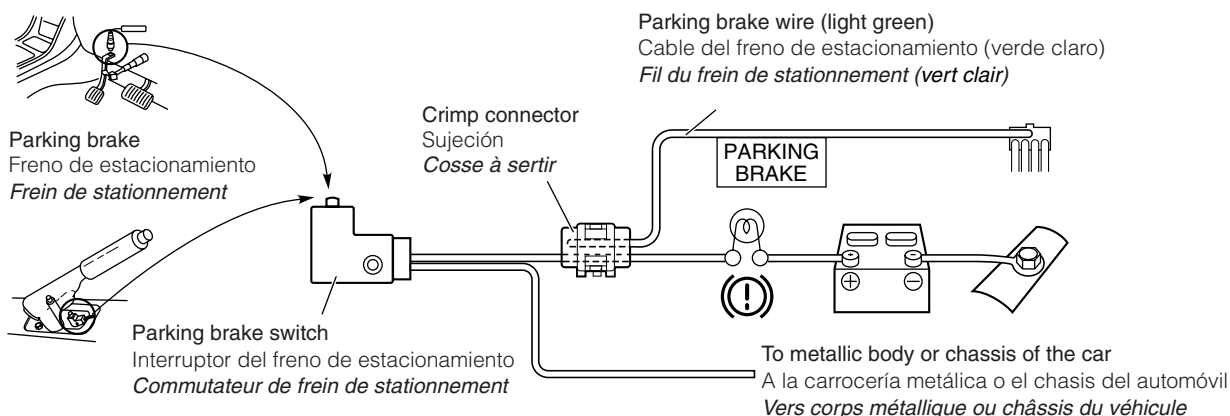

When installing the monitor in a location where it cannot be seen by the driver


Al instalar el monitor en un lugar donde no pueda ser visto por el conductor

Lorsqu'on installe le moniteur à un emplacement où il ne peut pas être vu du conducteur

Connect the parking brake wire to metallic body or chassis of the car.

Conecte el cable del freno de estacionamiento a la carrocería metálica o al chasis del automóvil.

Connectez le fil du frein de stationnement au corps métallique ou châssis du véhicule.

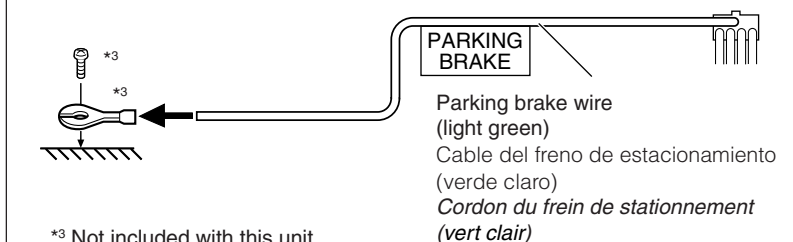


***3** Not included with this unit.

***3** No suministrado con esta unidad.


***3** Non fourni avec cet appareil.

How to connect the crimp connector / Cómo usar el conector de sujeción / Comment utiliser la cosse à sertir



Wire connecting the battery and the parking brake switch.
 Conecte la batería y el interruptor del freno de estacionamiento.
 Fil connectant la batterie et l'interrupteur de frein de stationnement.

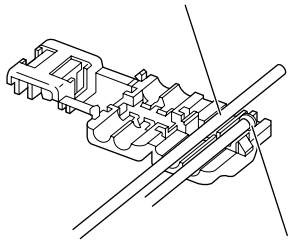

Attach the parking brake wire to this point.
 Conecte el cable del freno de estacionamiento a este punto.
 Attachez le fil du frein de stationnement ici.

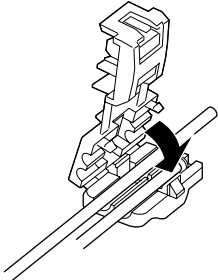

Contact the metallic part of the crimp to the wires inside.
 Conecte la parte metálica de la sujeción a los cables de dentro.
 Mettez en contact la partie métallique de la cosse à sertir et des fils intérieurs.

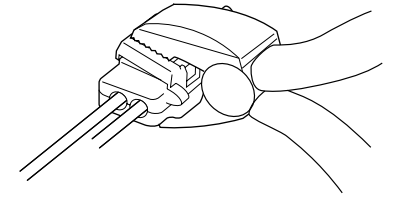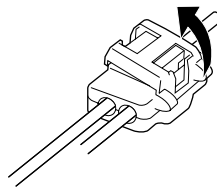

Pinch the crimp firmly.
 Apriete la sujeción con firmeza.
 Pincez la cosse à sertir fermement.

B Connections Adding Other Equipment / Conexiones para añadir otros equipos / Raccordement pour ajouter d'autres appareils

You can connect an amplifier and other equipment to upgrade your car stereo system.

- Connect the remote lead (blue with white stripe) to the remote lead of the other equipment so that it can be controlled through this unit.
- For amplifier:
 - Connect this unit's line-out terminals to the amplifier's line-in terminals.
 - **Disconnect the speakers from this unit, connect them to the amplifier. Leave the speaker leads of this unit unused.**


Usted podrá conectar un amplificador y otros equipos para mejorar el sistema estéreo de su automóvil.

- Conecte el conductor remoto (azul con rayas blancas) al conductor remoto del otro equipo para poderlo controlar a través de esta unidad.
- Para el amplificador:
 - Conecte los terminales de salida de línea de esta unidad a los terminales de entrada de línea del amplificador.
 - **Desconecte los altavoces de esta unidad y conéctelos al amplificador. Deje los conductores de los altavoces de esta unidad sin usar.**


Vous pouvez connecter un amplificateur ou autre appareil pour améliorer votre système autoradio.

- Connectez le fil de commande à distance (bleu à bande blanche) au fil de commande à distance de l'autre appareil de façon qu'il puisse être commandé via cet appareil.
- Pour l'amplificateur:
 - Raccorder les fiches de sortie ligne de cet appareil aux fiches d'entrée ligne de l'amplificateur.
 - **Déconnectez les enceintes de cet appareil et connectez-les à l'amplificateur. Laissez les fils d'enceintes de cet appareil inutilisés.**


Required connections for DVD playback / Conexiones requeridas para reproducción de DVD / Connexions requises pour la lecture de DVD

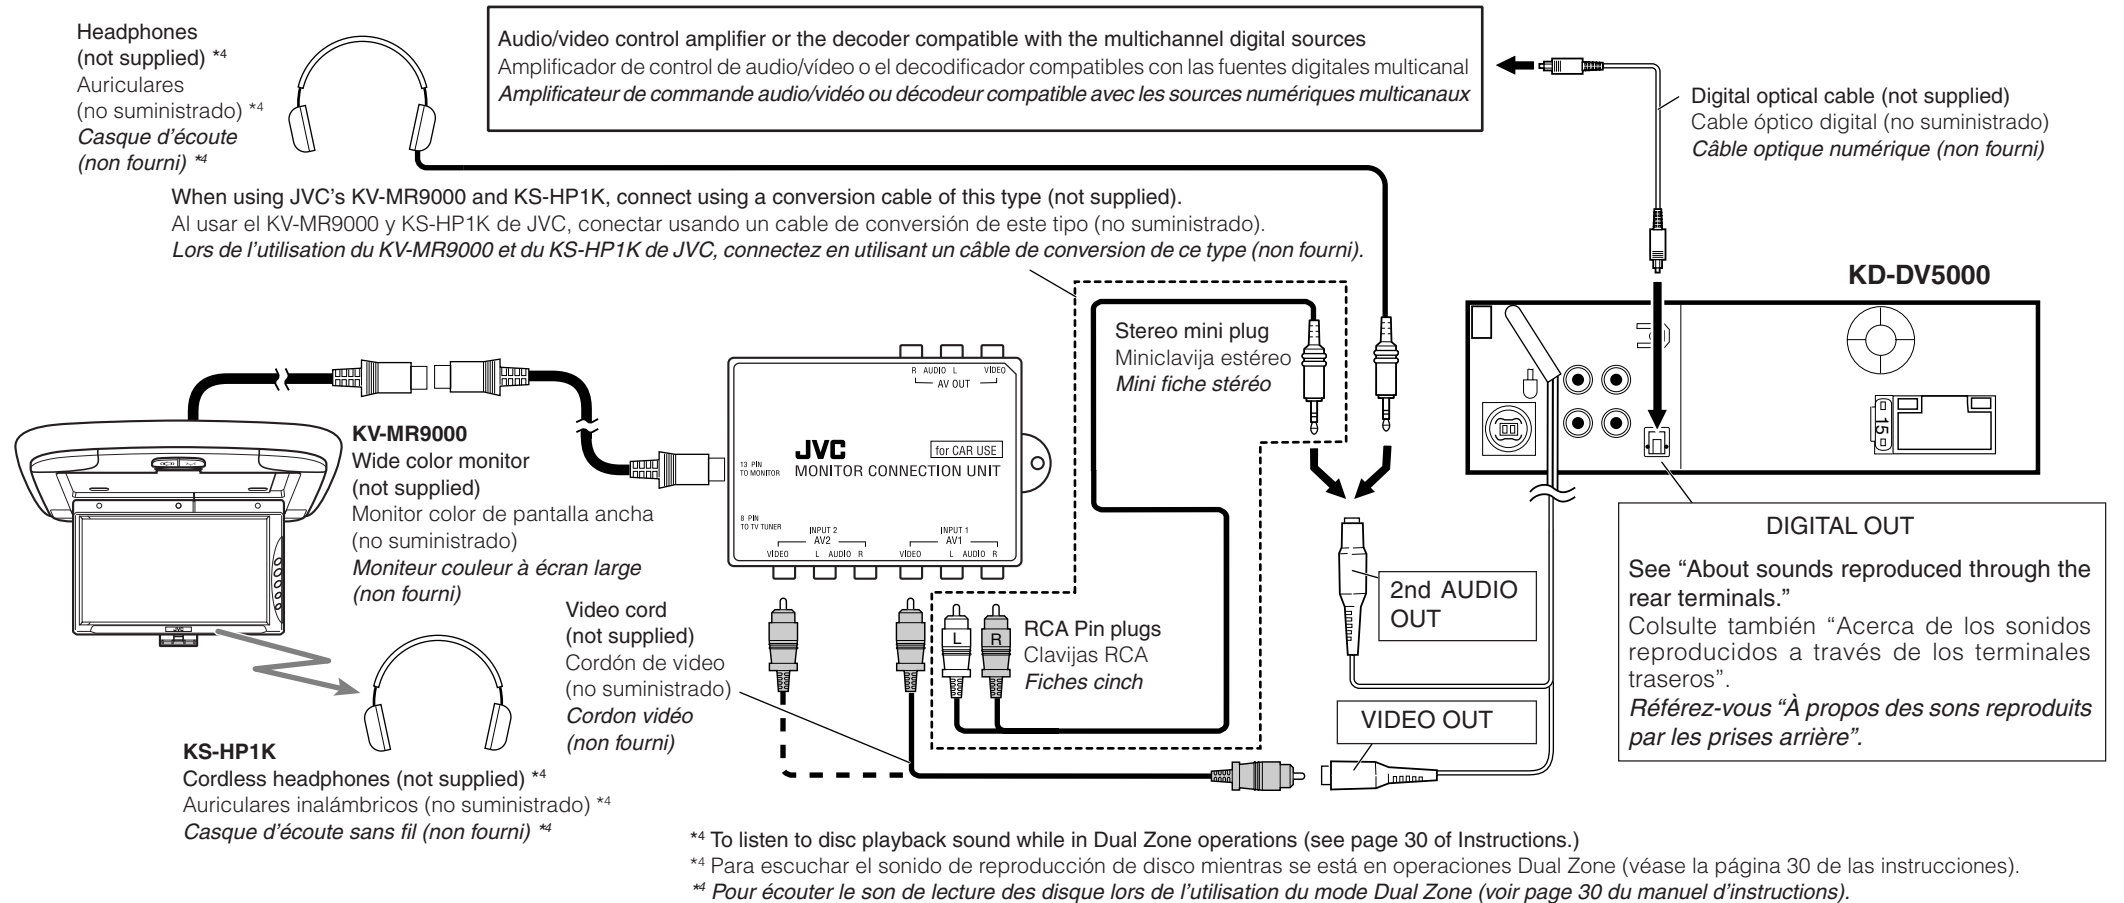

Amplifier / Amplificador / Amplificateur

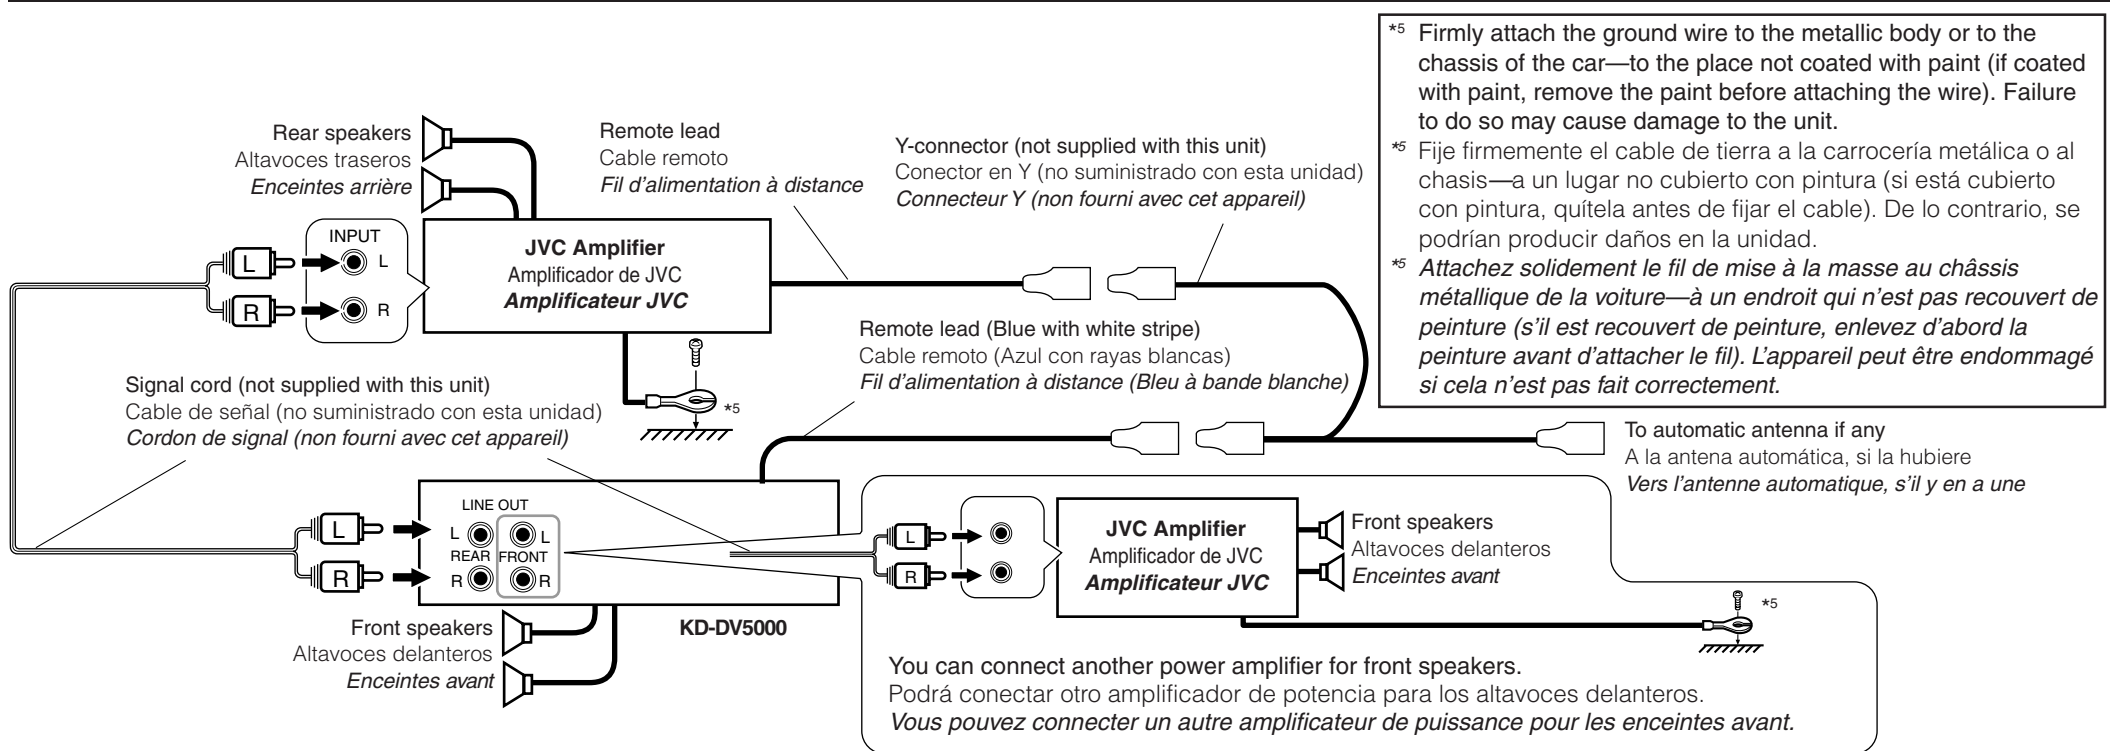

External component / Componente exterior / Appareil extérieur

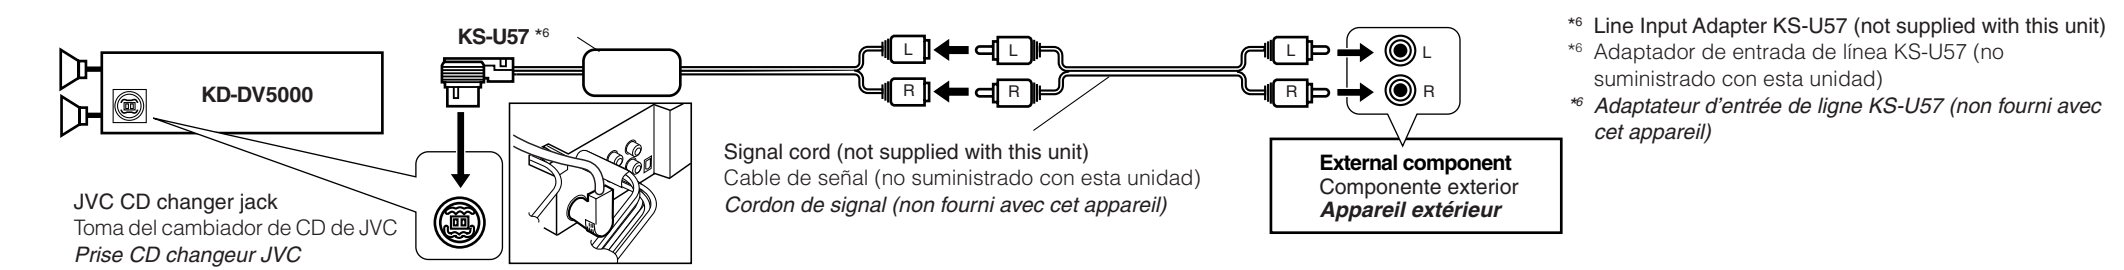

ENGLISH

A Guide to MP3

▶ What is MP3?

MP3 (MPEG Audio Layer 3) is one of digital audio compression standards.

- This player cannot play back MP3i and MP3 PRO formats.

▶ About Tag of MP3

This player can show the names of albums, artists (performer), and tracks of MP3 Tag.

- This player can handle only one-byte characters. Any other characters cannot be correctly displayed.

▶ About formats of MP3

This player cannot play back the following files:

- MP3 files without extensions such as [.MP3].
- MP3 files with the extensions other than [.MP3].
- Files which do not have MP3 data.
- MP3 files are not encoded in an appropriate format.
- MP3 files encoded with Layer1/2.
- Files which have the data such as WMA, WAVE, ATRAC3, MPEG 2.5, etc.

▶ About available formats of disc

This player cannot play back the following cases:

- CD-R/RW on which the files are written with "Packet Write" method.
- There are improper recording conditions (missing data, etc.) or media conditions (stain, scratch, warp, etc.).
- There are unclosed sessions on CD-R/RW (this player skips unclosed sessions).

▶ About functions restrained during MP3 playback

- The search function works but search speed is not constant during search.
- When skip is tried at the last file in a folder, the next folder is selected.

▶ Glossary

CD-DA

The data of music CD

Mixed-CD

A CD-R/RW on which audio tracks (CD-DA data) have been added to data tracks before closing a session.

Enhanced-CD

A CD-R/RW on which data tracks have been added to audio tracks (CD-DA data) before closing a session.

Multiple session

A CD-writing method, which make it possible to add data on a CD-R/RW after closing a session.

ESPAÑOL

Una guía sobre MP3

▶ ¿Qué es MP3?

MP3 (MPEG Audio Layer 3) es una de las normas de compresión de audio digital.

- Los formatos MP3i y MP3 PRO no se encuentran disponibles.

▶ Acerca del Tag para MP3

Este reproductor puede mostrar los nombres de los álbumes, artistas (ejecutantes), y pistas del Tag para MP3.

- Este reproductor puede manejar solamente caracteres de un byte. Los demás caracteres no serán visualizados correctamente.

▶ Acerca de los formatos disponibles con MP3

Este reproductor no puede reproducir los archivos siguientes:

- Archivos MP3 que no tengan las extensiones [.MP3].
- Archivos MP3 con otras extensiones que no sean [.MP3].
- Archivos que no tengan datos MP3.
- Los archivos MP3 no están codificados en un formato apropiado.
- Archivos MP3 codificados con Layer1/2.
- Archivos que disponen de datos tales como WMA, WAVE, ATRAC3, MPEG 2.5, etc.

▶ Acerca de los formatos de discos disponibles

Este reproductor no podrá efectuar la reproducción en los casos siguientes:

- CD-R/RW cuyos archivos están escritos con el método "Packet Write" (escritura por paquetes).
- Condiciones inadecuadas de grabación (datos faltantes, etc.) o del medio (manchas, rayaduras, alabeo, etc.).
- Hay sesiones sin cerrar en el CD-R/RW (este reproductor omite las sesiones sin cerrar).

▶ Acerca de las funciones inhibidas durante la reproducción de MP3

- Es posible activar la función de búsqueda, pero la velocidad de búsqueda no se mantiene constante.
- Cuando se intente omitir en el último archivo de una carpeta, se seleccionará la siguiente carpeta.

▶ Glosario

CD-DA

Datos de un CD de música

Mixed-CD

Un CD-R/RW con pistas de audio (datos de CD-DA) añadidas a las pistas de datos antes de cerrar una sesión.

Enhanced-CD

Un CD-R/RW al que se han añadido pistas de audio (datos de CD-DA) antes de cerrar una sesión.

Multiple session

Un método de escritura de CD, que hace posible añadir datos a un CD-R/RW después de cerrar una sesión.

FRANÇAIS

Un guide du format MP3

▶ Qu'est-ce que le format MP3?

MP3 (Norme MPEG Audio de Layer 3) est une des normes de compression audio numérique.

- Ce lecteur ne peut pas reproduire les formats MP3i et MP3 PRO.

▶ À propos des balises MP3

Ce lecteur peut afficher le nom des albums, des artistes (interprète) et des plages des balises MP3.

- Ce lecteur peut prendre en charge uniquement les caractères d'un octet. Tous les autres caractères ne peuvent pas être affichés correctement.

▶ À propos des formats MP3

Ce lecteur ne peut pas reproduire les fichiers suivants:

- Les fichiers MP3 sans extension telle que [.MP3].
- Les fichiers MP3 avec une extension différente que [.MP3].
- Les fichiers qui ne contiennent pas de données MP3.
- Les fichiers MP3 ne sont pas codés dans le format approprié.
- Les fichiers MP3 codés avec le Layer 1/2.
- Les fichiers avec des données telles que WMA, WAVE, ATRAC3, MPEG 2.5, etc.

▶ À propos des formats de disque disponibles

Ce lecteur ne peut pas reproduire les disques dans les cas suivants:

- Les CD-R/RW sur lesquels les fichiers ont été écrits avec la méthode "Packet Write" (écriture par paquet).
- Il y a eu des conditions d'enregistrement incorrectes (données manquantes, etc.) ou le support est en mauvaise condition (tâché, rayé, gondolé, etc.).
- Une session sur le CD-R/RW n'a pas été fermée (ce lecteur saute les sessions non fermées).

▶ À propos des fonctions réduites pendant la lecture MP3

- La fonction de recherche fonctionne mais la vitesse de recherche n'est pas constante.
- Quand vous essayez d'utiliser la fonction de saut pour le dernier fichier d'un dossier, le dossier suivant est choisi.

▶ Glossaire

CD-DA

Les données des CD musicaux

Mixed-CD (CD mixé)

Des plages audio (données CD-DA) ont été ajoutées aux plages de données d'un CD-R/RW avant la fermeture d'une session.

Enhanced-CD (CD amélioré)

Des plages de données ont été ajoutées aux plages audio (données CD-DA) d'un CD-R/RW avant la fermeture d'une session.

Multiple session (Session multiple)

Une méthode d'écriture de CD qui permet d'ajouter des données sur un CD-R/RW après la fermeture d'une session.

Table of playable disc types / Tabla de los tipos de discos reproducibles / Tableau des types de disque reproductibles

○: Compatible / Compatibles / Compatible

		KD-DV5000
Discs containing MP3 files / Discos conteniendo tanto archivos MP3 / Disques contenant à la fois des fichiers MP3		MP3 playback / Reproducción de MP3 / <i>Lecteur MP3</i>
Mixed-CD	MP3 + CD-DA	CD-DA playback / Reproducción de CD-DA / <i>Lecture CD-DA</i>
	Other files + CD-DA / Otros archivos + CD-DA / Autres fichiers + CD-DA	CD-DA playback / Reproducción de CD-DA / <i>Lecture CD-DA</i>
Enhanced CD	CD-DA + MP3	CD-DA playback / Reproducción de CD-DA / <i>Lecture CD-DA</i>
File name system / Sistema de nombre de archivo / Système de noms de fichiers	ISO9660 Level1 / Level1 / Niveau1	Up to 12 characters (8.3 format) / Hasta 12 caracteres (formato 8,3) / <i>12 caractères maximum (format 8,3)</i>
	ISO9660 Level2 / Level2 / Niveau2	Up to 31 characters / Hasta 31 caracteres / <i>31 caractères maximum</i>
	ISO9660 Level3 / Level3 / Niveau3	Not available / No disponible / <i>Non disponible</i>
	Romeo	Up to 62 characters / Hasta 62 caracteres / <i>62 caractères maximum</i>
	Joliet	Up to 62 characters / Hasta 62 caracteres / <i>62 caractères maximum</i>
Windows long file name / Norma de archivo largo Windows / Nom de fichier long Windows		Up to 62 characters / Hasta 62 caracteres / <i>62 caractères maximum</i>
Multiple session / Sesión múltiple / Session multiple		○
80-minute discs (capacity: 700 MB) / Discos de 80 minutos (capacidad: 700MB) / Disques de 80 minutes (capacité: 700 Mo)		○

- Maximum number of characters for file/folder names includes 4 extension characters—“.MP3”.
- El número máximo de caracteres para los nombres de archivos/carpetas incluye 4 caracteres de extensión—.MP3”.
- *Le nom maximum de caractères pour les noms de fichier/dossier comprend les 4 caractères de l'extension—.MP3”.*

Table for playable MP3 files / Tabla de archivos MP3 reproducibles / Tableau des fichiers MP3 reproductibles

○: Compatible / Compatibles / Compatible

		KD-DV5000	
MP3	Bit-rate / Velocidad de bit / Débit binaire	8 kbps—320 kbps	
	VBR	○	
	Sampling frequency / Frecuencia de muestreo / Fréquence d'échantillonnage	MPEG-1	48 kHz, 44.1 kHz, 32 kHz
		MPEG-2	24 kHz, 22.05 kHz, 16 kHz
	Joint stereo / Joint Stereo / Mode stéréo combiné	○	
	Emphasis / Emphasis / Accentuation	—	
	ID3-Tag / ID3-Tag / Balise ID3	Ver. 1.0, 1.1	
m3u playlist / m3u playlist / Playlist m3u		Not available / No disponible / <i>Non disponible</i>	
Manual search / Búsqueda manual / Recherche manuelle		○ (Search speed is not constant. / La velocidad de búsqueda no es constante. / <i>La vitesse de recherche n'est pas constante.</i>)	
Maximum number of folder hierarchy / Número máximo de jerarquía de carpetas / Nombre maximum de hiérarchies de dossiers		10	
Maximum number of files/folders / Número máximo de archivos/carpetas / Nombre maximum de fichiers/dossiers	Files on each folder / Archivos en cada carpeta / Fichiers dans chaque dossier	150	
	Folders on a disc / Carpetas en un disco / Dossiers dans un disque	99	
	Total / Total / Total	14 850	
Maximum number of characters on the display / Número máximo de caracteres en la pantalla / Nombre maximum de caractères sur l'affichage		62 (32 on the monitor) (including [.MP3]) 62 (32 en el monitor) (incluyendo [.MP3]) <i>62 (32 sur le moniteur) (incluant [.MP3])</i>	

Questions and Answers

An MP3 disc requires a long readout time...?

When an MP3 disc is inserted, information inside the disc (number of folders and files, and positions of data) is first read.

So, in the following cases, a fairly long time may be needed before playback starts:

- If the file structure is complicated,
- If the number of files is large, or
- If the number of sessions is large (in case of multi-session discs).

There occurs sound interruption or sound skipping...?

Sound interruption or sound skipping may occur, depending on recording conditions (missing data, etc.) or media conditions (stain, scratch, warp, etc.).

MP3 files are not played back in an intended order...?

This player plays back MP3 files in the order they are organized on the disc.

- The playback order may differ from your intended order because of your writing software.

Elapsed playing time is not displayed correctly...?

Files recorded in VBR (variable bit rate) have a discrepancy in elapsed time display, and do not show the actual passage of time. Especially, after performing the search function, this difference becomes noticeable.

Preguntas y respuestas

¿Un disco MP3 requiere un mayor tiempo de lectura...?

Cuando se inserta un disco MP3, primero se lee la información contenida dentro del disco (número de carpetas y archivos, y posiciones de los datos).

Por lo tanto, en los siguientes casos, es posible que se tarde un poco antes de iniciarse la reproducción:

- Si la estructura del archivo es complicado,
- Si el número de archivos es grande,
- Si el número de sesiones es grande (en caso de discos de múltiples sesiones).

¿Ocurre la interrupción de sonido o la omisión de sonido...?

Puede producirse interrupción u omisión de sonido, dependiendo de las condiciones de grabación (datos faltantes, etc.) o del medio (manchas, rayaduras, alabeo, etc.).

¿Los archivos MP3 no se reproducen en el orden previsto...?

Este reproductor reproduce archivos MP3 en el orden en que se encuentran organizados en el disco.

- El orden de reproducción puede ser distinto del orden previsto debido a su software de escritura.

¿El tiempo transcurrido no se visualiza correctamente...?

Los archivos grabados en VBR (velocidad de bit variable) presentan discrepancia en la visualización del tiempo transcurrido, y no visualizan exactamente el tiempo que transcurre. Especialmente, esta diferencia se vuelve más evidente después de realizar la función de búsqueda.

Questions et réponses

Le temps d'initialisation d'un disque MP3 est plus long...?

Quand un disque MP3 est inséré, les informations dans le disque (nombre de dossiers et de fichiers, position des données) sont lues.

Dans les cas suivants, un temps plus long peut être nécessaire avant que la lecture démarre:

- Si la structure des fichiers est compliquée.
- Si le nombre de fichiers est grand.
- Si le nombre de sessions est grand (dans le cas d'un disque multi sessions).

Il y a des interruptions de son ou le son est sauté...?

Des interruptions du son ou des sauts dans la lecture peuvent se produire en fonction des conditions d'enregistrement (données manquantes, etc.) ou des conditions du support (saleté, rayure, disque gondolé, etc.).

Les fichiers MP3 ne sont pas reproduits dans l'ordre souhaité...?

Ce lecteur reproduit les fichiers MP3 dans l'ordre où ils sont organisés sur le disque.

- L'ordre de lecture peut différer de l'ordre souhaité à cause du logiciel de gravure.

La durée de lecture écoulée n'est pas affichée correctement...?

Les fichiers enregistrés en mode VBR (débit binaire variable) ont une différence dans l'affichage de la durée de lecture écoulée et n'affiche pas le temps du passage actuel. Plus spécialement, la différence devient importante après l'utilisation de la fonction de recherche.