


# JVC

English

## DVD DIGITAL CINEMA SYSTEM


### TH-M508

Consists of XV-THM508, SP-PWM508, SP-THM508F, SP-THM508C and SP-THM505S

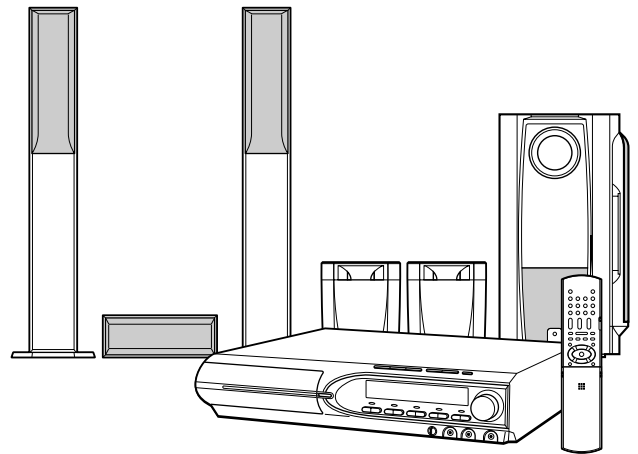

### TH-M303

Consists of XV-THM303, SP-PWM303, SP-THM303F, SP-THM303C and SP-THM303S

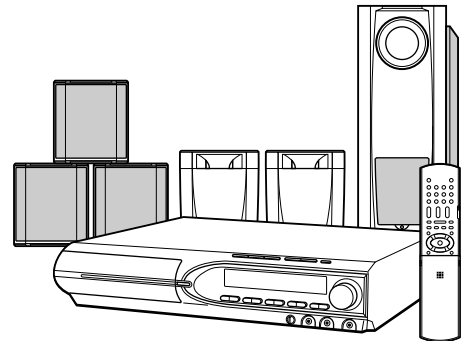

**AV COMPU LINK**

*Digital Direct Progressive Scan*

## INSTRUCTIONS

# Warnings, Cautions and Others

 
## CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

## CAUTION – button! (XV-THM508/ XV-THM303)

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).

The  button in any position does not disconnect the mains line.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp goes off. The power can be remote controlled.

## CAUTION

### (SP-PWM508/ SP-PWM303)

The power supply to the subwoofer is linked to the center unit. The POWER ON lamp on the subwoofer lights green when the power is turned on.

## CAUTION

- Do not block the ventilation openings or holes.  
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

## IMPORTANT FOR LASER PRODUCTS





1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

<b>CAUTION:</b> Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	<b>ADVARSEL:</b> Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)	<b>WARNING:</b> Synlig och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)	<b>VARO:</b> Avattaessa ja suojauslukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)
--	---	--	--

## Warnings, Cautions and Others

### Caution: Proper Ventilation

To avoid risk of electric shock and fire and to protect from damage, place the apparatus on a level surface. The minimal clearances are shown below:

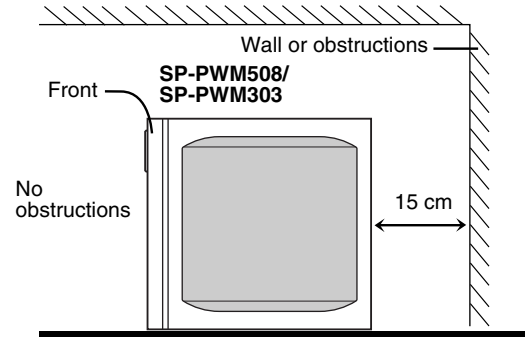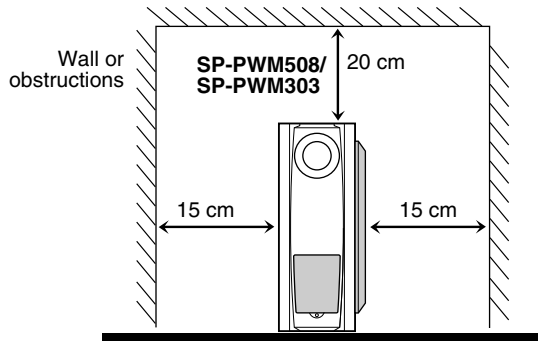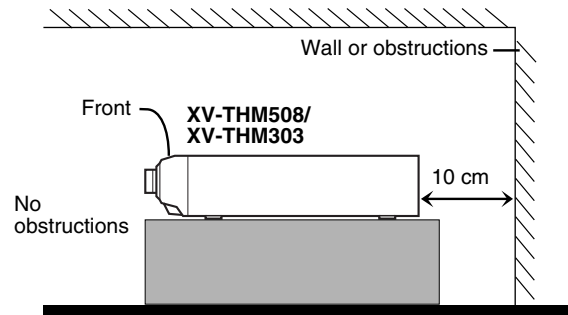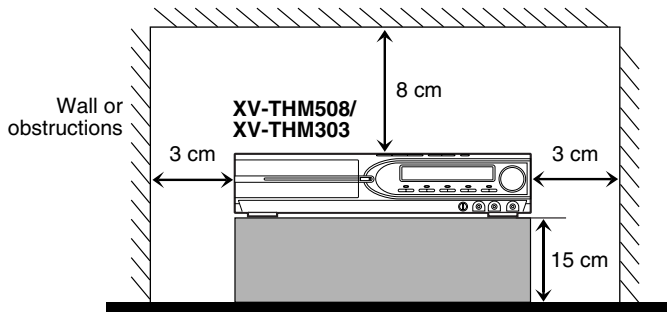

# Table of contents

---

## **Introduction ..... 2**

Notes on handling .....	2
Supplied accessories .....	2

## **About discs ..... 3**

Playable disc types .....	3
---------------------------	---

## **Description of parts and controls ... 5**

### **Connections ..... 8**

Connecting the FM and AM antennas .....	8
Connecting the satellite (front, center, surround) speakers .....	9
Speaker layout .....	11
Connecting a TV .....	11
Connecting the powered subwoofer .....	12
Connecting to an analog component .....	12
Connecting to a digital component .....	12
Setting the VOLTAGE SELECTOR switch .....	13
Connecting the power cord .....	13

### **Operating external components with the remote control ..... 14**

Operating the TV .....	14
Operating the DBS tuner or CATV converter .....	14
Operating the VCR .....	15

### **Basic operations ..... 16**

Turning the system on/off .....	16
Selecting the source to play .....	17
Adjusting the volume [VOLUME] .....	17
Listening with headphones (not supplied) .....	17
Turning off the sound temporarily [MUTING] .....	17
Adjusting the brightness of the indications [DIMMER] .....	17
Sleep Timer [SLEEP] .....	18
Adjusting the output level of the subwoofer and center/surround speakers [SUBWFR, CENTER, SURR L/R] .....	18
Adjusting the treble sound [TREBLE] .....	18
Changing the scan mode .....	18
Optimizing the speaker settings [Smart Surround Setup] .....	19

### **Playback ..... 20**

Basic playback .....	20
One Touch Replay .....	22
Fast-forward/fast-reverse search .....	22
Skip to the beginning of a desired selection .....	22
Locating a desired title/group using number buttons .....	23
Playing back a bonus group .....	23

## **Advanced operations ..... 24**

Using the surround mode .....	24
Using the on-screen bar .....	25
Playing from a specified position on a disc .....	27
Using the file control display .....	28
Resume Playback .....	29
Selecting a view angle .....	29
Selecting the subtitle .....	29
Selecting the audio .....	30
Special picture playback .....	30
Program Playback .....	32
Random Playback .....	33
Repeat Playback .....	33
Tray lock .....	34
Sound and other settings .....	35

## **Setting DVD preferences ..... 36**

Using the setup menus .....	36
Menu description .....	36

## **Tuner operations ..... 40**

Setting the AM tuner interval spacing .....	40
Manual tuning .....	40
Preset tuning .....	41
Selecting the FM reception mode .....	41
Reducing the noise of AM broadcast .....	41

## **AV COMPU LINK remote control system ..... 42**

## **KARAOKE operations ..... 43**

Basic KARAOKE operation .....	43
Reserving songs .....	44
Selecting audio .....	44
Adding an echo effect to your voice .....	45
Shifting the pitch of the playback sound .....	45

## **References ..... 46**

Maintenance .....	46
Troubleshooting .....	46
Specifications .....	47

# Introduction

## Notes on handling

### ■ Important cautions

#### Installation of the system


- Select a place which is level, dry and neither too hot nor too cold; between 5°C and 35°C.
- Leave sufficient distance between the system and the TV.
- Do not use the system in a place subject to vibration.

#### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power is always consumed while the power cord is connected to the wall outlet (center unit only).
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

#### To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.

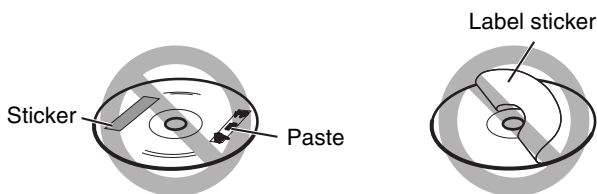

#### Note about copyright laws

Check the copyright laws in your country before recording from the discs. Recording of copyrighted material may infringe copyright laws.

#### Note about copyguard system

The discs are protected by copyguard system. When you connect the system to your VCR directly, the copyguard system activates and the picture may not be played back correctly.

### ■ Safety precautions

#### Avoid moisture, water and dust

Do not place the system in moist or dusty places.

#### Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

#### When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the wall outlet.

#### Do not block the vents

Blocking the vents may damage the system.

#### Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

#### If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock.

## Supplied accessories

Check to be sure you have all of the supplied accessories. The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)
- Power cord (1)
- System cord (1)
- Composite video cord (1)
- Speaker cords (TH-M508 only)
  - For satellite (front left/right) and center speakers (3)
  - For satellite speakers (surround left/right) (2)
- Screws (TH-M508 only)
  - M4 x 20 mm:
    - For front speakers (8)
- AC plug adaptor (2) (except for Australia)

# About discs

## Playable disc types

This system has been designed to play back the following discs: DVD VIDEO, DVD AUDIO, Video CD (VCD), Super Video CD (SVCD), Audio CD (CD), CD-R and CD-RW.

- This system accommodates the NTSC and PAL system. When you play an NTSC disc with the scan mode set to "PAL" (☞ pg. 18), the NTSC video signal is converted to the PAL60 signal and output.
- This system can also play MP3, WMA, JPEG and MPEG4 files recorded on CD-Rs and CD-RWs. (☞ pg. 20)
- This system can also play finalized DVD-R/-RWs recorded in DVD VIDEO format. However, some discs may not be played because of their disc characteristics or recording conditions.

### Discs you can play:

DVD VIDEO 	CD 
DVD AUDIO 	CD-R 
VCD  	CD-RW 
SVCD  	

DVD Logo is a trademark of DVD Format/Logo Licensing Corporation.

### Region code of DVD VIDEO

DVD VIDEO players and DVD VIDEO discs have their own Region Code numbers. This system can play back DVD VIDEO discs whose Region Code numbers include the system's Region Code, which is indicated on the rear panel.

Example of playable DVD:

For Australia, Central and South America



For Middle East



Except for Australia, Central and South America, and Middle East



If a DVD with an improper Region Code number is loaded, "REGION CODE ERROR!" appears on the TV screen and playback cannot start.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, SACD, CD-ROM, CD-I (CD-I Ready), Photo CD, etc.  
Playing back these discs will generate noise and damage the speakers.
- **On some DVD VIDEOS, DVD AUDIOS, VCDs or SVCDs, their actual operation may be different from what is explained in this manual. This is due to the disc programming and disc structure, not a malfunction of this system.**

### Notes on CD-R and CD-RW

- User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already "finalized".
- This system can play CD-Rs or CD-RWs recorded on a personal computer if they have been recorded in the audio CD format. This system can also play CD-Rs or CD-RWs if MP3, WMA, JPEG or MPEG4 files are recorded on them.  
However, some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.  
Especially, the configuration and characteristics of an MP3, WMA, JPEG or MPEG4 disc are determined by the writing (encoding) software and hardware used for recording. Therefore, due to the software and hardware used, the following symptoms may occur:
  - Some discs may not be played back.
  - Some tracks on an MP3 or WMA disc may be skipped or may not be played back normally.
  - Some files on a JPEG or MPEG4 disc may be played back distortedly.
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- CD-RWs may require a longer readout time. This is caused by the fact that the reflectance of CD-RWs is lower than that of regular CDs.

## About discs

---

### Notes on MP3/WMA/JPEG/MPEG4 discs

- MP3/WMA/JPEG/MPEG4 discs (either CD-R or CD-RW) require a longer readout time. (It differs due to the complexity of the directory/file configuration.)
- When making an MP3/WMA/JPEG/MPEG4 disc, select ISO 9660 Level 1 or Level 2 for the disc format.
- This system supports “multi-session” discs (up to 20 sessions).
- This system cannot play “packet write” discs.
- The system can only play MP3/WMA/JPEG/MPEG4 files with the following file extensions:  
MP3: “.MP3”, “.Mp3”, “.mP3” and “.mp3”  
WMA: “.wma”, “.WMA” and any uppercase and lowercase combination (such as “.Wma”)  
JPEG: “.jpg”, “.jpeg”, “.JPG”, “.JPEG” and any uppercase and lowercase combination (such as “.Jpg”)  
MPEG4: “.asf”, “.ASF” and any uppercase and lowercase combination (such as “.Asf”)
- If different type of files (audio (MP3/WMA), still picture (JPEG), and video (MPEG4) files) are recorded on a disc, set the FILE TYPE setting in the PICTURE menu to the appropriate setting for the data to be read. (☞ pg. 37)
- The system recognizes up to 150 tracks (files) per group, 99 groups per disc, and the total number of the tracks (file) that the system can play is 1000. For example, if you set FILE TYPE to AUDIO (☞ pg. 37) and play a disc that contains 500 MP3 tracks, 200 JPEG files, and 600 WMA tracks, the system can play 500 MP3 tracks and the first 500 of 600 WMA tracks.
- Some MP3/WMA/JPEG/MPEG4 discs may not be played back normally because of their disc characteristics or recording conditions.

### Notes on MP3/WMA discs only

- The system supports MP3 files recorded with a bit rate of 32 – 320 kbps and a sampling frequency of 16 kHz, 22.05 kHz, 24 kHz\*, 32 kHz, 44.1 kHz, or 48 kHz.
- If the tag information (album name, artist, and track title, etc.) is recorded on a disc, it appears in the file control display on the TV screen. (☞ pg. 28)
- We recommend to record each piece of material (song) at a sample rate of 44.1 kHz and at a data transfer rate of 128 (96\*) kbps.
- Some tracks may be skipped or may not be played back normally.  
\* For WMA only

### Notes on JPEG discs only

- We recommend to record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a longer time to be displayed.)
- This system can only play baseline JPEG files.
- Some files on a JPEG disc may be played back distordedly.

### Notes on MPEG4 disc only

- The system supports the types of simple profile as MPEG4 files (MPEG4 SP).
- The system supports MPEG4 files recorded with the maximum bit rate of 384 kbps and an audio codec of G.726. (To play the MPEG4 file, it is required that G.726 formatted audio data is contained in that file.)
- The maximum size of the played picture is at a 352 x 288 pixel resolution (CIF).
- Some files may be skipped or may not be played normally.

---

***This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.***

***“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”***


---

***USE OF THIS PRODUCT IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE BY A CONSUMER ENGAGING IN PERSONAL AND NON-COMMERCIAL ACTIVITIES.***


# Description of parts and controls

The illustrations of the center unit and the subwoofer used in this manual are of TH-M508 unless otherwise noted.

## Front panel (center unit)

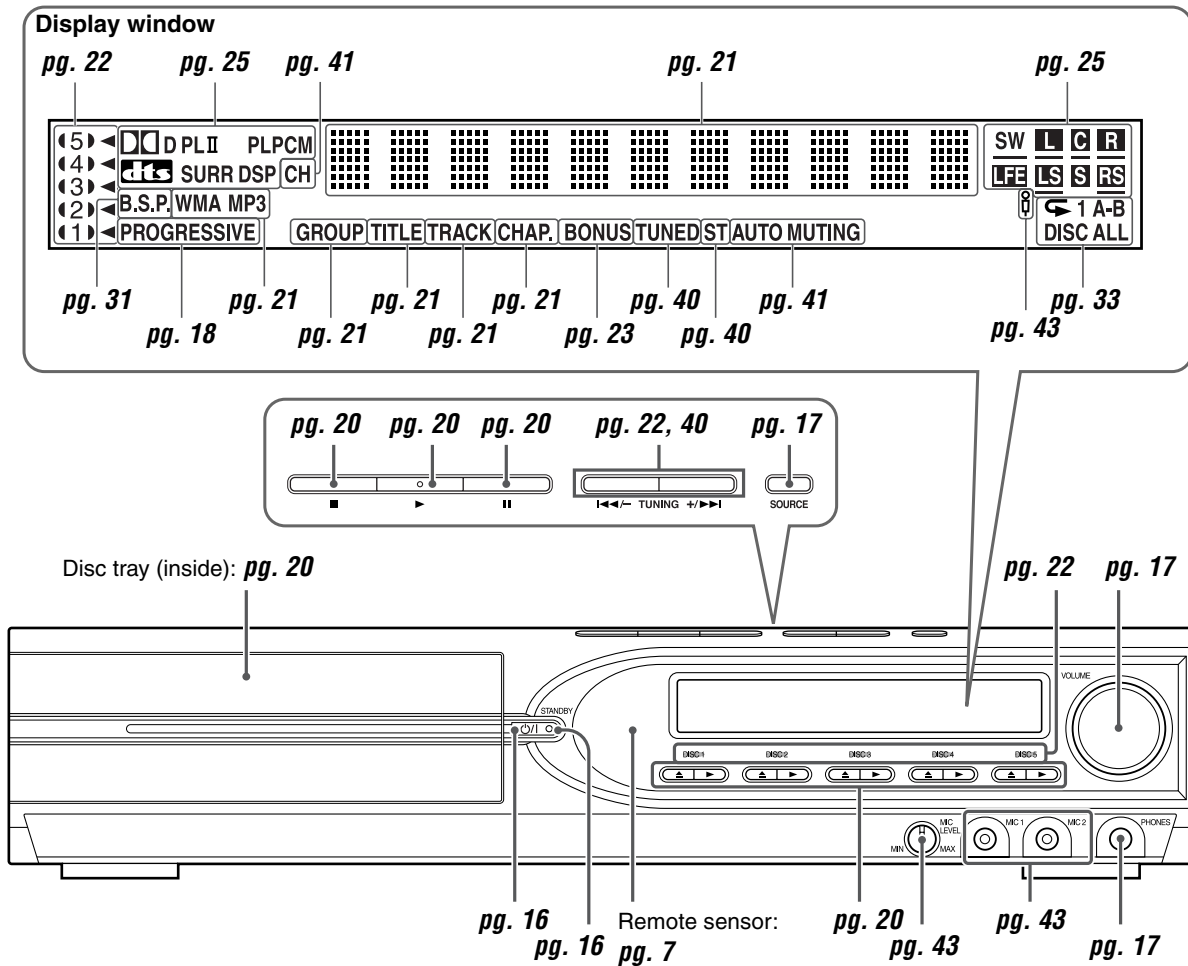



## Rear panel (center unit)

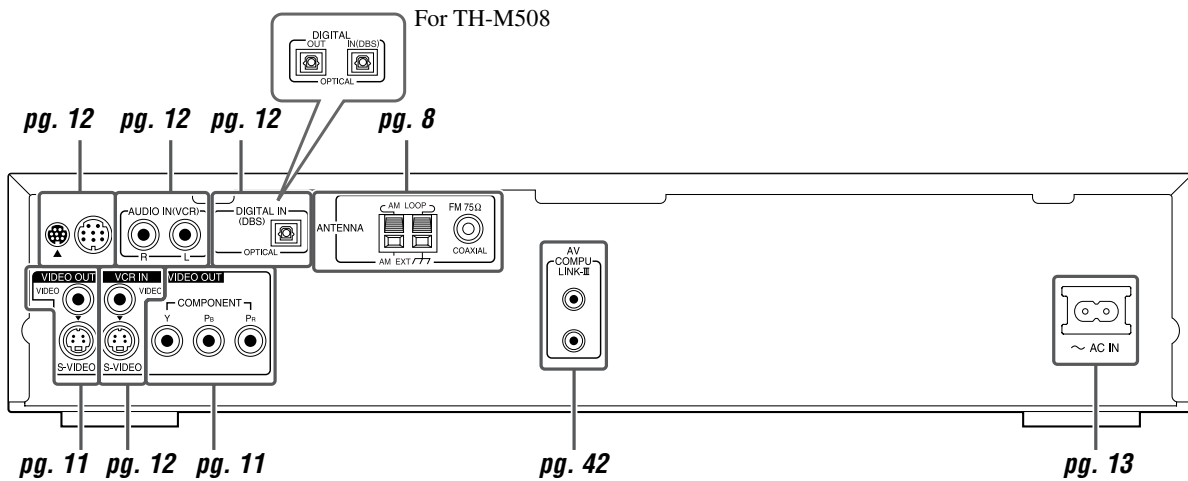





Powered subwoofer

SP-PWM508

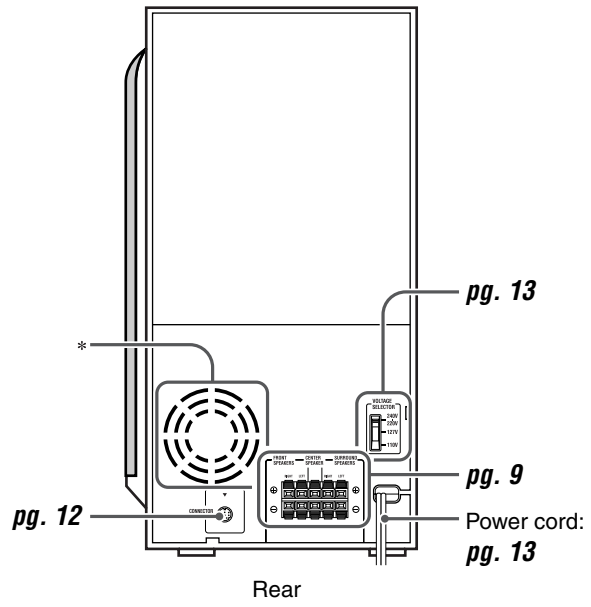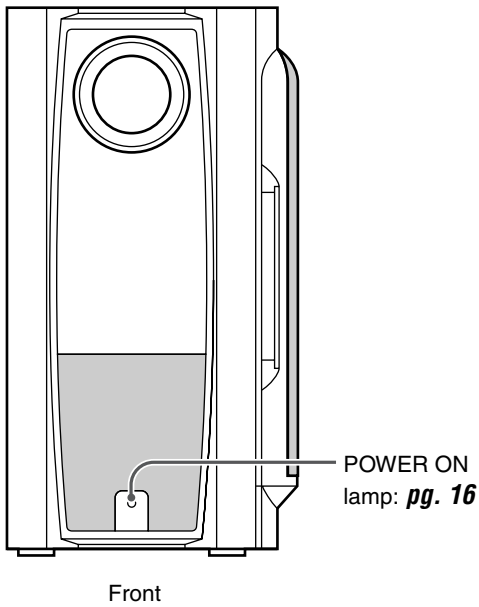

SP-PWM303

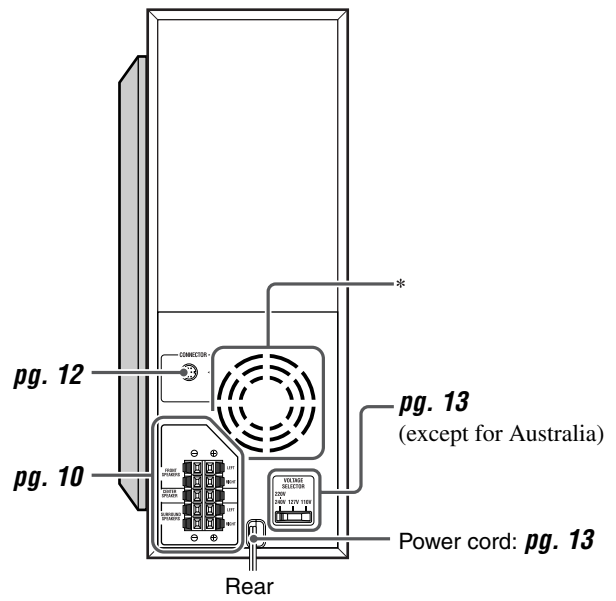
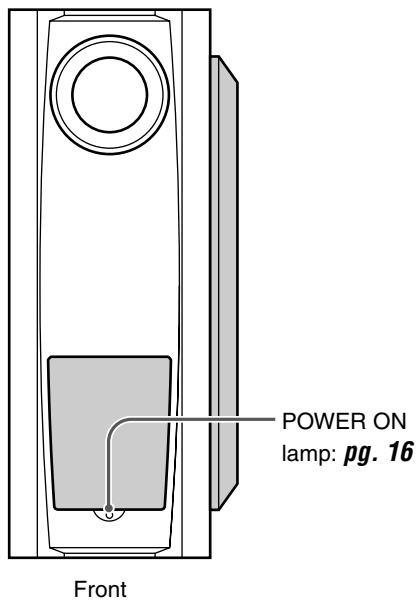


\* Do not block the ventilation openings.

**NOTE**

- For safety reasons, always ensure that there is sufficient space behind the powered subwoofer.


Remote control

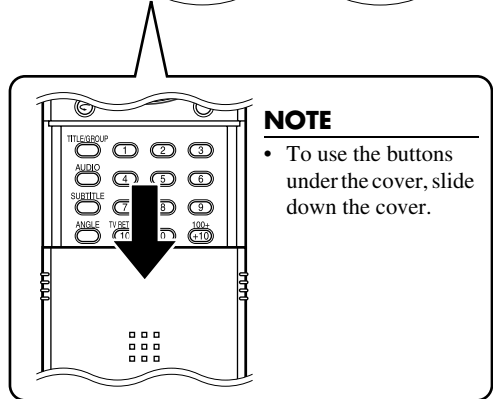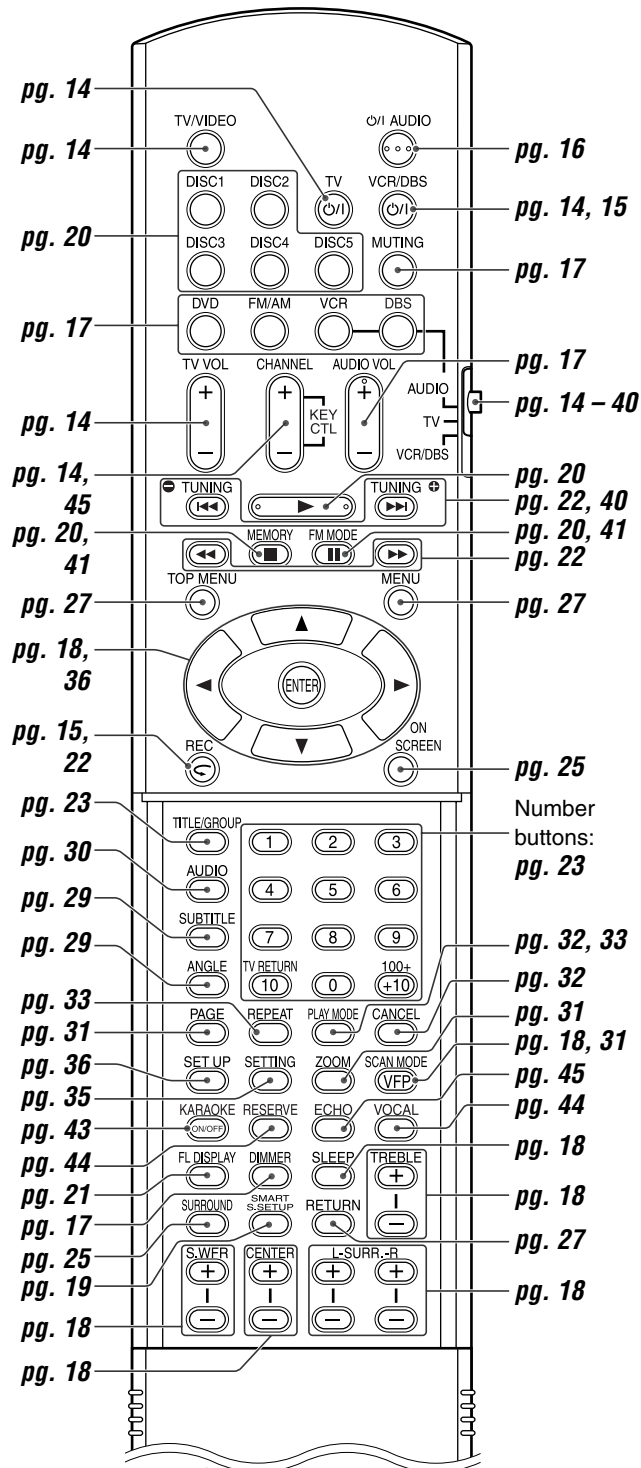

**NOTE**

- To use the buttons under the cover, slide down the cover.

Putting batteries in the remote control

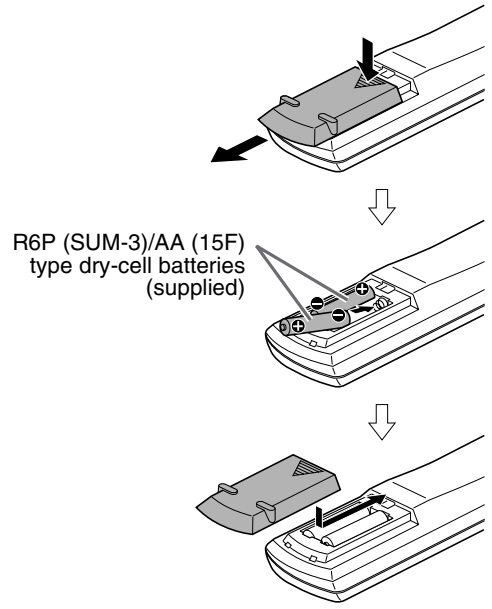

R6P (SUM-3)/AA (15F)  
type dry-cell batteries  
(supplied)

If the range or effectiveness of the remote control decreases, replace both batteries.

**CAUTION**

- Do not expose batteries to heat or flame.

Operating the system from the remote control


Aim the remote control directly to the front panel of the center unit.

- Do not hide the remote sensor.

## Connecting the FM and AM antennas

### ■ AM loop antenna


#### Setting up supplied AM loop antenna

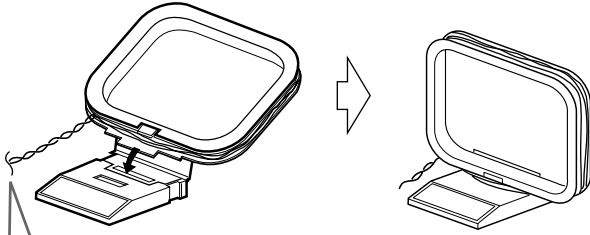


If the antenna cord is covered with the insulation coat, twist and pull the insulation coat off and remove.

#### Connecting AM loop antenna


1

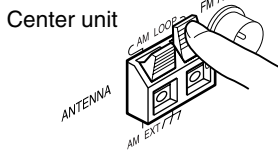

2

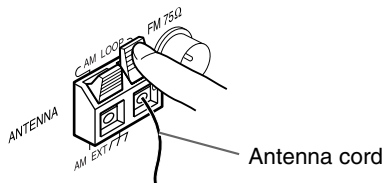

3

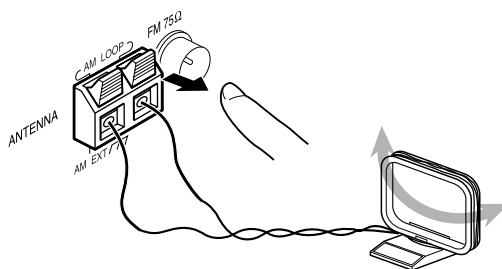


- Turn the loop antenna until you have the best reception during AM broadcast program reception.


#### NOTE

- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cords. This could cause poor reception.


#### If reception is poor

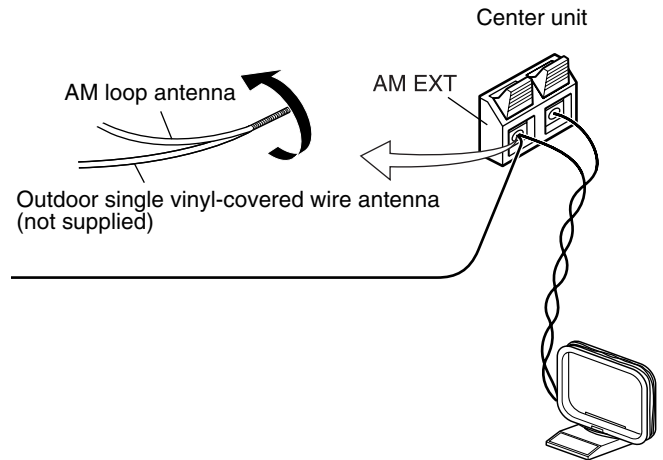

### ■ FM antenna

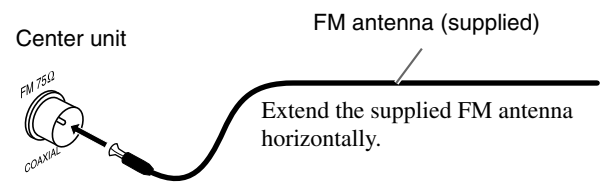

#### If reception is poor

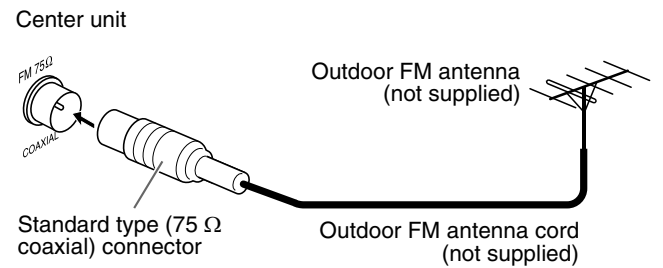

#### NOTE

- We recommend that you use coaxial cable for the FM antenna as it is well-shielded against interference.

# Connecting the satellite (front, center, surround) speakers


**Before connecting the speaker cords;**  
Twist and pull the insulation coat off and remove.



Speaker cord (supplied)

- Connect the silver cords to the black (⊖) terminals.
- Connect the copper cords to the (⊕) terminals referring to the table below:

FRONT SPEAKERS (RIGHT)	Red
FRONT SPEAKERS (LEFT)	White
CENTER SPEAKER	Green
SURROUND SPEAKERS (RIGHT)	Gray
SURROUND SPEAKERS (LEFT)	Blue

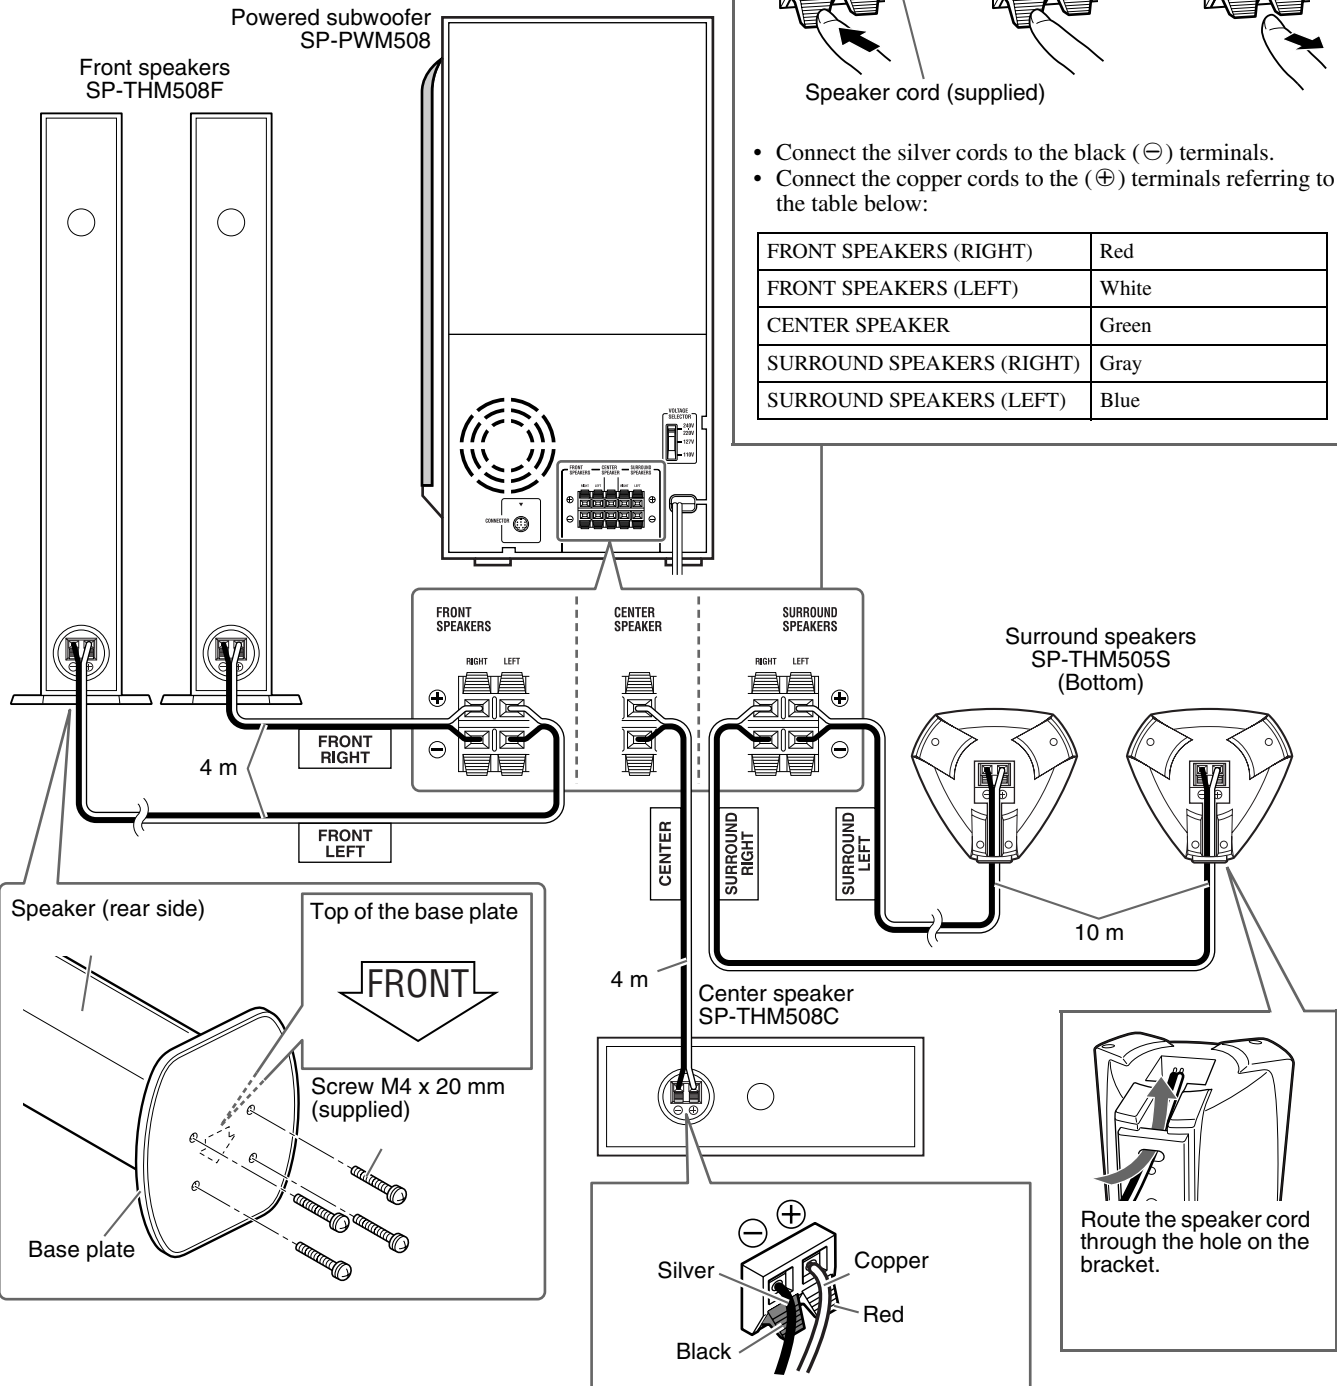


**CAUTION**

- When you connect speakers other than the supplied ones, use speakers of the same speaker impedance (SPEAKER IMPEDANCE) indicated near the speaker terminals on the rear of the powered subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.

- When installing the satellite speakers on the wall;
  - Be sure to have them installed on the wall by a qualified personnel. DO NOT install the satellite speakers on the wall by yourself to avoid unexpected damage from their falling off the wall due to incorrect installation or weakness in wall structure.
  - Care must be taken in selecting a location for speaker installation on a wall. Injury to personnel or damage to equipment may result if the speakers installed interfere with daily activities.

**Before connecting the speaker cords;**


Twist and pull the insulation coat off and remove.

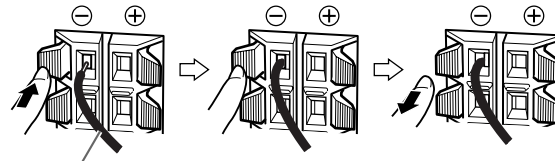

Speaker cord (supplied)

- Connect the silver cords to the black (⊖) terminals.
- Connect the copper cords to the (⊕) terminals referring to the table below:

FRONT SPEAKERS (LEFT)	White
FRONT SPEAKERS (RIGHT)	Red
CENTER SPEAKER	Green
SURROUND SPEAKERS (LEFT)	Blue
SURROUND SPEAKERS (RIGHT)	Gray

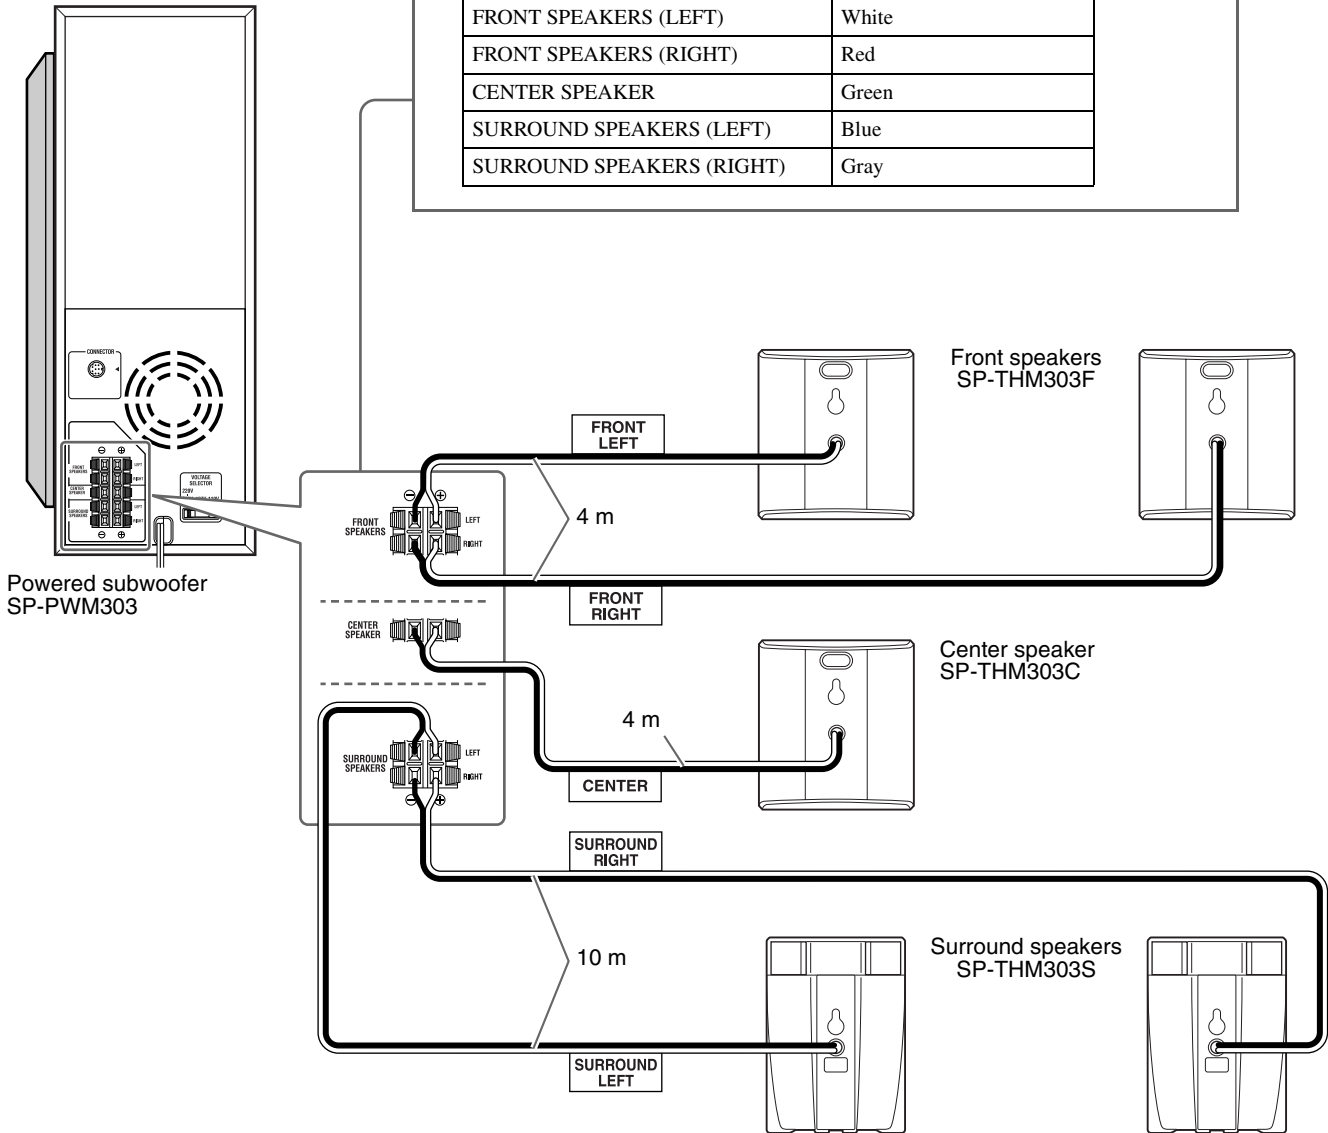


**CAUTION**

- When you connect speakers other than the supplied ones, use speakers of the same speaker impedance (SPEAKER IMPEDANCE) indicated near the speaker terminals on the rear of the powered subwoofer.
- DO NOT connect more than one speaker to one speaker terminal.

- When installing the satellite speakers on the wall;
  - Be sure to have them installed on the wall by a qualified personnel. DO NOT install the satellite speakers on the wall by yourself to avoid unexpected damage from their falling off the wall due to incorrect installation or weakness in wall structure.
  - Care must be taken in selecting a location for speaker installation on a wall. Injury to personnel or damage to equipment may result if the speakers installed interfere with daily activities.

## Speaker layout

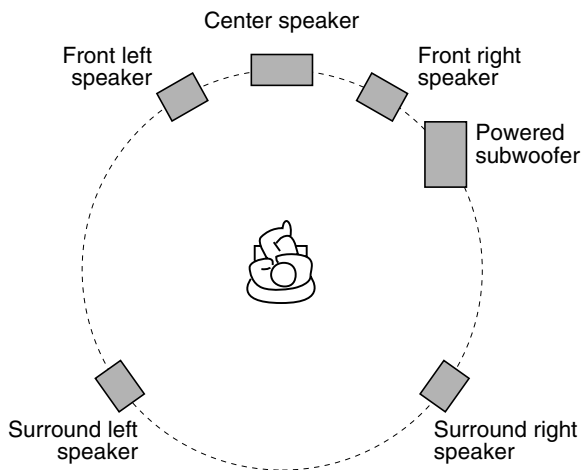

### NOTE

- Although the satellite speakers and the powered subwoofer are magnetically shielded, the TV screen may appear mottled. In this case, keep enough distance between the speakers and the TV.
- The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, they may cause color distortions. So, pay attention to the following when installing the speakers.
  - When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers. Then wait at least 30 minutes before turning on the TV's main power switch again.

Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.

- Place the satellite speakers on a flat and level surface.
- Be sure to place the powered subwoofer to the TV's right. If you place the powered subwoofer to the TV's left, keep sufficient distance between them to prevent the TV screen from appearing mottled.


For TH-M508 only:

- Do not lean against the satellite speakers, as the speakers could fall down or break, possibly causing injury. Especially be careful not to let children lean against them.

## Connecting a TV

- You can get better picture quality in the order — Component video > S-video > Composite video.
- Distortion of picture may occur when connecting to the TV via a VCR, or to a TV with a built-in VCR.
- You need to set "MONITOR TYPE" in the PICTURE menu correctly according to the aspect ratio of your TV. (☞ pg. 37)


### ■ To connect a TV equipped with the component video input jacks

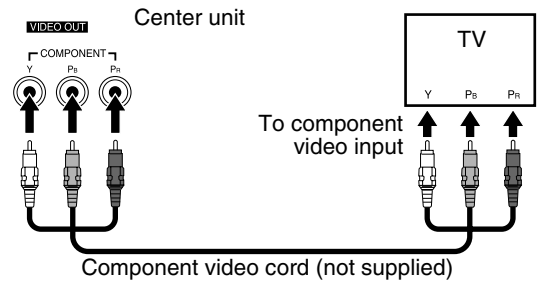

### NOTE

- If your TV supports progressive video input, you can enjoy a high quality picture by setting the progressive scan mode to active. (☞ pg. 18)
- If the component video input jacks of your TV are of the BNC type, use a plug adapter (not supplied) to convert the pin plugs to BNC plugs.
- The component video signals can be output only when you select "DVD" as the source to play. (☞ pg. 17)


### ■ To connect a TV equipped with the composite video or S-video jack

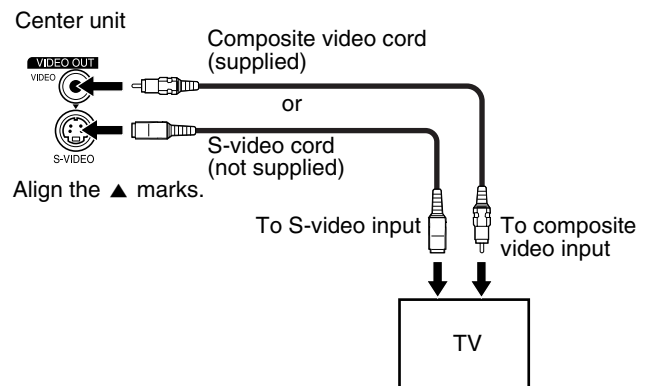

### NOTE

- Select the appropriate scan mode according to your TV. See "Changing the scan mode" (☞ pg. 18).

## Connecting the powered subwoofer

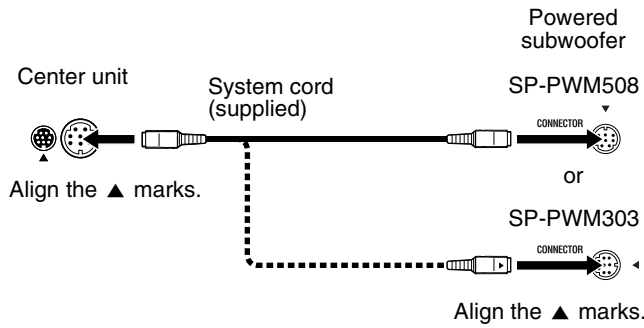


### NOTE

- The way of connecting the system cord varies depending on the type of the powered subwoofer.

## Connecting to an analog component

You can enjoy the sound of an analog component.

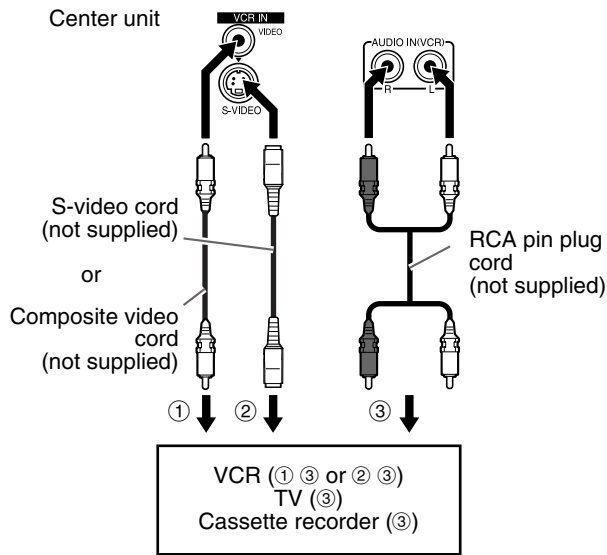


- ① To composite video output
- ② To S-video output
- ③ To audio output

### NOTE

- The signals input to the VIDEO jack of the VCR IN jacks will be output only from the VIDEO jack of the VIDEO OUT jacks, not from the S-VIDEO jack of the VIDEO OUT jacks.

## Connecting to a digital component

You can enjoy the sound of a digital component.

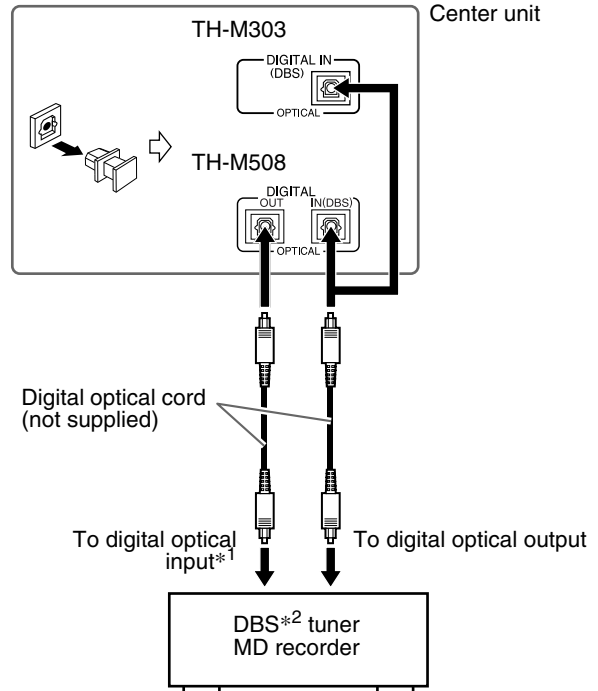

\*1 For TH-M508 only:

This system can send digital audio signals to digital component such as MD recorder or AV receiver. For details of output signal selection, see "DIGITAL AUDIO OUTPUT" (pg. 37).

\*2 DBS = Direct Broadcasting Satellite

### NOTE

- Only digital audio signals can be input when selecting "DBS" as the source to play. (pg. 17) When connecting a video component such as a DBS tuner, operate this system to listen to the sound.
- When DBS is selected as the source, PCM signal is output from DIGITAL OUT.

## Setting the VOLTAGE SELECTOR switch


To avoid damaging the powered subwoofer, set the VOLTAGE SELECTOR switch to the voltage of your area.

When you change the position of the VOLTAGE SELECTOR switch, use a tool such as a slotted screwdriver, etc.


### CAUTION

**DO NOT plug the power cord of the powered subwoofer before setting the VOLTAGE SELECTOR switch to the correct voltage.**

SP-PWM508

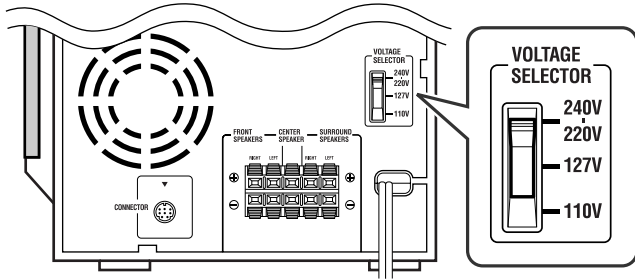


SP-PWM303 (except for Australia)

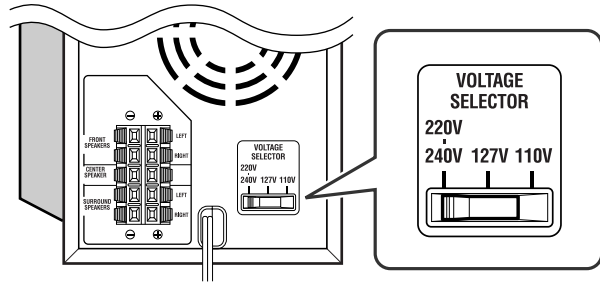

## Connecting the power cord

Make sure that all other connections have been completed.

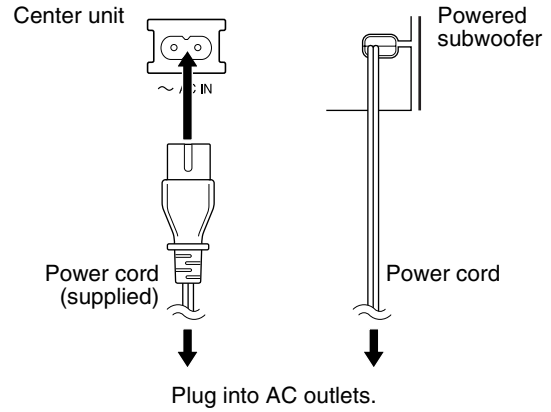


### CAUTION

- Disconnect the power cord before cleaning or moving the system.
- Do not pull on the power cord to unplug the cord. When unplugging the cord, always grasp and pull the plug so as not to damage the cord.
- If the AC outlets do not match the AC plugs, use the supplied AC plug adaptors.



# Operating external components with the remote control

The buttons described below are used on pages 14 and 15.

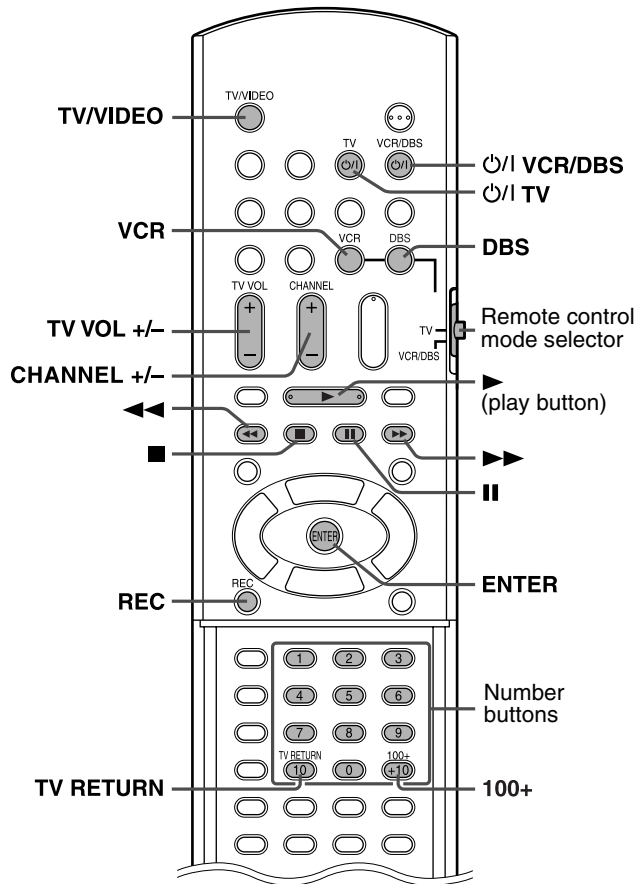

## NOTE

- Manufacturers' codes are subject to change without notice.
- Set the codes again after replacing the batteries of the remote control.

## Operating the TV

### ■ To set the manufacturer's code

You can operate a JVC TV without setting the manufacturer's code.

- 1 Slide the remote control mode selector to TV.
- 2 Press and hold **TV**.  
Keep the button pressed until step 4 is finished.
- 3 Press **ENTER**.

## 4 Press number buttons (1-9, 0) to enter the manufacturer's code (2 digits).

Examples:

For a Hitachi TV:

Press 1, then 0.

For a Toshiba TV:

Press 0, then 8.

Manufacturer	Code	Manufacturer	Code
JVC	01	Samsung	12
Hitachi	10	Sharp	06
Magnavox	02	Sony	07
Mitsubishi	03	Toshiba	08
Panasonic	04, 11	Zenith	09
RCA	05		

## 5 Release **TV**.

If there is more than one code listed for corresponding brand, try each one until you enter the correct one.

### ■ Operation

Aim the remote control at the TV.

 
### IMPORTANT

Before using the remote control to operate a TV;

- Set the remote control mode selector to TV.

The following buttons are available:

- TV**: Turns TV on and off.
- TV VOL +/-**: Adjusts the volume.
- TV/VIDEO**: Selects the input mode (either TV or VIDEO).
- CHANNEL +/-**: Changes the channels.
- 1-10, 0, +10 (100+)**: Selects the channel.
- TV RETURN**: Alternates between the previously selected channel and the current channel.



## Operating the DBS tuner or CATV converter

### ■ To set the manufacturer's code

- 1 Slide the remote control mode selector to VCR/DBS.
- 2 Press **DBS**.
- 3 Press and hold **TV VCR/DBS**.  
Keep the button pressed until step 5 is finished.
- 4 Press **ENTER**.

Continued on next page

## 5 Press number buttons (1-9, 0) to enter the manufacturer's code (2 digits).

Examples:  
 For a GI Jerrold product:  
 Press 0, then 1.  
 For a Sony product:  
 Press 2, then 0.

Manufacturer	Code
Echostar	21
GI Jerrold	01, 02, 03, 04, 05, 06, 07, 08
Hamlin	15, 16, 17, 18
Pioneer	13, 14
RCA	19
Scientific Atlanta	09, 10
Sony	20
Zenith	11, 12

## 6 Release $\odot$ /I VCR/DBS.

If there is more than one code listed for your brand, try each one until you enter the correct one.


### ■ Operation

Aim the remote control at the DBS tuner or CATV converter.

### IMPORTANT

Before using the remote control to operate a DBS tuner or CATV converter;

- 1 Set the remote control mode selector to VCR/DBS.
- 2 Press DBS.

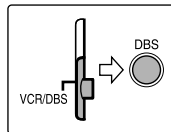

The following buttons are available:

- $\odot$ /I VCR/DBS: Turns DBS tuner or CATV converter on and off.
- CHANNEL +/-: Changes the channels.
- 1-10, 0, +10 (100+): Selects the channel.

## Operating the VCR

### ■ To set the manufacturer's code

- 1 Slide the remote control mode selector to VCR/DBS.
- 2 Press VCR.
- 3 Press and hold  $\odot$ /I VCR/DBS.  
Keep the button pressed until step 5 is finished.
- 4 Press ENTER.

## 5 Press number buttons (1-9, 0) to enter the manufacturer's code (2 digits).

Examples:  
 For a Philips VCR:  
 Press 0, then 9.  
 For an NEC VCR:  
 Press 2, then 5.

Manufacturer	Code	Manufacturer	Code
JVC	01, 02, 03	Philips	09
Emerson	11, 26	RCA	05, 06
Fisher	29	Samsung	24
Funai	10, 14, 15, 16	Sanyo	21, 22, 23
Gold Star	12	Sharp	27, 28
Hitachi	04	Shintom	30
Mitsubishi	13	Sony	18, 19, 20
NEC	25	Zenith	08
Panasonic	07, 17		

## 6 Release $\odot$ /I VCR/DBS.

If there is more than one code listed for your brand, try each one until you enter the correct one.


### ■ Operation

Aim the remote control at the VCR.

### IMPORTANT

Before using the remote control to operate a VCR;

- 1 Set the remote control mode selector to VCR/DBS.
- 2 Press VCR.

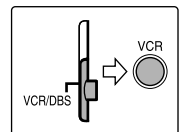

The following buttons are available:

- $\odot$ /I VCR/DBS: Turns VCR on and off.
- ▶ (play button): Starts playback.
- : Stops operation.
- || : Pauses playback.
- ▶▶ : Fast forwards video tape.
- ◀◀ : Rewinds video tape.
- REC: Press this button together with ▶ (play button) to start recording or together with || to pause recording.

CHANNEL +/-: Changes the TV channels on the VCR.

### NOTE

When operating a VCR or DBS tuner/CATV converter;

- The source setting of VCR or DBS remains after you have changed the remote control mode selector to AUDIO or TV. When operating VCR or DBS tuner/CATV converter again, it is not necessary to press VCR or DBS after setting the remote control mode selector.

# Basic operations



 
The buttons on the remote control are used to explain most of the operations in this manual. You can use the buttons on the center unit same as on the remote control for operations unless otherwise noted.

## IMPORTANT

Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.

The buttons described below are used on pages 16 to 19.

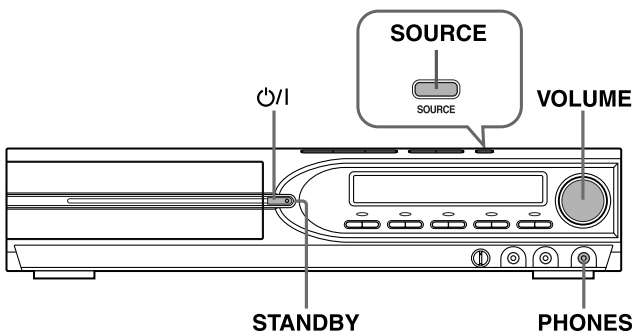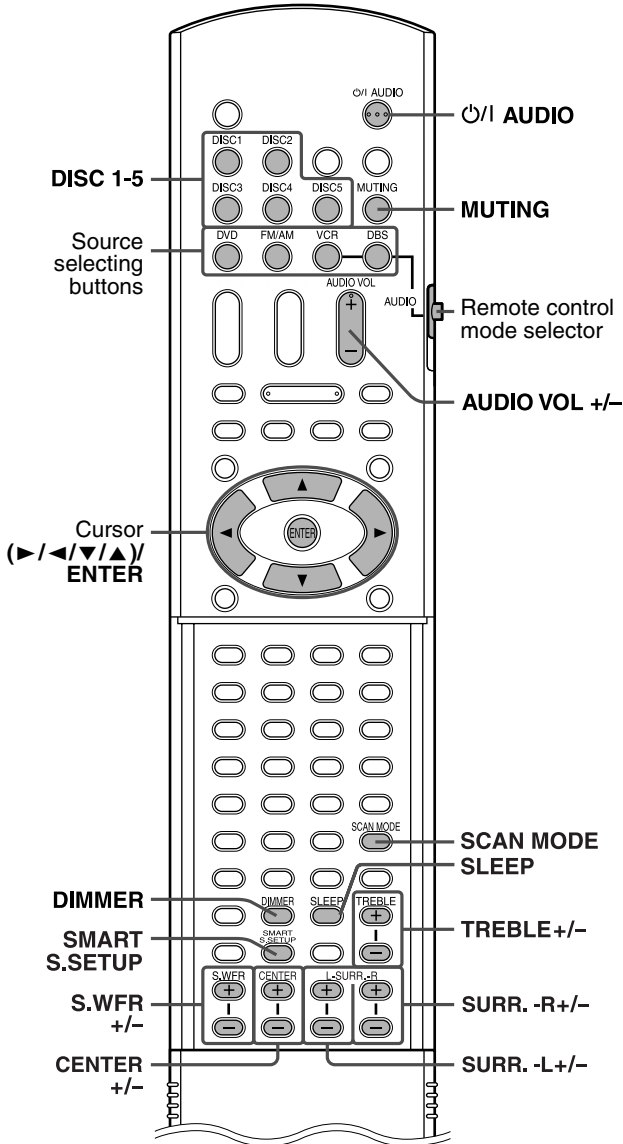

## Turning the system on/off


**On the remote control:**

Press **O/I AUDIO**.

**On the center unit:**

Press **O/I**.

When DVD is selected as the source (see pg. 17), the following messages will appear on the TV screen.

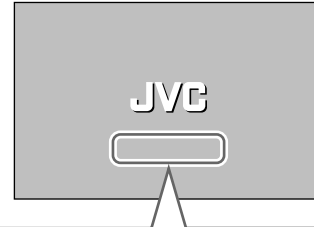

- “OPEN”/“CLOSE”:  
Appears when opening or closing the disc tray.
- “NOW READING”:  
Appears when the system is reading the disc information.
- “REGION CODE ERROR!”:  
Appears when the Region Code of the DVD VIDEO does not match the code the system supports. The disc cannot be played back.
- “NO DISC”:  
Appears when no disc is loaded.
- “CANNOT PLAY THIS DISC”:  
Appears when unplayable disc is loaded.

## NOTE

- The STANDBY lamp turns on when the power is turned off and turns off when the power is turned on.
- The power supply to the subwoofer is linked to the center unit. The POWER ON lamp on the subwoofer lights green when the power is turned on.
- A small amount of the power is consumed even when the power is turned off (center unit only). This is called standby mode and the STANDBY lamp lights in this mode. Unplug the power cord from the AC outlet to turn the power off completely.
- You can also turn on the system by pressing the following buttons;
  - One of **▲** buttons on the center unit
  - One of the source selecting buttons on the remote control
  - One of the DISC (1-5) **▶** buttons or **▶** on the center unit.
 You can use the same buttons on the remote control except after pressing FM/AM.

## Selecting the source to play

### On the remote control:

#### Press one of the source selecting buttons (DVD, FM/AM, VCR or DBS).

**DVD:** To play back a disc (DVD VIDEO, VCD etc.). (☞ pg. 20)

**FM/AM:** To tune in an FM or AM station. (☞ pg. 40)

Each time you press the button, the band alternates between FM and AM.

**VCR:** To select the source from a component connected to the VCR IN jacks and AUDIO IN (VCR) jacks. (☞ pg. 12)

**DBS:** To select the source from a component connected to the DIGITAL IN (DBS) jack. (☞ pg. 12)

### On the center unit:

#### Press SOURCE repeatedly until the source name you want appears on the display window.

#### NOTE

- When AM, FM or DBS is selected as the source, the system does not output video signals.
- It may take time to change the source.

## Adjusting the volume [VOLUME]

#### CAUTION

- Always set the volume to minimum level before starting any source. If the volume is set at its high level, the sudden blast of sound could permanently damage your hearing and/or blow out the speakers.

### On the remote control:

#### Press AUDIO VOL + or –.

### On the center unit:

#### Turn VOLUME.

## Listening with headphones (not supplied)

#### CAUTION

Be sure to turn down the volume;

- Before connecting or putting on headphones as high volume may damage both the headphones and your hearing.
- Before disconnecting headphones as high volume may be suddenly output from the speakers.

While connecting a pair of headphones to the PHONES jack on the center unit, the system automatically cancels the surround mode (☞ pg. 24) currently selected, deactivates the speakers, turn the subwoofer's power off, and activates the headphone mode. "HEADPHONE" appears on the display window.

#### Headphone mode

When using the headphones, the following signals are output regardless of your speaker setting;

- For 2 channel sources, the front left and right channel signals are output from the headphones.
- Multi-channel signals are down-mixed and output from the headphones.
- (DVD AUDIO) When the disc prohibits down-mixing, only the front left and right channels are output from the headphones. In this case, "L/R ONLY" appears on the display window for a few seconds.

## Turning off the sound temporarily [MUTING]

#### Press MUTING.

#### To restore the sound

Perform one on the following:

- Press MUTING again.
- Press AUDIO VOL +/- (or turn VOLUME on the center unit).

## Adjusting the brightness of the indications [DIMMER]

#### Press DIMMER.

Each time you press the button, the brightness level changes.

## Sleep Timer [SLEEP]

The system turns off automatically when the specified period of time has passed.

### Press SLEEP.

Each time you press the button, the shut-off time changes.

Example:



### To check the remaining time

Press SLEEP once.

### To change the remaining time

Press SLEEP repeatedly.

### To cancel

Press SLEEP repeatedly until "SLEEP OFF" appears.

- Turning off the power also cancels the Sleep Timer.

## Adjusting the output level of the subwoofer and center/surround speakers [SUBWFR, CENTER, SURR L/R]

Press S.WFR +/- to adjust the subwoofer.

Press CENTER +/- to adjust the center speaker.

Press SURR.-L +/- to adjust the surround left speaker.

Press SURR.-R +/- to adjust the surround right speaker.

### NOTE

- You can also make adjustments by using the setup menu shown on the TV screen. (☞ pg. 37)
- The adjustments take effect for all sources.
- You cannot make this adjustment when FM or AM is selected as the source.

## Adjusting the treble sound [TREBLE]

Press TREBLE +/-.

### NOTE

- The adjustments take effect for all sources.

## Changing the scan mode

The system can be accommodated to your TV's scan mode.

### NOTE

- To use the system in PROGRESSIVE mode, it is required that the center unit is connected to the TV by using a component video cord (not supplied). (☞ pg. 11)

- While DVD is selected as the source and stopped

### 1 Press and hold SCAN MODE for 2 seconds.

Currently selected mode appears on the display window.

### 2 Press Cursor ▶/◀ to select the desired mode.

- PAL: Select this when your TV supports the PAL interlaced video input only.
- PAL PROG.: Select this when your TV equipped with component jacks supports the PAL progressive video input.
- NTSC: Select this when your TV supports the NTSC interlaced video input only.
- NTSC PROG.: Select this when your TV equipped with component jacks supports the NTSC progressive video input.

You can get better picture quality in "PAL PROG." or "NTSC PROG." mode than in PAL or NTSC mode.

### 3 Press ENTER while the selected mode is displayed.

When "PAL PROG." or "NTSC PROG." is selected, the PROGRESSIVE indicator lights on the display window.

### NOTE

- Although the picture may be distorted when you press ENTER, this is not a malfunction of the system.

- There are some progressive TVs and High-Definition TVs that are not fully compatible with this system, resulting in an unnatural picture when playing back a DVD VIDEO in the progressive scan mode. In such a case, change the scan mode to "PAL" or "NTSC". To check the compatibility of your TV, contact your local JVC customer service center.
- All JVC progressive TVs and High-Definition TVs are fully compatible with this system.

## Optimizing the speaker settings [Smart Surround Setup]


### NOTE

- When you change the positioning of the speakers or listener, or replace the supplied speakers with other ones, perform Smart Surround Setup again.

- While DVD is selected as the source and stopped

**1 Take your position where you listen to the sound.**

**2 Press and hold SMART S.SETUP.**

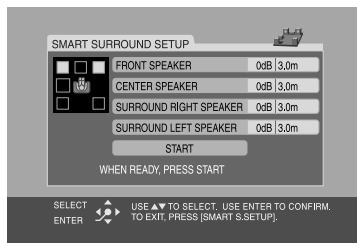

“SETTING UP” flashes on the display window.

**3 Press ENTER, press Cursor ▼/▲ to select the distance between the front speakers and the listening position, then press ENTER.**



**4 Press Cursor ▼/▲ to select START, then press ENTER.**

**5 Clap your hands over your head once.**

**6 Make sure that “COMPLETED !” appears on the TV screen, then press SMART S.SETUP.**

The system detects your clapping sound through the satellite speakers, then automatically makes the best settings for each speaker. “COMPLETED !” appears on the TV screen when Smart Surround Setup completes.

### When “FAILED !” appears on the TV screen

The system could not detect the clapping sound correctly. In such a case, follow the instructions that appears on the TV screen.

- When the system detects the clapping sound as “FAILED !” three times, set the distance (DISTANCE) and the output level (LEVEL) manually (☞ pg. 37).


### To cancel

Press SMART S.SETUP.

### NOTE

- You need to set the subwoofer’s output level (LEVEL) manually. (☞ pg. 18 or 37)
- In step 2, “SW ERROR” appears on the display window if the center unit and the powered subwoofer are not connected correctly by using the supplied system cord.


# Playback

- The icon such as  shows the types of discs the operation is available for.


## IMPORTANT

Before using the remote control for the following operation;


- 1 Set the remote control mode selector to AUDIO.
- 2 Press DVD.

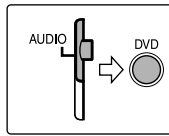


The buttons described below are used on pages 20 to 23.

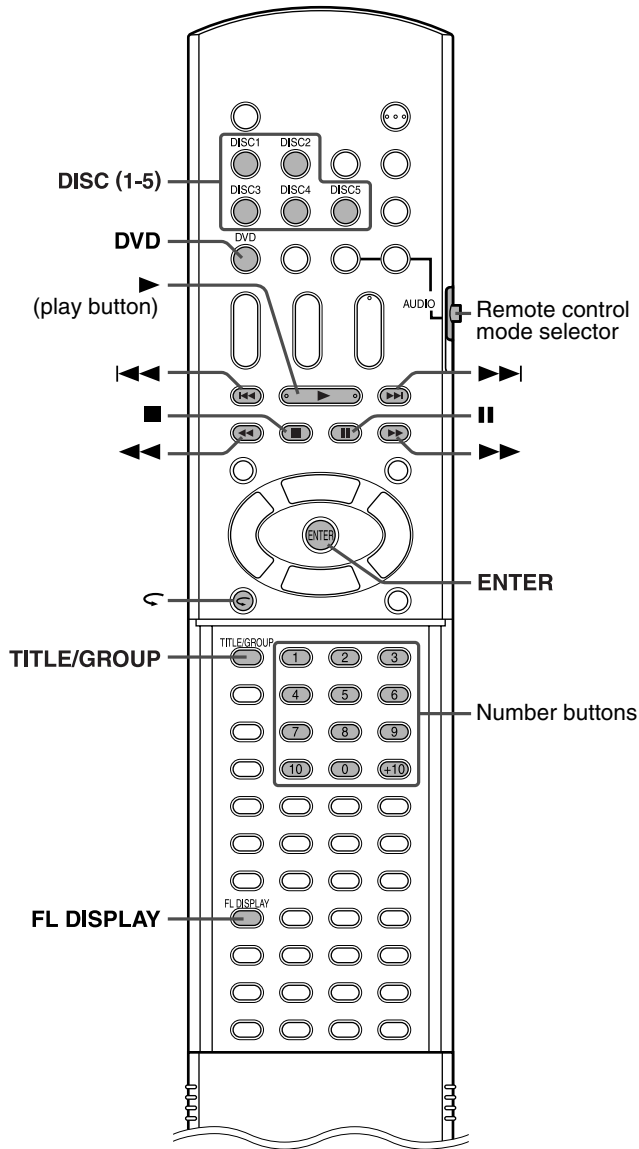


Disc lamps (TH-M508 only)

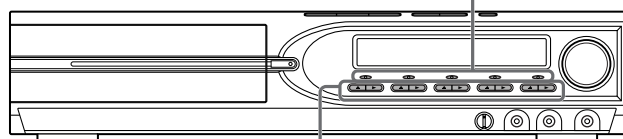

DISC (1-5) 

## Basic playback

 
- 1 Press the desired DISC (1-5)  on the center unit.


- The system turns on and the disc tray comes out.

- 2 Place a disc.

Label side up

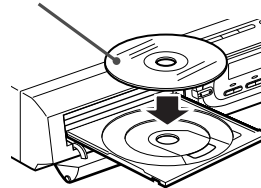


When placing an 8 cm disc

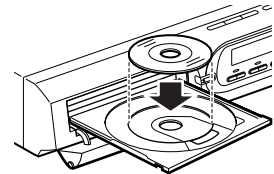


- 3 Press DISC (1-5).


### For MP3/WMA disc

 The file control display ( pg. 28) appears on the TV screen.

### For JPEG disc


Each file (still pictures) is shown on the TV screen for about 3 seconds (slide-show). When stopping playback, the file control display ( pg. 28) appears on the TV screen.

### For MPEG4 disc

 Pressing TOP MENU or MENU shows the file control display ( pg. 28) on the TV screen during playback.

### ■ To pause playback

Press .








 


To return to playback, press  (play button).

### ■ To stop

Press .

### ■ On-screen guide icons

During DVD VIDEO playback, the following guide icons may appear for a while on the TV screen;

- : appears at the beginning of a scene containing multi-subtitle languages.
- : appears at the beginning of a scene containing multi-audio languages.
- : appears at the beginning of a scene containing multi-angle views.
-  (Play),  (Pause),  /  (Fast forward/fast-reverse),  /  (Slow-motion forward/reverse): appears when you perform each operation.
- : the disc cannot accept an operation you have tried to do.

Continued on next page

**NOTE**


- Up to 5 discs can be loaded.
- You can also start playback by pressing ► (play button) or DVD.
- The system plays back available discs sequentially until you stop playback or until the disc loaded on the DISC 5 tray reaches to the end.
- (For JPEG) The system cannot accept operations even though you press any buttons before the entire picture appears on the TV screen.
- If you do not want the on-screen guide icons to appear, see page 38.

■ **Playback information on the display window**


**DVD VIDEO**

Example:


When a DVD VIDEO encoded with Dolby Digital 5.1ch is played

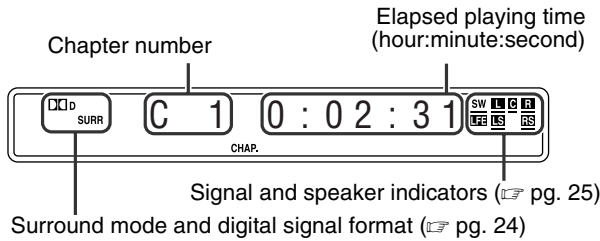


Pressing FL DISPLAY

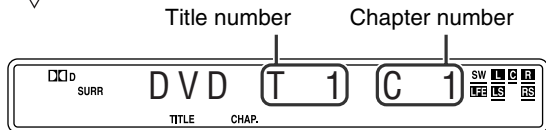

**DVD AUDIO**

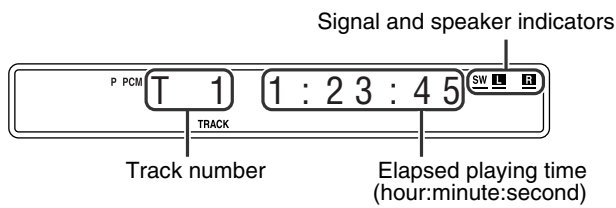


Pressing FL DISPLAY

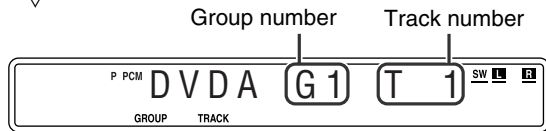

**VCD/SVCD/CD**

Example:

When a CD is played back

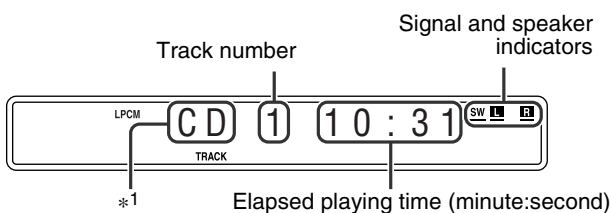

\*1 VCD indication appears for VCD/SVCD.


**NOTE**

- When a VCD or SVCD with PBC function is played, the elapsed playing time does not appear, but “PBC” appears.


**MP3/WMA disc**

Example:

When an MP3 disc is played back

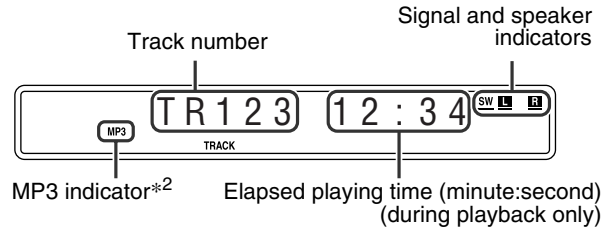


Pressing FL DISPLAY

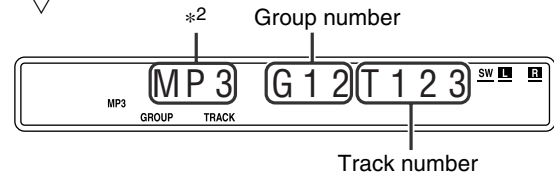


\*2 WMA indicator lights for WMA disc.


**JPEG disc**

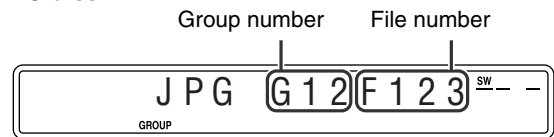

**MPEG4 disc**

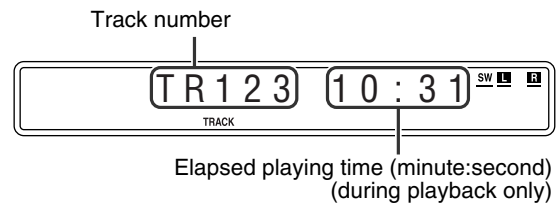

Pressing FL DISPLAY

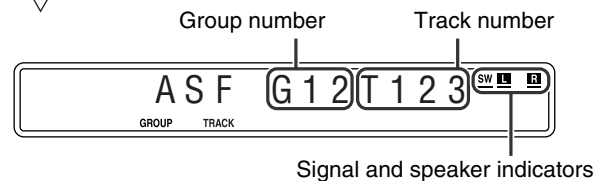

**NOTE**

- You can change the time information mode (except for MP3/WMA/JPEG/MPEG4). (pg. 26)
- You can also check the playback information on the TV screen. (pg. 25)




**■ Disc information on the display window**

The disc indicators on the display window show the current status of the corresponding disc tray.

Example:

When the discs are loaded to disc trays 1, 2 and 5, and the disc in the disc tray 5 is selected.

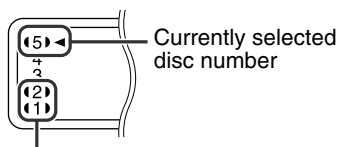

Currently selected disc number

Currently loaded disc number

**About the disc lamps (For TH-M508)**

The disc lamps on the center unit also show the disc status. Only the disc lamp currently selected lights.

**■ Screen saver**

A TV screen may burn out if a static picture is displayed for a long time. To prevent this, the system automatically dims the screen if a static picture is displayed for over 5 minutes (the screen saver function).

- Pressing any button will cancel the screen saver function.
- If you do not want to use the screen saver function, see page 37.

## One Touch Replay

You can move back the playback position by 10 seconds from the current position.



- During playback

**On the remote control:**

Press **↶**.

**NOTE**

- This function works in the same title.
- This feature may not work for some discs.

## Fast-forward/fast-reverse search

- During playback



**On the remote control:**

Press **▶▶** or **◀◀**.

Each time you press the button, the search speed changes (×2, ×5, ×10, ×20, ×60).

**To return to normal speed playback**

Press **▶** (play button).

**On the remote control and the center unit:**

Press and hold **▶▶|** or **|◀◀**.

Continuously pressing **▶▶|** or **|◀◀** increases the fast-forward/reverse search speed (×5 → ×20).

**NOTE**

- The operation with **▶▶|** or **|◀◀** above is available for a disc other than MPEG4 disc.
- When a DVD VIDEO, VCD, SVCD, or MPEG4 disc is played back, no sound comes out during fast-forward/reverse search.
- When a DVD AUDIO or CD is played back, sound is intermittent and low during fast-forward/reverse search.
- This feature may not work for some discs.

## Skip to the beginning of a desired selection

- Using **▶▶|**/**|◀◀** buttons



- For DVD VIDEO (chapter):  
During playback
- For VCD/SVCD (track):  
During playback without PBC function
- For DVD AUDIO/CD/MP3/WMA/JPEG/MPEG4 (track/file):  
During playback or while stopped

Press **▶▶|** or **|◀◀** repeatedly.

**NOTE**

- When playing back an MP3/WMA disc, you can make operations using the file control display. (☞ pg. 28)
- This feature may not work for some discs.

■ Using number buttons on the remote control

- For DVD VIDEO (title, chapter):  
While stopped, the title number is selected.  
During playback, the chapter number is selected.
- For DVD AUDIO (track):  
During playback or while stopped
- For VCD/SVCD (track):  
During playback without PBC function
- For CD/MP3/WMA/JPEG/MPEG4 (track/file):  
During playback or while stopped

**Press number buttons (0-10, +10) to select the desired number.**

- For details on using the number buttons, see “How to use the number buttons” below.

**How to use the number buttons**

To select 3: Press 3.  
 To select 14: Press +10, then 4.  
 To select 24: Press +10 twice, then 4.  
 To select 40: Press +10 three times, then 10.  
 Or press +10 four times, then 0.

**Locating a desired title/group using number buttons**

- During playback or while stopped

 


**1 Press TITLE/ GROUP.**

“\_ \_” or “\_” is shown in the title/group display area in the display window.

Example:

During DVD VIDEO playback



**2 While the display window shows “\_ \_” or “\_”, use number buttons (0-10, +10) to enter the desired title or group number.**

The system starts playback from the first chapter/track/file of the selected title/group.

- For details on using the number buttons, see “How to use the number buttons” above.

**NOTE**

- This feature may not work for some discs.

**Playing back a bonus group**



Some DVD AUDIOS have a special group called “bonus group” whose contents are not open to the public. The bonus group is always assigned to the last group of a disc.

To play back a bonus group, you have to enter the specific “key number” (a password). The way of getting the key number depends on the disc. After getting the key number, you can play back the bonus group by following the procedure below.

- While the BONUS indicator lights up on the display window

 
**1 Select the bonus group.**

For selecting the group, see “Locating a desired title/group using number buttons” described above. The key number entry indication appears.

On the TV



On the display window



**2 Press number buttons (0-9) to enter the key number, then press ENTER.**

When you enter the correct key number, playback starts and the BONUS indicator goes off.

- If you enter the wrong number, reenter the correct number.

**To clear the key number entry**


Perform whichever one of the following:

- Press ■.
- Open the disc tray.
- Turn off the system.

**NOTE**

- In Random Playback, tracks in the bonus group are not played back.


# Advanced operations

- The icon such as  shows the types of discs the operation is available for.

## IMPORTANT


Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.
- Press DVD.

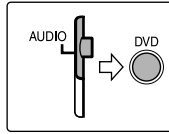

- There are exceptions in the operation mentioned above. In such a case, follow each instruction.

The buttons described below are used on pages 24 to 35.

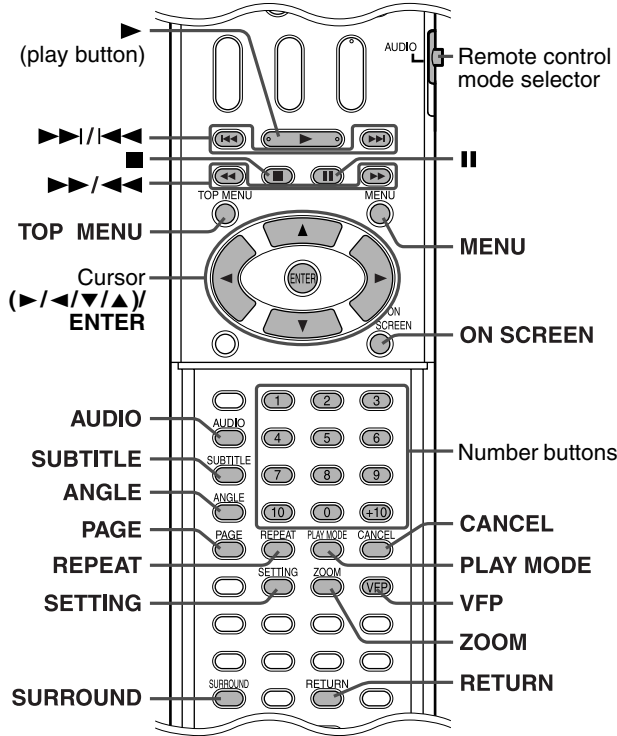

## Using the surround mode

### ■ Auto Surround (AUTO SURR)

Used to reproduce the sound as it is recorded without any conversion (downmixing or simulation, etc.). For example, a multichannel source is automatically reproduced in multichannel audio.

### ■ Dolby Surround

#### Dolby Pro Logic II\*<sup>1</sup>

Dolby Pro Logic II has a newly developed multichannel playback format to decode all 2 channel sources — stereo source and Dolby Surround encoded source — into a 5.1 channel.

Dolby Pro Logic II has two modes — Movie mode and Music mode:


- **Pro Logic II Movie (PL II MOVIE)**

Suitable for reproduction of Dolby Surround encoded sources bearing the mark .


- **Pro Logic II Music (PL II MUSIC)**

Suitable for reproduction of any 2 channel stereo music sources.

#### Dolby Digital\*<sup>1</sup>

Used to reproduce multichannel soundtracks of the software encoded with Dolby Digital (.

### ■ DTS Digital Surround\*<sup>2</sup>

Used to reproduce multichannel soundtracks of the software encoded with DTS Digital Surround (.

DTS Digital Surround (DTS) is another discrete multichannel digital audio format available on CD and DVD software.

### Available Surround modes for each input signal

The √ marks show available surround modes.

Mode	Surround off	Auto Surround	Dolby Surround			DTS Digital Surround	Linear PCM	Packed PCM	DSP
	SURR OFF	AUTO SURR	PL II MOVIE* <sup>3</sup>	PL II MUSIC* <sup>3</sup>	Dolby Digital	DTS	LPCM	PPCM	ALL CH ST.* <sup>3</sup>
Dolby Digital (Multichannel)	√	√	—	—	√	—	—	—	—
Dolby Digital (2 channel)	√	√	√	√	—	—	—	—	√
DTS Digital Surround (Multichannel)	√	√	—	—	—	√	—	—	—
DTS Digital Surround (2 channel)	√	√	√	√	—	—	—	—	√
Analog (VCR) or Linear/Packed PCM (2 channel)	√	√	√	√	—	—	—	—	√
Linear/Packed PCM (Multichannel)	√	√	—	—	—	—	√	√	—

\*<sup>1</sup> Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.


\*<sup>2</sup> “DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

\*<sup>3</sup> You can select these modes by pressing SURROUND. (ⓘ pg. 25)

Continued on next page

**■ All Channel Stereo (DSP)**

All Channel Stereo (ALL CH ST.) mode can reproduce a larger stereo sound field using all the connected (and activated) speakers. All Channel Stereo can be used while reproducing 2 channel stereo source.

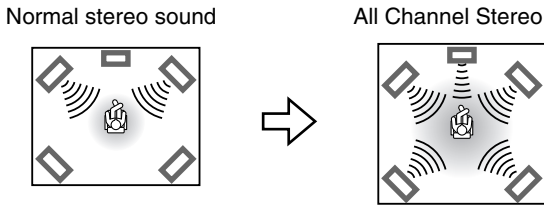

**■ Indicators on the display window**

**Digital signal format indicators**

- PPCM: Lights when DVD AUDIO packed PCM signals comes in.
- LPCM: Lights when Linear PCM signal comes in.
- DD: Lights when Dolby Digital signals come in.
- DTS: Lights when DTS Digital (Surround) signals come in.
- No indication: No digital signal indicator lights when analog signals come in.

**Dolby Surround/DSP mode indicators**

- PLII: Lights when Dolby Pro Logic II mode is activated.
- DSP: Lights when All Channel Stereo mode is activated.

**Source signal indicators, etc.**

- Light to indicate the incoming signals.
- |            |           |          |           |          |
|------------|-----------|----------|-----------|----------|
| <b>L</b>   | <b>SW</b> | <b>L</b> | <b>C</b>  | <b>R</b> |
| <b>LFE</b> | <b>LS</b> | <b>S</b> | <b>RS</b> |          |
- L**: Lights when the left channel signal comes in.
  - C**: Lights when the center channel signal comes in.
  - R**: Lights when the right channel signal comes in.
  - LFE**: Lights when the LFE channel signal comes in.
  - LS**: Lights when the surround left channel signal comes in.
  - RS**: Lights when the surround right channel signal comes in.
  - S**: Lights when the monaural surround channel signal or 2 channel Dolby Surround signal comes in.
  - SW**: Always lights.

 
The channel with “—” shows that the corresponding speakers are reproducing the channels’ sound. If the channels’ sound decoded into 5.1 channel is reproduced, only “—” lights.

**Selecting the surround mode**

The system is set up to automatically select the optimal surround mode for input signal from digital multichannel software. When playing back 2 channel source, you can select the desired surround mode manually.

**IMPORTANT**

- Before using the remote control for the following operation;
- Set the remote control mode selector to AUDIO.



**■ When playing back digital multichannel software (except during SURR OFF mode)**

The appropriate multichannel surround mode (Dolby Digital, DTS Digital Surround or Linear/Packed PCM) is automatically selected.

**■ When playing back 2 channel source**

You can select either mode of Dolby Pro Logic II (PL II MOVIE/ PL II MUSIC) or the DSP (ALL CH ST.) mode.

**Press SURROUND repeatedly to select the desired mode.**

The surround mode is turned on and the current surround mode appears on the display window. Each time you press the button, the surround mode changes. For details on each mode, see page 24.

**To turn off the surround mode**

**Press SURROUND repeatedly until SURR OFF appears on the display window.**

**Storing adjustments — auto memory**

When you turn the power off, the system memorizes the current surround mode. The memorized mode is automatically recalled when you turn the power on.

**NOTE**

- When FM or AM is selected as the source, you cannot select any surround mode.
- Note that the surround mode takes no effect on MPEG4 playback.
- For a down-mixing prohibited DVD AUDIO disc, the system continues to output multi-channel signals with “MULTI CH” shown on the display window even if the surround mode is turned off during playback. On the other hand, the system outputs only the front left and front right channel signals with “LR ONLY” shown on the display window when you start playback with the surround mode having been set to “SURR OFF”.

**Using the on-screen bar**

You can check disc information and you can use some functions using the on-screen bar.

**Showing the on-screen bar**




**Press ON SCREEN.**

Each time you press the button, the on-screen bar changes as follows on the TV screen.

Example:


During DVD VIDEO playback

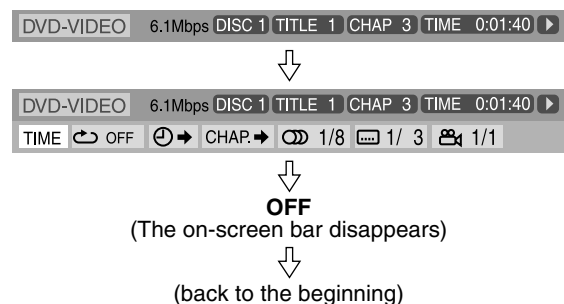


- The currently selected item shows green.

■ Contents of the on-screen bar during playback


DVD VIDEO

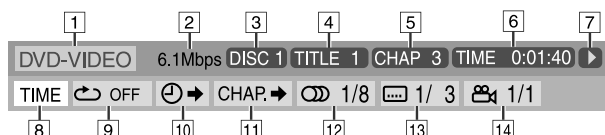


DVD AUDIO

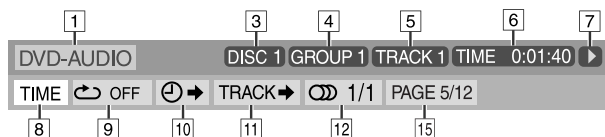


VCD

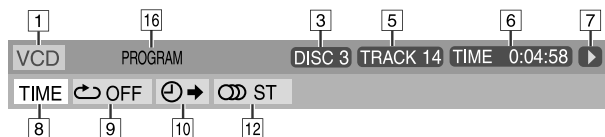

SVCD

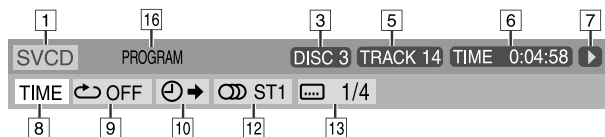

CD

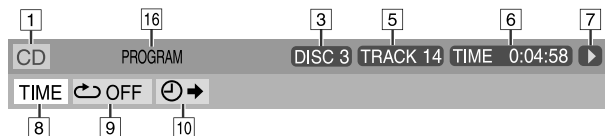

MPEG4\*



\* [8] - [15] are not available.

- [1] Shows disc type.
- [2] Shows current transfer rate (Megabits per second).
- [3] Shows disc number.
- [4] Shows current title (for DVD VIDEO) or group (for DVD AUDIO) number.
- [5] Shows current chapter number (for DVD VIDEO) or track number (for other type of discs).
- [6] Shows time information. See "Changing the time information" below.

- [7] Shows playback status.
  - [▶]: appears during playback.
  - [▶▶] / [◀◀]: appears during fast forward/reverse.
  - [▶] / [◀]: appears during playback in forward slow-motion/reverse slow-motion.
  - [⏸]: appears when paused.
  - [⏹]: appears when stopped.
- [8] Select this to change time information ([6]). See "Changing the time information" below.
- [9] Select this for Repeat Playback. (☞ pg. 33)
- [10] Select this for time search function. (☞ pg. 28)
- [11] Select this for chapter (for DVD VIDEO) or track (for DVD AUDIO) search function. (☞ pg. 27)
- [12] Select this to change audio language, channel, or stream. (☞ pg. 30)
- [13] Select this to change subtitle language. (☞ pg. 29)
- [14] Select this to change view angle. (☞ pg. 29)
- [15] Select this to change the page. (☞ pg. 31)
- [16] Shows Playback Mode status.
  - PROGRAM: appears during Program Playback. (☞ pg. 32)
  - RANDOM: appears during Random Playback. (☞ pg. 33)
- [17] Shows Repeat Mode status. (☞ pg. 33)

Changing the time information

You can change the time information in the on-screen bar on the TV screen and the display window of the center unit.



- During playback
- 1 Press ON SCREEN twice.**  
The on-screen bar appears on the TV screen.
- 2 Press Cursor ▶/◀ to highlight TIME .**
- 3 Press ENTER repeatedly to select the desired information.**

Example:

When elapsed playing time of disc is selected.

TOTAL 1:25:58

- TIME: Elapsed playing time of current chapter/track
- REM: Remaining time of current chapter/track
- TOTAL: Elapsed time of disc
- T. REM: Remaining time of disc

- 4 Press ON SCREEN.**  
The on-screen bar disappears.

## Playing from a specified position on a disc

You can start playing a title, chapter or track you specify. You can also play a disc from specified time.

## Locating a desired scene from the DVD menu

DVD VIDEOS generally have their own menus which show disc contents and you can display them on the TV screen. You can locate a desired scene by using these menus.




- Whenever a DVD VIDEO is loaded

### 1 Press TOP MENU or MENU.

The menu appears on the TV screen.

Example:

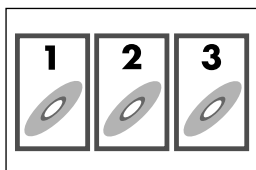

Normally, a DVD VIDEO which contains more than one title will have a "top" menu which lists the titles. Press TOP MENU to show the title menu.

Some DVD VIDEO may also have a different menu which is shown by pressing MENU.

See the instructions for each DVD VIDEO regarding its particular menu.

### 2 Use Cursor ►/◀/▼/▲ to select a desired item.

### 3 Press ENTER.

- With some discs, you can also select items by entering the corresponding number using number buttons.

## Locating a desired scene using a VCD/SVCD menu with PBC


A VCD or SVCD recorded with PBC has its own menus such as a list of contained songs. You can locate a specific scene by using these menus.



- During playback with PBC function

### 1 Press RETURN repeatedly until the menu appears on the TV screen.

Example:

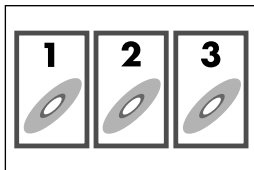

## 2 Press number buttons (1-10, +10) to select the number of the desired item.

- For details on using the number buttons, see "How to use the number buttons" (pg. 23).

### To return to the menu

Press RETURN.

### When "NEXT" or "PREVIOUS" is shown on the TV screen:

- To go to the next page, press ►►.
- To return to the previous page, press ◀◀.

### NOTE

- If you want to play a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
  - Start playback by pressing number buttons while stopped.
  - Press ►► repeatedly until the desired track number is displayed, then start playback by pressing ► (play button). The track number appears on the display window instead of "PBC".
- To activate the PBC function when playing a PBC-compatible VCD/SVCD without using the PBC function, perform any of the following:
  - Press TOP MENU or MENU.
  - Press ■ twice to stop playback, then press ► (play button).

## Locating a desired chapter/track using the on-screen bar

- During playback

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

### 2 Press Cursor ►/◀ to highlight CHAP.►/

TRACK►.

### 3 Press ENTER.

Example:

During DVD VIDEO playback



## 4 Press number buttons (0-9) to enter the desired chapter number.

Example:

- To select 8: Press 8.
- To select 10: Press 1, then 0.
- To select 20: Press 2, then 0.
- To select 37: Press 3, then 7.

### To correct a misentry

Repeat step 4.

**5 Press ENTER.**


**6 Press ON SCREEN.**

The on-screen bar disappears.

**NOTE**

- You can select up to the 99th chapter/track.

**Locating a desired position by specifying the time**

- For DVD VIDEO/DVD AUDIO:  During playback
- For VCD/SVCD: While stopped or during playback without PBC function
- For CD: During playback or while stopped

**When specifying the elapsed playing time from the beginning of the disc**

Perform the following procedure while stopped.

**When specifying the elapsed playing time from the beginning of the current title/track**

Perform the following procedure during playback.

**1 Press ON SCREEN twice.**

The on-screen bar appears on the TV screen.

**2 Press Cursor ▶/◀ to highlight ⌚→.**

**3 Press ENTER.**



**4 Use number buttons (0-9) to enter the time.**

Example:

To play back from a point 2 (hours): 34 (minutes): 08 (seconds) elapsed

TIME \_: \_: \_ ⇒ TIME 2: \_: \_ ⇒  
Press 2 Press 3

TIME 2:3 \_: \_ ⇒ TIME 2:34: \_ ⇒  
Press 4 Press 0

TIME 2:34:0 \_ ⇒ TIME 2:34:08  
Press 8

**To cancel a misentry**

Press Cursor ◀ repeatedly.

**5 Press ENTER.**

**6 Press ON SCREEN.**

The on-screen bar disappears.

**NOTE**


- You can specify time in hours/minutes/seconds for DVD VIDEO/DVD AUDIO and in minutes/seconds for VCD/SVCD/CD.

**Using the file control display**

You can search and play desired groups and tracks/files using the file control display on the TV screen.



Current group /total group Playback mode (PROGRAM, RANDOM, REPEAT)

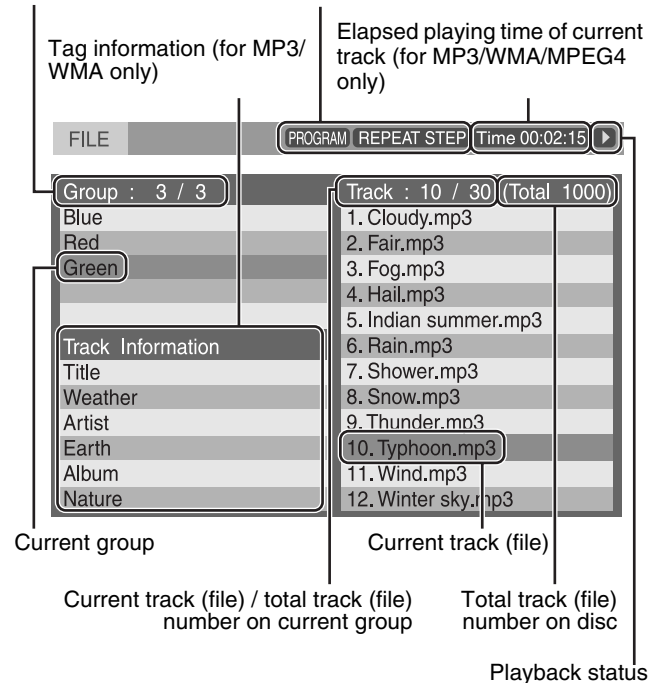

The file control display appears automatically during playback (MP3/WMA) or while stopped.

- For MP3/WMA:  
During playback or while stopped
- For JPEG/MPEG4:  
While stopped

**1 Press Cursor ▶/◀/▼/▲ to select the desired group/track/file.**

- For MP3/WMA, playback starts from the selected track.

**2 Press ▶ (play button) or ENTER.**

- Track playback/slide-show starts from the selected track/file.
- When you press ENTER for JPEG, only the selected file is played back.

**NOTE**

- During playback, you can locate the desired track/file by pressing ▶▶/◀◀ or Cursor ▲/▼.
- You can also check playback information on the display window. (☞ pg. 21)
- Some group, track and file names may not be displayed correctly depending on recording conditions.
- The order of groups, tracks and files may be displayed differently from the order displayed on your personal computer.

## Resume Playback

When Resume Playback is set to “ON” (☞ pg. 38) and you stop playback by the following operations, the position where playback has been stopped is stored. (“RESUME” appears on the display window.)



- Turning off the power (☞ pg. 16)
- Pressing ■ once
- Changing the source (☞ pg. 17)

**To start playback from the stored position**

Press ▶ (play button) or DVD.

- There may be a case where ▶ (play button) does not work after changing the source.

**To clear the stored position**

Press ■ again or open the disc tray with the playback disc.

## Selecting a view angle

- During playback of a disc containing multi-view angles

 


**When using the ANGLE button:**

**1 Press ANGLE.**

Example:

The first view angle is selected out of 3 view angles recorded.



**2 Press ANGLE repeatedly or press Cursor ▼/▲ to select the desired view angle.**

**When using the on-screen bar:**

**1 Press ON SCREEN twice.**

The on-screen bar appears on the TV screen.

**2 Press Cursor ▶/◀ to highlight 1/3.**

**3 Press ENTER.**



**4 Press Cursor ▼/▲ to select the desired view angle.**

**5 Press ENTER.**

**6 Press ON SCREEN.**

The on-screen bar disappears.

**NOTE**

- During DVD AUDIO playback, this feature is available only for the video part.

## Selecting the subtitle

- During playback of a disc containing subtitles in several languages

 


**When using the SUBTITLE button:**

**1 Press SUBTITLE.**

Example (DVD VIDEO):

“ENGLISH” is selected out of 3 subtitle languages recorded.



**2 Press Cursor ▼/▲ to select the desired subtitle.**

For SVCD


- An SVCD can contain up to four subtitles. Pressing SUBTITLE changes the subtitles regardless of whether the subtitles are recorded or not. (Subtitles will not change if no subtitle is recorded.)

**NOTE**

- To clear the subtitle, press SUBTITLE. Each time you press SUBTITLE, subtitle appears and disappears alternately.



**When using the on-screen bar:**

- 1** Press ON SCREEN twice.  
The on-screen bar appears on the TV screen.
- 2** Press Cursor ►/◄ to highlight  1/3 .
- 3** Press ENTER.



- 4** Press Cursor ▼/▲ repeatedly to select the desired subtitle.

- 5** Press ENTER.

- 6** Press ON SCREEN.

The on-screen bar disappears.

**NOTE**

- To clear the subtitle, press SUBTITLE. Each time you press SUBTITLE, subtitle appears and disappears alternately.
- Some subtitle or audio languages are abbreviated in the pop-up window. See “The language codes list” (pg. 36).
- During DVD AUDIO playback, this feature is available only for the video part.

## Selecting the audio

- During playback of a disc containing audio in several languages

 


**When using the AUDIO button:**

- 1** Press AUDIO.


Example (DVD VIDEO):

“ENGLISH” is selected out of 3 audio languages recorded.



- 2** Press AUDIO repeatedly or press Cursor ▼/▲ to select the desired audio.

**When using the on-screen bar:**

- 1** Press ON SCREEN twice.  
The on-screen bar appears on the TV screen.
- 2** Press Cursor ►/◄ to highlight  1/3 .
- 3** Press ENTER.



- 4** Press Cursor ▼/▲ to select the desired audio.

- 5** Press ENTER.

- 6** Press ON SCREEN.

The on-screen bar disappears.

**NOTE**

- Some subtitle or audio languages are abbreviated in the pop-up window. See “The language codes list” (pg. 36).
- “ST”, “L” or “R” is displayed when playing a VCD or SVCD respectively representing “stereo”, “left sound” and “right sound”.

## Special picture playback

### Frame-by-frame playback

- During playback

Press  repeatedly.



Each time you press the button, the still picture advances by one frame.

**To return to normal playback**


Press ► (play button).

**NOTE**

- During DVD AUDIO playback, this feature is available only for the video part.

### Playing back in slow-motion

- During playback

- 1** Press  at the point where you want to start playback in slow-motion from.



The system pauses playback.

- 2** Press ►►.

- Playback in forward slow-motion starts.

For DVD VIDEO/DVD AUDIO only:

- To play back in reverse slow-motion, press ◄◄.

Each time you press the button, the playback speed become faster.

Example: On the TV



**To return to normal playback**

Press ► (play button).

**NOTE**

- Sound cannot be heard during slow-motion playback.
- During DVD AUDIO playback, this feature is available only for the video part.

## Selecting browsable still picture recorded on DVD AUDIO

Most DVD AUDIOS include browsable still pictures (B.S.P.), which usually appear by turns automatically during playback according to the playback sequence. You can change the picture (turn the page) manually when the current group/track has selectable pictures (pages).



- During playback and while the B.S.P. indicator lights up on the display window

**When using the PAGE button:**

**Press PAGE repeatedly to select a desired still picture.**

 
**When using the on-screen bar:**

**1 Press ON SCREEN twice.**

The on-screen bar appears on the TV screen.

**2 Press Cursor ►/◀ to highlight** .

**3 Press ENTER.**



**4 Press Cursor ▲/▼ to select the desired still picture.**

**5 Press ENTER.**

**6 Press ON SCREEN.**

The on-screen bar disappears.

## Zooming in

- During playback or while paused



**1 Press ZOOM.**

Each time you press ZOOM, scene magnification changes.

**2 While zoomed in, press Cursor ►/◀/▼/▲ to move zoom-in area.**

**To return to normal playback**

Press ZOOM repeatedly to select ZOOM OFF.

## NOTE

- The number of the magnification steps varies depending on the disc type.
- During slide-show playback of a JPEG disc, zooming in is not available. In such a case, press **||** to pause slide-show playback, then zoom in.
- During DVD AUDIO playback, this feature is available only for the video part.
- During MPEG4 playback, there may be a case where Cursor ►/◀/▼/▲ does not work in step 2 above.

## Changing the VFP setting

The VFP (Video Fine Processor) function enables you to adjust the picture character according to the type of programming, picture tone or personal preference.



The current VFP settings appear on the TV screen.

- During playback

**1 Press VFP.**

The current VFP settings appear on the TV screen.

Example:

NORMAL	
GAMMA	0
BRIGHTNESS	0
CONTRAST	0
SATURATION	0
TINT	0
SHARPNESS	0

**2 Press Cursor ►/◀ repeatedly to select the VFP mode.**

- NORMAL: Normally select this.
- CINEMA: Suitable for movies.

When you select "NORMAL" or "CINEMA", press VFP to complete the setting.

- USER 1 and USER 2:

You can adjust parameters that affect picture appearance.

**Only when selecting "USER 1" or "USER 2" in step 2, proceed to perform the following operation;**

**3 Press Cursor ▼/▲ repeatedly to select a parameter you want to adjust.**

Adjust gradually and confirm picture appearance results are as preferred.

- GAMMA: Controls brightness of neutral tints while maintaining brightness of dark and bright portions.
- BRIGHTNESS: Controls screen brightness.
- CONTRAST: Controls screen contrast.
- SATURATION: Controls screen color depth.
- TINT: Controls screen tint.
- SHARPNESS: Controls screen sharpness.

## 4 Press ENTER.

Example:



## 5 Press Cursor ▼/▲ to change the setting.

## 6 Press ENTER.

The current VFP settings appear again.

## 7 Repeat steps 3 to 6 to adjust other parameters.

## 8 Press VFP.

### NOTE

- Although the setting display disappears in the middle of the procedure, the setting at that time will be stored.

## Program Playback

- While stopped



## 1 Press PLAY MODE repeatedly until program window appears on the TV screen.

PROGRAM			
No.	Disc	Group/Title	Track/Chapter
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			

USE NUMERIC KEYS TO PROGRAM TRACKS.  
USE CANCEL TO DELETE THE PROGRAM.

## 2 Follow the instructions that appears on the TV screen to program the desired chapters/ tracks.

- For details on using the number buttons, see “How to use the number buttons” (pg. 23).
- The content’s numbers that you have to specify for programming varies depending on the disc type:
  - DVD VIDEO: Titles and chapters
  - VCD, SVCD, CD: Tracks
  - DVD AUDIO, MP3, WMA: Groups and tracks
- Before you program the tracks in bonus group on a DVD AUDIO, perform the procedure of “Playing back a bonus group” (pg. 23) to turn off the BONUS indicator on the display window.
- You can specify the chapters/tracks whose number is up to 99.
- There may be a case that the group or title number can be entered even for discs that contain no groups or titles. In such a case, press ENTER to proceed to the Track/Chapter column.
- When you press ENTER instead of the number buttons in the Track/Chapter column, “ALL” appears and all the tracks or chapters on the selected group or title are programmed as a step.

### To clear the programs one by one from the last entered number

Press CANCEL repeatedly.

### To clear all programs

Press ■.

You can also clear the program by turning off the system.

## 3 Press ► (play button).

If all of the programmed tracks/files have been played back, playback stops and the program window appears again. Note that program setting remains.

### To check the program contents

During playback, press ■. Playback stops and the program window appears.

### To quit the Program mode

While stopped, press PLAY MODE repeatedly until both program window and RANDOM disappear from the TV screen.

### NOTE

- There may be a case where bonus group on a DVD AUDIO cannot be played.
- The Resume function cannot be used with Program Playback.
- Program Playback may not work for some discs.

## Random Playback

You can play titles or tracks on a disc in random order.



- While stopped

**1** Press **PLAY MODE** repeatedly until **RANDOM** appears on the TV screen.

**2** Press **▶** (play button).

- When more than one discs are loaded, the system starts Random Playback of the next disc after completing current disc playback.

### To quit Random mode

While stopped, press **PLAY MODE** repeatedly until both program window and **RANDOM** disappear from the TV screen. You can also clear the Random mode by turning off the system.

### NOTE

- The same title/track will not be played back more than once during Random Playback.

 
## Repeat Playback

### Repeating the current selection or all discs

- For DVD VIDEO: During playback
- For DVD AUDIO: During playback without PBC function or stopped
- For VCD/SVCD: During playback or stopped
- For CD: During playback or stopped
- For MP3/WMA: During playback or stopped
- For JPEG/MPEG4: During playback or stopped



When using the **REPEAT** button: Press **REPEAT**.



Repeat mode indicator

Each time you press **REPEAT**, the Repeat mode changes.

Display window	TV screen	Meanings
↺	↺GROUP REPEAT GROUP	Repeats the current group for DVD AUDIO/MP3/WMA/JPEG/MPEG4 disc.
	↺TITLE	Repeats the current title for DVD VIDEO.
↺ DISC	↺DISC REPEAT DISC	Repeats all tracks on the current disc for VCD/SVCD/CD/MP3/WMA/JPEG/MPEG4.
	↺ ALL REPEAT ALL	Repeats all the available discs.
↺ 1	↺TRACK, ↺STEP REPEAT TRACK, REPEAT STEP	Repeats the current track for DVD AUDIO/VCD/SVCD/CD/MP3/WMA/MPEG4 disc.
	↺CHAP, ↺STEP REPEAT STEP	Repeats the current chapter for DVD VIDEO.
	↺OFF	Repeat mode is off. The system plays back all available discs normally.

### NOTE

- For DVD VIDEO and DVD AUDIO, REPEAT ALL and REPEAT DISC may not be available depending on the disc.

### When using the on-screen bar (except for MP3/WMA/JPEG/MPEG4 disc):

- Press **ON SCREEN** twice.  
The on-screen bar appears on the TV screen.
- Press **Cursor ▶/◀** to highlight **↺ OFF**.
- Press **ENTER**.



- Press **Cursor ▼/▲** repeatedly to select the Repeat mode.
- Press **ENTER**.
- Press **ON SCREEN**.

The on-screen bar disappears.

### To cancel Repeat Playback

Select "OFF" in step 4.

## Repeating a desired part [A-B Repeat]

You can repeat playback of a desired part by specifying the beginning (point A) and ending (point B).



■ During playback

### 1 Press ON SCREEN twice.

The on-screen bar appears on the TV screen.

### 2 Press Cursor ▶/◀ to highlight OFF.

### 3 Press ENTER.



### 4 Press Cursor ▼/▲ repeatedly to select “A-B”.

### 5 Press ENTER at the beginning of the part you want to repeat (point A).



### 6 Press ENTER at the end of the part you want to repeat (point B).

A-B Repeat Playback starts.

### 7 Press ON SCREEN.

The on-screen bar disappears.

#### To cancel

Select “OFF” in step 4, then press ENTER.

#### NOTE


- When playing back a DVD VIDEO, A-B Repeat Playback is possible only within the same title.
- “A-B” cannot be selected during Program and Random Playback.

## Tray lock

You can lock trays and prohibit the unwanted disc ejection.

#### On the center unit ONLY:

While the system is turned off

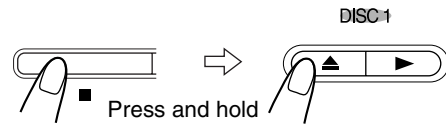

- The system turns on and “LOCKED” appears on the display window.
- If you try to eject discs, “LOCKED” appears to indicate that trays are locked.

#### To cancel

Carry out the same operation again.

 
- The system turns on and “UNLOCKED” appears on the display window.

## Sound and other settings

### IMPORTANT

Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.



### NOTE

Before you start operation;

- There is a time limit when doing the following steps. If the setting is cancelled before you finish, start from step 1 again.

### 1 Press SETTING.

Example:



### 2 Press Cursor ▼/▲ to select the item you want to set.

- BAL (Balance):  
You can adjust the balance between the front left and front right speakers.
- DEC (Decode):  
When you play an external source (DBS is selected as a source) that was encoded with Dolby Digital or DTS Digital Surround, the following symptoms may occur;
  - No sound comes out at the beginning of playback.
  - Noise comes out while searching for or skipping chapters or tracks.

AUT/PCM (Auto/PCM):

Normally select this. The system automatically detects the incoming signals.

DOLBY D: Select this if the symptoms above occur when playing a disc (or software) encoded with Dolby Digital.

DTS: Select this if the symptoms above occur when playing a disc (or software) encoded with DTS Digital Surround.

- M. OUT (Monitor Out):  
Select the video output jack type by which you watch DVD playback after connecting your TV. (pg. 11)  
Set the video output to use AV COMPU LINK remote control system. (pg. 42)

VIDEO: To watch DVD playback via the VIDEO jack.  
S: To watch DVD playback via the S-VIDEO jack.  
COMPNT (component):  
To watch DVD playback via the COMPONENT VIDEO OUT jacks.

- DiscIII (For TH-M508):  
When you select DVD as the source and leave the system in stop mode for 5 minutes, the disc lamps starts illuminating.

### 3 Press Cursor ►/◄ to make an adjustment or selection.

Example:



The adjustment is set and the display automatically disappears a few seconds later.

### NOTE

- When "DOLBY D" or "DTS" is selected, if a signal encoded with another digital format comes in, you cannot listen to the sound. (The D or DTS indicator flashes.)

# Setting DVD preferences

## Using the setup menus



- You can change the language used in the setup menus. See “Menu description” below.

### Basic operation on the setup menus

#### IMPORTANT


Before using the remote control for the following operation;

- Set the remote control mode selector to AUDIO.
- Press DVD.

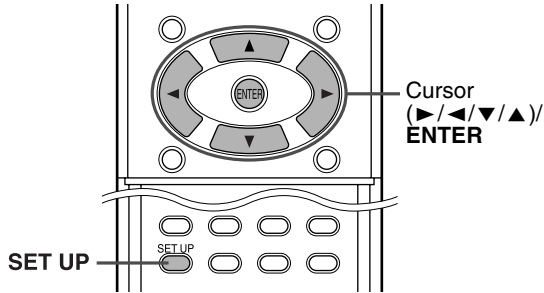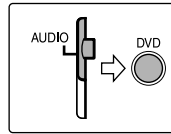

- While stopped

#### 1 Press SET UP.

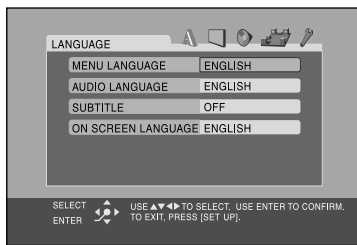

#### 2 Follow the instructions that appears on the TV screen.

## Menu description

### A: Language menu (LANGUAGE)

#### ■ MENU LANGUAGE

Some DVDs have their own menus in multiple languages.

- Select the initial language\*.

#### ■ AUDIO LANGUAGE

Some DVDs have multiple audio languages.

- Select the initial audio language\*.

#### ■ SUBTITLE

Some DVDs have multiple subtitle languages.

- Select the initial subtitle language\*.

#### ■ ON SCREEN LANGUAGE

- Select the language shown on the TV screen when operating this system.

\* When the language you have selected is not recorded to a disc, the original language is automatically used as the initial language.

#### NOTE

- See the following “The language codes list” for the code of each language, such as “AA”, etc.

### The language codes list

AA	Afar	IK	Inupiak	RN	Kirundi
AB	Abkhazian	IN	Indonesian	RO	Rumanian
AF	Afrikaans	IS	Icelandic	RU	Russian
AM	Ameharic	IW	Hebrew	RW	Kinyarwanda
AR	Arabic	JI	Yiddish	SA	Sanskrit
AS	Assamese	JW	Javanese	SD	Sindhi
AY	Aymara	KA	Georgian	SG	Sango
AZ	Azerbaijani	KK	Kazakh	SH	Serbo-Croatian
BA	Bashkir	KL	Greenlandic	SI	Singhalese
BE	Byelorussian	KM	Cambodian	SK	Slovak
BG	Bulgarian	KN	Kannada	SL	Slovenian
BH	Bihari	KO	Korean (KOR)	SM	Samoan
BI	Bislama	KS	Kashmiri	SN	Shona
BN	Bengali, Bangla	KU	Kurdish	SO	Somali
BO	Tibetan	KY	Kirghiz	SQ	Albanian
BR	Breton	LA	Latin	SR	Serbian
CA	Catalan	LN	Lingala	SS	Siswati
CO	Corsican	LO	Laothian	ST	Sesotho
CS	Czech	LT	Lithuanian	SU	Sundanese
CY	Welsh	LV	Latvian, Lettish	SV	Swedish
DA	Danish	MG	Malagasy	SW	Swahili
DZ	Bhutani	MI	Maori	TA	Tamil
EL	Greek	MK	Macedonian	TE	Telugu
EO	Esperanto	ML	Malayalam	TG	Tajik
ET	Estonian	MN	Mongolian	TH	Thai
EU	Basque	MO	Moldavian	TI	Tigrinya
FA	Persian	MR	Marathi	TK	Turkmen
FI	Finnish	MS	Malay (MAY)	TL	Tagalog
FJ	Fiji	MT	Maltese	TN	Setswana
FO	Faroese	MY	Burmese	TO	Tonga
FY	Frisian	NA	Nauru	TR	Turkish
GA	Irish	NE	Nepali	TS	Tsonga
GD	Scots Gaelic	NL	Dutch	TT	Tatar
GL	Galician	NO	Norwegian	TW	Twi
GN	Guarani	OC	Occitan	UK	Ukrainian
GU	Gujarati	OM	(Afan) Oromo	UR	Urdu
HA	Hausa	OR	Oriya	UZ	Uzbek
HI	Hindi	PA	Panjabi	VI	Vietnamese
HR	Croatian	PL	Polish	VO	Volapuk
HU	Hungarian	PS	Pashto, Pushto	WO	Wolof
HY	Armenian	PT	Portuguese	XH	Xhosa
IA	Interlingua	QU	Quechua	YO	Yoruba
IE	Interlingue	RM	Rhaeto-Romance	ZU	Zulu

 
Continued on next page

### Picture menu (PICTURE)

#### ■ MONITOR TYPE

You can select the monitor type to match your TV when you play DVDs recorded in the picture's height/width ratio of 16:9.


- **16:9/16:9 MULTI (Wide television conversion)**  
Select this when the aspect ratio of your TV is 16:9 (wide TV).
- **4:3 LB/4:3 MULTI LB (Letter Box conversion)**  
Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.
- **4:3 PS/4:3 MULTI PS (Pan Scan conversion)**  
Select this when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars do not appear, however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



 Ex.: 4:3 LB



Ex.: 4:3 PS

#### NOTE

- Even if "4:3 PS" or "4:3 MULTI PS" is selected, the screen size may become "4:3 LB" or "4:3 MULTI LB" with some DVDs. This depends on how DVDs are recorded.
- When selecting "MULTI" options as the monitor type for the multi-color system TV, this system outputs PAL or NTSC video signal according to the disc, regardless of the scan mode setting. (☞ pg. 18)

#### ■ PICTURE SOURCE

When you set the scan mode to PROGRESSIVE (☞ pg. 18), you can obtain optimal picture quality by selecting whether the content on the disc is processed by field (video source) or by frame (film source).

Normally set to "AUTO".

- **AUTO**  
Used to play a disc containing both video and film source materials.  
This system recognizes the source type (video or film) of the current disc according to the disc information.
- If the playback picture is unclear or noisy, or the oblique lines of the picture are rough, try to change to other modes.
- **FILM**  
Suitable for playing back a film source disc.
- **VIDEO**  
Suitable for playing back a video source disc.

#### ■ SCREEN SAVER (☞ pg. 22)

You can activate or deactivate Screen Saver function.

#### ■ FILE TYPE

When several types of files are recorded on a disc, you can select which files to play. If you have changed FILE TYPE setting, be sure to turn the power off, then turn the power on to enable the new setting.

- **AUDIO**  
Select this to play MP3/WMA files.
- **STILL PICTURE**  
Select this to play JPEG files.
- **VIDEO**  
Select this to play MPEG4 files.

### Audio menu (AUDIO)

#### ■ DIGITAL AUDIO OUTPUT

You can select the appropriate mode according to the type of the device connected to DIGITAL OUT connector. (TH-M508 only)

- **PCM ONLY**  
Select this when you connect the linear PCM digital input of other audio equipment (amplifier, MD, or DAT deck, etc.).
- **DOLBY DIGITAL/PCM**  
Select this when you connect the digital input connector of a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.
- **STREAM/PCM**  
Select this when you connect the digital input connector of an amplifier with a built-in DTS, Dolby Digital, or MPEG multichannel decoder.

#### NOTE

- When DBS is selected as the source, PCM signal is output from DIGITAL OUT.

#### ■ D. RANGE COMPRESSION

(Dynamic range compression)

You can enjoy low level recorded sound clearly at night even at a low volume when listening to the sound with Dolby Digital.

- **AUTO**  
Select this when you want to enjoy surround sound with its full dynamic range (no effect applied).
- **ON**  
Select this when you want to fully apply the compression effect (useful at midnight).

#### NOTE

- When you play a multichannel Dolby Digital source with the surround mode is off, the setting of D. RANGE COMPRESSION is set to ON automatically.



### Speaker setting menu (SPK. SETTING)

#### ■ Level menu (LEVEL)

##### CENTER SPEAKER/SURROUND RIGHT SPEAKER/ SURROUND LEFT SPEAKER/SUBWOOFER

While monitoring the test tone, adjust the center and surround speakers volume as much as that of the front speakers.

#### TEST TONE\*

Outputs the test tone.

#### RETURN

Returns to the SPK. SETTING menu.

\* The test tone comes out of all of the activated speakers in the following sequence:

⇒ Front left speaker ⇒ Center speaker ⇒ Front right speaker ⇒ Surround right speaker ⇒ Surround left speaker ⇒ (back to the beginning)

#### NOTE


- Before you turn on the test tone, be sure to select AUTO SURR as the surround mode. (☞ pg. 24)



## Setting DVD preferences

### ■ Distance menu (DISTANCE)

Example:

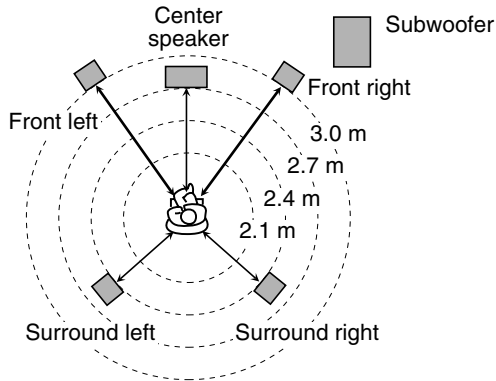

In this case, set the distance of each speaker as follows;

- Distance of front speakers: 3.0 m
- Distance of center speaker: 2.7 m
- Distance of surround speakers: 2.4 m

#### FRONT SPEAKER/CENTER SPEAKER/SURROUND SPEAKER

Adjust the distance from the listening position to the speakers.

**Within the range from 0.3 m to 9.0 m. (by 0.3 m)**

 
#### RETURN

Returns to the SPK. SETTING menu.

### Other setting menu (OTHERS)


#### ■ RESUME

You can activate or deactivate Resume Playback function.

( pg. 29)

#### ■ ON SCREEN GUIDE

 You can activate or deactivate the on-screen guide icons.

( pg. 20)

### ■ Parental lock menu (PARENTAL LOCK)

You can restrict playback of a DVD VIDEO containing violent scenes that is not suitable for your other family members.

- This setting takes effect only for DVDs containing the Parental Lock level information — Level 1 (most restrictive) to Level 8 (least restrictive).

#### COUNTRY CODE

Select this when you set the code for your resident.

( pg. 39)

#### SET LEVEL

Select this when you set the level of restriction.

#### PASSWORD

This item is selected automatically when some changes are made on Parental Lock setting. Enter a four-digit number as your password with number buttons 0-9, then press ENTER.

- If you have failed to enter your correct password three times, you cannot select an item other than EXIT. In such a case, press ENTER to exit the mode, then try the setting again.

#### EXIT

Returns to OTHERS menu.

- Be sure to exit the Parental Lock setting mode after entering your password. Otherwise, the changes you made won't be stored.
- If you forget your password, enter "8888" instead of your password.

#### NOTE

- When you enter wrong passwords three times, you can only select EXIT.

Country/Area codes list for Parental Lock


AD	Andorra	ER	Eritrea	LA	Lao People's Democratic Republic	RW	Rwanda
AE	United Arab Emirates	ES	Spain	LB	Lebanon	SA	Saudi Arabia
AF	Afghanistan	ET	Ethiopia	LC	Saint Lucia	SB	Solomon Islands
AG	Antigua and Barbuda	FI	Finland	LI	Liechtenstein	SC	Seychelles
AI	Anguilla	FJ	Fiji	LK	Sri Lanka	SD	Sudan
AL	Albania	FK	Falkland Islands (Malvinas)	LR	Liberia	SE	Sweden
AM	Armenia	FM	Micronesia (Federated States of)	LS	Lesotho	SG	Singapore
AN	Netherlands Antilles	FO	Faroe Islands	LT	Lithuania	SH	Saint Helena
AO	Angola	FR	France	LU	Luxembourg	SI	Slovenia
AQ	Antarctica	FX	France, Metropolitan	LV	Latvia	SJ	Svalbard and Jan Mayen
AR	Argentina	GA	Gabon	LY	Libyan Arab Jamahiriya	SK	Slovakia
AS	American Samoa	GB	United Kingdom	MA	Morocco	SL	Sierra Leone
AT	Austria	GD	Grenada	MC	Monaco	SM	San Marino
AU	Australia	GE	Georgia	MD	Moldova, Republic of	SN	Senegal
AW	Aruba	GF	French Guiana	MG	Madagascar	SO	Somalia
AZ	Azerbaijan	GH	Ghana	MH	Marshall Islands	SR	Suriname
BA	Bosnia and Herzegovina	GI	Gibraltar	ML	Mali	ST	Sao Tome and Principe
BB	Barbados	GL	Greenland	MM	Myanmar	SV	El Salvador
BD	Bangladesh	GM	Gambia	MN	Mongolia	SY	Syrian Arab Republic
BE	Belgium	GN	Guinea	MO	Macau	SZ	Swaziland
BF	Burkina Faso	GP	Guadeloupe	MP	Northern Mariana Islands	TC	Turks and Caicos Islands
BG	Bulgaria	GQ	Equatorial Guinea	MQ	Martinique	TD	Chad
BH	Bahrain	GR	Greece	MR	Mauritania	TF	French Southern Territories
BI	Burundi	GS	South Georgia and the South Sandwich Islands	MS	Montserrat	TG	Togo
BJ	Benin	GT	Guatemala	MT	Malta	TH	Thailand Code Language
BM	Bermuda	GU	Guam	MU	Mauritius	TJ	Tajikistan
BN	Brunei Darussalam	MV	Maldives	MW	Malawi	TK	Tokelau
BO	Bolivia	MX	Mexico	MY	Malaysia	TM	Turkmenistan
BR	Brazil	GY	Guyana	NA	Namibia	TN	Tunisia
BS	Bahamas	HK	Hong Kong	NC	New Caledonia	TO	Tonga
BT	Bhutan	HM	Heard Island and McDonald Islands	NE	Niger	TP	East Timor
BV	Bouvet Island	HN	Honduras	NF	Norfolk Island	TR	Turkey
BW	Botswana	HR	Croatia	NG	Nigeria	TT	Trinidad and Tobago
BY	Belarus	HT	Haiti	NI	Nicaragua	TV	Tuvalu
BZ	Belize	HU	Hungary	NL	Netherlands	TW	Taiwan
CA	Canada	ID	Indonesia	NO	Norway	TZ	Tanzania, United Republic of
CC	Cocos (Keeling) Islands	IE	Ireland	NP	Nepal	UA	Ukraine
CD	Central African Republic	IN	India	NR	Nauru	UG	Uganda
CF	Congo	IO	British Indian Ocean Territory	NU	Niue	UM	United States Minor Outlying Islands
CG	Congo	IQ	Iraq	NZ	New Zealand	US	United States
CH	Switzerland	IR	Iran (Islamic Republic of)	OM	Oman	UY	Uruguay
CI	Côte d'Ivoire	IS	Iceland	PA	Panama	UZ	Uzbekistan
CK	Cook Islands	IT	Italy	PE	Peru	VA	Vatican City State (Holy See)
CL	Chile	JM	Jamaica	PF	French Polynesia	VC	Saint Vincent and the Grenadines
CM	Cameroon	JO	Jordan	PG	Papua New Guinea	VE	Venezuela
CN	China	JP	Japan	PH	Philippines	VG	Virgin Islands (British)
CO	Colombia	KE	Kenya	PK	Pakistan	VI	Virgin Islands (U.S.)
CR	Costa Rica	KG	Kyrgyzstan	PL	Poland	VN	Vietnam
CU	Cuba	KH	Cambodia	PM	Saint Pierre and Miquelon	VU	Vanuatu
CV	Cape Verde	KI	Kiribati	PN	Pitcairn	WF	Wallis and Futuna Islands
CX	Christmas Island	KM	Comoros	PR	Puerto Rico	WS	Samoa
CY	Cyprus	KN	Saint Kitts and Nevis	PT	Portugal	YE	Yemen
CZ	Czech Republic	KP	Korea, Democratic People's Republic of	PW	Palau	YT	Mayotte
DE	Germany	KR	Korea, Republic of	PY	Paraguay	YU	Yugoslavia
DJ	Djibouti	KW	Kuwait	QA	Qatar	ZA	South Africa
DK	Denmark	KY	Cayman Islands	RE	Réunion	ZM	Zambia
DM	Dominica	KZ	Kazakhstan	RO	Romania	ZR	Zaire
DO	Dominican Republic			RU	Russian Federation	ZW	Zimbabwe
DZ	Algeria						
EC	Ecuador						
EE	Estonia						
EG	Egypt						
EH	Western Sahara						

# Tuner operations


## IMPORTANT

Before using the remote control for the following operation;

- 1 Set the remote control mode selector to AUDIO.
- 2 Press FM/AM.

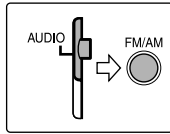

The buttons described below are used on pages 40 to 41.

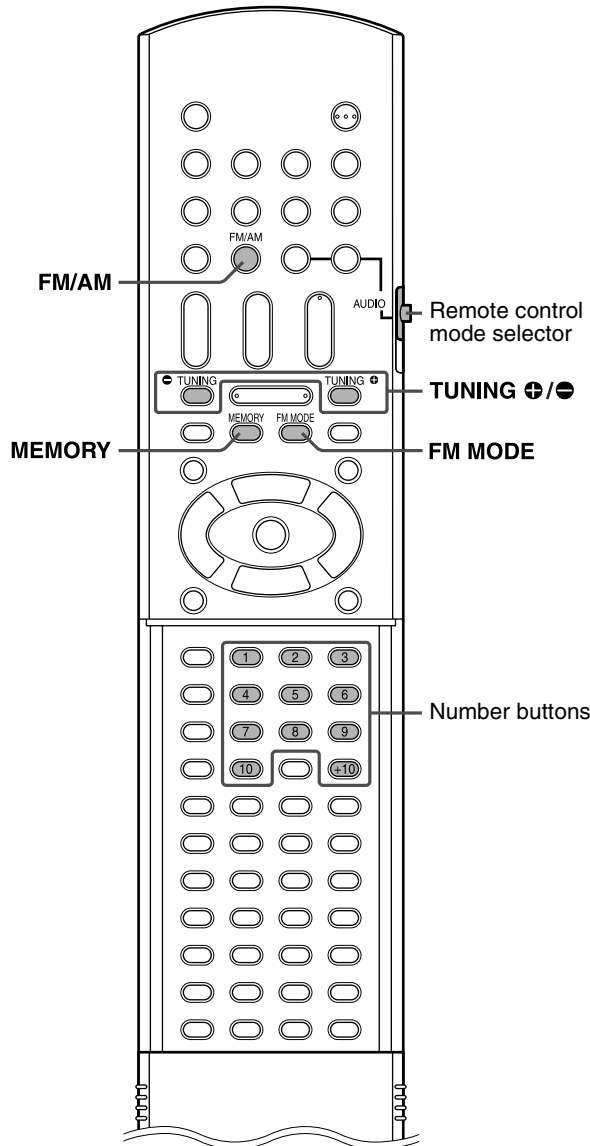


## Setting the AM tuner interval spacing

Some countries space AM stations 9 kHz apart, and other countries use 10 kHz spacing.

- The initial setting is as follows:
  - 10 kHz (For Central and South America)
  - 9 kHz (Except for Central and South America)

### On the center unit ONLY:

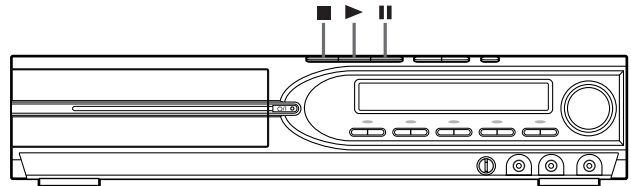

- When AM is selected as the source

#### To select the 10 kHz interval

Press and hold ■, then press II. "10k STEP" appears on the display window.

#### To select the 9 kHz interval

 
Press and hold ■, then press ►. "9k STEP" appears on the display window.

## Manual tuning

### 1 Press FM/AM repeatedly to select the band.

Example:

When the system is tuned in to 810 kHz.



### 2 Press TUNING +/− repeatedly until you find the frequency you want.

When you hold down the button until the system starts searching for stations and then release it, the system stops searching automatically when a station of sufficient signal strength is tuned in to.

### NOTE

- When a station of sufficient signal strength is tuned in, the TUNED indicator lights on the display window.
- When an FM stereo program is received, the ST indicator lights on the display window.

## Preset tuning

Once a station is assigned to a channel number, the station can be quickly tuned in. You can preset 30 FM and 15 AM stations.

 
### ■ To preset the stations

#### 1 Tune in the station you want to preset.


- If you want to store the FM reception mode for an FM station, select the reception mode you want. See “Selecting the FM reception mode” below.

Example:

When the system is tuned in to 103.50 MHz.



#### 2 Press MEMORY.

 


While “CH” and “- -” are flashing:

#### 3 Press number button(s) (1-10, +10) to select a preset number you want.

 - For details on using the number buttons, see “How to use the number buttons” (☞ pg. 23).

Example:

When the preset channel 1 is selected.



If the setting is cancelled before you finish, start from step 2 again.

While the selected number is flashing:

#### 4 Press MEMORY.

The selected number stops flashing.

The station is assigned to the selected preset number.

If the setting is cancelled before you finish, start from step 2 again.

#### 5 Repeat steps 1 to 4.

- Storing a new station to a used number erases the previously stored one.

### ■ To tune in to a preset station

#### 1 Press FM/AM repeatedly to select FM or AM.

#### 2 Press number button(s) (1-10, +10) to select a preset number.

- For details on using the number buttons, see “How to use the number buttons” (☞ pg. 23).

## Selecting the FM reception mode

When the stereo FM program currently tuned in is noisy, you can change the FM reception mode to improve the reception.

- While listening to an FM station

#### Press FM MODE.

The FM reception mode appears on the display window.

Each time you press the button, the FM reception mode changes.

##### • AUTO MUTING:

When a program is broadcast in stereo, you will hear stereo sound. (The ST indicator lights on the display window.) When in monaural, you will hear monaural sound. This mode is also useful to suppress static noise between stations. The AUTO MUTING indicator lights on the display window.

##### • MONO:

Reception will be improved although you will lose the stereo effect. (The ST indicator goes off.) In this mode, you will hear noise until you are tuned in to a station. (The AUTO MUTING indicator also goes off.)

## Reducing the noise of AM broadcast

When listening to an AM broadcast with a lot of noise interference, you can change the Beat Cut mode to reduce the noise.

- While listening to an AM station

#### Press FM MODE.

The current Beat Cut mode appears on the display window.

Each time you press the button, the Beat Cut mode changes.

- Choose “BEAT CUT 1” or “BEAT CUT 2” according to which gives clearer sound.

# AV COMPU LINK remote control system

The AV COMPU LINK remote control system allows you to operate JVC TVs and VCRs through the center unit. This system is equipped with the AV COMPU LINK-III, which adds a function to operate JVC's video components via the video components terminals. To use this remote control system, you need to connect the video components you want to operate as follows.

- Refer also to the manuals supplied with your TV and video components.

## AV COMPU LINK

## Connecting a TV and VCR

### CAUTION


Before connecting;

- If you have already plugged your VCR, TV and the center unit into the AC outlets, unplug their AC power cords first.

### 1 Connect the center unit to a TV and VCR.

- For details, see page 11 and 12.

### 2 Connect the center unit to a TV and VCR using the optional AV COMPU LINK cords.

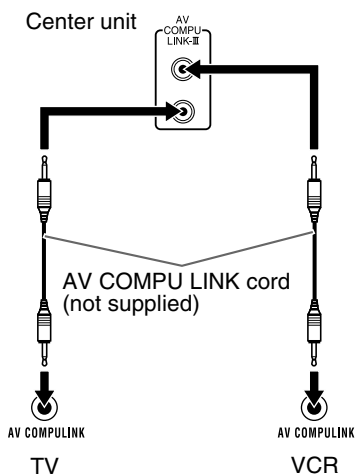

### 3 Plug the AC power cords of the VCR, TV and the center unit into the AC outlets.

### 4 Turn on the connected components first, then turn on the center unit.

- When turning on the TV for the first time after the AV COMPU LINK connection, turn the TV volume to minimum using the TV volume control on the TV.
- When turning on the VCR, use the remote control supplied with this system. (Press  $\odot$ /VCR/DBS.)

### NOTE

- To correctly use the automatic selection of TV input mode, select the correct "M. OUT" setting. (☞ pg. 35)

## Available functions

The AV COMPU LINK remote control system allows you to use the functions listed following.

### One-touch video play

Simply by inserting a video cassette without its safety tab into the VCR, you can enjoy video playback without manually setting other switches. This system automatically turns on and changes the source to VCR.

The TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture. When you insert a video cassette with its safety tab in place, press the play (▶) button on the VCR or on the remote control to get the same result.

### One-touch DVD play

Simply by starting playback on the built-in DVD player, you can enjoy playback without manually setting other switches. The TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

### Automatic selection of TV input mode

When you select DVD or VCR as the source to play on the system, the TV automatically changes the input mode to the appropriate position so that you can view the playback picture.

### Automatic Power On/Off

The TV and VCR turn on and off along with the system.

When you turn on the system;


- If the previously selected source is "DVD", only the TV will turn on automatically.
- If the previously selected source is "VCR", the TV and VCR will turn on automatically.

When you turn off the system, the TV and VCR will turn off.

### NOTE

- If you turn off the system while recording on the VCR, the VCR will not turn off and will continue recording.


# KARAOKE operations

- The icon such as  shows the types of discs the operation is available for.



## IMPORTANT

 Before using the remote control for the following operation;





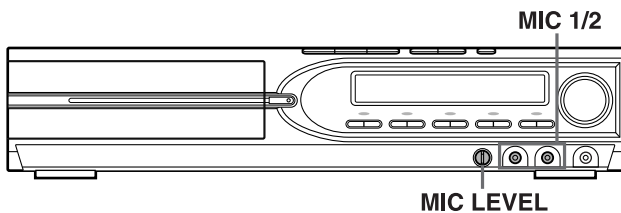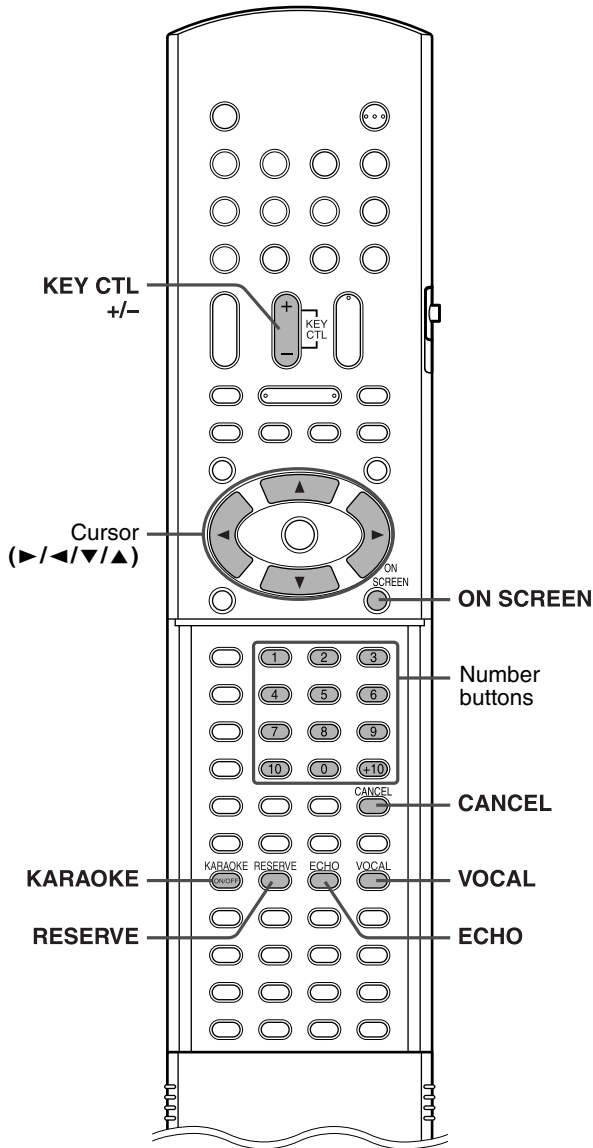

- Set the remote control mode selector to AUDIO.



The buttons described below are used on pages 43 to 45.



## Basic KARAOKE operation

- 1 Connect a microphone to      MIC 1 or MIC 2 on the center unit.
- 2 Press the KARAOKE button so that  appears on the display window.
- 3 Start playback.  
See "Basic playback" (pg. 20).
- 4 Turn MIC LEVEL to adjust the microphone's volume.
  - This control adjust the output volume of both MIC 1 and MIC 2 together.
- 5 Sing along with the playback of the song.

### To turn off KARAOKE function

Press KARAOKE so that  disappears from the display window.

### To repeat a disc/chapter/title/ track during KARAOKE mode

Set the Repeat mode. (pg. 33)

### To enjoy Karaoke using a menu screen

See "Playing from a specified position on a disc" (pg. 27).

### NOTE

- While playback is paused, no sound (voice) via the microphone is heard from the speakers.
- You cannot turn on KARAOKE function while playing back an MPEG4/DVD AUDIO disc.
- KARAOKE function will be canceled when you change the source by pressing a source selecting button or when an MPEG4/DVD AUDIO disc playback automatically starts.
- When KARAOKE function is on:
  - The volume indication on the display window automatically turns up by a few levels but the change of the indication does not affect on the hearing.
  - The output level of the DIGITAL OUT jack is lowered.
  - The surround mode (pg. 24) is canceled.

## Reserving songs

You can reserve your desired songs (tracks/chapters) to play in the order of your choice.



Up to 12 songs can be reserved with this function.

- While stopped with KARAOKE function turned on

### 1 Press RESERVE.

The reservation list appears on the TV screen.

### 2 Press number buttons (1-10, +10) to select your desired song to reserve by specifying the disc, group/title, and track/chapter numbers.

Example:

To specify "track/chapter 2" of "disc 1": Press 1 ⇒ 1 ⇒ 2

To specify "track/chapter 14" of "disc 3": Press 3 ⇒ 1 ⇒ +10 ⇒ 4

To specify "track/chapter 20" of "disc 3": Press 3 ⇒ 1 ⇒ +10 ⇒ 10

No	Disc	Gr/Tt	Tr/Chap
1	1	1	2
2	3	1	14
3	3	1	20
4			
5			

#### To erase a reserved song

Press Cursor ▼/▲ to select the desired song (disc, group/title, and title/track numbers), then press CANCEL.

#### To add a song to the reservation list

Press Cursor ▼/▲ to select the desired song (disc, group/title, and title/track numbers), then specify a new disc, group/title, and title/track numbers. The new song is inserted before the selected song.

### 3 Repeat step 2 to reserve the rest of your selection.

### 4 Press ► (play button) to start playback of the reserved songs.

#### To hide or show the reservation list

Press RESERVE. Each time you press RESERVE, the reservation list disappears/appears from/on the TV screen.

#### NOTE

- When "⊗" appears in step 2, 12 songs have already been reserved and you cannot make more reservations.
- While the reservation list is not displayed on the TV screen, you cannot start playback of the reserved songs by pressing ► (play button). Be sure to press RESERVE to display the reservation list before you start playback.
- You can additionally reserve a song next to the current playing song even during playback. In such a case, perform the procedure above from step 1 through 3.

## Selecting audio

Most Karaoke discs have the capability of adding "Guide vocal" or "Guide melody" to the Karaoke accompaniment.

### Selecting audio channel(s) [AUDIO]

With most DVD Karaoke discs, you can select audio channel(s) among some options called "with guide vocal", "with guide melody", and "accompaniment only", etc. to enjoy Karaoke to your preference.



- During playback

### 1 Press ON SCREEN.

### 2 Press AUDIO repeatedly to select the desired audio channel.

Each time you press AUDIO, audio channel changes as follows;

Example for a video CD, super VCD:

ST ⇒ L ⇒ R ⇒ (back to the beginning)

- ST: To listen to L (left) and R (right) audio channel.
- L: To listen to L (left) audio channel.
- R: To listen to R (right) audio channel.

#### NOTE

- When "⊗" appears on the TV screen, the disc does not contain multi audio channels or this operation is prohibited.

### Masking the vocal recorded on a normal disc [VOCAL MASK]

You can enjoy Karaoke with a normal disc (containing no multiplex audio or multi-sound Karaoke audio, etc.) by attenuating the frequencies around a human voice with this function. Note that this setting is applied only to the current disc.



- During playback with KARAOKE function turned on

### 1 Press VOCAL.

Each time you press VOCAL, vocal mask function turns on and off alternately.

#### NOTE

- The voice may not be masked enough with some discs.

## Adding an echo effect to your voice

- During playback with KARAOKE function turned on

 


Press **ECHO** repeatedly to select the desired effect level.

Each time you press ECHO, vocal option changes as follows;

**OFF** ⇒ **1** ⇒ **2** ⇒ **3** ⇒ **(back to the beginning)**

As the number increases, the effect will be emphasized.  
(Normally set the level to “2”.)



### To cancel the sound effect

Select “OFF” in the procedure above.

## Shifting the pitch of the playback sound

You can sharp/flat the pitch of a song recorded on a disc by a half-tone interval to match your voice range. Note that this setting is applied only to the current title/track.



- During playback with KARAOKE function turned on

### 1 Press **KEY CTL +/-**.

The following indication appears on the TV screen.

For DVD VIDEO/VCD/SVCD/CD: (pop-up window)



- Be sure to go to the next step within five seconds while the pop-up window is displayed on the TV screen.

For MP3/WMA: (in the file control display)



### 2 Press **KEY CTL +/-** repeatedly to adjust the pitch (**-6 to +6**).

- Press **KEY CTL +** to sharp and **KEY CTL -** to flat the pitch.

### To resume normal playback

Select “0” in the procedure above.

### NOTE


- Depending on the type of the recorded source (such as a DTS Digital Surround software, etc.), you may not be able to shift the pitch.



## Maintenance

### ■ Handling Discs

- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes and moisture.

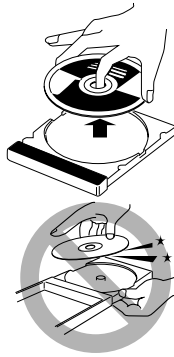

### To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.

- **DO NOT use any solvent — such as conventional record cleaner, spray, thinner or benzine — to clean the disc.**



### ■ Cleaning the system

- Stains on the system should be wiped off with a soft cloth. If the system is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the system may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following.
  - DO NOT wipe it with a hard cloth.
  - DO NOT wipe it strong.
  - DO NOT wipe it with thinner or benzine.
  - DO NOT apply any volatile substance such as insecticides to it.
  - DO NOT allow any rubber or plastic to remain in contact with it for a long time.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power does not come on.	The power cord and/or system cord is not connected.	Connect the power cord and system cord correctly. (☞ pg. 13)
The remote control does not work.	The batteries are exhausted.	Replace the batteries. (☞ pg. 7)
	Sunlight is falling directly on the remote sensor.	Hide the remote sensor from direct sunlight.
No sound.	The system cord and/or speaker cord is not connected.	Check the connection. (☞ pg. 12)
	The audio cord is not connected to VCR IN and/or DIGITAL IN (DBS) correctly.	Connect the cord correctly. (☞ pg. 12)
	An incorrect source has been selected.	Select the correct source. (☞ pg. 17)
	The decode mode is not set correctly.	Select the proper decode mode. (☞ pg. 35)
No picture is displayed on the TV screen.	The video cord is not connected correctly.	Connect the cord correctly. (☞ pg. 11)
	The disc is not playable.	Use a playable disc. (☞ pg. 3)
No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.	The scan mode is set to “PAL PROG.” or “NTSC PROG.” though the center unit is connected to the TV which does not support the progressive video input such as a conventional TV.	Change the scan mode to “PAL” or “NTSC”. (☞ pg. 18)
Video and audio are distorted.	The disc is scratched or dirty.	Replace or clean the disc.
	A VCR is connected between the center unit and the TV.	Connect the center unit and TV directly. (☞ pg. 11)
The picture does not fit the TV screen.	The monitor type is not set correctly.	Set “MONITOR TYPE” properly. (☞ pg. 37)
Hard to listen to broadcast because of noise.	Antennas are disconnected.	Reconnect the antennas correctly and securely. (☞ pg. 8)

## Specifications

### ■ Center unit (XV-THM508/XV-THM303)

#### Audio section

Total Harmonic Distortion 0.02 %

NOTE: This value is measured at System cord CONNECTOR for reference.

Digital input\*1:

DIGITAL IN (DBS): -21 dBm to -15 dBm  
(OPTICAL) (660 nm ±30 nm)

\*1 Corresponding to Linear PCM, Dolby Digital, and DTS Digital Surround (with sampling frequency — 32 kHz, 44.1 kHz, 48 kHz)

#### Video section

Video System: NTSC/PAL selectable

Horizontal Resolution: 500 lines

Signal-to-Noise Ratio: 64 dB

Video output level

Composite: 1.0 V(p-p)/75 Ω  
S-video-Y: 1.0 V(p-p)/75 Ω  
S-video-C: 0.286 V (0.3 V\*2) (p-p)/75 Ω  
Component-Y: 1.0 V(p-p)/75 Ω  
Component-Pb/Pr: 0.7 V(p-p)/75 Ω

Video input sensitivity/Impedance (VCR IN)

Composite: 1.0 V(p-p)/75 Ω  
S-video-Y: 1.0 V(p-p)/75 Ω  
S-video-C: 0.286 V (0.3 V\*2) (p-p)/75 Ω

\*2 For PAL system

#### Tuner section

Tuning Range

FM: 87.50 MHz to 108.00 MHz  
AM: 531 kHz to 1 602 kHz  
(at 9 kHz intervals)  
530 kHz to 1 600 kHz  
(at 10 kHz intervals)

#### General

Power Requirements: AC 110 – 240 V ~, 50/60 Hz  
(except for Australia)  
AC 240 V ~, 50 Hz  
(for Australia only)

Power Consumption: 18 W (at operation)  
2.0 W (in standby mode)

Dimensions (W × H × D):  
400 mm × 85 mm × 380 mm

Mass: 4.3 kg

### ■ Subwoofer (SP-PWM508)

#### Amplifier section

Front/Center/Surround: 140 W per channel, RMS at 4 Ω  
(Center/Surround)/ 140 W per channel,  
RMS at 4 Ω (Front)  
at 1 kHz, with 10 % total harmonic  
distortion.

Subwoofer: 300 W, RMS at 4 Ω at 100 Hz, with  
10 % total harmonic distortion.

#### Speaker section

Speaker unit: 25 cm Bass-reflex, Magnetically  
Shielded

Frequency Range: 20 Hz to 200 Hz

#### General

Power Requirements: AC 110 V/127 V/220 – 240 V ~  
selectable with the voltage selector,  
50 Hz/60 Hz

Power Consumption: 170 W (at operation)  
0 W (in standby mode)

Dimensions (W × H × D):  
256 mm × 482 mm × 460 mm

Mass: 18.5 kg

### ■ Subwoofer (SP-PWM303)

#### Amplifier section

Front/Center/Surround: 80 W per channel, RMS at 6 Ω  
(Center/Surround)/ 120 W per channel,  
RMS at 4 Ω (Front)  
at 1 kHz, with 10 % total harmonic  
distortion.

Subwoofer: 120 W, RMS at 4 Ω at 100 Hz, with 10  
% total harmonic distortion.

#### Speaker section

Speaker unit: 16 cm Bass-reflex, Magnetically  
Shielded

Frequency Range: 30 Hz to 200 Hz

#### General

Power Requirements: AC 110 V/127 V/220 – 240 V ~  
selectable with the voltage selector,  
50 Hz/60 Hz

(except for Australia)  
AC 240 V ~, 50 Hz  
(for Australia only)

Power Consumption: 110 W (at operation)  
0 W (in standby mode)

Dimensions (W × H × D):  
168.5 mm × 412 mm × 444 mm

Mass: 12.0 kg

## References

---

### ■ Satellite Speakers

#### Front speakers (SP-THM508F)

Speakers:	
Woofer:	10.0 cm × 2
Tweeter:	4.0 cm
	Bass-reflex, Magnetically Shielded
Power Handling Capacity:	140 W
Impedance:	4 Ω
Frequency Range:	60 Hz to 20 kHz
Dimensions (W × H × D):	
	250 mm × 1065.5 mm × 310 mm
Mass:	7.2 kg

#### Surround speakers (SP-THM505S)

Speakers:	8.0 cm
	Bass-reflex, Magnetically Shielded
Power Handling Capacity:	140 W
Impedance:	4 Ω
Frequency Range:	80 Hz to 20 kHz
Dimensions (W × H × D):	
	111.5 mm × 139 mm × 106.5 mm
Mass:	0.52 kg

#### Center speaker (SP-THM508C)

Speakers:	
Woofer:	8.0 cm × 2
Tweeter:	4.0 cm
	Bass-reflex, Magnetically Shielded
Power Handling Capacity:	140 W
Impedance:	4 Ω
Frequency Range:	65 Hz to 20 kHz
Dimensions (W × H × D):	
	326 mm × 119 mm × 170 mm
Mass:	2.5 kg

### ■ Satellite Speakers

#### Front speakers (SP-THM303F)

Speakers:	8.0 cm
	Bass-reflex, Magnetically Shielded
Power Handling Capacity:	140 W
Impedance:	4 Ω
Frequency Range:	90 Hz to 20 kHz
Dimensions (W × H × D):	
	106 mm × 119.5 mm × 102 mm
Mass:	0.69 kg

#### Surround speakers (SP-THM303S)

Speakers:	8.0 cm
	Bass-reflex, Magnetically Shielded
Power Handling Capacity:	140 W
Impedance:	4 Ω
Frequency Range:	80 Hz to 20 kHz
Dimensions (W × H × D):	
	111.5 mm × 139 mm × 106.5 mm
Mass:	0.63 kg


#### Center speaker (SP-THM303C)

Speakers:	8.0 cm
	Bass-reflex, Magnetically Shielded
Power Handling Capacity:	140 W
Impedance:	4 Ω
Frequency Range:	90 Hz to 20 kHz
Dimensions (W × H × D):	
	106 mm × 119.5 mm × 102 mm
Mass:	0.69 kg



Designs & specifications are subject to change without notice.

# Mains (AC) Line Instruction (not applicable for SP-PWM303 for Australia)

**SP-PWM508**

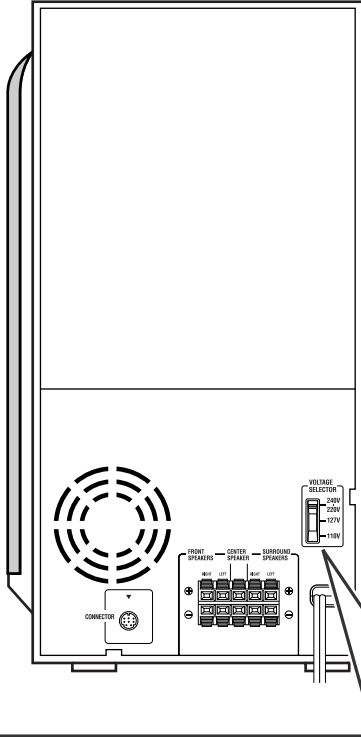


**SP-PWM303**

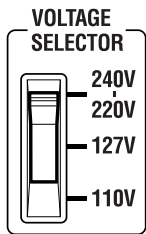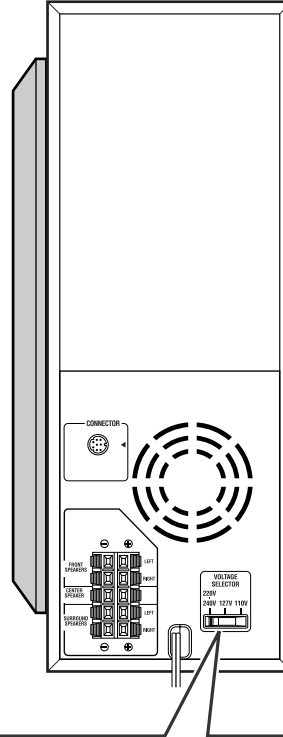

For SP-PWM508

**CAUTION for mains (AC) line**

BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.

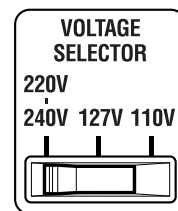

For SP-PWM303

