 


Concerning Compact Discs

Only compact discs bearing this mark can be used with this unit.

 


However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.
CD-R and CD-RW discs recorded with the audio CD format can be played back, though some may not be played back because of the disc characteristics or recording condition.




The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

How to hold a disc



If the disk surface is dirty

 Wipe it with a damp cloth and then wipe dry. Wipe from the center toward the outer edge.



If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe off the moisture using a soft dry cloth.

When storing discs

Avoid locations which are:
 • Exposed to direct sunlight.
 • Susceptible to high levels of humidity or dust.
 • Directly exposed to heat from a heating appliance.
 • On top of a car dashboard or near the rear window.

 
Handling precautions

• On the label side (the side with writing) Do not write anything using a pencil, ball-point pen, etc. Do not use adhesive paper or labels.
 • On the disc (shiny) side Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.
 • Do not attach labels or stickers to CDs. Do not use CDs with exposed adhesive from tape or left over peeled off stickers.
 • Do not use scratch-proof protectors or covers other than those specified for use with this unit.

JVC

PORTABLE CD PLAYER XL-PM6S/XL-PR70B

For Customer Use:
 Enter below the Model No. and Serial No. which are located on back of the lid. Retain this information for future reference.
 Model No. _____
 Serial No. _____

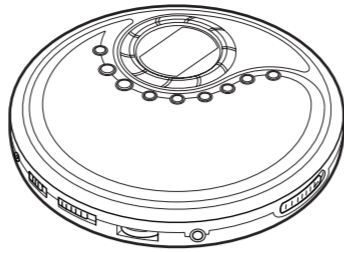

MP3/WMA*
PLAYBACK

INSTRUCTIONS

* Only XL-PR70B supports WMA

Supplied Accessories

Stereo headphones 1 pc.

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

0205SKMCREORI
 ©2005 Victor Company of Japan, Limited


LVT1297-001A [J,C,UJ]



Power Supply Preparations

The illustration of the grip band is omitted.

 Using dry-cell batteries (not supplied)

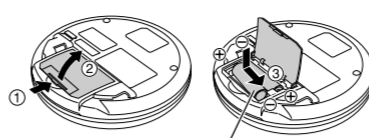


Two "AA" (LR6) alkaline batteries.

Caution:

Do not forcibly open the battery lid too wide.

 Battery indicator

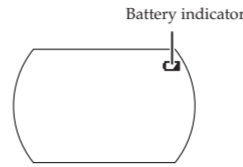


This indicator appears when the batteries are almost out of power. Power will be cut off a short while later.

Note:

Turning off the Anti-Shock Protection EX will save the battery power more or less. For details, see "Anti-shock Protection EX" on page 7. (Available for an Audio CD only)

 Using the AC adaptor (not supplied)

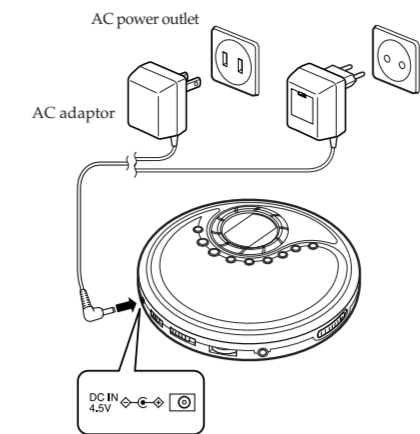


Notes:

• Even if the unit is turned off, small power is consumed as long as the AC adaptor is connected to the AC power outlet.
 • When you want to purchase the AC adaptor, see page 4.

AC adaptor (for multi voltage area only) (not supplied)


Before use

 Make sure the present voltage of your AC adaptor fits to your local voltage before plugging it into the AC power outlet. If it doesn't, shift the AC line-voltage selector with a screwdriver so that it corresponds to your local voltage.



If the power plug will not fit your socket, use the AC plug adaptor.

 How to use the AC plug adaptor (not supplied)



Note:

When you want to purchase the AC adaptor and the AC plug adaptor, see page 4.

Specifications

Portable CD player

Type : Compact disc player
 Signal detection system : Non-contact optical pickup (semiconductor laser)
 Pickup system : 3 beam laser
 Number of channels : 2 channels (stereo)
 Frequency response : 20 Hz to 20 kHz
 Wow & flutter : Unmeasurable
 Output : Headphones (3.5 mm dia. stereo x 1)
 9 mW/ch at 10% THD / 16 Ω matching impedance (16 Ω to 1 kΩ)
 87.5 MHz - 108.0 MHz
 FM tuning range (XL-PR70B only)
 Duration of battery (with Anti-Shock Protection EX OFF) : Approx. 20 hours when using two alkaline batteries (LR6)
 Power requirements : DC 3 V ("AA" or "LR6" size battery x 2)
 DC 2.4V (rechargeable battery x 2)
 DC IN 4.5 V
 Dimensions (W×H×D) : 138 mm × 26 mm × 138 mm (5-7/16" × 1-1/4" × 5-7/16") (Excluding buttons and controls)
 Mass : XL-PM6S 250 g (0.56 lbs)
 XL-PR70B 260 g (0.58 lbs) (with grip band, without batteries)

 
AC adaptor (not supplied)

Input power source : AC 120 V, 60 Hz (for the U.S.A. and Canada)
 AC 110V - 127V / 220 V - 240V, 50 / 60 Hz (for multi voltage area)
 Output voltage : DC 4.5 V, 600 mA

• Design and specifications are subject to change without notice.
 • Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and /or other countries.

Put the grip band on your hand

Adjust the grip band to your hand size.

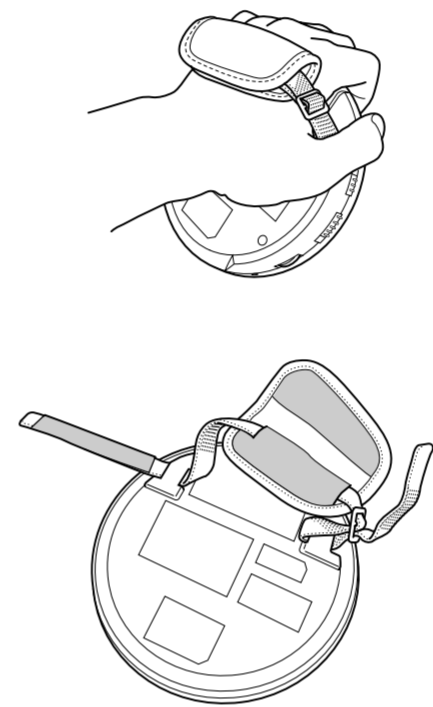


Maintenance

Unit

Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.
 • If you intend to use a chemically treated cleaning cloth, read its directions first.
 • Do not use alcohol or paint thinners.

 Lens

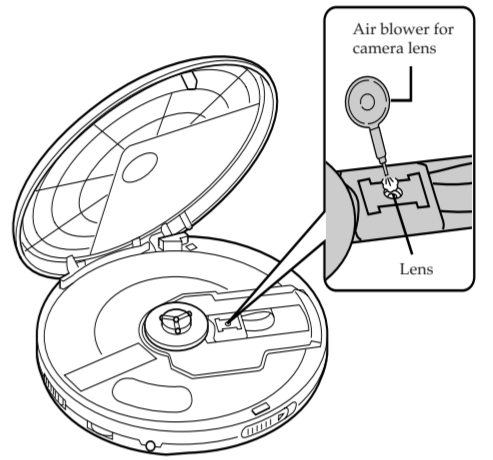

Precautions

Safety

- Care of AC adaptor** - The cord of the AC adaptor should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the AC adaptor if your hand is wet, and always grasp the plug when connecting or disconnecting it.
- Disconnect when not in use** - When not in use, be sure to disconnect the AC adaptor from the AC power outlet.
- Batteries** - If the unit is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to battery leakage. Do not mix (old and new) batteries or different types of batteries.

Installation

- Environment**
 - Condensation** - Moisture may form on the lens in the following conditions...
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one. If moisture forms inside this unit, it may not operate properly. To correct this problem wait about one hour for the moisture to evaporate.
- Placement**
 - Foreign Material** - Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
- Magnatism** - The unit should be situated away from equipment or devices that generate strong magnetic fields.
- Stacking** - Do not place any objects on top of the unit.

Maintenance

(See page 2 for details.)
 Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution.
 Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

Service

1. Damage Requiring Service - The unit should be serviced by qualified service personnel when:
 (a) The AC adaptor is damaged; or
 (b) Objects have fallen or liquid has been spilled into the unit; or
 (c) The unit has been exposed to rain; or
 (d) The unit does not appear to operate normally or exhibits a marked change in performance; or
 (e) The unit has been dropped, or the enclosure damaged.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

INFORMATION (For Canada)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Department of Communications.

THE FOLLOWING NOTICES ARE APPLIED ONLY FOR THE U.S.A.:

CAUTION!

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:
 • Reorient or relocate the receiving antenna.
 • Increase the separation between the equipment and receiver.
 • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 • Consult the dealer or an experienced radio/TV technician for help.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

Cautions

Listening precautions



Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play.

If you experience a ringing in your ears, reduce volume or discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones are an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts. To establish a safe level:
 • Start your volume control at a low setting.
 • Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:
 • Set the dial and leave it there.

Rechargeable batteries

• Rechargeable batteries (not supplied) can be used.
 • To use the rechargeable batteries, follow the instruction manual attached to the rechargeable batteries and charger (not supplied).

Dry cell batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.
 • Align the ⊕ and ⊖ polarities properly when inserting the batteries.
 • Do not mix different types or makers of batteries or old and new batteries.
 • Remove the batteries if you do not plan to use the unit for a long period of time.
 • Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
 • Do not attempt to recharge dry cell batteries.

Carrying dry cell batteries around

When putting dry cell batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

AC adaptor

- Handle the AC adaptor carefully. Improper handling is dangerous.
 - Do not touch it with wet hands.
 - Do not place heavy objects on top of it.
 - Do not forcibly bend it.
- Be sure to connect only the specified AC adaptor with the unit.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.


Troubleshooting

Problem	Check this
Poor tuner reception	• Extend the headphone cord (antenna) to improve reception.
Does not turn on.	• Is the AC adaptor securely connected? • Is the HOLD switch set to OFF position?
Cannot close the lid.	Is the disc properly secured in place?
Cannot play discs.	• Is the disc properly secured in place? • Is there moisture condensation on the lens? (Wait for about an hour and then try again.) • Are MP3/WMA files recorded on the disc? • Do MP3/WMA files have the extension code—mp3 or .wma? • Are MP3/WMA files recorded in the format compliant with ISO 9660?
Cannot hear music—too noisy.	• Is the headphone plug inserted all the way? • Is the plug dirty? (Wipe away dirt on the plug.) • Are you playing a compatible disc? While playing a non-MP3/WMA file, you will hear a noise. (Note it may not be an MP3/WMA file although it has the extension code—mp3 or .wma)
TV picture is distorted. Other radio reception is noisy.	Are you using the unit too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
"DISC" or "Er" is displayed when a disc is in the player.	• Is the disc damaged? • Is the disc playable on this player? • Has the disc been inserted upside down?

If the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

Basic Play

The illustration of the grip band is omitted.
WMA can be played back only with XL-PR70B.

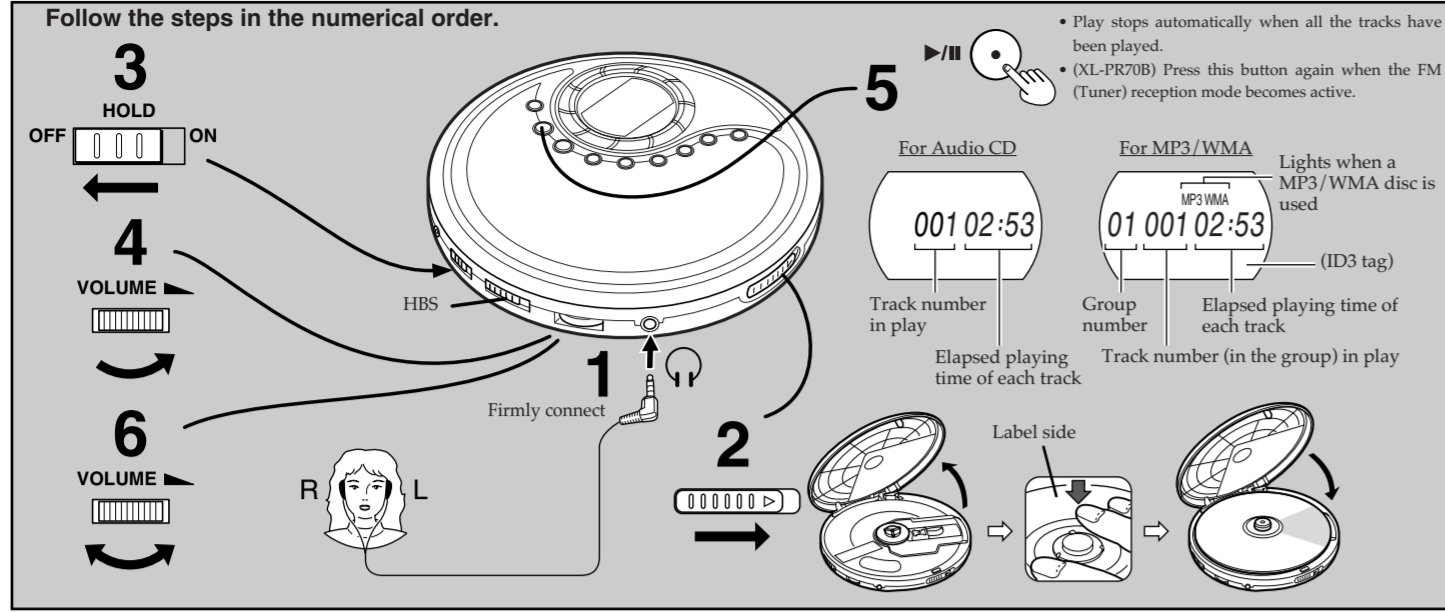 

Operation	Button	Display/reference	
		Audio CD	MP3/WMA
To pause	During play, Press again to restart play.	007:00:18-	01 004:00:07-
To stop	During play,	010 44:48 Total playing time	10 035 Total number of tracks
To turn off the unit	While stopped,	No indication	
Fast forward/reverse	Skip function During play, Reverse	<ul style="list-style-type: none"> To skip back to the previous track, quickly press twice. During Program play, the button is used to fast forward or back through the programmed sequence of tracks. During Random play, the skip button cannot be used to skip back to tracks that were played previously in the random sequence. 	
	Forward		
Group skip (MP3/WMA only)	Search function Keep depressed during play.		
	During play or while stopped, Forward Reverse	Group number 02 001	
(XL-PR70B only) To switch over the mode from FM to CD	In FM mode,		

For your reference:

"DISC"
This indication appears if is pressed when no disc is loaded or if the disc is not properly seated.

"READING"
Preparation period before playing the track. Appears for several seconds after pressing .

"OPEN"
This indication appears when the lid is open.

Removing discs
Turn off the unit and, after the disc has stopped rotating, remove the disc as shown below:



Auto power off
If the unit is left in stop mode for 30 seconds, the unit turns itself off automatically to prevent the batteries from running down. Auto power off function does not work when the source is FM.

Disc rotation noise
The portable CD player uses a power-saving operation method so that disc rotation noise will intermittently be emitted. But, it is not a failure.


About MP3/WMA files

MP3/WMA File Compatibility

- This player can read MP3/WMA files that are recorded in the format that is compliant with ISO 9660.
- The player can read or play an MP3 file with the extension code ".mp3" and a WMA file with the extension code ".wma".
- Track title can be displayed.
- ID3* tags can be shown on the display.
- An MP3/WMA file can contain file information called "ID3 Tag" where its album name, artist, title, etc. are recorded.

Playing order of MP3/WMA files


The illustration below shows the normal playing order of the MP3/WMA files. You will see that the MP3/WMA files are played back in the order from the higher hierarchy to the lower one.

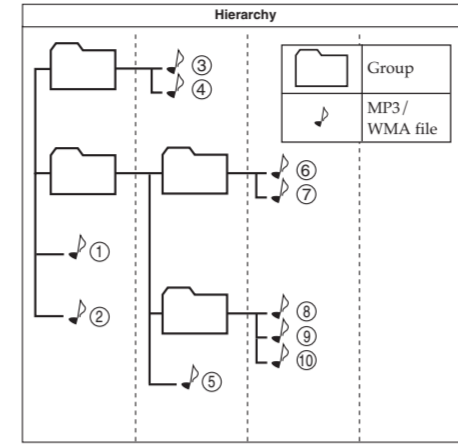 

Other Play Methods

Intro play

 You can successively play the first 10 seconds of every track.

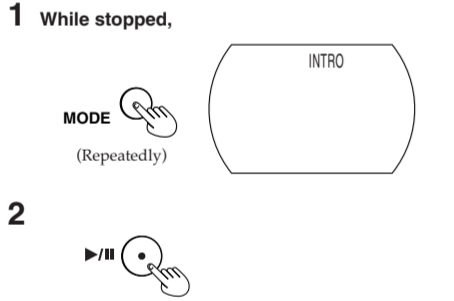

To cancel
Press MODE repeatedly until "INTRO" goes out.

- Notes:**
- You can also select Intro play during playback.
 - In this case, Intro play will start from the next track after the current track has finished.
 - You can also select Intro play during Program play mode.

Random play

During playback,



After playing all tracks, the unit stops.

 
To cancel
Press MODE until "RND" goes out, or press to stop the disc.

- Notes:**
- You can also select Random play in stop mode.
 - During Program play, you can not select Random play.

Repeat play

You can repeat one track or all tracks.

During playback,

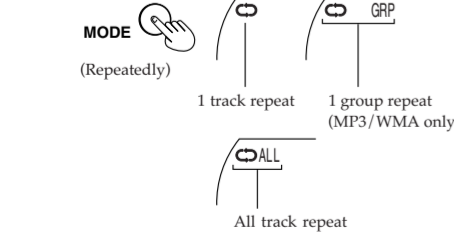


To cancel
Press MODE repeatedly until the repeat indicator goes out.


- Notes:**
- You can also select Repeat play during Program play.
 - You can also select Repeat play while stopped.

Program play

 You can program up to 64 tracks in any desired order including the same tracks.
 For Audio CD, go to step 3. Though the display differs a little, operation is the same.

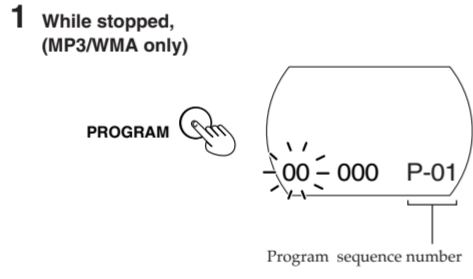

 
1 (MP3/WMA only) Select the desired group number. (e.g.02)

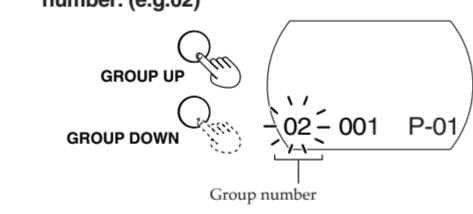

3



 4 Select the desired track.

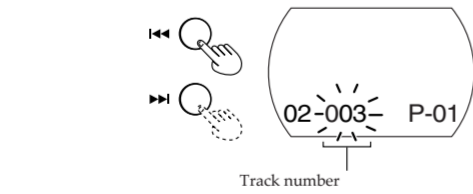

5

 


The track is registered.

6 For MP3/WMA, repeat steps 2-5 to select other tracks. For Audio CD, repeat steps 4 and 5.

When you program exceeding 64 tracks, the program sequence number returns to "01" and will overwrite the previous setting.


7

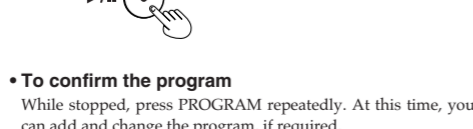

- To confirm the program**
While stopped, press PROGRAM repeatedly. At this time, you can add and change the program, if required.
- To delete the entire program**
 - While stopped, press STOP.
 - Turn off the unit.
 - (XL-PR70B) Change the source to FM.

Hyper-Bass Sound effect

 You can enjoy powerful bass sound.




Anti-Shock Protection EX

This function achieves excellent performance against sound interruption caused by vibrations. You will be able to enjoy listening to music during (not vigorous) jogging.

By utilizing the high-performance servo circuit, audio data will be stored in the memory ahead of time.
 For Audio CD: Up to 40 seconds worth (Anti-Shock Protection on/off selectable)
 For MP3/WMA: Up to 100 seconds worth at 128 kbps (Anti-Shock Protection is fixed to on.)

 Normally, this function is in effect.

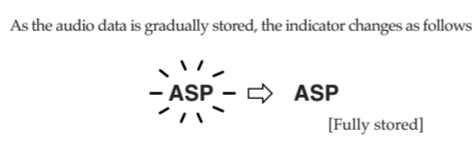

To cancel (Audio CD only)
Press A.S.P.

The "ANTI SHOCK" indicator goes out.

To activate again (Audio CD only)
Press A.S.P.

- Notes:**
- During this operation, the disc rotates at a higher rate than usual in order to collect extra audio data. This may cause the batteries to run out faster and could result in a slight increase in disc rotation noise.
 - This function can be switched ON and OFF during playback. However, this may cause a slight interruption in the sound because the disc's rotational speed changes.

 
Preventing Accidental Operation (Hold mode)

This function causes the unit to ignore, accidental button presses.

Hold mode prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly.

To use the Hold mode



- To prevent the unit from powering on accidentally, set the HOLD switch to the ON position while the unit is turned off.
- To prevent the unit from unexpected operation during play, set the HOLD switch to the ON position after you start playing the disc.
- When the unit is in Hold mode, "HOLD" and light as follows.
 Power on : stays lit.
 Power off : "HOLD" and light up for a few seconds when is pressed.

 
Notes:

- Before turning on the unit, be sure that HOLD is OFF. Otherwise, you cannot turn on the unit.

Tuner Operation (XL-PR70B only)

You can listen to FM stations by tuning in manually, automatically, or using preset memory.
 For best reception, extend the headphone cord (antenna).

Manual/Auto tuning

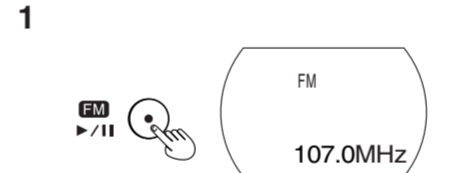

When the power is turned on and you want to change the mode from CD to FM, keep the button depressed.
 When the power is turned off, press the button.
 If the CD mode becomes active, keep the button depressed to switch over the mode to FM.

2 Select a station.



 
Manual tuning
Press or repeatedly to select a station you want.

Auto tuning
Hold down or for a while and then release it. The frequency automatically changes up or down to find the next station.


Presetting stations

You can preset up to 20 stations (frequencies).


1 Select the station you want to preset.
Use Manual or Auto tuning mentioned earlier.

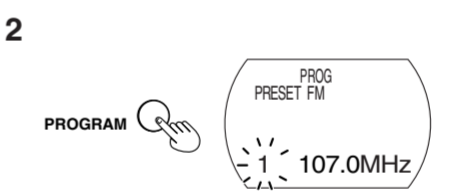

2

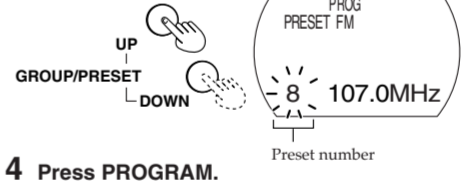 

 3 Select the preset number (01-20) you want.

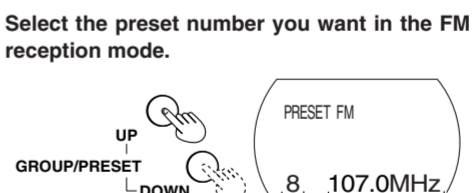

4 Press PROGRAM.

 
Preset tuning
Select the preset number you want in the FM reception mode.



Changing the FM reception mode

When a broadcast is in stereo, "ST." lights up and you can hear stereo effects. However, if an FM stereo broadcast is hard to receive or noisy, you can select monaural (MONO) mode. Reception improves, but you lose the stereo effect.

To select the monaural mode

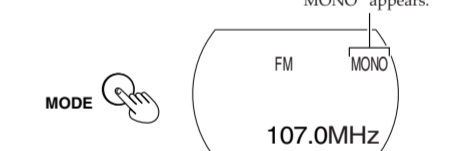

To cancel the monaural mode
Press MODE once again. "MONO" will go out. The monaural mode is cancelled also by changing the frequency.

Turning off the unit

 


Concerning Compact Discs

Only compact discs bearing this mark can be used with this unit.




However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.
CD-R and CD-RW discs recorded with the audio CD format can be played back, though some may not be played back because of the disc characteristics or recording condition.




The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

 How to hold a disc



If the disk surface is dirty

 Wipe it with a damp cloth and then wipe dry. Wipe from the center toward the outer edge.



If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe off the moisture using a soft dry cloth.

When storing discs

 
- Avoid locations which are
 - Exposed to direct sunlight.
 - Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

Handling precautions

- On the label side (the side with writing) Do not write anything using a pencil, ball-point pen, etc. Do not use adhesive paper or labels.
- Do not attach labels or stickers to CDs.
- On the disc (shiny) side Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.
 - Do not use CDs with exposed adhesive from tape or left over peeled off stickers.
 - Do not use scratch-proof protectors or covers other than those specified for use with this unit.



PORTABLE CD PLAYER XL-PM6S/XL-PR70B

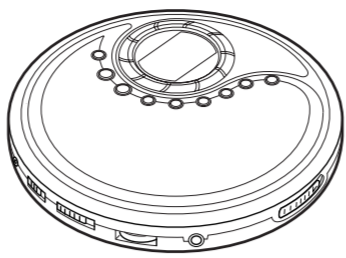

MP3/WMA*
PLAYBACK

INSTRUCTIONS

* Only XL-PR70B supports WMA

Supplied Accessories


Stereo headphones 1 pc.

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

LVT1297-004A [B]
©2005 Victor Company of Japan, Limited


Power Supply Preparations

 Using dry-cell batteries (not supplied)

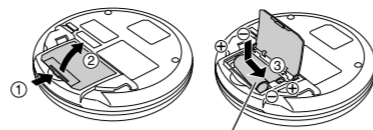

Caution: Two "LR6" alkaline batteries. Do not forcibly open the battery lid too wide.

 Battery indicator

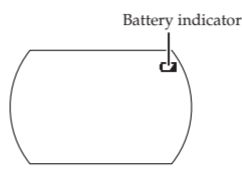


This indicator appears when the batteries are almost out of power. Power will be cut off a short while later.

Note:

Turning off the Anti-Shock Protection EX will save the battery power more or less. For details, see "Anti-shock Protection EX" on page 7. (Available for an Audio CD only)

 Using the AC adaptor (not supplied)

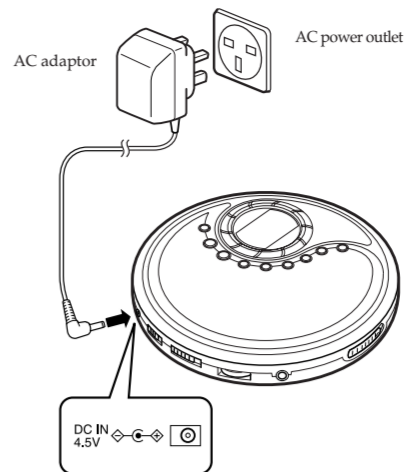

Notes:

- Even if the unit is turned off, small power is consumed as long as the AC adaptor is connected to the AC power outlet.
- When you want to purchase the AC adaptor, see page 4.

Specifications

Portable CD player

- Type : Compact disc player
- Signal detection system : Non-contact optical pickup (semiconductor laser)
- Pickup system : 3 beam laser
- Number of channels : 2 channels (stereo)
- Frequency response : 20 Hz to 20 kHz
- Wow & flutter : Unmeasurable
- Output : Headphones (3.5 mm dia. stereo × 1)
9 mW/ch at 10% THD/16 Ω matching impedance (16 Ω to 1 kΩ)
- FM tuning range (XL-PR70B only) : 87.50 MHz - 108.00 MHz
- Duration of battery (with Anti-Shock Protection EX OFF) : Approx. 20 hours when using two alkaline batteries (LR6)
- Power requirements : DC 3 V ("LR6" size battery × 2)
DC 2.4V (rechargeable battery × 2)
DC IN 4.5 V
- Dimensions (W×H×D) : 138 mm × 26 mm × 138 mm (Excluding buttons and controls)
- Mass : XL-PM6S 240 g
XL-PR70B 250 g (without batteries)

AC adaptor (not supplied)

- Input power source : AC 230V, 50 Hz
- Output voltage : DC 4.5 V, 600 mA

 
- Design and specifications are subject to change without notice.
- Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Maintenance

Unit

- Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.
- If you intend to use a chemically treated cleaning cloth, read its directions first.
- Do not use alcohol or paint thinners.

Lens

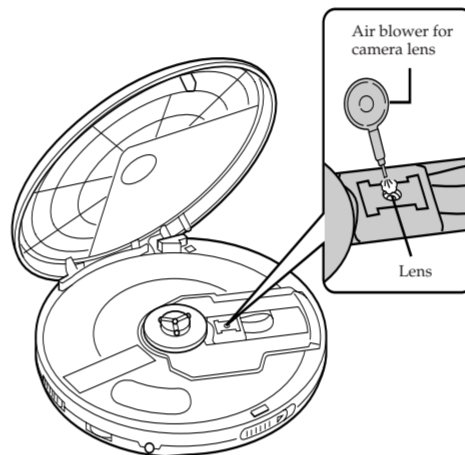

Precautions

Safety

- Care of AC adaptor** - The cord of the AC adaptor should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the AC adaptor if your hand is wet, and always grasp the plug when connecting or disconnecting it.
- Disconnect when not in use** - When not in use, be sure to disconnect the AC adaptor from the AC power outlet.
- Batteries** - If the unit is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to battery leakage. Do not mix (old and new) batteries or different types of batteries.

Installation

Environment

- Condensation** - Moisture may form on the lens in the following conditions.
 - immediately after a heater has been turned on.
 - in a steamy or very humid room.
 - when the unit is suddenly moved from a cold environment to a warm one. If moisture forms inside this unit, it may not operate properly. To correct this problem wait about one hour for the moisture to evaporate.

Placement

- Foreign Material** - Care should be taken so that objects do not fall into and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration, or shock.
- Magnetism** - The unit should be situated away from equipment or devices that generate strong magnetic fields.
- Stacking** - Do not place any objects on top of the unit.

Maintenance

(See page 2 for details.)
Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

Service

- Damage Requiring Service** - The unit should be serviced by qualified service personnel when:
 - (a) The AC adaptor is damaged; or
 - (b) Objects have fallen or liquid has been spilled into the unit; or
 - (c) The unit has been exposed to rain; or
 - (d) The unit does not appear to operate normally or exhibits a marked change in performance; or
 - (e) The unit has been dropped, or the enclosure damaged.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION:

- Do not block the ventilation opening or holes. (If the ventilation openings of holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

IMPORTANT FOR LASER PRODUCTS

- CLASS 1 LASER PRODUCT**
- CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.**

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)	WARNING: Synlig Och osynlig laserstrålning när den öppnas och spärren är urkopplad. Beträkta ej strålen. (s)
ADVARSSEL: Synlig og usynlig laserstrålning når maskinen er åben eller interlocken fejle. Undgå direkte eksponering til stråling. (d)	VARO: Avattaessa ja Suogalukitus ohitettunatai viiallisena olet alttina näkyväille ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan iiseesi. (f)

Cautions

Listening precautions

- Do not play your headphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Rechargeable batteries

- Rechargeable batteries (not supplied) can be used.
- To use the rechargeable batteries, follow the instruction manual attached to the rechargeable batteries and charger (not supplied).

Dry cell batteries

- To prevent damage to the batteries and electrolyte leakage, heed the following points.
- Align the ⊕ and ⊖ polarities properly when inserting the batteries.
- Do not mix different types or makers of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

Carrying dry cell batteries around

When putting dry cell batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

AC adaptor

- Handle the AC adaptor carefully. Improper handling is dangerous.
 - Do not touch it with wet hands.
 - Do not place heavy objects on top of it.
 - Do not forcibly bend it.
- Be sure to connect only the specified AC adaptor with the unit.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.


Troubleshooting

Problem	Check this
Poor tuner reception	• Extend the headphone cord (antenna) to improve reception.
Does not turn on.	• Is the AC adaptor securely connected? • Is the HOLD switch set to OFF position?
Cannot close the lid.	Is the disc properly secured in place?
Cannot play discs.	• Is the disc properly secured in place? • Is there moisture condensation on the lens? (Wait for about an hour and then try again.) • Are MP3/WMA files recorded on the disc? • Do MP3/WMA files have the extension code—.mp3 or .wma? • Are MP3/WMA files recorded in the format compliant with ISO 9660?
Cannot hear music—too noisy.	• Is the headphone plug inserted all the way? • Is the plug dirty? (Wipe away dirt on the plug.) • Are you playing a compatible disc? While playing a non-MP3/WMA file, you will hear a noise. (Note: It may not be an MP3/WMA file although it has the extension code—.mp3, or .wma)
TV picture is distorted. Other radio reception is noisy.	Are you using the unit too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
"DISC" or "Er" is displayed when a disc is in the player.	• Is the disc damaged? • Is the disc playable on this player? • Has the disc been inserted upside down?

If the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

Basic Play

 WMA can be played back only with XL-PR70B.

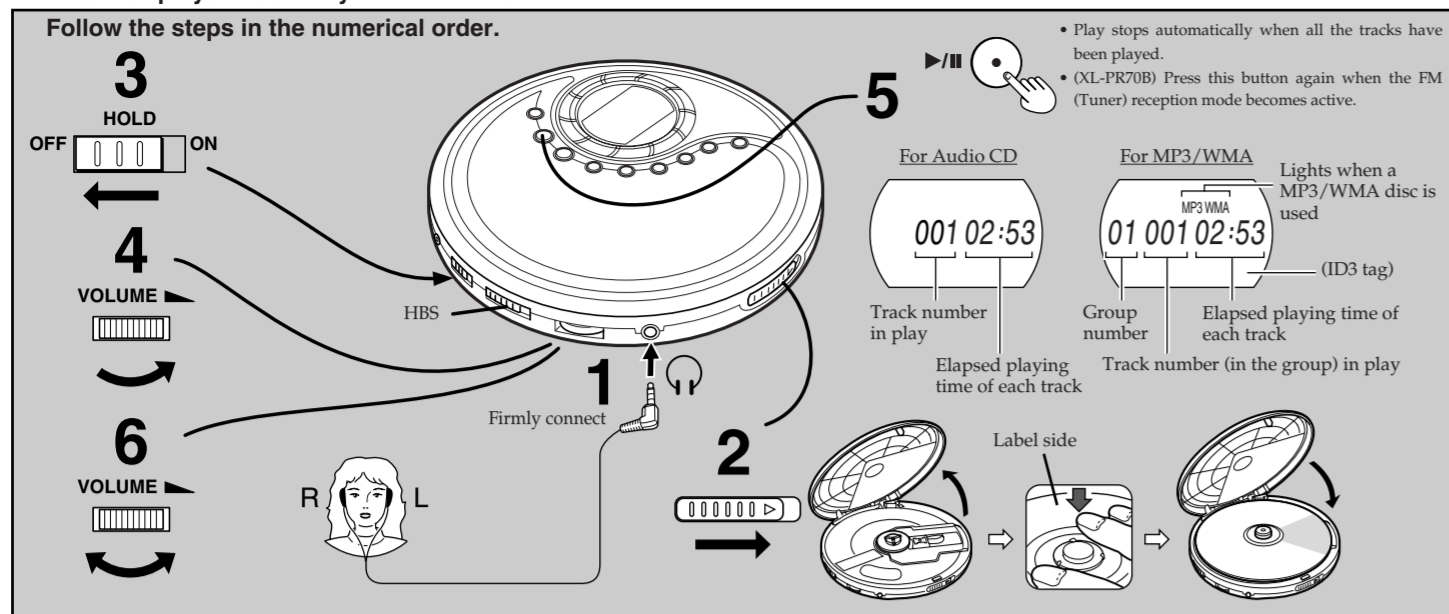


Operation	Button	Display/reference	
		Audio CD	MP3/WMA
To pause	▶/II (During play), Press again to restart play.	007 00:18-	01 004 00:07-
To stop	■ (During play)	Total number of tracks: 010 44:48 Total playing time	Total number of groups: 10 035 Total number of tracks
To turn off the unit	■ (While stopped)	No indication	
Fast forward/reverse	Skip function (During play): Reverse (◀◀), Forward (▶▶)	<ul style="list-style-type: none"> To skip back to the previous track, quickly press ◀◀ twice. During Program play, the button is used to fast forward or back through the programmed sequence of tracks. During Random play, the skip button cannot be used to skip back to tracks that were played previously in the random sequence. 	
	Search function (Keep depressed during play)		
Group skip (MP3/WMA only)	GROUP UP (Forward), GROUP DOWN (Reverse)	Group number: 02 001	
(XL-PR70B only) To switch over the mode from FM to CD	FM (In FM mode), ▶/II		

For your reference:
"DISC"
 This indication appears if ▶/II is pressed when no disc is loaded or if the disc is not properly seated.

"READING"
 Preparation period before playing the track. Appears for several seconds after pressing ▶/II to play.

"OPEN"
 This indication appears when the lid is open.

 Removing discs
 Turn off the unit and, after the disc has stopped rotating, remove the disc as shown below:

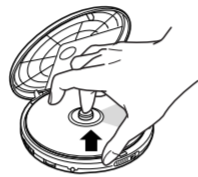

Auto power off
 If the unit is left in stop mode for 30 seconds, the unit turns itself off automatically to prevent the batteries from running down. Auto power off function does not work when the source is FM.

Disc rotation noise
 The portable CD player uses a power-saving operation method so that disc rotation noise will intermittently be emitted. But, it is not a failure.


About MP3/WMA files

MP3/WMA File Compatibility

- This player can read MP3/WMA files that are recorded in the format that is compliant with ISO 9660.
- The player can read or play an MP3 file with the extension code ".mp3" and a WMA file with the extension code ".wma".
- Track title can be displayed.
- ID3 tags can be shown on the display.
- An MP3/WMA file can contain file information called "ID3 Tag" where its album name, artist, title, etc. are recorded.


Playing order of MP3/WMA files

The illustration below shows the normal playing order of the MP3/WMA files. You will see that the MP3/WMA files are played back in the order from the higher hierarchy to the lower one.

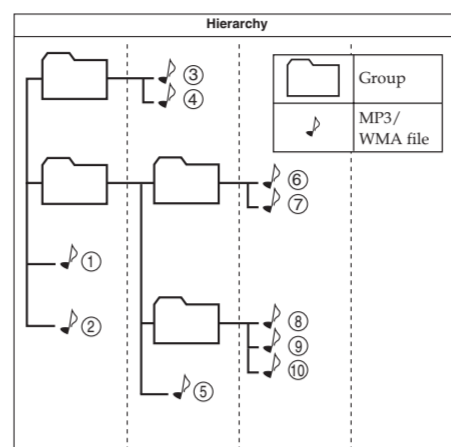 

Other Play Methods

 Intro play
 You can successively play the first 10 seconds of every track.

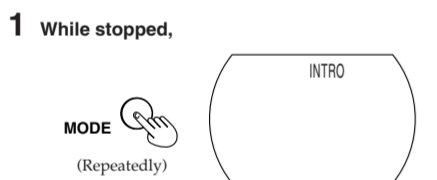


2 ▶/II

To cancel
 Press MODE repeatedly until "INTRO" goes out.

Notes:

- You can also select Intro play during playback.
- In this case, Intro play will start from the next track after the current track has finished.
- You can also select Intro play during Program play mode.

 Random play

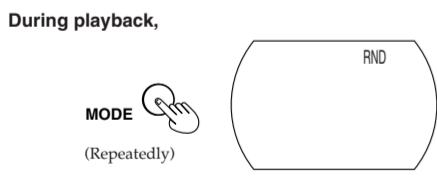


After playing all tracks, the unit stops.

To cancel
 Press MODE until "RND" goes out, or press ■ to stop the disc.

Notes:

- You can also select Random play in stop mode.
- During Program play, you can not select Random play.

 Repeat play

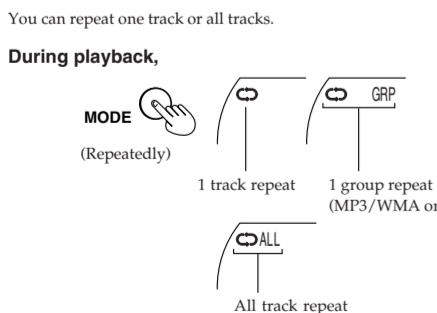

To cancel
 Press MODE repeatedly until the repeat indicator goes out.

 
 
 
 
 
Notes:

- You can also select Repeat play during Program play.
- You can also select Repeat play while stopped.

Program play

You can program up to 64 tracks in any desired order including the same tracks.

For Audio CD, go to step 3. Though the display differs a little, operation is the same.

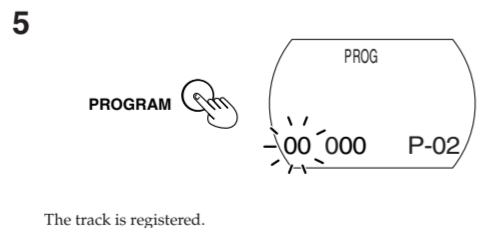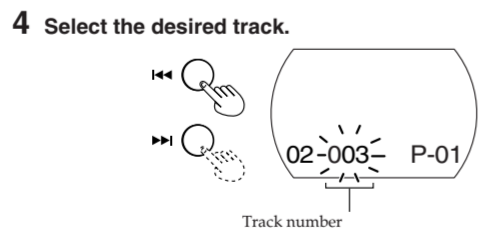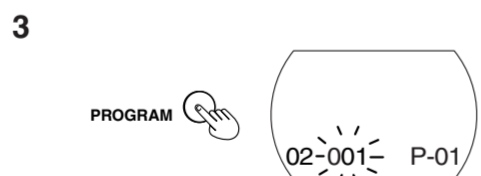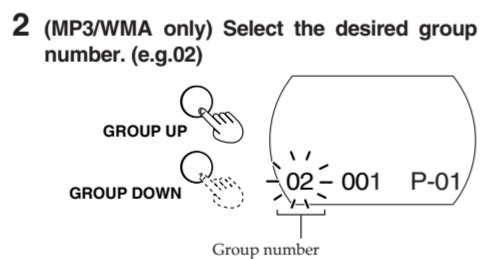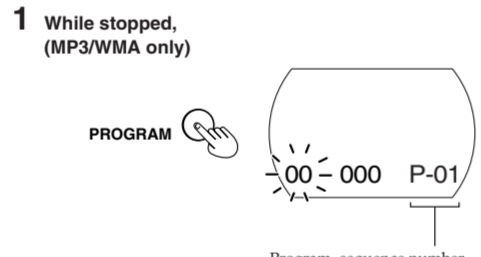

6 For MP3/WMA, repeat steps 2-5 to select other tracks. For Audio CD, repeat steps 4 and 5.

When you program exceeding 64 tracks, the program sequence number returns to "01" and will overwrite the previous setting.



- To confirm the program**
 While stopped, press PROGRAM repeatedly. At this time, you can add and change the program, if required.
- To delete the entire program**
 - While stopped, press STOP.
 - Turn off the unit.
 - (XL-PR70B) Change the source to FM.

Hyper-Bass Sound effect

You can enjoy powerful bass sound.

OFF 1 2 HBS

Anti-Shock Protection EX

 
This function achieves excellent performance against sound interruption caused by vibrations. You will be able to enjoy listening to music during (not vigorous) jogging.

By utilizing the high-performance servo circuit, audio data will be stored in the memory ahead of time.

For Audio CD: Up to 40 seconds worth (Anti-Shock Protection on/off selectable)

For MP3/WMA: Up to 100 seconds worth at 128 kbps (Anti-Shock Protection is fixed to on.)

Normally, this function is in effect.

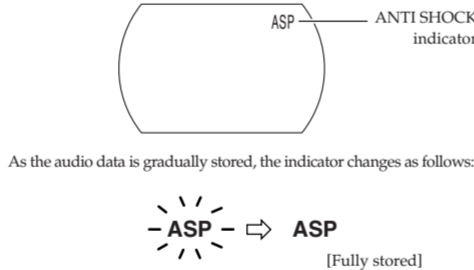

To cancel (Audio CD only)
 A.S.P

The "ANTI SHOCK" indicator goes out.

To activate again (Audio CD only)
 Press A.S.P.

- Notes:**
- During this operation, the disc rotates at a higher rate than usual in order to collect extra audio data. This may cause the batteries to run out faster and could result in a slight increase in disc rotation noise.
 - This function can be switched ON and OFF during playback. However, this may cause a slight interruption in the sound because the disc's rotational speed changes.

Preventing Accidental Operation (Hold mode)

This function causes the unit to ignore, accidental button presses.

Hold mode prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly.

To use the Hold mode

OFF HOLD ON

- To prevent the unit from powering on accidentally, set the HOLD switch to the ON position while the unit is turned off.
- To prevent the unit from unexpected operation during play, set the HOLD switch to the ON position after you start playing the disc.
- When the unit is in Hold mode, "HOLD" and "■" light as follows.
 Power on : "HOLD" stays lit.
 Power off : "HOLD" and "■" light up for a few seconds when ▶/II is pressed.

Notes:

 
- Before turning on the unit, be sure that HOLD is OFF. Otherwise, you cannot turn on the unit.

Tuner Operation (XL-PR70B only)

You can listen to FM stations by tuning in manually, automatically, or using preset memory.

For best reception, extend the headphone cord (antenna).

Manual/Auto tuning

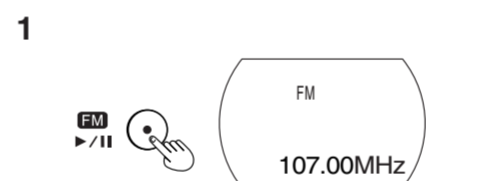

When the power is turned on and you want to change the mode from CD to FM, keep the button depressed.

When the power is turned off, press the button.

If the CD mode becomes active, keep the button depressed to switch over the mode to FM.

 


Manual tuning
 Press ▶/II or ◀◀ repeatedly to select a station you want.

Auto tuning
 Hold down ▶/II or ◀◀ for a while and then release it. The frequency automatically changes up or down to find the next station.


Presetting stations

You can preset up to 20 stations (frequencies).
 Use Manual or Auto tuning mentioned earlier.

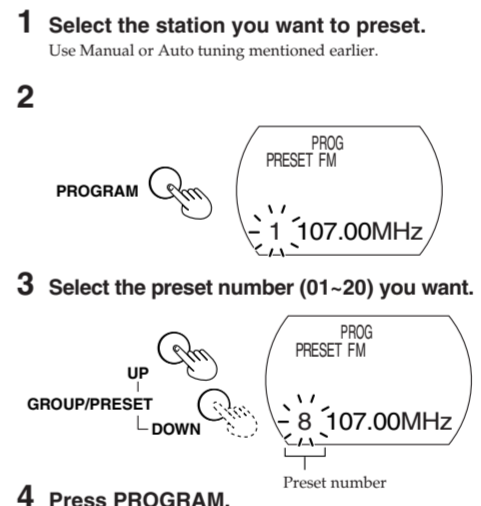


Preset tuning

 Select the preset number you want in the FM reception mode.

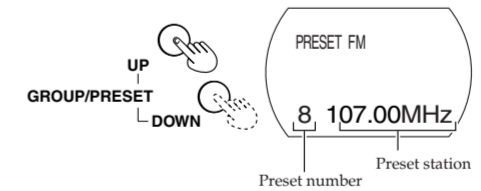

Changing the FM reception mode

 When a broadcast is in stereo, "ST." lights up and you can hear stereo effects. However, if an FM stereo broadcast is hard to receive or noisy, you can select monaural (MONO) mode. Reception improves, but you lose the stereo effect.

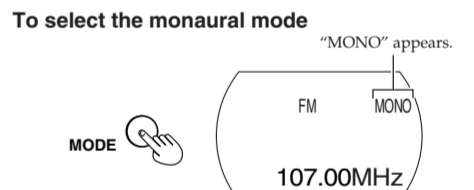

To cancel the monaural mode
 Press MODE once again. "MONO" will go out. The monaural mode is cancelled also by changing the frequency.

Turning off the unit



Concerning Compact Discs

Only compact discs bearing this mark can be used with this unit.

 


However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit. CD-R and CD-RW discs recorded with the audio CD format can be played back, though some may not be played back because of the disc characteristics or recording condition.




The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

How to hold a disc



If the disk surface is dirty

 Wipe it with a damp cloth and then wipe dry. Wipe from the center toward the outer edge.



If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe off the moisture using a soft dry cloth.

When storing discs

- Avoid locations which are:
- Exposed to direct sunlight.
- Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

Handling precautions

- On the label side (the side with writing) Do not write anything using a pencil, ball-point pen, etc. Do not use adhesive paper or labels.
On the disc (shiny) side Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc. Do not attach labels or stickers to CDs. Do not use CDs with exposed adhesive from tape or left over peeled off stickers. Do not use scratch-proof protectors or covers other than those specified for use with this unit.



PORTABLE CD PLAYER XL-PM6S/XL-PR70B



INSTRUCTIONS

* Only XL-PR70B supports WMA

Supplied Accessories

Table listing accessories: Stereo headphones, AC adaptor, AC plug adaptor, and Rechargeable Ni-MH batteries.

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

0405SKMCREORI LVT1297-014A [US]
EN ©2005 Victor Company of Japan, Limited

Specifications

Portable CD player

- Type: Compact disc player
Signal detection system: Non-contact optical pickup (semiconductor laser)
Pickup system: 3 beam laser
Number of channels: 2 channels (stereo)
Frequency response: 20 Hz to 20 kHz
Wow & flutter: Unmeasurable
Output: Headphones (3.5 mm dia. stereo x 1) 9 mW/ch at 10% THD / 16 Ω matching impedance (16 Ω to 1 kΩ)
FM tuning range (XL-PR70B only): 87.50 MHz - 108.00 MHz
Duration of battery (with Anti-Shock Protection EX OFF): Approx. 20 hours when using two alkaline batteries (LR6) Approx. 5 hours when using two rechargeable batteries charged for 12 hours
Power requirements: DC 3 V ("LR6" size battery x 2) DC 2.4 V (rechargeable battery x 2) DC IN 4.5 V
Dimensions (W x H x D): 138 mm x 26 mm x 138 mm (Excluding buttons and controls)
Mass: XL-PM6S 240 g XL-PR70B 250 g (without batteries)

AC adaptor (not supplied)

Input power source: AC 110 V - 127 V / 220 V - 240 V, 50 / 60 Hz
Output voltage: DC 4.5 V, 600 mA

 
- Design and specifications are subject to change without notice.
Microsoft and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the United States and /or other countries.

Maintenance

Unit

Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.
If you intend to use a chemically treated cleaning cloth, read its directions first.
Do not use alcohol or paint thinners.

Lens

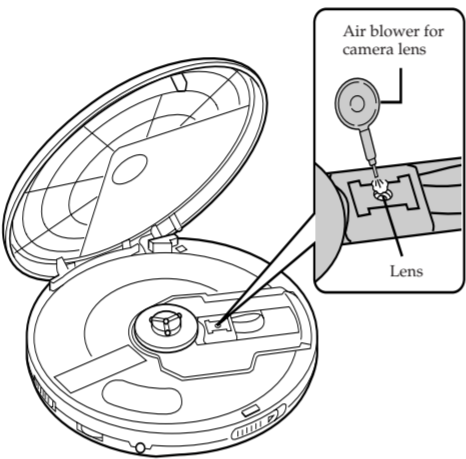

Precautions

Safety

- Care of AC adaptor - The cord of the AC adaptor should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
Disconnect when not in use - When not in use, be sure to disconnect the AC adaptor from the AC power outlet.
Batteries - If the unit is not used for a long period of time or is used only from an AC power source, remove all the batteries to prevent potential damage due to battery leakage.

Installation

- Environment
Condensation - Moisture may form on the lens in the following conditions...
Placement
Foreign Material - Care should be taken so that objects do not fall into and liquids are not spilled into the unit.
Magnetism - The unit should be situated away from equipment or devices that generate strong magnetic fields.
Stacking - Do not place any objects on top of the unit.

Maintenance

(See page 2 for details.) Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

Service

- Damage Requiring Service - The unit should be serviced by qualified service personnel when:
(a) The AC adaptor is damaged, or
(b) Objects have fallen or liquid has been spilled into the unit; or
(c) The unit has been exposed to rain; or
(d) The unit does not appear to operate normally or exhibits a marked change in performance; or
(e) The unit has been dropped, or the enclosure damaged.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION! THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

CAUTION: Do not block the ventilation opening or holes. Do not place any naked flame sources, such as lighted candles, on the apparatus. When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.

IMPORTANT FOR LASER PRODUCTS 1. CLASS 1 LASER PRODUCT 2. CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel. 3. CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam. 4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. ADVARSEL: Synlig og usynlig laserstråling når maskinen er åpen eller interlocken fejle. VARNING: Synlig Och osynlig laserstråling när den öppnas och spårren är urkopplad. BEAM. VARO: Avtaiaessa ja Suojalukitus ohitettunai visailisena olet ittiin näkyväille ja näkymättömälle lasersäteilyle. Vältä säteen kohdistumista suoraan itseesi.

 
Power Supply Preparations

Using rechargeable batteries (supplied)

Be sure to recharge the rechargeable batteries before using them.

Recharging procedure


1 Insert the rechargeable batteries.

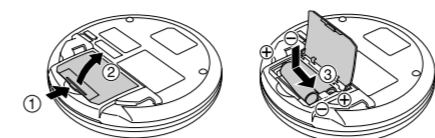


Caution:

Do not forcibly open the battery lid too wide.

 2 Connect the AC adaptor (supplied).

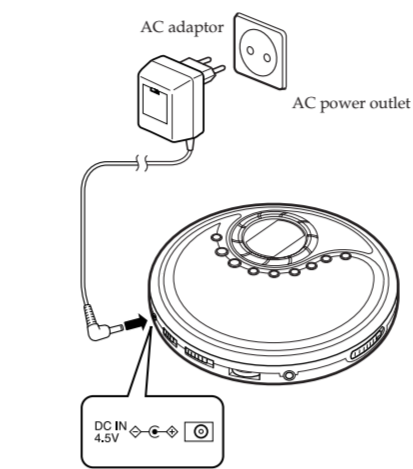

3

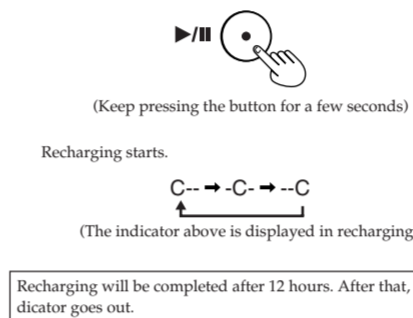 

Recharging will be completed after 12 hours. After that, the indicator goes out.

4 When recharging is complete, unplug the AC adaptor from the AC power outlet and the DC IN jack.

Notes:

- Rechargeable batteries have a service life of approximately 300 charge-discharge cycles. If the operating time on one full charge becomes noticeably shorter than it used to be, the batteries have reached the end of their service life and should be replaced.
You can recharge the batteries only when the unit is turned off.
The AC adaptor and rechargeable batteries may become warm while recharging is in progress. This is normal and is not a malfunction.

Using the AC adaptor (supplied)

Connect the AC adaptor.

Refer to "Using rechargeable batteries" for connection instructions.

 
Note:

Even if the unit is turned off, small power is consumed as long as the AC adaptor is connected to the AC power outlet.

Using dry-cell batteries (not supplied)

After disconnecting the AC adaptor, insert two "LR6" alkaline batteries. The procedure for inserting and removing dry-cell batteries is identical to that rechargeable batteries.

Battery indicator

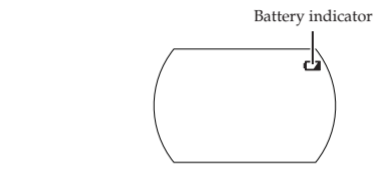

This indicator appears when the batteries are almost out of power. Power will be cut off a short while later.

Note:

Turning off the Anti-Shock Protection EX will save the battery power more or less. For details, see "Anti-shock Protection EX" on page 4.

Cautions

Listening precautions

Do not play your headphones or earphones at a high volume. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

You should use extreme caution or temporarily discontinue use in potentially hazardous situations.

Even if your headphones or earphones are an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts. To establish a safe level: Start your volume control at a low setting. Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level: Set the dial and leave it there.

Rechargeable batteries

- Only supplied battery can be recharged.
If the power delivered by the batteries lasts for a very short time after recharging, it means that the batteries' service life is over. Do not use them any more.
Recharging already charged batteries will shorten their service life.
When recharging batteries for the first time or when they have not been used for a long period of time, the play time may be shorter than usual. In a case like this, repeatedly recharge and discharge the batteries. This will restore them to their regular state.
Do not allow any metal objects to touch the terminals of rechargeable batteries since this may cause short-circuiting which is dangerous.
Do not peel off the plastic covering on the rechargeable batteries. Short-circuiting may occur which is dangerous.

Notice about the rechargeable battery The battery is designated recyclable. Please follow your local recycling regulations.

Dry cell batteries/rechargeable batteries

- To prevent damage to the batteries and electrolyte leakage, heed the following points:
Align the + and - polarities properly when inserting the batteries.
Do not mix different types or makers of batteries or old and new batteries.
Remove the batteries if you do not plan to use the unit for a long period of time.
Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
Do not attempt to recharge dry cell batteries.

 
Carrying dry cell batteries/rechargeable batteries around

When putting dry cell or rechargeable batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

AC adaptor


Before use

Make sure the present voltage of your AC adaptor fits to your local voltage before plugging it into the AC power outlet. If it doesn't, shift the AC line-voltage selector with a screwdriver so that it corresponds to your local voltage.



If the power plug will not fit your socket, use the AC plug adaptor.

 
How to use the AC plug adaptor (supplied)



Troubleshooting

Table with 2 columns: Problem and Check this. Rows include Poor tuner reception, Does not turn on, Cannot close the lid, Cannot play discs, Cannot hear music, TV picture is distorted, and DISC or ER is displayed.

 If the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

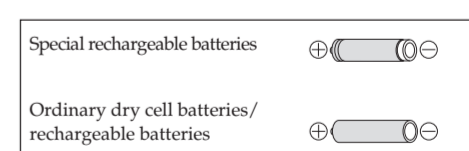

Basic Play

WMA can be played back only with XL-PR70B.

Follow the steps in the numerical order.

• Play stops automatically when all the tracks have been played.
• (XL-PR70B) Press this button again when the FM (Tuner) reception mode becomes active.

For Audio CD: 001 02:53
Track number in play | Elapsed playing time of each track

For MP3/WMA: 01 001 02:53
Group number | Elapsed playing time of each track | Track number (in the group) in play | (ID3 tag)

Lights when a MP3/WMA disc is used


Operation	Button	Display/reference	
		Audio CD	MP3/WMA
To pause	▶/II Press again to restart play.	007 00:18-	01 004 00:07-
To stop	■	Total number of tracks 010 44:48 Total playing time	Total number of groups 10 035 Total number of tracks
To turn off the unit	■	No indication	
Fast forward/ reverse	Skip function During play: Reverse Forward	<ul style="list-style-type: none"> To skip back to the previous track, quickly press ◀◀ twice. During Program play, the button is used to fast forward or back through the programmed sequence of tracks. During Random play, the skip button cannot be used to skip back to tracks that were played previously in the random sequence. 	
	Search function Keep depressed during play.		
Group skip (MP3/WMA only)	GROUP UP GROUP DOWN	Group number 02 001	
(XL-PR70B only) To switch over the mode from FM to CD	FM ▶/II		

For your reference:
“DISC”
This indication appears if ▶/II is pressed when no disc is loaded or if the disc is not properly seated.

“READING”
Preparation period before playing the track.
Appears for several seconds after pressing ▶/II to play.

“OPEN”
This indication appears when the lid is open.

 Removing discs
Turn off the unit and, after the disc has stopped rotating, remove the disc as shown below:

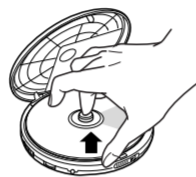

Auto power off
If the unit is left in stop mode for 30 seconds, the unit turns itself off automatically to prevent the batteries from running down.
Auto power off function does not work when the source is FM.

Disc rotation noise
The portable CD player uses a power-saving operation method so that disc rotation noise will intermittently be emitted. But, it is not a failure.


About MP3/WMA files

MP3/WMA File Compatibility

- This player can read MP3/WMA files that are recorded in the format that is compliant with ISO 9660.
- The player can read or play an MP3 file with the extension code “.mp3” and a WMA file with the extension code “.wma”.
- Track title can be displayed.
- ID3* tags can be shown on the display.
- An MP3/WMA file can contain file information called “ID3 Tag” where its album name, artist, title, etc. are recorded.

Playing order of MP3/WMA files

The illustration below shows the normal playing order of the MP3/WMA files. You will see that the MP3/WMA files are played back in the order from the higher hierarchy to the lower one.

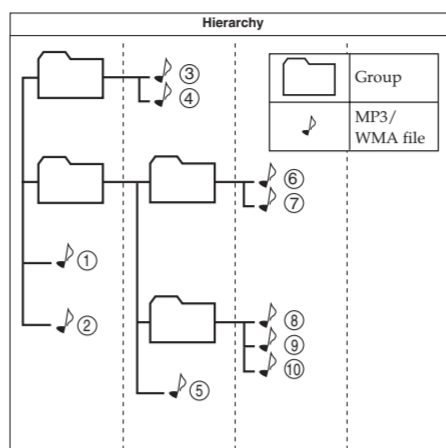 

5

Other Play Methods

Intro play
You can successively play the first 10 seconds of every track.

1 While stopped, MODE (Repeatedly)

2 ▶/II (Repeatedly)

To cancel
Press MODE repeatedly until “INTRO” goes out.

Notes:
• You can also select Intro play during playback.
In this case, Intro play will start from the next track after the current track has finished.
• You can also select Intro play during Program play mode.

Random play

During playback, MODE (Repeatedly)

To cancel
Press MODE until “RND” goes out, or press ■ to stop the disc.

Notes:
• You can also select Random play in stop mode.
• During Program play, you can not select Random play.

Repeat play

During playback, MODE (Repeatedly)

To cancel
Press MODE repeatedly until the repeat indicator goes out.

Notes:
• You can also select Repeat play during Program play.
• You can also select Repeat play while stopped.

7

7 ▶/II

• To confirm the program
While stopped, press PROGRAM repeatedly. At this time, you can add and change the program, if required.

• To delete the entire program
• While stopped, press STOP.
• Turn off the unit.
• (XL-PR70B) Change the source to FM.

7

6

Tuner Operation (XL-PR70B only)

You can listen to FM stations by tuning in manually, automatically, or using preset memory.
For best reception, extend the headphone cord (antenna).

1 Manual/Auto tuning

When the power is turned on and you want to change the mode from CD to FM, keep the button depressed.
When the power is turned off, press the button.
If the CD mode becomes active, keep the button depressed to switch over the mode to FM.

2 Select a station.

Manual tuning
Press ▶/II or ◀◀ repeatedly to select a station you want.

Auto tuning
Hold down ▶/II or ◀◀ for a while and then release it. The frequency automatically changes up or down to find the next station.

Presetting stations

You can preset up to 20 stations (frequencies).

1 Select the station you want to preset.
Use Manual or Auto tuning mentioned earlier.

2 PROGRAM

3 Select the preset number (01-20) you want.

4 Press PROGRAM.

Preset tuning

Select the preset number you want in the FM reception mode.

Changing the FM reception mode

When a broadcast is in stereo, “ST.” lights up and you can hear stereo effects. However, if an FM stereo broadcast is hard to receive or noisy, you can select monaural (MONO) mode. Reception improves, but you lose the stereo effect.

To select the monaural mode
“MONO” appears.

To cancel the monaural mode
Press MODE once again. “MONO” will go out.
The monaural mode is cancelled also by changing the frequency.

Turning off the unit

8

Notes:
• Before turning on the unit, be sure that HOLD is OFF. Otherwise, you cannot turn on the unit.

Notes:
• To prevent the unit from powering on accidentally, set the HOLD switch to the ON position while the unit is turned off.
• To prevent the unit from unexpected operation during play, set the HOLD switch to the ON position after you start playing the disc.
• When the unit is in Hold mode, “HOLD” and “ ” light as follows.
Power on : “ ” stays lit.
Power off : “HOLD” and “ ” light up for a few seconds when ▶/II is pressed.

 
JVC

PORTABLE CD PLAYER

LECTOR PORTÁTIL DE DISCOS COMPACTOS

PORTABLE DRAAGBARE CD-SPELER

XL-PM6S / XL-PR70B

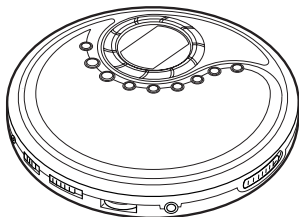

COMPACT disc
DIGITAL AUDIO

MP3/WMA*
PLAYBACK

*Only XL-PR70B supports WMA / Sólo el XL-PR70B admite WMA / Alleen XL-PR70B ondersteunt WMA

INSTRUCTIONS **INSTRUCCIONES** **GEBRUIKSAANWIJZING**

LVT1297-005A [E]

English

Español

Nederlands

Warnings, Cautions and Others
Avisos, precauciones y otras notas
Waarschuwingen, voorzorgen en andere mededelingen

CAUTION!

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

¡ADVERTENCIA!

ESTE APARATO UTILIZA UN LÁSER. EL USAR LOS CONTROLES, HACER LOS REGLAJES O LOS PASOS REQUERIDOS EN FORMA DIVERSA DE LA AQUÍ EXPUESTA PUEDE REDUNDAR EN EXPOSICIÓN PELIGROSA A LA RADIACIÓN.

NO ABRA LAS TAPAS NI HAGA REPARACIONES USTED MISMO. EN CASO DE PRODUCIRSE ANOMALÍAS SOLICITE AYUDA DE PERSONAL CUALIFICADO.

AVISO:

PARA REDUCIR EL RIESGO DE INCENDIOS O SACUDIDAS ELÉCTRICAS, NO LO EXPONGA A LA LLUVIA O HUMEDAD.

WAARSCHUWING!

IN DIT APPARAAT WORDT EEN LASER GEBRUIKT. HET GEBRUIK VAN REGELAARS EN HET MAKEN VAN AFSTELLINGEN OF BEDIENINGEN DIE NIET IN DEZE GEBRUIKSAANWIJZING STAAN BESCHREVEN, KAN LEIDEN TOT BLOOTSTELLING AAN GEVAARLIJKE STRALING. MAAK HET APPARAAT NIET OPEN EN GA NIET ZELF REPAREREN. LAAT HET ONDERHOUD AAN ERKENDE VAKMENSEN OVER.

WAARSCHUWING:

TENEINDE HET GEVAAR VOOR BRAND OF ELEKTRISCHE SCHOKKEN TE VERKLEINEN, MAG DIT APPARAAT NIET WORDEN BLOOTGESTELD AAN REGEN OF VOCHT.

CAUTION:

- Do not block the ventilation opening or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

PRECAUCIÓN:

- No obstruya las rendijas o los orificios de ventilación. (Si las rendijas o los orificios de ventilación quedan tapados con un periódico, un trozo de tela, etc., no se podrá disipar el calor).
- No ponga sobre el aparato ninguna llama al descubierto, como velas encendidas.
- Cuando tenga que descartar las pilas, tenga en cuenta los problemas ambientales y observe estrictamente los reglamentos o las leyes locales sobre disposición de las pilas.
- No exponga este aparato a la lluvia, humedad, goteos o salpicaduras. Tampoco ponga recipientes conteniendo líquidos, como floreros, encima del aparato.

VOORZICHTIG:

- Zorg dat u de ventilatieopeningen en -gaten niet afsluit. (Als de ventilatieopeningen en -gaten worden afgesloten door bijvoorbeeld papier of een doek, kan er hitte in het apparaat worden opgebouwd.)
- Zet geen bronnen met open vuur, zoals brandende kaarsen, op het apparaat.
- Wees milieubewust en gooi lege batterijen niet bij het huishoudelijk afval. Lege batterijen dient u in te leveren met het KCA of bij een innamepunt voor batterijen.
- Stel dit apparaat niet bloot aan regen, vocht, drupwater of spatwater en plaats geen enkel voorwerp waarin zich een vloeistof bevindt, zoals een vaas, op het apparaat.

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED OUTSIDE THE UNIT.

BELANGRIJK VOOR LASERPRODUKTEN

1. KLASSE 1 LASERPRODUKT
2. **VOORZICHTIG:** Open de bovenste afdekking niet. Er zijn geen door de gebruiker te repareren onderdelen in het toestel; laat onderhoud en reparatie over aan erkend onderhoudspersoneel.
3. **VOORZICHTIG:** Zichtbare en onzichtbare laserstraling indien open en interlock defect of buiten werking gesteld. Voorkom directe blootstelling aan de straal.
4. REPRODUCTIE VAN LABEL: WAARSCHUWINGSLABEL IN TOESTEL AANGEBRACHT.

IMPORTANTE PARA PRODUCTOS LÁSER

1. PRODUCTO LÁSER CLASE 1
2. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no hay piezas que pueda reparar el usuario; encargue el servicio a personal técnico cualificado.
3. **PRECAUCIÓN:** Radiación láser visible e invisible en caso de apertura o con interbloqueo averiado o defectuoso. Evite la exposición directa a los haces.
4. REPRODUCCIÓN DE LA ETIQUETA: ETIQUETA DE PRECAUCIÓN, COLOCADA EN EL INTERIOR DE LA UNIDAD.

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated.
AVOID DIRECT EXPOSURE TO BEAM. (e)

ADVARSEL: Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejle. Undgå direkte eksponering til stråling. (f)

WARNING: Synlig Och osynlig laserstråling när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)

VARO: Avattaessa ja Suojalukitus ohitettunatai viallisenä olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

Thank you for purchasing this JVC product. Please read these instructions carefully before starting operation to be sure to obtain optimum performance and a longer service life from the unit.

Table of Contents


Power Supply Preparations	2
About MP3 / WMA files	4
Basic Play	5
Other Play Methods	9
Tuner Operation (XL-PR70B only)	13
Concerning Compact Discs	16
Cautions	17
Troubleshooting	19
Specifications	20
Maintenance	20

Supplied Accessories

Stereo headphone 1 pc.

Power Supply Preparations

 Using dry-cell batteries (not supplied)

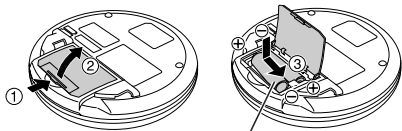


Two "R6" (LR6) alkaline batteries.

Caution:

Do not forcibly open the battery lid too wide.

 Battery indicator

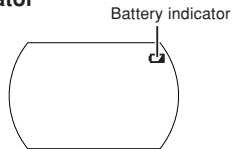


This indicator appears when the batteries are almost out of power. Power will be cut off a short while later.

Note:

Turning off the Anti-Shock Protection EX will save the battery power more or less. For details, see "Anti-shock Protection EX" on page 12. (Available for an Audio CD only)

 Using the AC adaptor (not supplied)

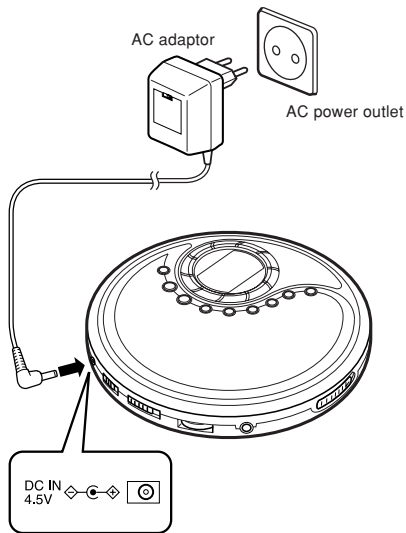

Notes:

- Even if the unit is turned off, small power is consumed as long as the AC adaptor is connected to the AC power outlet.
- When you want to purchase the AC adaptor, see page 18.

 
Preventing Accidental Operation (Hold mode)

This function causes the unit to ignore, accidental button presses.

Hold mode prevents the following:

- Powering on the unit accidentally (which can cause the batteries to go dead).
- Play being cut off unexpectedly.

To use the Hold mode



- To prevent the unit from powering on accidentally, set the HOLD switch to the ON position while the unit is turned off.
- To prevent the unit from unexpected operation during play, set the HOLD switch to the ON position after you start playing the disc.
- When the unit is in Hold mode, "HOLD" and "⏻" light as follows.

Power on : "⏻" stays lit.

Power off : "HOLD" and "⏻" light up for a few seconds when ▶/⏸ is pressed.

Note:

Before turning on the unit, be sure that HOLD is OFF. Otherwise, you cannot turn on the unit.


About MP3 / WMA files

MP3 / WMA File Compatibility

- This player can read MP3/WMA files that are recorded in the format that is compliant with ISO 9660.
- The player can read or play an MP3 file with the extension code —“.mp3” and a WMA file with the extension code —“.wma”.
- Track title can be displayed.
- ID3* tags can be shown on the display.
- * An MP3/WMA file can contain file information called “ID3 Tag” where its album name, artist, title, etc. are recorded.

Playing order of MP3 / WMA files


The illustration below shows the normal playing order of the MP3 / WMA files. You will see that the MP3 / WMA files are played back in the order from the higher hierarchy to the lower one.

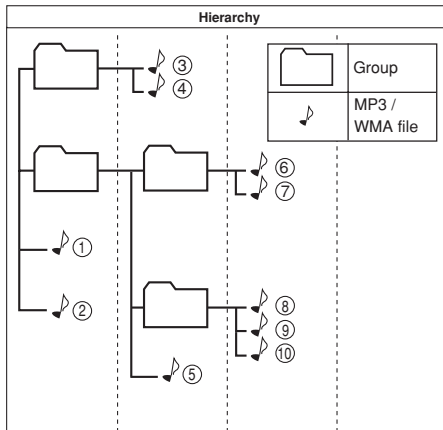 


Basic Play

WMA can be played back only with XL-PR70B.

 
1

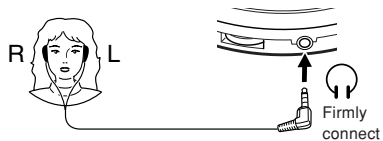

2

 

3

 

4



 
(To be continued on the next page)

5




For Audio CD

Track number in play

Elapsed playing time of
each track

 For MP3 / WMA

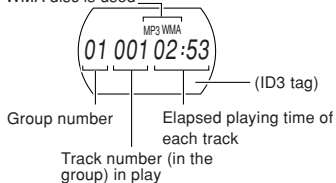Lights when a
MP3 / WMA disc is used

- Play stops automatically when all the track have been played.
- (XL-PR70B) Press this button again when the FM (Tuner) reception mode becomes active.

6



For your reference:**“DISC”**

This indication appears if ►/|| is pressed when no disc is loaded or if the disc is not properly seated.

“READING”


Preparation period before playing the track.
Appears for several seconds after pressing ►/|| to play.

“OPEN”

This indication appears when the lid is open.

Removing discs

 Turn off the unit and, after the disc has stopped rotating, remove the disc as shown below:

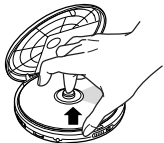**Auto power off**

If the unit is left in stop mode for 30 seconds, the unit turns itself off automatically to prevent the batteries from running down.

Disc rotation noise

The portable CD player uses a power-saving operation method so that disc rotation noise will intermittently be emitted. But, it is not a failure.

To pause

During play,

For Audio CD



007:00:18-

For MP3 / WMA



01 004:00:07-

Press again to restart play.

To stop

During play,

For Audio CD

Total number of tracks



010 44:48

Total playing time

For MP3 / WMA

Total number of groups



10 035

Total number of tracks

To turn off the unit

 
While stopped,



No indication

Fast forward/reverse**Skip function**

During play,


**Search function**

Keep depressed during play.

- To skip back to the previous track, quickly press **◀◀** twice.
- During Program play, the button is used to fast forward or back through the programmed sequence of tracks.
- During Random play, the skip button cannot be used to skip back to tracks that were played previously in the random sequence.

Group skip (MP3 / WMA only)

 During play or while stopped,

**(XL-PR70B only) To switch over the mode from FM to CD**

In FM mode,

 


Other Play Methods

Intro play

You can successively play the first 10 seconds of every track.

1 While stopped,

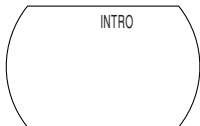

2



To cancel

 
Press MODE repeatedly until "INTRO" goes out.

Notes:

- You can also select Intro play during playback.
In this case, Intro play will start from the next track after the current track has finished.
- You can also select Intro play during Program play mode.

Random play

During playback,

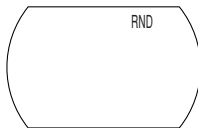

After playing all tracks, the unit stops.

To cancel

Press MODE until "RND" goes out, or press ■ to stop the disc.

Notes:

- You can also select Random play in stop mode.
- During Program play, you can not select Random play.

 
Program play

You can program up to 64 tracks in any desired order including the same tracks.


For Audio CD, go to step 3.

Though the display differs a little, operation is the same.


1 While stopped, (MP3 / WMA only)

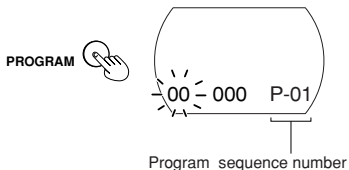

 
2 (MP3 / WMA only) Select the desired group number. (e.g.02)

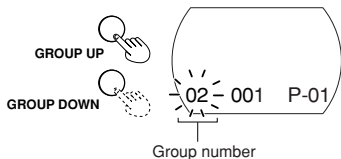


3

 

4 Select the desired track.

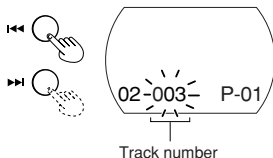 

5

 

The track is registered.

6 For MP3 / WMA, repeat steps 2-5 to select other tracks. For Audio CD, repeat steps 4 and 5.

When you program exceeding 64 tracks, the program sequence number returns to "01" and will overwrite the previous setting.

7



• To confirm the program

While stopped, press PROGRAM repeatedly. At this time, you can add and change the program, if required.

 
• To delete the entire program

- While stopped, press STOP.
- Turn off the unit.
- (XL-PR70B) Change the source to FM.

Repeat play

You can repeat one track or all tracks.

During playback,

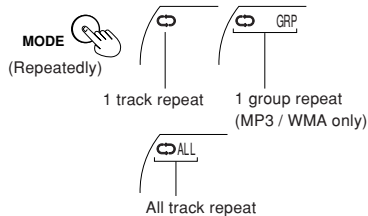

To cancel

 
Press MODE repeatedly until the repeat indicator goes out.

Notes:

- You can also select Repeat play during Program play.
- You can also select Repeat play while stopped.

Hyper-Bass Sound effect

You can enjoy powerful bass sound.



Anti-Shock Protection EX

This function achieves excellent performance against sound interruption caused by vibrations. You will be able to enjoy listening to music during (not vigorous) jogging. By utilizing the high-performance servo circuit, audio data will be stored in the memory ahead of time.

For Audio CD: Up to 40 seconds worth (Anti-Shock Protection on/off selectable)

For MP3/WMA: Up to 100 seconds worth at 128 kbps (Anti-Shock Protection is fixed to on.)

Normally, this function is in effect.



As the audio data is gradually stored, the indicator changes as follows:



[Fully stored]

To cancel (Audio CD only)



The "ANTI SHOCK" indicator goes out.

To activate again (Audio CD only)

Press the A.S.P button.

Notes:

 
- During this operation, the disc rotates at a higher rate than usual in order to collect extra audio data. This may cause the batteries to run out faster and could result in a slight increase in disc rotation noise.
- This function can be switched ON and OFF during playback. However, this may cause a slight interruption in the sound because the disc's rotational speed changes.

Tuner Operation (XL-PR70B only)

You can listen to FM stations by tuning in manually, automatically, or using preset memory. For best reception, extend the headphone cord (antenna).

Manual/Auto tuning

1

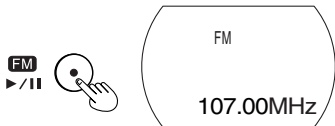


When the power is turned on and you want to change the mode from CD to FM, keep the button depressed.

When the power is turned off, press the button.

If the CD mode becomes active, keep the button depressed to switch over the mode to FM.

 2 Select a station.



Manual tuning

Press ►► or ◀◀ repeatedly to select a station you want.

Auto tuning

Hold down ►► or ◀◀ for a while and then release it. The frequency automatically changes up or down to find the next station.

 
Presetting stations

You can preset up to 20 stations (frequencies).


1 Select the station you want to preset.

Use Manual or Auto tuning mentioned earlier.

2

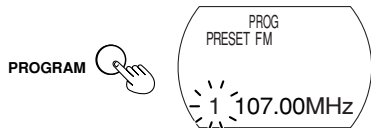

 
3 Select the preset number (01~20) you want.

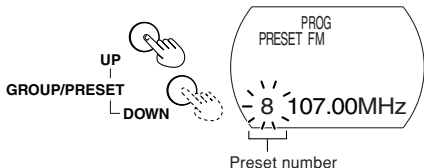

4 Press PROGRAM.

Preset tuning

 
Select the preset number you want in the FM reception mode.

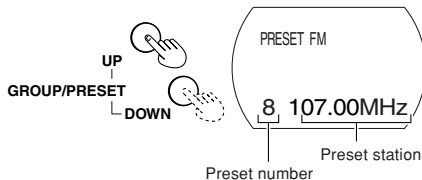

Changing the FM reception mode

When a broadcast is in stereo, "ST." lights up and you can hear stereo effects. However, if an FM stereo broadcast is hard to receive or noisy, you can select monaural (MONO) mode. Reception improves, but you lose the stereo effect.

 To select the monaural mode

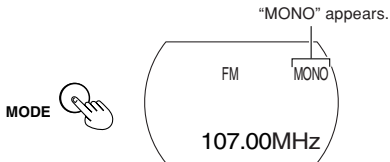

To cancel the monaural mode

Press MODE once again. "MONO" will go out. The monaural mode is cancelled also by changing the frequency.

Turning off the unit



Concerning Compact Discs

 


Only compact discs bearing this mark can be used with this unit. However, continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.

CD-R and CD-RW discs recorded with the audio CD format can be played back, though some may not be played back because of the disc characteristics or recording condition.

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.


How to hold a disc



If the disk surface is dirty

Wipe it with a damp cloth and then wipe dry.
Wipe from the center toward the outer edge.

 Play surface (shiny surface)



If moisture has formed on a disc

When moisture has formed because the disc was brought suddenly into a warm room from a cold environment, wipe off the moisture using a soft dry cloth.

When storing discs

Avoid locations which are

- Exposed to direct sunlight.
- Susceptible to high levels of humidity or dust.
- Directly exposed to heat from a heating appliance.
- On top of a car dashboard or near the rear window.

Handling precautions

- On the label side (the side with writing)
Do not write anything using a pencil, ball-point pen, etc. Do not use adhesive paper or labels.
- On the disc (shiny) side
Handle this side carefully to keep it free from fingerprints or scratches. Do not use record cleaners, solvents, etc.
- Do not attach labels or stickers to CDs.
Do not use CDs with exposed adhesive from tape or left over peeled off stickers.
- Do not use scratch-proof protectors or covers other than those specified for use with this unit.

Cautions

Listening Precautions

- Do not play your headphones at a high volume. Hearing experts advise against continuous extended play.
- If you experience a ringing in your ears, reduce volume or discontinue use.
- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations.
- Even if your headphones is an open-air type designed to let you hear outside sounds, don't turn up the volume so high that you can't hear what's around you.

Rechargeable batteries

- Rechargeable batteries (not supplied) can be used.
- To use the rechargeable batteries, follow the instruction manual attached to the rechargeable batteries and charger (not supplied).

Dry cell batteries

To prevent damage to the batteries and electrolyte leakage, heed the following points.

- Align the \oplus and \ominus polarities properly when inserting the batteries.
- Do not mix different types or makers of batteries or old and new batteries.
- Remove the batteries if you do not plan to use the unit for a long period of time.
- Do not throw batteries into a fire, and do not short-circuit, disassemble or subject them to excessive heat.
- Do not attempt to recharge dry cell batteries.

Carrying dry cell batteries around

When putting dry cell batteries in a pocket or bag, ensure that no other metal objects such as a necklace are placed together with them. Contact with metal may cause short-circuiting which, in turn, may cause a fire.

AC adaptor

- Handle the AC adaptor carefully. Improper handling is dangerous.
 - Do not touch it with wet hands.
 - Do not place heavy objects on top of it.
 - Do not forcibly bend it.
- Be sure to connect only the specified AC adaptor with the unit.
- Disconnect the AC adaptor from the power outlet if the unit is not going to be used for a long time.

Unit

No altering or remodeling

This can cause malfunctioning.

No dropping or strong impacts

This may damage the unit.

Locations to be avoided

Avoid using the unit in the following locations since they can cause malfunctioning.

1. Bathrooms and other moisture-prone places.
2. Warehouses and other dusty places
3. Very hot places near heating appliances, etc.

Do not leave the unit exposed to direct sunlight for long periods of time

This may deform or discolor the cabinet and may also cause malfunctioning.

When purchasing AC adaptor

Be absolutely sure to purchase the AC adaptor designed especially for this unit.

AC adaptor: AA-R4514

For details, check with your dealer.

Troubleshooting

Problem	Check this
Poor tuner reception	<ul style="list-style-type: none"> • Extend the headphone cord (antenna) to improve reception.
Does not turn on.	<ul style="list-style-type: none"> • Is the AC adaptor securely connected? • Is the HOLD switch set to OFF position?
Cannot close the lid.	Is the disc properly secured in place?
Cannot play discs.	<ul style="list-style-type: none"> • Is the disc properly secured in place? • Is there moisture condensation on the lens? (Wait for about an hour and then try again.) • Are MP3/WMA files recorded on the disc? • Do MP3/WMA files have the extension code—.mp3 or .wma? • Are MP3/WMA files recorded in the format compliant with ISO 9660?
Cannot hear music—too noisy.	<ul style="list-style-type: none"> • Is the headphone plug inserted all the way? • Is the plug dirty? (Wipe away dirt on the plug.) • Are you playing a compatible disc? While playing a non-MP3/WMA file, you will hear a noise. (Note it may not be an MP3/WMA file although it has the extension code—.mp3. or .wma)
TV picture is distorted. Other radio reception is noisy.	Are you using the unit too near a TV or tuner? (If the TV or tuner is connected to a simple indoor antenna, connect it to an outdoor antenna.)
“DISC” or “Er” is displayed when a disc is in the player.	<ul style="list-style-type: none"> • Is the disc damaged? • Is the disc playable on this player? • Has the disc been inserted upside down?

If the remedies indicated in the chart do not solve the problem, refer to the directory of Authorized Service Centers (enclosed with this unit) to locate a convenient service center, or consult your dealer for instructions.

Specifications

Portable CD player

Type	: Compact disc player
Signal detection system	: Non-contact optical pickup (semiconductor laser)
Pickup system	: 3 beam laser
Number of channels	: 2 channels (stereo)
Frequency response	: 20 Hz to 20 kHz
Wow & flutter	: Unmeasurable
Output	: Headphones (3.5 mm dia. stereo × 1) 9 mW/ch at 10 % THD/16 Ω matching impedance (16 Ω to 1 kΩ)
FM tuning range (XL-PR70B only)	: 87.50 MHz - 108.00 MHz
Duration of battery (with Anti-Shock Protection EX OFF)	: Approx. 20 hours when using two alkaline batteries (LR6)
Power requirements	: DC 3 V ("LR6" size battery × 2) DC 2.4V (rechargeable battery × 2) DC IN 4.5 V
Dimensions (W×H×D)	: 138 mm × 26 mm × 138 mm (Excluding buttons and controls)
Mass	: XL-PM6S 240 g XL-PR70B 250 g (without batteries)

AC adaptor (not supplied)

Input power source	: AC 230 V, 50 Hz
Output voltage	: DC 4.5 V, 600 mA

- Design and specifications are subject to change without notice.
- Microsoft and Windows Media are either registered trademarks of Microsoft Corporation in the United States and / or other countries.

 
Maintenance

Unit

Wipe the unit with a soft cloth. Remove stubborn dirt using a cloth which has been dipped in water or soapy water and wrung out, and then wipe dry.

- If you intend to use a chemically treated cleaning cloth, read its directions first.
- Do not use alcohol or paint thinners.

Lens

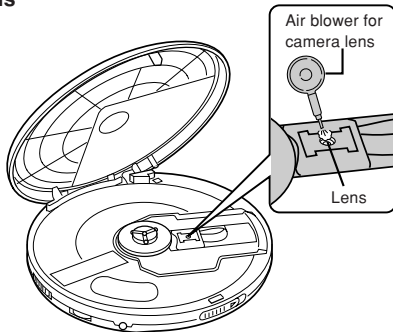

JVC



©2005 Victor Company of Japan, Limited

0505SKMCREORI