

# JVC

ENGLISH  
DEUTSCH  
FRANÇAIS  
NEDERLANDS  
CASTELLANO  
ITALIANO  
PORTUGUÊS

## LT-37S60BU

## LT-32S60BU

## LT-26S60BU

## LT-32S60SU

## LT-26S60SU

WIDE LCD PANEL TV

16:9 LCD TV

TELEVISEUR A ECRAN LCD PANORAMIQUE

BREEDBEELD LCD TV

TELEVISOR CON PANEL LCD PANORÁMICO

TV LCD WIDESCREEN

TELEVISOR COM ECRÃ PANORÂMICO DE

CRISTAL LÍQUIDO

INSTRUCTIONS

BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS

GEbruIKSAANWIJZING

MANUAL DE INSTRUCCIONES

ISTRUZIONI

INSTRUÇÕES



**HD**  
ready

DynaPiX  
Powered by D.L.S.T.

InteriArt

**HDMI**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**T-V LINK**



LCT1848-001B-U

# Expanding the world of





# beautiful images

## Contents

### Enjoy rich multi-media with JVC



VHF/UHF

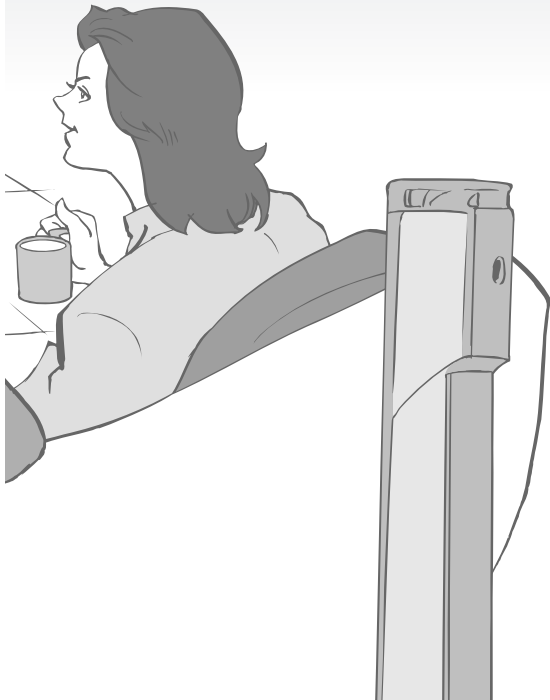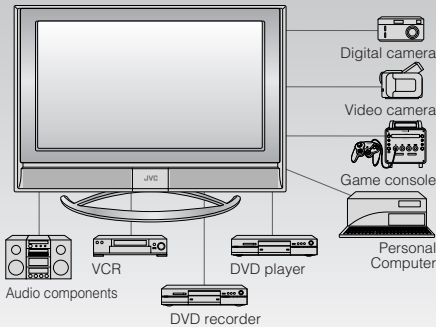

### First things first!

- Warning ..... 3

### Getting started

- Names of all the parts ..... 5
- Basic connections ..... 7
- Initial settings ..... 9
- Editing channels ..... 11
  - Registering channels
- Connecting external devices ..... 13

### Let's try it out

- Enjoying your new TV! ..... 15
  - TV / Teletext / Video / etc.
- Watching TV ..... 17
- Viewing teletext ..... 19
- Watching videos / DVDs ..... 21

### Try the advanced features

- Useful functions ..... 23
  - Take a snapshot
  - View and search in multi-picture mode
  - Sleep timer / Child lock

### Just the way you like it

- Customising your TV ..... 25
- Advanced picture adjustment ..... 27
  - Reduce noise / Watch a more natural picture
  - Set the aspect ratio, etc.

### When you have trouble


- Troubleshooting ..... 29
- Technical information ..... 32
- CH/CC List ..... 33
- Specifications ..... 34

# Warning

Please follow all the guidelines below

## Never cut or damage the power cord!

- If the AC plug is not the right shape, or the power cord is not long enough, use an appropriate plug adapter or extension cable. (Consult your retailer.)

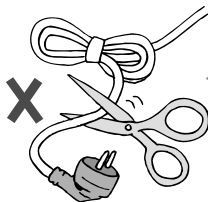

## Never try to repair the TV yourself!

→ If the problem cannot be solved in "Is it broken?" (P. 29), unplug the power cord and contact your retailer.

## Never place anything on the TV!

- Placing liquids, naked flames, cloths, paper, etc. on the TV may cause a fire.




## Follow this manual regarding setup!

- Connect only to a 110-240V, 50/60Hz AC outlet.

## Unplug the power cord when going out!

- The power buttons on the remote control and the TV unit cannot completely turn off the TV. (Make appropriate arrangements for bedridden people.)

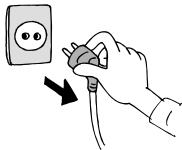

## Never insert objects into the cabinet openings!

- It may cause a fatal electric shock. Take care when children are near.



■ For more details on installation, usage and safety → Consult your retailer

## Never expose to rain or moisture!

- To prevent fire or electric shock, never allow liquids to enter the unit.



## Do not allow the TV to fall!

- Do not rest your elbows on, or allow children to hang from the TV. There is a risk that the TV will fall and cause injuries.

## If the TV is damaged or behaving strangely, stop using it at once!

→ Unplug the power cord and contact your retailer.

## Hold the TV so as not to scratch the screen!

- Do not touch the screen when carrying the TV.

## Do not carry the TV on your own!

- In order to prevent accidents, ensure that the TV is carried by two or more people.



## When attaching the TV to the wall, use the optional JVC wall mounting unit!

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.

## Never dismantle the rear panel!

- It may cause an electric shock.

## Never obstruct the ventilation holes!

- It may cause overheating or a fire.


## Handle LCD panel with care!

- Use a soft, dry cloth when cleaning.

## Never listen to headphones at high volume!


- It may damage your hearing.

# Names of all the parts

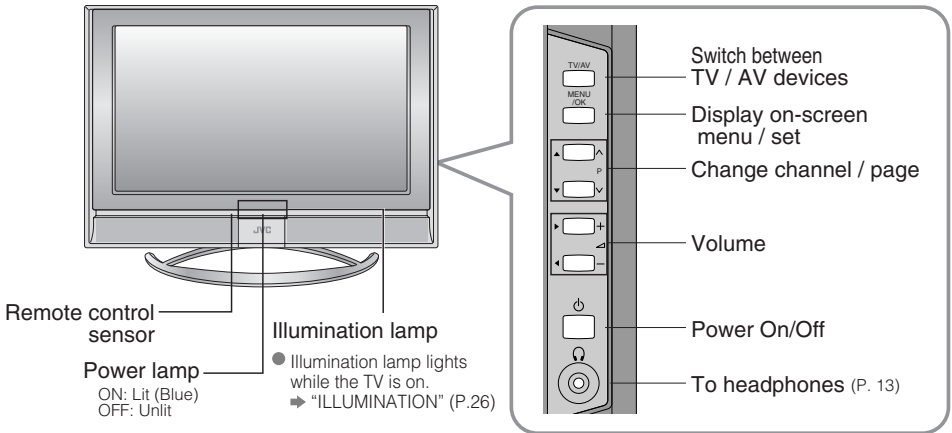


## Remove the terminal covers

LT-32S60BU/SU, LT-26S60BU/SU

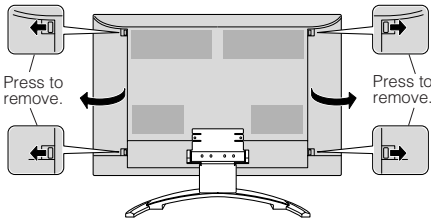


LT-37S60BU

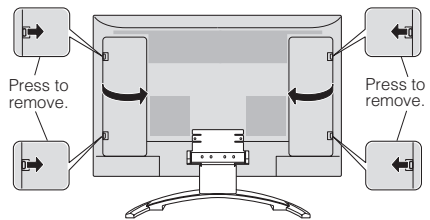


- If the cover cannot be closed due to the cables being in the way  
 ➔ Do not force the cover to close (leave it open).
- Connecting terminals on the back of the TV ➔ Connecting External devices (P. 13)

## Change the direction of TV

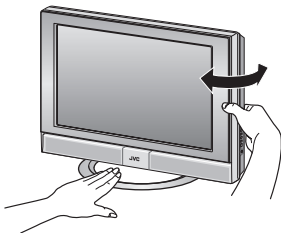


## Check accessories

 

Remote control  
(RM-C1811H)




AA/R6 Batteries  
(For confirming  
the TV works)

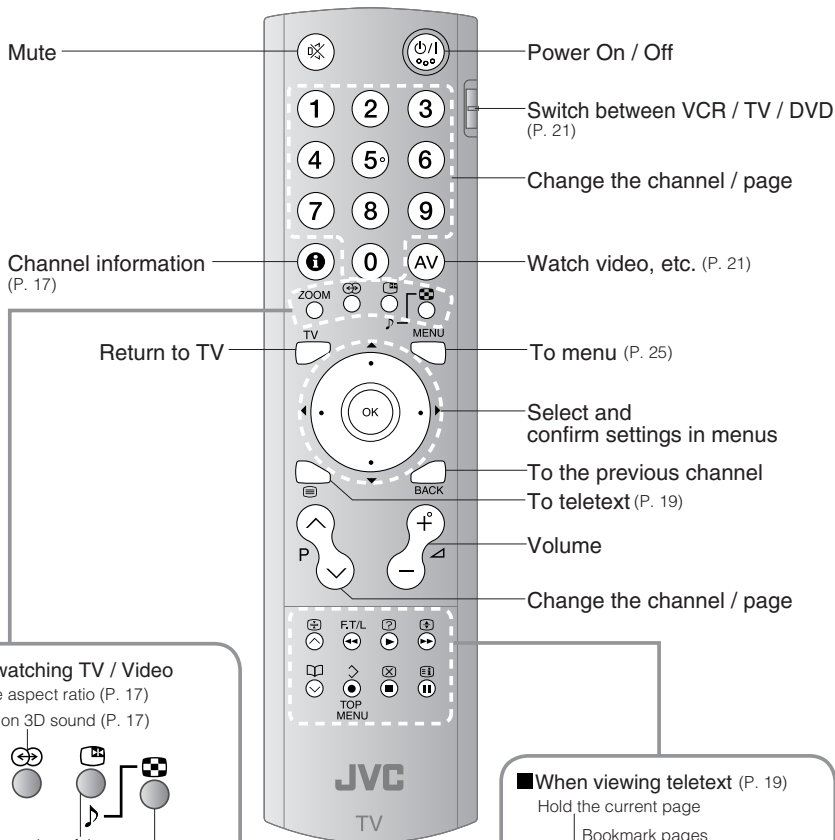

■ When watching TV / Video

Change the aspect ratio (P. 17)

 Turn on 3D sound (P. 17)




Take a snapshot of the screen (P. 23)

View in multi-picture mode (P. 23)

■ When viewing teletext (P. 19)

■ Insert the batteries

Use two AA/R6 dry cell batteries. Insert the batteries from the ⊖ end, making sure the ⊕ and ⊖ polarities are correct.

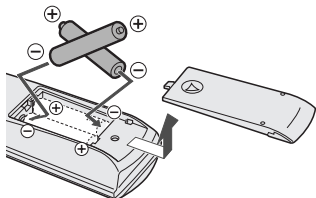


■ When viewing teletext (P. 19)

Hold the current page

Bookmark pages

Reveal hidden pages

Enlarge the text

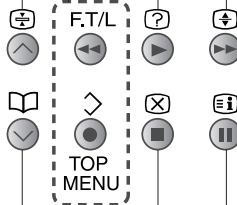

Switch briefly between teletext and TV

To index page


■ When watching TV (P. 17)

■ When operating a JVC VCR or DVD (P. 21)

# Basic connections

Please read the user manuals of each device carefully before setup.  
It is necessary to connect an aerial to watch TV.

■ **Connect with other devices** → "Connecting external devices" (P. 13)

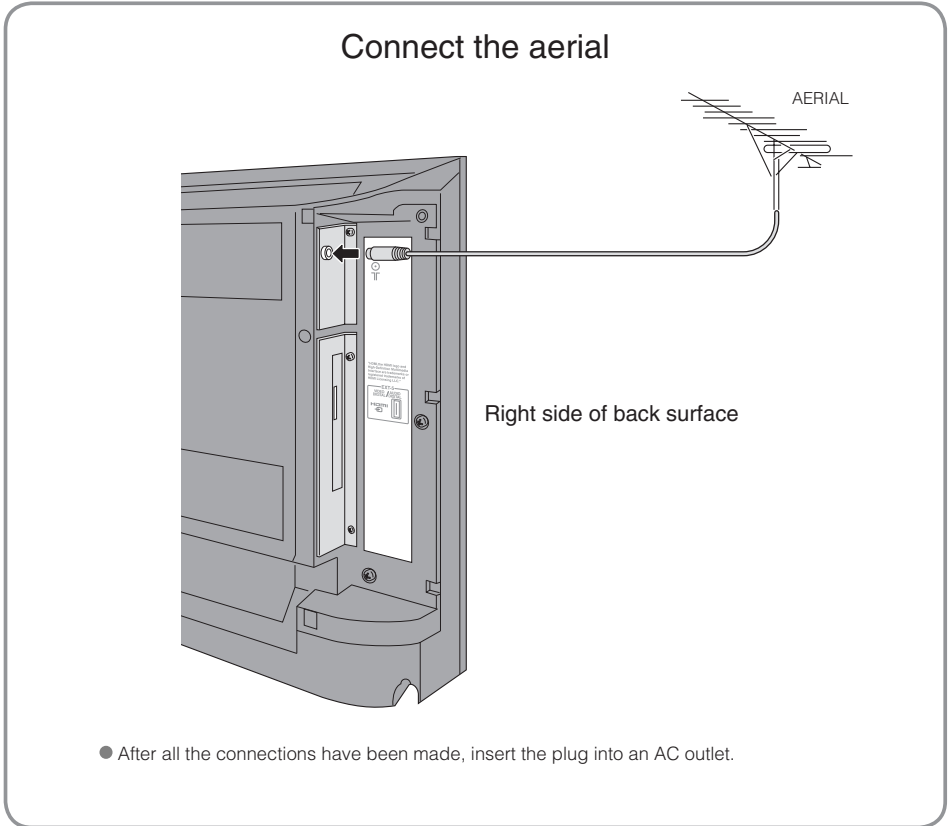

## Care when setting

### ■ Power requirements


- Connect the power cord only to a 110-240V, 50/60Hz AC outlet.

### ■ When attaching the TV to the wall, use the optional JVC wall mounting unit

- Consult a qualified technician.
- See the included manual on mounting procedures.
- JVC assumes no responsibility for damage due to improper mounting.


### ■ Installation requirements

- To avoid overheating, ensure the unit has ample room.

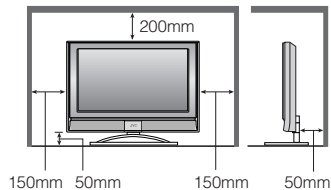




## Connect a VCR / DVD recorder

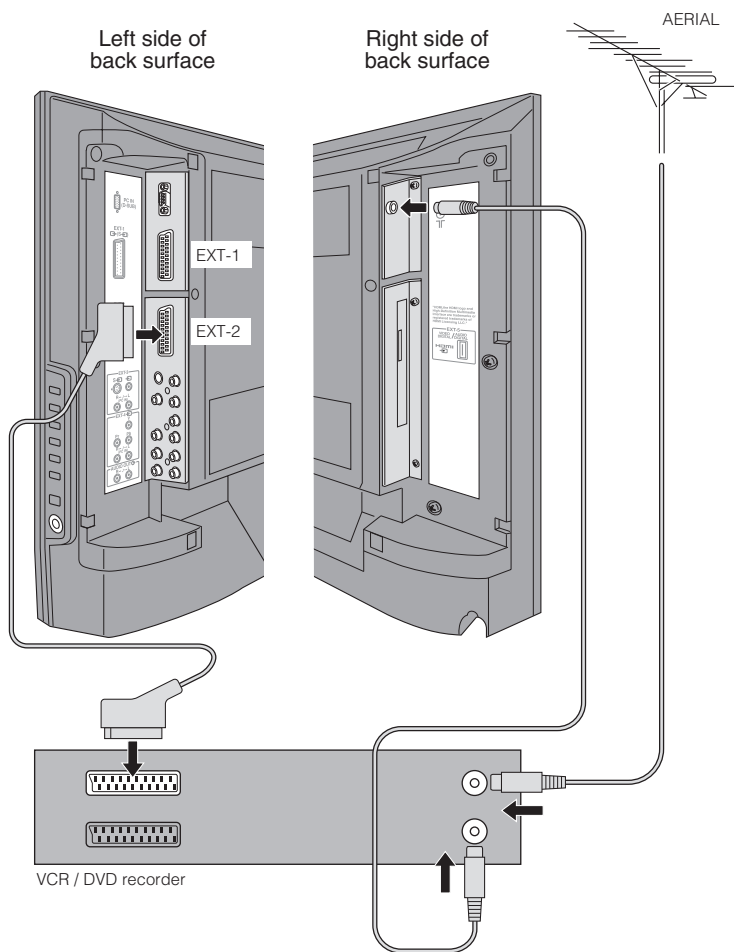



- After all the connections have been made, insert the plug into an AC outlet.
- Connect T-V LINK compatible recording device to EXT-2.
- T-V LINK ➔ "What is T-V LINK?" (P. 9)

# Initial settings

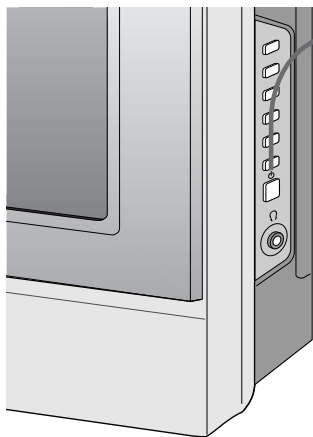Set the menu language, installation location and automatically register the TV channels. These channels can be edited later in "Editing channels" (P. 11). (Channel data on the TV can be sent to a connected recording device that is compatible with T-V LINK.)



■ To the previous screen →  BACK

■ Exit →  TV

■ If the "JVC" logo does not appear or if you wish to make changes later  
→ "LANGUAGE" and "AUTO PROGRAM" (P. 26)


**What is "T-V LINK"?**

Connecting the TV to a T-V LINK compatible device allows :

- Channels on the TV to be instantly registered on the device.
- The "DIRECT REC" function to be used.  
→ "Technical information" (P. 32)

■ T-V LINK variations

"T-V LINK" (JVC) "Q-LINK" (Panasonic)  
"Megalogic" (Grundig) "Data Logic" (Metz)  
"SMARTLINK" (Sony) "Easy Link" (Philips)

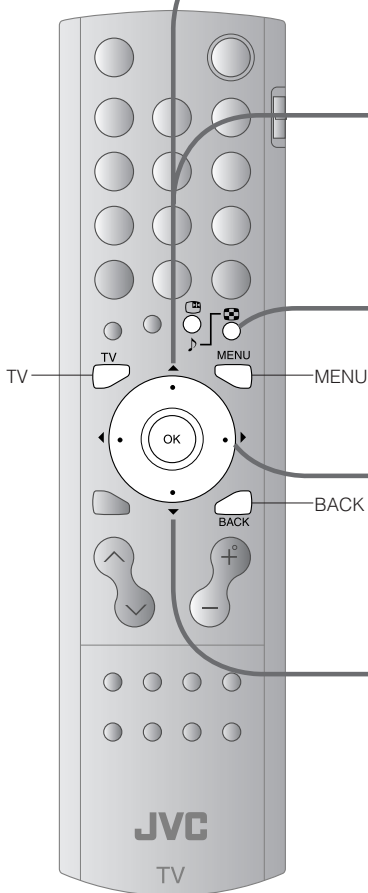

# 1 Begin




- Shown only when powering on for the first time.
- The power on the remote control can also be used.

# 2 Select a language




# 3 Select the country of installation

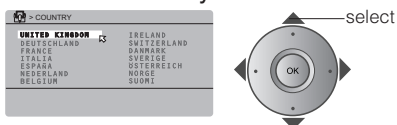

- For the next page ➡ ● (Yellow)

# 4 Automatically register channels

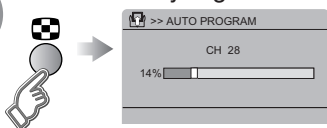

- If "ACI START" appears, select and start settings. (This will set up cable television channels.)
- ➡ "What is ACI (Automatic Channel Installation)?" (P. 32)

# 5 Check what was registered

PR	ID	CH	CHIC
01	BBC1	CH 21	▶
02		CH 22	
03		CH 23	
04		CH 24	
05		CH 25	
06		CC 02	
07		CC 03	
08		CC 04	
09		CC 05	

## ■ Edit channels

- ➡ 4 in "Editing channels" (P. 11)

 
## ■ Confirm



# 6 Finish



## ■ When using T-V LINK



- If "FEATURE NOT AVAILABLE" appears :
  - ➡ Is the T-V LINK compatible device connected to EXT-2?
  - ➡ Is the device turned on?

## ■ When not using T-V LINK



# Editing channels

Edit the channels registered with "AUTO PROGRAM" in "Initial settings" (P. 9).

When coming from "Initial settings" (P. 9), skip to ④.




 
①

Display the menu bar





②

Select "SET UP"

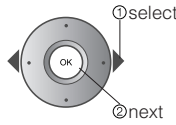



③

Select "EDIT / MANUAL"

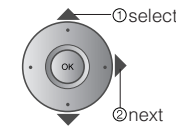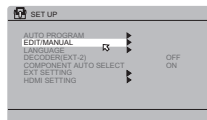

④

 Select a row

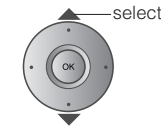

⑤

Edit

 
⑥

Confirm settings



⑦


Finish



■ When using T-V LINK



 ■ When not using T-V LINK



Move a channel's position

MOVE

Edit a channel name

ID

Insert a channel

INSERT

Delete a channel

DELETE

Register a new channel

MANUAL

■ To the previous screen

 


■ Exit




- If "FEATURE NOT AVAILABLE" appears :
  - ➔ Is the T-V LINK compatible device connected to EXT-2?
  - ➔ Is the device turned on?
- T-V LINK ➔ (P. 9)

①Begin



PR	ID	CH	CC
01	BBC1	CH 21	
02		CH 22	
03		CH 24	
04		CH 25	
05		CC 02	
06		CC 03	
07		CC 04	
08		CC 05	
09			

 select



③Finish

PR	ID	CH	CC
01	BBC1	CH 21	
02		CH 22	
03		CH 24	
04		CH 25	
05		CC 02	
06		CC 03	
07		CC 04	
08		CC 05	
09			

move in




①Begin




PR	ID	CH	CC
01	BBC1	CH 21	
02		CH 22	
03		CH 23	
04		CH 24	
05		CH 25	
06		CC 02	
07		CC 03	
08		CC 04	
09		CC 05	

②Enter a channel name

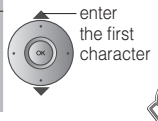

■When selecting a preset name from the ID LIST

PR	ID	CH	CC	ID LIST
01	BBC1	CH 21		MLV1
02		CH 22		MLV2
03		CH 23		MLV3
04		CH 24		MLV4
05		CH 25		MLV5
06		CC 02		MLV6
07		CC 03		MLV7
08		CC 04		MLV8
09		CC 05		MLV9

 

■When manually naming a channel

PR	ID	CH	CC
01	BBC1	CH 21	
02		CH 22	
03		CH 23	
04		CH 24	
05		CH 25	
06		CC 02	
07	JVC	CC 03	
08		CC 04	
09		CC 05	




①Begin



②Select a CH / CC

PR	ID	CH	CC
01	BBC1	CH 21	
02		CH 22	
03		CH 23	
04		CH 24	
05		CH 25	
06		CC 02	
07		CC 03	
08		CC 04	
09		CC 05	

 ● CH/CC List → (P. 33)




③Enter a number

PR	ID	CH	CC
01	BBC1	CH 21	
02		CH 22	
03		CH 23	
04		CH 24	
05		CH 25	
06		CC 02	
07		CC 12	
08		CC 03	
09		CC 04	



 ④Set



● Receives the broadcast signal.

①Delete



PR	ID	CH	CC
01		CH 22	
02		CH 24	
03		CH 25	
04		CC 02	
05		CC 03	
06		CC 04	
07		CC 05	

①Begin




②Beginning channel search

PR	ID	CH	CC
10		CH 08	
11		CH 02 (B/G)	
12			
13			
14			
15			
16			
17			

● If necessary, press to change the broadcasting system.  
 ➔ "Receivable broadcast systems" (P.32)

 From high frequencies



From low frequencies




PR	ID	CH	CC
10		CH 08	
11		CH 02 (B/G)	
12			
13			
14			
15			
16			
17			

● Auto-search begins, and the nearest frequency is imported.  
 ● Repeat the previous steps until the desired channel is displayed

■Adjust

PR	ID	CH	CC
10		CH 08	
11		CH 08 (I)	
12			
13			
14			
15			
16			
17			

 

select a system


③Set



PR	ID	CH	CC
10		CH 08	
11		CH 08	
12			
13			
14			
15			
16			
17			


# Connecting external devices

You can connect many different devices to the rear panel of the TV.  
Please read the user manuals of each device before setting up.  
(Connecting cables are not supplied with this TV.)

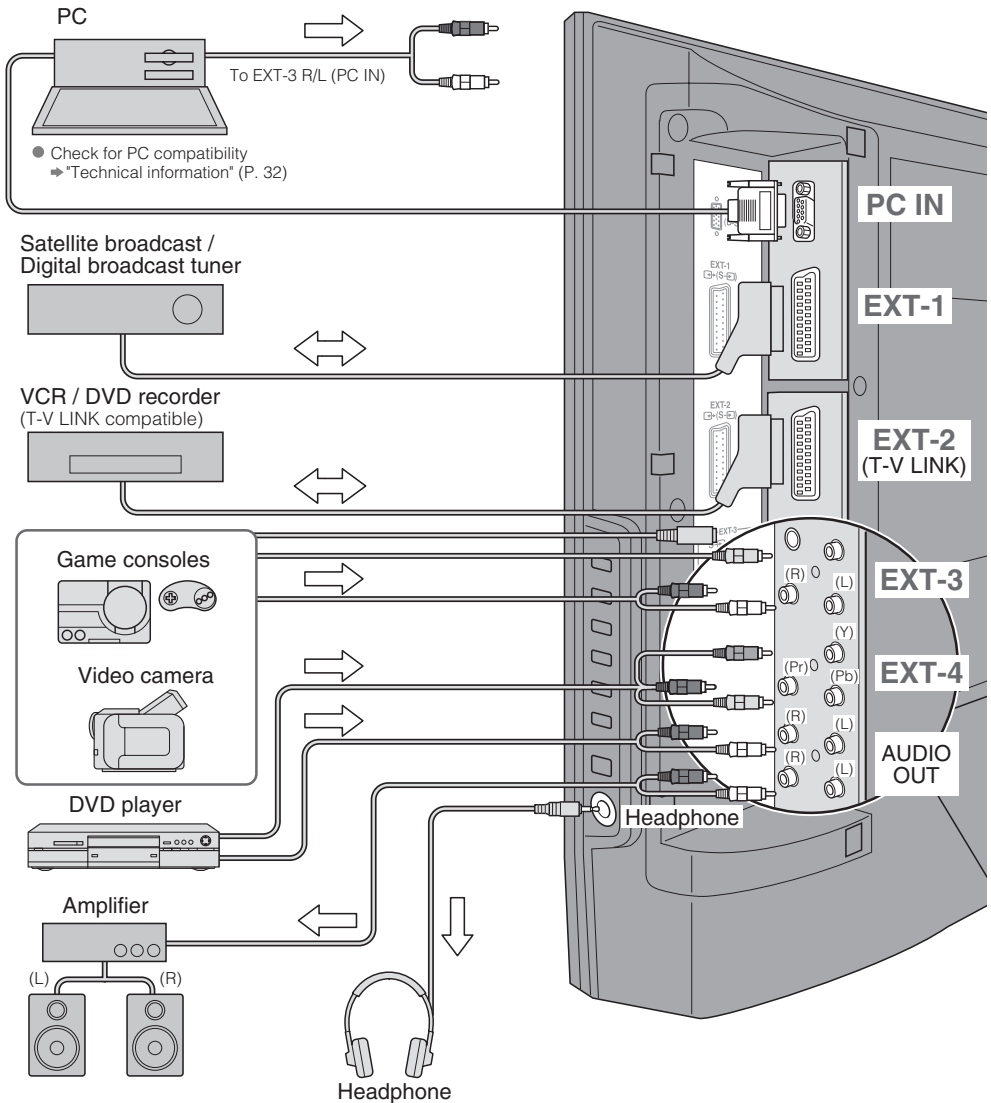

# VCR / DVD / other devices

⇒ : signal direction

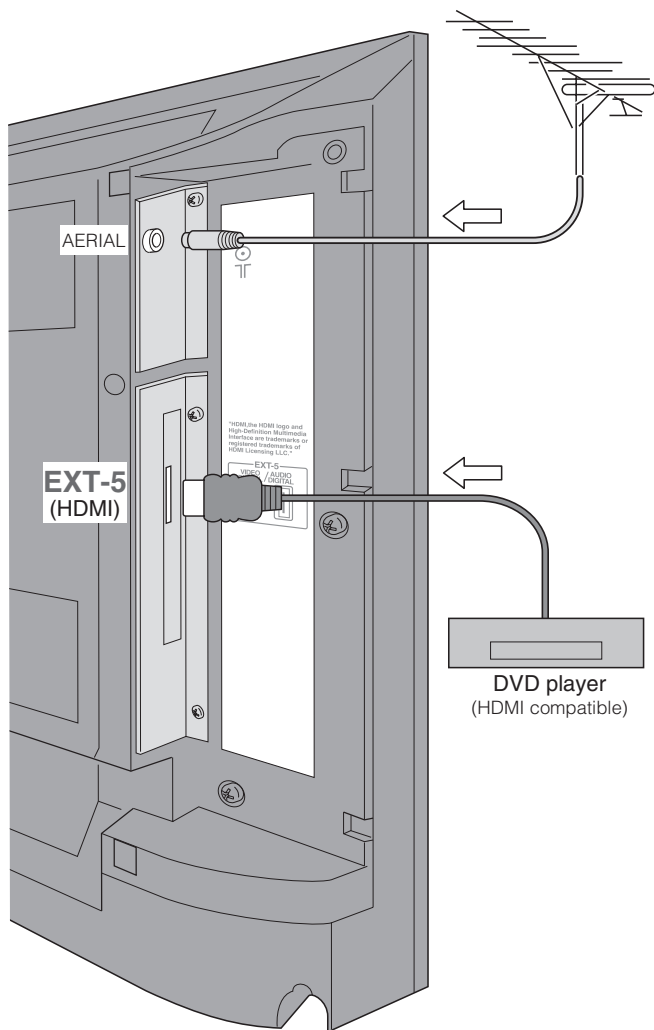

## ■ Connect DVI devices

⇒ (P. 32)

## ■ T-V LINK ⇒ (P. 9)

### EXT-1 Watching videos

Output ↑	Input ↓
· Composite signal	· Composite signal / RGB / S-VIDEO
· Sound L / R	· Sound L / R

- Use S-VIDEO ⇒ "S-IN" (P. 22)

### EXT-2 Dubbing videos Using T-V LINK

Output ↑	Input ↓
· Composite signal	· Composite signal / RGB / S-VIDEO
· Sound L / R	· Sound L / R
· T-V LINK	

- Use S-VIDEO ⇒ "S-IN" (P. 22)
- Select dubbing sources ⇒ "DUBBING" (P. 22)
- Connect a decoder ⇒ "DECODER (EXT-2)\*" (P. 26)

### EXT-3 Watching videos

Output ↑	Input ↓
/	
	· Composite signal / S-VIDEO
	· Sound L / R

### EXT-4 Watching DVDs

Output ↓	Input ↑
/	
	· Component signal (P. 34)
	· Sound L / R

- COMPONENT AUTO SELECT ⇒ (P. 26)

### EXT-5 Connecting HDMI devices

Output ↑	Input ↓
/	
	· HDMI signal (P. 34)


- HDMI SETTING ⇒ (P. 26)

### AUDIO OUT

Listening to the TV on external speakers

Output ↓
· Sound L / R




# Enjoying your new TV!

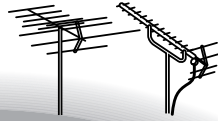

## Watching TV

PAGE  
17

- View channel information
- Change the aspect ratio
- Enjoy 3D sound
- Register your favourite channels

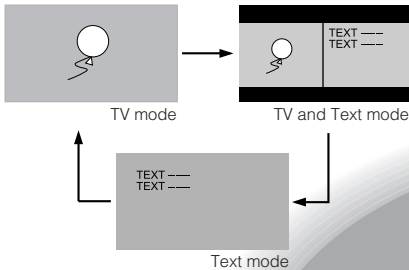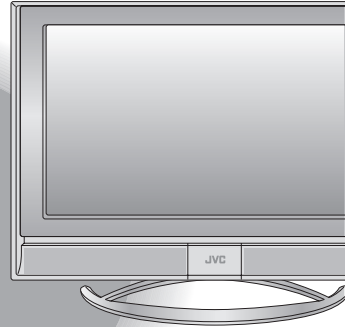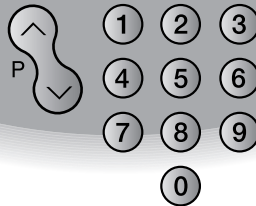


## Viewing teletext

PAGE  
19

- Enlarge the text
- To the index page
- Hold the current page
- Switch briefly between teletext and TV
- Bookmark your favourite pages





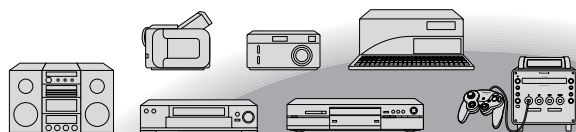

PAGE  
**21** Watching  
videos / DVDs


AV

- Watch high quality video (S-VIDEO)
- Name connected devices
- Dub videos

MENU


PAGE  
**25** Personal preferences

- Adjust the picture
- Adjust the sound

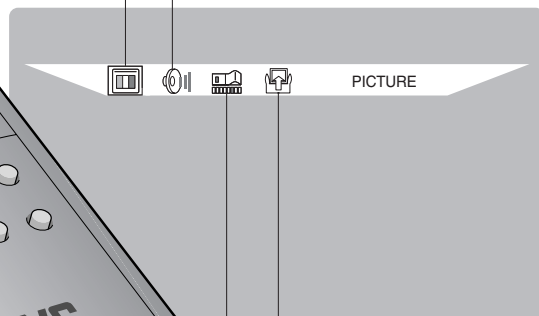

- Basic settings  
(channel settings / anti-burn, etc.)

- Advanced settings  
(sleep-timer / child lock, etc.)

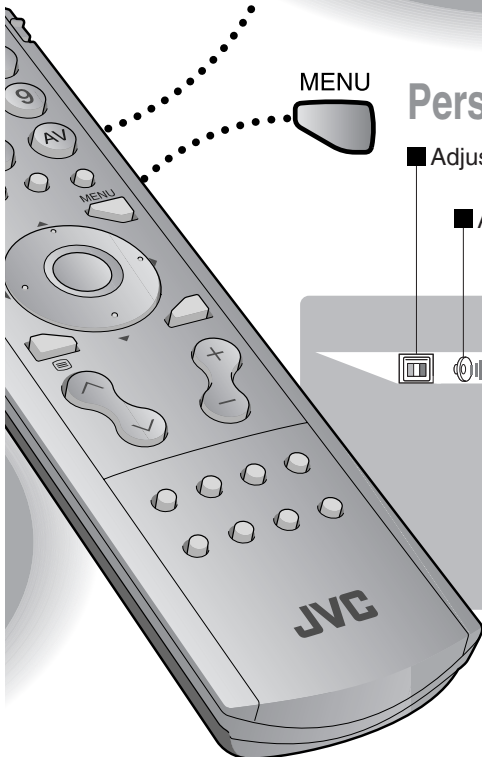

# Watching TV

**1** **Power on**

The blue power lamp on the TV lights

- Press again to turn the screen off and put the TV into standby mode.

**2** **Select a channel**

1 2 3  
 4 5 6  
 7 8 9  
 0

- Move up or down a channel

up  
 down

- Switch between stereo / mono / bilingual broadcasting

→ "STEREO / I · II " ( P. 26)

- To the previous channel

BACK

**Note**

- To completely turn off the TV, unplug the AC plug.

■ Mute    ■ Volume

## Channel information and clock

INFORMATION

## Change the aspect ratio

ZOOM

## Enjoy ambient sound

3D SOUND

## Register a channel to a button


FAVOURITE CHANNEL

## Basic operations using the side buttons


**1** Power on

**2** Change the channel


- Volume

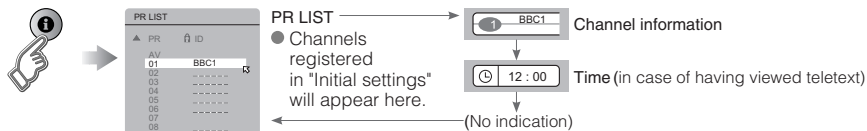


- Select a page →
- Select and view a channel →

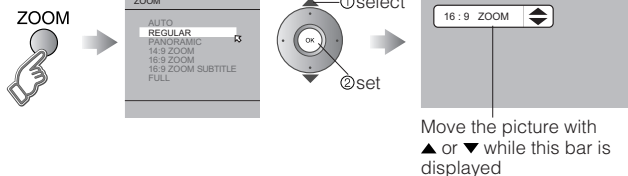

- When set to AUTO, the aspect ratio will turn to the ratio obtained from the information the TV received. Without receiving aspect information, it will be the setting in "4:3 AUTO ASPECT" (P.27)
- Not available in PC mode / 1080i (1125i) / 720p (750p) signals.

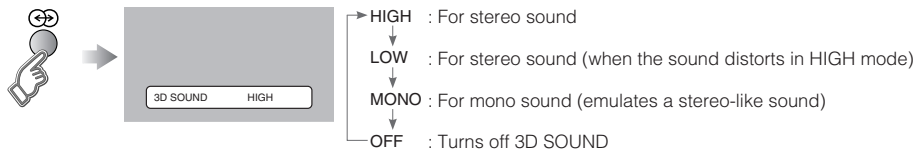


■ Recall the favourite channel

 

- Check your favourite channels → Press and confirm that the channels you have registered have a beside them


■ Delete a favourite channel

→ MENU" → → "FEATURES" → "FAVOURITE SETTING"

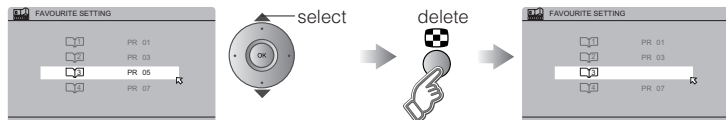

# Viewing teletext

This TV can display TV broadcasts and teletext on the same channel in two windows.

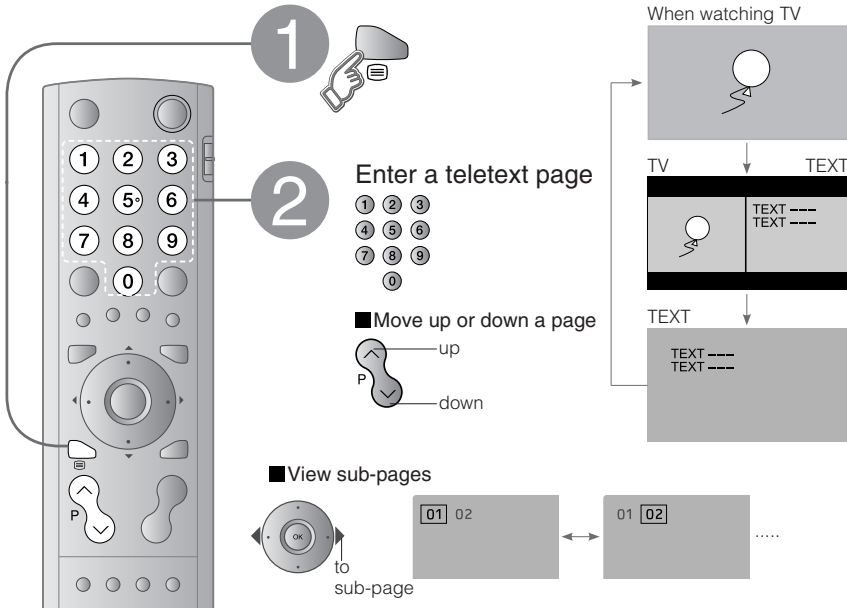


## Bookmark your favourite page

LIST MODE

- 1** Display your favourites list  
F.T./L
- 2** Select a coloured button to save your page to
- 3** Enter the number of the page to save
- 4** Save

■ Recall your favourite page → Press the coloured button as in step 2

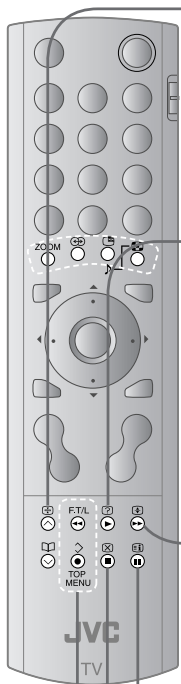

**Hold the current page**

HOLD

Hold the current page

■ Release → Press again

**Reveal hidden pages**

REVEAL

Display hidden information (answers to quizzes, etc)

$$\begin{array}{r} 1 + 2 = \\ 2 \times 3 = \end{array} \leftrightarrow \begin{array}{r} 1 + 2 = 3 \\ 2 \times 3 = 6 \end{array}$$

**Enlarge the text**

SIZE

Double the size of the displayed text

$$\begin{array}{|c|} \hline \text{TEXT} \\ \hline \text{SIZE} \\ \hline \end{array} \rightarrow \begin{array}{|c|} \hline \text{TEXT} \\ \hline \text{SIZE} \\ \hline \end{array}$$

**To the index page**

INDEX

Returns to page "100" or a previously designated page

**Switch briefly from teletext to TV**


CANCEL

Leave the current page open, while you switch to watch TV

$$\begin{array}{|c|} \hline \text{P233} \\ \hline \text{TEXT ---} \\ \hline \text{TEXT ---} \\ \hline \end{array} \leftrightarrow \begin{array}{|c|} \hline \text{P233} \\ \hline \text{TV} \\ \hline \end{array}$$


- Useful when running a page search.

# Watching videos / DVDs

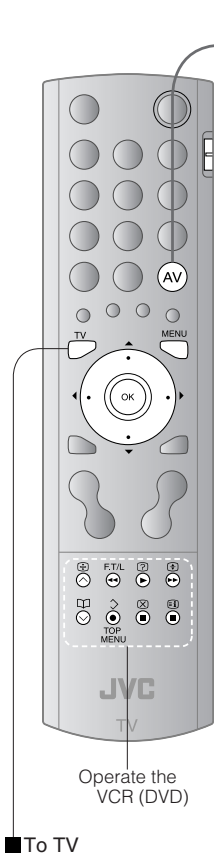

1

Select the video source

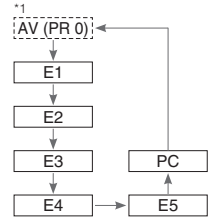


2

Operate the connected device and play a video

\*1 : Only appears when AV has been registered as a channel.

## Operate JVC VCRs and other devices

 1



DVD players

VCRs and DVD recorders

 
2



Turn on the device

3


Select a channel (VCR mode)



Select a chapter (DVD mode)

● Some models of JVC devices cannot be operated with this remote control.


## Advanced functions

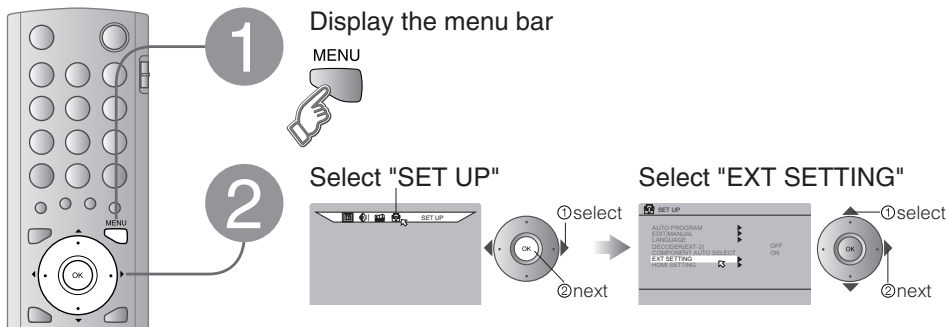


Switch to S-VIDEO input

S-IN

① Select the EXT connected to S-VIDEO

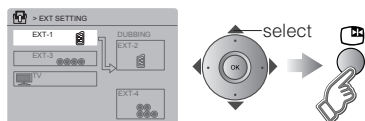

② Set the S-VIDEO mode

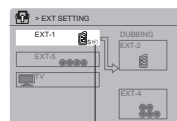


● The device selection display will change from E1 to S1.

■ Cancel this mode → Press in ② again


Edit names of connected devices

ID LIST

 
① Select an EXT to assign a name to



② Show the name list

 

③ Select a name from the list

 


■ Clear the name → Select the blank space in ③


Set up dubbing on EXT-2

DUBBING

 ① Select the arrow




② Select the dubbing source

 

# Useful functions

## Take snapshots of the screen


FREEZE

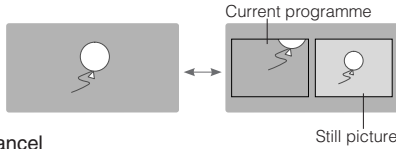

### ■ Cancel

- ➔ Press again, or change the channel
- Not available when the SUB-PICTURE is displayed, or when in PC mode.
- You cannot save or export the snapshot.
 
## Select the number of screens




Selecting " 1 " returns to normal viewing mode

- Not available in PC mode.

### ■ Watch in dual-picture mode

 E.g. You can watch TV and video at the same time.

(For wide aspect ratio signals)




- Switch between the sound sources  
➔
- Change the channel  
➔ (Main)   
➔ (Sub)

## Watch in multi-picture mode

 MULTI-PICTURE


### ■ Select a channel in 12-screen mode

All registered channels are displayed as still images.



Only the selected frame has a moving picture.


- Move up or down a page ➔
- Not available for EXT-5 input.

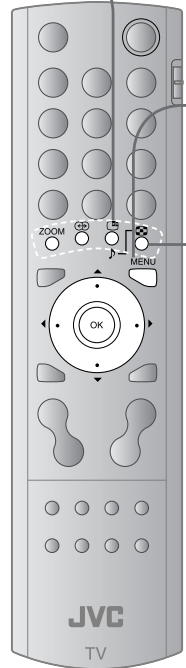



## Set a time for the TV to turn itself off


SLEEP TIMER

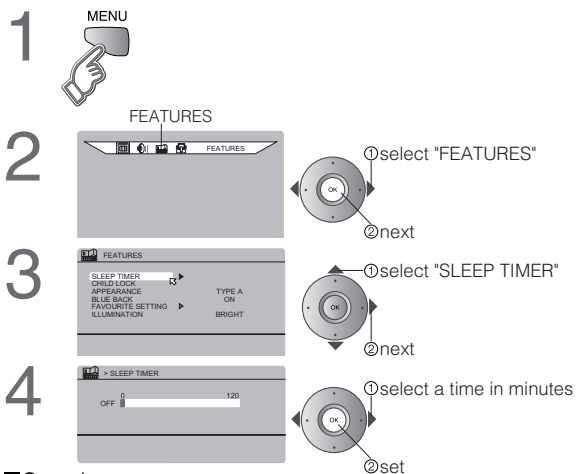

■ Cancel → Set the time to "0" in step 4


■ Remaining time → You can confirm the remaining time at step 4, after repeating this process.

● After steps 1 and 2 above

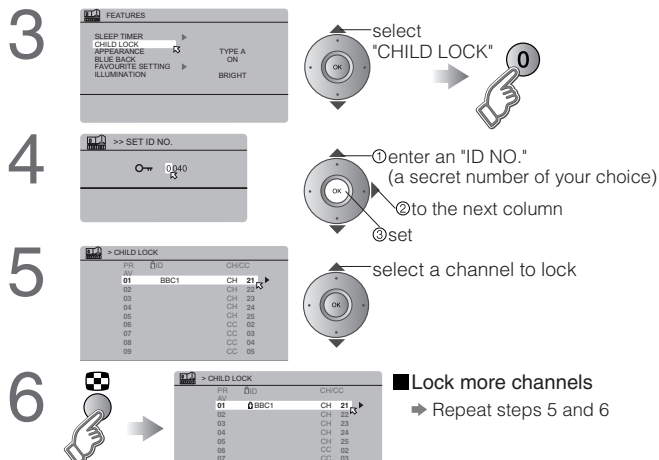

## Stop children from watching specific channels

CHILD LOCK

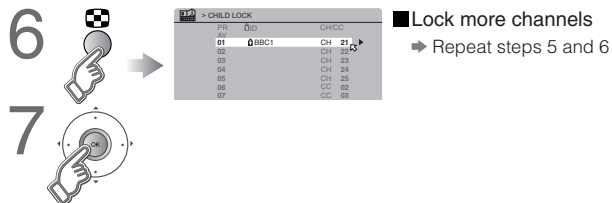

■ Release a channel → Press again in step 6

■ View a locked channel → Use the numerical buttons to enter the channel number. When appears, press and enter your "ID NO.". (If you forget your "ID NO.", check it in step 4.)



# Customising your TV





**1** Display the menu bar



**2** Select a menu

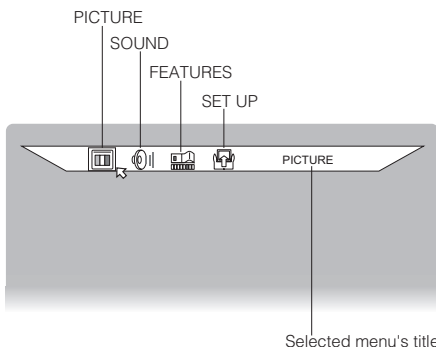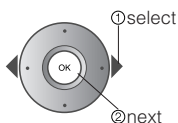

**3** Select an item

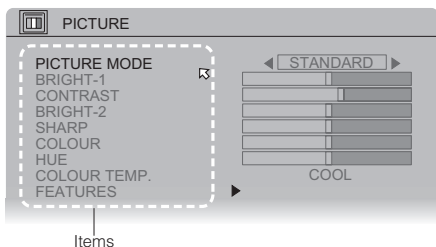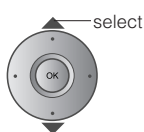

■ To the previous screen





■ Exit MENU




● The menu disappears after one minute of inactivity.


**4** Adjust / Configure

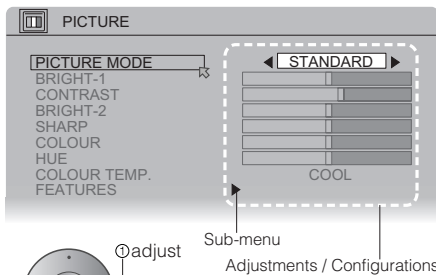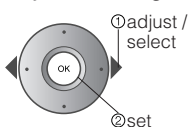

■ When adjusting with the sliding-bar

 



 

■ When selecting from presets



The item will change.

● Some items have a sub-menu.

Menu	Item	Adjustments / Configurations
 PICTURE	PICTURE MODE	Picture mode (BRIGHT / STANDARD / SOFT)
	BRIGHT-1	Backlight brightness (Darker ⇔ Brighter)
	CONTRAST	Contrast (Lower ⇔ Higher)
	BRIGHT-2	Brightness (Darker ⇔ Brighter)
	SHARP	Sharpness (Softer ⇔ Sharper)
	COLOUR	Colour (Lighter ⇔ Deeper)
	HUE	Tint (Reddish ⇔ Greenish)
	COLOUR TEMP.	Colour temperature (WARM / NORMAL / COOL)
 SOUND	FEATURES	Finer picture adjustments (P. 27)
	STEREO / I · II	Mode / Language (∞ : STEREO / ○ : MONO / I : SUB1 / II : SUB2)
	BASS	Low tones (Weaker ⇔ Stronger)
	TREBLE	High tones (Weaker ⇔ Stronger)
	BALANCE	Speaker balance (Left Stronger ⇔ Right Stronger)
	3D SOUND	Ambience level (HIGH / LOW / MONO / OFF)
	A.H.B.	Emphasize the bass sound (ON / OFF)
	BBE *1	Sound enhancement technology (ON / OFF)
 FEATURES	SLEEP TIMER	Timer for turning off the TV (P. 24)
	CHILD LOCK	Stops children from watching specific channels (P. 24)
	APPEARANCE	Format for displaying the channel number (TYPE A / TYPE B / TYPE C / TYPE D)
	BLUE BACK	Displays a blue screen and mute the sound when the signal is weak or absent (ON / OFF)
	FAVOURITE SETTING	Clear favourite channel settings (P. 17)
	ILLUMINATION	Lights illumination lamp (P.5) while the TV is on (BRIGHT / SOFT / OFF)
 SET UP	AUTO PROGRAM	Select a country, it automatically registers channels (P. 10, ③)
	EDIT / MANUAL	Change registered channels or add new ones (P. 11)
	LANGUAGE	Select a language for on-screen menus (P. 10, ②)
	DECODER(EXT-2)	For when connected to VCR with T-V LINK (ON / OFF)
	COMPONENT AUTO SELECT	Changes the TV input to EXT-4 when a component signal is input to EXT-4 (ON / OFF) (Not available when viewing PC)
	EXT SETTING	For use with video players and other devices (P. 22)
	HDMI SETTING	SIZE (AUTO / 1 / 2) AUDIO (AUTO / ANALOGUE / DIGITAL)

- Other settings · Change the aspect ratio ➔ "ZOOM" (P. 17)
- Turn on 3D SOUND ➔ "3D SOUND" (P. 17)

\*1 BBE license ➔ (P. 32)

# Advanced picture adjustment


 
By default, the TV automatically adjusts itself for the best picture.





**1** Display the menu bar





**2** Select "PICTURE"

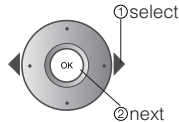

**3** Select "FEATURES"

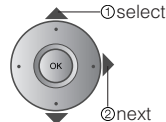
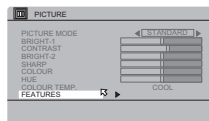


**4** Select an item

  


E.g. DIGITAL VNR

 **5** Change settings

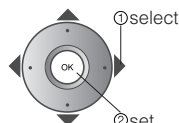

E.g. DIGITAL VNR

 **6** Finish



DIGITAL VNR

Super DigiPure

MOVIE THEATRE

COLOUR MANAGEMENT

PICTURE MANAGEMENT

COLOUR SYSTEM

4:3 AUTO ASPECT

■ To the previous screen



BACK

 

■ Exit





MENU

● The menu disappears after one minute of inactivity.



To reduce noise

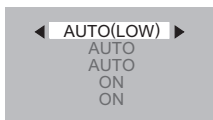


For natural-looking outlines

  


For smooth cinema film

  


For natural-looking pictures

 


Fix bright / dark pictures

 


When there is no colour

 

 
① Select the screen to change settings on




② Select the colour system

 

Set a default aspect ratio

 

 Select a default aspect ratio for AUTO in "ZOOM" (P.17)



# Troubleshooting

## Severe noise or snow



- Is the TV connected correctly to the aerial?
- Change the direction of the aerial.
- Is the aerial or its cable damaged?
  - ➔ Consult your retailer

## Patterns, stripes or noise



 


- Is the aerial receiving interference from high-voltage power lines or wireless transmitters?
  - ➔ Consult your retailer
- Are connected devices too close to the TV?
  - ➔ Insert the minimum distance between the aerial and the cause of interference until no interference

## Ghosting

(Doubling of images)



- Are you receiving interference from signals reflected off mountains or buildings?
  - ➔ Adjust the direction of your aerial, or change to a good-quality directional aerial

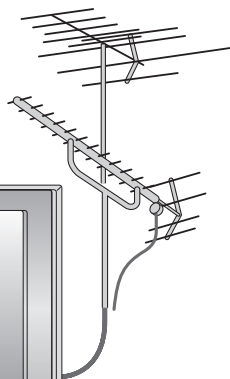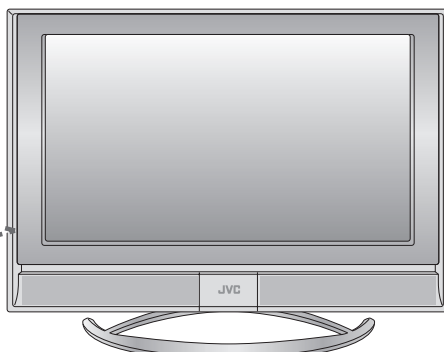


## I can't turn it on!

- Is the power cord connected to the AC outlet correctly?

## The remote control doesn't work!

- Are the batteries flat?
- Are you more than 7 metres away from the TV?
- Is the "VCR/TV/DVD SWITCH" set to "TV"?
- When viewing teletext, the TV menu bar does not appear.
- Depending on the stability of the signal, there may be a time lag when changing channels.

	Problem	Actions	page
Basics	Remote control stops working	<ul style="list-style-type: none"> <li>● Unplug TV, several minutes later plug it in again.</li> </ul>	—
Screen	Aspect ratio changes unintentionally	<ul style="list-style-type: none"> <li>● Press  to return to your settings.</li> </ul>	17
Picture	Poor picture quality	<ul style="list-style-type: none"> <li>● Unnatural colour &gt;&gt;&gt; Adjust COLOUR and BRIGHT-1. Check your COLOUR SYSTEM. 26 28</li> <li>● Noise &gt;&gt;&gt; Set to the following functions. PICTURE MODE : STANDARD 26 DIGITAL VNR : AUTO (HIGH) 27 Super DigiPure : MIN 27</li> <li>● Dull picture &gt;&gt;&gt; Set to the following functions. PICTURE MODE : BRIGHT 26 DIGITAL VNR : MIN 27 Super DigiPure : MAX 27</li> </ul>	
		<ul style="list-style-type: none"> <li>● If you connected S-Video output device, check the "S-IN" setting. 22</li> <li>● If the top of the image is distorted, check the video signal quality itself. —</li> <li>● If movement appears unnatural when receiving a signal from a DVD player, etc. with 625p (progressive-scanning), change the output setting of the external device to 625i (interlace-scanning). —</li> </ul>	
Sound	Poor sound	<ul style="list-style-type: none"> <li>● Adjust the BASS and TREBLE. 26</li> <li>● If receiving a poor signal in "STEREO / I · II", switch to MONO. 26</li> <li>● Adjust the channel reception using "MANUAL". 11</li> </ul>	

# Troubleshooting (continued)

Problem		Actions	page
HDMI	Wrong screen size	<ul style="list-style-type: none"> <li>● Switch SIZE in HDMI SETTING to "1" or "2".</li> </ul>	26
	No sound	<ul style="list-style-type: none"> <li>● Switch AUDIO in HDMI SETTING to ANALOGUE or DIGITAL.</li> </ul>	26
	Green and distorted screen	<ul style="list-style-type: none"> <li>● Wait a little for the signal to stabilize when switching the signal format for an HDMI device.</li> </ul>	—
Functions	Some functions do not work	<ul style="list-style-type: none"> <li>● It is not a malfunction. Some functions (dark background) in the menu do not work depending on the situation.</li> </ul>	—
	Some inputs cannot be selected in the sub-picture	<ul style="list-style-type: none"> <li>● EXT-4, EXT-5 inputs and PC mode cannot be selected in the sub-picture.</li> </ul>	—
Display	"FEATURE NOT AVAILABLE" appears	<ul style="list-style-type: none"> <li>● Is the T-V LINK compatible device connected to EXT-2?</li> <li>● Is the SCART CABLE "Fully Wired"?</li> <li>● Is the T-V LINK compatible device turned on?</li> </ul> After confirming all the conditions above, press "OK" button again.	32 32 —
	"ACI ERROR" appears	<ul style="list-style-type: none"> <li>● Press ◀ to start ACI again.</li> </ul> If you still receive the "ACI ERROR" after numerous tries, press ▶ to cancel ACI.	—
Screen	Black or white dots appear on the screen	<ul style="list-style-type: none"> <li>● LCD panels use fine dots ("pixels") to display images. While more than 99.99% of these pixels function properly, a very small number of pixels may not light, or may light all the time.</li> </ul> Please understand that this is not a malfunction.	—



# Technical information

## What is T-V LINK?

T-V LINK allows the TV to share information easily with a connected T-V LINK compatible device. By using T-V LINK :

- You can send the channel information programmed on the TV to the T-V LINK compatible device, so that both the TV and the external device have the same channel settings. When connecting a new external device, channel information is loaded into it, allowing channel setup to be completed very quickly. For more details, refer to the external device's manual.
- You can easily record the TV programme you are viewing on a T-V LINK compatible device by using the "DIRECT REC" feature. For more details, refer to the external device's manual.

## What is ACI (Automatic Channel Installation)?

Some cable companies transmit a signal called ACI which contains information that allows TV channels to be registered automatically on your TV.

When an ACI signal is received, "ACI START / ACI SKIP" appears in the "AUTO PROGRAM" screen.

## Receivable broadcast systems

Depending on the country selected during "AUTO PROGRAM", the receivable broadcast system differs.

- UNITED KINGDOM: Receive only PAL-I.
- FRANCE: Can receive SECAM-L.

To receive SECAM-L in countries other than France:

- 1) Change the "COUNTRY" to "FRANCE" in "AUTO PROGRAM".
- 2) Press the "BACK" button to return to the menu and enter the channel using "INSERT" or "MANUAL".

## PC Signals that can be displayed

\*Macintosh\* computers are not supported. (Macintosh is a registered trademark of Apple Computer, Inc.)

- If the signal doesn't appear, check that the vertical frequency on the PC is set to 60Hz.

Resolution	640 x 480 (VGA)	1024 x 768 (XGA)
Vertical frequency (Hz)	60.0	60.0
Horizontal frequency (kHz)	31.5	42.0

## Connect DVI devices

Connect a DVI device to EXT-5 (HDMI) using DVI-HDMI conversion cable. Connect analogue sound output of the DVI device to L and R terminals in EXT-4.

- Set AUDIO in HDMI SETTING to Analogue or AUTO ➔ (P. 26)

## Licence

Manufactured under license from BBE Sound, Inc. Licensed by BBE Sound, Inc. under USP4638258, 5510752 and 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

# CH/CC List

To use the INSERT function (P. 11), find the CH/CC number corresponding to the TV's Channel number from this table.

● When the COUNTRY setting is "FRANCE", select a three-digit CH/CC number.

CH	Channel
CH 02/CH 202	E2, R1
CH 03/CH 203	E3, ITALY A
CH 04/CH 204	E4, ITALY B, R2
CH 05/CH 205	E5, ITALY D, R6
CH 06/CH 206	E6, ITALY E, R7
CH 07/CH 207	E7, ITALY F, R8
CH 08/CH 208	E8, R9
CH 09/CH 209	E9, ITALY G
CH 10/CH 210	E10, ITALY H, R10
CH 11/CH 211	E11, ITALY H+1, R11
CH 12/CH 212	E12, ITALY H+2, R12
CH 21/CH 221	E21, R21
CH 22/CH 222	E22, R22
CH 23/CH 223	E23, R23
CH 24/CH 224	E24, R24
CH 25/CH 225	E25, R25
CH 26/CH 226	E26, R26
CH 27/CH 227	E27, R27
CH 28/CH 228	E28, R28
CH 29/CH 229	E29, R29
CH 30/CH 230	E30, R30
CH 31/CH 231	E31, R31
CH 32/CH 232	E32, R32
CH 33/CH 233	E33, R33
CH 34/CH 234	E34, R34
CH 35/CH 235	E35, R35
CH 36/CH 236	E36, R36
CH 37/CH 237	E37, R37
CH 38/CH 238	E38, R38
CH 39/CH 239	E39, R39

CH	Channel
CH 40/CH 240	E40, R40
CH 41/CH 241	E41, R41
CH 42/CH 242	E42, R42
CH 43/CH 243	E43, R43
CH 44/CH 244	E44, R44
CH 45/CH 245	E45, R45
CH 46/CH 246	E46, R46
CH 47/CH 247	E47, R47
CH 48/CH 248	E48, R48
CH 49/CH 249	E49, R49
CH 50/CH 250	E50, R50
CH 51/CH 251	E51, R51
CH 52/CH 252	E52, R52
CH 53/CH 253	E53, R53
CH 54/CH 254	E54, R54
CH 55/CH 255	E55, R55
CH 56/CH 256	E56, R56
CH 57/CH 257	E57, R57
CH 58/CH 258	E58, R58
CH 59/CH 259	E59, R59
CH 60/CH 260	E60, R60
CH 61/CH 261	E61, R61
CH 62/CH 262	E62, R62
CH 63/CH 263	E63, R63
CH 64/CH 264	E64, R64
CH 65/CH 265	E65, R65
CH 66/CH 266	E66, R66
CH 67/CH 267	E67, R67
CH 68/CH 268	E68, R68
CH 69/CH 269	E69, R69

CC	Channel
CC 01/CC 201	S1
CC 02/CC 202	S2
CC 03/CC 203	S3
CC 04/CC 204	S4
CC 05/CC 205	S5
CC 06/CC 206	S6
CC 07/CC 207	S7
CC 08/CC 208	S8
CC 09/CC 209	S9
CC 10/CC 210	S10
CC 11/CC 211	S11
CC 12/CC 212	S12
CC 13/CC 213	S13
CC 14/CC 214	S14
CC 15/CC 215	S15
CC 16/CC 216	S16
CC 17/CC 217	S17
CC 18/CC 218	S18
CC 19/CC 219	S19
CC 20/CC 220	S20
CC 21/CC 221	S21
CC 22/CC 222	S22
CC 23/CC 223	S23
CC 24/CC 224	S24
CC 25/CC 225	S25
CC 26/CC 226	S26
CC 27/CC 227	S27
CC 28/CC 228	S28
CC 29/CC 229	S29
CC 30/CC 230	S30

CC	Channel
CC 31/CC 231	S31
CC 32/CC 232	S32
CC 33/CC 233	S33
CC 34/CC 234	S34
CC 35/CC 235	S35
CC 36/CC 236	S36
CC 37/CC 237	S37
CC 38/CC 238	S38
CC 39/CC 239	S39
CC 40/CC 240	S40
CC 41/CC 241	S41
CC 75/CC 275	X
CC 76/CC 276	Y, R3
CC 77/CC 277	Z, ITALY C, R4
CC 78/CC 278	Z+1, R5
CC 79/CC 279	Z+2

CH	Channel
CH 102	F2
CH 103	F3
CH 104	F4
CH 105	F5
CH 106	F6
CH 107	F7
CH 108	F8
CH 109	F9
CH 110	F10
CH 121	F21
CH 122	F22
CH 123	F23
CH 124	F24
CH 125	F25
CH 126	F26
CH 127	F27
CH 128	F28
CH 129	F29
CH 130	F30
CH 131	F31
CH 132	F32
CH 133	F33
CH 134	F34
CH 135	F35
CH 136	F36
CH 137	F37
CH 138	F38
CH 139	F39
CH 140	F40

CH	Channel
CH 141	F41
CH 142	F42
CH 143	F43
CH 144	F44
CH 145	F45
CH 146	F46
CH 147	F47
CH 148	F48
CH 149	F49
CH 150	F50
CH 151	F51
CH 152	F52
CH 153	F53
CH 154	F54
CH 155	F55
CH 156	F56
CH 157	F57
CH 158	F58
CH 159	F59
CH 160	F60
CH 161	F61
CH 162	F62
CH 163	F63
CH 164	F64
CH 165	F65
CH 166	F66
CH 167	F67
CH 168	F68
CH 169	F69

CC	Frequency (MHz)
CC 110	116-124
CC 111	124-132
CC 112	132-140
CC 113	140-148
CC 114	148-156
CC 115	156-164
CC 116	164-172
CC 123	220-228
CC 124	228-236
CC 125	236-244
CC 126	244-252
CC 127	252-260
CC 128	260-268
CC 129	268-276
CC 130	276-284
CC 131	284-292
CC 132	292-300
CC 133	300-306
CC 141	306-311
CC 142	311-319
CC 143	319-327
CC 144	327-335
CC 145	335-343
CC 146	343-351
CC 147	351-359
CC 148	359-367
CC 149	367-375
CC 150	375-383
CC 151	383-391

CC	Frequency (MHz)
CC 152	391-399
CC 153	399-407
CC 154	407-415
CC 155	415-423
CC 156	423-431
CC 157	431-439
CC 158	439-447
CC 159	447-455
CC 160	455-463
CC 161	463-469

# Specifications

## Main unit

Model	LT-37S60BU	LT-32S60BU/SU	LT-26S60BU/SU
Broadcasting systems	CCIR I / B / G / D / K / L (See "Technical information", P. 32)		
Colour systems	TV broadcast : PAL, SECAM External input : PAL, SECAM, NTSC 3.58/4.43MHz		
Channels and frequencies	E2-E12 / E21-E69, F2-F10 / F21-F69, IR A-IR J, ITALY A-H / H+1 / H+2, R1-R12 / R21-R69, S1-S41, X / Y / Z / Z+1 / Z+2, French cable channels (Frequency : 116-172 MHz / 220-469 MHz)		
Sound-multiplex systems	NICAM (I / B / G / D / K / L), A2 (B / G / D / K)		
Teletext systems	FLOF (Fastext), TOP, WST (standard system)		
Power requirements	AC 110 V - 240 V, 50/60Hz		
Audio output (Rated power output)	10 W + 10 W		
Speakers	6.6 cm round x 2		
Power consumption [standby]	171 W [2.6 W]	141 W [2.6 W]	118 W [2.6 W]
Screen size (visible area size measured diagonally)	94 cm	80 cm	66 cm
Dimensions (W x H x D: mm) [without stand]	926 x 689.5 x 297 [926 x 631.5 x 108.5]	808 x 611 x 225 [808 x 558.5 x 108]	703 x 536.8 x 225 [703 x 483 x 107]
Weights [without stand]	25.7 kg [20.6 kg]	20.0 kg [16.4 kg]	17.0 kg [13.0 kg]
Accessories	(See "Check accessories", P. 5)		

## Terminals / Connectors

Terminal name	Terminal type	Signal type (IN)	Signal type (OUT)	Notes
Input / Output terminals	EXT-1	Euroconnector x1 (SCART connector)	Composite video, S-video, Analog RGB AUDIO L / R	TV out
	EXT-2	Euroconnector x1 (SCART connector)	Composite video, S-video, Analog RGB AUDIO L / R	Dubbing out T-V LINK compatible
Input terminals	EXT-3	RCA connectors x 3, S-VIDEO connector x 1	Composite video, S-video AUDIO L / R	
	EXT-4	RCA connectors x 5	Analogue component (576i (625i) / 480i (525i), Progressive : 576p (625p) / 480p (525p), HD : 1080i (1125i), 720p (750p)) AUDIO L / R	
	EXT-5	HDMI connector x 1	HDMI (576i (625i) / 480i (525i) / 576p (625p) / 480p (525p), 1080i (1125i), 720p (750p))	
	PC INPUT	D-SUB (15 pins) x 1	Analogue PC signal (P. 32)	
Output terminals	AUDIO OUT	RCA connectors x 2		Audio L / R
	Headphone	Stereo mini-jack x 1 (3.5 mm in diameter)		Headphone output

● We may change the design and specifications without notice.

**JVC**