JVC




COMPACT COMPONENT SYSTEM


FS-Y1

Consists of CA-FSY1 and SP-FSY1



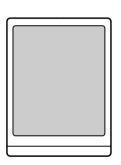



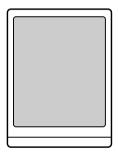









INSTRUCTIONS

For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.

Serial No.

Warnings, cautions and others

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- 1. Do not remove screws, covers or cabinet.
- 2. Do not expose this appliance to rain or moisture.

CAUTION — STANDBY/ON U/ button!

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off).

The STANDBY/ON **U/|** button in any position does not disconnect the mains line.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp lights green.

The power can be remote controlled.

IMPORTANT FOR LASER PRODUCTS

- 1. CLASS 1 LASER PRODUCT
- CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

CAUTION: Visible and invisible | ADVARSEL: Synlig og usynlig | VARNING : Synlig och | VARO: Avattassas ja susjatukhus laser radiation when open and lasersträlling ind maskinen er osynlig | laserstrålning nar öntletune ta vialled innettock talled or deletad. Blen eller intentocken legic den öppnas och spärnar af nådyvalle ja nåsymaltionalle AVOID DIRECT EXPOSURE: TO | Undgå direkte eksponering till urkopplad. Betrakta ej | laserstälelylle: Villa staten BEAM. (e) Istraktion (s) (s) koldstumista suoraan itsess. (f)



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

FOR U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

For Canada/pour le Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQUAU FOND.

For Canada/pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS", ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMIRIQUES DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUES", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of contents

About discs	
About discs	Introduction
Description of parts	
Using the remote control	
Using the remote control	
Putting the batteries in the remote control	Getting started
Operating the TV using the remote control	
Basic operations Playing discs	
Playing discs	·
Playing discs	Connecting up8
Playing discs	Basic operations
Playback	
To switch the display	
the number buttons	
To stop playback	
To pause playback	
To advance picture frame-by-frame	
Fast reverse/Fast forward search	
Playing back from a position 10 seconds before (One Touch Replay)	
before (One Touch Replay)	
Slow Motion Playback	
To change the brightness of the display window (DIMMER)	Slow Motion Playback15
the display window (DIMMER)	
Adjusting the volume	
Adjusting sound quality	
Turning off the sound temporarily (MUTING) 16 Advanced operations Playing audio/video files	
Advanced operations Playing audio/video files	
Playing audio/video files	, , ,
Resume Playback18Select the scene to be played19Program Playback/Random Playback20Repeat Playback22Other convenient functions24Selecting the subtitles24	Advanced operations
Select the scene to be played	Playing audio/video files16
Program Playback/Random Playback	
Repeat Playback	
Other convenient functions24 Selecting the subtitles24	
Selecting the subtitles24	
Selecting the audio language	
Selecting a view angle	

Creating realistic sound (3D PHONIC) 26

Adjusting playback level (DVD LEVEL) 26

Enjoying better pictures (SCAN MODE)........... 26

Functions specific to DVD AUDIO
Listening to a radio broadcast32
Tuning in to a preset station33
Convenient functions
Listening to the sound of other audio device 34
Setting the Various Timer34
Setting the Various Timer
Setting the Various Timer 34 Setting the built-in clock 34 Setting the daily timer 34 Auto Standby 35 Sleep Timer 36 Tray Lock 36 Reference
Setting the Various Timer 34 Setting the built-in clock 34 Setting the daily timer 34 Auto Standby 35 Sleep Timer 36 Tray Lock 36 Reference Troubleshooting 37
Setting the Various Timer 34 Setting the built-in clock 34 Setting the daily timer 34 Auto Standby 35 Sleep Timer 36 Tray Lock 36 Reference

How to read this manual

- · Operations are described by mainly using the remote control buttons. If there are the same marks on the main unit, the buttons on the main unit can also be used.
- The following marks tell you for which type of the discs the operation can be made.













JPEG

- The illustrations and TV screens may be different between the actual case and the description.
- "VCD" is an abbreviation of "Video CD". "SVCD" is an abbreviation of "Super Video CD".

Notes on handling

Important cautions


Installation of the system

- Select a place which is level, dry and neither too hot nor too cold; between 5°C and 35°C (between 41°F
- Leave sufficient distance between the system and the TV
- Do not use the system in a place subject to vibration.

- Do not handle the power cord with wet hands.
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.

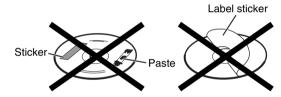

Note about copyright laws

Check the copyright laws in your country before recording from DVDs, VCDs, SVCDs, and CDs. Recording of copyrighted material may infringe copyright

Note about copy guard system

DVDs are protected by copy guard system. When you connect the system to your VCR directly, the copy guard system activates and the picture may not be played back correctly.

Safety precautions

Avoid moisture, water and dust

Do not place the system in moist or dusty places.

Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the . wall outlet.

Do not block the vents

Blocking the vents may damage the system.

Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock.

When condensation or water drops adhere to the

In any of the following cases, condensation or water drops may adhere to the lens to prevent the system from working properly:

- Immediately after starting to heat the room
- When the system is installed in a steamy or damp
- When the system is suddenly moved from a cold place to a warm space

In any of these cases, leave the system turned on for 1 or 2 hours before use.

Supplied accessories

Check to be sure you have all of the supplied accessories.

The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)
- Power cord (1)
- Composite video cord (1)
- Speaker cords (2)

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "MLP Lossless", and the double-D

symbol are trademarks of Dolby Laboratories.
"DTS" and "DTS 2.0+DIGITAL OUT" are registered trademarks of Digital Theater Systems, Inc.
This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

About discs Introduction

Playable disc types

This system has been designed to play back the following discs:

DVD VIDEO, DVD AUDIO, VCD, SVCD, CD

This system can also play back the following discs:

- Finalized DVD-R/-RW discs recorded in the DVD VIDEO format.
- · CD-R/RW discs recorded in the following formats
 - · Music CDs (finalized discs)
 - VCDs
 - SVCDs
 - MP3/WMA/JPEG discs recorded in ISO 9660 (for details, refer to "Notes on CD-R and CD-RW")

However, some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

Only sounds can be played back from the following discs:

MIX-MODE CD CD-G CD-EXTRA CD TEXT

Discs you can play:

Discs you can play.		
Disc Type	Mark (Logo)	Video Format
DVD VIDEO	VIDEO TM VIDEO	NTSC
DVD AUDIO	AUDIO/VIDEO AUDIO	
VCD	COMPACT Video CD	NTSC
SVCD	COMPACT VIDEO VIDEO SUPER VIDEO	NTSC
CD	COMPACT DIGITAL AUDIO	l
CD-R	COMPACT CITE DIGITAL AUDIO Recordable	_
CD-RW	COMPACT DIGITAL AUDIO REWITADIE	_

is a trademark of DVD Format/Logo licensing Corporation.

* Note on Region Code

DVD players and DVD VIDEOs have their own Region Code numbers. This system can only play back a DVD VIDEO recorded with the Region Code number and video format mentioned above.

For your available Region Code, check the rear panel of your main unit.

Examples:









If a DVD VIDEO with an improper Region Code number is loaded, "REGION CODE ERROR!" appears on the TV screen and playback cannot start.

 On some DVD VIDEOs, DVD AUDIOs, VCDs or SVCDs, their actual operation may be different from what is explained in this manual. This is due to the disc programming and disc structure, not a malfunction of this system.

Notes on DVD-R, DVD-RW

This system can also play finalized DVD-Rs or DVD-RWs recorded in DVD-Video format.

Notes on CD-R and CD-RW

- This system can also play CD-Rs or CD-RWs if MP3, WMA, and JPEG files are recorded on them with ISO 9660 format.
- This system supports "multi-session" discs (up to 20 sessions).
- This system cannot play "packet write" (UDF format) discs. Some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

Discs that cannot be played back

 The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD-R/-RW (recorded in VR format), CD-ROM, CD-I (CD-I Ready), Photo CD, SACD, etc.

Playing back these discs will generate noise and damage the speakers.

Damaged discs and discs in an extraordinary shape (other than a disc of 12 cm or 8 cm $(4^{3/4}$ inches or $3^{1/8}$ inches) in diameter) cannot be played back.

Caution for DualDisc playback:

The non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

About discs (continued)

Notes on all files

- The system can only recognize and play files with one of the following extensions, which can be in any combination of upper and lower case;
 • MP3: ".MP3", ".mp3"
 • WMA: ".WMA" , ".wma"
 • JPEG: ".JPG", ".JPEG", ".jpg", ".jpeg"
- If a character other than single byte English characters is used in the file name of an MP3/WMA/JPEG file, the track/file name will not be displayed correctly.
- The system recognizes up to 150 tracks (files) per group, 99 groups per disc, and the total number of the tracks (files) that the system can play is 1 000.
- Some files may not be played back normally because of their disc characteristics or recording conditions.

For MP3/WMA files

- An off-the-shelf MP3 disc may be played in an order different from that indicated on the label attached to the disc.
- The system supports MP3/WMA files recorded with a bit rate of 32 - 320 kbps and a sampling frequency of 16 kHz, 22.05 kHz, 24 kHz (WMA only), 32 kHz, 44.1 kHz, or 48 kHz.
- If the tag information (album name, artist, and track title, etc.) is recorded on a disc, it appears in the file control display on the TV screen.
- We recommend to record each piece of material (song) at a sample rate of 44.1 kHz and at a data transfer rate of 128 (96 for WMA only) kbps.
- This system cannot play back files encoded with Multiple Bit Rate (MBR). (MBR is a format to encode a file content at several different bit rates.)


For JPEG files

- We recommend to record a file at 640 x 480 resolution.
- This system can play a baseline JPEG file, excluding monochromatic JPEG files.
- This system can play JPEG data taken with a digital camera conforming to the DCF (Design Rule for Camera File System) standard (when a function is applied such as the automatic rotation function of a digital camera, data goes beyond the DCF standard, so the image may not be displayed).
- If data has been processed, edited and restored with PC image editing software, the data may not be displayed.
- This system cannot play animations such as MOTION JPEG, or still images (TIFF etc.) other than JPEG, and image data with sound.
- An image with a resolution of more than 8 192 x 7 680 pixels cannot be displayed.

Disc structure

DVD VIDEO

A DVD VIDEO consists of "titles" and each title may be divided into "chapters".

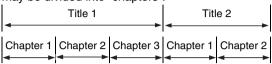

DVD AUDIO

A DVD AUDIO consists of "groups" and each group may be divided into "tracks".

Some discs include a "bonus group" that requires a password for playing (page 27).



VCD/SVCD/CD

VCD, SVCD and CD consist of "tracks".


In general, each track has its own track number. (On some discs, each track may also be further divided by indexes.)



MP3/WMA [JPEG] discs

On an MP3/WMA [JPEG] disc, each still picture (material) is recorded as a track [file]. Tracks [Files] are usually grouped into a folder. Folders can also include other folders, creating hierarchical folder layers.

This unit simplifies the hierarchical construction of a disc and manages folders by "groups".

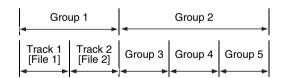


This product can recognize up to 1 000 tracks [files] in a disc. Also, the product can recognize up to 150 tracks [files] per group and up to 99 groups in a disc. Since the unit ignores the tracks [files] whose numbers are exceeding 150 and the groups whose numbers are exceeding 99, they cannot be played back.

 If there is any type of files other than MP3/WMA [JPEG] files in a folder, those files are also counted in the total file number.


The numbers represent the page numbers.

Front panel

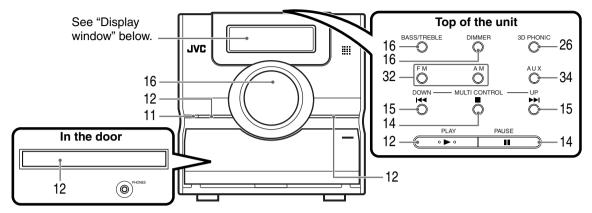


* Connect headphones (not supplied) with a stereo mini plug. If the headphones are connected, the speakers and subwoofer will not produce any sound.

Display window

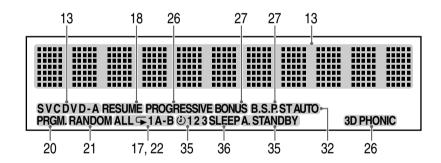


Rear panel

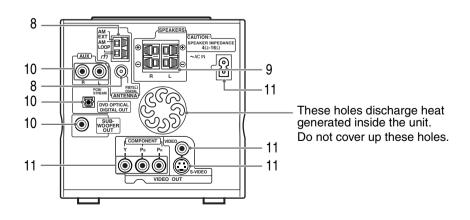



Using the remote control


The numbers represent the page numbers.

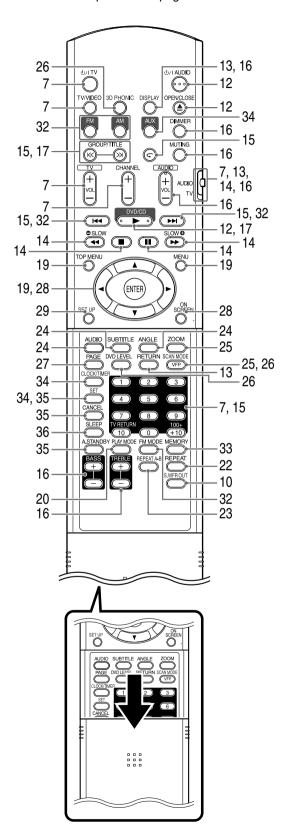

Putting the batteries in the remote control

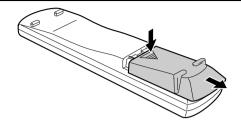

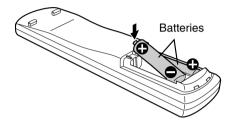

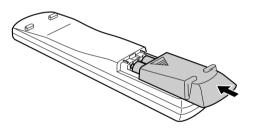

If the range or effectiveness of the remote control decreases, replace the batteries. Use two R6 (SUM-3)/AA(15F) type dry-cell batteries.

CAUTION

- Do not use a used battery and a new battery together.
- Do not use different types of batteries at the same time.
- Take out the batteries if the remote control is not to be used for a long time. Otherwise it may cause a leakage.


Remote control operation

When operating the remote control, point it towards the front panel of the main unit. If the remote control is operated from a direction that is extremely oblique or when there is an obstacle in the way, signals may not be transmitted.

If the remote control sensor is exposed to a strong light such as direct sunlight, correct operation may not be carried out.

This page is for when operating your TV using the remote control of this product.

Operating the TV using the remote control

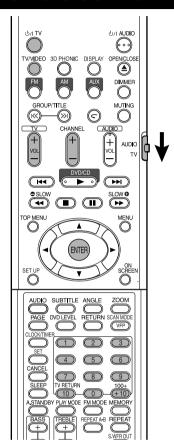

Setting the manufacturer's code

1 Slide the remote control mode selector to the TV side.



2 Keep pressing down U/ITV.

NOTE

Keep pressing down ⊍/I TV until Step 4 is complete.

3 Press ENTER.

4 Press number buttons (1-9, 0).

Ex.:

For a Hitachi TV: Press 1, then 0. For a Toshiba TV: Press 0, then 8.

If there are more than one manufacturer's codes, try them in turn and select the one that causes the product to work properly.

Manufacturer	Code	Manufacturer	Code
JVC	01	Samsung	12
Hitachi	10	Sanyo	13
Magnavox	02	Sharp	06
Mitsubishi	03	Sony	07
Panasonic	04, 11	Toshiba	08
RCA	05	Zenith	09

NOTE

Manufacturer's codes may be changed without notice. You may not be able to operate a TV produced by the manufacturer shown above.

5 Release ७/| TV.

For TV operation

Operate the remote control by pointing it towards the TV.

ФЛТУ	Turn ON/OFF the power.	
CHANNEL +	Change channels.	
TV + VOL	Adjust volume.	
1 ~ 9 / 100+ 0 / + 10	AUDIO TV Select channels.	
TV RETURN	Alternates between the previously selected channel and the current channel.	
TV/VIDEO	Switch TV and video input.	

^{*1} Make sure to slide the remote control mode selector to the TV side in advance.


NOTE

When the batteries are replaced, perform the manufacturer's code setting again.


Connecting antennas

Connecting AM loop antenna (supplied)

1 Set up the AM loop antenna.

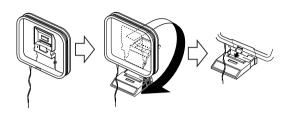

2 Connect antenna cords.

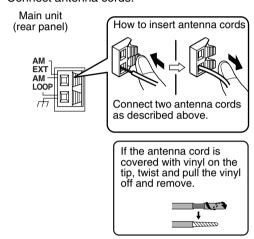


3 Turn the AM loop antenna to the direction of the best radio reception.


Locate the AM loop antenna as far away from the main unit as possible.

- Do not locate the AM loop antenna on a metallic table or close to a TV, personal computer, etc.
 Otherwise it may result in bad radio reception.
- When good radio reception cannot be obtained with the supplied AM loop antenna


Electric wire: 3 - 5 m (9 feet 10 inches - 16 feet 5 inches) (commercially available)

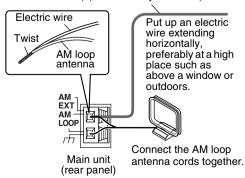


Connecting FM antenna (supplied)

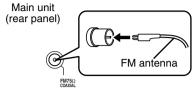

Put the antenna up straight in the direction where the best radio reception can be obtained, and fix by using tape.

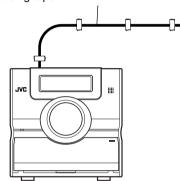


 When good radio reception cannot be obtained with the supplied antenna or when using a communal antenna

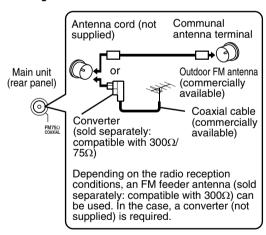

For details of connecting a separately sold antenna, refer to the user guide for the antenna or converter.


Connecting speakers

There is no difference between the left and right speakers.

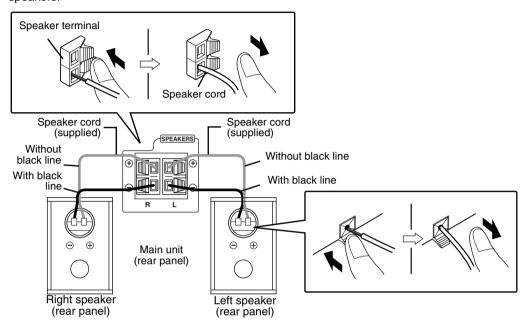

CAUTION

- DO NOT connect more than one speaker to one speaker terminal.
- The speakers of this product are magnetically shielded, but color irregularities may occur on the TV depending on how the speakers are installed. Keep in mind the following.
 - Turn off the main power of your TV before installing the speakers. Wait for about 30 minutes before turning on the TV again.
 - If color irregularity occurs in pictures, keep a distance of more than 10 cm (3¹⁵/₁₆ inches) between the TV and the speakers.

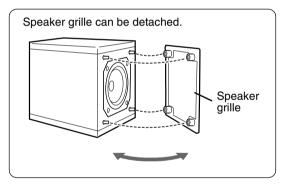


- Impedance of speaker that can be connected to the main unit is within a range of 4Ω to 16Ω .
- In order to have a sufficient cooling effect, leave a space of more than 1 cm (³/₈ inches) between the main unit and the speakers or other objects.

Connecting other devices

This page is for when connecting the main unit with other devices

Connecting subwoofer

With an amplifier-built in subwoofer (not supplied), you can enjoy a more dynamic bass sound. Refer to the manual of the subwoofer for details.

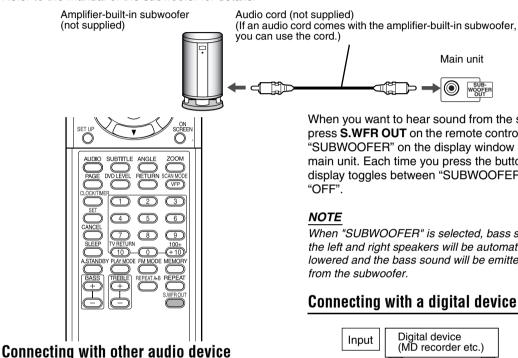


When you want to hear sound from the subwoofer, press S.WFR OUT on the remote control to display "SUBWOOFER" on the display window on the main unit. Each time you press the button, the display toggles between "SUBWOOFER" and "OFF".


Main unit

NOTE

When "SUBWOOFER" is selected, bass sound from the left and right speakers will be automatically lowered and the bass sound will be emitted mainly from the subwoofer.

Connecting with a digital device

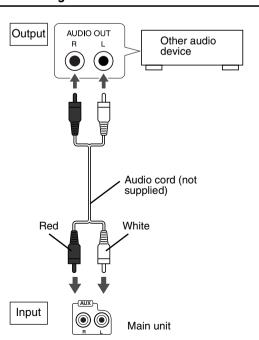


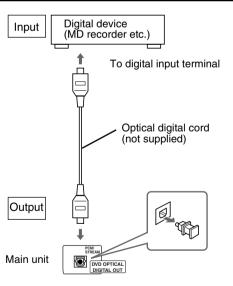

CAUTION

- · For details of signals to be output, refer to page
- · If connecting the main unit with equipment with the function of a Dolby Digital decoder, the setting in "D. RANGE COMPRESSION" of "AUDIO" (page 30) will be invalid regarding sound from the digital audio output of the main unit.


Connecting with TV

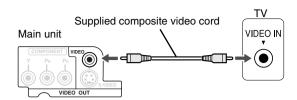

CAUTION

Connect the main unit directly with a TV (or a monitor) without routing through a VCR.


Otherwise it may cause picture distortion while playing.

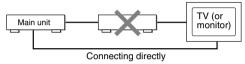

Also, when connecting the main unit to a TV with a VCR built in, there may be picture distortion while playing.


You can enjoy pictures of better quality using the following cord instead of the supplied video cord.

Connecting by using the S-Video cord

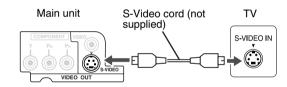

Connecting by using the component video cord

You can enjoy better quality pictures than when using the S-Video cord.

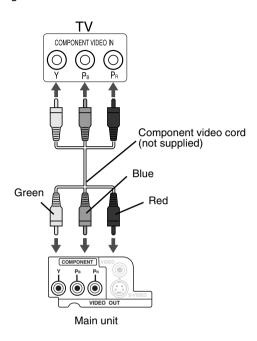


CAUTION

Use one of either the S-Video cord or the component video cord. If both cords are used, pictures may not be played properly.

NOTE


- In order to enjoy pictures with Progressive mode (page 26), the TV is required to have Progressive video input.
- If the component video input jacks of your TV are BNC type, use a plug adapter (not supplied) to convert the plugs.

Connecting the power cord

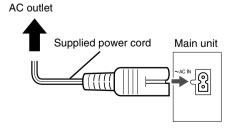

- Connect the power cord after all other connections are complete.
- The standby lamp (on the front panel) will be lit.

Playback

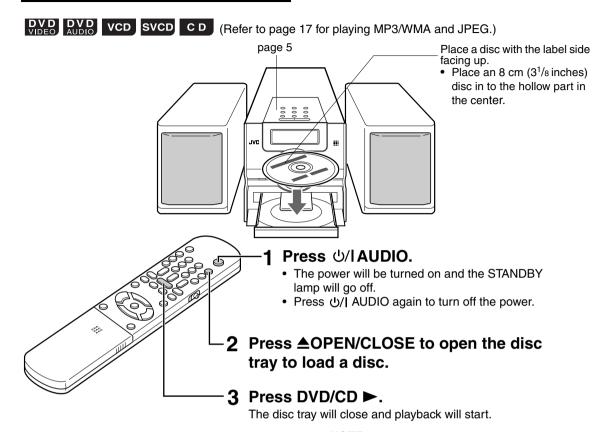


The power will be turned on when any of PLAY
 ►, FM, AM, AUX, or ≜ on the main unit and
 DVD/CD ►, FM, AM, AUX, or ≜OPEN/CLOSE on the remote control is pressed while the power is off.

If any button other than ≜ or ≜OPEN/CLOSE is pressed, the source will also be changed (if there is a disc loaded, playback will start).

NOTE


- A menu screen may be displayed on the TV after starting playback of a DVD/VCD/SVCD. In this case, select a desired item to playback by using the following buttons on the remote control.
 - Select a desired item using cursor ▲/►/▼/◄ and press ENTER.
 - · Select a desired item using the number buttons.
- Depending on the disc, actual operation may be different from the description.

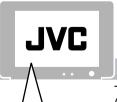

Screens displayed on the TV when the power is turned ON.


The following messages appear depending on the status of the system. (When FM, AM or AUX is selected as a source, the messages do not appear.)

NOW READING	Appears when the system is reading the disc information. Wait for a while.
REGION CODE ERROR!	Appears when the Region Code of the DVD VIDEO does not match the code the system supports. (page 3)
NO DISC	Appears when no disc is loaded.
OPEN	Appears when opening the disc tray.
CLOSE	Appears when closing the disc tray.
CANNOT PLAY THIS DISC	Appears when trying to play back an unplayable disc.

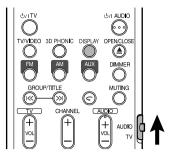

Display window during disc playback

Ex.: When a DVD VIDEO is played

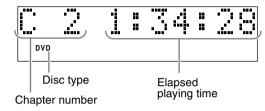


Ex.: When a DVD AUDIO is played



Track number

If "BONUS" or "B.S.P." is displayed during a DVD AUDIO playback, refer to page 27.


Ex.: When an SVCD or VCD is played

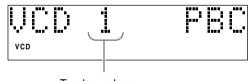


Track number

- When playing an SVCD, the SVCD indicator lights instead of the VCD indicator.
- PBC (Play Back Control): A signal recorded in a VCD (version 2.0) for controlling playback. It is possible to enjoy interactive software or software with a search function using a menu screen recorded in a PBC compatible VCD. To play a disc with the PBC function OFF, carry out the following operations.
 - Designate the track number using the number buttons while the disc is stopped.
 - Designate the track number using ►►I while the disc is stopped, and then press DVD/CD ►.
- Press RETURN to go back to the upper layer during the PBC playback of a VCD or SVCD.

Ex.: When a CD is played

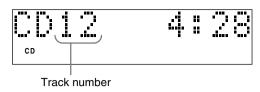

Ex.: When an MP3/WMA file is played

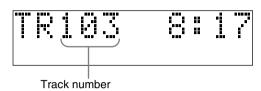


To switch the display


Press **DISPLAY**.

Each time you press the button, the display indication changes temporarily as follows:


For DVD VIDEO

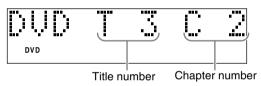

For DVD AUDIO

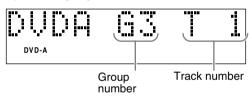


For MP3/WMA

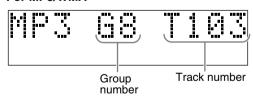

For SVCD/VCD/CD

The clock time indication appears on the display window.

- Before setting the clock (page 34), "AM 12:00" appears.
- When the unit is turned off, pressing DISPLAY turns off the clock indication to save the power consumption.

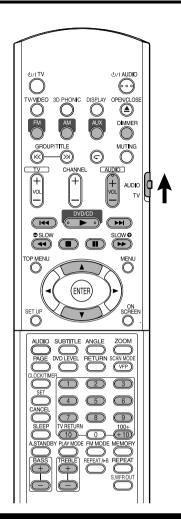

Select what you want to play by using the number buttons



NOTE

- Set the remote control mode selector to AUDIO before using the number buttons.
- For a VCD or SVCD, this operation can be carried out when the disc is stopped, or during playback without the PBC function.
- For a DVD AUDIO, CD, MP3/WMA or JPEG, this operation can also be carried out when the disc is stopped.
- This operation may not be carried out for some discs.

Designate the chapter number or track number to play during playback.

 Refer to "How to use the number buttons" on page 15.

To stop playback



Press ■ during playback.

To pause playback



Press II during playback.

To start normal playback again, press DVD/CD ▶.

- For JPEG slide-show, pressing DVD/CD ► starts playback from the next file.
- It is not possible to pause by pressing II on the main unit during JPEG disc slide-show.

To advance picture frame-by-frame



Press II during pause.

• Each time you press the button, picture will be advanced frame-by-frame.

Fast reverse/Fast forward search



Press **◄** or **▶** during playback.

Each time you press the button, the speed increases (\times 2, \times 5, \times 10, \times 20, \times 60). To restore the normal speed, press DVD/CD \blacktriangleright .

- Fast reverse/Fast forward search cannot be carried out for MP3, WMA, and JPEG.
- For a DVD VIDEO, VCD or SVCD, no sound comes out during Fast reverse/Fast forward search.
- For a CD or DVD AUDIO, sound is intermittent during Fast reverse/Fast forward search.

Playing back from a position 10 seconds before (One Touch Replay)



Press \subset during playback.

NOTE

- · This operation may not be carried out for some
- It is not possible to go back to the previous title.

Slow Motion Playback



pause.

- Each time you press the button, the playback speed increases (×1/32, ×1/16, ×1/8, ×1/4, ×1/
- Press DVD/CD ➤ to start normal playback again.

NOTE

- · No sound will be produced.
- · The picture motion in the reverse direction may not be smooth.
- · For a VCD or SVCD, Slow Motion Playback can be carried out in the forward direction only.

Skip to the beginning of the selection







DVD DVD VCD SVCD C D MP3 JPEG

Press | ◀ or ▶ b | during playback*.

- Press ►►I to skip the next chapter or track.
- Press I◄◄ once to skip back to the beginning of the chapter or track currently being played (except for JPEG).
- Press GROUP/TITLE ≫ or ₭ to select the title
- During playback of a JPEG disc, press ►►I or cursor ▼ to play the next file, or press I◄◄ or cursor \(\Lambda \) to play the previous file.

NOTE

- For a VCD or SVCD, this operation can be carried out during playback without the PBC function.
- Except for a DVD VIDEO, this operation can also be carried out while the disc is stopped.
- This operation may not be carried out for some discs.

How to use the number buttons

Ex.:

5: 5

15: (+10) → (5)

20: (+10) → (10)

25: $(+10) \rightarrow (+10) \rightarrow (5)$



Guide icons displayed on the TV screen (On-screen guide)



: Plav



: Pause





: Fast reverse/Fast forward search



: Slow Motion Playback (reverse/ forward directions)



: Containing multi-angle views (page 24)



Containing multi-audio languages (page 24)



: Containing multi-subtitle languages (page 24)




: The disc cannot accept the operation you have attempted.

Playing audio/video files

To change the brightness of the display window (DIMMER)

Press DIMMER repeatedly.

• Each time you press the button, the dimmer mode changes as follows:

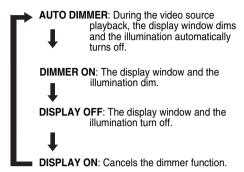

 When the unit is turned off, pressing DISPLAY turns off the clock indication to save the power consumption.

The items above can be carried out for all sources.

Adjusting the volume

Press AUDIO VOL +/-.

NOTE

The volume can be also adjusted by turning the VOLUME control on the main unit.

Adjusting sound quality


Bass: Press BASS +/-.
Treble: Press TREBLE +/-.

• Adjustable range: -5 to +5

Turning off the sound temporarily (MUTING)

Press MUTING.

- No sound will come out from the speakers, headphones and the subwoofer.
- Press MUTING again to restore the sound.
 When the power is turned off once and turned on again, the sound will be restored.

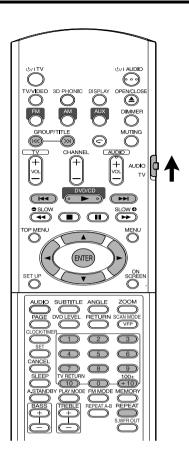

NOTE

Set the remote control mode selector to AUDIO before using the number buttons.



Playback

MP3 JPEG

Display of an MP3/WMA disc is described here as an example.

For a JPEG disc, read "track" as "file".

NOTE

When playing a disc containing both MP3/WMA and JPEG files, set one of them to be played (page 29).

1 Load a disc.

Album

Vature

Current group

Current group /total Playback mode (PROGRAM, group number RANDOM, REPEAT) Elapsed playing time of Tag information (for current track (for MP3/ MP3/WMA) WMA) PROGRAM REPEAT STEP TIME 00:02:15 FILE 01. Cloudy.mp3 02. Fair.mp3 Red 03. Fog.mp3 Green 04. Hail.mp3 05. Indian summer.mp3 06. Rain.mp3 Title 07. Shower.mp3 08. Snow.mp3 Weathe Artist 09. Thunder.mp3 10. Typhoon.mp3

Current track (file) / total track (file) number on disc number on current group

11. Wind.mp3

12. Winter sky.r p3

Current track

Playback status

- 2 Press cursor ▲/▼ to select a group.
- 3 Press cursor ► to move to the track list.
 - Press cursor

 to go back to the group list.
- 4 Press cursor ▲/▼ to select a track.

5 Press DVD/CD ▶ or ENTER.

NOTE

- GROUP/TITLE K<, ≫ can also be used in Step 2.
- The number buttons can also be used in Step 4. In this case, Step 5 is not needed. (For how to use the number buttons, refer to page 15).
- I◄◄ or ►►I can also be used in Step 4. In this case, Step 5 is not needed.

Repeat playback

MP3 WMA JPEG

1 Press REPEAT.

• Each time you press the button, the Repeat mode and its indication change as follows:

Repeat items	On the TV	On the display window
Current track (MP3/WMA only)	REPEAT TRACK	REP TRK ⊊1
Current group	REPEAT GROUP	REP GRP ←
Entire disc	REPEAT ALL	REP ALL all⊊
Cancel	No indication	REP OFF
Current track during Program/ Random play (MP3/WMA only)	REPEAT STEP	REP STEP
All tracks during Program/Random play (MP3/WMA only)	REPEAT ALL	REP ALL

2 Press DVD/CD ▶.


NOTE

- The Repeat types can be changed during playback.
- The Repeat mode will be automatically canceled if there is a file that cannot be played (page 3).

Slide-Show Playback JPEG

- In Step 5, for a JPEG disc, when DVD/CD ➤ is pressed, files will be continuously played from the selected file (Slide-Show Playback), and when ENTER is pressed, only a selected file will be played.
- Display time for a file in Slide-Show Playback is about 3 seconds.
- When all files are played through, the playback will be automatically stopped.

Resume Playback

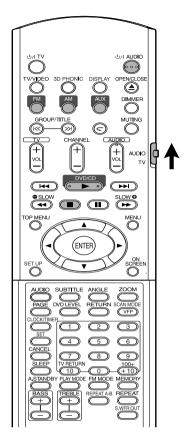

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



DVD DVD VCD SVCD

This system can store the stop point, and when you start playback again by pressing DVD/CD ► (even while on standby), it starts from the position where you have stopped—Resume Play. The RESUME indicator lights on the display window when you stop playback.

How to suspend playback

Perform any of the following operations during playback.

Press ■ once.*

Press 也/ AUDIO to turn off the power.

Change the source to FM, AM or AUX.*


* Even if the power is turned off by pressing U/I AUDIO after this, the position where playback has been stopped will be stored.



To start playback from the stored position

Press DVD/CD ▶.

- This function does not work in Program Playback or Random Playback.
- The position where playback starts again may be a little different from the stopped position.
- When a disc menu is displayed, the Resume function may not work.
- The audio language, the subtitle language and the angle at that time are stored as well as the stopped position.
- The stored position will be cleared if the disc tray is opened. Further, if ■ is pressed during playback, "RESUME" will be displayed. If ■ is pressed again, the stored information will be cleared.
- At the time of purchase, Resume is set to ON. Resume can be set to OFF (page 30).

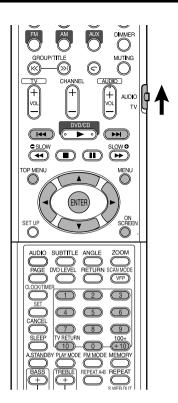

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



Select the scene from the menu

DVD DVD VCD SVCD

- Press MENU or TOP MENU while the disc is stopped or during playback¹.
 - The disc menu screen will be displayed.
 - Only TOP MENU can be used for DVD AUDIOs.
- 2 Press cursor ▲/►/▼/◄ (only for a DVD VIDEO or DVD AUDIO) or the number buttons to select the scene to be played.
 - Refer to "How to use the number buttons" (page 15).
 - When the menu screen has a couple of pages, press | ◄◄ or ►► | to change the page (only for a VCD and SVCD).
- 3 Press ENTER.

NOTE

- *1 For a VCD and SVCD, this operation can be carried out only when the PBC function is off.
- This operation cannot be carried out for a disc without a menu screen.
- Playback may start for some discs without pressing ENTER.

Designate the time (Time search)



1 Press ON SCREEN twice during playback².

The menu bar will be displayed (page 28).

- 2 Press cursor ◀ /► to select ④→.
- 3 Press ENTER.
- 4 Input the time*3 using the number buttons (1-9, 0).

Ex.: When you want to play a DVD VIDEO from the position of (0 hour) 23 minutes 45 seconds, press the buttons in the order:



If you input wrong numbers, press cursor

to delete the numbers and re-input.


5 Press ENTER.

To delete the menu bar, press ON SCREEN.

- This function does not work for a DVD VIDEO with no time information recorded.
- This function does not work during Program or Random Playback.
- *2 For a VCD and an SVCD, the operation can be carried out when the disc is stopped or during playback without the PBC function.
- *3 Time search for a DVD VIDEO is from the beginning of the title, for a DVD AUDIO from the beginning of the track being played. Time search for a VCD, an SVCD and a CD is as follows:
- When the disc is stopped, time search is from the beginning of the disc.
- When the disc is being played, time search is within the track currently being played.

Program Playback/Random Playback



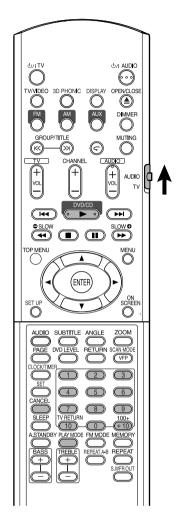

NOTE


Set the remote control mode selector to **AUDIO** before using the number buttons.



Play the disc in the desired order (Program Playback)

It is possible to program a maximum of 99 chapters or tracks. The same chapter or track can be programmed more than once.

1 While the disc is stopped, press PLAY MODE repeatedly to display "PRGM." on the display window on the main unit.

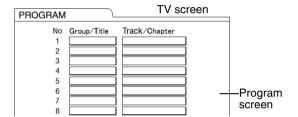

2 Create a program following the description on the TV screen.

Refer to "How to use the number buttons" (page 15).

- The input content varies depending on the disc type.
 - DVD VIDEO: Titles and chapters
 - VCD, SVCD, CD: Tracks
 - DVD AUDIO, MP3/WMA:

Groups and tracks

- To select a DVD AUDIO bonus group, carry out the operations of "Playing the Bonus Group" on page 27 in advance to erase the display "BONUS".
- If the input number of chapters or tracks is greater than 99, "MEM FULL" will be displayed.
- In the case of a VCD, SVCD or CD, when the total playback time reaches 9 hours 59 minutes 59 seconds, "--:--" will be displayed on the display window (it is possible to continue programming).

To program on the display window on the main unit, operate as follows:

- (1) Select a title/group using the number buttons.
- (2) Designate a chapter/track number using the number buttons.
 - Refer to "How to use the number buttons" (page 15).
 - The program number will be displayed on the lower display window (Ex.: "P2").
- (3) Repeat the above operations (1) and (2) to complete the program. Then, advance to Step 3.

NOTE

- The group/title number flashes on the display window after making each program step.
- Only for a DVD VIDEO, DVD AUDIO, VCD, or an MP3/WMA: If you press ENTER instead of designating a track/chapter number, "ALL" is displayed and all of the tracks/chapters in the selected group/title are programmed.

3 Press DVD/CD ►.

- To resume normal playback, press PLAY MODE repeatedly to show the playback indication on the display window on the main unit while the disc is stopped. The program content will not be erased.
- The following operations erase the program content:
 - Press CANCEL repeatedly (Programs will be erased one by one)
 - Press while the disc is stopped
 - · Open the disc tray
 - Turn off the power

Playing the disc in a random order (Random Playback)


- 1 Press PLAY MODE repeatedly to display "RANDOM" on the display window on the main unit while the disc is stopped.
 - "RANDOM" will also be displayed on the TV screen.

2 Press DVD/CD ▶.

- The same chapter or track will not be played twice.
- To resume normal playback, press PLAY MODE repeatedly to show the playback indication on the display window on the main unit while the disc is stopped.
- Random Playback will also be canceled by carrying out the following operations:
 - Open the disc tray
 - Turn off the power
- The previous track will not be returned to even if I◄◄ is pressed repeatedly during Random Playback (the beginning of the current chapter or track will be returned to).

Repeat Playback

Refer to page 17 for Repeat Playback of MP3 and JPEG files.

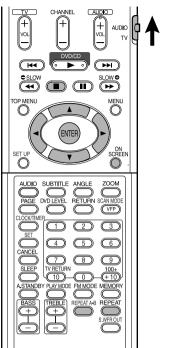

Playing the title/chapter/ group/track/all tracks repeatedly (REPEAT)



1 Press REPEAT during playback.

 Each time you press the button, the Repeat mode and its indication change as follows:

For DVD VIDEO

Repeat items	On the TV	On the display window
Current chapter	СНАР	REP CHAP ⊊1
Current title	TITLE	REP_TTL
Cancel	OFF	REP OFF

For DVD AUDIO

Repeat items	On the TV	On the display window
Current track	TRACK	REP TRK
Current group	GROUP	REP GRP
Cancel	₾ OFF	REP OFF

For CD/VCD/SVCD

Repeat items	On the TV	On the display window
Current track	TRACK	REP TRK
All tracks	(<u>L</u>)ALL	REP ALL
Cancel	OFF	REP OFF

NOTE

- For a VCD and SVCD, the operation can be carried out only when the disc is stopped or during playback without the PBC function.
- It is possible to set Repeat mode on the menu bar.
 For how to operate, refer to "Playing the designated part repeatedly (A-B Repeat Playback)" (page 23).
- For a DVD VIDEO and DVD AUDIO, if the source is switched to FM, AM or AUX, the Repeat mode will be canceled.

Repeat Playback during Program or Random Playback

Repeat items	On the TV	On the display window
Current chapter/ track	STEP or REPEAT STEP	REP STEP
All tracks during Program/Random play	CALL or REPEAT ALL	REP ALL
Cancel	OFF or no indication	REP OFF

Playing the designated part repeatedly (A-B Repeat Playback)



1 Press ON SCREEN twice during playback.

The menu bar (page 28) will be displayed.


- 2 Press cursor <-/>
 ✓/► to select
 color: |.
- **3** Press ENTER.
- 4 Press cursor ▲/▼ to display

A−B .

Other Repeat modes can be selected here. For other Repeat modes, refer to "Playing the title/chapter/group/track/all tracks repeatedly (REPEAT)" (page 22).

- 5 Press ENTER at the start point of the part to be repeated (designating A point).
 - The icon on the menu bar will be 🖒 🕒 .
- 6 Press ENTER at the end point of the part to be repeated (designating B point).
 - The icon on the menu bar will be <u>A-B</u> and the part between A and B points will be played repeatedly.
 - A-B Repeat Playback will be canceled by carrying out the following operations:
 - Press ■.
 - Select 🖒 A-B | and press **ENTER** twice.

- A-B Repeat Playback is possible only within the same title or track. A-B Repeat Playback cannot be carried out during PBC playback, Program Playback, Random Playback and Repeat Playback.
- You can do the A-B Repeat Playback using the REPEAT A-B button on the remote control.

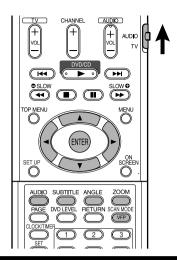

Selecting the subtitles

DVD SVCD DVD AUDIO

(only for moving image)

1 Press SUBTITLE during playback of a disc containing subtitles in several languages.

Ex.:



 Each time you press the button, the subtitle will be alternated between ON and OFF.

2 Press cursor ▲/▼ to select a subtitle language.

- For a language code such as "AA", refer to "Language codes" (page 38).
- The manner of displaying subtitle languages may be different depending on the disc.
- **3** Wait for a few seconds or press ENTER to go off the window.

NOTE

- It is also possible to operate by using the menu bar (page 28).
- For an SVCD, each time you press SUBTITLE in Step 1, the subtitle type and OFF will be alternated.

Selecting the audio language

DVD DVD VCD SVCD

1 Press AUDIO during playback of a disc containing several audio languages.

Ex.:



- Each time you press the button, the audio language will be alternated. Also, the audio language can be changed by pressing cursor ▲/▼.
- For a language code such as "AA", refer to "Language codes" (page 38).
- "ST", "L" and "R" displayed when playing a VCD or SVCD respectively represent "Stereo", "Left sound" and "Right sound".
- **2** Wait for a few seconds or press ENTER to go off the window.

NOTE

It is also possible to operate by using the menu bar (page 28).

Selecting a view angle

DVD DVD VIDEO AUDIO

(only for moving image)

1 Press ANGLE during playback of a scene containing multi-view angles.

Ex.:



- Each time you press the button, the angle will be alternated. Also, the angle can be changed by pressing cursor ▲/▼.
- **2** Wait for a few seconds or press ENTER to go off the window.

NOTE

It is also possible to operate by using the menu bar (page 28).

Enlarging the picture



DVD VCD SVCD DVD JPEG





(only for moving image)

- Press ZOOM during playback or while paused.
 - · Each time you press the button, the picture magnification will be changed.
 - (For a JPEG) You cannot change the picture magnification during slide-show playback.
- 2 Select the portion you want to see by using cursor $\triangleright/\triangle/\blacktriangleleft/\blacktriangledown$.
 - To resume normal playback, select "ZOOM OFF" in Step 1.

Adjusting the picture









Press VFP during playback or while paused.

The current setting will be displayed on the TV screen.



- GAMMA: Adjust this if the neutral color is bright or dark. The brightness of dark and bright portion is maintained.
- BRIGHTNESS: Adjust this if the picture is bright or dark on the whole.
- . CONTRAST: Adjust this if the far and near position is unnatural.
- **SATURATION:** Adjust this if the picture is whitish or blackish.
- TINT: Adjust this if the appearance of flesh tone is unnatural.
- SHARPNESS: Adjust this if the picture is indistinct.


2 Press cursor <-/> ✓/> to select VFP

- It is recommended to select "NORMAL" usually, or "CINEMA" in a dark room. When either "NORMAL" or "CINEMA" is selected, go to Step 7.
- · When either "USER 1" or "USER 2" is selected, the adjustment can be carried out in detail in the operations after Step 3.
- 3 Press cursor **▲/▼** to select an item to be adjusted.
- 4 Press ENTER.



- 5 Press cursor **△**/**▼** to change the value.
- 6 Press ENTER. To adjust other items, go back to Step 3.
- Press VFP to go off the window.

- If no operation is made for several seconds during the procedure, the settings made so far will be automatically stored.
- "VFP" is an abbreviation of "Video Fine Processor".

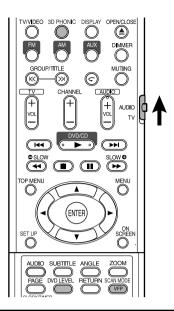

Creating realistic sound (3D PHONIC)











The two speakers produce an effect resembling surround-sound.


Press 3D PHONIC during playback.

Ex.:

TV screen



· Each time you press the button, the 3D PHONIC will be alternated as follows:

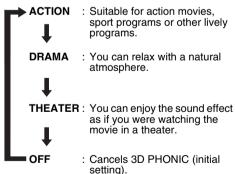

· While 3D PHONIC is activated, "3D PHONIC" appears and the 3D PHONIC indicator lights on the display window.

NOTE

- 3D PHONIC is effective for the speakers and headphones.
- When noise is produced or sound is distorted, set 3D PHONIC to "OFF".
- You cannot operate some DVD AUDIO discs.

Adjusting playback level (DVD LEVEL)

The audio of a DVD VIDEO may be recorded at a lower level (volume) than for other types of disc. If the difference is not to your liking, adjust the DVD Level

Press DVD LEVEL during playback.

- Each time you press the button, the level will be alternated among "NORMAL", "MIDDLE" and "HIGH".
- · Select the level while listening to the sound played.

NOTE

- DVD Level is effective only for playback of a DVD
- Even if the DVD Level is changed, the output level from the digital audio output terminal will not be changed.

Enjoying better pictures (SCAN MODE)

In the Progressive mode, better pictures can be enjoyed.

CAUTION

- In order to enjoy pictures in the Progressive mode, the following requirements should be met:
 - There must be a component video input terminal on the TV set connected to the main unit.
 - The main unit and the TV set must be connected using a component video cord (page 11).

When the above requirements are not satisfied, leave the main unit in the Interlace mode. If the Progressive mode is set, pictures may be distorted.

Press and hold SCAN MODE for 2 seconds when there is no disc loaded or while the disc is stopped.

• Each time you press and hold the button, the scan mode alternates between the "PROGRESSIVE" mode and the "INTERLACE" mode.

NOTE


Progressive mode:

All scanned lines will be displayed at once. Pictures of higher resolution than those in the Interlace mode can be realized.

Interlace mode:

This is a conventional image method. Half of the scanned lines displayed in the Progressive mode will appear, alternating with the other half.



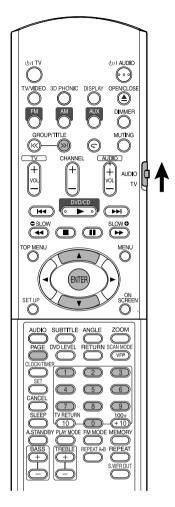

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



Playing the Bonus Group

There are some DVD AUDIO discs with a special group, called "Bonus Group", recorded.

NOTE

This operation can be carried out when "BONUS" is lit on the display window on the main unit.

1 Press GROUP/TITLE ≫ repeatedly during playback to select a bonus group.

"KEY____" appears on the TV screen, and on the display window on the main unit.

- The bonus group is usually recorded as the last group.
- 2 Press the number buttons to enter a pin code (4 digits).

The method of getting a pin code may be different depending on the disc.

- **3** Press ENTER.
 - When a correct pin code is entered, "BONUS" disappears and the playback of the bonus group starts.
 - If an incorrect pin code is entered, try entering a correct pin code again.

Browsable Still Pictures (B.S.P.)

There are some DVD AUDIO discs with still pictures recorded. Among the still pictures, there are pictures called B.S.P. (Browsable Still Pictures). With these pictures, it is possible to switch a picture as if turning over pages.

NOTE

This operation can be carried out when "B.S.P." is lit on the display window on the main unit.

1 Press PAGE during playback.

Each time you press the button, the still picture will be switched over. It is also possible to switch the picture using cursor $\blacktriangle/\blacktriangledown$.


Ex.:



2 Wait for a few seconds or press ENTER to go off the window.

Using the menu bar



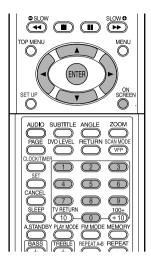

NOTE

- Set the remote control mode selector to AUDIO before using the number buttons.

 TV
- This operation can be carried out when there is a disc loaded. There are some functions that may not work while the disc is stopped.

1 Press ON SCREEN twice.

The status bar and the menu bar will appear on the TV screen.



The above is an example for a DVD VIDEO.


2 Press cursor **◄/►** to select an item to be operated.

3 Press ENTER.

- The selected function can be set. For the setting content, refer to the following "Functions list".
- The currently active function shows.
- To delete the menu bar, press ON SCREEN.


Functions list

For the functions with no special description for the operations, press cursor ▲/▼ to select, and press ENTER to determine.

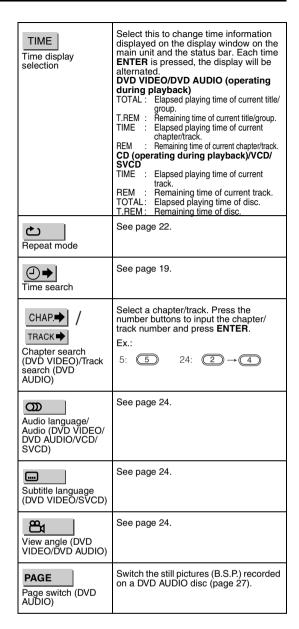


Information displayed on the status bar

DVD VIDEO/DVD AUDIO (the example below is for a DVD VIDEO)

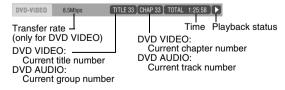


VCD/SVCD/CD (the example below is for a CD)

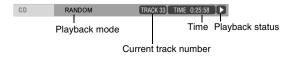

NOTE

The playback status mark has the same meaning of the mark on the On-screen guide (page 15).



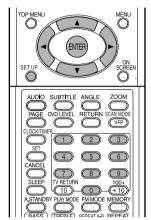

The initial settings of the system can be changed according to the environment the system is used in.


NOTE

- Set the remote control mode selector to
 AUDIO before using the number buttons.

 AUDIO before using the number buttons.
- The top and bottom of the preference screen may not be displayed on a wide TV. Adjust the picture size on the TV.

Basic operations

- 1 Press SET UP while the disc is stopped or no disc is loaded ("NO DISC" is displayed).
 - The following screen will be displayed on the TV.

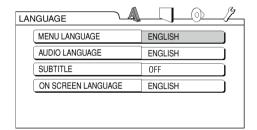

 Proceed with operations by following the description on the TV screen.



LANGUAGE

NOTE

 If the selected language is not recorded on the disc, the optimum language set for the disc will be displayed. • For a language code such as "AA", refer to the "Language codes" (page 38).

Items	Contents
MENU LANGUAGE	Select the language for the DVD VIDEO menu.
AUDIO LANGUAGE	Select the audio language for the DVD VIDEO.
SUBTITLE	Select the subtitle language for the DVD VIDEO.
ON SCREEN LANGUAGE	Select the language displayed on the preference screens.

PICTURE

Items	Contents (: initial setting)
MONITOR TYPE	Select a display method suitable for your TV. 16:9: Select this when the aspect ratio of your wide TV is fixed to 16:9 (when playing a DVD VIDEO recorded at 4:3, the system automatically adjusts the screen width of the output signal). 4:3 LB (Letter Box): Select this when the aspect ratio of your TV is conventional 4:3. While viewing a wide screen picture, the black bars appear on the top and bottom of the screen. 4:3 PS (Pan Scan): Select this when the aspect ratio of your TV is conventional 4:3. While viewing a wide screen picture, the left and right edges of the picture will not be shown on the screen. (If the disc is not compatible with Pan Scan, the picture will be displayed at the Letter Box ratio.)
PICTURE SOURCE	Select an item suitable to the video source. AUTO: The video source type (a video or film) is automatically selected. FILM: Select this item when you want to view a film or video recorded with the progressive scan method. VIDEO: Select this item when you want to view a normal video.
SCREEN SAVER	Select the Screen Saver mode between ON / OFF (Screen Saver activates when there is no operation made for about 5 minutes since a still picture was last displayed).
FILE TYPE	If there are both MP3/WMA and JPEG files on a disc, you can select which files to play. AUDIO Select this item when you want to play back MP3/WMA files. STILL PICTURE: Select this item when you want to play back JPEG files.

0

AUDIO

Items	Contents (: initial setting)
DIGITAL AUDIO OUTPUT	Select an output signal type from the following in accordance with the device connected to the digital audio output terminal (AV amplifier, etc.). (See the list below for the preference items and output signal.)
	PCM ONLY: Device corresponding only to linear PCM.
	DOLBY DIGITAL/PCM: Dolby digital decoder or a device having the same function.
	STREAM/PCM: DTS/Dolby digital decoder or a device having the same function.
DOWN MIX	Switch signal from the digital output terminal of the DVD VIDEO according to the connected device. Select this when Digital Audio Output is set to "PCM ONLY".
	DOLBY SURROUND: A Dolby Pro Logic decoder-built-in device.
	STEREO: An ordinary device.
	When 3D PHONIC is activated, Down Mix does not work.
D (Dynamic). RANGE COMPRESSI ON	To make adjustments for the difference between a high volume and a low volume when playing back with low volume (only for a DVD recorded with Dolby digital).
	AUTO: D. Range Compression automatically works.
	ON: D. Range Compression always works.



Items	Contents (: initial setting)
RESUME	Select ON /OFF. (page 18)
ON SCREEN GUIDE	Select ON /OFF. (page 15)
PARENTAL LOCK	Set the Parental Lock function to cut off violent scenes or replace the scenes with others. (This is effective only for discs equipped with the Parental Lock function.)
	COUNTRY CODE (page 31) Select your country.
	SET LEVEL: The restriction is stricter as the number becomes smaller. "NONE" is no restriction.
	PASSWORD (essential): Enter four-digit number as your password using the number buttons (1-9, 0) every time. (Enter "8888" if you forget your password.) The password is required at the time of playback.
	If you enter a wrong password three times, "EXIT" will be automatically selected.

List of relationships of DIGITAL AUDIO OUTPUT preference items and output signal

Playback disc	DIGITAL AUDIO OUTPUT		
Playback disc	Stream/PCM	DOLBY DIGITAL/PCM	PCM only
48 kHz, 16/20/24 bits Linear PCM DVD VIDEO 96 kHz linear PCM DVD VIDEO	48 kHz, 16 bits stereo linear PCM		
48/96/192 kHz, 16/20/24 bits linear PCM DVD AUDIO			
44.1/88.2/176.4k Hz, 16/20/24 bits linear PCM DVD AUDIO	44.1 kHz, 16 bits stereo linear PCM		
DTS DVD VIDEO	DTS bit stream 48 kHz, 16 bits stereo linear PCM		
DOLBY DIGITAL DVD VIDEO/ DVD AUDIO	DOLBY DIGITAL bit stream 48 kHz, 16 bits stereo linear PCM		
CD/VCD/SVCD	44.1 kHz, 16 bits stereo linear PCM/48kHz, 16 bits linear PCM		
DTS CD	DTS bit stream	44.1 kHz, 16 k	oits linear PCM
MP3/WMA disc	32/44.1/48 kHz. 16 bits stereo linear PCM		

- For a DVD VIDEO: There is a 20 bit or 24 bit output for DVD VIDEO without content protection set.
- For a DVD AUDIO: There is no output for DVD AUDIO with content protection set.


AD	Andorra
AE	United Arab Emirates
AF	Afghanistan
AG	Antigua and Barbuda
Al	Anguilla
AL	Albania
AM	Armenia
AN	Netherlands Antilles
AO	Angola
AQ	Antarctica
AR	Argentina
AS	American Samoa
AT	Austria
AU	Australia
AW	Aruba
AZ	Azerbaijan
BA	Bosnia and
5, (Herzegovina
BB	Barbados
BD	Bangladesh
BE	Belgium
BF	Burkina Faso
BG	Bulgaria
BH	Bahrain
BI	Burundi
BJ	Benin
BM	Bermuda
BN	Brunei Darussalam
ВО	Bolivia
BR	Brazil
BS	Bahamas
BT	Bhutan
BV	Bouvet Island
BW	Botswana
DVV	
BY	Belarus
BY	Belarus Belize Canada
BY BZ	Belarus Belize
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands
BY BZ CA	Belarus Belize Canada Cocos (Keeling) Islands Central African
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic
BY BZ CA CC CF	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo
BY BZ CA CC CF CF	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland
BY BZ CA CC CF CG CH CI	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire
BY BZ CA CC CF CG CH CI CK	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands
BY BZ CA CC CF CG CH CI CK CL	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile
BY BZ CA CC CF CG CH CI CK CL	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon
BY BZ CA CC CF CG CH CI CK CL CM CN	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China
BY BZ CA CC CF CG CH CI CK CL CM CN CO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba
BY BZ CA CC CF CG CH CI CK CL CM CO CR CO CR CU	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde
BY BZ CA CC CF CG CH CI CK CL CM CO CR CO CR CU CV CX	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island
BY BZ CA CC CF CG CH CI CK CL CM CO CO CR CO CC CY CY	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island
BY BZ CA CC CF CG CH CI CK CL CM CO CR CO CR CU CY CX CY CZ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CY CZ DE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ DK	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ DK DM	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CY CY CZ DE DJ DK DM DO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CY CZ DE DJ DK DM DO DZ EC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador
BY BZ CA CC CF CG CH CI CK CL CM CO CY CZ DE DJ DK DM DO DZ EC EE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ EC EE EG	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia
BY BZ CA CC CF CG CH CI CK CL CM CO CY CZ DE DJ DK DM DO DZ EC EE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia

ES	Spain
ET	Ethiopia
FI	Finland
FJ	Fiji
FK	Falkland Islands
111	
	(Malvinas)
FM	Micronesia
	(Federated States of)
FO	Faroe Islands
FR	France
FX	France, Metropolitan
GA	Gabon
GB	United Kingdom
GD	Grenada
GE	Georgia
GF	French Guiana
GH	Ghana
GI	Gibraltar
GL	Greenland
GM	Gambia
GN	Guinea
GP	Guadeloupe
GQ	Equatorial Guinea
GR	Greece
GS	South Georgia and
	the South Sandwich
	Islands
GT	Guatemala
GU	
	Guam
GW	Guinea-Bissau
GY	Guyana
HK	Hong Kong
HM	Heard Island and
	McDonald Islands
HN	Honduras
HR	Croatia
HT	Haiti
HU	Hungary
ID	Indonesia
IE	Ireland
IL	Israel
IN	India
10	British Indian Ocean
	Territory
IQ	Iraq
IR	Iran (Islamic Republic of)
IS	Iceland
IT	Italy
JM	Jamaica
JO	Jordan
JP	Japan
KE	Kenya
KG	Kyrgyzstan
	, ,,
KH	Cambodia
KI	Kiribati
KM	Comoros
KN	Saint Kitts and Nevis
KP	Korea, Democratic
	People's Republic of
KR	Korea, Republic of
KW	Kuwait
KY	Cayman Islands
KZ	Kazakhstan
LA	Lao People's
	Democratic Republic
LB	Lebanon

LC	Saint Lucia
LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab
	Jamahiriya
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macau
MP	Northern Mariana
	Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway
NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama
PE	Peru
PF	French Polynesia
PG	Papua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
	Saint Pierre and
PM	
DVI	Miquelon Pitcairn
PN	
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Réunion
RO	Romania
RU	Russian Federation
RW	Rwanda
SA	Saudi Arabia
SB	Solomon Islands

SD	Sudan	
SE	Sweden	
SG	Singapore	
SH	Saint Helena	
SI	Slovenia	
SJ	Svalbard and Jan	
30	Mayen	
SK	Slovakia	
SL	Sierra Leone	
SM	San Marino	
SN	Senegal	
SO	Somalia	
SR	Suriname	
ST	Sao Tome and Principe	
SV	El Salvador	
SY	Syrian Arab Republic	
SZ	Swaziland	
TC	Turks and Caicos	
	Islands	
TD	Chad	
TF	French Southern	
"	Territories	
TG	Togo	
TH	Thailand	
TJ	Tajikistan	
TK	Tokelau	
TM	Turkmenistan	
TN	Tunisia	
ТО	Tonga	
TP	East Timor	
TR	Turkey	
TT	Trinidad and Tobago	
TV	Tuvalu	
TW	Taiwan	
TZ	Tanzania, United	
	Republic of	
UA	Ukraine	
UG	Uganda	
UM	United States Minor	
	Outlying Islands	
US	United States	
UY	Uruguay	
UZ	Uzbekistan	
VA	Vatican City State	
	(Holy See)	
VC	Saint Vincent and the	
	Grenadines	
VE	Venezuela	
VG	Virgin Islands (British)	
VI	Virgin Islands (U.S.)	
VN	Viet Nam	
VU	Vanuatu	
WF	Wallis and Futuna	
	Islands	
WS	Samoa	
YE	Yemen	
YT	Mayotte	
YU	Yugoslavia	
ZA	South Africa	
ZM	Zambia	
ZR	Zaire	
ZW	Zimbabwe	

Listening to a radio broadcast

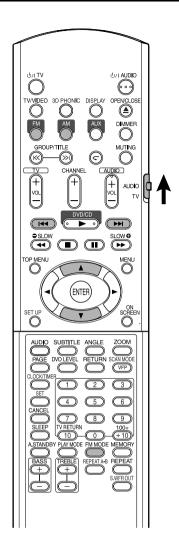

NOTE

• Set the remote control mode selector to **AUDIO** before using the number buttons.



You can tune in to FM or AM.

Selecting a station

- 1 Press FM or AM.
- 2 Press ►►//◄◄ to select the station (frequency).

Automatic tuning:

Hold down ►►I/I◄◄ until the system starts searching, and then release the button. (The AUTO indicator lights while searching.) When a station of sufficient signal strength is tuned in to, the system stops searching automatically.

To stop searching manually, press ▶►I/I◄◄.


Manual tuning:

Each time you press ►►\/I◄◄, the frequency changes.

 When an FM stereo program is received, the ST (Stereo) indicator lights.

NOTE

If the stereo FM program currently tuned in to is noisy, you can improve the reception by pressing FM MODE to switch to the monaural mode. If you press FM MODE again, or tune in to another station, the receiving mode returns automatically to the stereo mode.

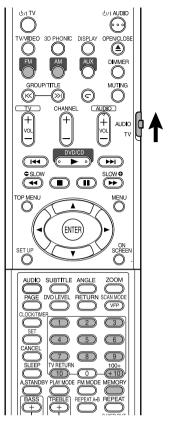

Presetting stations in the system allows you to easily tune in to a station.

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



Presetting stations

The system stores up to 30 FM stations and up to 15 AM stations.

- 1 Select a station you want to store (page 32 for how to select).
- **2** Press MEMORY.

"MEMORY" is flashing on the display window for a while.

- 3 Select the number you want to store by pressing number buttons while "MEMORY" is flashing.
 - You can also select the number by using the number buttons.
 - Refer to "How to use the number buttons" (page 15).
- 4 Press MEMORY while the selected number is flashing.

"STORED" appears on the display window and the selected station is stored.

NOTE

- Storing a new station to a used number erases the previously stored station.
- After storing new stations, do not unplug the AC power cord to turn off the system. If you do so, the new preset stations will be cleared.


Tuning in to a preset station

- 1 Press FM or AM to select either FM or AM.
- 2 Press the number buttons to select the memory number of a station you want to tune in to.

Refer to "How to use the number buttons" (page 15).

You can also select by pressing ►►/◄<.


Listening to the sound of other audio device

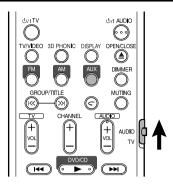

Connect the other audio device to this system in advance (page 10).

- **1 Press AUX.**The source changes to AUX.
- 2 Play the other audio device.
 For details, refer to the manual of the device connected.
- Adjust the volume and the sound quality of the system (page 10).

Setting the Various Timer

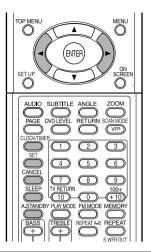

Setting the built-in clock

Without setting the built-in clock, you cannot use any timers.

- To exit from the clock setting, press CLOCK/ TIMER as required.
- To correct a misentry during the procedure below, pressing CANCEL can return to the previous step.
- 1 Press CLOCK/TIMER.



- If you have already adjusted the clock before, press the button repeatedly until the clock time starts flashing.
- 2 Press cursor ►/◄ to adjust the hour, then press SET.
- 3 Press cursor ►/◄ to adjust the minute, then press SET.

Now the built-in clock starts to work.

Setting the daily timer

Using the daily timer, you can wake up with your favorite song.

- You can store the three daily timer settings; however, you can activate only one of the daily timer
- To correct a misentry during the procedure below, pressing CANCEL can return to the previous step.

How the daily timer works

Once the daily timer has been set, the timer indicator and timer number indicator (1/2/3) are lit on the display window. Daily timer turns on the system at the same time everyday until the timer setting is canceled manually or another daily timer is activated.


When the on-time comes:

The system turns on, tunes in to the last received station or start playback the loaded disc with the volume level set to the preset level. About one hour after the playback starts, the system stops it, and turns off (stand by) automatically.


- The timer setting remains in memory until you can change it.
- Without canceling the daily timer, you can change the source or adjust the volume after the daily timer starts playback.

1 Press CLOCK/TIMER repeatedly to show "DAILY1."

• Each time you press the button, the clock setting changes as follows:

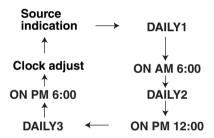

- 2 Press cursor ►/◄ to adjust the hour of the timer-on time, then press SET.
- 3 Press cursor ►/◄ to adjust the minute of the timer-on time, then press SET.
- 4 Repeat step 2 and 3 to set the timer-off time.
- 5 Press cursor ►/◄ to select the playback source, then SET.
 - Each time you press the button, the clock setting changes as follows:

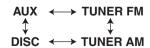

When selecting the tuner, press cursor ►/
 to select a preset channel.

- 6 Press cursor ►/◄ to adjust the volume level, then SET.
- **7** Turn off the system.

To turn off the timer setting

- 1 Press CLOCK/TIMER repeatedly to select the timer setting.
- 2 Press CANCEL to turn off the selected setting.
 - Pressing SET activates the timer setting again.

Auto Standby

If there is no operation for 3 minutes while the disc is stopped, the power will be automatically turned off.

Press A.STANDBY during playback or while the disc is stopped, or no disc is loaded ("NO DISC" appears).

The A.STANDBY indicator lights on the display window on the main unit.

When a stopped state is entered (after playback is finished, for example), the A.STANDBY indicator starts blinking.

This means that the power will be turned off automatically if there is no operation for 3 minutes. And, 10 seconds before the power is turned off, "A.STANDBY" starts flashing.

Releasing Auto Standby

Press A.STANDBY.

"A.STANDBY" will be turned off on the display window on the main unit.

NOTE

When the source is FM, AM or AUX, Auto Standby does not work.

Setting the Various Timer (continued)

Sleep Timer

When the time you specify elapses, the system will be turned off by itself.

Press SLEEP.

Each time you press the button, the time indicated on the display window on the main unit changes (in minutes).

Changing the time

Reselect the time by pressing SLEEP repeatedly.

Confirming the time

Press **SLEEP** once while Sleep Timer is set.

Releasing

Press **SLEEP** repeatedly until "SLEEP OFF" appears.

NOTE

Sleep Timer will also be released when the power is turned off.

Tray Lock

You can lock the disc tray to prevent the disc from being ejected.

Setting

While the system is turned off, press ≜ (Open/Close) with ■ (Stop) on the main unit held. "LOCKED" appears on the display window on the main unit.

Releasing

Carry out the same operations as those for setting. "UNLOCKED" appears on the display window on the main unit. When you encounter a problem that seems to be a fault, check the following points before contacting your JVC service center:

Power source

Power does not come on.

- The power cord is not connected to the main unit or an AC outlet.
 - → Connect the power cord correctly (page 11).

Operation

You cannot operate any button.

 Some specific operations may be inhibited for some discs.

■ The remote control does not work.

- The dry-cell batteries have run out.
 - → Replace the batteries (page 6).

A disc cannot be played back.

- In the case of DVD VIDEO discs
 - → Check the Region Code number of the discs (page 3).
- "NO PLAY" is displayed on the display window

It is not a disc that can be played on this system.

- → Check the disc type (page 3).
- Parental Lock is set (page 30).

About images

■ No picture appears.

- The video cord is not connected correctly.
 - → Page 11
- Both of the component video jack and Svideo jack are connected.
 - → Connect either (page 11).

■ The picture is distorted.

- A VCR is connected between the main unit and the TV set.
 - → Connect the main unit directly to the TV set (page 11).
- Although this system is connected to a non-Progressive TV set, DVD's scan mode is set to "PROGRESSIVE".
 - → Set the scan mode to "INTERLACE" (page 26).

The screen size is abnormal.

- The screen size is set improperly.
 - → Set "MONITOR TYPE" according to the TV set you are using (page 29).

■ The TV screen darkens.

- · "SCREEN SAVER" is set.
 - → If set, press any button (page 29).

■ The screen cannot be switched.

 The Progressive mode is applied only to component video output.

About sound

There is no sound.

- · Speakers are not connected correctly.
 - → Page 9
- · The sound is muted.
 - → Page 16
- "NO AUDIO" is displayed on the display window.

The disc may have been produced through illegal copying.

Confirm at the store where you bought the disc.

■ The sound is weak compared with TV or Video.

- "DVD LEVEL" is set to "NORMAL".
 - \rightarrow Set to other than "NORMAL" (page 26).

■ The sound is distorted.

- The volume is turned up too high.
 - → Turn down the volume (page 16).

No sound comes out of the subwoofer.

- · "SUBWOOFER" is turned off.
 - → Press **S.WFR OUT** to turn on (page 10).

About radio

The sound is noisy while receiving/Receiving is disabled.

- · The antenna is not connected correctly.
 - → Connect the antenna correctly (page 8).

Troubleshooting (continued)

Others

It is not possible to switch audio or subtitles between languages.

- The disc does not contain 2 or more languages.
 - → If only a single language is recorded on the disc, switching to another language is impossible (page 24).

■ No subtitle is displayed.

- The disc does not contain any subtitles.
 - → A DVD VIDEO without subtitles cannot display any subtitles.
- The subtitle language is set to "OFF".
 - → Specify a language (page 29).
- Before or after A point or B point in A-B Repeat Playback, no subtitle may be displayed.

The disc cannot be ejected.

- · Tray Lock is set.
 - → page 36

"LR ONLY" is displayed on the display window (for a DVD AUDIO).

 Because, for the track being played back, down mix is inhibited for multi-channel sound, the sound of L and R is output directly (a normal action).

If the system does not work properly despite correction measures above

Many functions of this system are implemented by microcomputers. If pressing any button does not result in the normal action, disconnect the power plug from the outlet, wait for a while, and reconnect the system.

Language codes

AA Afar MK Macedonian AB Abkhazian ML Malayalam AF Afrikaans MN Mongolian AM Ameharic MO Moldavian AR Arabic MR Marathi AS Assamese MS Malay (MAY) AY Aymara MT Maltese AZ Azebaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Kirundi EL Greek RO Rumanian ED Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HH Hundi SS Siswati HH Hundi SS Siswati HH Hundi SS Siswati HH Croatian TY Trial Interlingua SW Swahili IE Interlingua SW Swahili IE Interlingua TA Tamil II Tigrinya JI Yiddish TK Turkish KK Cambodian TS Sesotho HU Hungarian SU Surdanese KK Gazakh TO Tonga KK Garani SO Somali KK Macedonian TS Sesotho HU Hungarian SU Surdanese HY Armenian SV Swedish IA Interlingua TS Sesotho HU Hungarian TS Sesotho HU Hungarian SU Surdanese HY Armenian TS Sesotho HU Hungarian TG Tajik KK Gazakh TO Tonga KK Gazakh TO Tonga KK Gazakh TO Tonga KK Gazakh TO Tonga KK Kazakh TO Tonga KK Latin WI Vietnamese UN Lingala VO Wolof LT Lithuanian XH Xhosa UZ Uzluu	Code	Language	Code	Language
AB Abkhazian ML Malayalam AF Afrikaans MN Mongolian AM Ameharic MO Moldavian AR Arabic MR Marathi AS Assamese MS Malay (MAY) AY Aymara MT Maltese AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian GD Scots Gaelic SM Samoan GL Galician SN Slowak GA Irish SL Slovenian GU Gujarati SQ Albanian HI Hindi SS Siswati HA Hausa SR Serbian HI Hindi SS Siswati II Indonesian TG Tajik II Interlingua TR Tatar KO Korean (KOR) TW Vietnamese LU Latin Urdu LU Luthuan TT Tatar KK Kazakh TO Tonga KK Kasahmir UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LU Luthuan, Lettish YO Yoruba MG Malayalam MN Monogolian MN Malayanda LD Andro Malayalayaba LD Sudo Volof LT Lithuan, Lettish YO Yoruba MG Malayalayaba ZU Zulu				
AF Afrikaans MN Mongolian AM Ameharic MO Moldavian AR Arabic MR Marathi AS Assamese MS Malay (MAY) AY Aymara MT Maltese AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EL Greek RO Rumanian EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GN Guarani SO Somali GU Gujarati SQ Albanian HH Hindi SS Siswati HH Hindi SS Siswati IR Telagua SW Swahili IE Interlingue TA Tamil IK Inuplak TE Telugu IK Inuplak TE Telu				
AM Ameharic MO Moldavian AR Arabic MR Marathi AS Assamese MS Malay (MAY) AY Aymara MT Maltese AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Pollish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyanwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GU Gujarati SQ Albanian HA Hausa SR Serbian HR Croatian SV Swedish HR Croatian TR Sesotho HU Hungarian SU Sundanese HH Hausa SR Serbian HI Hindi SS Siswati HR Croatian TR SU Sundanese HY Armenian SV Swedish IR Inpiak TE Telugu IR Inginya IR Inginya IR Inginya IR Inginya IR IR Inginya IR I				
AR Arabic MR Marathi AS Assamese MS Malay (MAY) AY Aymara MT Maltese AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian SW Swahili II Interlingua SW Swahili II Interlingua SW Swahili II Interlingua TA Tamil II Tagalog KN Kannada TT Tatar KN Kannada TT Tatar KN Kannada TT Tatar KN Kannada TT Tatar KN Kannada TH Uzbek LA Latin VI Vietnamese LA Latin LA Latin LA Latin LA Latin VI Vietnamese LA Latin LA Latin LA				
AS Assamese MS Malay (MAY) AY Aymara MT Maltese AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EC Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GA Irish SL Slovenian GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian TG Tajik HR Croatian TG Tajik IR Interlingua SW Swahili IE Interlingua SW Swahili IE Interlingua TA Tamil KK Ingarwana KK Azakh TO Tonga KK Sannan KK Azakh TO Tonga KK Sannan KK Azakh TO Tonga KK Si Sangan KK Kazakh TO Tonga KK Karakh UR URUshana KK Kazakh UR URUshana KK Karakh UR URUshana KK Kazakh UR URUshana KK Kazakh UR URUshana KK Kazakh UR URUshana KK Kazakh UR URUshana KK Karakh UR URushana				
AY Aymara MT Maltese AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CO Corsican PS Pashto, Pushto CO Corsica				
AZ Azerbaijani MY Burmese BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EC Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati Holiani SS Siswati HA Hausa SR Serbian HI Hindi SS Siswati IR Interlingue TA Tamil IK Inupiak TE Telugu IN Honesian TN Setswana KK Razakh TO Tonga KK Rashmiri UK Ukrainian KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kashmiri UK Ukrainian KK Karakh TO Tonga KK Kashmiri UK Ukrainian KK Katakh TO Tonga KK Kashmiri UK Ukrainian KK Lattin VI Vietnamese LV Latvian, Lettish YO Voruba MMG Malagasy ZU Zulu				
BA Bashkir NA Nauru BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GU Gujarati SQ Albanian HH Hindi SS Siswati HH Hungarian SV Swedish HA Interlingue TA Tamil IK Inupiak TE Telugu IK Greenlandic TR Tamil IK Inupiak TE Telugu IK Inupia		•		
BE Byelorussian NE Nepali BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CCO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian SY Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IK Indonesian TG Tajik IK Inupiak TE Telugu IK Inupiak TE Telugu IK Indonesian TG Tajik IK Inurkmen IK Kasakh TO Tonga IK Kananda TT Tatar IK Cokorean (KOR) TW Twi IK Kashmiri UK Ukrainian IK Ukrainian IK Ukrainian WO Wolof IK Latvian, Lettish YO Voruba IK MG Malagasy ZU Zulu		•		
BG Bulgarian NL Dutch BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HH Hindi SS Siswati HR Croatian SY Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IN Gerenlandic TR Turkish KA Gaorgian TN Setswana KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kasahmiri UK Ukrainian KU Kiranian KK Kazakh TO Tonga KK Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LU Latvian, Lettish YO Voruba MG Malagasy ZU Zulu				
BH Bihari NO Norwegian BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian ET Estonian RW Kinyarwanda ET Estonian RW Kinyarwanda ET Estonian RW Kinyarwanda ET Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GL Galician SN Shona GL Galician SN Shona GL Galician SN Shona GL Guarani SO Somali GU Gujarati SQ Albanian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SV Swedish IA Interlingua SW Swedish IA Interlingua TA Tamil IK Inupiak TE Telugu IN Indonesian TS Tsonga KK Sanshri IN Garoni SO Somali GK Gaorgian TN Setswana KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kashmiri UK Ukrainian KV Kirpairwa KU Kurdish UR Urdu KK Kazakh TO Tonga KK Sashmiri UK Ukrainian KV Kirpiz Uz Uzbek LA Latin VI Vietnamese LV Latvian, Lettish VO Yoruba MG Malagasy ZU Zulu				
BI Bislama OC Occitan BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SU Sundanese HY Armenian SV Swedish IA Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IN Indonesian TG Tajik KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kazakh UR Urdu KK Kazakh TO Tonga KK Karamiri UK Ukrainian KU Kurdish UR Urdu KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian LU Luthuanian XH Xhosa LU Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
BN Bengali, Bangla OM (Afan) Oromo BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KK Razakh TO Tonga KK Rashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
BO Tibetan OR Oriya BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian ECO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Inurkish TK Turkmen JW Javanese TL Tagalog KK Azakh TO Tonga KK Scanbar KK Kazakh TO Tonga KK Kananda TT Tatar KO Korean (KOR) TW Twi KK Scanbar LV Latvian, Lettish VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zuliu				
BR Breton PA Panjabi CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingua TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KK Karakh TO Tonga			_	, ,
CA Catalan PL Polish CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TR Turkish KK Azakh TO Tonga KK Rannada TT Tatar KO Korean (KOR) TW IVI Vietnamese LN Lingala VO Volapuk KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish VO Yoruba MG Malagasy JU Zulu MG Malagasy JU Zulu MG Malagasy JU Zulu MC Peshance PT Portuguesee PT Sentanian RN Rhaeto-Romance Rhaeto-Roma				
CO Corsican PS Pashto, Pushto CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish JK Turkmen JW Javanese TL Tagalog KA Gambodian TS Tsonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Karahi UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala W Vo Volapuk LO Laothian Lettish WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish WO Worba MG Malagasy ZU Zuliu				
CS Czech PT Portuguese CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Gamani SC Tonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kannada TT Tatar KO Korean (KOR) TW TW KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Voruba MG Malagasy ZU Zulu				
CY Welsh QU Quechua DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kiryarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho			_	
DA Danish RM Rhaeto-Romance DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Gaendic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
DZ Bhutani RN Kirundi EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajjik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
EL Greek RO Rumanian EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fijj SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KK Kazakh TO Tonga KK Kasahmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
EO Esperanto RU Russian ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajjik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala WO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
ET Estonian RW Kinyarwanda EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GR Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
EU Basque SA Sanskrit FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KK Gambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
FA Persian SD Sindhi FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy LU Zulu				
FI Finnish SG Sangho FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian SV Swedish HA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KK Karaham TS Tonga KK Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
FJ Fiji SH Serbo-Croatian FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian SV Swedish HA Interlingua SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
FO Faroese SI Singhalese FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
FY Frisian SK Slovak GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu		•		Serbo-Croatian
GA Irish SL Slovenian GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KV Kirghiz UZ Uzbek LA Latin VI Vietnamese LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu	_			
GD Scots Gaelic SM Samoan GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KV Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu			_	
GL Galician SN Shona GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu	_			
GN Guarani SO Somali GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
GU Gujarati SQ Albanian HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
HA Hausa SR Serbian HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu	_			
HI Hindi SS Siswati HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu		•		
HR Croatian ST Sesotho HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JJ Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
HU Hungarian SU Sundanese HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese				
HY Armenian SV Swedish IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
IA Interlingua SW Swahili IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KV Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa				
IE Interlingue TA Tamil IK Inupiak TE Telugu IN Indonesian TG Tajjik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
IK Inupiak TE Telugu IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
IN Indonesian TG Tajik IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
IS Icelandic TH Thai IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
IW Hebrew TI Tigrinya JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KV Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
JI Yiddish TK Turkmen JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
JW Javanese TL Tagalog KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KA Georgian TN Setswana KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KK Kazakh TO Tonga KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KL Greenlandic TR Turkish KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KM Cambodian TS Tsonga KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KN Kannada TT Tatar KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KO Korean (KOR) TW Twi KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
KS Kashmiri UK Ukrainian KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				<u> </u>
KU Kurdish UR Urdu KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu		` '		
KY Kirghiz UZ Uzbek LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
LA Latin VI Vietnamese LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
LN Lingala VO Volapuk LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
LO Laothian WO Wolof LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
LT Lithuanian XH Xhosa LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu				
LV Latvian, Lettish YO Yoruba MG Malagasy ZU Zulu		Laothian		
MG Malagasy ZU Zulu				Xhosa
	LV	Latvian, Lettish		Yoruba
MI Maori	MG	Malagasy	ZU	Zulu
	MI	Maori		

General

Power source: AC 120 V \sim , 60 Hz Power consumption: 25 W (in operation) 1.0 W (on standby)

Weight: 2.7 kg (6.0 lbs)

External dimensions 150 mm x 152 mm x 246 mm (5¹⁵/₁₆ in. x 6 in. x 9¹¹/₁₆ in.) $(W \times H \times D)$:

DVD player

Playable discs: DVD VIDEO, DVD AUDIO, VCD,

SVCD, CD, CD-R/RW (CD, VCD, MP3, WMA, JPEG format), DVD-R/-

RW (video format)

Video output

Color system: NTSC Horizontal resolution: 500 lines

Composite x1: 1.0 V (p-p)/75 Ω ,

synchronization negative S-video x1: Y output: 1.0 V (p-p)/75 Ω ,

synchronization negative

C output: 0.286 V (p-p)/75 Ω Y output: 1.0 V (p-p)/75 Ω

Component x1: P_B/P_R output: 0.7 V (p-p)/75 Ω

Audio output

Analog sound output: Speakers x2

> 18 W per channel, Output power:

min. RMS, at 4 Ω at 1 kHz with no more than 10% total harmonic distortion

Fitting impedance: 4Ω to 16Ω Headphones x1: 11 mW/32 Ω Fitting impedance: 16 Ω to 1 k Ω Subwoofer x1: 500 mVrms/10 k Ω

Digital sound output:

Optical x1: -21 dBm to -15 dBm **Audio input**

Sound input: AUX x1

400 mV/50 k Ω

Tuner

FM tuner:

Receiving frequency: 87.5 MHz to 108.0 MHz Antenna: 75 Ω - Unbalanced type

AM tuner:

530 kHz to 1 710 kHz Receiving frequency:

Antenna: External antenna jack (loop

antenna)

Speaker

Full range Type:

> 1-way bass-reflex type Magnetically shielded type

Speaker: 8 cm (33/16 inches) cone x1

Frequency response: 60 to 20 000 Hz

Power handling capacity: 20 W Impedance: 4 O. Sound pressure level:

81 dB/W·m

Dimension (W x H x D): 120 mm x 150 mm x 188 mm

 $(4^{3}/4 \text{ in. } \times 5^{15}/16 \text{ in. } \times 7^{7}/16)$

in.)

Weight (1 unit): 1.5 kg (3.4 lbs)

Designs and Specifications are subject to change without notice.



LIMITED WARRANTY

USA ONLY

ONLY FOR PRODUCT PURCHASED IN U.S.A.

CONSUMER VIDEO 1-90

JVC COMPANY OF AMERICA (JVC) warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL RETAIL PURCHASER to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original purchase for the period shown below. ("The Warranty Period")

> PARTS LAROR 1 YR 90 DAYS

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES. THE DISTRICT OF COLUMBIA AND IN THE COMMONWEALTH OF PUERTO RICO.

WHAT WE WILL DO:

If this product is found to be defective within the warranty period, JVC will repair or replace defective parts with new or rebuilt equivalents at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products may be brought to a JVC authorized service center on a carry-in basis. Color televisions with a screen size of 27" or greater qualify for in-home service. In such cases, a technician will come to your home and either repair the TV there or remove and return it if it cannot be repaired in your home.

WHAT YOU MUST DO FOR WARRANTY SERVICE:

Please do not return your product to the retailer

Instead, return your product to the JVC authorized service center nearest you. If shipping the product to the service center, please be sure to package it carefully, preferably in the original packaging, and include a brief description of the problem(s). Please call 1-800-252-5722 to locate the nearest JVC authorized service center. Service locations can also be obtained from our website http://www.jvc.com. If your product qualifies for in-home service, the service representative will require clear access to the product.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department at 800-252-5722

WHAT IS NOT COVERED:

This limited warranty provided by JVC does not cover:

- 1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model or serial number has been altered, tampered with, defaced or removed;

 2. Initial installation, installation and removal from cabinets or mounting systems.
- 3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
- Damage that occurs in shipment, due to act of God, and cosmetic damage:
- 5. Signal reception problems and failures due to line power surge;
- 6. User Removal Memory Devices/Video Pick-up Tubes/CCD Image Sensors are covered for 90days from the date of purchase;
- 7. Accessories;
- 8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase):
- Products used for commercial purposes, including, but not limited to rental.
 Loss of data resultant from malfunction of hard drive or other data storage device.

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR ANY LOSS OF USE OF THE PRODUCT, INCONVIENCE, OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA

1700 Valley Road Wayne, NJ 07470

DIVISION OF JVC AMERICAS CORP. http://www.jvc.com

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAIL OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use:				
Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.				
Model No.: Serial No.:				
Purchase date :	Name of dealer :			

TO OUR VALUED CUSTOMER -

THANK YOU FOR PURCHASING THIS JVC PRODUCT.
WE WANT TO HELP YOU ACHIEVE A PERFECT EXPERIENCE.

NEED HELP ON HOW TO HOOK UP?
NEED ASSISTANCE ON HOW TO OPERATE?
NEED TO LOCATE A JVC SERVICE CENTER?
LIKE TO PURCHASE ACCESSORIES?

JVC IS HERE TO HELP! TOLL FREE: 1(800)252-5722 http://www.jvc.com

——— Do not attempt to service the product yourself

Caution

To prevent electrical shock, do not open the cabinet.

There are no user serviceable parts inside.

Remember to retain your Bill of Sale for Warranty Service.

Please refer to qualified service personnel for repairs.

JVC








COMPACT COMPONENT SYSTEM SYSTEME DE COMPOSANTS COMPACT

- FS-Y1—Consists of CA-FSY1 and SP-FSY1
 - -Composé CA-FSY1 et SP-FSY1



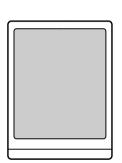

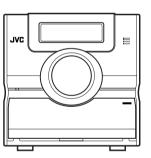

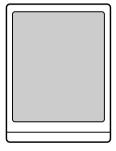











Warnings, cautions and others/ Mises en garde, précautions et indications diverses

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

- 1. Do not remove screws, covers or cabinet.
- 2. Do not expose this appliance to rain or moisture.

ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

- Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
- 2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

CAUTION — STANDBY/ON (1)/| button!

Disconnect the mains plug to shut the power off completely (the STANDBY lamp goes off). The STANDBY/ON (b)/| button in any position does not disconnect the mains line.

- When the system is on standby, the STANDBY lamp lights red.
- When the system is turned on, the STANDBY lamp lights green.

The power can be remote controlled.

Attention—Touche STANDBY/ON U/| (attente/sous tension)!

Déconnectez la fiche secteur pour mettre l'appareil complètement hors tension (tous les témoins et toutes les indications s'éteignent). La touche STANDBY/ON U/| dans n'importe quelle position ne déconnecte pas l'appareil du secteur.

- Quand l'appareil est en mode d'attente, le témoin STANDBY/ON est allumé en rouge.
- Quand l'appareil est sous tension, le témoin STANDBY/ON est allumé en vert.

L'alimentation ne peut pas être commandée à distance.

IMPORTANT FOR LASER PRODUCTS

- 1. CLASS 1 LASER PRODUCT
- CAUTION: Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
- CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
- REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.
- 1. PRODUIT LASER CLASSE 1
- ATTENTION: N'ouvrez pas le couvercle supérieur. Il n'y a aucune pièce réparable par l'utilisateur à l'intérieur de l'appareil; confiez toute réparation à un personnel qualifié.
- ATTENTION: Risque de radiations laser visible et invisible quand l'appareil est ouvert ou que le systéme de verrouillage ne fonctionne pas ou a été mis hors service. Évitez toute exposition directe au rayon.
- 4. REPRODUCTION DE L'ÉTIQUETTE: ÉTIQUETTE DE PRÉCAUTION PLACÉE L'INTERIFUR DE L'APPARFII

CAUTION: Visible and invisible	ADVARSEL : Synlig og usynlig	VARNING : Synlig och	VARO: Avattaessa ja suojalukitus
		osynlig laserstrålning när	
		den öppnas och spärren är	
AVOID DIRECT EXPOSURE TO	Undgå direkte eksponering til		lasersäteilylle. Vältä säteen
BEAM. (e)	stråling. (d)	strålen. (s)	kohdistumista suoraan itseesi. (f)

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

FOR U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For Canada/pour le Canada

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT,

FULLY INSERT.

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE

CORRESPONDANTE DE LA PRISE ET POUSSER

JUSQUAU FOND.

For Canada/pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS", ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMIRIQUES DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUES", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Section 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Table of contents

Introduction	
About discs	3
Description of parts	
Getting started	
Using the remote control	7
Basic operations	
Playing discs1	
Playback1	
To switch the display 1	3

To switch the display	. 13
Select what you want to play by using	
the number buttons	14
To stop playback	14
To pause playback	14
To advance picture frame-by-frame	14
Fast reverse/Fast forward search	14
Playing back from a position 10 seconds	
before (One Touch Replay)	15
Slow Motion Playback	15
Skip to the beginning of the selection	. 15
To change the brightness of	
the display window (DIMMER)	16
Adjusting the volume	16

Adjusting sound quality...... 16 Turning off the sound temporarily (MUTING) ... 16

Advanced operations

<u> </u>	
Playing audio/video files	16
Resume Playback	18
Select the scene to be played	19
Program Playback/Random Playback	20
Repeat Playback	22
Other convenient functions	24
Selecting the subtitles	24
Selecting the audio language	24
Selecting a view angle	
Enlarging the picture (ZOOM)	25
Adjusting the picture quality (VFP)	25
Creating realistic sound (3D PHONIC)	26
Adjusting playback level (DVD LEVEL)	26
Enjoying better pictures (SCAN MODE)	26

Functions specific to DVD AUDIO	27 27 28 29
Country/Area codes Listening to radio	31
Listening to a radio broadcast Tuning in to a preset station Convenient functions	
Listening to the sound of other audio device Setting the Various Timer Setting the built-in clock Setting the daily timer Auto Standby Sleep Timer Tray Lock	34 34 35 36
Reference	
Troubleshooting	07

How to read this manual

- Operations are described by mainly using the remote control buttons. If there are the same marks on the main unit, the buttons on the main unit can also be used.
- The following marks tell you for which type of the discs the operation can be made.













JPEG

- The illustrations and TV screens may be different between the actual case and the description.
- "VCD" is an abbreviation of "Video CD". "SVCD" is an abbreviation of "Super Video CD".

Special cautions

Notes on handling

Important cautions

Installation of the system


- Select a place which is level, dry and neither too hot nor too cold; between 5°C and 35°C.
- Leave sufficient distance between the system and the
- Do not use the system in a place subject to vibration.

Power cord

- Do not handle the power cord with wet hands.
- A small amount of power is always consumed while the power cord is connected to the wall outlet.
- When unplugging the power cord from the wall outlet, always pull on the plug, not the power cord.

To prevent malfunctions of the system

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the system.
- Do not use any non-standard shape disc (like a heart, flower or credit card, etc.) available on the market, because it may damage the system.
- Do not use a disc with tape, stickers, or paste on it, because it may damage the system.

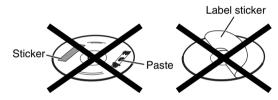

Note about copyright laws

Check the copyright laws in your country before recording from DVDs, VCDs, SVCDs, and CDs. Recording of copyrighted material may infringe copyright

Note about copy guard system

DVDs are protected by copy guard system. When you connect the system to your VCR directly, the copy guard system activates and the picture may not be played back correctly.

Safety precautions

Avoid moisture, water and dust

Do not place the system in moist or dusty places.

Avoid high temperatures

Do not expose the system to direct sunlight and do not place it near a heating device.

When you are away

When away on travel or for other reasons for an extended period of time, disconnect the power cord plug from the wall outlet.

Do not block the vents

Blocking the vents may damage the system.

Care of the cabinet

When cleaning the system, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents including disinfectants. These may cause deformation or discoloring.

If water gets inside the system

Turn the system off and disconnect the power cord plug from the wall outlet, then call the store where you made your purchase. Using the system in this condition may cause fire or electrical shock.

When condensation or water drops adhere to the

In any of the following cases, condensation or water drops may adhere to the lens to prevent the system from working properly:

- Immediately after starting to heat the room
- When the system is installed in a steamy or damp
- When the system is suddenly moved from a cold place to a warm space

In any of these cases, leave the system turned on for 1 or 2 hours before use.

Supplied accessories

Check to be sure you have all of the supplied accessories.

The number in parentheses is the quantity of the pieces supplied. If anything is missing, contact your dealer immediately.

- Remote control (1)
- Batteries (2)
- FM antenna (1)
- AM loop antenna (1)
- Power cord (1)
- Composite video cord (1)
- Speaker cords (2)

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "MLP Lossless", and the double-D symbol are trademarks of Dolby Laboratories.
"DTS" and "DTS 2.0+DIGITAL OUT" are registered trademarks of Digital Theater Systems, Inc.
This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents

and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Playable disc types

This system has been designed to play back the following discs:

DVD VIDEO, DVD AUDIO, VCD, SVCD, CD

This system can also play back the following discs:

- Finalized DVD-R/-RW discs recorded in the DVD VIDEO format.
- · CD-R/RW discs recorded in the following formats
 - · Music CDs (finalized discs)
 - VCDs
 - SVCDs
 - MP3/WMA/JPEG discs recorded in ISO 9660 (for details, refer to "Notes on CD-R and CD-RW")

However, some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

Only sounds can be played back from the following discs:

MIX-MODE CD

CD-G CD TEXT

CD-EXTRA

Discs you can play:

Diaca you	i can play.	
Disc Type	Mark (Logo)	Video Format
DVD VIDEO	VIDEO TM VIDEO	NTSC
DVD AUDIO	AUDIO/VIDEO AUDIO	
VCD	COMPACT Video CD	NTSC
SVCD	COMPACT VIDEO VIDEO SUPER VIDEO	NTSC
CD	COMPACT DIGITAL AUDIO	l
CD-R	COMPACT CITE DIGITAL AUDIO Recordable	_
CD-RW	COMPACT DIGITAL AUDIO REWITADIE	_

is a trademark of DVD Format/Logo licensing Corporation.

* Note on Region Code

DVD players and DVD VIDEOs have their own Region Code numbers. This system can only play back a DVD VIDEO recorded with the Region Code number and video format mentioned below.

For your available Region Code, check the rear panel of your main unit.

Examples:









If a DVD VIDEO with an improper Region Code number is loaded, "REGION CODE ERROR!" appears on the TV screen and playback cannot start.

 On some DVD VIDEOs, DVD AUDIOs, VCDs or SVCDs, their actual operation may be different from what is explained in this manual. This is due to the disc programming and disc structure, not a malfunction of this system.

Notes on DVD-R, DVD-RW

This system can also play finalized DVD-Rs or DVD-RWs recorded in DVD-Video format.

Notes on CD-R and CD-RW

- This system can also play CD-Rs or CD-RWs if MP3, WMA, and JPEG files are recorded on them with ISO 9660 format.
- This system supports "multi-session" discs (up to 20 sessions).
- This system cannot play "packet write" (UDF format) discs. Some discs may not be played back because of their disc characteristics, recording conditions, or damage or stain on them.

Discs that cannot be played back

 The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD-R/-RW (recorded in VR format), CD-ROM, CD-I (CD-I Ready), Photo CD, SACD, etc.

Playing back these discs will generate noise and damage the speakers.

Damaged discs and discs in an extraordinary shape (other than a disc of 12 cm or 8 cm in diameter) cannot be played back.

Caution for DualDisc playback:

The non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

About discs (continued)

Notes on all files

- The system can only recognize and play files with one of the following extensions, which can be in any combination of upper and lower case;
 • MP3: ".MP3", ".mp3"
 • WMA: ".WMA" , ".wma"
 • JPEG: ".JPG", ".JPEG", ".jpg", ".jpeg"
- If a character other than single byte English characters is used in the file name of an MP3/WMA/JPEG file, the track/file name will not be displayed correctly.
- The system recognizes up to 150 tracks (files) per group, 99 groups per disc, and the total number of the tracks (files) that the system can play is 1 000.
- Some files may not be played back normally because of their disc characteristics or recording conditions.

For MP3/WMA files

- An off-the-shelf MP3 disc may be played in an order different from that indicated on the label attached to the disc.
- The system supports MP3/WMA files recorded with a bit rate of 32 - 320 kbps and a sampling frequency of 16 kHz, 22.05 kHz, 24 kHz (WMA only), 32 kHz, 44.1 kHz, or 48 kHz.
- If the tag information (album name, artist, and track title, etc.) is recorded on a disc, it appears in the file control display on the TV screen.
- We recommend to record each piece of material (song) at a sample rate of 44.1 kHz and at a data transfer rate of 128 (96 for WMA only) kbps.
- This system cannot play back files encoded with Multiple Bit Rate (MBR). (MBR is a format to encode a file content at several different bit rates.)


For JPEG files

- We recommend to record a file at 640 x 480 resolution.
- This system can play a baseline JPEG file, excluding monochromatic JPEG files.
- This system can play JPEG data taken with a digital camera conforming to the DCF (Design Rule for Camera File System) standard (when a function is applied such as the automatic rotation function of a digital camera, data goes beyond the DCF standard, so the image may not be displayed).
- If data has been processed, edited and restored with PC image editing software, the data may not be displayed.
- This system cannot play animations such as MOTION JPEG, or still images (TIFF etc.) other than JPEG, and image data with sound.
- An image with a resolution of more than 8 192 x 7 680 pixels cannot be displayed.

Disc structure

DVD VIDEO

A DVD VIDEO consists of "titles" and each title may be divided into "chapters".

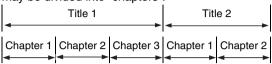

DVD AUDIO

A DVD AUDIO consists of "groups" and each group may be divided into "tracks".

Some discs include a "bonus group" that requires a password for playing (page 27).



VCD/SVCD/CD

VCD, SVCD and CD consist of "tracks".


In general, each track has its own track number. (On some discs, each track may also be further divided by indexes.)



MP3/WMA [JPEG] discs

On an MP3/WMA [JPEG] disc, each still picture (material) is recorded as a track [file]. Tracks [Files] are usually grouped into a folder. Folders can also include other folders, creating hierarchical folder layers.

This unit simplifies the hierarchical construction of a disc and manages folders by "groups".

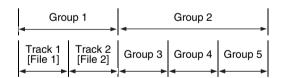


This product can recognize up to 1 000 tracks [files] in a disc. Also, the product can recognize up to 150 tracks [files] per group and up to 99 groups in a disc. Since the unit ignores the tracks [files] whose numbers are exceeding 150 and the groups whose numbers are exceeding 99, they cannot be played back.

 If there is any type of files other than MP3/WMA [JPEG] files in a folder, those files are also counted in the total file number.


The numbers represent the page numbers.

Front panel

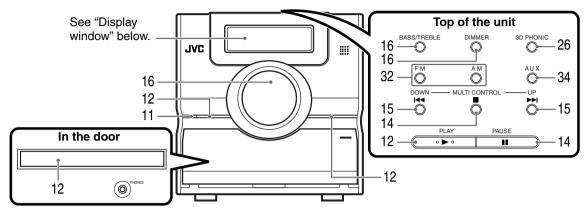


* Connect headphones (not supplied) with a stereo mini plug. If the headphones are connected, the speakers and subwoofer will not produce any sound.

Display window

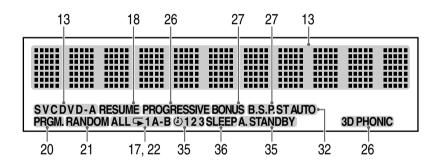


Rear panel

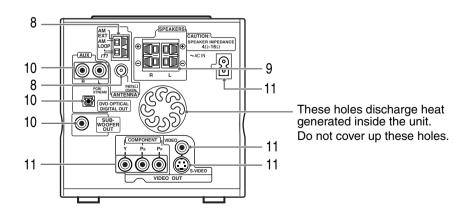



Using the remote control


The numbers represent the page numbers.

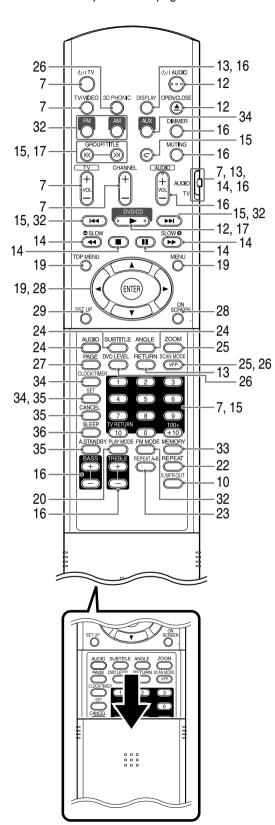

Putting the batteries in the remote control

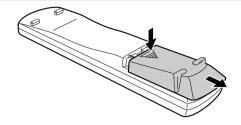

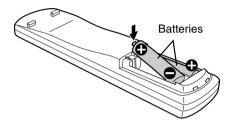

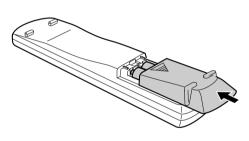

If the range or effectiveness of the remote control decreases, replace the batteries. Use two R6 (SUM-3)/AA(15F) type dry-cell batteries.

CAUTION

- Do not use a used battery and a new battery together.
- Do not use different types of batteries at the same time.
- Take out the batteries if the remote control is not to be used for a long time. Otherwise it may cause a leakage.


Remote control operation

When operating the remote control, point it towards the front panel of the main unit. If the remote control is operated from a direction that is extremely oblique or when there is an obstacle in the way, signals may not be transmitted.

If the remote control sensor is exposed to a strong light such as direct sunlight, correct operation may not be carried out.

This page is for when operating your TV using the remote control of this product.

Operating the TV using the remote control

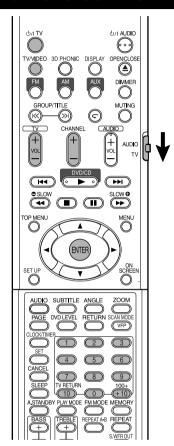

Setting the manufacturer's code

1 Slide the remote control mode selector to the TV side.



2 Keep pressing down ⊍/ITV.

NOTE

Keep pressing down ७/ TV until Step 4 is complete.

3 Press ENTER.

4 Press number buttons (1-9, 0).

Ex.:

For a Hitachi TV: Press 1, then 0. For a Toshiba TV: Press 0, then 8.

If there are more than one manufacturer's codes, try them in turn and select the one that causes the product to work properly.

Manufacturer	Code	Manufacturer	Code
JVC	01	Samsung	12
Hitachi	10	Sanyo	13
Magnavox	02	Sharp	06
Mitsubishi	03	Sony	07
Panasonic	04, 11	Toshiba	08
RCA	05	Zenith	09

NOTE

Manufacturer's codes may be changed without notice. You may not be able to operate a TV produced by the manufacturer shown above.

5 Release ७/| TV.

For TV operation

Operate the remote control by pointing it towards the TV.

⊕/ITV	Turn ON/OFF the power.			
CHANNEL +	Change channels.			
TV + VOL	Adjust volume.			
1 ~ 9 / 100+ 0 / + 10	AUDIO TV 1	Select channels.		
TV RETURN	Alternates between the previously selected channel and the current channel.			
TV/VIDEO	Switch TV and video input.			

^{*1} Make sure to slide the remote control mode selector to the TV side in advance.


NOTE

When the batteries are replaced, perform the manufacturer's code setting again.


Connecting antennas

Connecting AM loop antenna (supplied)

1 Set up the AM loop antenna.

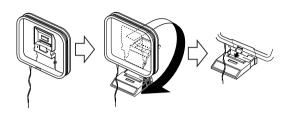

2 Connect antenna cords.

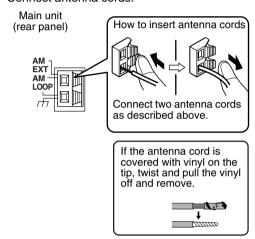


3 Turn the AM loop antenna to the direction of the best radio reception.


Locate the AM loop antenna as far away from the main unit as possible.

- Do not locate the AM loop antenna on a metallic table or close to a TV, personal computer, etc.
 Otherwise it may result in bad radio reception.
- When good radio reception cannot be obtained with the supplied AM loop antenna


Electric wire: 3 - 5 m (commercially available)

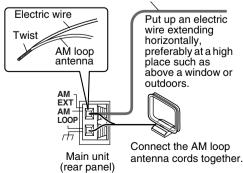


Connecting FM antenna (supplied)

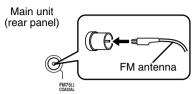

Put the antenna up straight in the direction where the best radio reception can be obtained, and fix by using tape.

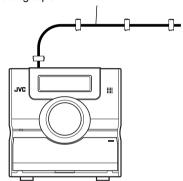


 When good radio reception cannot be obtained with the supplied antenna or when using a communal antenna

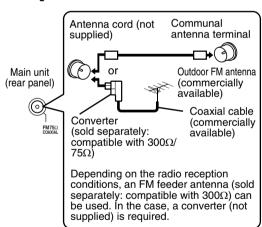

For details of connecting a separately sold antenna, refer to the user guide for the antenna or converter.


Connecting speakers

There is no difference between the left and right speakers.

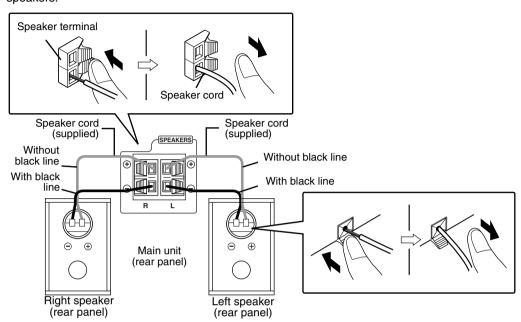

CAUTION

- DO NOT connect more than one speaker to one speaker terminal.
- The speakers of this product are magnetically shielded, but color irregularities may occur on the TV depending on how the speakers are installed. Keep in mind the following.
 - Turn off the main power of your TV before installing the speakers. Wait for about 30 minutes before turning on the TV again.
 - If color irregularity occurs in pictures, keep a distance of more than 10 cm between the TV and the speakers.

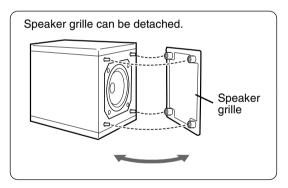

NOTE


- Impedance of speaker that can be connected to the main unit is within a range of 4Ω to 16Ω .
- In order to have a sufficient cooling effect, leave a space of more than 1 cm between the main unit and the speakers or other objects.

Connecting other devices

This page is for when connecting the main unit with other devices.

Connecting subwoofer

With an amplifier-built in subwoofer (not supplied), you can enjoy a more dynamic bass sound. Refer to the manual of the subwoofer for details.

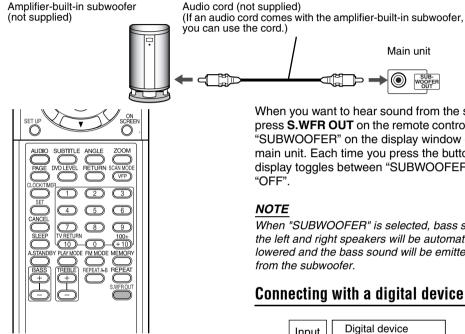

When you want to hear sound from the subwoofer, press S.WFR OUT on the remote control to display "SUBWOOFER" on the display window on the main unit. Each time you press the button, the display toggles between "SUBWOOFER" and "OFF".

Main unit


NOTE

When "SUBWOOFER" is selected, bass sound from the left and right speakers will be automatically lowered and the bass sound will be emitted mainly from the subwoofer.


Digital device

Connecting with a digital device

Input

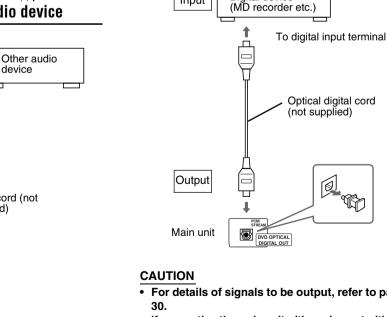


Connecting with other audio device

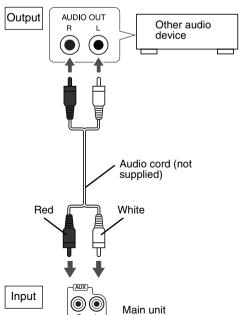

- · For details of signals to be output, refer to page
- · If connecting the main unit with equipment with the function of a Dolby Digital decoder, the setting in "D. RANGE COMPRESSION" of "AUDIO" (page 30) will be invalid regarding sound from the digital audio output of the main unit.


Connecting with TV

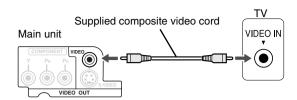

CAUTION

Connect the main unit directly with a TV (or a monitor) without routing through a VCR.


Otherwise it may cause picture distortion while playing.

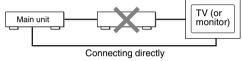

Also, when connecting the main unit to a TV with a VCR built in, there may be picture distortion while playing.


You can enjoy pictures of better quality using the following cord instead of the supplied video cord.

Connecting by using the S-Video cord

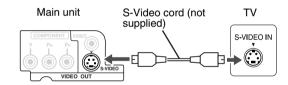

Connecting by using the component video cord

You can enjoy better quality pictures than when using the S-Video cord.

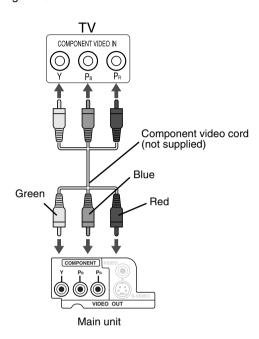


CAUTION

Use one of either the S-Video cord or the component video cord. If both cords are used, pictures may not be played properly.

NOTE


- In order to enjoy pictures with Progressive mode (page 26), the TV is required to have Progressive video input.
- If the component video input jacks of your TV are BNC type, use a plug adapter (not supplied) to convert the plugs.

Connecting the power cord

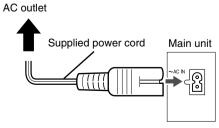

- Connect the power cord after all other connections are complete.
- The standby lamp (on the front panel) will be lit.

Playback

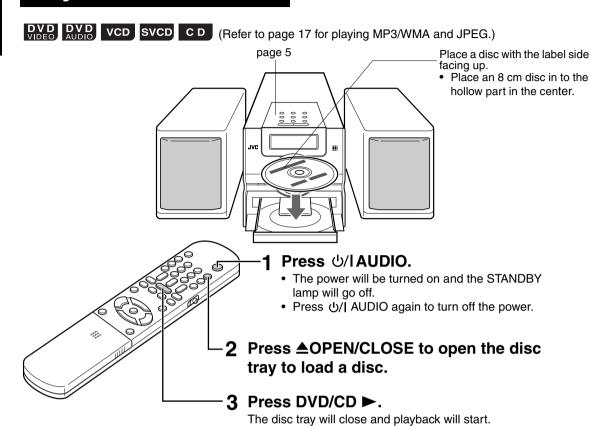

 The power will be turned on when any of PLAY ►, FM, AM, AUX, or ≜ on the main unit and DVD/CD ►, FM, AM, AUX, or ≜OPEN/ CLOSE on the remote control is pressed while the power is off.

If any button other than ≜ or ≜OPEN/CLOSE is pressed, the source will also be changed (if there is a disc loaded, playback will start).

NOTE


- A menu screen may be displayed on the TV after starting playback of a DVD/VCD/SVCD. In this case, select a desired item to playback by using the following buttons on the remote control.
 - Select a desired item using cursor ▲/►/▼/◄ and press ENTER.
 - Select a desired item using the number buttons.
- Depending on the disc, actual operation may be different from the description.



Screens displayed on the TV when the power is turned ON.


The following messages appear depending on the status of the system. (When FM, AM or AUX is selected as a source, the messages do not appear.)

NOW READING	Appears when the system is reading the disc information. Wait for a while.
REGION CODE ERROR!	Appears when the Region Code of the DVD VIDEO does not match the code the system supports. (page 3)
NO DISC	Appears when no disc is loaded.
OPEN	Appears when opening the disc tray.
CLOSE	Appears when closing the disc tray.
CANNOT PLAY THIS DISC	Appears when trying to play back an unplayable disc.

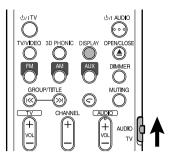

Display window during disc playback

Ex.: When a DVD VIDEO is played

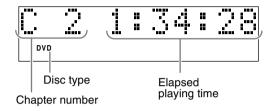


Ex.: When a DVD AUDIO is played



Track number

If "BONUS" or "B.S.P." is displayed during a DVD AUDIO playback, refer to page 27.


Ex.: When an SVCD or VCD is played

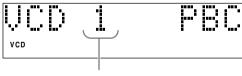


Track number

- When playing an SVCD, the SVCD indicator lights instead of the VCD indicator.
- PBC (Play Back Control): A signal recorded in a VCD (version 2.0) for controlling playback. It is possible to enjoy interactive software or software with a search function using a menu screen recorded in a PBC compatible VCD. To play a disc with the PBC function OFF, carry out the following operations.
 - Designate the track number using the number buttons while the disc is stopped.
 - Designate the track number using ►►I while the disc is stopped, and then press DVD/CD ►.
- Press RETURN to go back to the upper layer during the PBC playback of a VCD or SVCD.

Ex.: When a CD is played

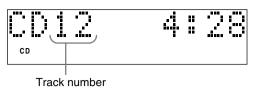

Ex.: When an MP3/WMA file is played

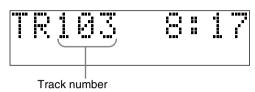


To switch the display


Press **DISPLAY**.

Each time you press the button, the display indication changes temporarily as follows:


For DVD VIDEO

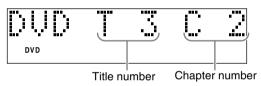

For DVD AUDIO

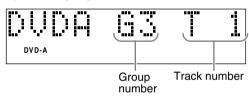


For MP3/WMA

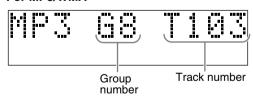

For SVCD/VCD/CD

The clock time indication appears on the display window.

- Before setting the clock (page 34), "AM 12:00" appears.
- When the unit is turned off, pressing DISPLAY turns off the clock indication to save the power consumption.

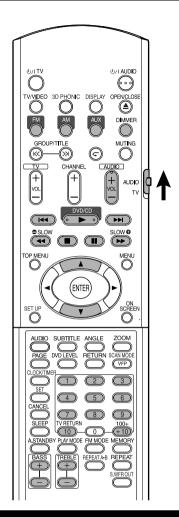

Select what you want to play by using the number buttons



NOTE

- Set the remote control mode selector to AUDIO before using the number buttons.
- For a VCD or SVCD, this operation can be carried out when the disc is stopped, or during playback without the PBC function.
- For a DVD AUDIO, CD, MP3/WMA or JPEG, this operation can also be carried out when the disc is stopped.
- This operation may not be carried out for some discs.

Designate the chapter number or track number to play during playback.

 Refer to "How to use the number buttons" on page 15.

To stop playback



Press ■ during playback.

To pause playback



Press II during playback.

To start normal playback again, press DVD/CD ▶.

- For JPEG slide-show, pressing DVD/CD ► starts playback from the next file.
- It is not possible to pause by pressing II on the main unit during JPEG disc slide-show.


To advance picture frame-by-frame

DVD SVCD VCD

Press II during pause.

 Each time you press the button, picture will be advanced frame-by-frame.

Fast reverse/Fast forward search

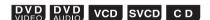

Press **◄◄** or **▶▶** during playback.

 Each time you press the button, the speed increases (×2, ×5, ×10, ×20, ×60). To restore the normal speed, press DVD/CD ►.

NOTE

- Fast reverse/Fast forward search cannot be carried out for MP3, WMA, and JPEG.
- For a DVD VIDEO, VCD or SVCD, no sound comes out during Fast reverse/Fast forward search.
- For a CD or DVD AUDIO, sound is intermittent during Fast reverse/Fast forward search.

Playing back from a position 10 seconds before (One Touch Replay)



Press \subset during playback.

NOTE

- · This operation may not be carried out for some
- It is not possible to go back to the previous title.

Slow Motion Playback



pause.

- Each time you press the button, the playback speed increases ($\times 1/32$, $\times 1/16$, $\times 1/8$, $\times 1/4$, $\times 1/2$).
- Press DVD/CD ➤ to start normal playback again.

NOTE

- No sound will be produced.
- · The picture motion in the reverse direction may not be smooth.
- · For a VCD or SVCD, Slow Motion Playback can be carried out in the forward direction only.

Skip to the beginning of the selection









DVD DVD VCD SVCD C D MP3 JPEG

- Press | ◀ or ▶ b | during playback*. Press ►►I to skip the next chapter or track.
- Press I◄◄ once to skip back to the beginning of the chapter or track currently being played (except for JPEG).
- Press GROUP/TITLE ≫ or ₭ to select the title
- During playback of a JPEG disc, press ►►I or cursor ▼ to play the next file, or press I◄◄ or cursor \(\Lambda \) to play the previous file.

NOTE

- For a VCD or SVCD, this operation can be carried out during playback without the PBC function.
- Except for a DVD VIDEO, this operation can also be carried out while the disc is stopped.
- This operation may not be carried out for some discs.

How to use the number buttons

Ex.:

5: 5

15: (+10) → (5)

20: (+10) → (10)

25:

 $(+10) \rightarrow (+10) \rightarrow (5)$



Guide icons displayed on the TV screen (On-screen guide)



: Plav



: Pause



: Fast reverse/Fast forward search



: Slow Motion Playback (reverse/ forward directions)



: Containing multi-angle views (page 24)



Containing multi-audio languages (page 24)



: Containing multi-subtitle languages (page 24)




: The disc cannot accept the operation you have attempted.

To change the brightness of the display window (DIMMER)

Press DIMMER repeatedly.

· Each time you press the button, the dimmer mode changes as follows:

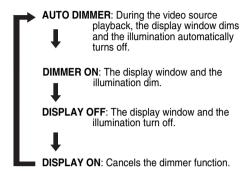

 When the unit is turned off, pressing DISPLAY turns off the clock indication to save the power consumption.

The items above can be carried out for all sources.

Adjusting the volume

Press AUDIO VOL +/-.

NOTE

The volume can be also adjusted by turning the VOLUME control on the main unit.

Adjusting sound quality

Bass: Press BASS +/-. Treble: Press TREBLE +/-.


• Adjustable range: -5 to +5

Turning off the sound temporarily (MUTING)

Press MUTING.

- · No sound will come out from the speakers, headphones and the subwoofer.
- Press MUTING again to restore the sound. When the power is turned off once and turned on again, the sound will be restored.

Playing audio/video files

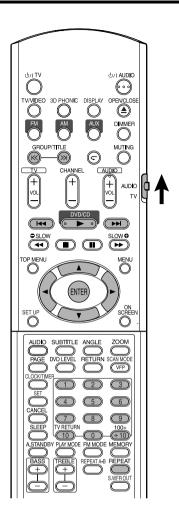

NOTE

Set the remote control mode selector to AUDIO before using the number buttons.



Playback

MP3 WMA

Display of an MP3/WMA disc is described here as an example.


For a JPEG disc, read "track" as "file".

NOTE

When playing a disc containing both MP3/WMA and JPEG files, set one of them to be played (page 29).

1 Load a disc.

Current group /total group number Playback mode (PROGRAM, RANDOM, REPEAT)

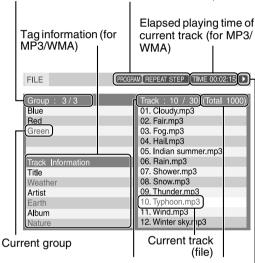

Current track (file) / Total track (file) total track (file) number on disc number on current group

Playback status

- 2 Press cursor ▲/▼ to select a group.
- 3 Press cursor ► to move to the track list.
 - Press cursor

 to go back to the group list.
- 4 Press cursor ▲/▼ to select a track.

5 Press DVD/CD ➤ or ENTER.

NOTE

- GROUP/TITLE K<, >> can also be used in Step 2.
- The number buttons can also be used in Step 4. In this case, Step 5 is not needed. (For how to use the number buttons, refer to page 15).
- I◀◀ or ▶►I can also be used in Step 4. In this case, Step 5 is not needed.

Repeat playback

MP3 WMA

1 Press REPEAT.

• Each time you press the button, the Repeat mode and its indication change as follows:

Repeat items	On the TV	On the display window
Current track (MP3/WMA only)	REPEAT TRACK	REP TRK ⊊1
Current group	REPEAT GROUP	REP GRP
Entire disc	REPEAT ALL	REP ALL
Cancel	No indication	REP OFF
Current track during Program/ Random play (MP3/WMA only)	REPEAT STEP	REP STEP
All tracks during Program/Random play (MP3/WMA only)	REPEAT ALL	REP ALL


2 Press DVD/CD ▶.

NOTE

- The Repeat types can be changed during playback.
- The Repeat mode will be automatically canceled if there is a file that cannot be played (page 3).

Slide-Show Playback JPEG

- In Step 5, for a JPEG disc, when DVD/CD ➤ is pressed, files will be continuously played from the selected file (Slide-Show Playback), and when ENTER is pressed, only a selected file will be played.
- Display time for a file in Slide-Show Playback is about 3 seconds.
- When all files are played through, the playback will be automatically stopped.

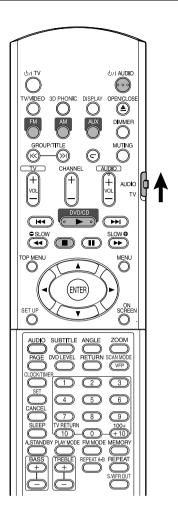

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



DVD DVD VCD SVCD

This system can store the stop point, and when you start playback again by pressing DVD/CD ► (even while on standby), it starts from the position where you have stopped—Resume Play. The RESUME indicator lights on the display window when you stop playback.

How to suspend playback

Perform any of the following operations during playback.

Press ■ once.*

Press 也/ AUDIO to turn off the power.

Change the source to FM, AM or AUX.*

* Even if the power is turned off by pressing U/I AUDIO after this, the position where playback has been stopped will be stored.




To start playback from the stored position

Press DVD/CD ▶.

NOTE

- This function does not work in Program Playback or Random Playback.
- The position where playback starts again may be a little different from the stopped position.
- When a disc menu is displayed, the Resume function may not work.
- The audio language, the subtitle language and the angle at that time are stored as well as the stopped position.
- The stored position will be cleared if the disc tray is opened. Further, if ■ is pressed during playback, "RESUME" will be displayed. If ■ is pressed again, the stored information will be cleared.
- At the time of purchase, Resume is set to ON. Resume can be set to OFF (page 30).

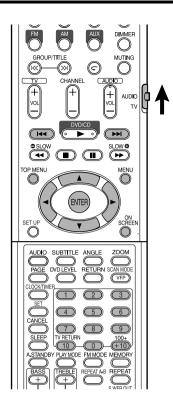

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.

Select the scene from the menu

DVD DVD VCD SVCD

- 1 Press MENU or TOP MENU while the disc is stopped or during playback*1.
 - The disc menu screen will be displayed.
 - Only TOP MENU can be used for DVD AUDIOs.
- 2 Press cursor ▲/►/▼/◄ (only for a DVD VIDEO or DVD AUDIO) or the number buttons to select the scene to be played.
 - Refer to "How to use the number buttons" (page 15).

3 Press ENTER.

NOTE

- *1 For a VCD and SVCD, this operation can be carried out only when the PBC function is off.
- This operation cannot be carried out for a disc without a menu screen.
- Playback may start for some discs without pressing ENTER.

Designate the time (Time search)

DVD DVD VCD SVCD CD

1 Press ON SCREEN twice during playback².

The menu bar will be displayed (page 28).

- 2 Press cursor ◀ /► to select ④ .
- **3** Press ENTER.
- 4 Input the time^{*3} using the number buttons (1-9, 0).

Ex.: When you want to play a DVD VIDEO from the position of (0 hour) 23 minutes 45 seconds, press the buttons in the order:



If you input wrong numbers, press cursor
 to delete the numbers and re-input.

5 Press ENTER.


To delete the menu bar, press ON SCREEN.

NOTE

- This function does not work for a DVD VIDEO with no time information recorded.
- This function does not work during Program or Random Playback.
- *2 For a VCD and an SVCD, the operation can be carried out when the disc is stopped or during playback without the PBC function.
- *3 Time search for a DVD VIDEO is from the beginning of the title, for a DVD AUDIO from the beginning of the track being played. Time search for a VCD, an SVCD and a CD is as follows:
 - When the disc is stopped, time search is from the beginning of the disc.
 - When the disc is being played, time search is within the track currently being played.

Program Playback/Random Playback



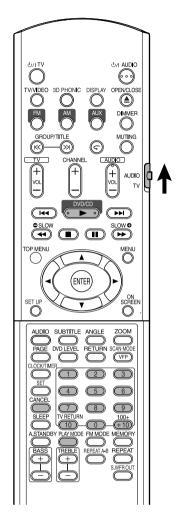

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



Play the disc in the desired order (Program Playback)

It is possible to program a maximum of 99 chapters or tracks. The same chapter or track can be programmed more than once.

1 While the disc is stopped, press PLAY MODE repeatedly to display "PRGM." on the display window on the main unit.



2 Create a program following the description on the TV screen.

Refer to "How to use the number buttons" (page 15).

- The input content varies depending on the disc type.
 - DVD VIDEO: Titles and chapters
 - VCD, SVCD, CD: Tracks
 - DVD AUDIO, MP3/WMA:

Groups and tracks

- To select a DVD AUDIO bonus group, carry out the operations of "Playing the Bonus Group" on page 27 in advance to erase the display "BONUS".
- If the input number of chapters or tracks is greater than 99, "MEM FULL" will be displayed.
- In the case of a VCD, SVCD or CD, when the total playback time reaches 9 hours 59 minutes 59 seconds, "--:--" will be displayed on the display window (it is possible to continue programming).

To program on the display window on the main unit, operate as follows:

- (1) Select a title/group using the number buttons.
- (2) Designate a chapter/track number using the number buttons.
 - Refer to "How to use the number buttons" (page 15).
 - The program number will be displayed on the lower display window (Ex.: "P2").
- (3) Repeat the above operations (1) and (2) to complete the program. Then, advance to Step 3.

NOTE

- The group/title number flashes on the display window after making each program step.
- Only for a DVD VIDEO, DVD AUDIO, VCD, or an MP3/WMA: If you press ENTER instead of designating a track/chapter number, "ALL" is displayed and all of the tracks/chapters in the selected group/title are programmed.

3 Press DVD/CD ▶.

- To resume normal playback, press PLAY MODE repeatedly to show the playback indication on the display window on the main unit while the disc is stopped. The program content will not be erased.
- The following operations erase the program content:
 - Press CANCEL repeatedly (Programs will be erased one by one)
 - Press while the disc is stopped
 - · Open the disc tray
 - Turn off the power

Playing the disc in a random order (Random Playback)


- 1 Press PLAY MODE repeatedly to display "RANDOM" on the display window on the main unit while the disc is stopped.
 - "RANDOM" will also be displayed on the TV screen.

2 Press DVD/CD ▶.

- The same chapter or track will not be played twice.
- To resume normal playback, press PLAY MODE repeatedly to show the playback indication on the display window on the main unit while the disc is stopped.
- Random Playback will also be canceled by carrying out the following operations:
 - Open the disc tray
 - · Turn off the power
- The previous track will not be returned to even if I◄◄ is pressed repeatedly during Random Playback (the beginning of the current chapter or track will be returned to).

Repeat Playback

Refer to page 17 for Repeat Playback of MP3 and JPEG files.

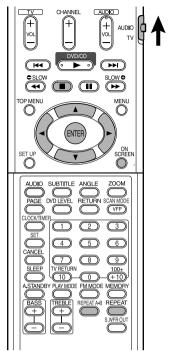

Playing the title/chapter/ group/track/all tracks repeatedly (REPEAT)



1 Press REPEAT during playback.

 Each time you press the button, the Repeat mode and its indication change as follows:

For DVD VIDEO

Repeat items	On the TV	On the display window
Current chapter	СНАР	REP CHAP
Current title	TITLE	REP TTL
Cancel	OFF	REP OFF

For DVD AUDIO

Repeat items	On the TV	On the display window
Current track	TRACK	REP TRK
Current group	GROUP	REP GRP
Cancel	OFF	REP OFF

For CD/VCD/SVCD

Repeat items	On the TV	On the display window
Current track	TRACK	REP TRK
All tracks	Č)ALL	REP ALL
Cancel	OFF	REP OFF

NOTE

- For a VCD and SVCD, the operation can be carried out only when the disc is stopped or during playback without the PBC function.
- It is possible to set Repeat mode on the menu bar.
 For how to operate, refer to "Playing the designated part repeatedly (A-B Repeat Playback)" (page 23).
- For a DVD VIDEO and DVD AUDIO, if the source is switched to FM, AM or AUX, the Repeat mode will be canceled.

Repeat Playback during Program or Random Playback

Repeat items	On the TV	On the display window
Current chapter/ track	STEP or REPEAT STEP	REP STEP ⊊1
All tracks during Program/Random play	CALL or REPEAT ALL	REP ALL
Cancel	OFF or no indication	REP OFF

Playing the designated part repeatedly (A-B Repeat Playback)



1 Press ON SCREEN twice during playback.

The menu bar (page 28) will be displayed.

- 2 Press cursor <-/>
 ✓/► to select
 color: |.
- **3** Press ENTER.
- 4 Press cursor ▲/▼ to display


A−B •

Other Repeat modes can be selected here. For other Repeat modes, refer to "Playing the title/chapter/group/track/all tracks repeatedly (REPEAT)" (page 22).

- 5 Press ENTER at the start point of the part to be repeated (designating A point).
 - The icon on the menu bar will be 🖒 🕒 .
- 6 Press ENTER at the end point of the part to be repeated (designating B point).
 - The icon on the menu bar will be <u>A-B</u> and the part between A and B points will be played repeatedly.
 - A-B Repeat Playback will be canceled by carrying out the following operations:
 - Press ■.
 - Select 🖒 A-B | and press **ENTER** twice.

NOTE

- A-B Repeat Playback is possible only within the same title or track. A-B Repeat Playback cannot be carried out during PBC playback, Program Playback, Random Playback and Repeat Playback.
- You can do the A-B Repeat Playback using the REPEAT A-B button on the remote control.

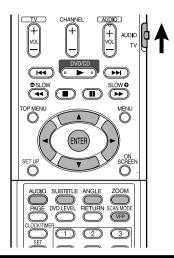


Selecting the subtitles

VIDEO SVCD DVD AUDIO

(only for moving image)

1 Press SUBTITLE during playback of a disc containing subtitles in several languages.

Ex.:

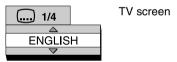

 Each time you press the button, the subtitle will be alternated between ON and OFF.

2 Press cursor ▲/▼ to select a subtitle language.

- For a language code such as "AA", refer to "Language codes" (page 38).
- The manner of displaying subtitle languages may be different depending on the disc.
- **3** Wait for a few seconds or press ENTER to go off the window.

NOTE

- It is also possible to operate by using the menu bar (page 28).
- For an SVCD, each time you press SUBTITLE in Step 1, the subtitle type and OFF will be alternated.

Selecting the audio language

DVD DVD VCD SVCD

1 Press AUDIO during playback of a disc containing several audio languages.

Ex.:



- Each time you press the button, the audio language will be alternated. Also, the audio language can be changed by pressing cursor ▲/▼.
- For a language code such as "AA", refer to "Language codes" (page 38).
- "ST", "L" and "R" displayed when playing a VCD or SVCD respectively represent "Stereo", "Left sound" and "Right sound".
- **2** Wait for a few seconds or press ENTER to go off the window.

NOTE

It is also possible to operate by using the menu bar (page 28).

Selecting a view angle

DVD DVD VIDEO AUDIO

(only for moving image)

1 Press ANGLE during playback of a scene containing multi-view angles.

Ex.:



- Each time you press the button, the angle will be alternated. Also, the angle can be changed by pressing cursor ▲/▼.
- 2 Wait for a few seconds or press ENTER to go off the window.

NOTE

It is also possible to operate by using the menu bar (page 28).

Enlarging the picture



DVD VCD SVCD DVD JPEG





(only for moving image)

Press ZOOM during playback or while paused.

- · Each time you press the button, the picture magnification will be changed.
- (For a JPEG) You cannot change the picture magnification during slide-show playback.

2 Select the portion you want to see by using cursor $\triangleright/\triangle/\blacktriangleleft/\blacktriangledown$.

• To resume normal playback, select "ZOOM OFF" in Step 1.

Adjusting the picture







Press VFP during playback or while paused.

The current setting will be displayed on the TV screen.



- GAMMA: Adjust this if the neutral color is bright or dark. The brightness of dark and bright portion is maintained.
- BRIGHTNESS: Adjust this if the picture is bright or dark on the whole.
- . CONTRAST: Adjust this if the far and near position is unnatural.
- **SATURATION:** Adjust this if the picture is whitish or blackish.
- TINT: Adjust this if the appearance of flesh tone is unnatural.
- SHARPNESS: Adjust this if the picture is indistinct.

2 Press cursor <-/> ✓/> to select VFP


- It is recommended to select "NORMAL" usually, or "CINEMA" in a dark room. When either "NORMAL" or "CINEMA" is selected, go to Step 7.
- · When either "USER 1" or "USER 2" is selected, the adjustment can be carried out in detail in the operations after Step 3.
- 3 Press cursor **▲/▼** to select an item to be adjusted.
- 4 Press ENTER.



- 5 Press cursor **△**/**▼** to change the value.
- 6 Press ENTER. To adjust other items, go back to Step 3.
- Press VFP to go off the window.

NOTE

- If no operation is made for several seconds during the procedure, the settings made so far will be automatically stored.
- "VFP" is an abbreviation of "Video Fine Processor".

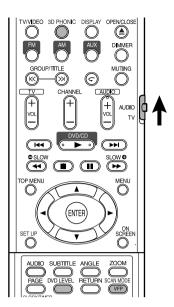

Creating realistic sound (3D PHONIC)











The two speakers produce an effect resembling surround-sound.


Press 3D PHONIC during playback.

Ex.:

TV screen



· Each time you press the button, the 3D PHONIC will be alternated as follows:

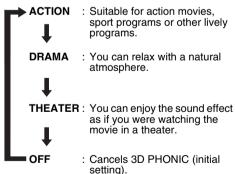

· While 3D PHONIC is activated, "3D PHONIC" appears and the 3D PHONIC indicator lights on the display window.

NOTE

- 3D PHONIC is effective for the speakers and headphones.
- When noise is produced or sound is distorted, set 3D PHONIC to "OFF".
- You cannot operate some DVD AUDIO discs.

Adjusting playback level (DVD LEVEL)

The audio of a DVD VIDEO may be recorded at a lower level (volume) than for other types of disc. If the difference is not to your liking, adjust the DVD Level

Press DVD LEVEL during playback.

- Each time you press the button, the level will be alternated among "NORMAL", "MIDDLE" and "HIGH".
- · Select the level while listening to the sound played.

NOTE

- DVD Level is effective only for playback of a DVD
- Even if the DVD Level is changed, the output level from the digital audio output terminal will not be changed.

Enjoying better pictures (SCAN MODE)

In the Progressive mode, better pictures can be enjoyed.

CAUTION

- In order to enjoy pictures in the Progressive mode, the following requirements should be met:
 - There must be a component video input terminal on the TV set connected to the main unit.
 - The main unit and the TV set must be connected using a component video cord (page 11).

When the above requirements are not satisfied, leave the main unit in the Interlace mode. If the Progressive mode is set, pictures may be distorted.

Press and hold SCAN MODE for 2 seconds when there is no disc loaded or while the disc is stopped.

• Each time you press and hold the button, the scan mode alternates between the "PROGRESSIVE" mode and the "INTERLACE" mode.

NOTE


Progressive mode:

All scanned lines will be displayed at once. Pictures of higher resolution than those in the Interlace mode can be realized.

Interlace mode:

This is a conventional image method. Half of the scanned lines displayed in the Progressive mode will appear, alternating with the other half.



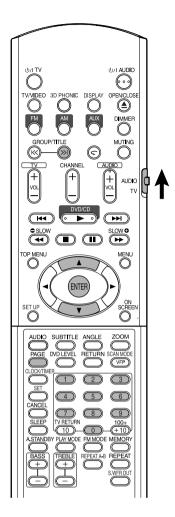

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



Playing the Bonus Group

There are some DVD AUDIO discs with a special group, called "Bonus Group", recorded.

NOTE

This operation can be carried out when "BONUS" is lit on the display window on the main unit.

Press GROUP/TITLE ≫ repeatedly during playback to select a bonus group.

"KEY____" appears on the TV screen, and on the display window on the main unit.

- The bonus group is usually recorded as the last group.
- 2 Press the number buttons to enter a pin code (4 digits).

The method of getting a pin code may be different depending on the disc.

3 Press ENTER.

- When a correct pin code is entered, "BONUS" disappears and the playback of the bonus group starts.
- If an incorrect pin code is entered, try entering a correct pin code again.

Browsable Still Pictures (B.S.P.)

There are some DVD AUDIO discs with still pictures recorded. Among the still pictures, there are pictures called B.S.P. (Browsable Still Pictures). With these pictures, it is possible to switch a picture as if turning over pages.


NOTE

This operation can be carried out when "B.S.P." is lit on the display window on the main unit.

1 Press PAGE during playback.

Each time you press the button, the still picture will be switched over. It is also possible to switch the picture using cursor $\blacktriangle/\blacktriangledown$.


Ex.:

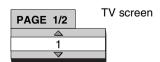

2 Wait for a few seconds or press ENTER to go off the window.

Using the menu bar



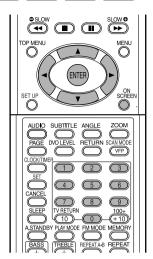

NOTE

- Set the remote control mode selector to AUDIO before using the number buttons.

 TV
- This operation can be carried out when there is a disc loaded. There are some functions that may not work while the disc is stopped.

1 Press ON SCREEN twice.

The status bar and the menu bar will appear on the TV screen.



The above is an example for a DVD VIDEO.


2 Press cursor **◄/►** to select an item to be operated.

3 Press ENTER.

- The selected function can be set. For the setting content, refer to the following "Functions list".
- · The currently active function shows.
- To delete the menu bar, press ON SCREEN.


Functions list

For the functions with no special description for the operations, press cursor ▲/▼ to select, and press ENTER to determine.

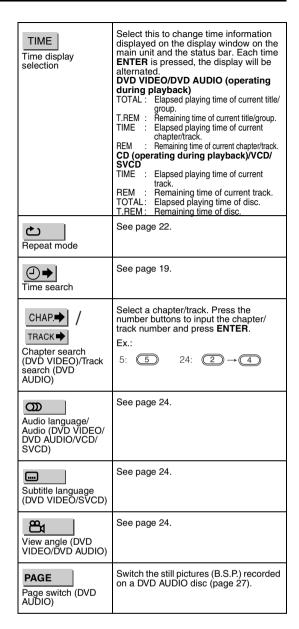

Information displayed on the status bar

DVD VIDEO/DVD AUDIO (the example below is for a DVD VIDEO)

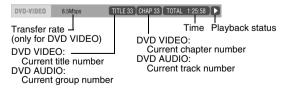


VCD/SVCD/CD (the example below is for a CD)



NOTE

The playback status mark has the same meaning of the mark on the On-screen guide (page 15).



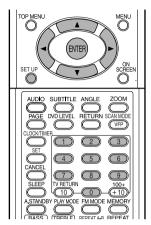


The initial settings of the system can be changed according to the environment the system is used in.

NOTE

- Set the remote control mode selector to
 AUDIO before using the number buttons.
- The top and bottom of the preference screen may not be displayed on a wide TV. Adjust the picture size on the TV.

Basic operations

- 1 Press SET UP while the disc is stopped or no disc is loaded ("NO DISC" is displayed).
 - The following screen will be displayed on the TV.

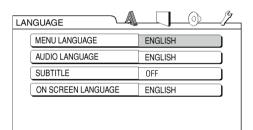

 Proceed with operations by following the description on the TV screen.



LANGUAGE

NOTE

 If the selected language is not recorded on the disc, the optimum language set for the disc will be displayed. • For a language code such as "AA", refer to the "Language codes" (page 38).

Items	Contents	
MENU LANGUAGE	Select the language for the DVD VIDEO menu.	
AUDIO LANGUAGE	Select the audio language for the DVD VIDEO.	
SUBTITLE	Select the subtitle language for the DVD VIDEO.	
ON SCREEN LANGUAGE	Select the language displayed on the preference screens.	

PICTURE

Items	Contents (: initial setting)
MONITOR TYPE	Select a display method suitable for your TV. 16: 9: Select this when the aspect ratio of your wide TV is fixed to 16:9 (when playing a DVD VIDEO recorded at 4:3, the system automatically adjusts the screen width of the output signal). 4:3 LB (Letter Box): Select this when the aspect ratio of your TV is conventional 4:3. While viewing a wide screen picture, the black bars appear on the top and bottom of the screen. 4:3 PS (Pan Scan): Select this when the aspect ratio of your TV is conventional 4:3. While viewing a wide screen picture, the left and right edges of the picture will not be shown on the screen. (If the disc is not compatible with Pan Scan, the picture will be displayed at the Letter Box ratio.)
PICTURE SOURCE	Select an item suitable to the video source. AUTO: The video source type (a video or film) is automatically selected. FILM: Select this item when you want to view a film or video recorded with the progressive scan method. VIDEO: Select this item when you want to view a normal video.
SCREEN SAVER	Select the Screen Saver mode between ON / OFF (Screen Saver activates when there is no operation made for about 5 minutes since a still picture was last displayed).
FILE TYPE	If there are both MP3/WMA and JPEG files on a disc, you can select which files to play. AUDIO Select this item when you want to play back MP3/WMA files. STILL PICTURE: Select this item when you want to play back JPEG files.



AUDIO

Items	Contents (: initial setting)			
DIGITAL AUDIO OUTPUT	Select an output signal type from the following in accordance with the device connected to the digital audio output terminal (AV amplifier, etc.). (See the list below for the preference items and output signal.)			
	PCM ONLY: Device corresponding only to linear PCM.			
	DOLBY DIGITAL/PCM: Dolby digital decoder or a device having the same function.			
	STREAM/PCM: DTS/Dolby digital decoder or a device having the same function.			
DOWN MIX	Switch signal from the digital output terminal of the DVD VIDEO according to the connected device. Select this when Digital Audio Output is set to "PCM ONLY".			
	DOLBY SURROUND: A Dolby Pro Logic decoder-built-in device.			
	STEREO : An ordinary device.			
	When 3D PHONIC is activated, Down Mix does not work.			
D (Dynamic). RANGE COMPRESSI ON	To make adjustments for the difference between a high volume and a low volume when playing back with low volume (only for a DVD recorded with Dolby digital).			
	AUTO: D. Range Compression automatically works.			
	ON: D. Range Compression always works.			



Items	Contents (: initial setting)		
RESUME	Select ON /OFF. (page 18)		
ON SCREEN GUIDE	Select ON /OFF. (page 15)		
PARENTAL LOCK	Set the Parental Lock function to cut off violent scenes or replace the scenes with others. (This is effective only for discs equipped with the Parental Lock function.)		
	COUNTRY CODE (page 31) Select your country.		
	SET LEVEL: The restriction is stricter as the number becomes smaller. "NONE" is no restriction.		
	PASSWORD (essential): Enter four-digit number as your password using the number buttons (1-9, 0) every time. (Enter "8888" if you forget your password.) The password is required at the time of playback.		
	If you enter a wrong password three times, "EXIT" will be automatically selected.		

List of relationships of DIGITAL AUDIO OUTPUT preference items and output signal

Playback disc	DIGITAL AUDIO OUTPUT			
Playback disc	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY	
48 kHz, 16/20/24 bits Linear PCM DVD VIDEO 96 kHz linear PCM DVD VIDEO	48 kHz, 16 bits stereo linear PCM			
48/96/192 kHz, 16/20/24 bits linear PCM DVD AUDIO				
44.1/88.2/176.4 kHz, 16/20/24 bits linear PCM DVD AUDIO	44.1 kHz, 16 bits stereo linear PCM			
DTS DVD VIDEO	DTS bit stream 48 kHz, 16 bits stereo linear PCM			
DOLBY DIGITAL DVD VIDEO/ DVD AUDIO	DOLBY DIGITAL bit stream		48 kHz, 16 bits stereo linear PCM	
CD/VCD/SVCD	44.1 kHz, 16 bits stereo linear PCM/48kHz, 16 bits linear PCM			
DTS CD	DTS bit stream 44.1 kHz, 16 bits linear PCM			
MP3/WMA disc	32/44.1/48 kHz, 16 bits stereo linear PCM			

NOTE

- For a DVD VIDEO: There is a 20 bit or 24 bit output for DVD VIDEO without content protection set.
- For a DVD AUDIO: There is no output for DVD AUDIO with content protection set.


AD	Andorra		
AE	United Arab Emirates		
AF	Afghanistan		
AG	Antigua and Barbuda		
Al	Anguilla		
AL	Albania		
AM	Armenia		
AN	Netherlands Antilles		
AO	Angola		
AQ	Antarctica		
AR	Argentina		
AS	American Samoa		
AT	Austria		
AU	Australia		
AW	Aruba		
AZ	Azerbaijan		
BA	Bosnia and		
	Herzegovina		
BB	Barbados		
BD	Bangladesh		
BE	Belgium		
BF	Burkina Faso		
BG	Bulgaria		
ВН	Bahrain		
BI	Burundi		
BJ	Benin		
BM	Bermuda		
BN	Brunei Darussalam		
ВО	Bolivia		
BR	Brazil		
BS	Bahamas		
BT	Bhutan		
BV	Bouvet Island		
RW	l Botswana		
BW	Botswana Belarus		
BY	Belarus		
BY BZ	Belarus Belize		
BY BZ CA	Belarus Belize Canada		
BY BZ	Belarus Belize Canada Cocos (Keeling)		
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands		
BY BZ CA	Belarus Belize Canada Cocos (Keeling)		
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands		
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic		
BY BZ CA CC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo		
BY BZ CA CC CF CF	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland		
BY BZ CA CC CF CG CH CI	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire		
BY BZ CA CC CF CG CH CI CK	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands		
BY BZ CA CC CF CG CH CI CK CL	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile		
BY BZ CA CC CF CG CH CI CK CL CM	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon		
BY BZ CA CC CF CG CH CI CK CL CM CN	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China		
BY BZ CA CC CF CG CH CI CK CL CM CN CO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia		
BY BZ CA CC CF CG CH CI CK CL CM CN	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China		
BY BZ CA CC CF CG CH CI CK CL CM CN CO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde		
BY BZ CA CC CF CG CH CI CK CL CM CO CO CR CO CCR CU CV CX	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CX CY	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CX CY CZ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ DK DM	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CX CY DE DJ DK DM DO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CY CZ DE DJ DK DM	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CX CY DE DJ DK DM DO	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CY CZ DE DJ DK DM DO DZ EC	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ EC EE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia		
BY BZ CA CC CF CG CH CI CK CL CM CN CO CR CU CV CZ DE DJ DK DM DO DZ EC EE EG	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia Egypt		
BY BZ CA CC CF CG CH CI CK CL CM CO CR CU CV CZ DE DJ DK DM DO DZ EC EE	Belarus Belize Canada Cocos (Keeling) Islands Central African Republic Congo Switzerland Côte d'Ivoire Cook Islands Chile Cameroon China Colombia Costa Rica Cuba Cape Verde Christmas Island Cyprus Czech Republic Germany Djibouti Denmark Dominica Dominican Republic Algeria Ecuador Estonia		

ES	Spain	
ET	Ethiopia	
FI	Finland	
FJ	Fiji	
FK	Falkland Islands	
	(Malvinas)	
FM	Micronesia	
' '*'	(Federated States of)	
	Faroe Islands	
FO		
FR	France	
FX	France, Metropolitan	
GA	Gabon	
GB	United Kingdom	
GD	Grenada	
GE	Georgia	
GF	French Guiana	
GH	Ghana	
GI	Gibraltar	
GL	Greenland	
GM	Gambia	
GN	Guinea	
GP	Guadeloupe	
GQ	Equatorial Guinea	
GR	Greece	
GS	South Georgia and	
	the South Sandwich	
	Islands	
GT	Guatemala	
GU	Guam	
GW	Guinea-Bissau	
GY	Guyana	
HK	Hong Kong	
НМ	Heard Island and	
	McDonald Islands	
HN	Honduras	
HR	Croatia	
HT	Haiti	
HU	Hungary	
ID	Indonesia	
IE	Ireland	
IL	Israel	
IN	India	
10	British Indian Ocean	
	Territory	
IQ	Iraq	
IR	Iran (Islamic Republic of)	
IS	Iceland	
IT	Italy	
JM	Jamaica	
JO	Jordan	
JP	Japan	
KE	Kenya	
KG	Kyrgyzstan	
KH	Cambodia	
KI	Kiribati	
KM	Comoros	
KN	Saint Kitts and Nevis	
KP	Korea, Democratic	
	People's Republic of	
KR	Korea, Republic of	
KW	Kuwait	
KY	Cayman Islands	
KZ	Kazakhstan	
LA	Lao People's	
	Democratic Republic	
LB	Lebanon	

LC	Saint Lucia	
LI	Liechtenstein	
LK	Sri Lanka	
LR	Liberia	
LS	Lesotho	
LT	Lithuania	
LU	Luxembourg	
LV	Latvia	
LY	Libyan Arab	
	Jamahiriya	
MA	Morocco	
MC	Monaco	
MD	Moldova, Republic of	
MG	Madagascar	
MH	Marshall Islands	
ML	Mali	
MM	Myanmar	
MN	Mongolia	
MO	Macau	
MP	Northern Mariana	
1711	Islands	
MQ	Martinique	
MR	Mauritania	
MS	Montserrat	
MT	Malta	
MU	Mauritius	
MV	Maldives	
MW	Malawi	
MX	Mexico	
MY	Malaysia	
MZ	Mozambique	
NA	Namibia	
NC	New Caledonia	
NE	Niger	
NF	Norfolk Island	
NG	Nigeria	
NI	Nicaragua	
NL	Netherlands	
NO	Norway	
NP	Nepal	
NR	Nauru	
NU	Niue	
NZ	New Zealand	
OM	Oman	
PA	Panama	
PE	Peru	
PF	French Polynesia	
PG	Papua New Guinea	
PH	Philippines	
PK	Pakistan	
PL	Poland	
PM	Saint Pierre and	
	Miquelon	
PN	Pitcairn	
PR	Puerto Rico	
PT	Portugal	
PW	Palau	
PY	Paraguay	
QA	Qatar	
RE	Réunion	
	Damania	
RO	Romania	
RO RU	Russian Federation	
RU	Russian Federation	
RU RW	Russian Federation Rwanda	
RU RW SA	Russian Federation Rwanda Saudi Arabia	

SD	Sudan	
SE	Sweden	
SG	Singapore	
SH	Saint Helena	
SI	Slovenia	
SJ	Svalbard and Jan	
	Mayen	
SK		
SL	Slovakia	
_	Sierra Leone	
SM	San Marino	
SN	Senegal	
SO	Somalia	
SR	Suriname	
ST	Sao Tome and Principe	
SV	El Salvador	
SY	Syrian Arab Republic	
SZ	Swaziland	
TC	Turks and Caicos	
	Islands	
TD	Chad	
TF	French Southern	
''	Territories	
TG		
_	Togo	
TH	Thailand	
TJ	Tajikistan	
TK	Tokelau	
TM	Turkmenistan	
TN	Tunisia	
TO	Tonga	
TP	East Timor	
TR	Turkey	
TT	Trinidad and Tobago	
TV	Tuvalu	
TW	Taiwan	
TZ	Tanzania, United	
	Republic of	
UA	Ukraine	
UG	Uganda	
UM	United States Minor	
	Outlying Islands	
LIS	United States	
US	United States	
UY	United States Uruguay	
UY UZ	United States Uruguay Uzbekistan	
UY	United States Uruguay Uzbekistan Vatican City State	
UY UZ VA	United States Uruguay Uzbekistan Vatican City State (Holy See)	
UY UZ	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the	
UY UZ VA VC	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines	
UY UZ VA VC VE	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela	
UY UZ VA VC VE VG	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British)	
UY UZ VA VC VE	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela	
UY UZ VA VC VE VG	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British)	
UY UZ VA VC VE VG VI	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.)	
UY UZ VA VC VE VG VI VN	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam	
UY UZ VA VC VE VG VI VN VV	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu	
VY UZ VA VC VE VG VI VN VU WF	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands	
UY UZ VA VC VE VG VI VN VU WF	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa	
UY UZ VA VC VE VG VI VN VU WF	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa Yemen	
UY UZ VA VC VE VG VI VN VN VU WF WS YE YT	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte	
UY UZ VA VC VE VG VI VN VN VU WF WS YE YT YU	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia	
UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa	
UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA ZM	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa Zambia	
UY UZ VA VC VE VG VI VN VU WF WS YE YT YU ZA	United States Uruguay Uzbekistan Vatican City State (Holy See) Saint Vincent and the Grenadines Venezuela Virgin Islands (British) Virgin Islands (U.S.) Viet Nam Vanuatu Wallis and Futuna Islands Samoa Yemen Mayotte Yugoslavia South Africa	

Listening to a radio broadcast

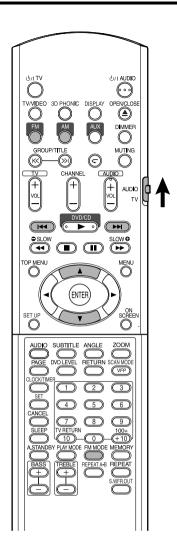

NOTE

 Set the remote control mode selector to AUDIO before using the number buttons.



You can tune in to FM or AM.

Selecting a station

- 1 Press FM or AM.
- 2 Press ►►\/I◄◄ to select the station (frequency).

Automatic tuning:

Hold down ▶►I/I◄◄ until the system starts searching, and then release the button. (The AUTO indicator lights while searching.) When a station of sufficient signal strength is tuned in to, the system stops searching automatically.

To stop searching manually, press ▶►I/I◄◄.


Manual tuning:

Each time you press ►►I/I◄◄, the frequency changes.

 When an FM stereo program is received, the ST (Stereo) indicator lights.

NOTE

If the stereo FM program currently tuned in to is noisy, you can improve the reception by pressing FM MODE to switch to the monaural mode. If you press FM MODE again, or tune in to another station, the receiving mode returns automatically to the stereo mode.

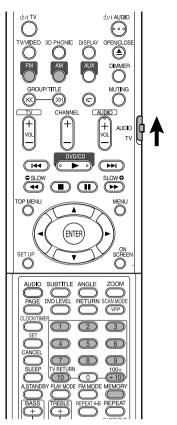

Presetting stations in the system allows you to easily tune in to a station.

NOTE

Set the remote control mode selector to **AUDIO** before using the number buttons.



Presetting stations

The system stores up to 30 FM stations and up to 15 AM stations.

- 1 Select a station you want to store (page 32 for how to select).
- **2** Press MEMORY.

"MEMORY" is flashing on the display window for a while.

- 3 Select the number you want to store by pressing number buttons while "MEMORY" is flashing.
 - You can also select the number by using the number buttons.
 - Refer to "How to use the number buttons" (page 15).
- 4 Press MEMORY while the selected number is flashing.

"STORED" appears on the display window and the selected station is stored.

NOTE

- Storing a new station to a used number erases the previously stored station.
- After storing new stations, do not unplug the AC power cord to turn off the system. If you do so, the new preset stations will be cleared.


Tuning in to a preset station

- 1 Press FM or AM to select either FM or AM.
- 2 Press the number buttons to select the memory number of a station you want to tune in to.

Refer to "How to use the number buttons" (page 15).

You can also select by pressing ►►/◄<.


Listening to the sound of other audio device

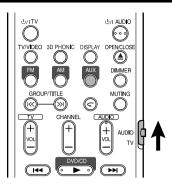

Connect the other audio device to this system in advance (page 10).

- 1 Press AUX.
 The source changes to AUX.
- 2 Play the other audio device.
 For details, refer to the manual of the device connected.
- Adjust the volume and the sound quality of the system (page 10).

Setting the Various Timer

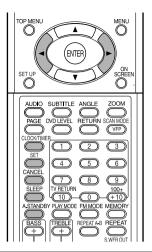

Setting the built-in clock

Without setting the built-in clock, you cannot use any timers.

- To exit from the clock setting, press CLOCK/ TIMER as required.
- To correct a misentry during the procedure below, pressing CANCEL can return to the previous step.
- 1 Press CLOCK/TIMER.



- If you have already adjusted the clock before, press the button repeatedly until the clock time starts flashing.
- 2 Press cursor ►/◄ to adjust the hour, then press SET.
- 3 Press cursor ►/◄ to adjust the minute, then press SET.

Now the built-in clock starts to work.

Setting the daily timer

Using the daily timer, you can wake up with your favorite song.

- You can store the three daily timer settings; however, you can activate only one of the daily timer
- To correct a misentry during the procedure below, pressing CANCEL can return to the previous step.

How the daily timer works

Once the daily timer has been set, the timer indicator and timer number indicator (1/2/3) are lit on the display window. Daily timer turns on the system at the same time everyday until the timer setting is canceled manually or another daily timer is activated.


When the on-time comes:

The system turns on, tunes in to the last received station or start playback the loaded disc with the volume level set to the preset level. About one hour after the playback starts, the system stops it, and turns off (stand by) automatically.


- The timer setting remains in memory until you can change it.
- Without canceling the daily timer, you can change the source or adjust the volume after the daily timer starts playback.

1 Press CLOCK/TIMER repeatedly to show "DAILY 1."

• Each time you press the button, the clock setting changes as follows:

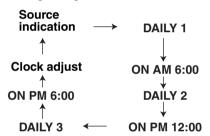

- 2 Press cursor ►/◄ to adjust the hour of the timer-on time, then press SET.
- 3 Press cursor ►/◄ to adjust the minute of the timer-on time, then press SET.
- 4 Repeat step 2 and 3 to set the timer-off time.
- 5 Press cursor ►/◄ to select the playback source, then SET.
 - Each time you press the button, the clock setting changes as follows:

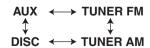

When selecting the tuner, press cursor ►/
 to select a preset channel.

- 6 Press cursor ►/◄ to adjust the volume level, then SET.
- 7 Turn off the system.

To turn off the timer setting

- 1 Press CLOCK/TIMER repeatedly to select the timer setting.
- **2** Press CANCEL to turn off the selected setting.
 - Pressing SET activates the timer setting again.

Auto Standby

If there is no operation for 3 minutes while the disc is stopped, the power will be automatically turned off.

Press A.STANDBY during playback or while the disc is stopped, or no disc is loaded ("NO DISC" appears).

The A.STANDBY indicator lights on the display window on the main unit.

When a stopped state is entered (after playback is finished, for example), the A.STANDBY indicator starts blinking.

This means that the power will be turned off automatically if there is no operation for 3 minutes. And, 10 seconds before the power is turned off, "A.STANDBY" starts flashing.

Releasing Auto Standby

Press A.STANDBY.

"A.STANDBY" will be turned off on the display window on the main unit.

NOTE

When the source is FM, AM or AUX, Auto Standby does not work.

Setting the Various Timer (continued)

Sleep Timer

When the time you specify elapses, the system will be turned off by itself.

Press SLEEP.

Each time you press the button, the time indicated on the display window on the main unit changes (in minutes).

Changing the time

Reselect the time by pressing SLEEP repeatedly.

Confirming the time

Press **SLEEP** once while Sleep Timer is set.

Releasing

Press **SLEEP** repeatedly until "SLEEP OFF" appears.

NOTE

Sleep Timer will also be released when the power is turned off.

Tray Lock

You can lock the disc tray to prevent the disc from being ejected.

Setting

While the system is turned off, press ≜ (Open/Close) with ■ (Stop) on the main unit held. "LOCKED" appears on the display window on the main unit.

Releasing

Carry out the same operations as those for setting. "UNLOCKED" appears on the display window on the main unit. When you encounter a problem that seems to be a fault, check the following points before contacting your JVC service center:

Power source

Power does not come on.

- The power cord is not connected to the main unit or an AC outlet.
 - → Connect the power cord correctly (page 11).

Operation

You cannot operate any button.

 Some specific operations may be inhibited for some discs.

The remote control does not work.

- The dry-cell batteries have run out.
 - → Replace the batteries (page 6).

A disc cannot be played back.

- In the case of DVD VIDEO discs
 - → Check the Region Code number of the discs (page 3).
- "NO PLAY" is displayed on the display window.

It is not a disc that can be played on this system.

- → Check the disc type (page 3).
- Parental Lock is set (page 30).

About images

■ No picture appears.

- · The video cord is not connected correctly.
 - → Page 11
- Both of the component video jack and Svideo jack are connected.
 - → Connect either (page 11).

■ The picture is distorted.

- A VCR is connected between the main unit and the TV set.
 - → Connect the main unit directly to the TV set (page 11).
- Although this system is connected to a non-Progressive TV set, DVD's scan mode is set to "PROGRESSIVE".
 - → Set the scan mode to "INTERLACE" (page 26).

The screen size is abnormal.

- The screen size is set improperly.
 - → Set "MONITOR TYPE" according to the TV set you are using (page 29).

■ The TV screen darkens.

- · "SCREEN SAVER" is set.
 - → If set, press any button (page 29).

■ The screen cannot be switched.

 The Progressive mode is applied only to component video output.

About sound

There is no sound.

- · Speakers are not connected correctly.
 - → Page 9
- · The sound is muted.
 - → Page 16
- "NO AUDIO" is displayed on the display window.

The disc may have been produced through illegal copying.

→ Confirm at the store where you bought the disc.

■ The sound is weak compared with TV or Video.

- "DVD LEVEL" is set to "NORMAL".
 - \rightarrow Set to other than "NORMAL" (page 26).

■ The sound is distorted.

- · The volume is turned up too high.
 - → Turn down the volume (page 16).

No sound comes out of the subwoofer.

- · "SUBWOOFER" is turned off.
 - → Press **S.WFR OUT** to turn on (page 10).

About radio

- The sound is noisy while receiving/Receiving is disabled.
 - · The antenna is not connected correctly.
 - → Connect the antenna correctly (page 8).

Troubleshooting (continued)

Others

- It is not possible to switch audio or subtitles between languages.
 - The disc does not contain 2 or more languages.
 - → If only a single language is recorded on the disc, switching to another language is impossible (page 24).
- No subtitle is displayed.
 - The disc does not contain any subtitles.
 - → A DVD VIDEO without subtitles cannot display any subtitles.
 - The subtitle language is set to "OFF".
 - → Specify a language (page 29).
 - Before or after A point or B point in A-B Repeat Playback, no subtitle may be displayed.
- The disc cannot be ejected.
 - · Tray Lock is set.
 - → page 36
- "LR ONLY" is displayed on the display window (for a DVD AUDIO).
 - Because, for the track being played back, down mix is inhibited for multi-channel sound, the sound of L and R is output directly (a normal action).

If the system does not work properly despite correction measures above

Many functions of this system are implemented by microcomputers. If pressing any button does not result in the normal action, disconnect the power plug from the outlet, wait for a while, and reconnect the system.

Language codes

			T -
Code	Language	Code	Language
AA	Afar	MK	Macedonian
AB	Abkhazian	ML	Malayalam
AF	Afrikaans	MN	Mongolian
AM	Ameharic	MO	Moldavian
AR	Arabic	MR	Marathi
AS	Assamese	MS	Malay (MAY)
AY	Aymara	MT	Maltese
ΑZ	Azerbaijani	MY	Burmese
BA	Bashkir	NA	Nauru
BE	Byelorussian	NE	Nepali
BG	Bulgarian	NL	Dutch
ВН	Bihari	NO	Norwegian
BI	Bislama	OC	Occitan
BN	Bengali, Bangla	OM	(Afan) Oromo
ВО	Tibetan	OR	Oriya
BR	Breton	PA	Panjabi
CA	Catalan	PL	Polish
CO	Corsican	PS	Pashto, Pushto
CS	Czech	PT	Portuguese
CY	Welsh	QU	Quechua
DA	Danish	RM	Rhaeto-Romance
DZ	Bhutani	RN	Kirundi
EL	Greek	RO	Rumanian
EO	Esperanto	RU	Russian
ET	Estonian	RW	Kinyarwanda
EU	Basque	SA	Sanskrit
FA	Persian	SD	Sindhi
FI	Finnish	SG	Sangho
FJ		SH	
FO	Fiji Faroese	SI	Serbo-Croatian
-			Singhalese
FY	Frisian	SK	Slovak
GA	Irish	SL	Slovenian
GD	Scots Gaelic	SM	Samoan
GL	Galician	SN	Shona
GN	Guarani	SO	Somali
GU	Gujarati	SQ	Albanian
HA	Hausa	SR	Serbian
HI	Hindi	SS	Siswati
HR	Croatian	ST	Sesotho
HU	Hungarian	SU	Sundanese
HY	Armenian	SV	Swedish
IA	Interlingua	SW	Swahili
IE	Interlingue	TA	Tamil
IK	Inupiak	TE	Telugu
IN	Indonesian	TG	Tajik
IS	Icelandic	TH	Thai
IW	Hebrew	TI	Tigrinya
JI	Yiddish	TK	Turkmen
JW	Javanese	TL	Tagalog
KA	Georgian	TN	Setswana
KK	Kazakh	TO	Tonga
KL	Greenlandic	TR	Turkish
KM	Cambodian	TS	Tsonga
KN	Kannada	TT	Tatar
KO	Korean (KOR)	TW	Twi
KS	Kashmiri	UK	Ukrainian
KU	Kurdish	UR	Urdu
KY	Kirghiz	UZ	Uzbek
LA	Latin	VI	Vietnamese
LN	Lingala	VO	Volapuk
LO	Laothian	WO	Wolof
LT	Lithuanian	XH	Xhosa
LV	Latvian, Lettish	YO	Yoruba
MG	Malagasy	ZU	Zulu
MI	Maori		

General

Power source: AC 120 V \sim , 60 Hz Power consumption: 25 W (in operation) 1.0 W (on standby)

Weight: 2.7 kg

External dimensions

150 mm x 152 mm x 246 mm $(W \times H \times D)$:

DVD player

Playable discs: DVD VIDEO, DVD AUDIO, VCD,

SVCD, CD, CD-R/RW (CD, VCD, MP3, WMA, JPEG format), DVD-R/-

RW (video format)

Video output

Color system: NTSC Horizontal resolution: 500 lines

Composite x1: 1.0 V (p-p)/75 Ω ,

synchronization negative S-video x1:

Y output: 1.0 V (p-p)/75 Ω , synchronization negative

C output: 0.286 V (p-p)/75 Ω

Y output: 1.0 V (p-p)/75 Ω Component x1: P_B/P_R output: 0.7 V (p-p)/75 Ω

Audio output

Analog sound output: Speakers x2

> 18 W per channel, Output power:

min. RMS, at 4Ω at 1 kHz with no more than 10% total harmonic distortion

Fitting impedance: 4Ω to 16Ω Headphones x1: 11 mW/32 Ω Fitting impedance: 16 Ω to 1 k Ω Subwoofer x1: 500 mVrms/10 k Ω

Digital sound output:

-21 dBm to -15 dBm Optical x1:

Audio input

Sound input: AUX x1

400 mV/50 k Ω

Tuner

FM tuner:

Receiving frequency: 87.5 MHz to 108.0 MHz Antenna: 75 Ω - Unbalanced type

AM tuner:

Receiving frequency: 530 kHz to 1 710 kHz

Antenna: External antenna jack (loop

antenna)

Speaker

Full range Type:

> 1-way bass-reflex type Magnetically shielded type

8 cm cone x1

Speaker: Frequency response: 60 to 20 000 Hz

Power handling capacity: 20 W Impedance: 4 O.

Sound pressure level: 81 dB/W·m

Dimension (W x H x D): 120 mm x 150 mm x 188 mm

Weight (1 unit): 1.5 ka

Designs and Specifications are subject to change without notice.

JVC