


# JVC

## INSTRUCTIONS

### HARD DISK CAMCORDER

# GZ-MG26E/EK

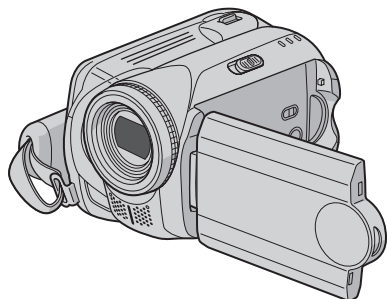

ENGLISH

GETTING STARTED ... 8

RECORDING ... 16  
... 20

PLAYBACK ... 26  
... 30

EDITING/PRINTING ... 36

DUBBING ... 47

MENU SETTINGS ... 50

FURTHER INFORMATION ... 56

To deactivate the demonstration mode, set "DEMO MODE" to "OFF". (→ pg. 51)


#### Dear Customer,

Thank you for purchasing this hard disk camera. Before use, please read the safety information and precautions contained in pages 4 and 5 to ensure safe use of this product.

LYT1632-001A

EN

The camera has a built-in high-capacity HDD (hard disk drive) that enables you to record videos and still images in massive quantities.

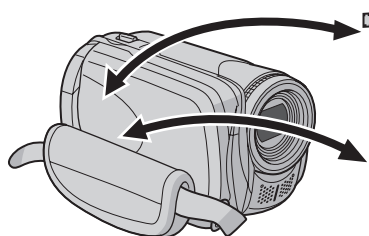

- To record videos (☞ pg. 16)
- To playback videos (☞ pg. 26)

- To record still images (☞ pg. 20)
- To playback still images (☞ pg. 30)



### SD Memory Card

You can also record onto SD cards.

“When Using an SD Card” (☞ pg. 15)

### Auto/Manual Recording Mode

You can record without using any complicated operations in Auto recording mode.

Manual recording mode, on the other hand, enables you to use special effects and make manual adjustments to record videos that are even more vivid. “To change to manual recording mode” (☞ pg. 22)

### Video Event Registration

(☞ pg. 17)

You can register recorded videos to events according to their content. This enables you to search and select files by content (event).



### Editing Files on Your PC

(☞ SOFTWARE INSTALLATION AND USB CONNECTION GUIDE)


USB 2.0 enables the smooth transfer of video and still images to a computer. With the bundled image editing software, you can easily edit video and create your own DVDs.



### Direct Printing

(☞ pg. 46)

 If your printer is compatible with PictBridge, still images can be printed easily by connecting the camera directly to the printer with a USB cable.



Please read the following instructions before using the camera.

## Make a backup of important recorded data

It is recommended to copy your important recorded data to a DVD or other recording media for storage. (☞ pg. 47)

## Make a trial recording

Before the actual recording of important data, make a trial recording and play back the recorded data to check that the video and sound have been recorded correctly.

## Check the compatibility of recording media

- The SD cards that are guaranteed to work with this camera are those by **Panasonic**, **TOSHIBA**, **pqi** (still image only) and **Sandisk**. If other media are used, they may fail to record data correctly, or they may lose data that had already been recorded.
- For video recording, use a high-speed SD card (at least 10 MB/s).
- MultiMediaCards are not supported.

## Format recording medium before use

Before using this camera, format the built-in hard disk or SD cards. This will also ensure stable speeds and operation when accessing the recording medium. (☞ pg. 39)

## Make sure you hold the camera correctly during recording

Do not cover the area near the lens, stereo microphone, or camera sensor with your finger or other object while recording. (☞ pg. 10)

## When a certain length of time passes without operation

- When using the battery, the power will turn off automatically to conserve power. Use the power switch to turn on the power again.
- When using the AC adapter, the access lamp lights up, and the LCD turns off (the camera enters the sleep mode).

## Reset the camera if it does not operate correctly

This camera uses a microcomputer. Factors such as background noise and interference can prevent it from operating correctly. If the camera does not operate correctly, reset the camera. (☞ pg. 56)

## If a problem occurs with the SD card, bring the card together with the camera for repairs

When requesting repairs for breakdowns by your dealer or JVC service centre, be sure to bring your camera together with the SD card. If one of them is not included, the cause cannot be diagnosed, and the repair cannot be made properly.

## Precautions on handling batteries

- When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be strictly followed.
- If the camera is subjected to electrostatic discharge, turn the power off before using it again.
- This product includes patented and other proprietary technology and will only operate with a JVC Data Battery. Use the JVC BN-VF707U/ VF714U/VF733U battery packs. Using generic non-JVC batteries can cause damage to the internal charging circuitry.
- If the battery operation time remains extremely short even after the battery is fully charged, the battery is worn out and needs to be replaced. Please purchase a new one.
- Since the AC adapter processes electricity internally, it becomes warm during use. Be sure to use it only in well-ventilated areas.
- After 5 minutes has elapsed in record-standby mode, the camera will automatically turn off its power supplied from the AC adapter. In this case, battery charge starts if the battery is attached to the camera.

## INFORMATION

Video recording (with sound) that was made especially for demonstration at shops might be remaining on the hard disk of the camera that you have purchased.

To delete this video file, please refer to "Deleting Files" (☞ pg. 36)/"Formatting a Recording Medium" (☞ pg. 39).

**IMPORTANT (for owners in the U.K.)**  
**Connection to the mains supply in the United Kingdom.**  
**DO NOT cut off the mains plug from this equipment.**

If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.

 
**BE SURE to replace the fuse only with an identical approved type, as originally fitted, and to replace the fuse cover.**

If nonetheless the mains plug is cut off be sure to remove the fuse and dispose of the plug immediately, to avoid possible shock hazard by inadvertent connection to the mains supply.

If this product is not supplied fitted with a mains plug then follow the instructions given below:

**DO NOT** make any connection to the Larger Terminal coded E or Green.

The wires in the mains lead are coloured in accordance with the following code:



If these colours do not correspond with the terminal identifications of your plug, connect as follows:  
 Blue wire to terminal coded N (Neutral) or coloured black.  
 Brown wire to terminal coded L (Live) or coloured Red.  
 If in doubt — consult a competent electrician.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD,**  
**DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**CAUTIONS:**

- To prevent shock, do not open the cabinet. No user serviceable parts inside. Refer servicing to qualified personnel.
- When you are not using the AC adapter for a long period of time, it is recommended that you disconnect the power cord from AC outlet.

**NOTES:**

- The rating plate and safety caution are on the bottom and/or the back of the main unit.
- The serial number plate is on the battery pack mount.
- The rating information and safety caution of the AC adapter are on its upper and lower sides.

**Caution on Replaceable lithium battery**

The battery used in this device may present a fire or chemical burn hazard if mistreated.  
 Do not recharge, disassemble, heat above 100°C or incinerate.

Replace battery with Panasonic (Matsushita Electric), Sanyo, Sony or Maxell CR2025.  
 Danger of explosion or Risk of fire if the battery is incorrectly replaced.

- Dispose of used battery promptly.
- Keep away from children.
- Do not disassemble and do not dispose of in fire.

When the equipment is installed in a cabinet or on a shelf, make sure that it has sufficient space on all sides to allow for ventilation (10 cm or more on both sides, on top and at the rear).

Do not block the ventilation holes.

(If the ventilation holes are blocked by a newspaper, or cloth etc. the heat may not be able to get out.)

No naked flame sources, such as lighted candles, should be placed on the apparatus.

When discarding batteries, environmental problems must be considered and the local rules or laws governing the disposal of these batteries must be followed strictly.

The apparatus shall not be exposed to dripping or splashing.

Do not use this equipment in a bathroom or places with water.

Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups etc.) on top of this unit.  
 (If water or liquid is allowed to enter this equipment, fire or electric shock may be caused.)

Do not point the lens directly into the sun. This can cause eye injuries, as well as lead to the malfunctioning of internal circuitry. There is also a risk of fire or electric shock.

**CAUTION!**

The following notes concern possible physical damage to the camera and to the user.

Carrying or holding the camera by the LCD monitor can result in dropping the unit, or in a malfunction.


Do not use a tripod on unsteady or unlevel surfaces. It could tip over, causing serious damage to the camera.

**CAUTION!**

Connecting cables (Audio/Video, S-Video, etc.) to the camera and leaving it on top of the TV is not recommended, as tripping on the cables will cause the camera to fall, resulting in damage.

**CAUTION:**

To avoid electric shock or damage to the unit, first firmly insert the small end of the power cord into the AC Adapter until it is no longer wobbly, and then plug the larger end of the power cord into an AC outlet.

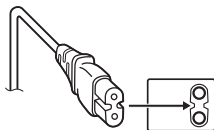



## Information for Users on Disposal of Old Equipment

### [European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

### [Business users]

If you wish to dispose of this product, please visit our web page [www.jvc-europe.com](http://www.jvc-europe.com) to obtain information about the take-back of the product.

### [Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.



### Attention:

This symbol is only valid in the European Union.

**DON'T** continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.

**DON'T** remove any fixed cover as this may expose dangerous voltages.

**DON'T** leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

**DON'T** use equipment such as personal stereos or radios so that you are distracted from the requirements of road safety. It is illegal to watch television whilst driving.

**DON'T** listen to headphones at high volume, as such use can permanently damage your hearing.

**DON'T** obstruct the ventilation of the equipment, for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

**DON'T** use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

**DON'T** allow electrical equipment to be exposed to rain or moisture.

### ABOVE ALL

- NEVER let anyone especially children push anything into holes, slots or any other opening in the case — this could result in a fatal electrical shock;
- NEVER guess or take chances with electrical equipment of any kind — it is better to be safe than sorry!

## SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT

**This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.**

**DO** read the operating instructions before you attempt to use the equipment.

**DO** ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

**DO** consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

**DO** be careful with glass panels or doors on equipment.

### Remember that this camera is intended for private consumer use only.

Any commercial use without proper permission is prohibited. (Even if you record an event such as a show, performance or exhibition for personal enjoyment, it is strongly recommended that you obtain permission beforehand.)

### Trademarks

- Manufactured under license from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories.



MascotCapsule is a registered trademark of HI CORPORATION in Japan.

Copyright © 2001 HI CORPORATION. All rights reserved.

- Other product and company names included in this instruction manual are trademarks and/or registered trademarks of their respective holders.

**GETTING STARTED**

<b>Accessories</b> .....	<b>8</b>
Attaching the Shoulder Strap .....	9
Attaching the Lens Cap .....	9
Attaching the Core Filter .....	9
<b>Index</b> .....	<b>10</b>
<b>Necessary Settings before Use</b> .....	<b>12</b>
Power Related Preparations (Using the Battery Pack) .....	12
Language Setting .....	13
Date/Time Setting .....	13
<b>Other Settings</b> .....	<b>14</b>
Grip Adjustment .....	14
Tripod Mounting .....	14
Data Battery System .....	14
When Using an SD Card .....	15

**RECORDING** **Video**

<b>Video Recording</b> .....	<b>16</b>
Registering Files to Events .....	17
Zooming .....	18
Changing the Screen Size .....	18
LED Light .....	18
Deleting a File .....	19
Checking the Remaining Space on the Recording Media .....	19

 **Still image**

<b>Still Image Recording</b> .....	<b>20</b>
Zooming .....	21
Continuous Shooting .....	21
LED Light .....	21
Deleting a File .....	21

 **Video / Still image**

<b>Manual Recording</b> .....	<b>22</b>
Manual Setting in MSET Menu .....	22
Nightscope .....	25
Backlight Compensation .....	25
Spot Exposure Control .....	25

**PLAYBACK** **Video**

<b>Video Playback</b> .....	<b>26</b>
Various Operations during Playback .....	27
File Search Function .....	28
Date Index Screen .....	28
Event Screen .....	29
To Play Back Files in the [EXTMOV] Folder .....	29
Deleting a Video File .....	29

 **Still image**

<b>Still Image Playback</b> .....	<b>30</b>
File Search Function .....	30
Slide Show .....	31
Image Rotation .....	31
Playback Zoom .....	31
Deleting a Still Image File .....	31

 **Video / Still image**

<b>Watching Images on TV/Remote Control</b> .....	<b>32</b>
Connecting to a TV, VCR or DVD Recorder .....	32
Playback on TV .....	32
Playback Using the Remote Control .....	33
<b>Playback with Special Effects</b> .....	<b>34</b>

**EDITING/PRINTING** **Video / Still image**

<b>Managing Files</b> .....	<b>36</b>
Deleting Files .....	36
Viewing File Information .....	37
Protecting Files from Accidental Erasure .....	38
Formatting a Recording Medium .....	39
Cleaning Up a Recording Medium .....	40
Resetting the File Number .....	40
Changing the Event Registration of Video Files after Recording .....	41

## Video

<b>Playlists</b> .....	<b>42</b>
Creating Playlists .....	42
Playing Back Playlists .....	44
Other Operations of Playlists .....	44

## Still image

<b>Print Setting</b> .....	<b>45</b>
DPOF Print Setting .....	45
Direct Printing with PictBridge Printer .....	46

## DUBBING

### Video

<b>Dubbing Video Files to DVD Discs</b> .....	<b>47</b>
Using a VCR/DVD Recorder for Dubbing ....	47

### Still image

<b>Copying/Moving Still Image Files</b> .....	<b>48</b>
---	-----------

## MENU SETTINGS

<b>Changing the Menu Settings</b> .....	<b>50</b>
Common Menus for All Modes .....	51
Video Recording Menus .....	53
Video Playback Menus .....	54
Still Image Recording Menus .....	55
Still Image Playback Menus .....	55

 
## FURTHER INFORMATION

<b>Troubleshooting</b> .....	<b>56</b>
<b>Warning Indications</b> .....	<b>60</b>
<b>Cleaning the Camera</b> .....	<b>62</b>
<b>Cautions</b> .....	<b>63</b>
<b>Specifications</b> .....	<b>66</b>
<b>Indications on LCD Monitor</b> .....	<b>68</b>
<b>TERMS</b> .....	<b>Back cover</b>

## Regarding This Manual

### Button operations

- Button operations are illustrated as shown below.



### • Regarding the control lever (pg. 11)

There are two kinds of operation using the control lever: moving the lever towards up/down/left/right, or pressing down the lever. They are described and illustrated as shown below.

ex.)

- 1) Move the control lever downward:



Press  $\nabla$ .

- 2) Press down the control lever:



Press  $\blacktriangleright$  II.

- 3) Operate 1) and 2) continuously:




① Select

Press  $\wedge/\vee/</>$   
to select, then press  
 $\blacktriangleright$  II.

② Set

### Icons at the top of pages

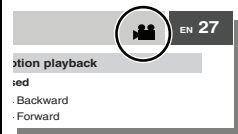

When there are icons at the top of pages, they show whether the page is related to videos and/or still images.



 
Page related to videos



Page related to still images



Page common to videos and still images



**AC Adapter**  
AP-V14E



**Power Cord**



**Battery Pack**  
BN-VF707U



 
**Audio/Video Cable**




**USB Cable**  
(☞ SOFTWARE  
INSTALLATION AND  
USB CONNECTION  
GUIDE)



**Shoulder Strap**  
(☞ pg. 9)



**Lens Cap** (☞ pg. 9)

 


**CD-ROM**



**Remote Control Unit**  
RM-V730UE  
(☞ pg. 33)



 **Lithium Battery**  
CR2025 (for remote  
control unit)  
Pre-installed in the  
remote control unit at  
time of shipment.




**Core Filter for Cables** (☞ pg. 9)  
Large (A): Audio/Video Cable  
Large (B): USB Cable  
Small: DC Cord

## Attaching the Shoulder Strap

Peel off the pad and thread the end of the strap through the eyelet.


Thread the strap through the buckle, adjust its length, and use the strap guide to fix it in place.

Position the buckle near the eyelet and reattach the pad.

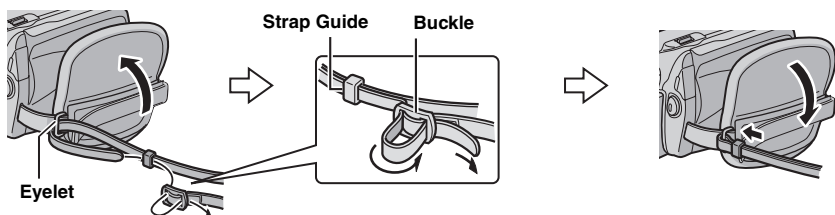


## Attaching the Lens Cap

To protect the lens, attach the provided lens cap to the camera as shown in the illustration.

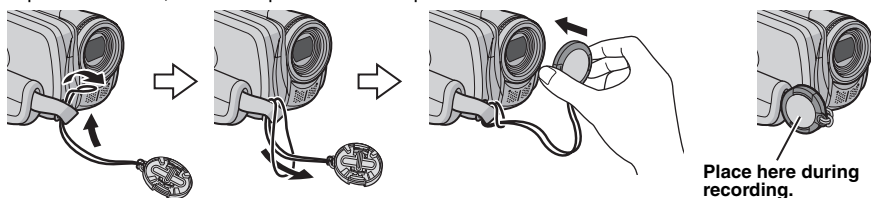



## Attaching the Core Filter

Attach the core filters to the cables. The core filter reduces interference. When connecting a cable, attach the end with the core filter to the camera. **Attachment positions (→ right)**

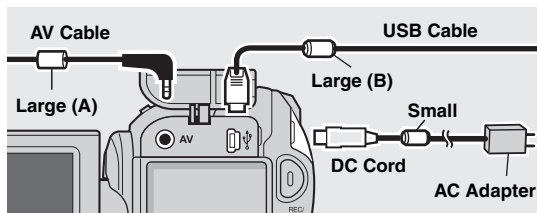


Release the stopper.

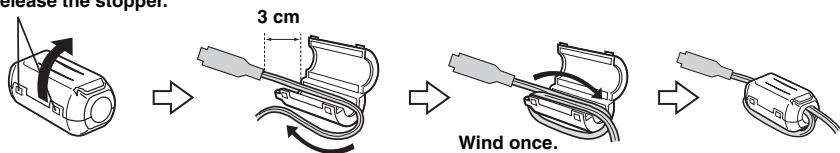

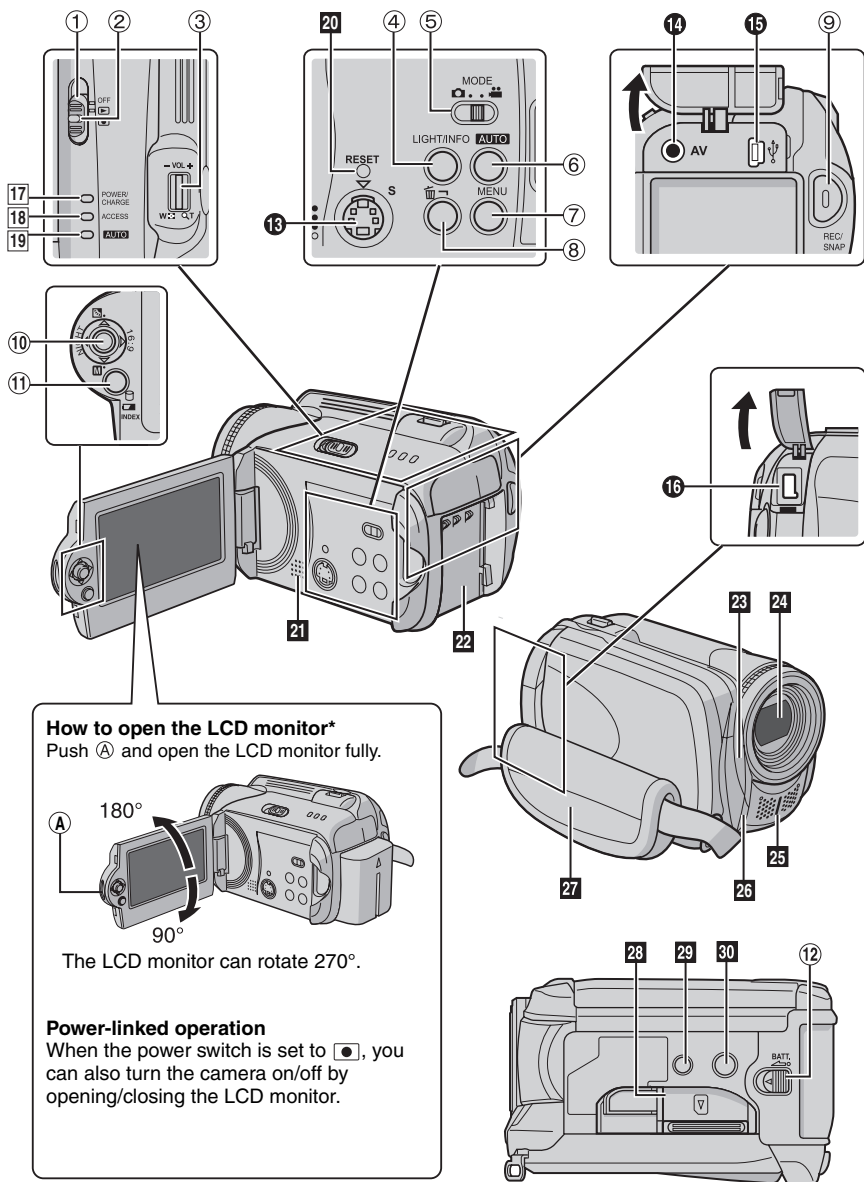

### How to open the LCD monitor\*

Push **(A)** and open the LCD monitor fully.

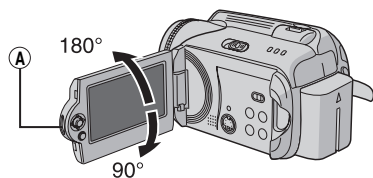








 
 
 
 

 
The LCD monitor can rotate 270°.

### Power-linked operation

When the power switch is set to **(●)**, you can also turn the camera on/off by opening/closing the LCD monitor.

\*Depending on the model, the screen size/aspect varies.

## Controls

- ① Power Switch [OFF, , - ② Lock Button (↗ pg. 12)
- ③ Zoom Lever [W /T ,] (↗ pg. 18)  
Speaker Volume Control [-VOL+] (↗ pg. 26)
- ④ Light Button [LIGHT] (↗ pg. 18)/Information Button [INFO] (↗ pg. 37)
- ⑤ Mode Switch [MODE] (↗ pg. 16, 20, 26, 30)
- ⑥ Auto/Manual Mode Button [AUTO] (↗ pg. 22)
- ⑦ Menu Button [MENU] (↗ pg. 50)
- ⑧ Delete Button [,] (↗ pg. 19)
- ⑨ Recording Start/Stop Button [REC/SNAP] (↗ pg. 16, 20)
- ⑩ Control Lever
  - ∧ : Reverse Skip (↗ pg. 27)/Up/Backlight Compensation [,] (↗ pg. 25)/Spot Exposure Control [,] (↗ pg. 25)
  - ∨ : Forward Skip (↗ pg. 27)/Down/Manual Set [,] (↗ pg. 22)
  - < : Reverse Search [,] (↗ pg. 27)/Left/Nightscope [NIGHT] (↗ pg. 25)
  - > : Forward Search [,] (↗ pg. 27)/Right/Switch Screen Size (16:9/4:3) [16:9] (↗ pg. 18)
- Press down: Play/Pause [,] (↗ pg. 26, 30)
- ⑪ Index Button [INDEX] (↗ pg. 28)/Remaining Space Button [,] (↗ pg. 19)/Data Battery Button [,] (↗ pg. 14)
- ⑫ Battery Release Button [BATT.] (↗ pg. 12)

## Connectors

The connectors are located beneath the covers.

- ⑬ S-Video Output Connector [S] (↗ pg. 32)
- ⑭ Audio/Video Output Connector [AV]
- ⑮ USB (Universal Serial Bus) Connector (↗ SOFTWARE INSTALLATION AND USB CONNECTION GUIDE)
- ⑯ DC Input Connector [DC] (↗ pg. 12)

## Indicators

- ⑰ Power/Charge Lamp [POWER/CHARGE] (↗ pg. 12)
- ⑱ Access Lamp [ACCESS] (Lights up or blinks when you access files. Do not turn off the power or remove the battery pack/AC adapter while accessing files.)
- ⑲ Auto Lamp [AUTO] (Lights up in Auto recording mode.)

## Other Parts

- ⑳ Reset Button [RESET] (↗ pg. 56)
- ㉑ Speaker (↗ pg. 26)
- ㉒ Battery Pack Mount (↗ pg. 12)
- ㉓ Camera Sensor Remote Sensor (↗ pg. 33)
- ㉔ Lens
- ㉕ Stereo Microphone
- ㉖ LED Light (↗ pg. 18, 21)
- ㉗ Grip Strap (↗ pg. 14)
- ㉘ SD Card Cover [OPEN] (↗ pg. 15)
- ㉙ Stud Hole (↗ pg. 14)
- ㉚ Tripod Mounting Socket (↗ pg. 14)

### ATTENTION:

 
- Be careful not to cover ㉓, ㉔, ㉕ and ㉖ during shooting.
- Carrying or holding the camera by the LCD monitor can result in dropping the unit, or in a malfunction.

Be sure to configure the following three settings before use.

## Power Related Preparations (Using the Battery Pack)

### 1 Set the power switch to OFF.


Slide while pressing down the lock button.



### 2 Attach the battery pack.


Slide the battery pack down until it locks in place.

Bottom of the Camera

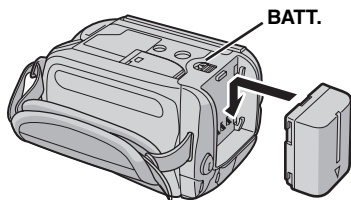

### 3 Charge the battery pack by connecting to the AC adapter.

Open the cover.

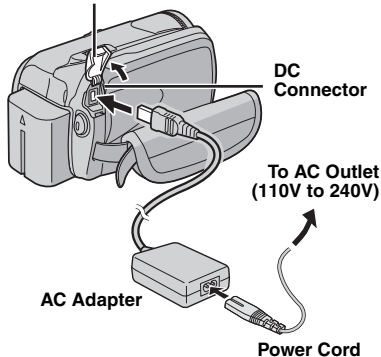

- The power/charge lamp blinks to indicate charging has started.
- When the lamp goes out, charging is finished. Unplug the power cord from the AC outlet and disconnect the AC adapter from the camera.

### To detach the battery pack

Slide and hold **BATT.** (☞ step 2), then remove the battery pack.

### To check the remaining battery power (☞ pg. 14)

#### Required charging / recording time

Battery pack	Charging time	Recording time
BN-VF707U (Provided)	1 hr. 30 min.	1 hr. 10 min. (1 hr. 5 min.)
BN-VF714U	2 hr. 40 min.	2 hr. 25 min. (2 hr. 20 min.)
BN-VF733U	5 hr. 40 min.	5 hr. 50 min. (5 hr. 30 min.)

The times shown above are approximate times. The values within ( ) are the times when the LED light is on.


#### NOTE:

You can also use the camera with just the AC adapter.

## Controls in this section

### Power/Charge Lamp

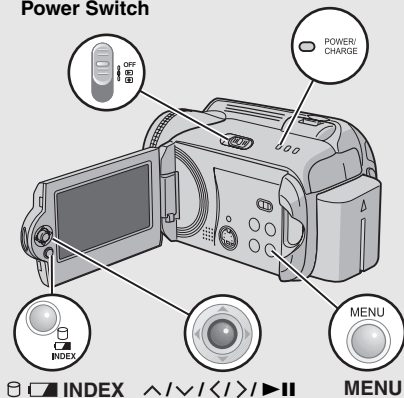

#### Power Switch

 




## Language Setting


The language on the display can be changed. (☞ pg. 52)

- 1 Open the LCD monitor. (☞ pg. 10)
- 2 Set the power switch to  or . Slide while pressing down the lock button.



- 3  MENU
- 

 - 4 Select [DATE/DISPLAY].



- 5 Select [LANGUAGE].



- 6 Select the desired language.



- 7  MENU


## Date/Time Setting

 The recording start date/time is recorded on the video/still image file and it can be checked by pressing **INFO**. (☞ pg. 26, 30)

In addition, you can find the desired file from the date index screen. (☞ pg. 28)

After performing step 1-4 in “Language Setting” (☞ pg. 13)

- 5 Select [CLOCK ADJUST].



- 6 Set the date and time.



Repeat this step to input the month, day, year, hour and minute.

- 7  MENU

You have now finished configuring the necessary settings.

### To use the camera right away

To record videos (☞ pg. 16)


To record still images (☞ pg. 20)

### To configure other settings (☞ pg. 14)


Check which buttons to use in the illustration of "Controls in this section" on page 12.

## Grip Adjustment

Open the pad and make grip adjustments.

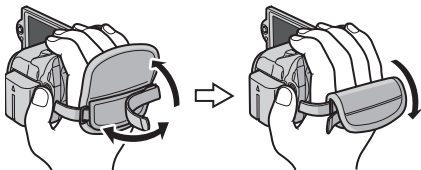

## Tripod Mounting

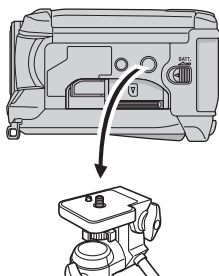

### Bottom of the Camera

Align the camera stud hole with the tripod stud, and the mounting socket with the screw, and then rotate the camera clockwise to mount it to the tripod.

### NOTE:

Do not use a tripod on unsteady or unlevel surfaces. It could tip over, causing serious damage to the camera.

 
## Data Battery System

You can check the remaining battery power and the recordable time.


### When the battery is attached

#### 1 Set the power switch to OFF.


Slide while pressing down the lock button.



#### 2

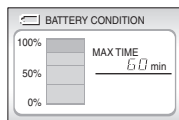

### NOTES:

- Battery information is displayed for approx. 3 seconds if the button is pressed and released quickly, and for approx. 15 seconds if the button is pressed and held for several seconds.
- If "COMMUNICATING ERROR" appears instead of the battery status even though you tried to press  several times, there may be a problem with your battery. In such a case, consult your nearest JVC dealer.
- The recordable time display should only be used as a guide. It is displayed in 10 minute units.

## When Using an SD Card

By default, the HDD is set as the recording medium. If you want to record to an SD card, the following three operations need to be performed.

### NOTE:


For details on compatible SD cards, see “Check the compatibility of recording media” (pg. 3).

## Insert an SD card

Insert and remove the SD card only while the power is turned off. Otherwise, data on the card may be corrupted.


### 1 Open the SD card cover.

Bottom of the Camera

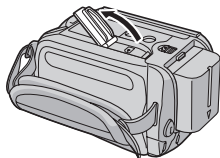

### 2 Firmly insert the card with its clipped edge first.

Clipped Edge

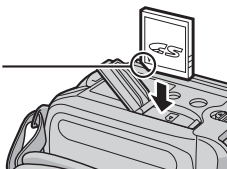

Do not touch the terminal on the reverse side of the label.

### 3 Close the SD card cover.

## To remove an SD card

Push the SD card once.


After the card comes out a little, pull it out.

## Change the recording medium

### Preparation:

- Set the power switch to or .


1

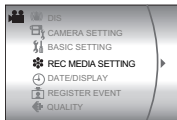

### 2 Select [REC MEDIA SETTING].



### 3 Select [VIDEO MODE] or [IMAGE MODE].

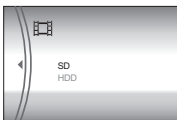

### 4 Select [SD].



5



## To change the recording medium back to the HDD

Select [HDD] in step 4.

 
## Format an SD card when using it for the first time

This will also ensure stable speeds and operation when accessing the SD card. For details on how to format an SD card, see “Formatting a Recording Medium” (pg. 39).


**Preparation:** Open the LCD monitor. (▶ pg. 10)

## 1 Set the power switch to .

Slide while pressing down the lock button.



## 2 Set the MODE switch to .

 

- The camera is programmed to record videos on the built-in hard disk when it is shipped from the factory. To change the recording medium, see page 15.

LIGHT/INFO


Zoom Lever



## 3 Press the REC/SNAP button to start recording.



- Approximate remaining time for recording appears.

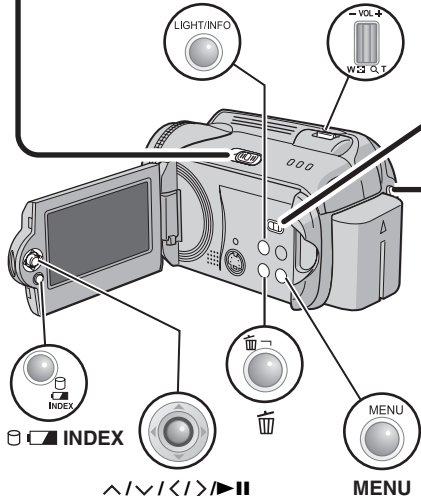

### To stop recording

Press the **REC/SNAP** button again.

**To change the picture quality** (▶ pg. 53)

**To register a file to an event** (▶ pg. 17)

**NOTES:**

- By default, the camera is set to record videos in 4:3 size. To record videos in 16:9 size, see "Changing the Screen Size" (☞ pg. 18).
- If the camera is not operated during recording or playback for 5 minutes when using the battery pack, it turns itself off automatically to conserve power. To turn the camera on again, set the power switch to **OFF**, then to or . When using the AC adapter, the camera enters the sleep mode (the access lamp lights and the LCD monitor turns off). To cancel the sleep mode, perform any operation such as zooming.
- When the camera heats up, the **●REC** indicator flashes. If the camera continues to heat up, shooting may be stopped to protect the recording medium. In this case, turn off the power, and then wait until the camera cools down.
- If data cannot be recorded or saved properly, the video files are not saved to the [SD\_VIDEO] folder, which is for regular videos. Instead, the files are saved to the [EXTMOV] folder. To play back these files, see "To Play Back Files in the [EXTMOV] Folder" (☞ pg. 29).
- Video files are given the names MOV\_001.MOD to MOV\_009.MOD, MOV\_00A.MOD to MOV\_00F.MOD, and MOV\_010.MOD in order of recording.
- After recording video for 12 consecutive hours, recording stops automatically.
- A new file will be created for every 4 GB of continuous shooting.
- This camera records video in MPEG2 format compliant with SD-VIDEO format. Remember that this camera is not compatible with other digital video formats.
- Before recording important video, be sure to make a trial recording.
- Do not move or shake the camera suddenly during recording. If you do, the sound of the hard disk drive may be recorded.

**Registering Files to Events**

If you select an event to register the file to before starting recording, the file will be registered to the selected event, thus making the file easy to find at playback. There are up to 3 different destinations within each event (for example: BABY1, BABY2, BABY3).

**Preparation:**

- Set the power switch to .
- Set the **MODE** switch to .

**1****2****3****4**

- To select a different destination, select [NEXT PAGE].
- To cancel the event registration, select [NON SECTION].

The selected event is displayed on the screen. Press the **REC/SNAP** button to start recording.

**To search by event for a file to play back**  
(☞ pg. 29)

**NOTE:**

Once you select to register a file to a certain event, the setting will remain even if you turn the power off. Unless you change the setting, you will register a file to the same event that you had previously selected.



## Zooming

While recording

Zoom out



Zoom in



W: Wide angle

T: Telephoto

- You can zoom in up to 32x by using the optical zoom.
- Zoom magnification over 32x is done through digital image processing, and is therefore called digital zoom. Digital zooming is possible up to 800x. Set [ZOOM] to [64X] or [800X]. (→ pg. 53)

Optical zoom (up to 32x)



Digital zoom (up to 800x)

### NOTES:

- Macro shooting is possible as close as approx. 5 cm to the subject when the zoom lever is set all the way to **W**.
- When you zoom into a subject close to the lens, the camera may automatically zoom out depending on the distance to the subject. In this case, set [TELE MACRO] to [ON]. (→ pg. 53)

### ATTENTION:

Videos which have been recorded in 16:9 mode may appear to be slightly vertically stretched on a 4:3 screen TV. Record videos in 4:3 mode if playing back on a 4:3 screen TV.



### NOTES:

- If the recording mode is set to **ECONOMY**, you cannot change the screen size.
- For the models with the 4:3 screen, when recording or playing back videos at 16:9 mode, the image may appear to be slightly vertically stretched. The screen size itself does not change.
- When playing back on TV with the 4:3 screen, the videos recorded in 16:9 mode will appear to be slightly vertically stretched.
- If you want to burn the recorded videos onto DVD discs, it is recommended not to mix 16:9 size videos and 4:3 size videos.

 
## LED Light

If you select to use this function, the LED light turns on to improve visibility during shooting.

Preparation:

- Set the power switch to .
- Set the **MODE** switch to .

LIGHT/INFO



Each time you press the button, setting changes.



The light remains on regardless of the surrounding conditions.



The light turns on automatically when shooting in insufficient light conditions.

Disables this function.

## Changing the Screen Size

You can record videos at 4:3 size and 16:9 size. By default, the camera is set to record videos at the 4:3 size.

Preparation:

- Set the power switch to .
- Set the **MODE** switch to .



Each press switches the screen size.

 


## Deleting a File

The file most recently recorded will be deleted.

After the recording is finished

1



2 Select [EXECUTE].



### NOTE:

If the recording mode (video or still image) is switched, or the power is turned off and on again after recording, you cannot delete the file.

## Checking the Remaining Space on the Recording Media

Preparation:

- Set the power switch to
- Set the **MODE** switch to

Example: When checking the HDD space



The maximum recording time is displayed for each picture quality mode, and the remaining space is indicated by a pie chart.

Displayed picture quality mode

**U**: ULTRA FINE

**F**: FINE

**N**: NORMAL


**E**: ECONOMY

 
For details on the picture quality, see page 67.


To return to the normal screen



Press the button again.

**Preparation:** Open the LCD monitor. (⇨ pg. 10)

**1 Set the power switch to .**  
Slide while pressing down the lock button.



 


**2 Set the MODE switch to .**


MODE  
 : Video mode  
 : Still image mode

• The camera is programmed to record still images on the built-in hard disk when it is shipped from the factory. To change the recording medium, see page 15.

**3 Press the REC/SNAP button to start recording.**

 
 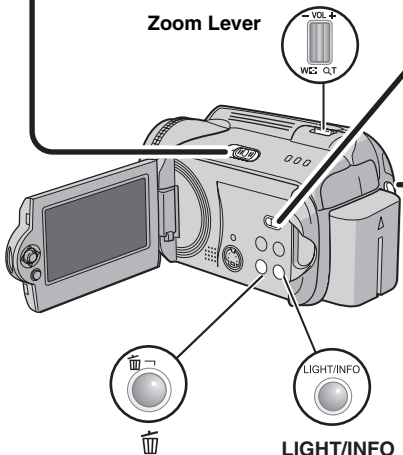




The **PHOTO** indicator appears during recording.

• To check how the image looks before recording, press the **REC/SNAP** button halfway and hold. The  indicator appears and becomes green when the captured image is focused. To cancel the recording, release the **REC/SNAP** button. To record it on the recording medium, press the **REC/SNAP** button fully.

To change the picture quality (⇨ pg. 55)

#### NOTES:

- Still images are recorded at 4:3 size. They cannot be recorded at 16:9 size.
- If the camera is not operated during recording or playback for 5 minutes when using the battery pack, it turns itself off automatically to conserve power. To turn the camera on again, set the power switch to **OFF**, then to  or . When using the AC adapter, the camera enters the sleep mode (the access lamp lights and the LCD monitor turns off). To cancel the sleep mode, perform any operation such as zooming.






## Zooming

 While recording

Zoom out



Zoom in



W: Wide angle

T: Telephoto

- You can zoom up to 32x by using the optical zoom.
- Digital zoom (➔ pg. 18) is not available.


## Continuous Shooting

 If the continuous shooting mode is set to on, keeping the **REC/SNAP** button pressed in step 3 (➔ pg. 20) provides an effect similar to serial photography. (Interval between still images: approx. 0.3 seconds)

Preparation:

- Set the power switch to
- Set the **MODE** switch to

Set the [CONTINUOUS SHOOTING] to [ON]. (➔ pg. 55)



The indicator appears.

- Continuous shooting may not work well depending on the recording medium.
- The continuous shooting speed will drop if this function is used repeatedly.


## LED Light

 If you select to use this function, the LED light turns on to improve visibility during shooting.


Preparation:

- Set the power switch to .
- Set the **MODE** switch to .

LIGHT INFO



Each time you press the button, setting changes.

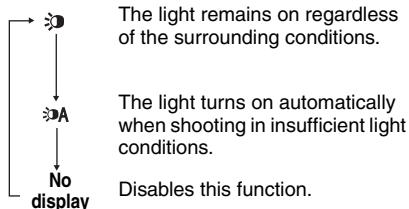


## Deleting a File

The file most recently recorded will be deleted.

After the recording is finished

1

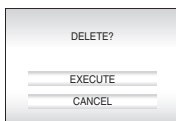

2 Select [EXECUTE].



### NOTE:

If the recording mode (video or still image) is switched, or the power is turned off and on again after recording, you cannot delete the file.

**About manual recording mode**

This mode enables you to set the focus and screen brightness manually. You need to switch to this mode because auto recording mode, which adjusts these settings automatically, is selected by default.


**To change to manual recording mode****Preparation:**

- Set the power switch to .
- Select the file type (video or still image) using the **MODE** switch.

**AUTO**

Press twice.


The  indicator appears.**To return to the auto recording mode**

Press the **AUTO** button so that the  indicator appears.


 
**Controls in this section**

Power Switch

 
MODE Switch

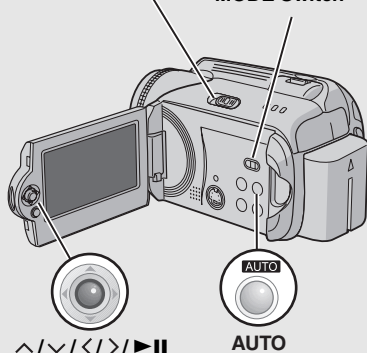
 

**AUTO****Manual Setting in MSET Menu**

You can use manual recording functions easily by selecting items in the MSET menus.

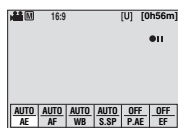**After performing “To change to manual recording mode” ( pg. 22)****1****2****Select the desired menu.**

For details on each menu, see pages 23 and 24.







**3****Select the desired setting.**


Depending on the kind of settings you select, you can set the value with  /  after selecting.

**4****5**

The menu disappears and the indicator for the set function appears.

## MSET Menu

Menus	Settings ([ ] = Factory-preset)
<b>AE</b> <b>(Manual Exposure)</b> Adjusts the brightness.	For video recording [AUTO]: The brightness is adjusted automatically. -6 to +6: Corrects the brightness within this range in increments of 1. Use </> to set the value.  For still image recording [±0]: The brightness is not adjusted. -2.0 to +2.0 (EV): Corrects the brightness within this range in increments of 1/3EV. Use </> to set the value.  <b>To lock the exposure</b> When the menu disappears after you finish configuring the setting, press and hold ►   for more than 2 seconds. The  indicator appears.
<b>AF</b> <b>(Manual Focus)</b> Adjusts the focus.	[AUTO]: The focus is adjusted automatically. ▲◀▶☺: Adjusts the focus manually. Use </> to set the focus. (When zooming, the subject will not go out of focus if you adjust the focus at the telephoto (T) side before zooming to the wide-angle (W) side.)
<b>WB</b> <b>(White Balance)</b> Adjusts the white balance to achieve the optimum colours for the amount of light in your surroundings during recording.	[AUTO]: White balance is adjusted automatically.  MWB: Adjusts the white balance manually depending on the light source. 1) Hold a sheet of plain white paper in front of the subject. Adjust the zoom, or position yourself so that the white paper fills the screen. 2) Press and hold ►   until the  indicator starts blinking then stops blinking.  FINE: When shooting outdoors on a sunny day.  CLOUD: When shooting outdoors on a cloudy day.  HALOGEN: When a video light or similar type of lighting is used.

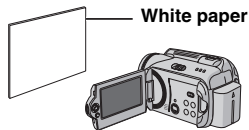

## MSET Menu (Continued)

## Menus

## Settings ([ ] = Factory-preset)

**S.SP****(Shutter Speed)**

A fast shutter speed can freeze the motion of a fast-moving subject, and a slow shutter speed can blur the subject to give the impression of motion.

[**AUTO**]: The shutter speed is adjusted automatically.

**1/2 to 1/4000 (For video recording) /**

**1/2 to 1/500 (For still image recording):**

The smaller the value, the faster the shutter speed. Use </> to set the value.


**NOTE:**


It is recommended to use the tripod (pg. 14) when recording with a slow shutter speed.


**P.AE****(Program AE)**

You can use the program AE settings for specific shooting situations.

[**OFF**]: The brightness is adjusted automatically.

 **SPORTS**: Records fast moving subjects clearly.

 **SNOW**: Compensates for subjects that may appear too dark when shooting in extremely bright surroundings, such as in snow.


 **SPOTLIGHT**: Select this when a spotlight makes a subject appear too bright.


 **TWILIGHT**: Makes evening scenes look more natural.


**EF****(Effect)**


You can record videos or still images with special effects.

[**OFF**]: No effect is used.

 **SEPIA**: The image has a brownish tint like old photos.

 **MONOTONE**: The image becomes black and white like old movies.

 **CLASSIC FILM\***: This effect skips frames to give images of an old movie atmosphere.


 **STROBE\***: The image looks like a series of consecutive snapshots.

\* Not available for still image recording.

## Nightscope

The shutter speed is automatically adjusted from 1/2 to 1/30 seconds. It enables recording with little light in dim locations.

After performing “To change to manual recording mode” (➤ pg. 22)

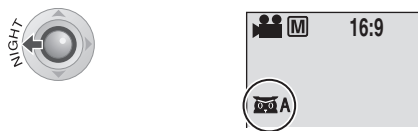

The indicator appears.

### To cancel nightscope

Press < (NIGHT) so that the indicator disappears.

### NOTE:

It is recommended to use the tripod (➤ pg. 14) when recording with a slow shutter speed.

## Backlight Compensation

Backlight compensation brightens the subject quickly. With a simple operation, dark portions of the subject are brightened by increasing the exposure.

After performing “To change to manual recording mode” (➤ pg. 22)



The indicator appears.


### To cancel backlight compensation

Press ^ () twice so that the indicator disappears.

## Spot Exposure Control

Selection of a spot metering area enables more precise exposure compensation. You can select one of the three metering areas.

After performing “To change to manual recording mode” (➤ pg. 22)

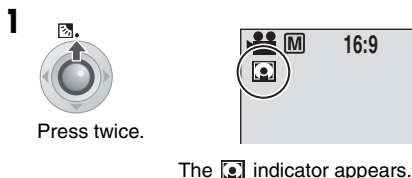

Press twice.

The indicator appears.

### 2 Select the desired spot metering area frame.




### To lock the exposure

After you finish configuring the setting, press and hold ▶|| for more than 2 seconds. The indicator appears.

### To cancel spot exposure control

Press ^ () once so that the indicator disappears.

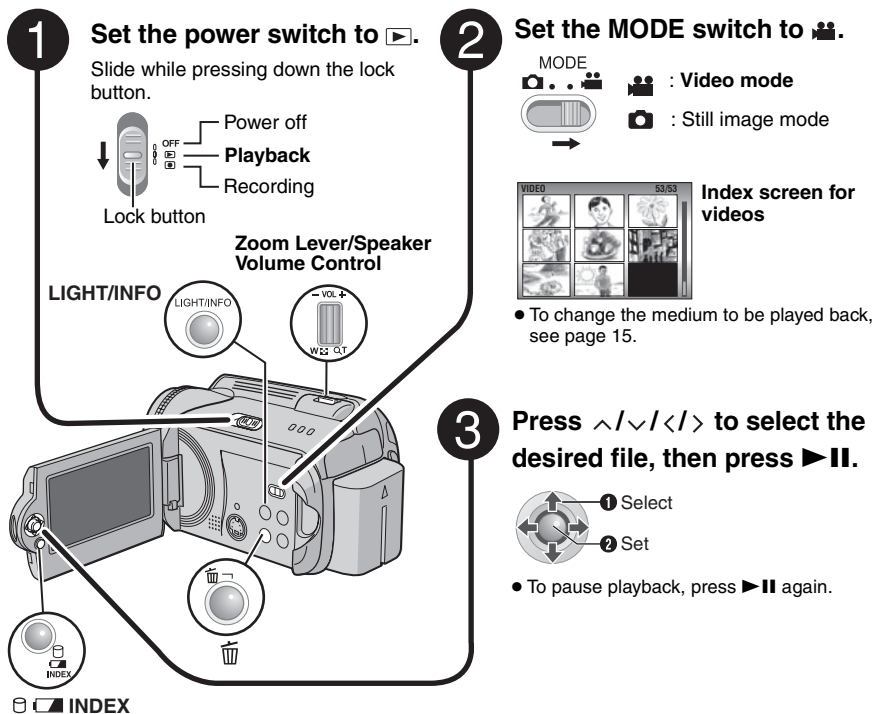**To return to the index screen**

Press **INDEX** when playback is paused.

**To adjust the speaker volume**

During playback, slide the speaker volume control towards **+** to turn the volume up, or towards **-** to turn the volume down.

 
**To turn the date display on/off**

Set [DATE/TIME] to [ON], [AUTO] or [OFF]. (☞ pg. 52)

**To check the file information**

Press **INFO** when playback is paused. (☞ pg. 37)

**NOTES:**

- The playback picture can be viewed in the LCD monitor or on a connected TV. (☞ pg. 32)
- At the junctions between scenes, the image may stop momentarily or the sound may be interrupted. However, this is not a malfunction.
- When the camera heats up, the  indicator flashes. If the camera continues to heat up, playback may be stopped to protect the recording medium. In this case, turn off the camera power, and then wait until the camera cools down.



## Various Operations during Playback

To resume normal playback, press ►II.

### Still playback (Pause)



### Search playback



- Pressing </> repeatedly increases the search speed. (-60x to +60x)

### Locating the start point of the file or skipping the file



### Frame-by-frame playback

While playback is paused



- Pressing </> repeatedly advances or reverses the still picture frame by frame.

### Slow motion playback

While playback is paused

Press and hold.



### Playback zoom

You can magnify the playback image up to 5x.

While playback is paused



Full view of the image

The ☒ mark indicates the centre point of the magnified area.

- Press ^/∨/</> to move to the magnified area you want to view.
- To zoom out, slide the zoom lever towards **W**.

## File Search Function


One-touch operation enables you to switch the index screen to the date index screen or event screen for the convenient file search.

### To change the display

#### On the index screen



Each press switches the screen.

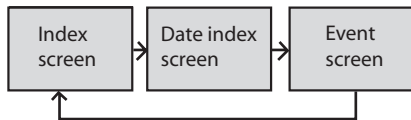


## Date Index Screen

You can search the desired file by the recording date.

After displaying the date index screen in “To change the display” (pg. 28)
 
### 1 Select the recording date.



### 2



### 3 Select the desired file.



- During playback, D mark appears on the top left corner of the screen.





 
## Event Screen

You can search the desired file by the event that you registered the file to when recording.

(☞ pg. 17) After searching by the event, you can search by the recording date to narrow down the search.


After displaying the event screen in “To change the display” (☞ pg. 28)

### 1 Select the event.



- To move to the next page, select [NEXT PAGE].

### 2

 

### 3 Select the recording date.



- To display all the files, select [ALL SCENES].

### 4 Select the desired file.



- During playback, ☺ mark appears on the top left corner of the screen.

To change the event registration of a file (☞ pg. 41)

## To Play Back Files in the [EXTMOV] Folder

If data cannot be recorded properly, the video files are saved to the [EXTMOV] folder.

(☞ pg. 17)

- 1 Press the REC/SNAP button while the index screen is displayed.
- 2 After [MPG] is displayed, press  $\wedge/\vee/ </>$  to select the file you want to play, then press  $\blacktriangleright$ .

To return to the index screen

Press the REC/SNAP button again.

 
- The file information and playlist creation functions are not available for files in the [EXTMOV] folder.

## Deleting a Video File

Preparation:

Pause the playback. Alternatively, select the file on the index screen.

### 1




You can select the file that you want to delete by pressing  $</>$ .

### 2 Select [EXECUTE].




To exit the file delete screen



Select [CANCEL] in step 2.

**1 Set the power switch to .**  
Slide while pressing down the lock button.

OFF (B) (B)  
Power off  
Playback  
Recording


Lock button

**2 Set the MODE switch to .**

MODE  
 : Video mode  
 : Still image mode

**3 Press  $\wedge/\vee/\langle/\rangle$  to select the desired file, then press  $\blacktriangleright\|\blacksquare$ .**


**Index screen for still image**




- To change the medium to be played back, see page 15.

**1 Select**  
**2 Set**

- Press  $\langle/\rangle$  to display the previous/next file.

 INDEX

 INDEX

 
**To return to the index screen**Press **INDEX**.**To turn the date/time display on/off**

Set [DATE/TIME] to [ON], [AUTO] or [OFF]. (▶ pg. 52)

**To check the file information**Press **INFO** when playback is paused. (▶ pg. 37)**File Search Function**

One-touch operation enables you to switch the index screen to the date index screen for the convenient file search.

- The event screen cannot be used for still images.



For details on operations, see page 28.



## Slide Show

You can playback all the images stored in the recording media automatically.

### During playback



- During the slide show, pressing  $\nabla$  displays files in descending order, and pressing  $\wedge$  displays files in ascending order.

### To end the slide show

Press  $\blacktriangleright$  again.

## Image Rotation

You can rotate a still image clockwise or counterclockwise.

### During playback



Counterclockwise

 
Clockwise

- Each time you press  $\wedge$  or  $\nabla$ , the image rotates ( $90^\circ \leftrightarrow 180^\circ \leftrightarrow 270^\circ \leftrightarrow 0^\circ$ ).

## Playback Zoom

You can magnify the playback image up to 5x.

### During playback



### Full view of the image

The  $\oplus$  mark indicates the centre point of the magnified area.


- Press  $\wedge$ / $\nabla$ / $\langle$ / $\rangle$  to move to the magnified area you want to view.
- To zoom out, slide the zoom lever towards **W**.

## Deleting a Still Image File

### Preparation:

Playback the still image. Alternatively, select the file on the index screen.

1

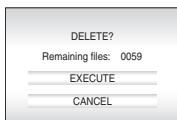

You can select the file that you want to delete by pressing  $\langle$ / $\rangle$ .

### 2 Select [EXECUTE].




### To exit the file delete screen

Select [CANCEL] in step 2.

## Connecting to a TV, VCR or DVD Recorder

Make sure all units are turned off before connecting.

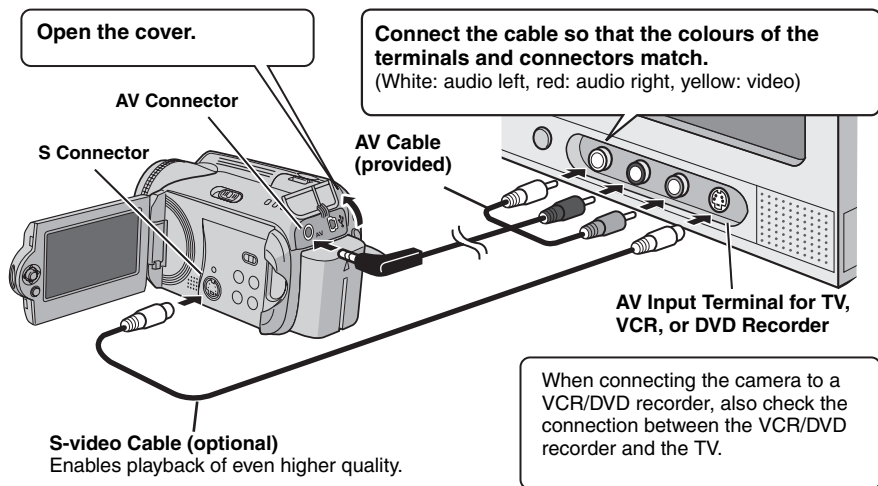

### NOTES:

- It is recommended to use the AC adapter as the power supply instead of the battery pack. (☞ pg. 12)
- To connect the camera to a PC, refer to SOFTWARE INSTALLATION AND USB CONNECTION GUIDE.
- This camera is designed to be used with PAL-type colour television signals. It cannot be used with a television of a different standard.

## Playback on TV

After connecting the camera to the TV in “Connecting to a TV, VCR or DVD Recorder” (☞ pg. 32)

- 1 Turn on the camera and the TV.**
- 2 Set the TV to its VIDEO mode.**
- 3 (Only when connecting the camera to the VCR/DVD recorder)**  
**Turn on the VCR/DVD recorder, and set the VCR/DVD recorder to its AUX input mode.**
- 4 Start playback on the camera. (☞ pg. 26, 30)**

### NOTE:


If the aspect ratio of the video you are playing is strange and the screen size can be changed on the TV, make adjustments on the TV.

## Playback Using the Remote Control

A battery is included inside the remote control at the time of purchase.

Remove the insulation sheet before use.

### Beam Effective Area

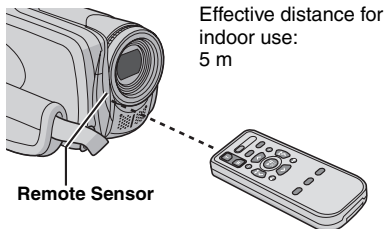


#### NOTE:

The transmitted beam may not be effective or may cause incorrect operation when the remote sensor is directly exposed to sunlight or powerful lighting.


### To Reinsert the Battery

The remote control uses one lithium battery (CR2025).

Pull out the battery holder by pressing the lock tab.

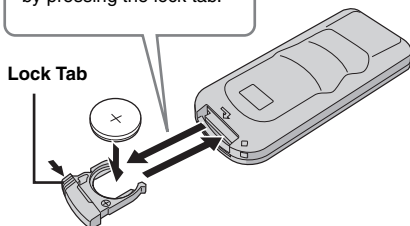

## Buttons and Functions

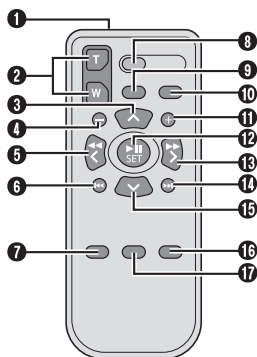

- ① Infrared Beam Transmitting Window
- ② ZOOM (T/W) Buttons  
Zoom In/Out (⇐ pg. 18, 21)
- ③ Up Button  
Rotate Button (counterclockwise) (⇐ pg. 31)
- ④ Skip Backward Button
- ⑤ Left Button
- ⑥ Back Button
- ⑦ PLAYLIST Button (⇐ pg. 42)
- ⑧ START/STOP Button
- ⑨ SNAPSHOT Button (⇐ pg. 20)
- ⑩ INFO Button (⇐ pg. 37)
- ⑪ Skip Forward Button
- ⑫ PLAY/PAUSE Button
- ⑬ Right Button
- ⑭ Next Button
- ⑮ Down Button  
Rotate Button (clockwise) (⇐ pg. 31)
- ⑯ INDEX Button
- ⑰ DATE Button

You can add the following two types of special effects before playback.


### Wipe or fader effects

Add effects at the beginning and end of videos. These effects cannot be set for still images.


### Playback effects

Add effects that, for example, alter the colour tones of videos.

### Preparation:

- Set the power switch to .
- Select the file type (video or still image) using the **MODE** switch.

1

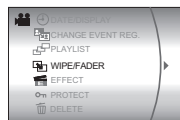

2 Select **[WIPE/FADER]** (Video only) or **[EFFECT]**.



3 Select a desired effect.



For details on each effect, see page 35.


4



### Controls in this section





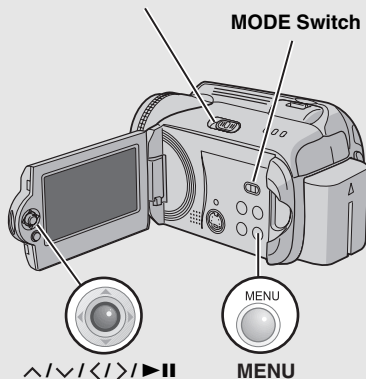




Power Switch

MODE Switch







**To turn off the effect**  
Select **[OFF]** in step 3.

**[WIPE/FADER]**

Menus	Details
 <b>FADER-WHITE</b>	Fade in or out with a white screen.
 <b>FADER-BLACK</b>	Fade in or out with a black screen.
 <b>FADER-B.W</b>	Fade in to a colour screen from a black and white screen, or fade out from colour to black and white.
 <b>WIPE:CORNER</b>	Wipe in on a black screen from the upper right to the lower left corner, or wipe out from lower left to upper right, leaving a black screen.
 <b>WIPE:WINDOW</b>	The scene starts in the centre of a black screen and wipes in toward the corners, or comes in from the corners, gradually wiping out to the centre.
 <b>WIPE:SLIDE</b>	Wipe in from right to left, or wipe out from left to right.
 <b>WIPE:DOOR</b>	Wipe in as the two halves of a black screen open to the left and right, revealing the scene, or wipe out so the black screen reappears from left and right to cover the scene.
 <b>WIPE:SCROLL</b>	The scene wipes in from the bottom to the top of a black screen, or wipes out from top to bottom, leaving a black screen.
 <b>WIPE:SHUTTER</b>	Wipe in from the centre of a black screen toward the top and bottom, or wipe out from the top and bottom toward the centre leaving a black screen.

**[EFFECT]**

Menus	Details
 <b>SEPIA</b>	The image is given a brownish tint like an old photo.
 <b>MONOTONE</b>	The image becomes black and white like an old movie.
 <b>CLASSIC FILM*</b>	The image is given an old movie atmosphere by the effect of skipping frames.
 <b>STROBE*</b>	The image looks like a series of consecutive snapshots.

\*Not available for still image recording.

You can directly manage recorded files in the camera.


### CAUTION:

Do not remove the recording medium or perform any other operation (such as turning off the power) while accessing files. Also, be sure to use the provided AC adapter, as the data on the recording medium may be corrupted if the battery becomes exhausted during operation. If the data on the recording medium becomes corrupted, format the recording medium. (pg. 39)


## Deleting Files

### Deleting with the Button


#### Preparation:



- Set the power switch to .
- Select the file type (video or still image) using the **MODE** switch.
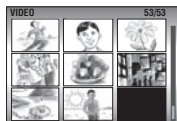
### 1 Select the file to be deleted.

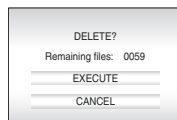

### 2




You can select the file that you want to delete by pressing  .

### 3 Select [EXECUTE].




### Controls in this section

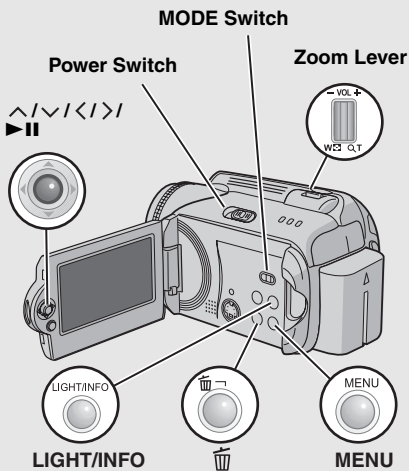

### To exit the file delete screen

Select [CANCEL] in step **3**.

### NOTE:

If you press  during recording mode, the file recorded most recently will be deleted. However, if the recording mode (video or still image) is switched or the power is turned off and on again after recording, you cannot delete the file.

 


## Deleting on Menu Screen

### Preparation:

- Set the power switch to .
- Select the file type (video or still image) using the **MODE** switch.

1



### 2 Select [DELETE].



### 3 Select the desired menu.



#### • [CURRENT]:

Currently displayed file is deleted. You can select the previous or next file by pressing  $\langle / \rangle$ .

#### • [FILE SELECT]:

You can choose multiple files to delete from the index screen.

 
1) Press  $\wedge / \vee / \langle / \rangle$  to select the file you want to delete, then press **▶ II**.

- The mark appears on the file. To select other files, repeat this step.
- If you slide the zoom lever towards **T**, the preview screen is displayed. Sliding the zoom lever towards **W** returns to the index screen.

2) Press **MENU**.

#### • [DELETE ALL]:

All files are deleted.



## 4 Select [EXECUTE].

If [FILE SELECT] was selected in step 3, select [EXECUTE AND QUIT].



### NOTES:

- Protected files cannot be deleted. To delete them, release the protection first. (➤ pg. 38)
- Once files are deleted, they cannot be restored. Check files before deleting.

## Viewing File Information

### Preparation:

- For video files: Pause the playback. Alternatively, select the file on the index screen.
- For still images: Playback the still image. Alternatively, select the file on the index screen.

LIGHT/INFO



FILE	: MOV D0A.MOD
FOLDER	: PRG 001
DATE/TIME	: 01.01.06 12:00
PB TIME	: 0:20:05
QUALITY	: ULTRA FINE
PROTECT	: OFF

## Video Files

**FILE:** File name

**FOLDER:** Folder name

**DATE/TIME:** Date and time of the recording

**PB TIME:** Playback time (length of the file)

**QUALITY:** Image quality (➤ pg. 53)

**PROTECT:** File protection status (➤ pg. 38)

## Still Image Files

**FILE:** File name

**FOLDER:** Folder name

**DATE/TIME:** Date and time of the recording

**SIZE:** Image size

**QUALITY:** Image quality (➤ pg. 55)

**PROTECT:** File protection status (➤ pg. 38)

**To turn off the file information display**


Press **INFO** again.

## Protecting Files from Accidental Erasure


### Preparation:

- Set the power switch to .
- Select the file type (video or still image) using the **MODE** switch.

1

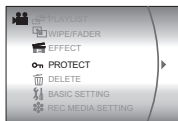

### 2 Select [PROTECT].

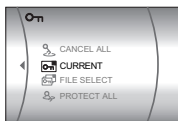

### 3 Select the desired menu.



- **[CURRENT]:**

Currently displayed file is protected. You can select the previous or next file by pressing  $\langle / \rangle$ .

- **[FILE SELECT]:**

You can choose multiple files to protect from index screen.

1) Press  $\wedge / \vee / \langle / \rangle$  to select the file you want to protect, then press **▶II**.


- The **On** mark appears on the file. To select other files, repeat this step.

- If you slide the zoom lever towards **T**, the preview screen is displayed. Sliding the zoom lever towards **W** returns to the index screen.

2) Press **MENU**.

- **[PROTECT ALL]:**

All files are protected.

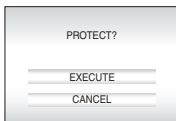

### 4 Select [EXECUTE].

If [FILE SELECT] was selected in step **3**, select [QUIT].



### To release protection

Select the protected file in step **3**.

### To release protection of all files

- 1) In step **3**, select [CANCEL ALL], then press **▶II**.
- 2) Press  $\wedge / \vee$  to select [EXECUTE], then press **▶II**.

### NOTE:

For an SD card, you can use the write/erase protection tab to set protection. To protect all the files, slide the tab to the "LOCK" position.

Write/erase protection tab




## Formatting a Recording Medium

You can format (initialise) the built-in hard disk (HDD) or SD cards. You have to format newly-purchased SD cards with this camera before using them. This will also ensure stable speeds and operation when accessing the recording medium. Be aware that all files and data including protected files will be erased by the formatting process.


### Preparation:

- Set the power switch to  or .

1

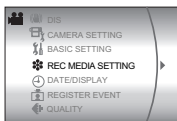


2 Select [REC MEDIA SETTING].

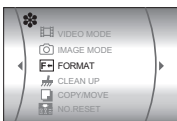

3 Select [FORMAT].



 

4 Select [HDD] or [SD].



5 Select [EXECUTE].



### To make it more difficult to recover the data on the hard disk

Even if you format the hard disk or erase the data on the hard disk, sometimes the erased data can be recovered by using data recovery software etc. that are commercially available. By pressing  while selecting [HDD] and holding down the  button in step 4, you can erase the data on the hard disk in a format that is difficult to recover. Moreover, by repeating this procedure, you can make the data even more difficult to recover.

- When formatting in this way, a formatting progress bar is displayed.
- If the formatting progress bar does not appear, select [CANCEL] and try again from step 3.

### NOTE:

Do not format the recording medium on your PC. Make sure that you format the recording medium on the camera.

## Cleaning Up a Recording Medium

 
Writing speed of recording media tends to become slow after long periods of repeated use. To regain the speed, execute cleanup periodically. The cleanup function is equivalent to a PC's "Defragmentation" function.

### Preparation:


- Set the power switch to or .
- Be sure to use the provided AC adapter for the power supply when cleaning up a recording medium. (☞ pg. 12)



- 2** Select and set items as follows.  
[REC MEDIA SETTING] → [CLEAN UP]



- 3** Select [HDD] or [SD].

 

- 4** Select [EXECUTE].



- When cleanup is finished, [CLEANING UP COMPLETED] appears. Press to complete the operation.
- Depending on the hard disk drive it may take several minutes for the cleanup process to be completed.

## Resetting the File Number

By resetting the file number (name), a new folder will be made. The new files you are going to make will be stored in the new folder. It is convenient to separate the new files from previously recorded files.

### Preparation:

 
- Set the power switch to or .



- 2** Select and set items as follows.  
[REC MEDIA SETTING] → [NO.RESET]



- 3** Select the file type ([VIDEO] or [IMAGE]).





- 4** Select [EXECUTE].




## Changing the Event Registration of Video Files after Recording


### Preparation:

- Set the power switch to .
- Set the **MODE** switch to .

1

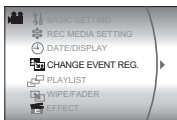

### 2 Select [CHANGE EVENT REG.].

 


### 3 Select a new event to register the file to.



- To move to the next page, select [NEXT PAGE].
- To cancel the event registration, select [NON SECTION].

### 4 Select the file you want to register.



- The  mark appears on the file. To select other files, repeat this step.
- If you slide the zoom lever towards **T**, the preview screen is displayed. Sliding the zoom lever towards **W** returns to the index screen.

5

EVENT RE-REGISTRATION ENDS  
SAVE OPERATION CONTENT?

SAVE AND QUIT  
DELETE AND QUIT  
CANCEL

### 6 Select [SAVE AND QUIT].





## What is a Playlist?

It is a list that enables you to organise recorded videos in order of preference.

### To display the playlist screen


#### Preparation:

- Set the power switch to .
- Set the **MODE** switch to .

1




## 2 Select [PLAYLIST].

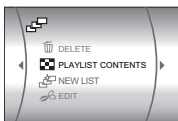

### NOTE:

You can display the playlist menu simply by pressing the **PLAYLIST** button on the remote control.

### Controls in this section

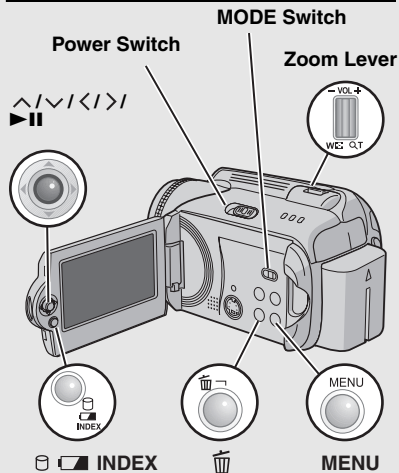

## Creating Playlists

After performing “To display the playlist screen” (pg. 42)

### 3 Select [NEW LIST].




### 4 Select an item and display files.




- **[IMPORT FROM EVENT]:**  
Search for an event and display the corresponding files listed by recording date. Press  $\wedge$ / $\vee$ / $\langle$ / $\rangle$  to select the event, then press **▶II**.
- **[IMPORT FROM DATE]:**  
Display all the files in the medium listed by recording date.
- **[ALL SCENES]:**  
Display all files individually.

The files are displayed.  
See “Displaying Files” (pg. 43) for details.

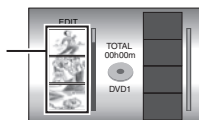


### 5 Select the file to add to playlist.

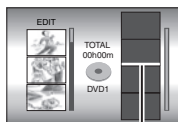


Insertion point

## 6 Select the insertion point.

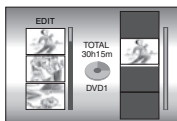

- To add other files, repeat steps 5 and 6.

## 7

 

## 8 Select [SAVE AND QUIT].



### To check a registered scene

- 1) Press  $\triangleright$  after step 6 to move to the registered file column shown on the right.
- 2) Use  $\wedge/\vee$  to select a file and press  $\blacktriangleright$ .
- 3) Press **INDEX** to return to the previous screen.

### To delete a registered scene

- 1) Press  $\triangleright$  after step 6 to move to the registered file column shown on the right.
- 2) Use  $\wedge/\vee$  to select a file and press  $\text{trash}$ .

### NOTES:

- A maximum of 99 playlists can be created.
- Each playlist can consist of a maximum of 99 scenes.
- If you delete the original files, the corresponding files are also deleted from the playlist.
- Files in the [EXTMOV] folder cannot be used to create playlists.

## Displaying Files

Details on how files are displayed in step 4 are described below.

### When selecting [IMPORT FROM EVENT] or [IMPORT FROM DATE]

All the files recorded on the same date are displayed as a single file. Originally, these files cannot be registered separately. To register files separately, perform "Adding/Deleting Files in Playlist" (pg. 44) after creating the playlist.

Recording date: 12. 03. 2006



### To check individual scenes

Use  $\wedge/\vee$  to select the file and press the **INDEX** button. A list of individual scenes appears.

- To display the preview screen, select a file and press  $\blacktriangleright$ . Press again to return to the previous screen.
- Press **INDEX** again to stop checking.

### When selecting [ALL SCENES]

Files can be displayed individually and registered in order of preference.

Recording date: 12. 03. 2006






## Playing Back Playlists

After performing “To display the playlist screen” (☞ pg. 42)

### 3 Select [PLAYLIST CONTENTS].

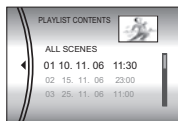

### 4 Select the playlist that you want to playback.



- During playback of the playlist, **P** mark appears on the top left corner of the screen.
- If you slide the zoom lever towards **W** while playback is paused, the index screen for playlist appears. You can see the contents of the playlist and select the desired scene. To return to the playback screen, slide the zoom lever to **T**.

#### To stop playback

Press **▶II**.

#### To return to the normal playback mode

Select [ALL SCENES] in step 4.

## Other Operations of Playlists

You can perform additional editing and delete files in a created playlist.

#### Preparation:

Perform “To display the playlist screen” (☞ pg. 42).

### Adding/Deleting Files in Playlist

3 Press **^/∨** to select [EDIT], then press **▶II**.

4 Press **^/∨** to select the playlist you want to edit, then press **▶II**.

- To add or delete files, follow the steps 5 to 8 in “Creating Playlists” (☞ pg. 42).

### Changing Playlist Names

The default name of a playlist is its creation date and time.

3 Press **^/∨** to select [RENAME], then press **▶II**.

4 Press **^/∨** to select the desired playlist, then press **▶II**.

5 Press **^/∨/⟨/⟩** to select the desired letter, then press **▶II**.

- Repeat this process to complete the name.
- You can change the character types (capital letters, small letters or marks) by selecting [A/a/@].
- To correct a letter, select [←] or [→] and press **▶II** to move the cursor to the letter, then select [CLEAR] and press **▶II**.

6 Press **^/∨/⟨/⟩** to select [←], then press **▶II**.

### Deleting Playlist

Original files are not deleted even if you delete the playlist.

3 Press **^/∨** to select [DELETE], then press **▶II**.

4 Press **^/∨** to select a playlist you want to delete.

- To delete all playlists at once, select [DELETE ALL].

5 Press **▶II**.

6 Press **^/∨** to select [EXECUTE], then press **▶II**.





## DPOF Print Setting

This camera is compatible with DPOF (Digital Print Order Format). You can set which images to be printed and the number of prints with this camera. This feature is useful to print with a DPOF-compatible printer or for taking the recording medium to a photo lab for printing.

## Preparation:

- Set the power switch to
- Set the **MODE** switch to


1




2 Select [DPOF].



## Controls in this section

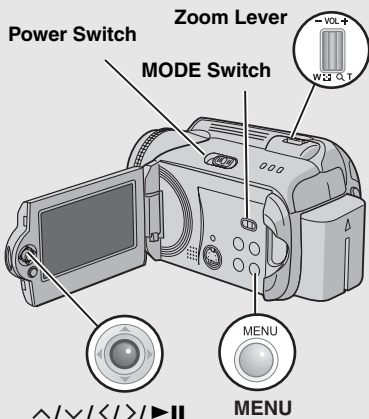

3 Select [SELECT IMAGES].

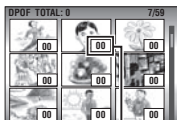

Number of prints

4 Select the desired file.



- If you slide and hold the zoom lever towards **T**, the preview screen of the still image is displayed.

5 Select the number of prints.



- To set print information for other images, repeat steps **4** and **5**. (You can set up to 999 files.)

6



## To cancel the selection

Set the number of prints to "00".

## To print all still images (One print for each)

- 1) In step **3**, press  $\wedge/\vee$  to select [ALL1], then press  $\blacktriangleright$ .
- 2) Press  $\wedge/\vee$  to select [EXECUTE], then press  $\blacktriangleright$ .

## To confirm DPOF settings

In step **3**, press  $\wedge/\vee$  to select [CHECK SETTINGS], then press  $\blacktriangleright$ .

- If necessary, change the number of prints for the desired file by following steps **4** and **5**.

## To reset DPOF settings

- 1) In step **3**, press  $\wedge/\vee$  to select [RESET], then press  $\blacktriangleright$ .
- 2) Press  $\wedge/\vee$  to select [EXECUTE], then press  $\blacktriangleright$ .



## Direct Printing with PictBridge Printer


If your printer is compatible with PictBridge, still images can be printed easily by connecting the camera directly to the printer with the USB cable. DPOF setting can also be used. (☞ pg. 45)

### To Print by Selecting a Still Image

#### Preparation:

- Set the power switch to
- Set the **MODE** switch to

1

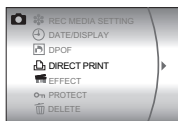


#### 2 Select [DIRECT PRINT].



- [PLEASE CONNECT PRINTER] appears.

#### 3 Connect the camera to the printer with the USB cable.


- After a while, the print menu appears.

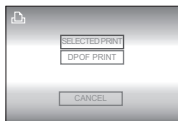

#### 4 Select [SELECTED PRINT].



#### 5 Select the desired Image.

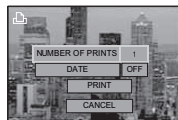

#### 6 Press $\wedge/\vee$ to select menus and press $\langle/\rangle$ to select settings.



- **[NUMBER OF PRINTS]:**  
The number of prints can be set from 1 to 99.
- **[DATE]:**  
Set whether to print the date and time.

#### 7 Select [PRINT].



#### To stop printing after printing starts

- 1) Press  $\blacktriangleright$  II.
- 2) Press  $\wedge/\vee$  to select [EXECUTE], then press  $\blacktriangleright$  II.

#### NOTE:

If the printer is not recognised, or to print again after direct printing with a PictBridge printer, remove the USB cable, select [DIRECT PRINT] in the menu again, and then reconnect the cable.

### To Print Using the DPOF Settings

If the printer is compatible with DPOF, you can use the DPOF settings. (☞ pg. 45)

#### After performing step 1-3

#### 4 Select and set items as follows. [DPOF PRINT] $\rightarrow$ [PRINT]



- To confirm the DPOF setting, press  $\wedge/\vee$  to select [CHECK SETTINGS], then press  $\blacktriangleright$  II. After that, press **MENU** to return to the previous menu.



## Using a VCR/DVD Recorder for Dubbing

### Preparation:

Connect the camera to a VCR or DVD recorder.  
( pg. 32)

- 1 Set the VCR/DVD recorder to its AUX input mode.**
- 2 Start playback on the camera.**
  - To playback videos ( pg. 26)
  - To playback playlists ( pg. 44)
- 3 At the point you want to start dubbing, start recording on the VCR/DVD recorder.**

(Refer to the VCR/DVD recorder's instruction manual.)

---

### To stop dubbing

Stop recording on the VCR/DVD recorder, then stop playback on the camera.


Check which buttons to use in the illustration of “Controls on this section” on page 42.

You can copy or move still image files between the HDD and SD card using the on-screen display.

#### Preparation:

- Set the power switch to or .
- Make sure that SD card is inserted in the SD slot.
- Make sure that enough free space is left in the copy/move destination medium.

1

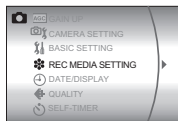

2 Select and set items as follows.


[REC MEDIA SETTING] → [COPY/  
MOVE]



3 Select the desired menu.



- [COPY]: Files are copied to the destination medium while leaving original files in the source medium.
- [MOVE]: Files are moved to the destination medium while deleting original files (except read-only files) in the source medium.

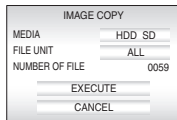

4 Set the direction of copy/move.  
(HDD → SD or SD → HDD)



5





## 6 Set the file unit ([ALL] or [FILE]) to copy/move.



- **[FILE]:**

Select when you want to transfer the selected files.

1) Press  $\wedge$ / $\vee$ / $\langle$ / $\rangle$  to select the desired file, then press **▶II**.

- The  $\checkmark$  mark appears on the file. To select other files, repeat this step.

2) Press **MENU**.

- **[ALL]:**

Select when you want to transfer all files in the recording medium.

## 7 Select [EXECUTE].



① Select

② Set

- File transfer starts. When [COPYING (MOVING) COMPLETED] appears, press **▶II**.

---

### To stop the file transfer

Press **▶II**, then select [EXECUTE] and press **▶II**.

You can change the menu settings to customize your camera.

- Some menus can be used for both operation modes (recording/playback) and file types (video/still image). Other menus can be used depending on the selected file type and operation mode.
- To see all the menus, scroll the screen.

### Preparation:

- Select (recording) or (playback) using the power switch.
- Select (video) or (still image) using the **MODE** switch.

1



### 2 Select the desired menu.



For details on each menu, see pages 51 to 55.

### 3 Select the desired menu setting.



#### To return to the previous screen

Press .

#### To return to the normal screen

Press **MENU**.


#### To display the operation guide

Press **INFO** when the menu screen is displayed. (The operation guide is not displayed depending on the type of the menu.) To remove the operation guide, press **INFO** again.





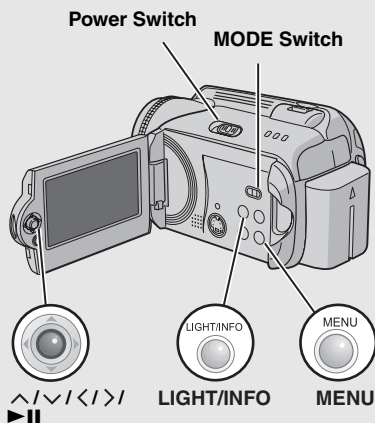


#### NOTE:

 Even if the menu item is displayed, some items cannot be set depending on the selected mode (video/still image, recording/playback). In this case, sub menu cannot be accessed and settings cannot be changed.














### Controls in this section



## Common Menus for All Modes

Menus	Settings ([ ] = Factory-preset)	
 <b>BASIC SETTING</b>	Press <b>▶  </b> and then select sub menus.	—
 <b>PRESET</b> Returns all the camera settings to their default values.	<b>EXECUTE:</b> Performs this function. <b>[CANCEL]:</b> Returns to the menu screen without executing reset.	—
 <b>DEMO MODE</b> Introduces special features of the camera at the following cases. ● When the menu screen is closed. ● When there is no operation for about 3 minutes after the power switch is set to  .	<b>OFF:</b> Disables the function. <b>[ON]:</b> Activates the function. <b>NOTES:</b> ● The demonstration only works when the DC cord is connected, not with the battery. ● If an SD card is in the camera, demonstration will not take place even if this mode is set to [ON].	—
 <b>OPERATION SOUND</b> Enables you to set the operation sound or turn the operation sound on/off.	<b>OFF:</b> Turns off the operation sound. <b>BEEP:</b> The beep sounds when the power is turned on or off, and at the beginning and end of recording. <b>[MELODY]:</b> Instead of a beep, a melody sounds when any operation is performed.	—
 <b>REMOTE</b> Turns reception of the operation signal from the remote control on/off.	<b>OFF:</b> The camera does not receive the signal from the remote control. <b>[ON]:</b> Enables operation with the remote control.	—
 <b>DROP DETECTION</b> Setting this function helps prevent damage to the HDD by enabling the camera to turn off the power automatically when, for example, it detects that it has been dropped.	<b>OFF:</b> Disables the function. <b>[ON]:</b> Activates the function. To turn the unit on when the drop detection worked, set the power switch to <b>OFF</b> , and to on again. <b>CAUTION:</b> Setting this function to off increases the chances of damaging the built-in hard disk if the camera is accidentally dropped.	—

## Common Menus for All Modes (Continued)

Menus	Settings ([ ] = Factory-preset)	
 <b>REC MEDIA SETTING</b>	Press <b>▶  </b> and then select sub menus.	–
 <b>VIDEO MODE</b> Enables you to set the recording medium for videos.	[HDD] / SD	15
 <b>IMAGE MODE</b> Enables you to set the recording medium for still images.	[HDD] / SD	15
 <b>FORMAT</b> Enables you to select the medium to format.	[HDD] / SD	39
 <b>CLEAN UP</b> Enables you to select the medium to clean up.	[HDD] / SD	40
 <b>COPY/MOVE</b> Enables you to set whether to duplicate or move still images during dubbing.	[COPY] / MOVE	48
 <b>NO. RESET</b> Enables you to select the file type (videos or still images) when resetting the file number.	[VIDEO] / IMAGE	40
 <b>DATE/DISPLAY</b>	Press <b>▶  </b> and then select sub menus.	–
 <b>BRIGHT</b> Enables you to set the brightness of the LCD monitor.	Adjust the brightness of the display using <b>&lt;/&gt;</b> , then press <b>▶  </b> .	–
 <b>DATE/TIME</b> Enables you to set whether to display the current time on the LCD monitor.	<b>OFF:</b> The date/time does not appear. <b>[AUTO]:</b> The date/time appears for approx. 5 seconds in the following cases. ●When the power switch is set from <b>OFF</b> to  ●When playback starts ●When the date is changed during playback <b>ON:</b> The date/time is always displayed.	–
<b>NOTE:</b> You can set different settings for each mode (video recording/playback and still image recording/playback).		
 <b>SCENE COUNTER</b> Enables you to set whether to display the counter in video mode.	<b>[OFF]:</b> Disables the function. <b>ON:</b> Activates the function.	–
 <b>LANGUAGE</b> Enables you to set the language for menus.	[ENGLISH] / FRANÇAIS / DEUTSCH / ESPAÑOL / PORTUGUÊS / ITALIANO / NEDERLANDS / РУССКИЙ / POLSKI / ČEŠTINA / TÜRKÇE	13









Menus	Settings ([ ] = Factory-preset)	
<b>CLOCK ADJUST</b> Enables you to set the time.	<b>DATE / TIME</b>	13
<b>DATE DISPLAY ORDER</b> Enables you to set the date and time display format.	<b>DATE ORDER:</b> year.month.day / month.day.year / [day.month.year] <b>TIME:</b> [24H] / 12H	—
<b>DISPLAY</b>	<b>OFF:</b> Turns off the on-screen display. <b>[ON]:</b> Turns on the on-screen display.	—






## Video Recording Menus

Menus	Settings ([ ] = Factory-preset)	
<b>REGISTER EVENT</b> Enables you to turn on/off event registration for any videos before starting recording.	<b>ON/SELECT:</b> Activates the function. After you activate this function, you can select the event to register videos to. <b>[OFF]:</b> Disables the function.	17
<b>QUALITY</b> Enables you to set the picture quality for videos.	<b>[ULTRA FINE] / FINE / NORMAL / ECONOMY</b>	—
<b>WIND CUT</b> Reduces noise caused by wind.	<b>[OFF]:</b> Disables the function. <b>ON:</b> Activates the function.	—
<b>GAIN UP</b> Makes the subject appear bright automatically when you record in dark places. However, the overall colour tones appear grayish.	<b>OFF:</b> Disables the function. <b>[ON]:</b> Activates the function.	—
<b>DIS</b> Compensates for hand shake.	<b>OFF:</b> Disables the function. <b>[ON]:</b> Activates the function. <b>NOTES:</b> ● Accurate stabilisation may not be possible if hand shake is excessive, or depending on the shooting conditions. In this case, the  indicator blinks or goes out. ● Switch off this mode when recording with the camera on a tripod.	—
<b>CAMERA SETTING</b>	Press <b>▶II</b> and then select sub menus.	—
<b>ZOOM</b> Enables you to set the maximum zoom ratio.	<b>32X:</b> Only optical zoom is available up to 32x. <b>[64X]:</b> Digital zoom is available up to 64x. <b>800X:</b> Digital zoom is available up to 800x.	18
<b>TELE MACRO</b> You can shoot a subject as large as possible at a distance of approx. 40 cm.	<b>[OFF]:</b> Disables the function. <b>ON:</b> Activates the function.	—






## Video Playback Menus

Menus	Settings ([ ] = Factory-preset)	
 <b>CHANGE EVENT REG.</b> Enables you to change the event registration of recorded video files.	<b>BABY / BIRTHDAY / VACATION / HOLIDAY / SPORTS / GRADUATION / ANNIVERSARY / DAUGHTER / SON / CONGRATULATIONS / NON SECTION</b>	41
 <b>PLAYLIST</b> Enables you to perform operations related to playlists.	<b>[PLAYLIST CONTENTS] / NEW LIST / EDIT / RENAME / DELETE</b>	42
 <b>WIPE/FADER</b> These are special playback effects. They add effects to the beginning and end of playback.	<b>[OFF] / FADER-WHITE / FADER-BLACK / FADER-B.W / WIPE:CORNER / WIPE:WINDOW / WIPE:SLIDE / WIPE:DOOR / WIPE:SCROLL / WIPE:SHUTTER</b>	34
 <b>EFFECT</b> These are special playback effects. They add effects that alter colour tones.	<b>[OFF] / SEPIA / MONOTONE / CLASSIC FILM / STROBE</b>	34
 <b>PROTECT</b> Enables you to perform operations related to protecting files.	<b>[CURRENT] / FILE SELECT / PROTECT ALL / CANCEL ALL</b>	38
 <b>DELETE</b> Enables you to perform operations related to deleting files.	<b>[CURRENT] / FILE SELECT / DELETE ALL</b>	37

## Still Image Recording Menus

Menus	Settings ([ ] = Factory-preset)	
 <b>QUALITY</b> Enables you to set the picture quality for still images.	[FINE] / STANDARD	–
 <b>SELF-TIMER</b> This is the timer function. It starts recording when the set time elapses after the <b>REC/SNAP</b> button is pressed.	[OFF] / 2SEC / 10SEC	–
 <b>CONTINUOUS SHOOTING</b> This is the continuous shooting function. It records still images continuously while the <b>REC/SNAP</b> button is pressed.	[OFF]: Disables the function. [ON]: Activates the function.	21
 <b>GAIN UP</b> Makes the subject appear bright automatically when you record in dark places. However, the overall colour tones appear grayish.	[OFF]: Disables the function. [ON]: Activates the function.	–
 <b>CAMERA SETTING</b> <b>TELE MACRO</b> You can shoot a subject as large as possible at a distance of approx. 40 cm.	Press ►   and then select sub menus. [OFF]: Disables the function. [ON]: Activates the function.	–

## Still Image Playback Menus


Menus	Settings ([ ] = Factory-preset)	
 <b>DPOF</b> Enables you to configure settings related to DPOF.	SELECT IMAGES / ALL1 / CHECK SETTINGS / RESET	45
 <b>DIRECT PRINT</b> Enables you to configure settings related to printing.	After you select this menu, connect the camera to a printer with the USB cable.	46
 <b>EFFECT</b> These are special playback effects. They add effects that alter colour tones.	[OFF] / SEPIA / MONOTONE	34
 <b>PROTECT</b> Enables you to perform operations related to protecting files.	[CURRENT] / FILE SELECT / PROTECT ALL / CANCEL ALL	38
 <b>DELETE</b> Enables you to perform operations related to deleting files.	[CURRENT] / FILE SELECT / DELETE ALL	37

The camera is a microcomputer-controlled device. External noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly.

- To solve the problem, first follow the instructions below.
- If the problem is not solved, reset the camera. (▶ right column)
- If the problem persists, please consult your nearest JVC dealer.


### To reset the camera


- 1) Press **RESET** using a piece of wire or other pointed instrument. The power is turned off once and turned on again automatically.

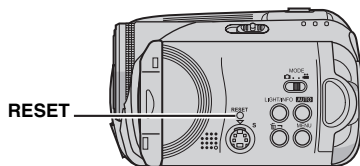


  - 2) If nothing happens, set the power switch to **OFF** and remove the power supply (battery pack or AC adapter) from the camera, then reattach it.
- 3) Execute [PRESET] from the menu. The camera returns to its factory-preset. (▶ pg. 51)


 

Trouble	Action	▶
<b>Power</b>		
<b>No power is supplied.</b>	<ul style="list-style-type: none"> <li>● Connect the AC adapter securely.</li> <li>● Detach the battery pack once again and re-attach it firmly.</li> <li>● Replace the dead battery with a fully charged one.</li> </ul>	12 12 –
<b>No display appears.</b>	<ul style="list-style-type: none"> <li>● When using the AC adapter, the camera enters the sleep mode, the access lamp lights, and the LCD monitor turns off. To cancel the sleep mode, perform any operation such as zooming.</li> </ul>	–
<b>The power was turned off accidentally.</b>	<ul style="list-style-type: none"> <li>● The drop detection function operated. Set the power switch to <b>OFF</b>, and turn the power on again. To turn off the drop detection function, set [DROP DETECTION] to [OFF].</li> </ul>	51

Trouble	Action	
<b>Displays</b>		
<b>The power/charge lamp on the camera does not light during charging.</b>	<ul style="list-style-type: none"> <li>● Charging is difficult in places subject to extremely high/low temperatures. To protect the battery, it is recommended to charge it in places with a temperature of 10°C to 35°C.</li> <li>● When the battery is already fully charged, the lamp does not light. Check the remaining battery power.</li> </ul>	–  14
<b>[SET DATE/TIME!] appears.</b>	<ul style="list-style-type: none"> <li>● The built-in clock's rechargeable lithium battery is discharged, so the previously set date/time is erased. Connect the camera to an AC outlet using the AC adapter for over 24 hours to charge the clock's lithium battery. Then set the date/time.</li> </ul>	12 13
<b>Images on the LCD monitor appear dark or whitish.</b>	<ul style="list-style-type: none"> <li>● Adjust the brightness and angle of the LCD monitor.</li> <li>● When the LCD monitor's LED light reaches the end of its service life, images on the LCD monitor become dark. Consult your nearest JVC dealer.</li> </ul>	52 –
<b>Coloured bright spots appear on the LCD monitor.</b>	<ul style="list-style-type: none"> <li>● The LCD monitor is made with high precision technology. However, black spots or bright spots of light (red, green or blue) may appear constantly on the LCD monitor. These spots are not recorded on the picture. This is not due to any defect of the unit. (Effective dots: more than 99.99 %)</li> </ul>	–
<b>Image does not appear on the LCD monitor.</b>	<ul style="list-style-type: none"> <li>● Adjust the brightness of the LCD monitor.</li> </ul>	52
<b>Image appears to be slightly vertically stretched when playing back on a 4:3 screen TV.</b>	<ul style="list-style-type: none"> <li>● Such a phenomenon will occur if the image is recorded at 16:9 mode. Record videos at 4:3 mode if playing back on a 4:3 screen TV.</li> </ul>	18
<b>Recording</b>		
<b>Recording cannot be performed.</b>	<ul style="list-style-type: none"> <li>● Replace with new recording medium or delete unnecessary files.</li> <li>● Select the recording medium properly.</li> </ul>	36 15
<b>When shooting a subject illuminated by bright light, vertical lines appear.</b>	<ul style="list-style-type: none"> <li>● This is not a malfunction.</li> </ul>	–
<b>When the screen is under direct sunlight during shooting, the screen becomes red or black for an instant.</b>	<ul style="list-style-type: none"> <li>● This is not a malfunction.</li> </ul>	–
<b>During recording, the date/time does not appear.</b>	<ul style="list-style-type: none"> <li>● Set [DATE/TIME] to [ON].</li> </ul>	52


Trouble	Action	
<b>Recording (Continued)</b>		
<b>The LCD monitor indications blink.</b>	<ul style="list-style-type: none"> <li>● Certain modes of program AE, effect, DIS, and other functions that cannot be used together are selected at the same time.</li> </ul>	–
<b>Digital zoom does not work.</b>	<ul style="list-style-type: none"> <li>● Set [ZOOM] to [64X] or [800X].</li> <li>● Digital zoom is not available in the still image recording mode.</li> </ul>	53 –
<b>The recorded image is white.</b>	<ul style="list-style-type: none"> <li>● In bright places, setting “Nightscope” or a slow speed is not recommended.</li> </ul>	24
<b>The focus is not adjusted automatically.</b>	<ul style="list-style-type: none"> <li>● Set focus to the automatic mode.</li> <li>● Clean the lens and check the focus again.</li> </ul>	23 62
<b>The colour of the image looks strange.</b>	<ul style="list-style-type: none"> <li>● Try manual white balance adjustment.</li> </ul>	23
<b>The recorded image is too dark.</b>	<ul style="list-style-type: none"> <li>● Try backlight compensation or manual exposure.</li> </ul>	23 25
<b>The recorded image is too bright.</b>	<ul style="list-style-type: none"> <li>● Try manual exposure.</li> </ul>	23
<b>White balance setting cannot be activated.</b>	<ul style="list-style-type: none"> <li>● Do not select the sepia (SEPIA) or monotone (MONOTONE) mode before setting white balance.</li> </ul>	24
<b>The continuous shooting speed of still images is slow.</b>	<ul style="list-style-type: none"> <li>● The continuous shooting speed will drop when repeatedly making continuous shots, when using certain recording media, or under certain recording conditions.</li> </ul>	–
<b>Playback</b>		
<b>Playback cannot be performed.</b>	<ul style="list-style-type: none"> <li>● Select the recording medium properly.</li> <li>● To watch images on a TV, set the TV's input mode or channel that is appropriate for video playback.</li> </ul>	15 32
<b>The same image is displayed for a long time during video playback, or motion is choppy.</b>	<ul style="list-style-type: none"> <li>● The surface of the disk or card is damaged. It is recommended to run check disk regularly on the PC, providing that there is no data on the hard disk of the camera.</li> </ul>	–
<b>The black &amp; white fader does not work.</b>	<ul style="list-style-type: none"> <li>● Do not select the sepia (SEPIA) or monotone (MONOTONE) mode.</li> </ul>	35
<b>There is a noise during playback.</b>	<ul style="list-style-type: none"> <li>● The sound of the hard disk drive may have been recorded if the camera was moved suddenly during recording. Do not move or shake the camera suddenly during recording.</li> </ul>	–


Trouble	Action	
<b>Editing / Printing</b>		
<b>Files cannot be deleted.</b>	<ul style="list-style-type: none"> <li>● Remove protection from the files and delete them.</li> </ul>	38
<b>When the image is printed from the printer, a black bar appears at the bottom of the screen.</b>	<ul style="list-style-type: none"> <li>● This is not a malfunction. This can be avoided by recording with DIS activated.</li> </ul>	53
<b>Other problems</b>		
<b>The data process is too slow after the power is switched on or the mode is changed.</b>	<ul style="list-style-type: none"> <li>● There is a large number of still images (approx. 1,000 or more) stored in the recording medium. Copy the stored files to a PC, and delete them from the recording medium.</li> </ul>	36
<b>The SD card cannot be removed from the camera.</b>	<ul style="list-style-type: none"> <li>● Push the SD card in a few more times.</li> </ul>	15

The following indications appear on the screen.

Indication	Meaning	
 <b>(Battery indicator)</b>	<ul style="list-style-type: none"> <li>Displays the remaining battery power. Remaining power level   </li> <li>As the battery power comes close to nil, the battery indicator blinks. When the battery power is exhausted, power turns off automatically.</li> </ul>	<p>—</p> <p>—</p>
<b>SET DATE/TIME!</b>	<ul style="list-style-type: none"> <li>Appears when the date/time is not set.</li> <li>Appears when the built-in clock (lithium) battery is discharged and the previously set date/time is erased.</li> </ul>	<p>13</p> <p>57</p>
<b>LENS CAP</b>	<ul style="list-style-type: none"> <li>Appears for 5 seconds after power is turned on with the power switch set to  if the lens cap is attached or when it is dark.</li> </ul>	<p>—</p>
<b>PLEASE INSERT MEMORY CARD!</b>	<ul style="list-style-type: none"> <li>Appears when there is no SD card inserted in the SD slot.</li> </ul>	<p>15</p>
<b>HARD DISK DRIVE IS NOT FORMATTED</b>	<ul style="list-style-type: none"> <li>Appears when the built-in hard disk needs to be formatted.</li> </ul>	<p>39</p>
<b>THIS CARD IS NOT FORMATTED</b>	<ul style="list-style-type: none"> <li>Appears when an unformatted SD card is inserted.</li> </ul>	<p>39</p>
<b>HDD ERROR! MEMORY CARD ERROR!</b>	<ul style="list-style-type: none"> <li>Appears when some errors occurred with the recording media.</li> <li>Remove the card once and insert it again. If the error is not cancelled, replace the card with one that has been guaranteed for correct operation.</li> <li>Perform clean up to restore the capacity of the recording media.</li> <li>It is recommended to run check disk regularly on the PC, providing that there is no data on the hard disk of the camera.</li> </ul>	<p>—</p> <p>15</p> <p>40</p> <p>—</p>
<b>CHECK CARD'S WRITE PROTECTION SWITCH</b>	<ul style="list-style-type: none"> <li>Appears when you attempt recording when the write/erase protection tab on the SD card is set to the "LOCK" position.</li> </ul>	<p>38</p>
<b>NO VIDEO FILES STORED!</b>	<ul style="list-style-type: none"> <li>Appears if there are no video files when you attempt video playback.</li> </ul>	<p>—</p>
<b>NO IMAGE FILES STORED!</b>	<ul style="list-style-type: none"> <li>Appears if there are no still image files when you attempt still image playback.</li> </ul>	<p>—</p>
<b>NO MEMORY CARD</b>	<ul style="list-style-type: none"> <li>Appears when the SD card is not inserted to the SD slot for file copy/move operation.</li> </ul>	<p>—</p>
<b>NO SUPPORTED FILES</b>	<ul style="list-style-type: none"> <li>Appears when there are no JPEG (still image) files to be copied or moved in recording media.</li> </ul>	<p>—</p>



Indication	Meaning	
<b>NUMBER OF FOLDERS OVERFLOW</b>	● Appears when the number of folders exceeds the limit for file copy/move operation.	–
<b>MEMORY CARD ERROR! REINSERT CARD OR CHANGE CARD.</b>	● Appears when the camera does not recognise the loaded SD card. Remove the card once and insert it again or replace with another card.	15
<b>FILE SYSTEM MAY HAVE PROBLEM. FORMAT IS RECOMMENDED AFTER COPYING WANTED DATA.</b>	● The file system of the recording medium may have a problem. It is recommended to copy the data for backup purposes, then format the medium.	39
<b>VIDEO MANAGEMENT FILE IS BROKEN. TO RECORD/ PLAYBACK VIDEO, RECOVERY IS REQUIRED. RECOVER?</b>	● The video management file is broken. Recovery is required to record or play back video files. Press $\wedge$ / $\vee$ to select [YES], then press $\blacktriangleright\ \blacksquare$ to recover the video management file. If the desired video file is not displayed on the video index screen in spite of the file recovery, the file has been moved to the [EXTMOV] folder. Press the <b>REC/SNAP</b> button on the index screen to display [MPG], and then select the desired file.	29
<b>NO VIDEO MANAGEMENT FILE VIDEO FILES HAVE BEEN MOVED TO MPEG FOLDER</b>	● The data cannot be recorded properly, or the video management file has been deleted or cannot be found. Video files have been moved to MPEG (EXTMOV) folder.	29
<b>CAN NOT READ EVENT INFORMATION</b>	● Appears when the event information cannot be read.	–
<b>PLAYLIST'S MANAGEMENT INFORMATION IS BROKEN. REMAKE PLAYLIST AGAIN.</b>	● The management information of the playlist is broken. Create the playlist again.	42
<b>NO REGISTERED SCENES IN PLAYLIST. SOME OF SCENES MAY NOT BE PLAYED BACK.</b>	● The video files registered in the playlist do not exist. Some of the scenes may not be played back.	–
<b>REGISTERED SCENES IN PLAYLIST IS EMPTY. THIS PLAYLIST WILL BE DELETED.</b>	● There are no scenes registered in the playlist. The playlist will be deleted.	–
<b>CAMERA TEMPERATURE IS GOING UP. TURN CAMERA OFF, PLEASE WAIT.</b>	● The temperature of the camera is too high. Turn off the power, then wait for a while.	–
<b>CAMERA TEMPERATURE IS TOO LOW. KEEP CAMERA POWER ON, PLEASE WAIT.</b>	● The temperature of the camera is too low. Keep the power on and wait for a while.	–

Indication	Meaning	
<b>RECORDING FAILURE</b>	● Performance of recording medium is poor. Use the Cleanup function [CLEAN UP] in the menu.	40
	● The writing speed of recording medium is slow, or the recording medium is corrupted. Use an SD card that is guaranteed to operate.	3 15
	● The recording medium was subjected to vibrations or jolts. Be careful not to subject the recording medium to vibrations or jolts.	–
	● Appears when the built-in hard disk is full and recording is not possible. Delete unnecessary files.	36
	● Appears when the SD card is full and recording is not possible. Replace with new recording medium or delete unnecessary files.	36
<b>RECORDING MAY NOT BE CORRECT ON THE MEMORY CARD</b>	● The data may not be recorded on the recording medium correctly. Try recording again.	–
	● Otherwise, clean up the recording medium.	40
<b>MEMORY CARD CANNOT BE PLAYED BACK CORRECTLY</b>	● The recording medium cannot be played back correctly. Try playback again.	–
<b>CANNOT USE IN VIDEO MODE</b>	● The operation is not available in the video mode.	–
<b>DROP DETECTION WORKED AND THE POWER IS TURNED OFF</b>	● The drop detection function operated, and the power was turned off. The file that was being recorded may have been saved into the [EXTMOV] folder.	29
		51

## Cleaning the Camera

Before cleaning, turn off the camera and remove the battery pack and AC adapter.

### To clean the exterior

Wipe gently with a soft cloth. If the camera is particularly dirty, dip the cloth into diluted mild soap and wring it out well before wiping. Then wipe again with a dry cloth.

### To clean the LCD monitor

Wipe gently with a soft cloth. Be careful not to damage the monitor.

### To clean the lens

Wipe gently with lens cleaning paper.


### NOTES:

- Avoid using strong cleaning agents such as benzine or alcohol.
- Cleaning should be done only after the battery pack has been removed or other power units have been disconnected.
- Mould may form if the lens is left dirty.
- When using a cleaner or chemically treated cloth, refer to the cautions for each product.

## Battery Packs

The supplied battery pack is a lithium-ion battery. Before using the supplied battery pack or an optional battery pack, be sure to read the following cautions:

### Terminals

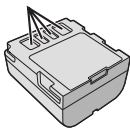

- **To avoid hazards**

- ... do not burn.

- ... do not short-circuit the terminals. When transporting, make sure the provided battery cap is attached to the battery. If the battery cap is misplaced, carry the battery in a plastic bag.

- ... do not modify or disassemble.

- ... do not expose the battery to temperatures exceeding 60°C, as this may cause the battery to overheat, explode or catch fire.

- ... use only specified chargers.

- **To prevent damage and prolong service life**

- ... do not subject to unnecessary shock.

- ... charge in an environment where temperatures are within the tolerances shown in "Temperature range specifications" (pg. 63). This is a chemical reaction type battery — cooler temperatures impede chemical reaction, while warmer temperatures can prevent complete charging.

- ... store in a cool, dry place. Extended exposure to high temperatures will increase natural discharge and shorten service life.

- ... fully charge and then fully discharge the battery every 6 months when storing the battery pack over a long period time.

- ... remove from charger or powered unit when not in use, as some machines use current even when switched off.

### NOTES:

- It is recommended that only genuine JVC batteries are used in this camera. Using generic non-JVC batteries can cause damage to the internal charging circuitry.

- It is normal for the battery pack to be warm after charging, or after use.

#### Temperature range specifications

Charging: 10°C to 35°C

Operation: 0°C to 40°C

Storage: -20°C to 50°C

- The lower the temperature, the longer the recharging takes.

**DANGER!** Do not attempt to take the batteries apart, or expose them to flame or excessive heat, as it may cause a fire or explosion.

**WARNING!** Do not allow the battery or its terminals to come in contact with metals, as this can result in a short circuit and possibly start a fire.

### To resume the original function of the accurate battery power indication

If the battery power indication differs from the actual operating time, fully charge the battery, and then run it down. However this function may not work properly if the battery was used for a long period of time under extremely high/low temperature condition or charged too many times.

## Recording Medium

- **Be sure to follow the guidelines below to prevent corruption or damage to your recorded data.**

- Do not bend or drop the recording medium, or subject it to strong pressure, jolts or vibrations.
- Do not splash the recording medium with water.
- Do not use, replace, or store the recording medium in locations that are exposed to strong static electricity or electrical noise.
- Do not turn off the camera power or remove the battery or AC adapter during shooting, playback, or when otherwise accessing the recording medium.
- Do not bring the recording medium near objects that have a strong magnetic field or that emit strong electromagnetic waves.
- Do not store the recording medium in locations with high temperature or high humidity.
- Do not touch the metal parts.

- **Copy the recorded files to your PC. JVC shall not be responsible for any lost data. (It is recommended that you copy the data from your PC to DVD or other media for storage.)**
- **A malfunction may cause the recording medium to fail to operate properly. JVC shall not provide any compensation for any lost contents.**

### Recording Medium (Continued)

- Do not strike or shake the hard disk.
- When the camera is repaired or inspected, data may be erased, and the hard disk may be formatted. Back up all data before requesting repair or inspection.
- Play back your trial recording to make sure the video and audio have been recorded properly.
- When formatting or erasing data using the camera, only the file administration information is changed. The data is not completely erased from the hard disk. If you want to completely erase all of the data, we recommend either using commercially available software that is specially designed for that purpose, or by physically destroying the camera with a hammer etc.

### LCD Monitor

- **To prevent damage to the LCD monitor, DO NOT**
  - ... push it strongly or apply any shocks.
  - ... place the camera with LCD monitor on the bottom.
- **To prolong service life**
  - ... avoid rubbing it with coarse cloth.
- **The following phenomena for LCD monitor use are not malfunctions.**
  - ... While using the camera, the surface around the LCD monitor may heat up.
  - ... If you leave power on for a long time, the surface around the LCD monitor becomes hot.

### Main Unit

- **For safety, DO NOT**
  - ... open the camera's chassis.
  - ... disassemble or modify the unit.
  - ... short-circuit the terminals of the battery pack. Keep it away from metallic objects when not in use.
  - ... allow inflammables, water or metallic objects to enter the unit.
  - ... remove the battery pack or disconnect the power supply while the power is on.
  - ... leave the battery pack attached when the camera is not in use.
  - ... place naked flame sources, such as lighted candles, on the apparatus.
  - ... expose the apparatus to dripping or splashing.
- **Avoid using the unit**
  - ... in places subject to excessive humidity or dust.
  - ... in places subject to soot or steam such as near a cooking stove.
  - ... in places subject to excessive shock or vibration.
  - ... near a television set.
  - ... near appliances generating strong magnetic or electric fields (speakers, broadcasting antennas, etc.).
  - ... in places subject to extremely high (over 40°C) or extremely low (under 0°C) temperatures.
- **DO NOT leave the unit**
  - ... in places of over 50°C.
  - ... in places where humidity is extremely low (below 35%) or extremely high (above 80%).
  - ... in direct sunlight.
  - ... in a closed car in summer.
  - ... near a heater.
  - ... in high places such as on a TV. Leaving the unit in high places while a cable is connected may result in a malfunction if the cable is caught and the unit falls onto the floor.
- **To protect the unit, DO NOT**
  - ... allow it to become wet.
  - ... drop the unit or strike it against hard objects.
  - ... subject it to shock or excessive vibration during transportation.
  - ... keep the lens directed at extremely bright objects for long periods.
  - ... expose the lens to direct sunlight.
  - ... swing it excessively when using the hand strap.
  - ... swing the soft camera case excessively when the camera is inside it.

## How to Handle a CD-ROM

- Take care not to soil or scratch the mirror surface (opposite to the printed surface). Do not write anything or put a sticker on either the front or back surface. If the CD-ROM gets dirty, gently wipe it with a soft cloth outward from the centre hole.
- Do not use conventional disc cleaners or cleaning spray.
- Do not bend the CD-ROM or touch its mirror surface.
- Do not store your CD-ROM in a dusty, hot or humid environment. Keep it away from direct sunlight.

## Serious malfunctioning

If malfunctioning occurs, stop using the unit immediately and consult your local JVC dealer. When requesting repairs for malfunctioning by your dealer or JVC service centre, be sure to bring your camera together with the recording medium. If one of them is not included, the cause cannot be diagnosed, and the repair cannot be made properly.

The camera is a microcomputer-controlled device. External noise and interference (from a TV, a radio, etc.) might prevent it from functioning properly. In such cases, first disconnect its power supply unit (battery pack, AC adapter, etc.) and wait a few minutes and then re-connect it and proceed as usual from the beginning.

## Camera

### For general

#### Power supply

DC 11 V (Using AC adapter)

DC 7.2 V (Using battery pack)

#### Power consumption

Approx. 3.9 (4.1)\* W

\* When using the LED light

#### Dimensions (W x H x D)

68 mm x 69 mm x 109 mm

#### Weight

Approx. 340 g

(without battery, lens cap and strap)

Approx. 400 g

(incl. battery, lens cap and strap)

#### Operating temperature

0°C to 40°C

#### Operating humidity

35% to 80%

#### Storage temperature

-20°C to 50°C

#### Pickup

1/6" (800,000 pixels) CCD

#### Lens

F 2.0 to 4.5, f = 2.3 mm to 73.6 mm, 32:1 power zoom lens

#### Filter diameter

ø30.5 mm

#### LCD monitor

2.7" diagonally measured, LCD panel/TFT active matrix system

#### Speaker

Monaural

#### LED Light

Within 1.5 m

(recommended shooting distance)

### For video/audio

#### Format

SD-VIDEO

#### Recording/Playback format

Video: MPEG-2

Audio: Dolby Digital (2 ch)

#### Signal format

PAL standard

#### Recording mode (video)

ULTRA FINE: 720 x 576 pixels, 8.5 Mbps (VBR)

FINE: 720 x 576 pixels, 5.5 Mbps (VBR)

NORMAL: 720 x 576 pixels, 4.2 Mbps (VBR)

ECONOMY: 352 x 288 pixels, 1.5 Mbps (VBR)

#### Recording mode (audio)

ULTRA FINE: 48 kHz, 384 kbps

FINE: 48 kHz, 384 kbps

NORMAL: 48 kHz, 256 kbps

ECONOMY: 48 kHz, 128 kbps

### For still image

#### Format

JPEG

#### Image size

One mode (640 x 480)

#### Picture quality

2 modes (FINE/STANDARD)

### For connectors

#### AV

S-Video output:

Y: 1.0 V (p-p), 75 Ω, analogue

C: 0.29 V (p-p), 75 Ω, analogue

Video output: 1.0 V (p-p), 75 Ω, analogue

Audio output: 300 mV (rms), 1 kΩ, analogue, stereo

#### USB

Mini USB type B, USB 2.0 compliant

## AC Adapter

#### Power requirement

AC 110 V to 240 V~, 50 Hz/60 Hz

#### Output

DC 11 V  $\overline{\text{---}}$ , 1 A

## Remote Control

#### Power supply

DC 3 V

#### Battery life

Approx. 1 year (depending on the frequency of use)

#### Operating distance

Within 5 m

#### Operating temperature

0°C to 40°C

#### Dimensions (W x H x D)

45 mm x 13 mm x 105 mm

#### Weight

Approx. 40 g

(incl. battery)

Design and specifications subject to change without notice.

## Recording Time and Number of Images

The tables below show the approximate recording time and number of storable images. The number increases or decreases depending on the picture quality.

### Approximate recording time (minutes) (for video)

Quality [ ] = Factory-preset	HDD	SD Card				
		128 MB	256 MB	512 MB	1 GB	2 GB
[ULTRA FINE]	290	1	3	7	14	29
FINE	430	2	5	10	21	43
NORMAL	570	3	6	14	27	57
ECONOMY	1500	8	18	37	73	152


### Approximate number of storable images (for still image)

Quality [ ] = Factory-preset	HDD	SD Card				
		128 MB	256 MB	512 MB	1 GB	2 GB
[FINE]	9999	520	1035	2060	4160	7750
STANDARD		1115	2225	4415	8915	9999

#### NOTE:


For details on compatible SD cards, see "Check the compatibility of recording media" (→ pg. 3).

## During both Video and Still Image Recording

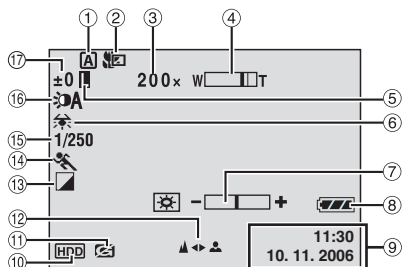


- ① Selected Operation Mode Indicator ( pg. 22)  
[A]: Auto Mode  
[M]: Manual Mode
- ② Tele Macro Mode Indicator ( pg. 53, 55)
- ③ Approximate Zoom Ratio ( pg. 18, 21)
- ④ Zoom Indicator ( pg. 18, 21)
- ⑤ Iris Lock Indicator ( pg. 23)
- ⑥ White Balance Indicator ( pg. 23)
- ⑦ Brightness Control Indicator ( pg. 52)
- ⑧ Battery Indicator ( pg. 60)
- ⑨ Date/Time ( pg. 52)
- ⑩ Selected Medium Indicator ( pg. 15, 52)
- ⑪ Drop Detection Indicator ( pg. 51)
- ⑫ Manual Focus Adjustment Indicator ( pg. 23)
- ⑬ Effect Mode Indicator ( pg. 24)
- ⑭ Program AE Mode Indicator ( pg. 24)
- ⑮ Shutter Speed ( pg. 24)  
[A]: Nightscope Indicator ( pg. 25)
- ⑯ LED Light Indicator ( pg. 18, 21)
- ⑰ ±: Exposure Adjustment Indicator ( pg. 23)  
[ ]: Backlight Compensation Indicator ( pg. 25)  
[ ]: Spot Exposure Control Indicator ( pg. 25)

## During Video Recording Only

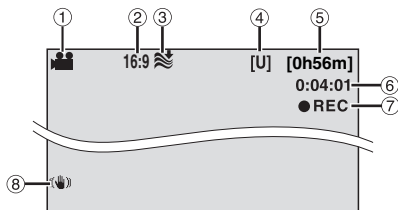

- ① Mode Indicator ( pg. 16)
- ② Screen Size Indicator ( pg. 18)
- ③ Wind Cut Indicator ( pg. 53)
- ④ Picture Quality: [U] (ultra fine), [F] (fine), [N] (normal), [E] (economy) ( pg. 53)
- ⑤ Remaining Time ( pg. 16, 67)
- ⑥ Counter ( pg. 52)
- ⑦ ●REC: (Appears during recording.) ( pg. 16)  
●II: (Appears during record-standby mode.)
- ⑧ Digital Image Stabiliser (DIS) Indicator ( pg. 53)


## During Still Image Recording Only

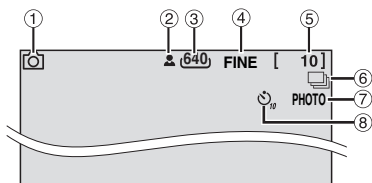

- ① Mode Indicator ( pg. 20)
- ② Focus Indicator ( pg. 20)
- ③ Image Size: 640 (640 x 480)
- ④ Picture Quality: FINE (fine) or STD (standard) ( pg. 55)
- ⑤ Remaining Number of Shots ( pg. 67)
- ⑥ [A]: Continuous Shooting Mode Indicator ( pg. 21)
- ⑦ Shooting Indicator ( pg. 20)
- ⑧ Self-Timer Recording Indicator ( pg. 55)




## During Video Playback

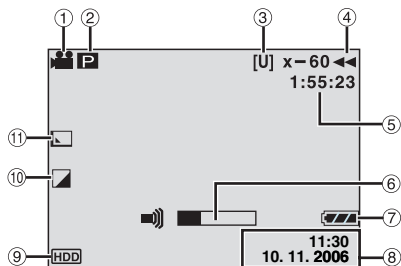



- ① Mode Indicator (☞ pg. 26)
- ② **P**: Playlist Playback Indicator (Appears when playing back a playlist. ☞ pg. 44)  
 ☺E: Event Search Playback Indicator (Appears when playing back a video file from the event search. ☞ pg. 29)  
 ☺D: Date Search Playback Indicator (Appears when playing back a video file from the date search. ☞ pg. 28)
- ③ Picture Quality: [U] (ultra fine), [F] (fine), [N] (normal), [E] (economy) (☞ pg. 53)
- ④ Playback Mode (☞ pg. 27)  
 ▶ : Playback  
 || : Pause  
 ▶▶ : Forward High-Speed Search  
 ◀◀ : Reverse High-Speed Search  
 ▶▶ : Forward Slow-Motion  
 ◀◀ : Reverse Slow-Motion  
 (The number on the left shows the speed.)
- ⑤ Counter (☞ pg. 52)
- ⑥ Volume Level Indicator
- ⑦ Battery Indicator (☞ pg. 60)
- ⑧ Date/Time (☞ pg. 52)
- ⑨ Selected Medium Indicator (☞ pg. 15, 52)
- ⑩ Effect Mode Indicator (☞ pg. 34)
- ⑪ Wipe/Fader Effect Indicator (☞ pg. 34)

## During Still Image Playback

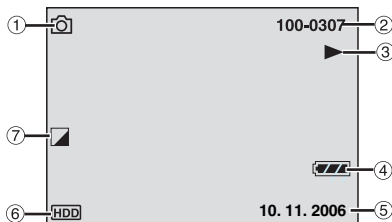

  - ① Mode Indicator (☞ pg. 30)
- ② Folder/File Number
- ③ Slide Show Playback Indicator (☞ pg. 31)
- ④ Battery Indicator (☞ pg. 60)
- ⑤ Date (☞ pg. 52)
- ⑥ Selected Medium Indicator (☞ pg. 15, 52)
- ⑦ Effect Mode Indicator (☞ pg. 34)





<b>A</b>		<b>M</b>	
AC Adapter .....	12	Manual Exposure .....	23
<b>B</b>		Manual Focus .....	23
Backlight Compensation .....	25	Manual Recording .....	22
Battery Pack .....	12	MSET Menu .....	22
Brightness Control .....	52	<b>N</b>	
<b>C</b>		Nightscope .....	25
Changing Event Registration .....	54	Number of Storable Images .....	67
Changing the Menu Settings .....	50	<b>O</b>	
Cleaning Up a Recording Medium .....	40, 52	On-Screen Display .....	53, 68
Clock Adjust .....	53	Operation Sound .....	51
Connecting to a TV, VCR or DVD Recorder .....	32	<b>P</b>	
Continuous Shooting .....	21, 55	PictBridge .....	46
Copying/Moving Still Image Files .....	48, 52	Picture Quality .....	53, 55, 67
<b>D</b>		Playlist .....	42, 54
Data Battery .....	14	Power Switch .....	12
Date Display Order .....	53	Power-Linked Operation .....	10
Date Index Screen .....	28	Program AE .....	24
Date/Time Setting .....	13	Protecting Files .....	38, 54, 55
Deleting Files .....	36	<b>R</b>	
Demonstration Mode .....	51	Rec Media Setting .....	52
Digital Image Stabiliser (DIS) .....	53	Recording Medium .....	63
Direct Printing .....	46, 55	Recording Time .....	67
Drop Detection .....	51	Remote Control .....	33, 51
Dubbing .....	47	Resetting the File Number .....	40, 52
<b>E</b>		<b>S</b>	
Effect .....	34, 54, 55	Scene Counter .....	52
Event Registration .....	17, 53	Screen Size (16:9/4:3) .....	18
Event Screen .....	29	SD Card .....	15
EXTMOV Folder .....	17, 29	Self-Timer .....	55
<b>F</b>		Shutter Speed .....	24
File Information .....	37	Slide Show .....	31
Focus .....	23	Slow Motion Playback .....	27
Formatting a Recording Medium .....	39, 52	Speaker Volume .....	26
<b>G</b>		Spot Exposure Control .....	25
Gain Up .....	53, 55	Still Image .....	20, 30
<b>H</b>		<b>T</b>	
Hard Disk .....	2	Tele Macro .....	53, 55
<b>I</b>		Tripod Mounting .....	14
Image Rotation .....	31	<b>V</b>	
<b>L</b>		Video .....	16, 26
Language Setting .....	13, 52	<b>W</b>	
LCD Monitor .....	10, 64	White Balance .....	23
LED Light .....	18, 21	Wind Cut .....	53
Lens Cap .....	9	Wipe or Fader Effects .....	34
		<b>Z</b>	
		Zooming .....	18, 21, 27, 31, 53

# JVC




**JVC**



# **SOFTWARE INSTALLATION AND USB CONNECTION GUIDE**

---

**ENGLISH**

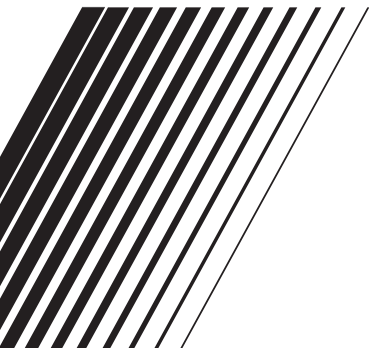

## For All Users

JVC SOFTWARE LICENSE AGREEMENT	2
Notice for Users	5
System Requirements	7
Folder Structure and Extensions	10

## For Windows® Users

Preparation	11
Software Installation	11
Connections	13
Connecting the Camera to the PC	13
Disconnecting the USB cable	14
Viewing the Contents of a Recording Medium	15
Copying Files to the PC	16
Playing Back Files on the PC	16
Playing Back Copied Video	17
User's Guide/Help/Readme	17

## For Macintosh Users

Preparation	18
Software Installation	18
Connections	20
Connecting the Camera to the PC	20
Disconnecting the USB cable	20
Viewing the Contents of a Recording Medium	21
Copying Files to the PC	22
Help/Readme	22

## JVC SOFTWARE LICENSE AGREEMENT

### IMPORTANT

**TO CUSTOMERS: PLEASE MAKE SURE TO READ THIS CAREFULLY BEFORE INSTALLING OR USING THE SOFTWARE PROGRAM NAMED "DIGITAL PHOTO NAVIGATOR" ("Program") ON YOUR PC.**

The right to use the Program is granted by Victor Company of Japan, Limited ("JVC") to You only on the condition that You agree to the following.

Should You not agree to the terms hereof, You may not install or use the Program. **HOWEVER, INSTALLING OR USING THE PROGRAM INDICATES YOUR ACCEPTANCE OF THESE TERMS AND CONDITIONS.**

### 1 COPYRIGHT; OWNERSHIP

You acknowledge that all copyrights and other intellectual property rights in the Program are owned by JVC and its licensor, and remain vested in JVC and such licensor. The Program is protected under the copyright law of Japan and other countries, and related Conventions.

### 2 GRANT OF LICENSE

- (1) Subject to the conditions of this Agreement, JVC grants to You a non-exclusive right to use the Program. You may install and use the Program on a HDD or other storage devices incorporated in Your PC.
- (2) You may make one (1) copy of the Program solely for your personal backup or archival purposes.

### **3 RESTRICTION ON THE PROGRAM**

- (1) You may not reverse engineer, decompile, disassemble, revise or modify the Program, except to the extent that expressly permitted by applicable law.
- (2) You may not copy or use the Program, in whole or in part, other than as expressly specified in this Agreement.
- (3) You have no right to grant a license to use the Program, and may not distribute, rent, lease or transfer the Program to any third party or otherwise let them use the Program.

### **4 LIMITED WARRANTY**

JVC warrants that any media in which the Program is embodied are free from any defects in materials and workmanship for a period of thirty (30) days from the date of Your purchasing any our products accompanying the Program. JVC's entire liability and your exclusive remedy in connection with the Program shall be replacement of such defective media. EXCEPT FOR THE EXPRESS WARRANTIES STATED HEREIN AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, JVC AND ITS LICENSORS DISCLAIM ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE IN REGARD TO THE PROGRAM AND THE ACCOMPANYING PRINTED MATERIALS. SHOULD THERE BE ANY PROBLEM ARISING FROM OR CAUSED BY THE PROGRAM, YOU SHOULD SETTLE ALL SUCH PROBLEM AT YOUR OWN COST AND EXPENSE.

### **5 LIMITED LIABILITY**

TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL JVC AND ITS LICENSORS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, REGARDLESS OF THE FORM OF ACTION WHETHER IN CONTRACT, TORT OR OTHERWISE ARISING OUT OF OR IN CONNECTION WITH THE USE OF OR INABILITY TO USE THE PROGRAM, EVEN IF JVC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. YOU WILL INDEMNIFY AND HOLD HARMLESS JVC FROM ANY LOSS, LIABILITY OR COST ARISING OUT OF OR IN ANY WAY CONNECTED TO CLAIMS FROM ANY THIRD PARTY RELATING TO THE USE OF THE PROGRAM.

### **6 TERM**

This Agreement will become effective on the date when You install and use the Program on Your machine, and continue to be in effect until the termination under the following provision.

Should You breach any provision of this Agreement, JVC may terminate this Agreement without giving any notice to You. In this event, JVC may claim against You for any damages caused by Your breach. Should this Agreement be terminated, You must immediately destroy the Program stored in Your machine (including the erasing from any memory in Your PC), and no longer own such Program.

## 7 EXPORT CONTROL

You agree that You will not ship, transfer or export the Program or underlying information and technology to any countries to which Japan and other relevant countries have initiated an embargo on such goods.

## 8 U.S. GOVERNMENT USER

If You are an agency of the United States of America (the "Government"), You acknowledge JVC's representation that the Program is a "Commercial Item" as defined in Federal Acquisition Regulation (FAR) part 2.101 (g) consisting unpublished "Commercial Computer Software" as those items are used at FAR part 12.212 and is only licensed to You with the same use rights JVC grants all commercial end users pursuant to the terms of this Agreement.

## 9 GENERAL

- (1) No modification, change, addition, deletion or other alternation of or to this Agreement will be valid unless reduced to writing and signed by an authorized representative of JVC.
- (2) If any part of this Agreement is held invalid by or in conflict with any law having jurisdiction over this Agreement, the remaining provisions will remain in full force and effect.
- (3) This Agreement shall be governed by and interpreted under the laws of Japan. The Tokyo District Court has jurisdiction over all disputes which may arise with respect to the execution, interpretation and performance of this Agreement.

Victor Company of Japan, Limited

### NOTE:

If You acquired the Program in Germany, the provisions of Sections 4 (Limited Warranty) and 5 (Limited Liability) provided above will be replaced with those of the German version of this Agreement.

### CAUTION:

- Operate this equipment according to the operating procedures described in this manual.
- Use only the provided CD-ROM. Never use any other CD-ROM to run this software.
- Do not attempt to modify this software.
- Changes or modifications not approved by JVC could void user's authority to operate the equipment.

### How to handle a CD-ROM

- Take care not to soil or scratch the mirror surface (opposite to the printed surface). Do not write anything or put a sticker on either the front or back surface. If the CD-ROM gets dirty, gently wipe it with a soft cloth outward from the center hole.
- Do not use conventional disc cleaners or cleaning spray.
- Do not bend the CD-ROM or touch its mirror surface.
- Do not store your CD-ROM in a dusty, hot or humid environment. Keep it away from direct sunlight.

**You can find the latest information (in English) on the provided software program at our world wide web server at <http://www.jvc-victor.co.jp/english/global-e.html>**



## Notice for Users

Use of this software is authorized according to the terms of the software license.

### JVC

When contacting the nearest JVC office or agency in your country about this software (refer to the JVC Worldwide Service Network at <http://www.jvc-victor.co.jp/english/worldmap/index-e.html>), please fill out the following and have the appropriate information ready.

Product Name		
Model		
Problem		
Error Message		
PC	Manufacturer	
	Model	<input type="checkbox"/> Desktop <input type="checkbox"/> Laptop
	CPU	
	OS	
	Memory	MB
	Available Hard Disk Space	MB

Please note that it may take some time to respond to your questions, depending on their subject matter.

**JVC cannot answer questions regarding basic operation of your PC, or questions regarding specifications or performance of the OS, other applications or drivers.**

## CyberLink

For details of CyberLink's technical support service, refer to the "Readme" of each software or the following list. To access "Readme", refer to "User's Guide/Help/Readme" (☞ pg. 17).

### Telephone/fax support

Location	Language	Office hours (Mon. to Fri.)	Phone #	Fax #
Germany	English / German / French / Spanish / Italian / Dutch	9:00 am to 5:00 pm	+49-700-462-92375	+49-241-70525-25
Taiwan	Mandarin	9:00 am to 6:00 pm	+886-2-8667-1298 ext. 333	+886-2-8667-1300
Japan	Japanese	10:00 am to 5:00 pm	+81-3-3516-9555	+81-3-3516-9559

### Paid voice support

Location	Language	Lines are open (Mon. to Fri.)	URL
U.S.A.	English	1:00 pm to 10:00 pm CST	<a href="http://www.cyberlink.com/english/cs/support/new_site/voice_support.jsp">http://www.cyberlink.com/english/cs/support/new_site/voice_support.jsp</a>

### Support web/e-mail

Language	URL/e-mail address
English	<a href="http://www.cyberlink.com/english/cs/support/new_site/support_index.html">http://www.cyberlink.com/english/cs/support/new_site/support_index.html</a>
German / French / Spanish / Italian	<a href="mailto:goCyberlink@aixtema.de">goCyberlink@aixtema.de</a>
Japanese	<a href="http://jp.cyberlink.com/support/">http://jp.cyberlink.com/support/</a>

## PIXELA

For technical inquiries, please contact the PIXELA User Support Center in your region.

Region	Location	Language	Phone #
North America	Los Angeles	English	+1-800-458-4029 (Toll-Free)
			+1-213-341-0163
Europe	U.K.	English / German / French / Spanish	+800-1532-4865 (Toll-Free)
			U.K., Germany, France and Spain only
Asia	Philippines	English	+44-1489-564-764 +63-2-438-0090

Please check the PIXELA website for latest information and downloading.  
<http://www.pixela.co.jp/oem/jvc/e/index.html>

# System Requirements

## Windows®

### ■ Digital Photo Navigator

The following requirements must be satisfied to connect a camera to a PC and to use Digital Photo Navigator.

<b>OS</b>	: Windows® 2000 Professional SP4 [2000] (pre-installed), Windows® XP Home Edition [XP] (pre-installed), or Windows® XP Professional [XP] (pre-installed)
<b>CPU</b>	: Intel® Pentium® III, at least 700 MHz
<b>RAM</b>	: At least 128 MB
<b>Free hard disk space</b>	: At least 10 MB for installation, at least 500 MB recommended
<b>Connector</b>	: USB 2.0 connector
<b>Display</b>	: Must be capable of displaying 800 x 600 dots with 16-bit color
<b>Miscellaneous</b>	: Internet Explorer 5.5 or later

### ■ CyberLink DVD Solution

The following requirements must be satisfied to use CyberLink DVD Solution.

<b>OS</b>	: Windows® 2000 Professional SP4 [2000] (pre-installed), Windows® XP Home Edition [XP] (pre-installed), or Windows® XP Professional [XP] (pre-installed)
<b>CPU</b>	: Intel® Pentium® III, at least 700 MHz (Intel® Pentium® 4, at least 2 GHz recommended)
<b>RAM</b>	: At least 128 MB (at least 256 MB recommended)
<b>Free hard disk space</b>	: At least 350 MB for installation For creating DVD Video, at least 10 GB recommended For creating VCD, at least 1 GB recommended
<b>Connector</b>	: USB 2.0 connector
<b>Display</b>	: Must be capable of displaying 1024 x 600 dots
<b>Miscellaneous</b>	: Internet Explorer 5.5 or later DirectX 9.0 or later DirectX is necessary so that CyberLink DVD Solution works properly and it is automatically installed during CyberLink DVD Solution installation.
<b>Supported media</b>	: DVD-Video: DVD-R/-RW, DVD+R/+RW DVD-VR: DVD-RW, DVD-RAM DVD+VR: DVD+RW VideoCD: CD-R/RW For the compatible DVD burners, refer to CyberLink web site: <a href="http://www.cyberlink.com/english/products/powerproducer/3/comp_dvd_drives.jsp">http://www.cyberlink.com/english/products/powerproducer/3/comp_dvd_drives.jsp</a>

## Macintosh

### ■ Capty MPEG Edit EX

The following requirements must be satisfied to use Capty MPEG Edit EX.

<b>Hardware</b>	:	iMac G4, iMac G5, iBook G4, Power Mac G5, PowerBook G4, eMac, Mac Mini	
<b>OS</b>	:	Mac OS X (v10.3.1 to v10.3.9, v10.4.2 to v10.4.3)	
<b>CPU</b>	:	At least PowerPC G4/800 MHz or more	
<b>RAM</b>	Mac OS X (v10.3.1 to v10.3.9)	:	At least 128 MB (at least 256 MB recommended)
	Mac OS X (v10.4.2 to v10.4.3)	:	At least 256 MB
<b>Free hard disk space</b>	:	At least 30 MB for installation	
<b>Connector</b>	:	Must be standard equipped with USB 2.0 connector	
<b>Display</b>	:	Must be capable of displaying 1024 x 768 dots with full color	
<b>Miscellaneous</b>	:	QuickTime 6.5 or later	

### ■ mono DVD

The following requirements must be satisfied to use mono DVD.


<b>Hardware</b>	:	iMac G4, iMac G5, iBook G4, Power Mac G5, PowerBook G4, eMac, Mac Mini	
<b>OS</b>	:	Mac OS X (v10.3.1 to v10.3.9, v10.4.2 to v10.4.3)	
<b>CPU</b>	:	At least PowerPC G4/800 MHz or more	
<b>RAM</b>	Mac OS X (v10.3.1 to v10.3.9)	:	At least 128 MB (at least 256 MB recommended)
	Mac OS X (v10.4.2 to v10.4.3)	:	At least 256 MB
<b>Free hard disk space</b>	:	At least 50 MB for installation	
<b>Connector</b>	:	Must be standard equipped with USB 2.0 connector	
<b>Display</b>	:	Must be capable of displaying 1024 x 768 dots with full color	
<b>Miscellaneous</b>	:	QuickTime 6.5 or later	
<b>Supported drives</b>	:	Standard Macintosh SuperDrives and following PIXELA drives: <ul style="list-style-type: none"><li>● PIX-SLRR/F1H (MATSHITA/DVD-RAM UJ-815A)</li><li>● PIX-DVRR/FW4 (MATSHITA/DVD-RAM SW-9572)</li><li>● PIX-DVRR/AT4M (MATSHITA/DVD-RAM SW-9572)</li><li>● PIX-DVPR/FW5 (PLEXTOR/DVDR PX-712A)</li><li>● PIX-DVRR/FW6 (MATSHITA/DVD-RAM SW-9573S)</li><li>● PIX-DVRR/AT6M (MATSHITA/DVD-RAM SW-9573S)</li><li>● PIX-DVRR/FW7 (MATSHITA/DVD-RAM SW-9574S)</li></ul> * PIXELA drives are available only in Japan.	

## NOTES:

- The system requirements information on the previous pages is not a guarantee that the provided software will work on all personal computers meeting those requirements.
- Windows<sup>®</sup> is either registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- Macintosh is a registered trademark of Apple Computer, Inc.
- Other product and company names included in this instruction manual are trademarks and/or registered trademarks of their respective holders.
- If your PC does not meet the system requirements above, you can use the optional USB reader/writer CU-VUSD70, the PC card adapter CU-VPD60 or the floppy disk adapter CU-VFSD50 to load the files in the memory card to the hard disk on your PC.  
(Refer to "JVC Accessories" on our world web site at:  
<http://www.jvc-victor.co.jp/english/accessory/>)

## Folder Structure and Extensions

### Folder structure within the recording medium

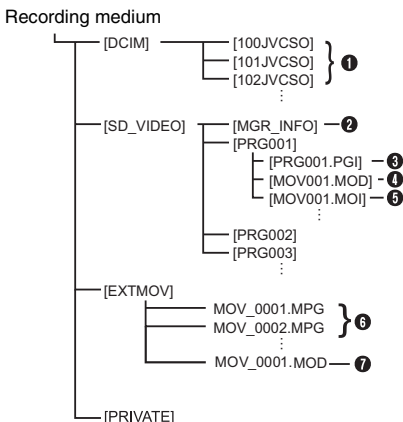

**[DCIM]:** Contains the [xxxJVCSO] (where xxx is a number) folders with still images

**[SD\_VIDEO]:** Contains the [PRGxxx] (where xxx is a number) folders with video files

**[EXTMOV]:** Contains video (MPEG2) files produced on a PC or video files that failed to be produced by an accident such as when dropped.

**[MISC]:** Contains folders with DPOF setting data

**[PRIVATE]:** Contains management information files of event information and/or DVD creation for the files taken with the camera

① Still image file folder

② Management information\* for the media as a whole

③ Management information\*

④ Video file

⑤ Management information\* for the video file

⑥ Video file produced on a PC

⑦ Video file that failed to be produced by an accident such as when dropped.

\* Management information: Information such as the date and time of recording, recorded with the video file.

## Extensions

Video files : “.mod”

Still image files : “.jpg”

Video files produced on a PC : “.mpg”

PC

## Preparation

### Software Installation

Follow the procedure described below to install the software. From the [SETUP] screen in step **2**, you can install the following drivers or software. Before installing, quit any other software you are using. (Check that there are no other application icons on the status bar.)

#### Digital Photo Navigator 1.5

This application is used to organize still images and convert them into a variety of formats.

#### CyberLink DVD Solution

##### PowerProducer 3 NE

PowerProducer 3 NE is software for creating movie discs incorporating not only video but also slideshows. This software uses a simple wizard format for creating a wide range of different format discs. You can also edit imported video. You can import video from the camera, edit it, and then create a slideshow from still images. You can create a customized menu for the video or slideshow and write the contents to DVD or other media.

##### PowerDirector Express NE

PowerDirector Express NE is software for easily editing MPEG, AVI, and other video files, still images, and other contents for creating a movie. This software has an interface that allows editing in either timeline or storyboard mode, maintains superior image quality, uses SVRT for high-speed rendering, and has a host of other advanced video editing features.

##### PowerDVD 5 NE

PowerDVD 5 NE is software for playing back DVD-Video and video files.

**1** Load the provided CD-ROM into the PC. After a moment, the [SETUP] screen appears.

- From the [SETUP] screen, you can install the desired software.
- If the [SETUP] screen does not appear, double-click the CD-ROM icon in the [My Computer] window.

**2** Click [Install] on the right side of the desired software and follow the on screen instructions to complete the installation.

The installation of the selected software starts. The procedure differs depending on the software.



Following steps are the example of CyberLink DVD Solution.

**3** Click [Install] on the right side of [CyberLink DVD Solution] on the [SETUP] screen.

[Choose Setup Language] screen appears.


**4** Select the desired language and click [OK].



The [CyberLink DVD Solution Setup] screen in step **5** appears.


- If [Information] screen for Windows Messenger appears, refer to page 13.

## 5 Click [Next].

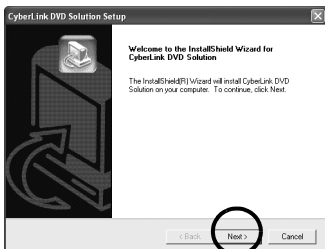

[License Agreement] screen appears.


## 6 Click [Yes].

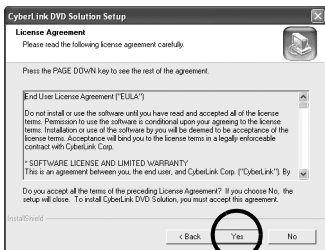

[Customer Information] screen appears.


## 7 Confirm your information and click [Next].

- It is possible to change the information.

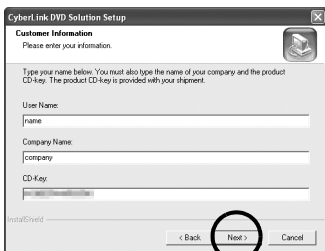


[Choose Destination Location] screen appears.

## 8 Click [Next].

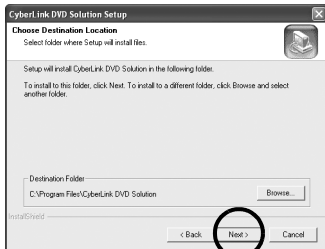

[Setup Type] screen appears.

## 9 Select the program(s) you want to install, then click [Next].

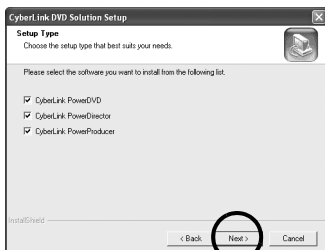

[Setup Status] screen appears. Wait for a moment until the installation is finished and [Setup Complete] screen appears.

## 10 Click [Finish] then restart the PC.

 
Install all of the desired software in the same way.

To display [SETUP] screen, double-click the CD-ROM icon in the [My Computer] window.



## NOTES:

- If PowerDirector/PowerProducer/PowerDVD have already been installed on the PC, uninstall them before installing the provided software. Video files captured with this camera can only be handled on the provided software. Please install and use the provided software (PowerDirector Express NE, PowerProducer 3 NE, PowerDVD 5 NE).
- If you perform installation of a software that is already installed, uninstallation will start. In this case, perform the installation again after uninstallation is finished.
- Windows Messenger has to be closed during CyberLink DVD Solution installation. If it is running during installation, [Information] screen appears.




### To close Windows Messenger:

- 1) While holding [Ctrl + Alt] key, press [Delete] key so that [Task Manager] appears.
- 2) Click [Processes] tab and select [messenger.exe].
- 3) Click [End process].
- 4) Select [Yes].

## Connections

### Connecting the Camera to the PC

Connect the camera to the PC to copy still images and video files in a recording medium.

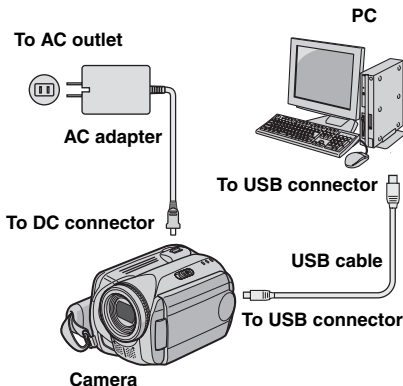

**1** To assure safety, make sure all units are turned off before making any connections.

**2** Connect the AC adapter to the camera, then plug the AC adapter into an AC outlet.

- If necessary, plug the AC adapter into an AC outlet with the provided power cord.

**3** Turn on the camera.

**4** Connect the camera to the PC with the USB cable.

### NOTES:

- It is recommended to use the AC Adapter as the power supply instead of the battery pack.
- When the USB cable is connected, turning on or off the camera causes malfunctions of the PC.
- Connect the camera directly to the PC, not through the hub.
- Do not use an extension USB cable.

## Disconnecting the USB cable

Before loading or unloading recording mediums or turning off the PC, first disconnect the USB cable and turn off the camera.

### 1 Confirm that the ACCESS lamp on the camera does not light or blink.

- If the ACCESS lamp lights or blinks, wait until it is turned off before proceeding.

### 2 Double-click the [Safely Remove Hardware] or [Unplug or Eject Hardware] icon in the status bar.



The [Safely Remove Hardware] or [Unplug or Eject Hardware] dialog box appears.


**Windows® XP:** If not, wait a while then go to step 5.

### 3 Select [USB Mass Storage Device] or [USB Disk], and then click [Stop].



### 4 Click [OK].

**Windows® 2000:** If a message indicating that the device can be safely removed appears, click [OK] and then click [Close].

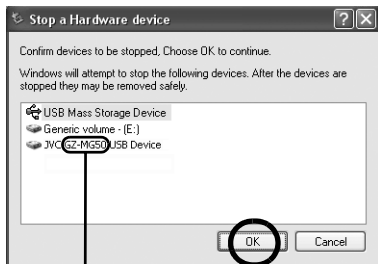

- \* The model name depends on the connected camera.

### 5 Disconnect the USB cable.

### 6 Set the camera's power switch to off.

The camera turns off.

## Viewing the Contents of a Recording Medium

**1** If you want to view the contents in the SD Memory Card, make sure that the card is set in the camera.

**2** Set the camera's power switch to the playback mode while pressing down the lock button located on the switch.

The camera turns on.

**3** Connect the camera to the PC with a USB cable. (➡ pg. 13)

On the camera's LCD monitor [USB MASS STORAGE] appears.

**4** When using Windows® XP:

The [EVERIO\_HDD]/[EVERIO\_SD] window appears on the PC's screen after a moment.

Select [Open folders to view files using Windows Explorer] and click [OK].

### NOTE:

If the [EVERIO\_HDD]/[EVERIO\_SD] window does not appear, confirm the connection (➡ pg. 13) or perform the following steps ① and ②.

**When using Windows® 2000:**

① Double-click the [My Computer] icon on the desktop.

The [EVERIO\_HDD]/[EVERIO\_SD] icon which represents the


recording medium in the camera appears in the [My Computer] window.

② Double-click the [EVERIO\_HDD]/[EVERIO\_SD] icon.



**5** The folders in the recording medium appear.

Different file types are stored in different folders.

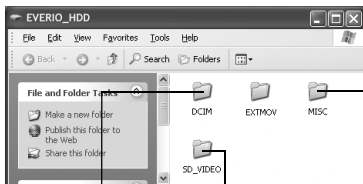

Video files

Still images

DPOF setting data

### NOTES:

- Any folders or files other than those described above are also recorded in the recording medium.
- Saving the wrong kinds of files in a recording medium or deleting files or folders from a recording medium can cause problems with the operation of the camera. When it is necessary to delete a file from a recording medium, delete it through the camera. Also, do not move or rename folders and files within the medium on PC.
- Never disconnect the USB cable while the ACCESS lamp on the camera lights or blinks.
- If you are using a brand new SD card, you need to format it with the camera first. You may not be able to copy files from the SD card to the PC without doing so.
- If the video file is not recorded or saved properly, the file is moved to [EXTMOV] folder with extension ".mod".
- The file extension may not appear depending on the [FOLDER] option setting of Windows®.

## Copying Files to the PC

Still images and video files that are stored in a recording medium can be copied to the PC and played back on the PC.


**1** Perform the procedure in “Viewing the Contents of a Recording Medium” (pg. 15). The folders in the recording medium appear.

**2** Create a new folder, enter the folder name, and then double-click it.

For example, create a new folder in the [My Pictures] folder.



**3** Select the folder to be copied, and then drag and drop that folder in the destination folder.

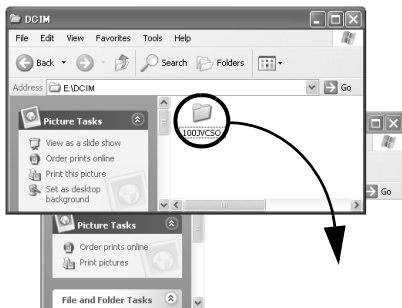

**To copy still images:** Copy the folder within the [DCIM] folder.

**To copy video files:** Copy the folder within the [SD\_VIDEO] folder.

- The ACCESS lamp on the camera lights or blinks, and the folder is copied from the recording medium to the PC.

### NOTES:

- Never disconnect the USB cable while the ACCESS lamp on the camera lights or blinks.
- File transfer takes considerable time in PCs. Usage of a PC that supports USB 2.0 is required.

## Playing Back Files on the PC

### Still images

Use an application that can handle the JPEG file format.

To view a still image, double-click the still image file (extension “.jpg”).

### Video files

Use the PowerDVD 5 NE.

You can install this software from the provided CD-ROM. For more details of PowerDVD 5 NE, refer to “Playing Back Copied Video”. (pg. 17)

### NOTE:

When playing back a file in the recording medium on your PC, copy the file to your PC, and then play it back. If video file is played back directly from recording medium (i.e. the camera is connected through USB to your PC), it may be not played back properly due to the inadequate processing speeds or other problems.

### Creating play lists using multiple files and viewing video

1 Start PowerDVD 5 NE and click the bottom right of the operation panel to create a playlist using multiple files.




2 Click [File Mode].

The video files can be selected in folder units.

### Viewing the video for a single file

Drag and drop a MOD file over the PowerDVD 5 NE screen, or the operation panel.

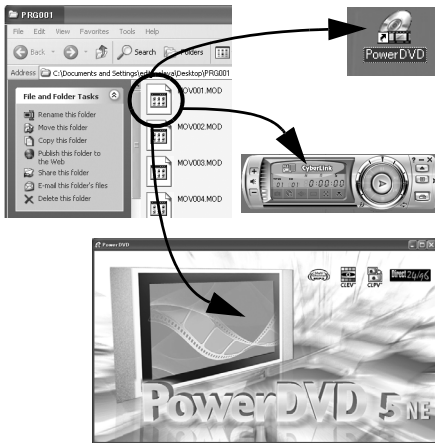


This manual only refers to software installation, PC connection and simple operations. For more details of each software, refer to its User's Guide/Help/Readme.

### CyberLink DVD Solution

Following steps are the example of CyberLink PowerDirector Express NE.

1 Click [Start], go to [All Programs] or [Programs]- [CyberLink PowerDirector Express], and then click User's Guide/Help/Readme depending on your preference.

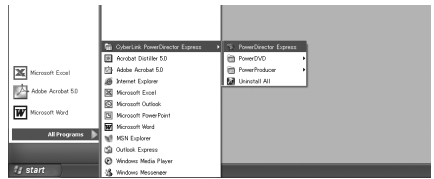

### INFORMATION

The programs in CyberLink DVD Solution are versions with limited functionality. The User's Guide and Help files are written for the commercial version available in stores. For information about the differences with the commercial version, see the Readme file or the following web site: <http://www2.cli.co.jp/products/ne/> for the respective program.

### Digital Photo Navigator

The User's Guide is included on the CD-ROM in PDF format. Right-click the CD-ROM icon in [My Computer], then click [Open]. Double-click the [Docs] folder. Open the "Start.pdf" file and click the button of the desired language. Note that Adobe® Acrobat® Reader™ or Adobe® Reader® must be installed to read PDF files. Adobe® Reader® can be loaded from Adobe's web site: <http://www.adobe.com/>


Following steps are the example of Capty MPEG Edit EX.

**4** Click [Continue] when you asked to continue installing the software.




Introduction screen appears.

**5** Click [Continue] on the Introduction screen.

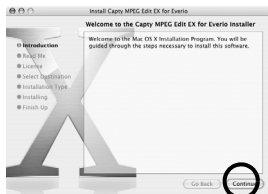

ReadMe screen appears.

**6** Read the Important Information carefully and click [Continue].

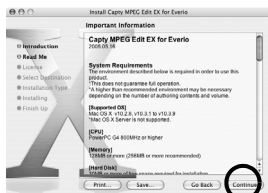

License screen appears.

## Preparation

### Software Installation

Follow the procedure described below to install the software.

Before starts installing, quit any other software you are using.

#### Capty MPEG Edit EX

This application is used to edit video files (MPEG-2 format) and write them into QuickTime and a variety of formats.

#### mono DVD

This application is used to create a DVD disc with video files (MPEG-2 format) recorded with a camera.

**1** Load the provided CD-ROM into the PC. Double click the CD-ROM icon.

**2** To install Capty MPEG Edit EX, double-click the [Capty MPEG Edit EX for Everio] folder in the CD-ROM.

To install mono DVD, double-click the [mono DVD] folder in the CD-ROM.

**3** Double-click the [Capty MPEG Edit EX.pkg] icon.



Double-click the [mono DVD.mpkg] icon.



**7** Read the Software License Agreement carefully and click [Continue].



**8** Click [Agree] if you agree with the license agreement.


To continue installing the software, you must agree to the terms of the software license agreement.

Click Agree to continue or click Disagree to cancel the installation.

Disagree Agree


Select a Destination screen appears.

**9** Select the destination volume and click [Continue].

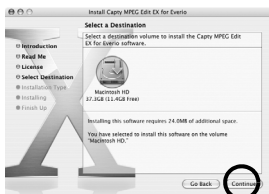

Installation Type screen appears.

**10** Click [Upgrade] if you perform a basic installation of the software.

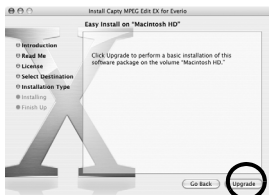


• [Install] may be shown instead of [Upgrade].  
Authenticate screen appears.

**11** Enter the Macintosh Administrator name and password in [Name] and [Password] respectively, and click [OK].



• When installing Captivity MPEG Edit EX, this screen will not be appeared if you are the owner.  
Finish Up screen appears.

**12** Click [Close] after you will confirm the message that tells you the installation has been completed.

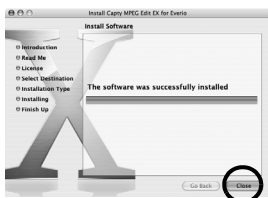


**13** Click [Close] when the installation is finished and eject the CD-ROM.

## Connections

### Connecting the Camera to the PC

Connect the camera to the PC to copy still images and video files in a recording medium.

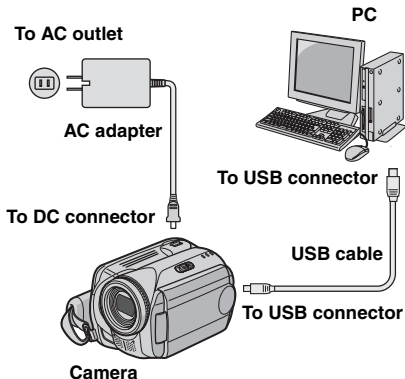

**1** To assure safety, make sure all units are turned off before making any connections.

**2** Connect the AC adapter to the camera, then plug the AC adapter into an AC outlet.

- If necessary, plug the AC adapter into an AC outlet with the provided power cord.

**3** Turn on the camera.

**4** Connect the camera to the PC with the USB cable.

#### NOTES:

- It is recommended to use the AC Adapter as the power supply instead of the battery pack.
- When the USB cable is connected, turning on or off the camera causes malfunctions of the PC.
- Connect the camera directly to the PC, not through the hub.
- Do not use an extension USB cable.

### Disconnecting the USB cable

Before loading or unloading recording medium or turning off the PC, first disconnect the USB cable and turn off the camera.

**1** Drop the recording medium icon on the desktop into the [Trash] icon.

- If the confirmation message appears, click [OK].

**2** Confirm that the ACCESS lamp on the camera does not light or blink.

- If the ACCESS lamp lights or blinks, wait until it is turned off before proceeding.

**3** Disconnect the USB cable.

**4** Set the camera's power switch to off. The camera turns off.





## Viewing the Contents of a Recording Medium

**1** If you want to view the contents in the SD Memory Card, make sure that the card is set in the camera.

**2** Set the camera's power switch to the playback mode while pressing down the lock button located on the switch. The camera turns on.

**3** Connect the camera to the PC with a USB cable. (☞ pg. 20)


On the camera's LCD monitor [USB MASS STORAGE] appears. The recording medium icon appears on the desktop.



The name of the recording medium icon is [EVERIO\_HDD] or [EVERIO\_SD]. We recommend that you name the icon to tell it from the other removable disks or folders.

**4** Double-click the recording medium icon on the desktop.

The folders in the recording medium appear. Different file types are stored in different folders.

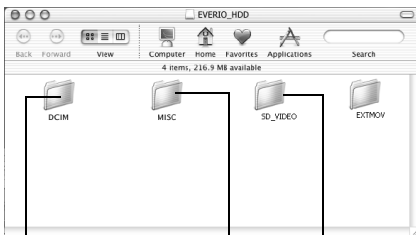

Still images

DPOF Setting data

Video files

### NOTES:

- Any folders or files other than those described above are also recorded in the recording medium.
- Saving the wrong kinds of files in a recording medium or deleting files or folders from a recording medium can cause problems with the operation of the camera. When it is necessary to delete a file from a recording medium, delete it through the camera. Also, do not move or rename folders and files within the medium on PC.
- Never disconnect the USB cable while the ACCESS lamp on the camera lights or blinks.
- If you are using a brand new SD card, you need to format it with the camera first. You may not be able to copy files from the SD cards to the PC without doing so.
- If the video file is not recorded or saved properly, the file is moved to [EXTMOV] folder with extension ".mod".

## Copying Files to the PC

Still images and video files that are stored in recording medium can be copied to the PC and played back on the PC.


**1** Double-click the recording medium icon on the desktop.

The folders in the recording medium appear.



**2** Create a new folder, enter the folder name, and then double-click it.

**3** Select the folder to be copied, and then drag and drop that folder in the destination folder.

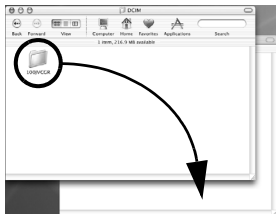

**To copy still images:** Copy the folder within the [DCIM] folder.

**To copy video files:** Copy the folder within the [SD\_VIDEO] and [EXTMOV] folders.

- The ACCESS lamp on the camera lights or blinks, and the folder is copied from the recording medium to the PC.

### NOTE:

Never disconnect the USB cable while the ACCESS lamp on the camera lights or blinks.

## Help/Readme

This manual only refers to software installation, PC connection and simple operations. For more details of the software, refer to its Help/ReadMe.

Following steps are the example of Capty MPEG Edit EX.

**1** Open the [Capty MPEG Edit EX for Everio] folder in the [Applications] folder.

**2** Double-click the [Capty MPEG Edit EX for Everio] icon.

- \* You can drag and drop the selected video files into the icon.



### Help

Select [Capty MPEG Edit EX Help] in the help menu. The usage is described.

### ReadMe

The file is in the [ReadMe] folder. Support information and the limit are mentioned.



### INFORMATION

For the exclusive URL for Everio, refer to PIXELA web site: <http://www.pixela.co.jp/oem/jvc/e/index.html>



# JVC