


Machine Models Compatible for Connection with this Product	Appareils compatibles pouvant être connectés à ce produit
DLA-HD10K Series	Séries DLA-HD10K
<p>This product (LD-HD1KU/LD-HD1KE) is exclusively for the above-mentioned model. The performance cannot be guaranteed when using with other models.</p> <p>This processor is used as a dedicated machine and this manual (instruction manual) may contain description of features as well as specifications not used by the processor.</p>	<p>Ce produit (LD-HD1KU/LD-HD1KE) est compatible uniquement avec le modèle indiqué ci-dessus. Il est impossible de garantir la performance avec d'autres modèles.</p> <p>Ce processeur doit être utilisé tel un appareil spécialisé; il est possible que certaines des fonctions et spécifications décrites dans le présent manuel de directives ne puissent pas être utilisées avec ce processeur.</p>

AV HUB PROCESSOR PROCESSEUR AV CENTRAL

LD-HD1KU LD-HD1KE

INSTRUCTIONS MANUEL D'INSTRUCTIONS

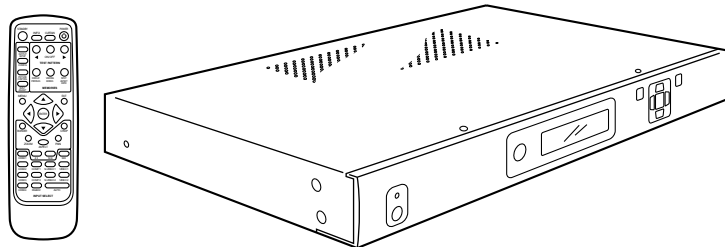

D-ILA®

<p>For Customer use :</p> <p>Enter below the serial No. which is located on the side panel of the cabinet. Retain this information for future reference.</p> <p>Model No. LD-HD1KU</p> <hr/> <p>Serial No. _____</p>	<p>Pour utilisation par le client :</p> <p>Entrer ci-dessous le N° de série qui est situé sur le panneau latéral du coffret. Garder cette information comme référence pour le futur.</p> <p>N° de modèle LD-HD1KU</p> <hr/> <p>N° de série _____</p>
--	--

SAFETY PRECAUTIONS

IMPORTANT INFORMATION

WARNING: TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

To reduce the risk of electric shock, do not remove cover. Refer servicing to qualified service personnel.

This product is equipped with a 3-blade grounding type plug to satisfy UL, CUL, TUV, FCC rules.

If you are unable to insert the plug into the outlet, contact your electrician.

FCC INFORMATION (U.S.A. ONLY)

CAUTION:

Changes or modifications not approved by JVC could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encourage to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

About the installation place

Do not install the processor in a place that cannot support its weight securely, or that does not allow for proper heat ventilation.

IMPORTANT SAFEGUARDS

IMPROPER USE OF THIS EQUIPMENT CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD.

In order not to defeat the safeguards incorporated into this product, observe the following basic rules for its installation, use and service.

- All the safety and operating instructions should be read before the product is operated.
- The safety and operating instructions should be followed and retained for future reference.
- All warnings on the product and in the operating instructions should be adhered to.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use attachments not recommended by the product manufacturer as they may be hazardous.
- Do not use this product near water. Do not use immediately after moving from a low temperature to high temperature, as this causes condensation, which may result in fire, electric shock, or other hazards.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. The product should be mounted according to the manufacturer's instructions, and should use a mount recommended by the manufacturer.
- When the product is used on a cart, care should be taken to avoid quick stops, excessive force, and uneven surfaces which may cause the product and cart to overturn, damaging equipment or causing possible injury to the operator.
- Slots and openings in the cabinet are provided for ventilation. These ensure reliable operation of the product and protect it from overheating. These openings must not be blocked or covered. (The openings should never be blocked by placing the product on bed, sofa, rug, or similar surface. It should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.)
- This product should be operated only with the type of power source indicated on the label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
- This product is equipped with a three-wire plug. This plug will fit only into a grounded power outlet. If you are unable to insert the plug into the outlet, contact your electrician to install the proper outlet. Do not defeat the safety purpose of the grounded plug.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at doors, plugs, receptacles, and the point where they exit from the product.
- For added protection of this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system. This will prevent damage to the product due to lightning and power line surges.

 
- Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.
- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltages and other hazards. Refer all service to qualified service personnel.
- Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions:
 - a) When the power supply cord or plug is damaged.
 - b) If liquid has been spilled, or objects have fallen on the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the Operation Manual, as an improper adjustment of controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - e) If the product has been dropped or damaged in any way.
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
- When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or with same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- The product should be placed more than one foot away from heat sources such as radiators, heat registers, stoves, and other products (including amplifiers) that produce heat.
- When connecting other products such as VCR's, and personal computers, you should turn off the power of this product for protection against electric shock.
- Use only the accessory cord designed for this product to prevent shock.

The power supply voltage rating of this product is AC 120 V, AC 100 V - AC 240 V, the power cord attached conforms to the following power supply voltage. Use only the power cord designated by our dealer to ensure Safety and EMC. When it is used by other power supply voltage, power cable must be changed.


Ensure that the power cable used for the projector is the correct type for the AC outlet in your country.

Consult your product dealer.

Power cord




For United Kingdom

 

For European continent countries

 Power cord



Power supply voltage: AC 120 V

***DO NOT allow any unqualified person to install the unit.**

Be sure to ask your dealer to install the unit since special technical knowledge and skills are required for installation and connection to multiple devices.

If installation is performed by an unqualified person, it may cause personal injury or electrical shock.

Precautions for using the screen terminal

Connect the cable to the screen before using the screen terminal of this unit.

Signal with DC+12 V/100 mA max. is output from the screen terminal of this unit.

Short-circuit will result in malfunction, fire and electric shock.

Leave the connection of the wires to the installation contractor.

ENGLISH

Information for Users on Disposal of Old Equipment

Attention:
This symbol is only valid in the European Union.



[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling of electrical and electronic equipment for proper treatment, recovery and recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health which could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

(Business users)

If you wish to dispose of this product, please visit our web page www.jvc-europe.com to obtain information about the take-back of the product.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

FRANÇAIS

Informations relatives à l'élimination des appareils usagés, à l'intention des utilisateurs

Attention:
Ce symbole n'est reconnu que dans l'Union européenne.



[Union européenne]

Lorsque ce symbole figure sur un appareil électrique et électronique, cela signifie qu'il ne doit pas être éliminé en tant que déchet ménager à la fin de son cycle de vie. Le produit doit être porté au point de pré-collecte approprié au recyclage des appareils électriques et électroniques pour y subir un traitement, une récupération et un recyclage, conformément à la législation nationale.

En éliminant correctement ce produit, vous contribuez à la conservation des ressources naturelles et à la prévention des éventuels effets négatifs sur l'environnement et la santé humaine, pouvant être dus à la manipulation inappropriée des déchets de ce produit. Pour plus d'informations sur le point de pré-collecte et le recyclage de ce produit, contactez votre mairie, le service d'évacuation des ordures ménagères ou le magasin dans lequel vous avez acheté le produit.

Des amendes peuvent être infligées en cas d'élimination incorrecte de ce produit, conformément à la législation nationale.

(Utilisateurs professionnels)

Si vous souhaitez éliminer ce produit, visitez notre page Web www.jvc-europe.com afin d'obtenir des informations sur sa récupération.

[Pays ne faisant pas partie de l'Union européenne]

Si vous souhaitez éliminer ce produit, faites-le conformément à la législation nationale ou autres règles en vigueur dans votre pays pour le traitement des appareils électriques et électroniques usagés.

DEUTSCH

Benutzerinformationen zur Entsorgung alter Geräte

Hinweis:
Dieses Symbol ist nur in der Europäischen Union gültig.



[Europäische Union]

Dieses Symbol zeigt an, dass das elektrische bzw. elektronische Gerät nicht als normaler Haushaltsabfall entsorgt werden soll. Stattdessen sollte das Produkt zur fachgerechten Entsorgung, Weiterverwendung und Wiederverwertung in Übereinstimmung mit der Landesgesetzgebung einer entsprechenden Sammelstelle für das Recycling elektrischer und elektronischer Geräte zugeführt werden. Die korrekte Entsorgung dieses Produkts dient dem Umweltschutz und verhindert mögliche Schäden für die Umwelt und die menschliche Gesundheit, welche durch unsachgemäße Behandlung des Produkts auftreten können. Weitere Informationen zu Sammelstellen und dem Recycling dieses Produkts erhalten Sie bei Ihrer Gemeindeverwaltung, Ihrem örtlichen Entsorgungsunternehmen oder in dem Geschäft, in dem Sie das Produkt gekauft haben. Für die nicht fachgerechte Entsorgung dieses Abfalls können gemäß der Landesgesetzgebung Strafen ausgesprochen werden.

(Geschäftskunden)

Wenn Sie dieses Produkt entsorgen möchten, besuchen Sie bitte unsere Webseite www.jvc-europe.com, um Informationen zur Rücknahme des Produkts zu erhalten.

[Andere Länder außerhalb der Europäischen Union]

Wenn Sie dieses Produkt entsorgen möchten, halten Sie sich dabei bitte an die entsprechenden Landesgesetze und andere Regelungen in Ihrem Land zur Behandlung elektrischer und elektronischer Geräte.

NEDERLANDS

Informatie voor gebruikers over het weggooien van oude apparatuur

Let op:
Dit symbool is alleen geldig in de Europese Unie.



[Europese Unie]

Deze markering geeft aan dat de elektrische en elektronische apparatuur bij het einde van de gebruiksduur niet bij het huishoudelijk afval mag worden gegooid. Het product moet in plaats daarvan worden ingeleverd bij het relevante inzamelingspunt voor hergebruik van elektrische en elektronische apparatuur, voor juiste verwerking, terugwinning en hergebruik in overeenstemming met uw nationale wetgeving.

Door dit product naar het inzamelingspunt te brengen, werkt u mee aan het behoud van natuurlijke hulpbronnen en met het voorkomen van potentiële negatieve effecten op het milieu en de volksgezondheid, die anders veroorzaakt zouden kunnen worden door onjuiste afvalverwerking van dit product. Neem voor meer informatie over inzamelingspunten en hergebruik van dit product contact op met de gemeente in uw woonplaats, het afvalverwerkingsbedrijf of de winkel waar u het product hebt aangeschaft. Er kunnen boetes gelden voor een onjuiste verwijdering van dit afval, in overeenstemming met de nationale wetgeving.

(Zakelijke gebruikers)

Bezoek als u dit product wilt weggooien onze website www.jvc-europe.com voor informatie over het terugnemen van het product.

[Landen buiten de Europese Unie]

Wanneer u dit product wilt verwijderen, houdt u dan aan de geldende nationale wetgeving of andere regels in uw land voor de verwerking van oude elektrische en elektronische apparatuur.

ESPAÑOL

Información para los usuarios sobre la eliminación de equipos usados**Atención:**

Este símbolo sólo es válido en la Unión Europea.

**[Unión Europea]**

Este símbolo indica que los aparatos eléctricos y electrónicos no deben desecharse junto con la basura doméstica al final de su vida útil. El producto deberá llevarse al punto de recogida correspondiente para el reciclaje y el tratamiento adecuado de equipos eléctricos y electrónicos de conformidad con la legislación nacional. Si desecha el producto correctamente, estará contribuyendo a conservar los recursos naturales y a prevenir los posibles efectos negativos en el medio ambiente y en la salud de las personas que podría causar el tratamiento inadecuado del producto desechado. Para obtener más información sobre el punto de recogida y el reciclaje de este producto, póngase en contacto con su oficina municipal, su servicio de recogida de basura doméstica o la tienda en la que haya adquirido el producto. De acuerdo con la legislación nacional, podrían aplicarse multas por la eliminación incorrecta de estos desechos.

(Empresas)

Si desea desechar este producto, visite nuestra página Web www.jvc-europe.com para obtener información acerca de la retirada del producto.

[Otros países no pertenecientes a la Unión Europea]

Si desea desechar este producto, hágalo de conformidad con la legislación nacional vigente u otras normativas de su país para el tratamiento de equipos eléctricos y electrónicos usados.

PORTUGUÊS

Informações para os Utilizadores sobre a Eliminação de Equipamento Antigo**Atenção:**

Este símbolo apenas é válido na União Europeia.

**[União Europeia]**

Este símbolo indica que o equipamento eléctrico e electrónico não deve ser eliminado como um resíduo doméstico geral, no fim da respectiva vida útil. Pelo contrário, o produto deve ser entregue num ponto de recolha apropriado, para efectuar a reciclagem de equipamento eléctrico e electrónico e aplicar o tratamento, recuperação e reciclagem adequados, de acordo com a respectiva legislação nacional.

Ao eliminar este produto da forma correcta, ajudará a conservar recursos naturais e ajudará a evitar potenciais efeitos negativos no ambiente e saúde humana, que poderiam ser causados pelo tratamento residual inadequado deste produto. Para mais informações sobre o ponto de recolha e reciclagem deste produto, contacte a respectiva entidade local, o serviço de eliminação de resíduos ou a loja onde adquiriu o produto.

Caso estes resíduos não sejam correctamente eliminados, poderão ser aplicadas penalizações, em conformidade com a respectiva legislação nacional.

(utilizadores profissionais)

Se pretender eliminar este produto, visite a nossa página da web em www.jvc-europe.com para obter informações sobre a devolução do produto.

[Outros países fora da União Europeia]

Se pretender eliminar este produto, faça-o de acordo com a legislação nacional aplicável ou outras regras no seu país para o tratamento de equipamento eléctrico e electrónico velho.

ITALIANO

Informazioni per gli utenti sullo smaltimento delle apparecchiature obsolete**Attenzione:**

Questo simbolo è valido solo nell'Unione Europea.

**[Unione Europea]**

Questo simbolo indica che l'apparecchiatura elettrica ed elettronica a cui è relativo non deve essere smaltita tra i rifiuti domestici generici alla fine della sua vita utile. Il prodotto, invece, va consegnato a un punto di raccolta appropriato per il riciclaggio di apparecchiature elettriche ed elettroniche, per il trattamento, il recupero e il riciclaggio corretti, in conformità alle proprie normative nazionali.

Mediante lo smaltimento corretto di questo prodotto, si contribuirà a preservare le risorse naturali e a prevenire potenziali effetti negativi sull'ambiente e sulla salute umana che potrebbero essere provocati, altrimenti, da uno smaltimento inappropriato del prodotto. Per ulteriori informazioni sul punto di raccolta e il riciclaggio di questo prodotto, contattare la sede comunale locale, il servizio di smaltimento rifiuti domestici o il negozio in cui si è acquistato il prodotto.

L'utente è responsabile del conferimento dell'apparecchio a fine vita alle appropriate strutture di raccolta, pena le sanzioni previste dalla vigente legislazione sui rifiuti.

(Per gli utenti aziendali)

Qualora si desideri smaltire questo prodotto, visitare la nostra pagina web www.jvc-europe.com per ottenere informazioni sul ritiro del prodotto.

[Per altre nazioni al di fuori dell'Unione Europea]

Qualora si desideri smaltire questo prodotto, effettuare lo smaltimento in conformità alla normativa nazionale applicabile o alle altre leggi della propria nazione relative al trattamento delle apparecchiature elettriche ed elettroniche obsolete.

ΕΛΛΗΝΙΚΑ

Πληροφορίες σχετικά με την απόρριψη εξοπλισμού**Προσοχή:**

Αυτή η σήμανση ισχύει μόνο για την Ευρωπαϊκή Ένωση.

**[Ευρωπαϊκή Ένωση]**

Αυτή η σήμανση υποδηλώνει ότι ο ηλεκτρικός και ηλεκτρονικός εξοπλισμός δεν πρέπει να απορριφθεί ως κοινό οικιακό απόρριμμα. Αντ' αυτού, το προϊόν πρέπει να παραδοθεί στο ανάλογο σημείο περισυλλογής για την ανακύκλωση των ηλεκτρικών και ηλεκτρονικών μερών και την κατάλληλη επεξεργασία, σύμφωνα με τη νομοθεσία της χώρας σας.

Η σωστή απόρριψη αυτού του προϊόντος βοηθάει στη διαφύλαξη των φυσικών πόρων και στην αποφυγή αρνητικών επιπτώσεων στο περιβάλλον και στην ανθρώπινη υγεία, κάτι που ενδέχεται να προκληθεί από την ακατάλληλη διαχείριση αυτού του προϊόντος ως απόρριμμα. Για περισσότερες πληροφορίες σχετικά με τα σημεία περισυλλογής και ανακύκλωσης αυτού του προϊόντος, επικοινωνήστε με τα γραφεία της τοπικής αυτοδιοίκησης, την υπηρεσία περισυλλογής απορριμμάτων ή το κατάστημα από το οποίο αγοράσατε το προϊόν.

Ανάλογα με τη νομοθεσία της χώρας σας, ενδέχεται να επιβληθούν κυρώσεις σε περίπτωση λανθασμένης απόρριψης αυτού του προϊόντος.

(Επιχειρήσεις)

Αν επιθυμείτε να απορρίψετε αυτό το προϊόν, επισκεφτείτε το διαδικτυακό μας τόπο www.jvc-europe.com για περισσότερες πληροφορίες σχετικά με την επιστροφή του προϊόντος.

[Άλλες χώρες εκτός Ευρωπαϊκής Ένωσης]

Αν επιθυμείτε να απορρίψετε αυτό το προϊόν, πρέπει να τηρήσετε την ισχύουσα εθνική νομοθεσία ή όποιους άλλους κανονισμούς για τη χώρα σας για την απόρριψη ηλεκτρικού και ηλεκτρονικού εξοπλισμού.

DANSK

Brugerinformation om bortskaffelse af gammelt udstyr

Bemærk:
Dette symbol er kun gyldigt i EU.



[EU]

Elektriske produkter og elektroniske apparater med dette symbol må ikke afhændes på samme måde som almindeligt husholdningsaffald, når det skal smides ud. I stedet skal produktet indleveres på det relevante indsamlingssted for elektriske apparater og elektronisk udstyr, hvor det vil blive håndteret korrekt og efterfølgende genanvendt og recirkuleret i henhold til de love, der gælder i dit land.

Ved at bortskaffe dette produkt korrekt, medvirker du til at bevare naturens ressourcer samt forhindre eventuelle negative påvirkninger af miljøet og folkesundheden, der ellers kunne forårsages ved forkert affaldshåndtering af dette produkt. Mere information om indsamlingssteder og genanvendelse af dette produkt kan du få ved at kontakte din lokale kommune, dit renovationselskab eller den forretning, hvor du har købt produktet.

Ukorrekt bortskaffelse af dette affald kan være strafbar ifølge lovgivningen i nogle lande.

(Professionelle brugere)

Hvis du ønsker at bortskaffe dette produkt, kan du på vores web-side www.jvc-europe.com få information om tilbagetagning af produktet.

[Landet uden for EU]

Hvis du ønsker at bortskaffe dette produkt, bedes du gøre det i overensstemmelse med gældende lovgivning eller andre regler i dit land for behandling af gammelt elektrisk og elektronisk udstyr.

SUOMI

Tietoja käyttäjille vanhojen laitteiden hävittämisestä

Huomio:
Tämä symboli on voimassa vain Euroopan unionissa.



[Euroopan unioni]

Tämä symboli tarkoittaa, että sähkö- ja elektroniikkalaitteita ei tule laittaa talousjätteisiin, kun ne poistetaan käytöstä. Sen sijaan tuotteet tulee toimittaa asianmukaiseen sähkö- ja elektroniikkalaitteiden kierrätyspisteeseen, jossa ne käsitellään uusiokäyttöä ja kierrätystä varten paikallisen lainsäädännön mukaan.

Kun hävität tuotteen asianmukaisella tavalla, autat säästämään luonnonvaroja ja estämään mahdollisia ympäristö- ja terveyshaittoja, joita voisi aiheutua tämän tuotteen vääränlaisesta hävittämisestä. Lisätietoja keräyspisteistä ja tämän tuotteen kierrätyksestä saat paikkakuntasi viranomaisilta, kotitalousjätteiden keräyksestä huolehtivasta yrityksestä tai liikkeestä, josta ostit tuotteen.

Tuotteen vääränlaisesta hävittämisestä voi seurata paikallisen lainsäädännön mukaisia rangaistuksia.

(Yrityskäyttäjät)

Jos haluat hävittää tämän tuotteen, web-sivustoltamme osoitteessa www.jvc-europe.com löydät tietoja käytetyn tuotteen palautuksesta.

[Muut maat Euroopan unionin ulkopuolella]

Jos haluat hävittää tämän tuotteen, tee se kansallisen lainsäädännön tai muiden maassasi voimassa olevien määräysten mukaan, jotka koskevat vanhojen sähkö- ja elektroniikkalaitteiden käsittelyä.

SVENSKA

Information till användare gällande kassering av gammal utrustning

Tänk på:
Att denna symbol endast gäller inom den Europeiska gemenskapen.



[Europeiska gemenskapen]

Denna symbol anger att elektrisk och elektronisk utrustning inte ska kasseras som vanligt hushållsavfall, när de inte ska användas mer. Istället ska produkten lämnas in på lämplig återvinningsstation för elektrisk eller elektronisk utrustning, så att den kan tas om hand och återvinnas i enlighet med ert lands lagstiftning.

Genom att avyttra denna produkt på rätt sätt, bidrar du till att bevara naturen och förhindrar potentiellt negativa effekter på miljön och den mänskliga hälsan, som annars kan bli resultatet vid felaktig hantering av denna produkt. Kontakta ditt kommunkontor, det företag som hanterar dina hushållssopor eller butiken där du köpt produkten, för mer information om återvinningscentraler. Det kan hända att du bötfälls i enlighet med ert lands lagstiftning om detta avfall kasseras på fel sätt.

(Företagsanvändare)

Om ni vill kassera denna produkt, besök vår webbsida www.jvc-europe.com för att få information om returnering av produkten.

[Övriga länder utanför den Europeiska gemenskapen]

Om du vill kassera denna produkt, ska detta göras i enlighet med gällande lagstiftning i landet, eller enligt andra bestämmelser i ditt land, för behandling av gammal elektrisk eller elektronisk utrustning.

NORSK

Informasjon til brukerne om kassering av gammelt utstyr

OBS!
Dette symbolet er kun gyldig i den Europeiske Union og i EFTA-landene Norge, Island og Sveits.



[Europeiske Union]

Dette symbolet betyr at det elektriske eller elektroniske utstyret ikke skal kasseres som vanlig husholdningsavfall når det har nådd slutten av sin levetid. I stedet skal produktet leveres til en passende mottaksstasjon for kasserte elektriske og elektroniske produkter, slik at disse kan behandles, gjenvinnes og resirkuleres i samsvar med nasjonal lovgivning.

Hvis du kasserer dette produktet på riktig måte, bidrar du til å bevare naturlige ressurser og til å motvirke de negative virkningene på miljøet og den menneskelige helse som kan oppstå hvis produktet kasseres på feil måte. Hvis du vil ha mer informasjon om mottaksstasjoner og gjenvinning av dette produktet, kan du ta kontakt med kommunen din, renovasjonsselskapet ditt eller den forhandleren du kjøpte produktet av.

Feilaktig kassering av dette utstyret kan kanskje bøtelegges, avhengig av nasjonale lover og regler.

(Bedriftsbrukere)

Hvis du ønsker å kassere dette produktet, kan du gå til hjemmesiden vår på www.jvc-europe.com eller www.elretur.no for å få informasjon om retur av dette produktet.

[Andre land utenfor EU]

Hvis du ønsker å kassere dette produktet, må du gjøre det i samsvar med gjeldende nasjonal lovgivning eller andre regler som gjelder i landet ditt når det gjelder behandling av gammelt elektrisk og elektronisk utstyr.

**Информация для пользователей,
выбрасывающих старое оборудование****Внимание:**

Действие этого символа распространяется только на Европейский Союз.

**[Европейский Союз]**

Это символ указывает, что после окончания срока службы соответствующего электрического или электронного оборудования, нельзя выбрасывать его вместе с обычным бытовым мусором. Вместо этого, оно подлежит сдаче на утилизацию в соответствующий пункт приема электрического и электронного оборудования для последующей переработки и утилизации в соответствии с национальным законодательством.

Обеспечивая правильную утилизацию данного продукта, Вы помогаете сберечь природные ресурсы и предотвращаете ущерб для окружающей среды и здоровья людей, который возможен в случае ненадлежащего обращения. Более подробную информацию о пунктах приема и утилизации данного продукта можно получить в местных муниципальных органах, на предприятии по вывозу бытового мусора или по месту приобретения продукта. Нарушение правил утилизации данного типа отходов в соответствии с национальным законодательством является административным правонарушением.

(Организации-пользователи)

Прежде чем выбрасывать данный продукт, ознакомьтесь с информацией о приемке отработавших продуктов, приведенной на веб-узле www.jvc-europe.com.

[Страны, не входящие в Европейский Союз]

Если Вы собираетесь выбросить данный продукт, руководствуйтесь национальным законодательством или другими правилами, действующими в Вашей стране по отношению к переработке старого электрического и электронного оборудования.

TABLE OF CONTENTS


SAFETY PRECAUTIONS	2
TABLE OF CONTENTS	8
Accessories/Controls and Features	9
Accessories.....	9
FRONT	9
REAR	10
Remote Control.....	12
Installation and Connection	15
Precautions for Installation.....	15
Connecting to Devices	16
Turning on the power	17
Basic Operation Procedures	18
Setting the Output	18
Screen (Onscreen) Display and Operation	19
Adjustments and Settings Using Menus	20
Menu List.....	20
Menu Configuration.....	20
Specifications	26
Memo	27

Accessories

The following accessories are packed together with this unit. Please confirm all items.
If any item is missing, please contact your dealer.

Instructions.....	x 1
Guarantee	x 1
Power Cord (LD-HD1KU)	x 1
(LD-HD1KE)	x 1 (for European continental countries)
(LD-HD1KE)	x 1 (for United Kingdom)
AC Adapter	x 1
HDMI–DVI Cable.....	x 1
Remote Control	x 1
AAA size Batteries (for operation confirmation).....	x 2

FRONT

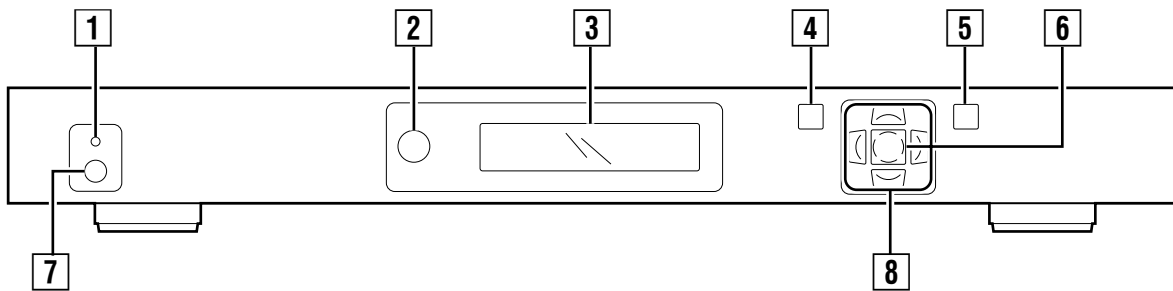

1 Status LED

Light off:
Unit is in standby mode.

Red:
No device is connected to the selected input terminal.
The cable is connected to the selected input terminal but there is no input signal.
→Input the signals to the selected input terminal.

Blue:
Signals are input while in operation.

Green:
A signal that cannot be used with this unit has been input.
→Input a signal that can be used with this unit.
(☞ Page 11)

2 Remote Control Sensor Window

When operating with the remote control, aim it towards the sensor.

3 LCD

Displays the menu items and information of this processor.

4 [MENU] Button

Press to change the settings of this processor. Press again to exit the setting mode. (Display on the processor and the menu disappear.)

5 [EXIT] Button

Press to return to the previous menu.
The menu will disappear when there is none to return to.

6 [ENTER] Button

Press this to confirm the selected item in the menu.


7 Power/Standby Button

Press to turn the unit On when it is in the standby mode. Press again to switch to the standby mode.

8 [▲ / ▼ / ◀ / ▶] (Navigation) Buttons

Press these buttons to move the cursor from one menu item to another.
Use the [◀▶] buttons to switch the input source.

REAR

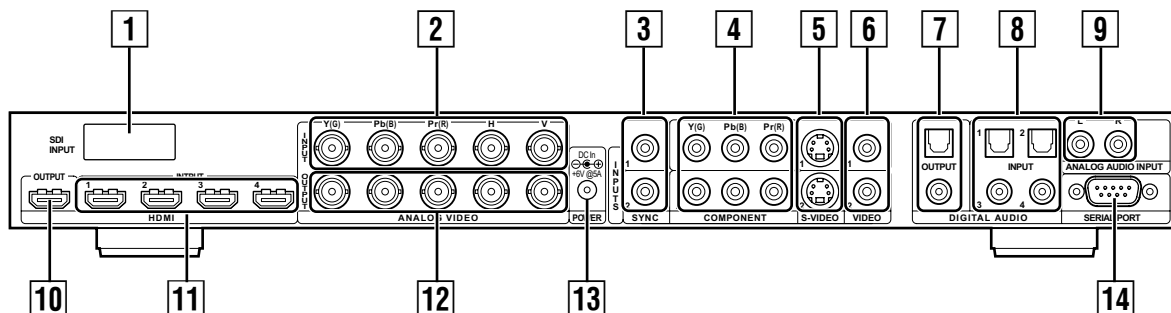


- 1 [SDI INPUT] Terminal**
Not used.
- 2 [ANALOG VIDEO INPUT] Terminal (Y(G), Pb(B), Pr(R), H and V BNC Terminals)**
For input of color difference component signals and analog RGB signals.
- 3 [SYNC INPUT 1/2] Terminal (RCA Terminal)**
For sending RGB signal input to the [COMPONENT INPUT 1/2] terminal as synchronous signals.
- 4 [COMPONENT INPUT 1/2] Terminal (Y(G), Pb(B) and Pr(R) RCA Terminal)**
For input of color difference component signals and analog RGB signals.
- 5 [S-VIDEO INPUT 1/2] Terminal (Mini DIN 4 Pin)**
For input of S-video (Y/C) signals of sources such as video decks.
- 6 [VIDEO INPUT 1/2] Terminal (RCA Terminal)**
For input of composite video signals of sources such as video decks.
- 7 [DIGITAL AUDIO OUTPUT] Terminal (Optical/Coaxial Terminal)**
For output of digital audio signals.
- 8 [DIGITAL AUDIO INPUT 1/2] Terminal (Optical Terminal) [DIGITAL AUDIO INPUT 3/4] Terminal (Coaxial RCA Terminal)**
For input of digital audio signals of sources such as DVD players.
- 9 [ANALOG AUDIO INPUT L/R] Terminal (RCA Terminal)**
For input of analog audio output signals of sources such as video decks.
- 10 [HDMI OUTPUT] Terminal**
For output of HDCP-compliant digital video signals.
- 11 [HDMI INPUT 1/2/3/4] Terminal**
For input of HDCP-compliant digital video signals of sources such as DVD recorders.
- 12 [ANALOG VIDEO OUTPUT] Terminal**
This is an analog signal output. Use this for connecting to a display device with an input terminal for RGBHV or YPbPr signals.
 - Not normally used.
- 13 [POWER] Terminal (DC IN +6 V)**
Connect the supplied AC adapter to this terminal. (☞ Page 17)
- 14 [SERIAL PORT] Terminal (Dsub 9 Pin)**
Not used.

Signals corresponding to each terminal are listed in the table below.

Input Terminal	Input Signal
Video	
VIDEO INPUT 1/2 S-VIDEO INPUT 1/2	NTSC, PAL, PAL-M, SECAM
COMPONENT INPUT 1/2 SYNC INPUT 1/2	480i, 480p, 576i, 576p, 720p/50 Hz, 720p/60 Hz, 1080i/50 Hz, 1080i/60 Hz (YPbPr/RGBS)
ANALOG VIDEO INPUT	480p, 576p, 720p/50 Hz, 720p/60 Hz, 1080i/50 Hz, 1080i/60 Hz (YPbPr/RGBHV)
HDMI INPUT 1/2/3/4	480i, 480p, 576i, 576p, 720p/50 Hz, 720p/60 Hz, 1080i/50 Hz, 1080i/60 Hz (RGB/YCbCr 4:4:4/YCbCr 4:2:2)
Audio	
DIGITAL AUDIO INPUT 1/2 (Optical Digital)	24bit/24 kHz-96 kHz
DIGITAL AUDIO INPUT 3/4 (Coaxial Digital)	24bit/24 kHz-192 kHz
HDMI INPUT 1/2/3/4	Compliant with HDMI audio format
Output Terminal	Output Signal
Video	
ANALOG VIDEO OUTPUT	YPbPr, RGBHV, RGB (Sync on G), RGBS (Sync from H) (Refer to "Format" of "OUTPUT SETUP" for details on resolution) (Page 23)
HDMI OUTPUT	RGB 4:4:4 (8bit), YCBCr 4:4:4 (8bit), YCbCr 4:2:2 (10bit) (Refer to "Format" of "OUTPUT SETUP" for details on resolution) (Page 23)
Audio	
DIGITAL AUDIO OUTPUT	Same as audio input signals
HDMI OUTPUT	Compliant with HDMI audio format

Remote Control

Some buttons may not function depending on your input source or unit's settings.

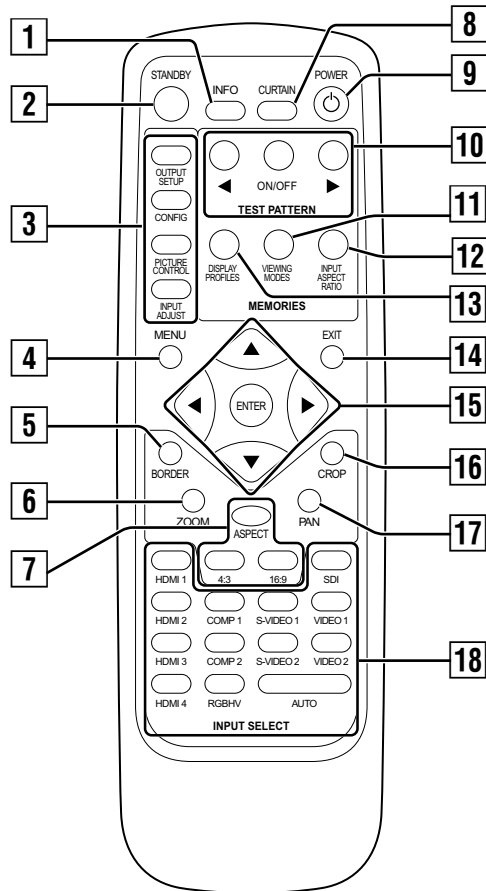

- 1 [INFO] Button**
Displays items in the “Information” menu of the “CONFIGURATION” menu. (☞ Page 23)
- 2 [STANDBY] Button**
Press this to switch to the standby mode when the power of this unit is turned On.

- 3 Submenu Button**
[OUTPUT SETUP] Button
Displays items in the “OUTPUT SETUP” menu. Press this button to move the cursor from one item to another. (☞ Page 23)
[CONFIG] Button
Displays items in the “CONFIGURATION” menu. Press this button to move the cursor from one item to another. (☞ Page 22)
[PICTURE CONTROL] Button
Displays items in the “PICTURE CONTROL” menu. Press this button to move the cursor from one item to another. (☞ Page 22)
[INPUT ADJUST] Button
Displays items in the “INPUT ADJUST” menu. Press this button to move the cursor from one item to another. (☞ Page 21)

- 4 [MENU] Button**
Press to change the settings of this processor. Press again to exit the setting mode. (Display on the processor and the menu disappear.)(☞ Page 20)

- 5 [BORDER] Button**
Displays items in the “Borders” menu of the “INPUT ASP. RATIO” menu. (☞ Page 21)

- 6 [ZOOM] Button**
Displays items in the “Zoom” menu of the “INPUT ASP. RATIO” menu. (☞ Page 20)

- 7 Aspect Button**
[ASPECT] Button
Displays items in the “INPUT ASP. RATIO” menu. Press this button to move the cursor from one item to another. (☞ Page 20)
[4:3] Button
Sets “Preset” of the “INPUT ASP. RATIO” menu to “4:3 F.Frame”. (☞ Page 21)
[16:9] Button
Sets “Preset” of the “INPUT ASP. RATIO” menu to “16:9 F.Frame”. (☞ Page 21)

8 [CURTAIN] Button

Press this button to temporarily hide the video image.

9 [POWER] Button

Press to turn the unit On when it is in the standby mode.

10 Test Pattern Button**[ON/OFF] Button**

Displays the test pattern or turns off the display.

[◀] and [▶] Buttons

Switches the test pattern.

11 [VIEWING MODE] Button

Not used.

12 [INPUT ASPECT RATIO] Button

Displays the “Preset” items in the “INPUT ASP. RATIO” menu. (☞ Page 21)

13 [DISPLAY PROFILE] Button

Displays the “Display Profile” items in the “OUTPUT SETUP” menu. (☞ Page 25)

14 [EXIT] Button

Press to return to the previous menu. The menu will disappear when there is none to return to.

15 [▲ / ▼ / ◀ / ▶] and [ENTER] Buttons

Use these buttons to operate the menu.

16 [CROP] Button

Not used.

17 [PAN] Button

Displays items in the “Pan” menu of the “INPUT ASP. RATIO” menu. (☞ Page 20)

18 Buttons for Direct Input Selection**[HDMI 1] Button**

Switches to the image from the [HDMI INPUT 1] terminal.

[HDMI 2] Button

Switches to the image from the [HDMI INPUT 2] terminal.

[HDMI 3] Button

Switches to the image from the [HDMI INPUT 3] terminal.

[HDMI 4] Button

Switches to the image from the [HDMI INPUT 4] terminal.

[COMP 1] Button

Switches to the image from the [COMPONENT INPUT 1] terminal.

[COMP 2] Button

Switches to the image from the [COMPONENT INPUT 2] terminal.

[RGBHV] Button

Switches to the image from the [ANALOG VIDEO INPUT] terminal (BNC terminal).

[S-VIDEO 1] Button

Switches to the image from the [S-VIDEO INPUT 1] terminal.

[S-VIDEO 2] Button

Switches to the image from the [S-VIDEO INPUT 2] terminal.

[SDI] Button

Switches to the image from the [SDI INPUT] terminal. (Not used)

[VIDEO 1] Button

Switches to the image from the [VIDEO INPUT 1] terminal.

[VIDEO 2] Button

Switches to the image from the [VIDEO INPUT 2] terminal.


[AUTO] Button

Automatically differentiates the input signals and switches to the input terminal's image.

Load batteries into the remote control. If the remote control starts to function erratically, replace the batteries with new ones.


1 Open the back cover

To open, push the top of the back cover towards you.

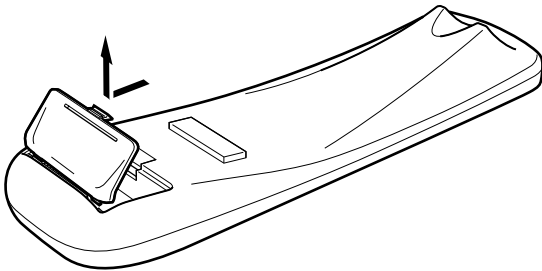


2 Load the batteries

Insert the 2 (AAA) batteries supplied according to the \oplus , \ominus marks. To prevent short circuit, be sure to insert the \ominus (minus) end of the battery first.

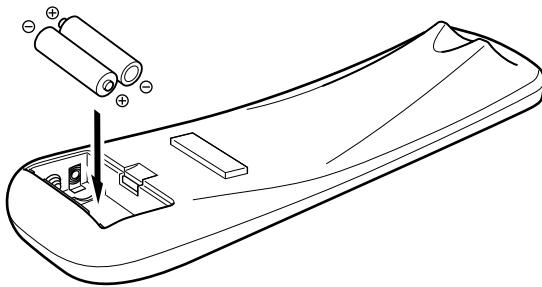

3 Close the back cover

To close, fit the tab of the back cover into the groove of the remote control.

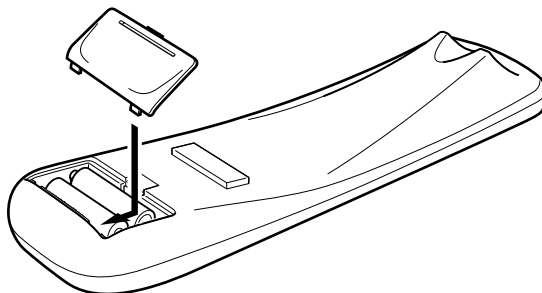

Precautions for Using Batteries

If batteries are incorrectly used, they may crack or leak. This could cause fire, burn, malfunction, and staining or damaging of the surroundings.

Beware of the following:

- Do not mix new and old batteries.
- Do not mix different type of batteries as they are different in characteristics.
- Insert batteries according to the \oplus and \ominus marks on the battery case.
- Be sure to insert the \ominus end in first to prevent short circuit.
- Do not put batteries into fire or recharge them.
- Use only designated batteries.
- Remove the batteries if the remote control is not to be used for a prolonged period.
- Use manganese batteries wherever possible. Do not use rechargeable or alkaline batteries.
- Read the safety precautions displayed on the batteries.

Battery Life

Batteries last for 6 months to 1 year under normal use. However, batteries provided are for confirming operation and may not last that long.

Battery Leakage

When the batteries are totally exhausted and can no longer be used, replace them immediately.

Leaving the batteries in the battery compartment causes leakage, which may in turn lead to malfunction.

Precautions for Installation

Please read the following carefully when installing this unit.

Installation Environment

This unit is a precision device. Do not install it at the following places. Doing so may cause fire or malfunction of the unit.

- Where there is water, humidity or dust
- Where the unit may be subjected to oily or cigarette smoke
- On a soft surface such as carpet or cushion
- Where the unit may be subjected to high temperature due to direct sunlight
- When temperature is high or low


Check that it is well ventilated before installing on a rack. When devices that emit heat, such as power amplifiers, are to be installed on a rack, mount a fan on the rack as well.

Allowable operation temperature range: +5 °C to +35 °C

Allowable relative humidity range: 20 % to 80 % (no condensation)

Allowable storage temperature range: -10 °C to +60 °C

Minimum Space Required

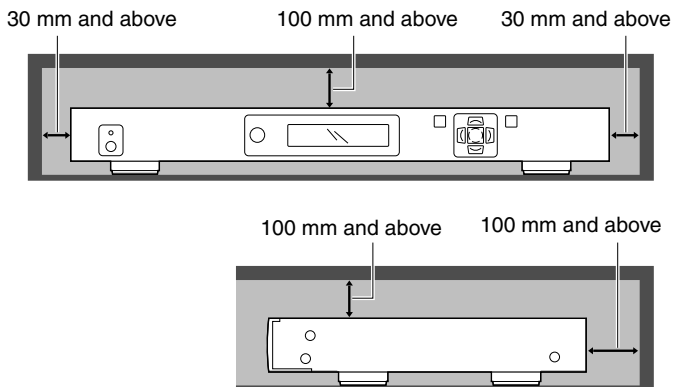


- Do not place this unit in an enclosed area or block the air vents. Allow sufficient space around this unit for emission of heat.
- The unit's air vents are at the top and bottom.
- Do not place objects on top of this unit when electricity is flowing.

Connecting to Devices

Before connection, be sure to turn off both this unit and the device to be connected.


Connecting to Input Devices

- Exclusive connection cables and adapters may be required for the connection of some devices. Refer to the instruction manual on the device to be connected for details.
- See below for an illustration of the devices used and method of connection.

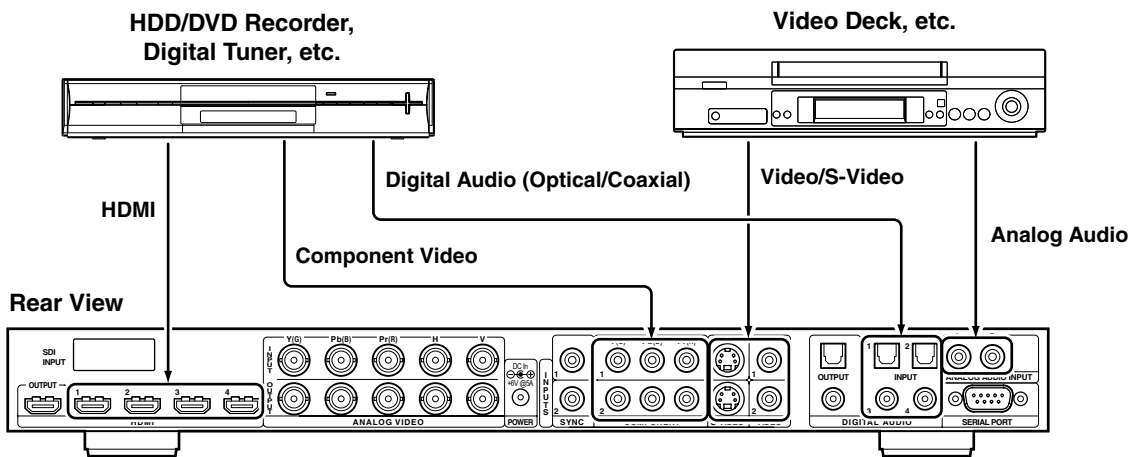



Connecting to the Projector and Amplifier

- Read the manual that is supplied with the projector to be connected thoroughly.
- Use the HDMI–DVI cable supplied with this unit. The use of a split system or optical fiber cable is recommended when using a cable longer than that supplied.
- Depending on the capability of the cable used, signals may attenuate or video images may become unstable.

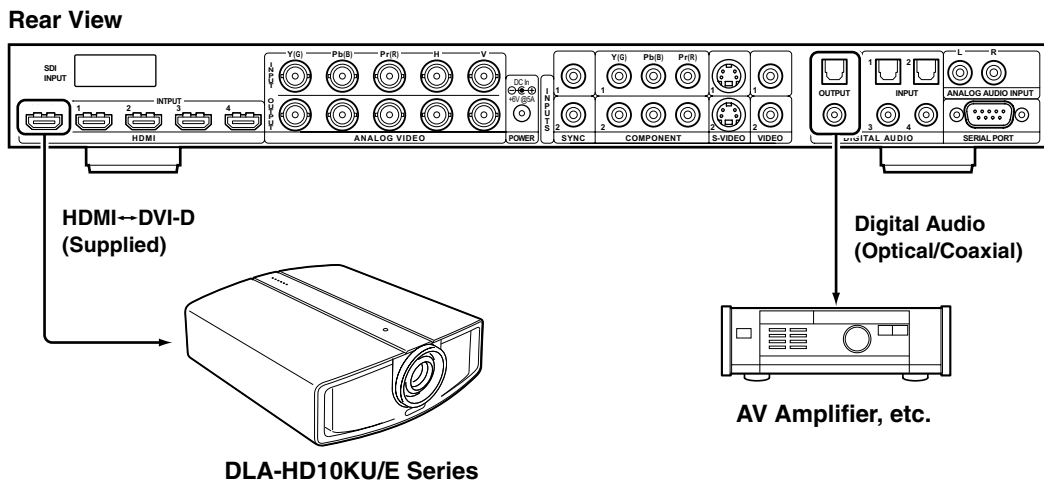

Turning on the power

Before plugging in the power cord, ensure that all devices have been connected.

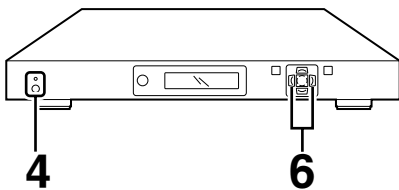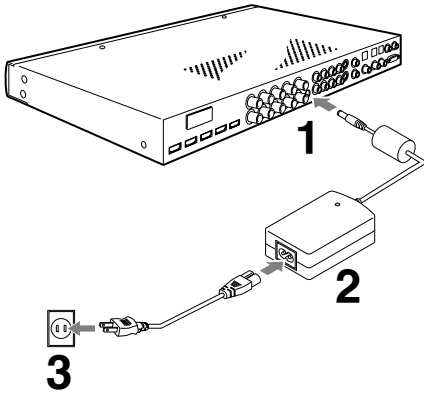

1 Connect the AC adapter output cord to the [DC In] terminal of this unit.

2 Attach the power cord to the AC adapter

3 Insert the power cord into the power outlet

- The following message is displayed on the LCD for about 3 seconds.

JVC LD-HD1K
Powered by ABT

Perform the following procedures to switch this unit to the operating mode if the Status LED does not light up.

4 Turn on the power by pressing the Power/Standby button on this unit

- The Status LED lights up in red.

5 Turn on the power of the input source.

6 Press the [◀▶] buttons to select the input source

- The Status LED lights up in blue when signals are detected.

Precautions Against Fire and Electric Shock

- When not using devices, remove the power plug from the wall outlet.
- Do not use power cords for connection other than those supplied.
- Do not use AC adapters for connection other than those supplied.
- Do not use a power voltage different from that which is indicated.
- Do not cut, tear or modify the power cords. Also, do not place a heavy object on, heat or stretch the power cords as this may cause damage to the cords.
- Do not modify or disassemble the AC adapter.
- Do not use the supplied AC adapter on other devices.
- Do not insert or pull out plugs with a wet hand.
- Do not allow dirt or metal to adhere to the power plug.
- When the electricity is turned on, do not cover the AC adapter with a rug or place it near equipment emitting heat, such as heaters.
- Do not use with the power plug and AC adapter, or the AC adapter and this unit not properly connected.
- Be sure to plug the power plug firmly into the outlet.

Basic Operation Procedures

Setting the Output

The factory settings of this unit are as follows.


- Input terminal selection: **Auto** (Detects input signals sent to the input terminal automatically.)
- Output terminal selection: **HDMI (Digital)** (Outputs as RGB 4:4:4 signals.)

Follow the procedures below to set the output if the screen does not appear when in the default state.


- It may take a while to display the screen upon input of a HDCP signal.

Set using the remote control or buttons at the front of this unit while monitoring the LCD.

Buttons on this unit

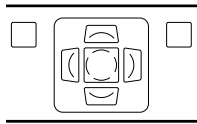

Remote control

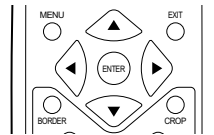

- Press the [EXIT] button when an erratic operation is performed. Alternatively, press the [MENU] button to exit the menu, then you will be able to repeat the operation from the beginning.

1 Press the [MENU] button.

- The menu appears on the LCD.

MAIN MENU
INPUT SELECT

2 Press the [▲] button.

MAIN MENU
OUTPUT SETUP

3 Press the [ENTER] button.

OUTPUT SETUP
Analog/Digital

4 Press the [ENTER] button.

Analog/Digital
BNC (Analog)

5 Press the [▼] button to select “HDMI (Digital)”.

Analog/Digital
HDMI (Digital)

6 Press the [ENTER] button.

OUTPUT SETUP
Analog/Digital

7 Press the [▼] button.

OUTPUT SETUP
Format

8 Press the [ENTER] button.

Format
420p

9 Press the [▼] button a few times to select “1080p-60” or “1080p-50”.

- Select “1080p-60” when the input signal is NTSC.
- Select “1080p-50” when the input signal is PAL/SECAM.

Format
1080p-60


10 Press the [ENTER] button to confirm selection.

11 Press the [MENU] button to end the setting.


- The display on the LCD disappears.
(The processor exits the setting mode automatically and the display disappears when no operation is performed for about 30 seconds.)

Screen (Onscreen) Display and Operation


As the menu is displayed on top of the video image, it is possible to check the image while altering the settings. If the video image disappears, restore the original settings while monitoring the LCD.

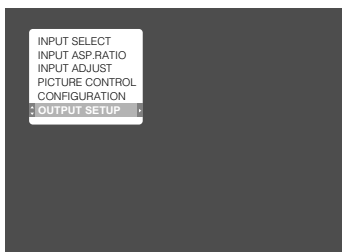


Press the [MENU] button to display the menu.
 Press the [MENU] button again to clear the menu.
 The menu can also be cleared by pressing the [EXIT] button.
 The left diagram shows an example where “OUTPUT SETUP” is selected.

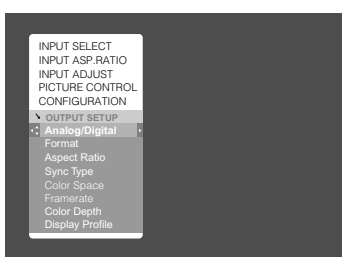


Press the [ENTER] or [▶] button to display the submenu.

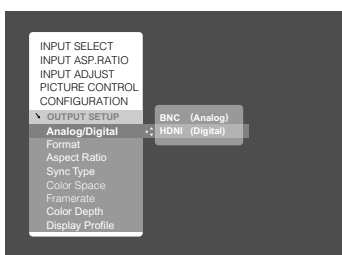

Press the [ENTER] or [▶] button to display the next submenu.
 Press the [▲] or [▼] button to alter the set value.

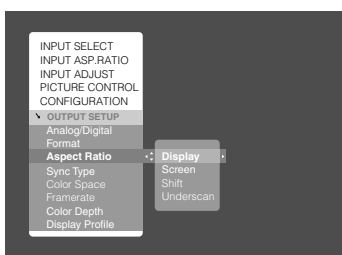

A more detailed submenu is available for submenu items with a ▶ on its right.

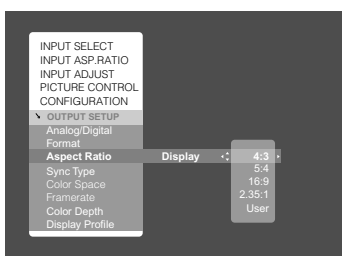

To return to the previous menu, press the [EXIT] or [◀] button.
 To exit the menu display, press the [MENU] button.

Adjustments and Settings Using Menus

The menus of this unit form a structure as shown below.

The menu is displayed on the LCD as well as the screen through the projector that is connected to this unit.

Menu List

INPUT SELECT

INPUT ASP. RATIO

Frame AR
Active Input AR
Zoom
Pan
Borders
Preset
Save

INPUT ADJUST

Border Level
Overscan
Line Offset
HDMI Input Control
VCR Mode
Film Mode
Auto Priority
Audio Input
AV Lip Sync

PICTURE CONTROL

Brightness
Contrast
Saturation
Hue
Sharpness(Comp)
Y/C Delay
CUE-Correction

CONFIGURATION

Test Patterns
Auto Standby
HDCP Mode
Power LED
User Mode
Serial Port Rate
Factory Default
Software Update
Information

OUTPUT SETUP

Analog/Digital
Format
Aspect Ratio
Sync Type
Sync Polarity
Colorspace
Frame Rate
Color Depth
Display Profile

Menu Configuration

INPUT SELECT

Switches the input source. This has the same function as the input selection buttons on the remote control unit. SDI is not supported.

Setting Values:
Video 1, Video 2, S-Video 1, S-Video 2,
Component 1, Component 2, RGBHV, HDMI 1,
HDMI 2, HDMI 3, HDMI 4, Auto, SDI
Default Value: Auto

INPUT ASP. RATIO

Sets the aspect ratio and size of the input image.

Frame AR (Frame Aspect Ratio)

Set to "16:9" when the input image is compressed for widescreen TVs.

Setting Values: 4:3, 16:9
Default Value: 16:9

Active Input AR (Active Input Aspect Ratio)

This is the preset aspect ratio of the video image or program (movie). This aspect ratio is normally stated at the back cover of the DVD. The upper and lower borders (black bands) may appear wider or narrower, depending on the set value. When the aspect ratio of "Frame AR" and "Active Input AR" are the same, this is known as a full frame.

Setting Values: 1.33:1, 1.55:1, 1.66:1, 1.78:1, 1.85:1,
2.35:1, User (1.01:1–3.00:1)
Default Value: 1.33:1

- The relationship between Active Input AR and Frame AR is as follows: 1.33:1=4:3, 1.55:1=14:9, 1.66:1=15:9, 1.78:1=16:9.

Zoom

Enables the displayed input image to be enlarged in the horizontal (**Hor.**) or vertical (**Ver.**) direction.

Setting Values: Hor. (0–100), Ver. (0–100)
Default Value: Hor. (0), Ver. (0)

Pan

Enables movement of the display area in the vertical (**Ver.**) or horizontal (**Hor.**) direction upon zooming.

Setting Values: Hor. (0–100), Ver. (0–100)
Default Value: Hor. (0), Ver. (0)

Borders

Puts borders (black bands) around the video image (top and bottom (Ver.)/left and right (Hor.) edges). When the output aspect ratio is set to "16:9" while the input aspect ratio is 4:3, a black band will appear both left and right edges. The width of this band can be changed.

[Setting Values: Hor. (0–200), Ver. (0–200)
Default Value: Hor. (0), Ver. (0)]

Preset

There is a total of 2 fixed preset values and 4 preset values that the user is able to store.

[Setting Values:
4:3 F.Frame, 16:9 F.Frame, Preset 1–4
Default Value:

- The fixed preset values are as follows:
4:3 F.Frame
[Frame AR(4:3), Active Input AR(1.33:1)]
16:9 F.Frame
[Frame AR(16:9), Active Input AR(1.78:1)]

Save

Saves the current set values for "Frame AR", "Active Input AR", "Zoom", "Pan" and "Borders".

[Setting Values: Preset 1–4]

- Note that upon saving, the previous preset values will be overwritten.

INPUT ADJUST

Adjusts the input video images.

Border Level

When the aspect ratio is altered, a black band appears on the top, bottom, left and right edges. Increasing the value changes the color from black to gray. This setting applies regardless of the input source or other settings.

[Setting Values: 0–100
Default Value: 0]

Overscan

Enlarges the input video image equally in the horizontal/vertical directions. Press this button to temporarily hide the information around the video image.

[Setting Values: 0–20
Default Value: 0]

- This value corresponds to all input aspect ratios and is independent from the "Zoom" value.

Line Offset

Enables adjustment of the video image in the vertical direction when HDMI signals are input. This feature allows different settings for NTSC and PAL/SECAM.

[Setting Values: 0–30
Default Value: 0]

HDMI Input Control

Sets the signal format at the HDMI input terminal.

[Setting Values: RGB 4:4:4, YCbCr 4:2:2, YCbCr 4:4:4
Default Value: RGB 4:4:4]

- RGB 4:4:4 is a standard DVI format.

VCR Mode

The output timing is completely separated from the input timing to ensure proper transmission of output signals from this unit during playback on a video deck (particularly during fast-forward, rewind, slow-motion and pause).

[Setting Values: Off, On, Auto
Default Value: Off]

- On:
The output timing is separated from the input timing regardless of the "Frame Rate" setting.
- Off:
The output timing is dependent on the "Frame Rate" setting.
- Auto:
Functions in the same way as "On" when signals from the video deck are detected.

Film Mode

Detects film images when the film image signals undergo progressive encoding. This to normally set to auto detection (Auto).

[Setting Values: Off, Film Bias, Auto
Default Value: Auto]

- Off:
Do not detect film during progressive encoding.
- Film Bias:
Improves film mode detection, such as improving detection of input film image when in the PAL/SECAM mode.
- Auto:
Improves detection of film video signals.

Auto Priority

This feature changes the sequence of input selection using an order of priority that is different from the "Auto" input selection setting.

[Setting Values:
Video 1 (1–12), Video 2 (1–12), S-Video 1 (1–12),
S-Video 2 (1–12), Component 1 (1–12),
Component 2 (1–12), RGBHV (1–12),
HDMI 1 (1–12), HDMI 2 (1–12), HDMI 3, (1–2),
HDMI 4 (1–12), SDI (1–12)
Default Value:
Video 1 (1), Video 2 (2), S-Video 1 (3), S-Video 2 (4),
Component 1 (5), Component 2 (6), RGBHV (7),
HDMI 1 (8), HDMI 2 (9), HDMI 3 (10), HDMI 4 (11),
SDI (12)]

Adjustments and Settings Using Menus (continued)

Audio Input

Assigns the audio input terminal for the video input that is currently selected. Change the video input selection to enable assignment for other inputs.

[Setting Values: Off, Digital 1–4, Analog, HDMI
Default Value:
Digital 1 (Component 1), Digital 2 (S-Video 1),
Digital 3 (S-Video 2), Digital 4 (Component 2),
Analog (Video 1)]

- The audio input for HDMI is normally assigned to the same terminal. However, it is also possible to assign other audio input terminals.

AV Lip Sync

This unit delays the output of audio input to ensure synchronization with delays in video signals due to image processing. The amount of audio delay can be adjusted. Delay values can be set in units of milliseconds.

[Setting Values: 0–200
Default Value: 0]

- Upon selecting the menu, the current delay setting is displayed.
- Delay time cannot be set to a negative value.

PICTURE CONTROL

Adjusts the output image quality.

Brightness

Adjusts the brightness of the image.

[Setting Values: –100–100
Default Value: 0]

- Increasing the value changes the color from black to gray.

Contrast

Adjusts the contrast of the image.

[Setting Values: –100–100
Default Value: 0]

Saturation

Adjusts the color density of the picture image.

[Setting Values: –100–100
Default Value: 0]

Hue

Adjusts the hue of the image.

[Setting Values: –100–100
Default Value: 0]

- Component (YPrPb) signals and PAL/SECAM signals cannot be adjusted.

Sharpness(Comp)

Adjusts the outline of the image.

[Setting Values: –100–100
Default Value: 0]

Y/C Delay

Delay may arise between the brightness signals (Y) and color signals (C), depending on the S-video signal input. This may cause smudges to appear in the image. This is because the delay leads to improper overlapping between the color component and the black-and-white brightness component. This unit corrects the time error (delay) between these input signals by adjusting the phase of the brightness signals according to the color signals.

[Setting Values: –5–5
Default Value: 0]

CUE-Correction

Reduces symptoms such as smudging or discoloration (CUE: chroma upsampling error), which occur when MPEG encoded video signals are inappropriately decoded. Set to “Auto” if you are not sure whether CUE is found in the input signals.

[Setting Values: Off, On, Auto
Default Value: Off]

- Off: When CUE is not found in the input signals.
- On: When CUE is found in the input signals.
- Auto: Automatically detects and reduces errors.

CONFIGURATION

Sets the operating mode of this unit.

Test Patterns

Sets the test pattern in this unit.

- Use the [TEST PATTERN ON/OFF] button on the remote control unit to select whether to display or hide the test pattern.

Auto Standby

When this is set to “On”, the processor switches automatically to the standby mode after 30 seconds when no signals are sent to the selected input terminal.

[Setting Values: Off, On
Default Value: Off]

HDCP Mode

Sets the method for processing HDCP signals input from the HDMI terminal.

HDCP signals are not output from the analog terminal. Connect the HDMI output terminal of this unit to a HDCP-compatible display device via HDMI or DVI.

[Setting Values: Off, On
Default Value: On]

- Off:
Disables HDCP at the HDMI input terminal of this unit.
- On:
Enables HDCP at the HDMI input terminal of this unit.

Power LED

Sets the backlight of the LCD at the front of this unit.

[Setting Values: Off, On, Auto
Default Value: Auto]

- Off: Backlight is turned off at all times.
- On: Backlight turns on.
- Auto: Backlight turns off automatically after 30 seconds when no operation is performed on this unit.

User Mode

Limits adjustment of the timing parameter of the "Format" item in the "OUTPUT SETUP" menu.

[Setting Values: Basic, Advanced
Default Value: Basic]

- Normal: Limit on the settings has been specified.
- Advanced: Setting is not limited.

Serial Port Rate

Sets the baud rate of the [SERIAL PORT] terminal.
Not used with this processor.

[Setting Values:
1200, 2400, 4800, 9600, 14400, 19200, 38400, 57600
Default Value: 19200]

Factory Default

Restores to the factory settings.

[Setting Values: No, Yes]

Software Update

Not used with this processor. Do not run this as it may cause malfunction or errors.

[Setting Values: No, Yes]

Information

Displays the following information:

- Input Status
 - Video Source: Video image input terminal
 - Signal Type: Signal type
 - Audio Source: Audio input terminal
 - Aspect Ratio (Frame/Active):
Aspect ratio (Frame/Active)
- Output Status
 - Resolution: Resolution
 - Frame Rate: Frame rate
 - Line Rate: Line rate
 - Aspect Ratio (Display/Screen):
Aspect ratio (Display/Screen)

OUTPUT SETUP

Sets the video output signal.

Analog/Digital

Sets the terminal that outputs video signals.

Set to "HDMI (Digital)" for this unit.

[Setting Values: BNC (Analog), HDMI (Digital)
Default Value: HDMI (Digital)]

- BNC (Analog):
Sends output from the [ANALOG VIDEO OUTPUT] terminal.
Not normally used.
- HDMI (Digital):
Sends output from the [HDMI OUTPUT] terminal.

Format

Sets the resolution of output signals.

This is normally set to "1080p-50" or "1080p-60".

- Set to "1080p-60" when the input signal is NTSC.
- Set to "1080p-50" when the input signal is PAL/SECAM.

[Setting Values:
480p, 540p, 576p, 720p-50, 720p-60, 1080i-50,
1080i-60, 1080p-50, 1080p-60, VGA, SVGA, XGA,
SXGA, 852 × 480, 852 × 576, 1366 × 768,
1280 × 768, 1024 × 1024, 1024 × 852,
1024 × 567, 848 × 600, 1365 × 1024,
1400 × 1050, 1400 × 788, 960 × 540, 1280 × 960,
1440 × 960, 1440 × 1152,
User
Default Value: 1080p-60]

- User:
You can adjust and store the following timing parameters.
Parameter values:
H-Shift, H-Size, H-Front, H-Sync, H-Back, V-Shift, V-Size,
V-Front, V-Sync, V-Back

Adjustments and Settings Using Menus (continued)

Aspect Ratio

Sets the output aspect ratio.

1. Display

Use this to set the aspect ratio of display devices connected to this unit. Output signals change accordingly with the aspect ratio selected. This is normally set to 16:9.

[Setting Values:
4:3, 5:4, 16:9, 2.35:1, User (1.00–3.00)
Default Value: 16:9]

- The initial “User” value is 1.78.

2. Screen

Use this to set the aspect ratio of output video signals. Aspect ratio of video images is set within the display range of “Display”, and black bands may appear around the image on the display.

[Setting Values:
4:3, 16:9, 2.35:1, User (1.00–3.00)
Default Value: 16:9]

- The initial “User” value is 1.78.

3. Shift

When the settings for “Display” and “Screen” differ, this feature enables the position of the image on the screen to be shifted horizontally (Hor.) as well as vertically (Ver.).

[Setting Values: Hor. (–30–30), Ver. (–30–30)
Default Value: Hor. (0), Ver. (0)]

4. Underscan

Normally set for viewing the image information appearing outside the screen.

[Setting Values: 0–100
Default Value: 0]

Sync Type

Sets the sync signal type. This feature functions only for analog outputs. Not normally used.

[Setting Values: Basic, Tri-Level, Csync, HV
Default Value: Basic]

- **Basic:**
Bi-level sync signals that are imposed on the G/Y signal. (Sync can also be imposed on R and B signals in an RGB color space.)
- **Tri-Level:**
Tri-level sync signals that are imposed on the G/Y signal. (Sync can also be imposed on R and B signals in an RGB color space.)
- **Csync:**
Composite sync signals (Output from the [ANALOG VIDEO OUTPUT H] terminal.)
- **HV:**
Separate sync signals (Output from the [ANALOG VIDEO OUTPUT H/V] terminal.)

Sync Polarity

Sets the separate sync signal type. This feature functions only for analog outputs. Not normally used.

[Setting Values: H+/V+, H+/V–, H–/V+, H–/V–
Default Value: H+/V+]

- **H+/V+:** Horizontal and vertical sync signals with a positive polarity
- **H+/V–:** Horizontal sync signal with a positive polarity and vertical sync signal with a negative polarity
- **H–/V+:** Horizontal sync signal with a negative polarity and vertical sync signal with a positive polarity
- **H–/V–:** Horizontal and vertical sync signals with a negative polarity

Colorspace

Sets the color space of the output format. Analog output supports YPbPr and RGB. Digital output supports RGB and YCbCr.

■ Analog (Normally not used.)

[Setting Values: RGB, YPbPr
Default Value: YPbPr]

■ Digital

[Setting Values: RGB, YPbPr (4:2:2 or 4:4:4)
Default Value: RGB]

Frame Rate

Performs frame rate conversion. This can be set to 50 Hz or 60 Hz.

■ 50 Hz Input Signal

[Setting Values:
50Hz Lock, 75Hz Lock, Unlock (25–120)
Default Value: 50Hz Lock]

■ 60 Hz Input Signal

[Setting Values:
48Hz Lock, 60Hz Lock, 72Hz Lock, Unlock (24–120)
Default Value: 60Hz Lock]

- When 50 Hz input signal, signals may be output with the output frame rate locked to 50 Hz or 75 Hz. This is also possible with 60 Hz input signal.
- **Unlock:**
It is also possible to send output at a specific frame rate. (Unlock mode)

Color Depth

Sets the grayscale width of the video image.

[Setting Values: Video, PC
Default Value: PC]

- **Video:** Outputs signals corresponding to image on the video. Not normally used.
- **PC:** Outputs signals corresponding to the images on the computer.

NOTE:

Do not project images except for those at 16:9 (e.g. 4:3, etc.) on display devices with a screen size of 16:9. This can cause permanent image burn-in. Image burn-in is not covered by warranty.

Display Profile

This feature enables items set at the “OUTPUT SETUP” menu (“Analog/Digital”, “Format”, “Aspect Ratio” and “Colorspace”) to be stored as profiles. The items below will be stored.

Setting Values:
Select (Profile 1–4), User, Save (Profile 1–4), Auto
(Off, On)
Default Value:

- Select:
Loads a profile. The “User” profile keeps a record of the current settings.
- Save:
Saves a profile.
- Auto:
Upon setting to “On”, settings performed according to the input signals are stored into the 4 profiles automatically.

Specifications

Input Terminal	
VIDEO	2-line, RCA × 2 1.0 Vp-p
S-VIDEO	2-line, mini-DIN 4 pin × 2 Y: 1.0 Vp-p, C: 0.286 Vp-p
COMPONENT/RGB	2-line, RCA × 6 Y/Gs (Sync on G): 1.0 Vp-p, Pb/Pr/R/G/B: 0.7 Vp-p
SYNC	2-line, RCA × 2 1.0 Vp-p compatible with binary and ternary sync signals
COMPONENT/RGBHV	1-line, BNC × 5 Y/Gs (Sync on G)/H/V: 1.0 Vp-p, Pb/Pr/R/G/B: 0.7 Vp-p
HDMI	4-line (Refer to the input terminal signal table for the video format. (Page 11))
ANALOG AUDIO	1-line 2-channel (L/R) RCA
DIGITAL AUDIO	
Optical Digital	2-line, S/PDIF Toslink
Coaxial Digital	2-line, S/PDIF RCA
SERIAL PORT	Not used.
Output Terminal	
COMPONENT/RGBHV	1-line, BNC × 5 Y/Gs (Sync on G)/H/V: 1.0 Vp-p, Pb/Pr/R/G/B: 0.7 Vp-p
HDMI	1-line
DIGITAL AUDIO	
Optical Digital	1-line, S/PDIF Toslink
Coaxial Digital	1-line, S/PDIF RCA
Power Requirements	DC6 V, 5 A and below (When using supplied AC adapter: AC100 V, 50 Hz/60 Hz)
Operation Environment	Temperature : 41 °F to 95 °F (+5 °C to +35 °C) Humidity : 20 % to 80 % (No condensation) Storage Temperature : 14 °F to 140 °F (–10 °C to +60 °C)
Dimensions (Width x Height x Depth)	Approx. 1 4/5" × approx. 17 " × approx. 10 2/5" (Approx. 46 mm × Approx. 434 mm × Approx. 263 mm) (Excluding protruding portion)
Mass	Approx. 6.6 lbs (Approx. 3.0 kg)
Accessories	(Refer to Page 9.)

- Design and specifications (including menus) are subject to change without prior notice.
- Please note that some of the pictures and illustrations may have been abridged, enlarged or contextualized in order to aid comprehension. Images may differ from the actual product.

