

JVC



English

中文


MICRO COMPONENT SYSTEM

微型组合音响

UX-S77

—Consists of CA-UXS77 and SP-UXS77

—由 **CA-UXS77** 及 **SP-UXS77** 组成

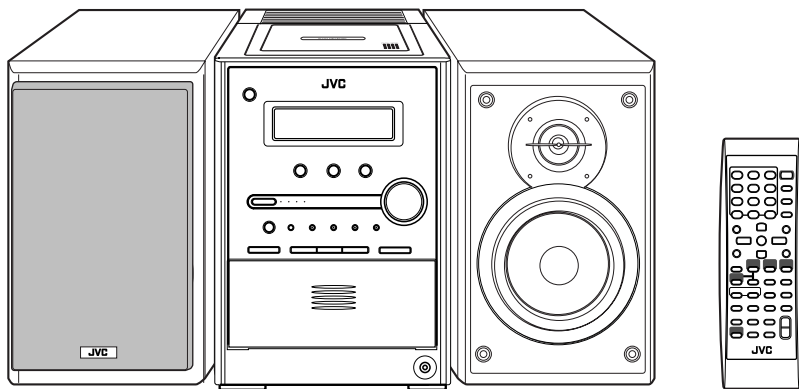

INSTRUCTIONS

使用说明书

GVT0131-010A
[US/UN]

Warnings, Cautions and Others

警告，注意及其他须知事项

CAUTION—STANDBY/ON 电源开关!

Disconnect the mains plug to shut the power off completely (all lamps and indications go off). The STANDBY/ON 电源开关 button in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights in red.
- When the unit is turned on, the STANDBY/ON lamp lights in green.

The power can be remote controlled.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

注意—电源开关!

无论电源开关在任何位置，电源线的电源还是没有被切断。若要完全关闭电源，应将电源插头拔离插座。

(STANDBY/ON 灯熄灭)。

- 当主机正处于备用状态，STANDBY/ON 灯为红色。
- 当主机开启后，STANDBY/ON 灯为青色。

电源开关可用遥控器控制。

注意

为了减少触电，火灾等危险：

1. 请勿擅自卸下螺丝钉，盖子或机壳。
2. 请勿让本机受雨淋或置潮湿环境中。

注意

- 请勿堵塞通风口或通风孔。
(如果通风口或通风孔被报纸或布等堵塞，热量将无法散出。)
- 请勿在本设备上放置任何裸露的火源，如点燃的蜡烛。
- 处理废弃电池时，必须考虑环境问题，并严格遵守当地关于处理废弃电池的有关法律或规定。
- 切勿将本装置暴露于雨水所及、潮湿、滴水或易于溅起水花的地方，亦不要将任何装满液体的物件(如花瓶)放置在本装置上。

Caution: Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

注意：正确通风

为免发生触电和火警的危险，及防止本机受损，请将本机如下放置：

1. 前面：没有障碍物及地方开阔。
2. 侧面 / 顶面 / 背面：在图中所示范围中，不应放置任何障碍物。
3. 底部：放置在水平面上。放置在一个高 10 厘米或以上的台上，以保持足够的通风道。

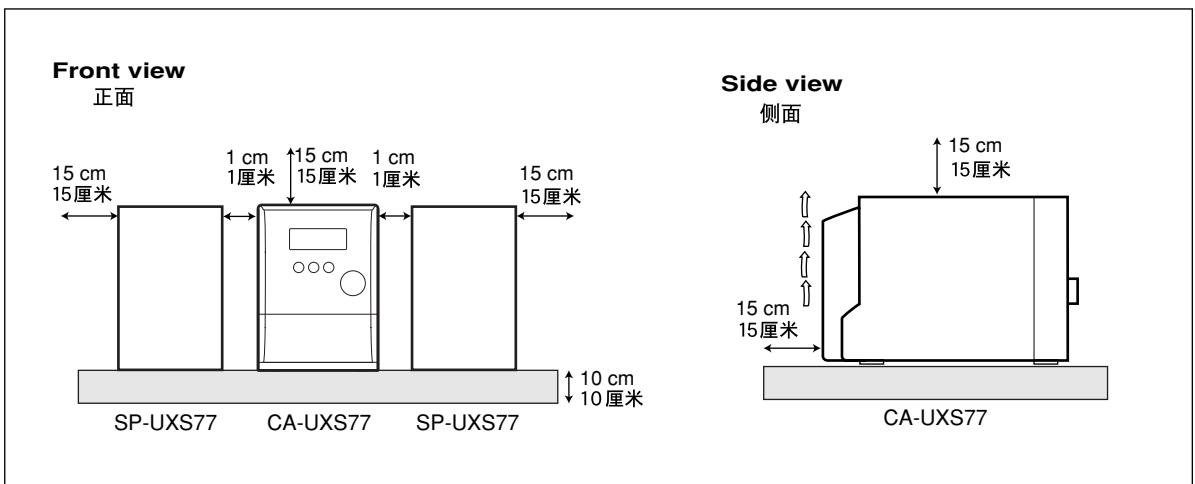

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE UNIT.

镭射产品的重要说明

1. 一级镭射产品。
2. **注意：**请勿打开顶盖板，本机内部没有用户可自行维修的部件；所有维修工作应由有资格的人员完成。
3. **注意：**当内部锁定装置失效或者损坏后，打开盖板可能会产生可见或不可见的镭射辐射。应避免受到镭射光束的直接照射。
4. 标签的复制标示：注意标签位于机内。

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

WARNING : Synlig och osynlig laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)

VARO : Avattaessa ja suojalukitus ohitettuna tai viallisenä olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

Contents

Introduction	2	Advanced Tape Operations	32
Precautions	2	Recording on a Tape	32
How to Read This Manual	2	Synchronized Disc Recording	33
Getting Started	3	Timer Operations	35
Step 1: Unpack	3	Setting the Timer	35
Step 2: Prepare the Remote Control	3	Setup Menu Operations	37
Step 3: Hook Up	4	Operating Procedure	37
Changing the Scanning Mode	7	■ LANGUAGE Setup Menu	38
Before Operating the System	8	■ PICTURE Setup Menu	38
Playable Disc Types	8	■ AUDIO Setup Menu	39
Parts Index	9	■ OTHERS Setup Menu	40
Display Indicators	10	Restricting the Review—Parental Lock	41
Daily Operations—Playback	12	Additional Information	43
Listening to the Radio	13	Learning More about This System	43
Playing Back a Disc	14	Maintenance	45
Playing Back a Tape	16	Troubleshooting	46
Daily Operations—Sound&Other Adjustments	17	Language Code List	47
Adjusting the Volume	17	Country/Area Codes List	48
Adjusting the Sound	17	DVD OPTICAL DIGITAL OUT Signals	49
Presetting Automatic DVD Sound Increase Level	18	Specifications	50
Adjusting the Audio Input Level	18		
Changing the Display Brightness	18		
Changing the Picture Tone	18		
Setting the Clock	19		
Turning Off the Power Automatically	20		
Unique DVD/VCD Operations	21		
Selecting the Sound Track	21		
Selecting the Subtitle Language	22		
Selecting the View Angle	22		
Playing Back a Bonus Group	22		
Selecting Browsable Still Pictures	23		
Special Effect Playback	23		
Advanced Disc Operations	24		
Programming the Playing Order—Program Play	24		
Playing at Random—Random Play	25		
Playing Repeatedly	26		
Prohibiting Disc Ejection—Child Lock	26		
On-Screen Disc Operations	27		
On-screen Bar Information	27		
Operations Using the On-screen Bar	28		
Operations on the CONTROL Screen	30		

Introduction

Precautions

Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup in the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

Moisture condensation

Moisture may condense on the lenses inside the System in the following cases:

- After starting to heat the room
- In a damp room
- If the System is brought directly from a cold to a warm place.

Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

Internal heat

- A cooling fan is mounted on the rear panel to prevent heat buildup inside the unit.



For safety, observe the following carefully:

- Make sure there is good ventilation around the unit. Poor ventilation could overheat and damage the unit.
- DO NOT block the cooling fan and the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

Others

- Should any metallic object or liquid fall into the System, unplug the AC power cord and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC power cord from the wall outlet.

If anything goes wrong, unplug the AC power cord and consult your dealer.

How to Read This Manual

To make the explanations in this manual as simple and easy-to-understand as possible, we have adapted the following methods:

- Button and control operations are explained as listed in the table below. In this manual, the operations using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.
- **Some related tips and notes are explained later in the sections “Learning More about This System” and “Troubleshooting,” but not in the same section explaining the operations.** If you want to know more about the functions, or if you have a doubt about the function, go to these sections and you will find your answer there.


	Indicates that you press the button briefly .
	Indicates that you press the button briefly and repeatedly until an option you want is selected.
	Indicates that you press one of the buttons.
	Indicates that you press and hold the button for a specified period. <ul style="list-style-type: none"> • The number inside the arrow indicates the period of press (in this example, 2 seconds). • If no number is inside the arrow, press and hold until the entire procedure is complete or until you get a result you want.
	Indicates that you turn the control toward the specified direction(s).
	Indicates that this operation is only possible using the remote control.
	Indicates that this operation is only possible using the buttons and controls on the main unit.

Getting Started


Step 1: Unpack the package and check the accessories.



Step 2: Prepare the remote control.

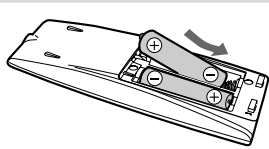

Step 3: Hook up the components such as AM/FM antennas, speakers, etc. (see pages 4 to 7).

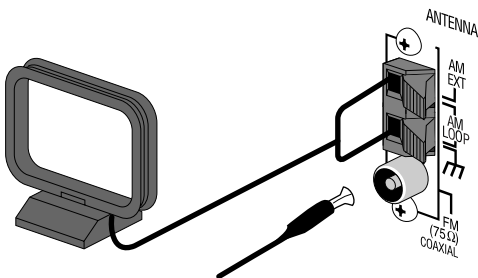

Finally plug the AC power cord.
Now you can operate the System.

Step 1: Unpack

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.


- FM antenna (1)
- AM loop antenna (1)
- Remote control (1)
- Composite video cord (1)
- Batteries (2)
- AC plug adaptor (1)

If any item is missing, consult your dealer immediately.


Step 2: Prepare the Remote Control

Insert the batteries into the remote control by matching the polarity (+ and -) correctly.


1

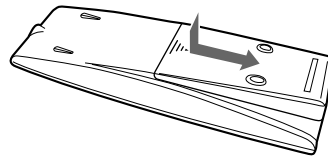

2

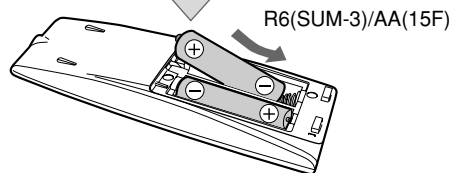

3

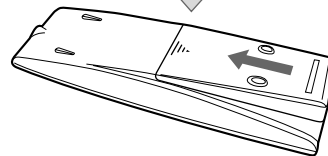

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.



Step 3: Hook Up

If you need more detailed information, see page 6.

Illustrations of the input/output terminals below are typical examples.
 When you connect other components, refer also to their manuals since the terminal names actually printed on the rear may vary.


Turn the power off to all components before connections.

AM loop antenna (supplied)
 Turn it until the best reception is obtained.

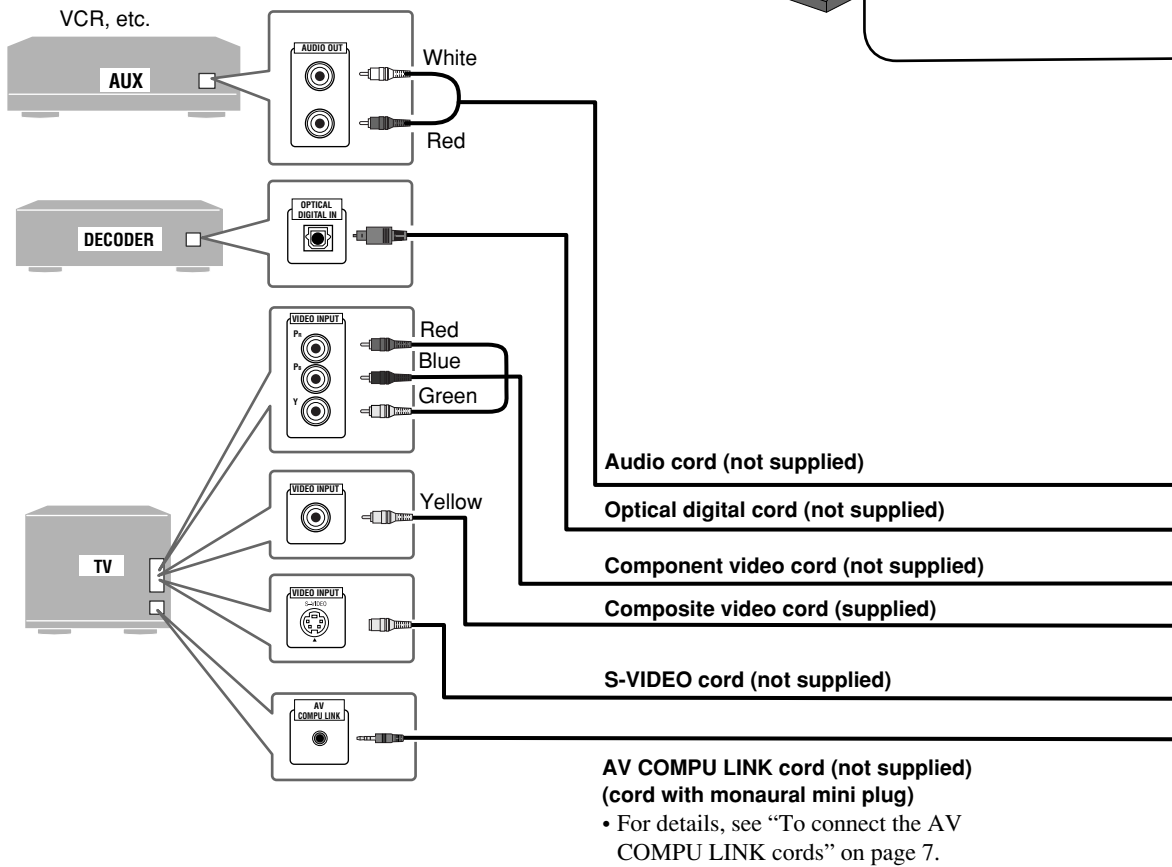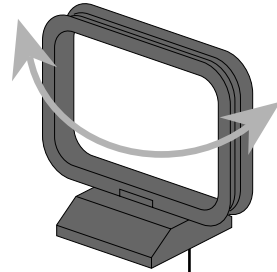


To a wall outlet
Plug the AC power cord only after all connections are complete.
 • If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.

For better FM/AM reception

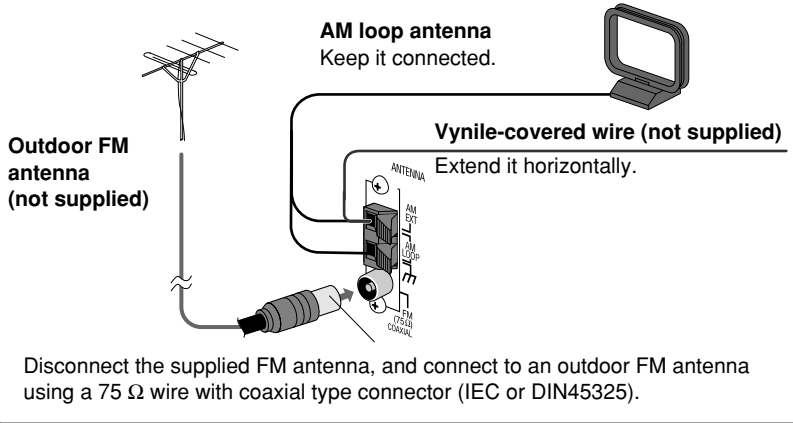


FM antenna (supplied)

Extend it so that you can obtain the best reception.

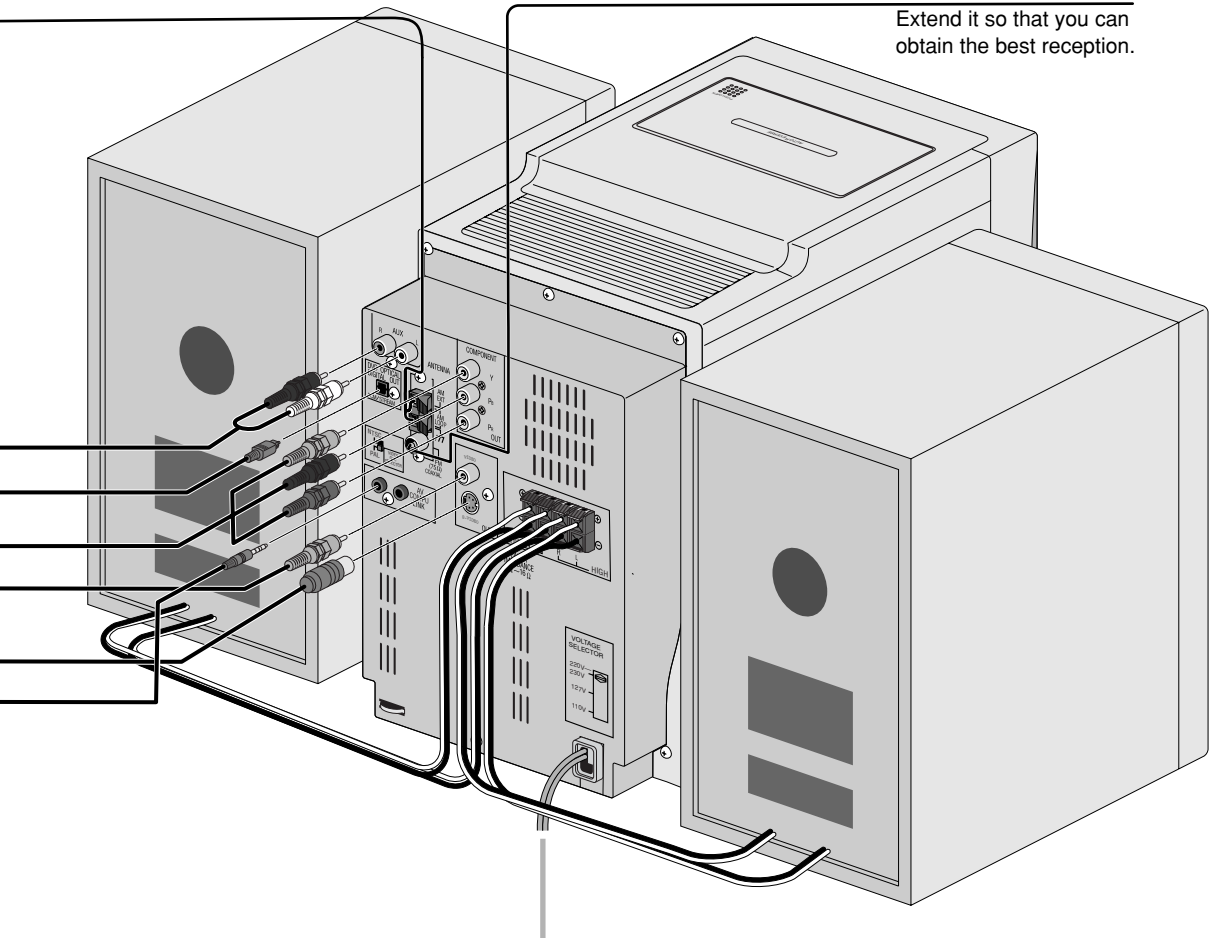


To assemble and connect the AM loop antenna

To assemble the AM loop antenna

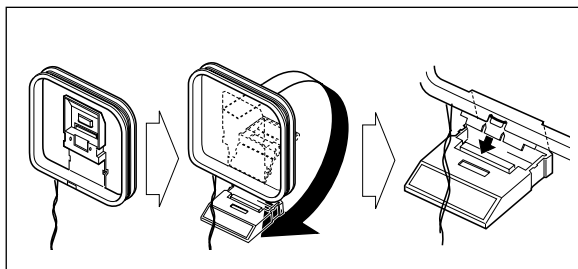


To connect the AM loop antenna

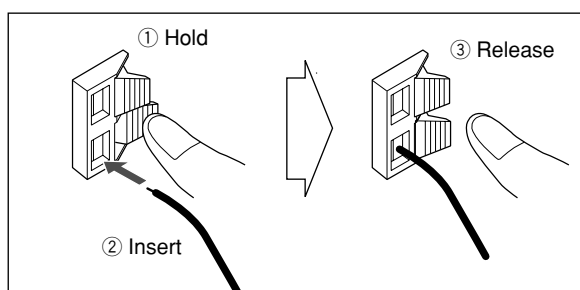

- If the AM loop antenna wire or speaker cords are covered with vinyl, remove the vinyl to expose the tip of the antenna by twisting the vinyl.
- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

To connect the speaker cords

Connect the right speaker to the RIGHT terminals, and the left speaker to the LEFT terminals.

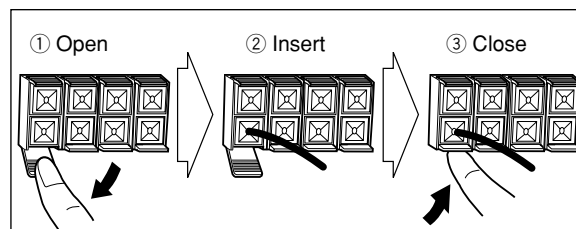

When connecting the speaker cords, match the polarity of the speaker terminals:

- For LOW terminals: Red cord to (+) and black cord to (–).
- For HIGH terminals: Grey cord to (+) and blue cord to (–)

The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, it may cause color distortions. So, pay attention to the following when installing the speakers.

– When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers.

Then wait at least 30 minutes before turning on the TV's main power switch again.

Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.




- DO NOT connect more than one speaker to each terminal.
- DO NOT allow the conductor of the speaker cords to be in touch with the metallic parts of the System.

To connect the AV COMPU LINK cords

This system allows you to use JVC's TV with simple operations; by starting playing back a disc, the TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

To use AV COMPU LINK, you need to connect the System and the TV by using a cord with monaural mini-plugs (not supplied) in addition to the video input/output connection through the COMPONENT jacks, S-VIDEO jack or VIDEO (composite) jack on the rear.

To connect digital audio

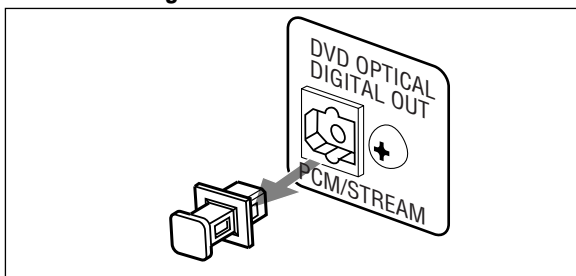

Before connecting optical digital cord, remove the protective cap from the DVD OPTICAL DIGITAL OUT terminal.


To set the video output selector

You can select the video output to match it to the color system of your TV.

	<p>NTSC: For an NTSC TV or Multi-color system TV.</p> <p>PAL: For a PAL TV or Multi-color system TV.</p>
--	--

Adjusting the Voltage Selector

Use a screwdriver to slide the voltage selector so that the voltage marker is pointing at the same voltage as where you are plugging in the unit. (See also the back cover page.)

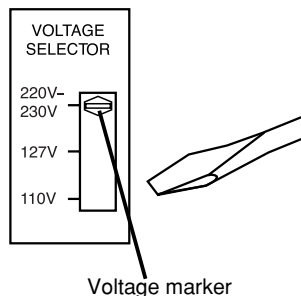


DO NOT plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

Changing the Scanning Mode



This System supports progressive scanning.

If you connect a progressive TV through the COMPONENT jacks, you can enjoy a high quality picture from the built-in DVD player by selecting "PROGRE."

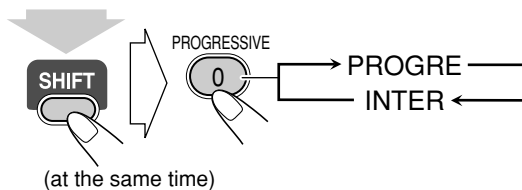










PROGRE Progressive scanning. For a progressive TV.

INTER Interlaced scanning. For a conventional TV.

Before Operating the System

Playable Disc Types

This unit has been designed to play back the following discs:

Disc Type	Mark (Logo)	Video Format	Region Code* Number
DVD Video	 	NTSC or PAL	3 or ALL
DVD Audio	 		
Video CD (VCD)	 		
Super Video CD (SVCD)	 		
Audio CD		—	—
CD-R	The System can play back CD-R or CD-RW recorded in the Audio CD, Video CD, SVCD, MP3, WMA, and JPEG formats.		
CD-RW			
DVD-R	The System can play back DVD-R or DVD-RW recorded in the video format.		
DVD-RW			

In addition to the above discs, this system can play back audio data recorded on CD Text, CD-G (CD Graphics), and CD-Extra.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD+R, DVD+RW, CD-I (CD-I Ready), CD-ROM, Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- In this manual, “file” and “track” are interchangeably used for MP3/WMA/JPEG operations.

* Note on Region Code

DVD players and DVDs have their own Region Code numbers. This System can play back only DVDs recorded with the NTSC or PAL color system whose Region Code numbers including “3.”

EX.:



If a DVD with the improper Region Code numbers is loaded, “RGN ERR (REGION CODE ERROR)” appears on the display and playback will not start.

DVD Video—digital audio formats

The System can play back the following digital audio formats.

- **Linear PCM:** Uncompressed digital audio, the same format used for CDs and most studio masters.
- **Dolby Digital:** Compressed digital audio, developed by Dolby Laboratories, which enables multi-channel encode to create the realistic surround sound.
- **DTS (Digital Theater Systems):** Compressed digital audio, developed by Digital Theater Systems, Inc., which enables multi-channel like Dolby Digital. As the compression ratio is lower than for Dolby Digital, it provides wider dynamic range and better separation.

When playing a multi-channel encoded DVD, the System properly converts these multi-channel signals into 2 channels, and emits the downmixed sound from the speakers.

- **To enjoy the powerful sound of these multi-channel encoded DVDs,** connect a proper decoder or an amplifier with a proper built-in decoder to the digital output terminal on the rear.

IMPORTANT: Before playing a disc, make sure of the following...


- Turn on the TV and select an appropriate input mode on the TV to view the pictures or on-screen displays on the TV screen.
- For disc playback, you can change the initial setting to your preference. See “Setup Menu Operations” on page 37.

If “⊗” appears on the TV screen when you press a button, the disc cannot accept the operation you have tried to do, or data required for that operation is not recorded on the disc.

- Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS2.0+DIGITAL OUT” are registered trademarks of Digital Theater Systems, Inc.













Display Indicators

The indications on the display teach you a lot of things while you are operating the System. Before operating the System, be familiar with when and how the indicator illuminates on the display.

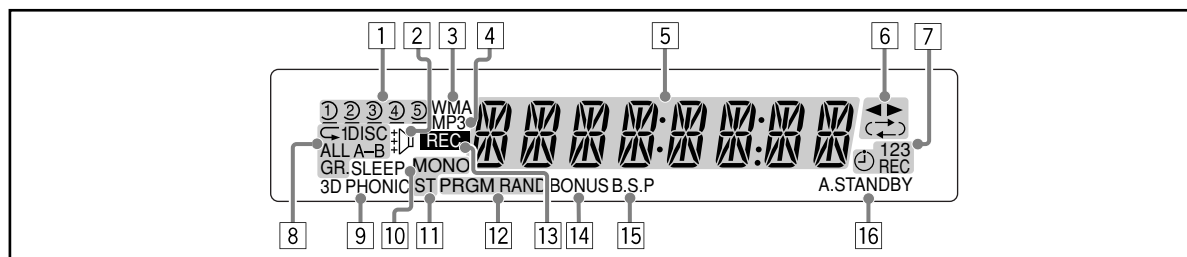


- 1 Disc tray indicators
 - 1-5: Disc tray number indicators.
 - \odot (tray indicator):
 - Lights when the disc is detected.
 - Flashes while playing back a disc.
 - Goes off when there is no disc in the tray.
 - \ominus (disc indicator): lights below when the tray indicator indicates the current selected disc.
- 2 RHYTHM AX indicator
 - Lights when RHYTHM AX is activated (see page 17).
- 3 WMA indicator
 - Lights when the current track is recorded in WMA format.
- 4 MP3 indicator
 - Lights when the current track is recorded in MP3 format.
- 5 Main display
 - While listening to radio: band (or preset number) and station frequency appear.
 - While selecting tape: “TAPE” appears.
 - While selecting “AUX”: “AUX” appears.
 - While playing a disc: see “Indications on the main display while operating a disc” on page 11.
- 6 Tape operation indicators
 - $\blacktriangleleft \blacktriangleright$ (tape direction):
 - Lights to indicate the current tape running direction.
 - Flashes slowly during playback and recording.
 - Flashes quickly while rewinding a tape.
 - \curvearrowright (Reverse mode):
 - \curvearrowright : tape play continues endlessly.
 - \curvearrowright : tape automatically reverses once.
 - \curvearrowright : tape play stops at the end of one side.
- 7 Timer indicators
 - \odot : lights when Daily Timer or Recording Timer stands by; flashes while working.
 - 1/2/3: lights up when a Daily Timer (1, 2, or 3) stands by; flashes while setting or working.
 - REC: lights when the Recording Timer stands by; flashes while setting or working.
- 8 Repeat mode indicators
 - \curvearrowright : lights when Repeat mode is activated.
 - 1 DISC ALL A-B GR.:
 - 1: lights when One Track Repeat is activated.
 - 1DISC: lights when One Disc Repeat is activated.
 - ALL: lights when All Disc Repeat is activated.
 - A-B: lights when A-B Repeat is activated.
 - GR.: lights when Group Repeat is activated.
- 9 3D PHONIC indicator
 - Lights when 3D PHONIC is activated (see page 15).
- 10 SLEEP indicator
 - Lights when the Sleep Timer is activated.
- 11 FM reception indicators
 - MONO: lights when FM reception mode is monaural.
 - ST (stereo): lights while an FM stereo station with sufficient signal strength is tuned in.
- 12 Disc operation indicators
 - PRGM (program): lights when Program Play mode is activated.
 - RAND (random): lights when Random Play mode is activated
- 13 REC indicators
 - Lights while recording.
- 14 BONUS indicator
 - Lights when a DVD Audio with a bonus group is detected (see page 22).
- 15 B.S.P indicator
 - Lights when the current disc is DVD Audio with browsable still picture (see page 23).
- 16 A (auto) STANDBY indicator
 - Lights when Auto Standby is activated.
 - Flashes when disc playback stops with Auto Standby activated.

Indications on the main display while operating a disc

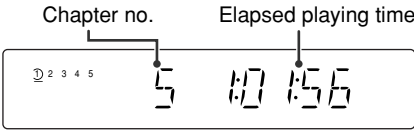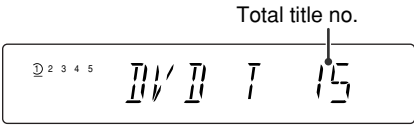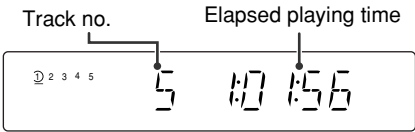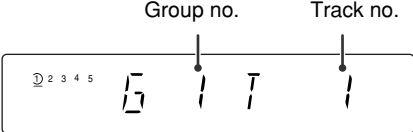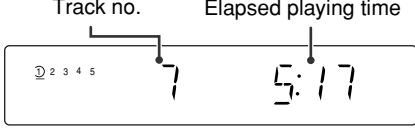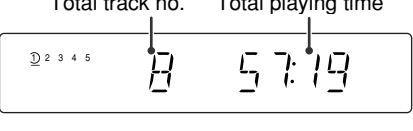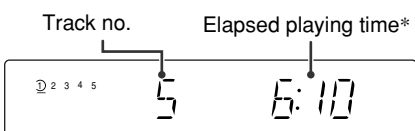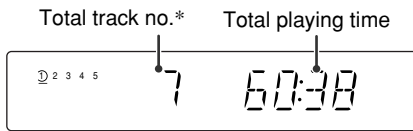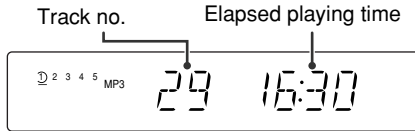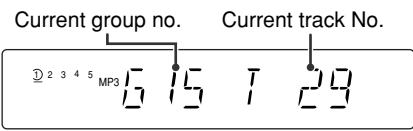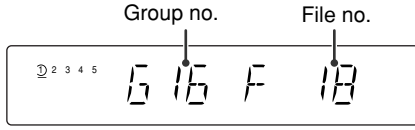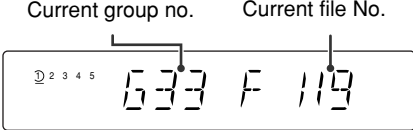While playing back a disc:	While disc play is stopped:
<ul style="list-style-type: none"> DVD Video:  <p>Chapter no. Elapsed playing time</p> <p>① 2 3 4 5 5 1:01:56</p> <ul style="list-style-type: none"> By pressing DISPLAY, you can show the current title and chapter numbers for a few seconds. 	<ul style="list-style-type: none"> DVD Video:  <p>Total title no.</p> <p>① 2 3 4 5 15</p>
<ul style="list-style-type: none"> DVD Audio:  <p>Track no. Elapsed playing time</p> <p>① 2 3 4 5 5 1:01:56</p> <ul style="list-style-type: none"> By pressing DISPLAY, you can show the current group and track numbers for a few seconds. 	<ul style="list-style-type: none"> DVD Audio:  <p>Group no. Track no.</p> <p>① 2 3 4 5 6 1 1</p>
<ul style="list-style-type: none"> Audio CD:  <p>Track no. Elapsed playing time</p> <p>① 2 3 4 5 7 5:17</p>	<ul style="list-style-type: none"> Audio CD:  <p>Total track no. Total playing time</p> <p>① 2 3 4 5 8 57:19</p>
<ul style="list-style-type: none"> SVCD/VCD:  <p>Track no. Elapsed playing time*</p> <p>① 2 3 4 5 5 6:10</p> <p>* "PBC" appears while playing a disc with PBC.</p>	<ul style="list-style-type: none"> SVCD/VCD:  <p>Total track no.* Total playing time</p> <p>① 2 3 4 5 7 60:38</p> <p>* Changes to "PBC" when stopping PBC playback.</p>
<ul style="list-style-type: none"> MP3/WMA:  <p>Track no. Elapsed playing time</p> <p>① 2 3 4 5 MP3 29 16:30</p> <ul style="list-style-type: none"> By pressing DISPLAY, you can show the current group and track numbers for a few seconds. 	<ul style="list-style-type: none"> MP3/WMA:  <p>Current group no. Current track No.</p> <p>① 2 3 4 5 MP3 6 15 1 29</p>
<ul style="list-style-type: none"> JPEG:  <p>Group no. File no.</p> <p>① 2 3 4 5 6 18 F 18</p>	<ul style="list-style-type: none"> JPEG:  <p>Current group no. Current file No.</p> <p>① 2 3 4 5 6 119 F 119</p>

* If Resume is turned "ON" (see page 40), "RESUME" appears when you stop playback (except for Audio CD and MP3/WMA/JPEG discs).


Daily Operations—Playback

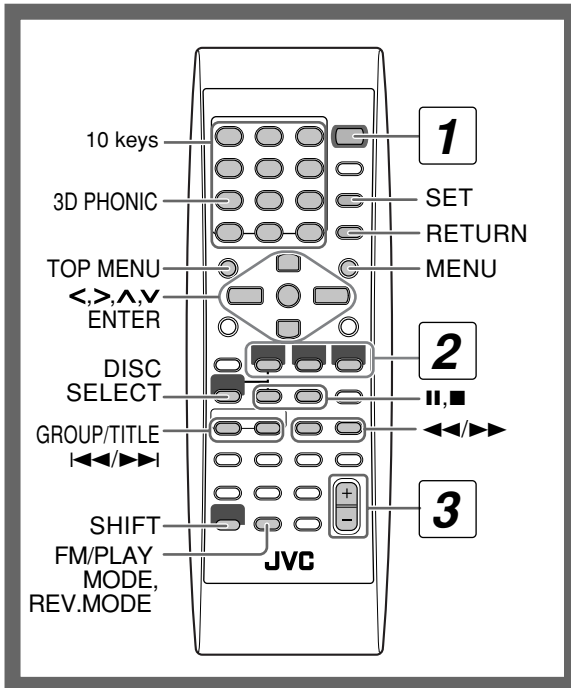

In this manual, the operation using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.

1 Turn on the power.

 The STANDBY/ON lamp on the main unit lights in green.

- Without pressing STANDBY/ON , the System turns on by pressing one of the source selecting buttons in the next step.

2 Select the source.

Playback automatically starts if the selected source is ready to start.

- If you press AUX, start playback source on the external component.

3 Adjust the volume.

4 Operate the target source as explained later.

To turn off (stand by) the unit

The STANDBY/ON lamp on the main unit lights in red.


- A small amount of power is always consumed even while on standby.

For private listening

Connect a pair of headphones to the PHONES jack on the main unit. The sound will no longer come out of the speakers. Be sure to turn down the volume before connecting or putting the headphones.

- Disconnecting the headphones will activate the speakers again.

DO NOT turn off (stand by) the System with the volume set to an extremely high level; Otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the System or start playback.


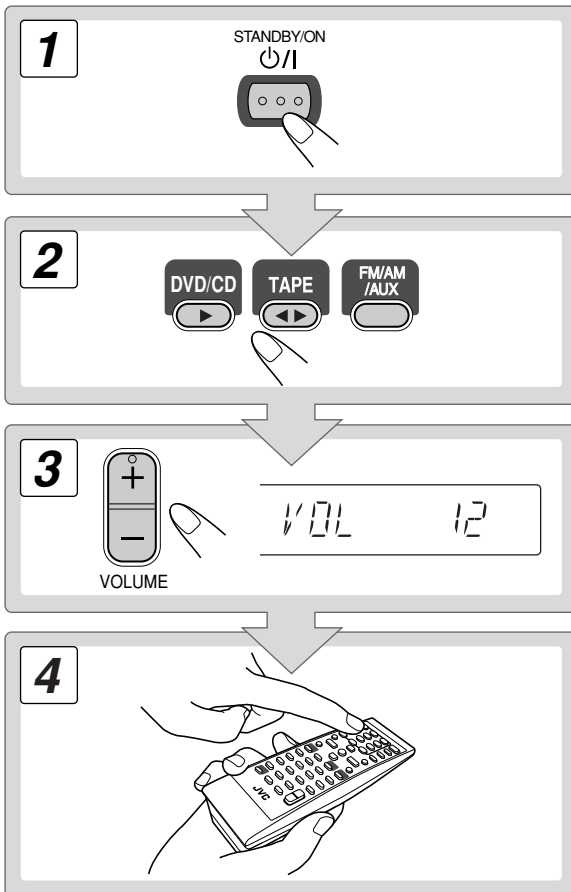


Listening to the Radio

To select the AM tuner interval spacing

Some countries space AM stations 9 kHz spacing, and other countries use 10 kHz spacing.

You can change the AM tuner intervals while the System is on stand by and the last selected source is AM.

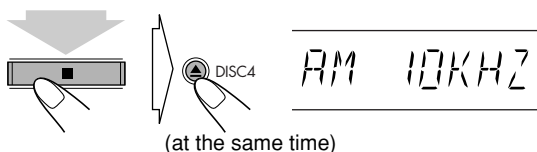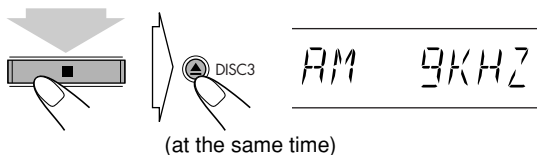

To select the band (FM or AM)



To tune in to a station

While FM or AM is selected...

Remote control:	Main unit:

Frequency starts changing on the display.

When a station (frequency) with sufficient signal strength is tuned in, the frequency stops changing.

- When you repeatedly press the button, the frequency changes step by step.

To stop searching manually, press either button.

If the received FM station is hard to listen



The MONO indicator lights on the display. Reception will improve though stereo effect is lost—Monaural reception mode.

To restore the stereo effect, press the button again (the MONO indicator goes off).

To preset the stations



You can preset 30 FM and 15 AM stations.

1 Tune in to a station you want to preset.


- You can also store the monaural reception mode for FM preset stations if selected.

2 Activate the preset number entry mode.



- Finish the following process while the indication on the display is flashing.

3 Select a preset number for the station you store.

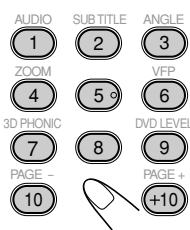

Examples:

 
To select preset number 5, press 5.

To select preset number 15, press +10, then 5.

To select preset number 30, press +10, +10, then 10.




4 Store the station.




To tune in to a preset station



1 Select the band (FM or AM).

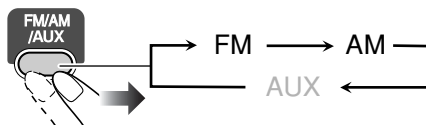

2 Select a preset number for the station you store.

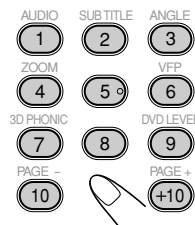

- You can also use the ◀▶ button to select a preset station.


Playing Back a Disc

Before operating a disc, be familiar how a disc is recorded.

- DVD Video comprises of “Titles” which includes “Chapters,” DVD Audio/MP3/WMA comprise of “Groups” which include “Tracks,” and CD/SVCD/VCD comprise of only “Tracks.”
- For JPEG playback, see “Operations on the CONTROL Screen” on page 30.

To insert a disc

You can insert a disc while playing another source.

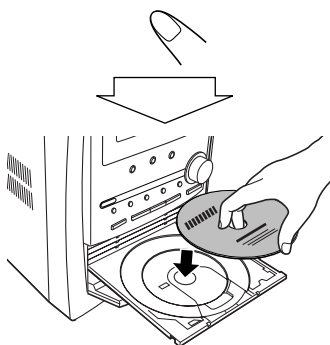

To close the disc tray, press the same ▲ again.

- When current selected disc tray open, you use DVD/CD ► button to close disc tray and start playback (depending on how the disc is programmed internally).
- When you press ▲ for the next tray you want to place another disc onto, the first disc tray automatically closes and then next tray comes out.

To start:	To pause:	To stop:
	To release, press DVD/CD ►.	

- **While playing DVD/SVCD/VCD:** This System can store the stop point, and when you start playback again by pressing DVD/CD ►, it starts from the position where you have stopped—Resume Play. (“RESUME” appears on the display when you stop playback.)

To stop completely while Resume is activated, press ■ twice. (To cancel Resume, see “RESUME” on page 40.)

- When operating the System, the on-screen guide icon (see the following table) appears on the TV.
To deactivate the on-screen guide icons, see “ON SCREEN GUIDE” on page 40.

On-screen guide icons

- During DVD Video playback, the following icons may appear on the TV screen:

At the beginning of a scene containing multi-angle views.


At the beginning of a scene containing multi-audio sounds.

At the beginning of a scene containing multi-subtitles.

- The following icons will be also shown on the TV screen to indicate your current operation.



To select a disc

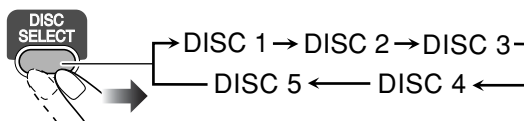


- When current source is not disc, press DVD/CD ► to select the disc player as the source during “PLAY” flashing on the display.

To select a title/group



While playing...

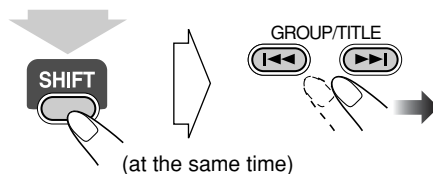

- Group name appears for MP3/WMA discs.

To select a chapter/track

While playing...



- First time you press ◀◀, you can go back to the beginning of the current chapter/track.

To locate a particular portion

While playing a disc except MP3/WMA...




- No sound comes out while searching on DVD Video/SVCD/VCD.

To return to normal playback, press DVD/CD ►.

To locate an item directly

You can select a title/chapter/track directly and start playback.

- For DVD Video, you can select a **title before starting playback**, while you can select a **chapter after starting playback**.

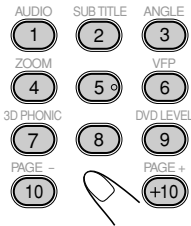

Examples:

 
- To select number 5, press 5.
- To select number 15, press +10, then 5.
- To select number 30, press +10, +10, then 10.

To play back using the disc menu


You can operate a disc—DVD and SVCD/VCD with Playback Control (PBC)—using the disc menu shown on the TV screen.

■ For DVD Video/DVD Audio:

1 Show the disc menu.




2 Select an item on the disc menu.

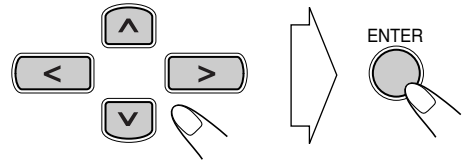

- With some discs, you can also select items by entering the number using the 10 keys.

To use 3D Phonic

While playing...

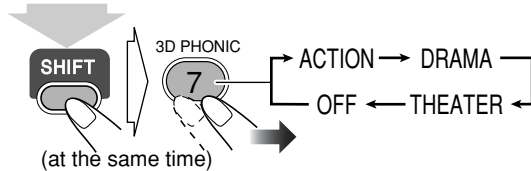


On the TV screen

ACTION	Suitable for action movies and sports programs.
DRAMA	Creates natural and warm sound. Enjoy movies in a relaxed mood.
THEATER	Enjoy sound effects like in a major theater.

■ For SVCD/VCD with PBC:

While playing a disc with PBC, "PBC" appears on the display.

When disc menu appears on the TV screen, select an item on the menu. Playback of the selected item starts.

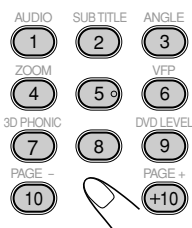


Examples:

To select number 5, press 5.


To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.


To move to the next or previous page of the current menu:

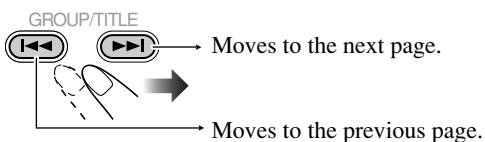

To return to the previous menu:

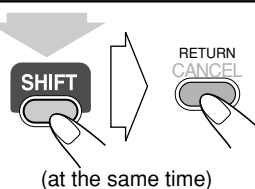

To cancel PBC

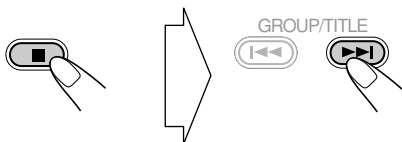


- You can also cancel PBC function by pressing the number button to select a track.

To reactivate PBC, press ■, then press I◀◀.

Playing Back a Tape


To insert a tape

You can play back type I tapes.

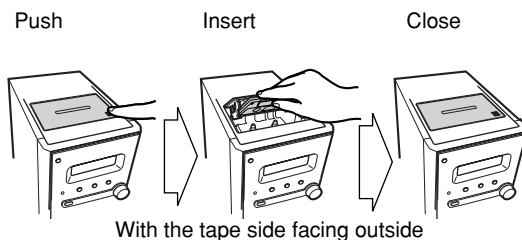


To start:	To stop:
To rewind tape:	
	Rewind the tape to the right.
	Rewind the tape to the left.

To change the tape running direction

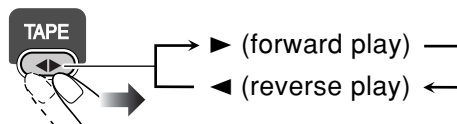


To reverse the tape automatically

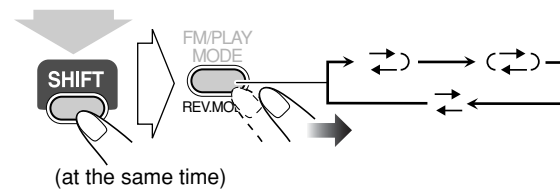


	Tape is played from the forward side to the reverse side. When the reverse side is played back, playback stops.
	Tape is automatically reversed, and playback repeats until you stop it.
	Tape will not be reversed. When the current side of the tape reaches its end, playback stops.

Daily Operations—Sound&Other Adjustments

Remote control

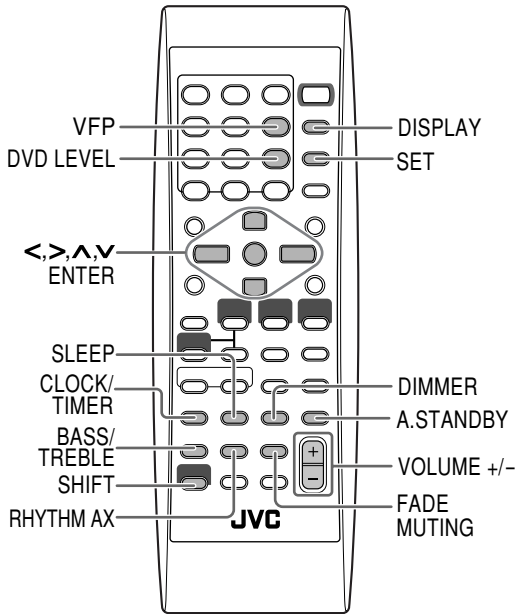


Main unit

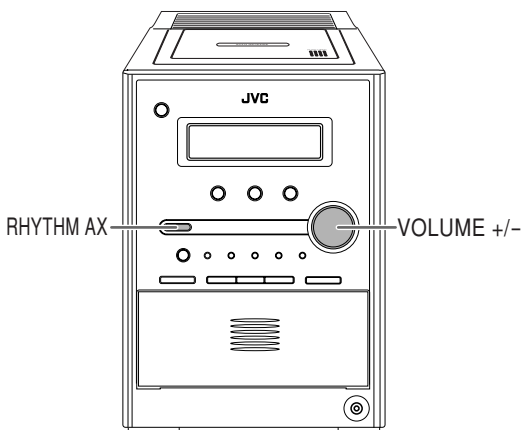

Adjusting the Volume

You can adjust the volume level from level 0 (VOL MIN) to level 50 (VOL MAX).

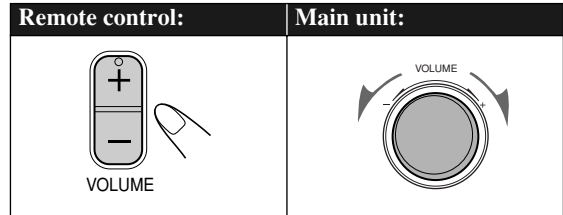

To drop the volume in a moment

 


To restore the volume, press again, or adjust the volume level.

Adjusting the Sound

To emphasize rhythm feeling—RHYTHM AX

This function emphasizes bass attack feeling.



To adjust the tone

You can adjust the bass and treble level from -5 to +5.

To adjust the bass




To adjust the treble



Presetting Automatic DVD Sound Increase

Level

The DVD sound is sometimes recorded at a lower level than for other discs and sources. You can set the increase level for the currently loaded DVD, so you do not have to adjust the volume every time you change the source.

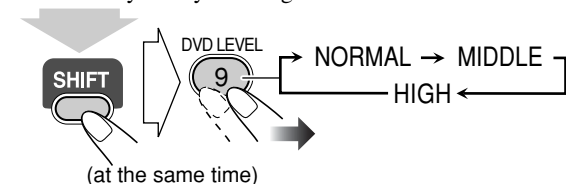


NORMAL	Original recording level.
MIDDLE	Output level is increased (less than "HIGH").
HIGH	Output level is increased (more than "MIDDLE").

- Once the current DVD is ejected, this setting is canceled and set automatically to "NORMAL."

Adjusting the Audio Input Level

If the sound from the component connected to the AUX jacks is too loud or is not loud enough when changing from another source to "AUX," you can change the audio input level through the AUX jacks (without changing the volume level).


While the "AUX" is selected as a source...

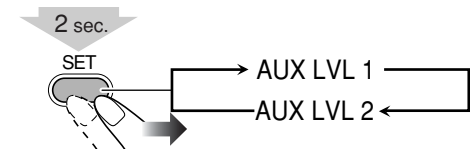

AUX LVL 1	Select this when the sound is too loud (initial setting).
AUX LVL 2	Select this when the sound is not loud enough.

Changing the Display Brightness

 You can dim the display window.




DIM 1	Dims the display.
DIM 2	Erases the display illumination.
AUTO DIM	Erases the display illumination a few seconds after disc playback starts. <ul style="list-style-type: none"> • The display illuminates when playback stops.

Changing the Picture Tone


While showing a playback picture on the TV screen, you can select the preset picture tone, or adjust it and store your own likeliness.

To select a preset picture tone

1 Activate VFP.

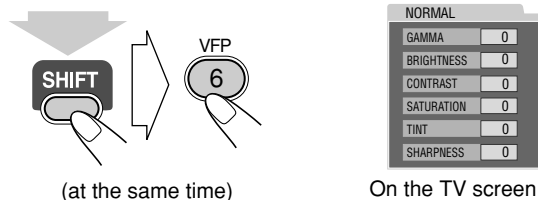

2 Select a preset picture tone.

 


NORMAL	Normally select this.
CINEMA	Suitable for a movie source.
USER1/USER2	You can adjust parameters and can store the settings (see page 19).

To adjust the picture tone

1 Select "USER1" or "USER2."


- Follow steps **1** and **2** explained on page 18.

2 Select a parameter you want to adjust.

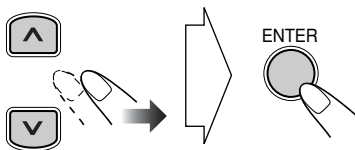

GAMMA	Adjust if the neutral color is bright or dark (-3 to +3).
BRIGHTNESS	Adjust if the entire picture is bright or dark (-8 to +8).
CONTRAST	Adjust if the far and near positions are unnatural (-7 to +7).
SATURATION	Adjust if the picture is whitish or blackish (-7 to +7).
TINT	Adjust if the human skin color is unnatural (-7 to +7).
SHARPNESS	Adjust if the picture is indistinct (-8 to +8).

3 Adjust the parameter.

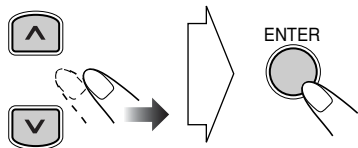

4 Repeat steps 2 to 3 to adjust other parameters.

 
To erase the screen, press VFP again while holding SHIFT.

Setting the Clock

Without setting the built-in clock, you cannot use Daily Timers (see page 35) and Sleep Timer.


- To exit from the clock setting, press CLOCK/TIMER as required.
- To go back to the previous step, press CANCEL.

1 Activate the clock setting mode.




- If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected.

2 Adjust the hour.

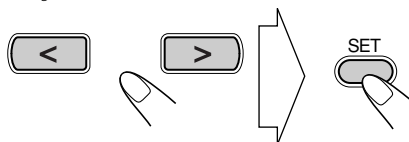


3 Adjust the minute.

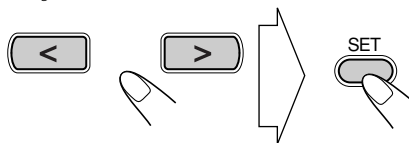

Now the built-in clock starts working.

 To check the current clock time during play




- While playing a DVD and MP3/WMA, you cannot check the current clock time (see page 11).

Turning Off the Power

Automatically

 To turn off the unit after playback is over—Auto Standby




When Auto Standby is in use, the A.STANDBY indicator lights on the display.

When disc or tape play stops, the A.STANDBY indicator starts flashing. If no operation is done for about 3 minutes while the indicator is flashing, the System turns off (stands by) automatically.

- Auto Standby does not work while you are listening to radio (FM/AM) and the external component (AUX).


To turn off the unit after a certain period of time—Sleep Timer

 1 Specify the time (in minutes).



2 Wait until the set time goes off.

 
To check the time remaining until the shut-off time



- If you press the button repeatedly, you can change the shut-off time.

Unique DVD/VCD Operations

Remote control

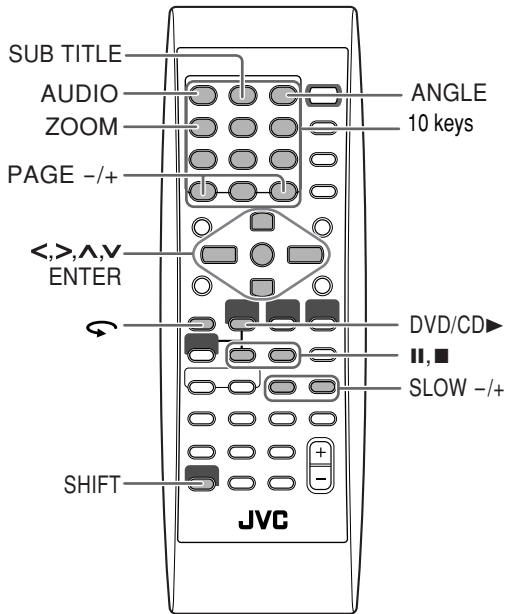


Selecting the Sound Track




For DVD Video: While playing back a chapter containing audio languages, you can select the language to listen to.
For DVD Audio: While playing back a track containing audio channels, you can select the audio channel to listen to.
For SVCD/VCD: When playing back a track, you can select the audio channel to play.

- You can also select the audio track using the on-screen bar (see page 27).

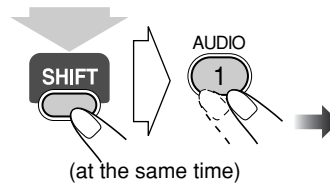


While playing a DVD Video...

Ex.:

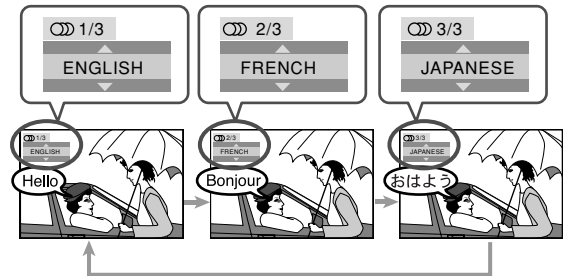


While playing a DVD Audio...

 Ex.:



While playing an SVCD or VCD...

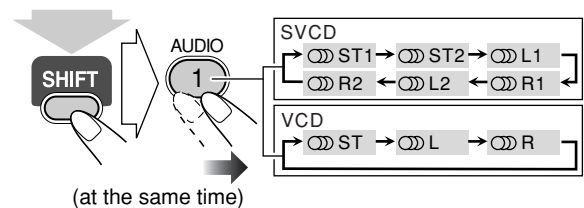

ST1/ST2/ST To listen to normal stereo (2 channel) playback.

L1/L2/L To listen to the left audio channel.

R1/R2/R To listen to the right audio channel.

- SVCD can have 4 audio channels. Karaoke SVCD usually uses these 4 channels to record two 2-channel recordings (ST1/ST2).

Selecting the Subtitle Language


For DVD Video: While playing back a chapter containing subtitles in different languages, you can select the subtitle language to display on the TV screen.

For SVCD: While playing, you can select the subtitles even if no subtitles are recorded on the disc.


- You can also select the subtitle language using the on-screen bar (see page 27).

While playing a DVD Video...


1 Display the subtitle selection window.

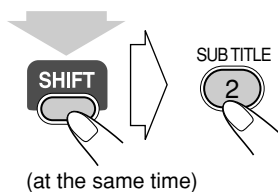



2 Select the subtitle language.

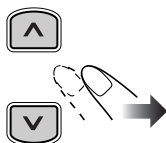

Ex.:

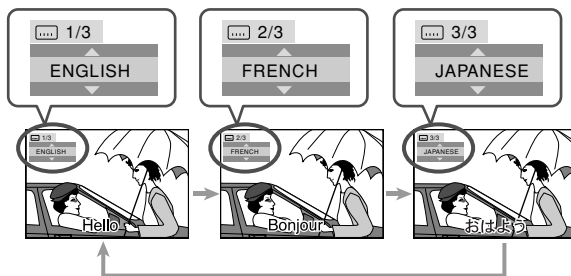

While playing an SVCD...

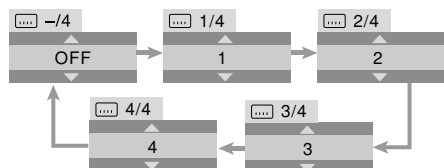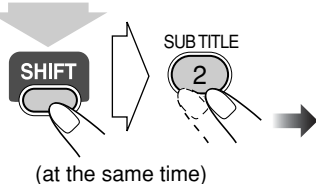


Selecting the View Angle

While playing back a chapter (of DVD Video) containing multi-view angles, you can view the same scene from different angles.


- You can also select the multi-view angles using the on-screen bar (see page 27).

While playing...

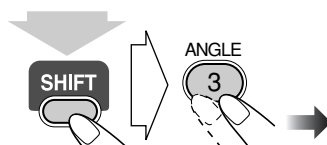

(at the same time)

Ex.:

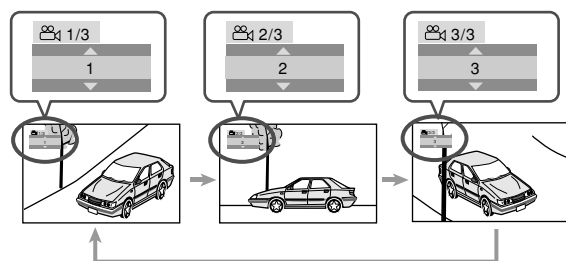

Playing Back a Bonus Group


Some DVD Audios have a special group called “bonus group” whose contents are not open to the public.

- To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. The way of getting the key number depends on the disc.

1 Select the bonus group.

- The bonus group is usually recorded as the last group (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).
- For how to select the group, see “To select a title/group” on page 14.

2 Enter the key number.

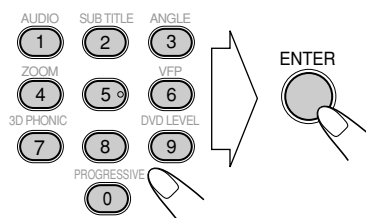


3 Follow the interactive instructions shown on the TV screen.

To cancel the key number entry, press ■.

Selecting Browsable Still Pictures



While playing back a track (of DVD Audio) linked to browsable still pictures (BSP), you can select the still picture (turn the page) to be shown on the TV screen.

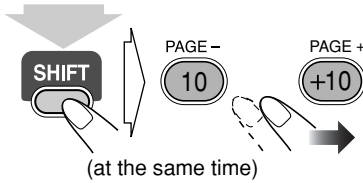- If a track is linked to browsable still pictures (BSP), they are usually shown in turn automatically during playback.
- You can also select the page using the on-screen bar (see page 27).




Special Effect Playback

Still picture playback

To start still picture playback:	To resume normal playback:
While playing... 	

Frame-by-frame playback

 1 While playing...




2 Advance the still picture frame by frame.





To resume normal playback, press DVD/CD ▶.

Slow-motion playback

 1 While playing...



2 Select slow motion speed.

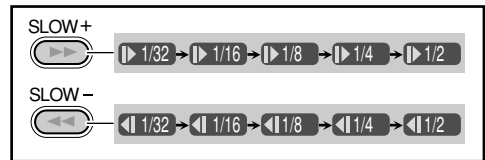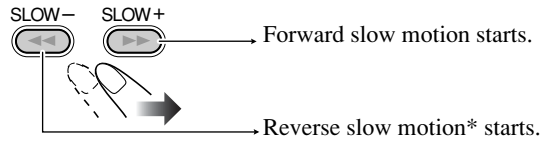


*Not available for SVCD/VCD.

To resume normal playback, press DVD/CD ▶.



To replay the previous scenes (One touch replay function)

 - This function is only used while playing DVD Video.




Zoom

1 While playing back...

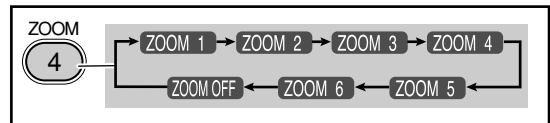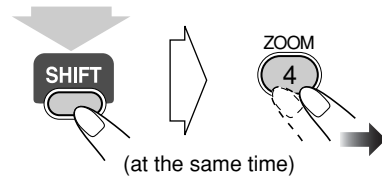

As the number increases, magnification also increases.


2 Move the zoomed-in position.

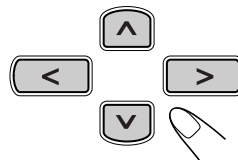


To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

Advanced Disc Operations

Remote control

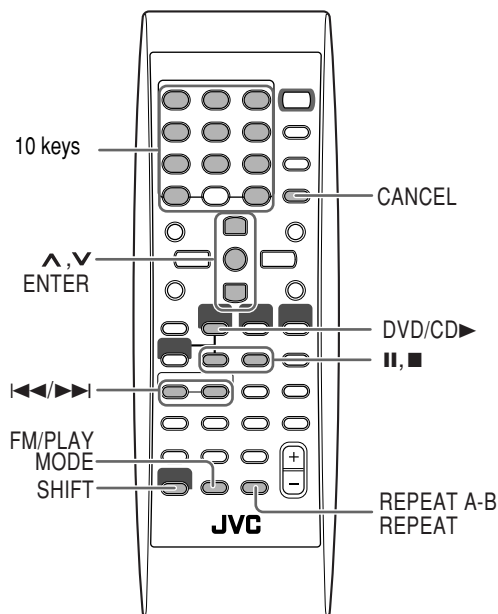

Main unit


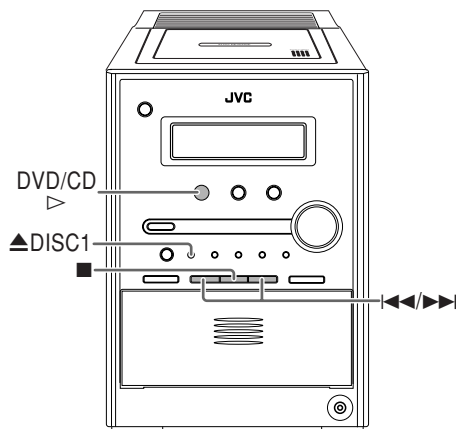


Programming the Playing Order


Program Play

You can arrange the playing order of the chapters or tracks (up to 99) before you start playback.

 1 Before starting playback, activate Program Play.

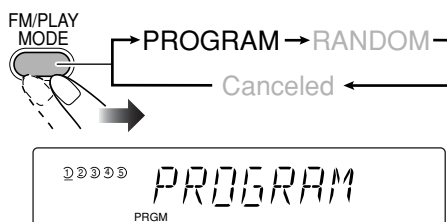

On the display

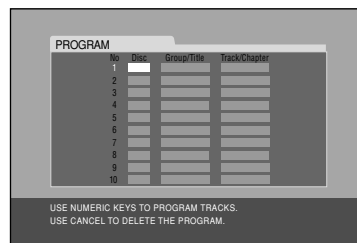

On the TV screen

2 Select chapters or tracks you want for Program Play.

• For DVD/MP3/WMA:

- ① Select a disc number.
- ② Select a title or group number.
- ③ Select a chapter or track number.


• For SVCD/VCD/CD:

- ① Select a disc number.
- ② Select tracks.

• If the disc is not in current tray, the System may prompt for the group/title number entry as well, however, during playback, the System will ignore these entries.

• You can use ENTER button to skip the group/title number entry.

To enter the numbers:

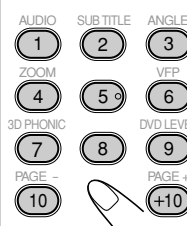

Examples:

To enter number 5, press 5.

To enter number 15, press +10, then 5.

To enter number 30, press +10, +10, then 10.

3 Repeat the above step 2.

4 Start playback.



Playback starts in the order you have programmed.

To skip a step:	To pause:	To stop:
<p>To release, press DVD/CD ►.</p>		

To check the programmed contents

Before or after playback...



In the reverse order.



In the programmed order.

To modify the program

Before or after playback...


To erase the last step:	To erase the entire program:

To add steps in the program:

Repeat steps 2 and 3 on page 24.

To exit from Program Play

Before or after playback...

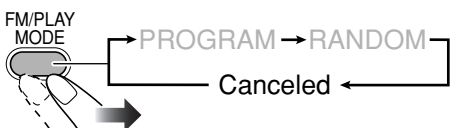


Playing at Random—Random Play

You can play the chapters or tracks of all loaded discs at random.

- Random Play cannot be used for some DVDs.

1 Before starting playback, activate Random Play.

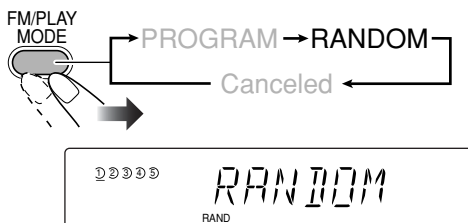

2 Start playback.




Playback starts in random order. Random Play ends when all the tracks are played once (when Repeat Play is not activated).

To skip a chapter/track:	To pause:	To stop:
<p>To skip to the beginning of the current track, press ◀◀.</p>	<p>To release, press DVD/CD ►.</p>	

- During Random Play, you cannot select disc by using DISC SELECT button.

To exit from Random Play

Before or after playback...

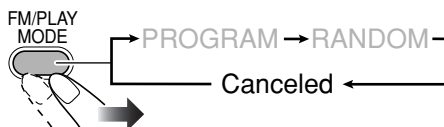

Playing Repeatedly

 
• You can also select the repeat mode using the on-screen bar (see page 28).

Repeat Play


You can repeat playback.

• For DVD Video:

While playing...




Before starting playback...

 


• For DVD Audio:

 While playing or before playback...




• For MP3/WMA:

 While playing or before playback...




• For CD/SVCD/VCD:

 While playing (without PBC for SVCD/VCD) or before playback...




 While playing (with PBC for SVCD/VCD) ...




• For Program Play:



 

While playing or before playback...

 

• For Random Play:

While playing or before playback...




 ALL	Repeats all discs in all tray or all programmed tracks.
 1	Repeats the current chapter/track.
 GR.	Repeats the current title/group.
 1DISC	Repeats the current disc.
Canceled	Cancels Repeat Play mode.


A-B Repeat

You can repeat playback of a desired portion by specifying the beginning (point A) and the ending (point B).

 
- A-B Repeat cannot be used for MP3/WMA and for some DVDs.
- A-B Repeat can be used within the same title while playing a DVD Video, and within the same track for the other discs.


 
1 While playing (without PBC for SVCD/VCD), select the start point (A).

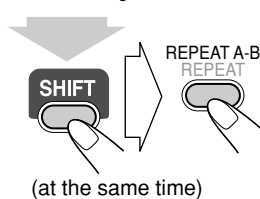

- **A-** lights on the display.
-  **A-** appears on the TV screen if the TV is turned on.

2 Select the end point (B).

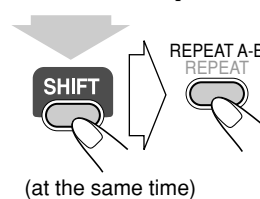

- **A-** changes to  **A-B**.
-  **A-B** appears on the TV screen.
- You can search for the end point using the **▶▶** button.


To cancel A-B Repeat, press REPEAT A-B again while holding SHIFT.

Prohibiting Disc Ejection—Child Lock

You can lock the disc trays so that no one can eject the loaded disc.

- This is possible while the System is on standby.


While the disc trays are closed...

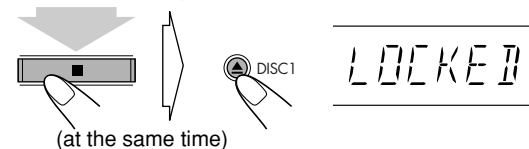

To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.


On-Screen Disc Operations

Remote control

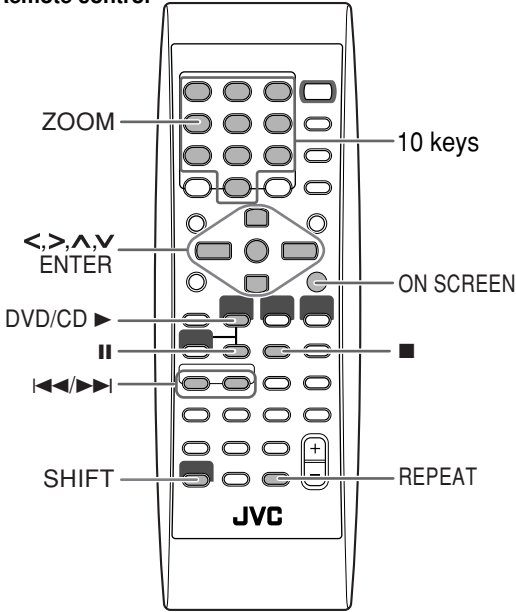


On-screen bars

 
DVD Video




DVD Audio

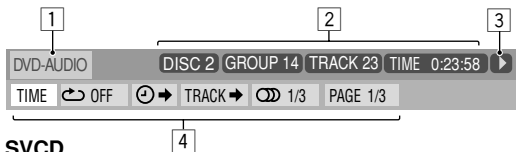


SVCD

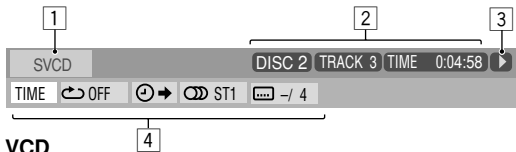

VCD

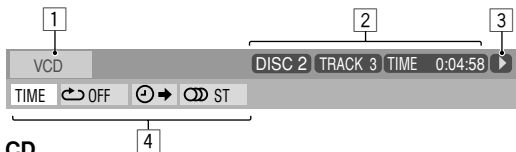

CD

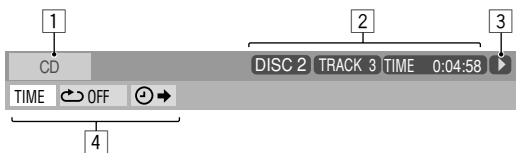

On-screen Bar Information

You can check the disc information (except for MP3/WMA/JPEG disc) and use some functions through the on-screen bar.

1 Disc type

2 Playback information

Indication	Meanings
Mbps	Current transfer rate (Megabits per second)
DISC 2	Current disc
TITLE 2	Current title
CHAP 3	Current chapter
GROUP 1	Current group
TRACK 14	Current track
TOTAL 1:25:58	Time indications

3 Operation modes

Indication	Meanings
▶	Playback
▶▶ / ◀◀	Forward/Reverse search
▶▶ / ◀◀	Forward/Reverse slow-motion
⏸	Pause
■	Stop

4 Function icons (on the pull-down menu)


Indication	Meanings
TIME	Select to change the time indication.
↺ OFF	Select to repeat playback.
⌚	Select for time search.
CHAP. →	Select for chapter search.
TRACK →	Select for track search.
🗣 1/3	Select to change the audio language or channel (see also page 21).
📄 1/3	Select to change subtitle language (see also page 22).
👁 1/3	Select to change the view angle (see also page 22).
PAGE 1/5	Select to change the page (see also page 23).

Operations Using the On-screen Bar


Ex.: Selecting a subtitle (French) for DVD Video:

While a disc is selected as the source...

1 Display the on-screen bar with the pull-down menu.

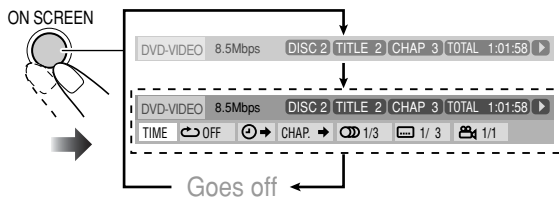


2 Select (highlight) the item you want.

 


3 Display the pop-up window.



4 Select the desired option in the pop-up window.

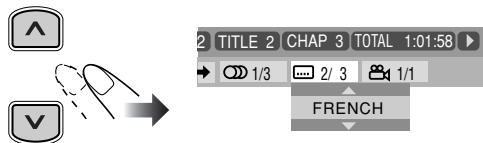

5 Finish the setting.

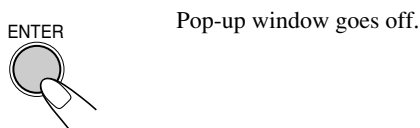

To erase the on-screen bar



For detailed operations of the following functions, see also "Operations Using the On-screen Bar" on the left.

Changing the time information


You can change the time information in the on-screen bar and the display window on the main unit.

1 Display the on-screen bar with the pull-down menu.



2 Make sure [TIME] is selected (highlighted).

3 Change the time indication.

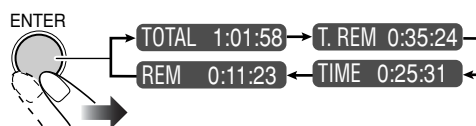

TOTAL	Elapsed disc time.
T. REM	Remaining disc time.
TIME	Elapsed playing time of the current chapter/track.
REM	Remaining time of the current chapter/track.

To erase the on-screen bar



Repeat Play

• See also page 26.

1 While playing a disc (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.

2 Select [OFF].

3 Display the pop-up window.



4 Select the repeat mode you want.

ALL	Repeats all discs or all programmed track.
A-B	Repeats a desired portion (see next column).
TITLE	Repeats the current title.
GROUP	Repeats the current group.
DISC	Repeats the disc (except for DVD).
CHAPTER	Repeats the current chapter.
TRACK*	Repeats the current track.
OFF	Cancels Repeat Play.

* During Program Play and Random Play, “STEP” appears.

5 Finish the setting.



A-B Repeat

• See also page 26.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **OFF**.
- 3 Display the pop-up window.



4 Select “A-B”.



5 Select the start point (A).



6 Select the end point (B).



A-B Repeat starts. The selected portion plays repeatedly.

- Before pressing ENTER, you can search for the end point using **▶▶**.

Time Search


You can move to a particular point by specifying the elapsed playing time from the beginning.

- 1 While playing (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.
 - Except for DVD: Time Search can be used before starting playback.
- 2 Select **TIME**.
- 3 Display the pop-up window.



4 Enter the time.

You can specify the time in hours/minutes/seconds.

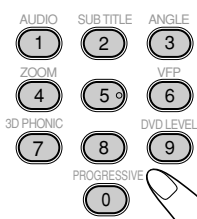

Examples:

To move to a point of 1 (hours): 02 (minutes): 00 (seconds), press 1, 0, 2, 0, then 0.

To move to a point of 54 (minutes): 00 (seconds), press 0, 5, 4, 0, then 0.

- It is always required to enter the hour digit (even “0” hour), but it is not required to enter trailing zeros (the last two digits in the examples above).
- To correct a misentry, press cursor **<** to erase the last entry.

5 Finish the setting.



The System starts playing the disc from the selected playing time.

Chapter/Track Search

You can search for the chapter (DVD Video) or track (DVD Audio) number to play.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **CHAP. ▶** or **TRACK ▶**.
- 3 Display the pop-up window.



4 Enter the desired chapter/track number.



Examples:

To select chapter/track 5, press 5.

To select chapter/track 15, press 1, then 5.

To select chapter/track 30, press 3, then 0.

- To correct a misentry, press the 10 keys until the desired number shown in the pop-up window.

5 Finish the setting.

ENTER



The System starts playing the searched chapter or track.

Operations on the CONTROL Screen



The CONTROL screen automatically appears on the TV screen when you load an MP3, WMA, or JPEG disc. You can search for and play the desired tracks through the CONTROL screen.

- If both types of files (MP3/WMA files and JPEG files) are recorded on a disc, select the file type to play (see page 39).


CONTROL screen

Ex.: When the MP3 disc is loaded.


FILE		REPEAT TRACK	Time : 00:00:14
Group : 2 / 3		Track : 5 / 14 (Total 41)	
Blue	Cloudy.mp3		
Red	Fair.mp3		
Green	Fog.mp3		
	Hail.mp3		
	Indian summer.mp3		
Track Information		Rain.mp3	
Title	Shower.mp3		
Rain	Snow.mp3		
Artist	Thunder.mp3		
	Typhoon.mp3		
Album	Wind.mp3		
	Winter sky.mp3		

- ① Current group number/total group number
- ② Current group
- ③ Group list
- ④ Current track (in blue)
- ⑤ Track information (ID3 Tag Version 1.0: only for MP3/WMA)
- ⑥ Repeat Play setting
- ⑦ Elapsed playing time of the current track (only for MP3/WMA)
- ⑧ Operation mode icon
- ⑨ Current track number/total number of tracks in the current group (total number of tracks on the loaded disc)
- ⑩ Highlight (green) bar
- ⑪ Track list

To move the highlight bar between group list and track list

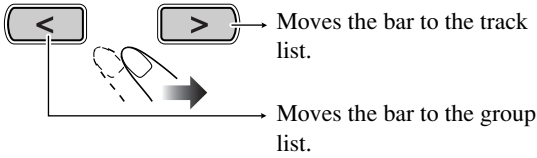

To select a group/track in the list

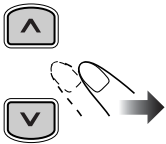

Move the highlight bar to a desired item.
 • If you move the highlight bar while playing back an MP3/WMA disc, the selected track starts playback automatically.

To start playback


For MP3/WMA:	
	Playback starts with the selected track. • Pressing DVD/CD ► also starts playback.
For JPEG:	
	The selected track (still picture) is displayed until you change it.
	Slide-show playback starts. Each track (still picture) is shown on the screen for few seconds, then changes one after another.

- Once you start playing back a JPEG track, the CONTROL screen goes off.
- To cancel slide-show, and display the current still picture, press ENTER.

To skip a track:	To pause:	To stop playback:
	 To release, press DVD/CD ►.	

To repeat slide-show for JPEG

While playing or before starting playback...

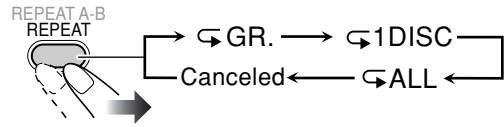


	Repeats the current group.
	Repeats the current disc.
	Repeats all disc.

• For Repeat Play of MP3/WMA, see page 26.



To zoom in the still picture

• You cannot zoom in the still picture during slide-show.

 1 While playing...




2 Change the magnification.

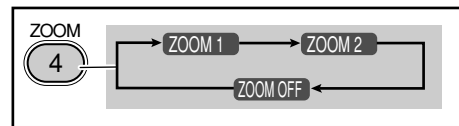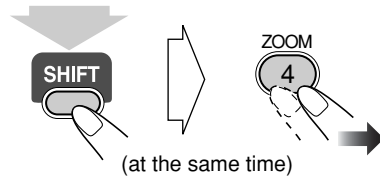

As the number increases, magnification also increases.


3 Move the zoomed-in position.

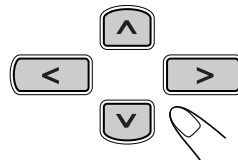


To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

Advanced Tape Operations

Remote control

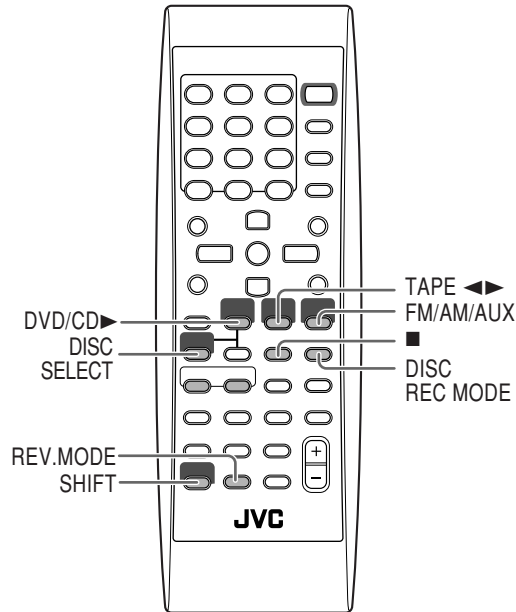

Main unit

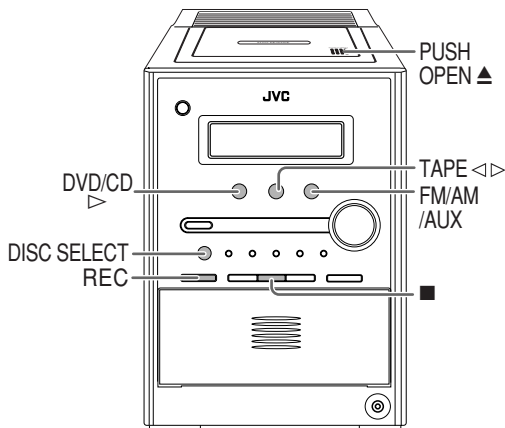

IMPORTANT


It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

Recording on a Tape

You can use type I tapes for recording.
 • To play a tape, see page 16.


1 Insert a recordable cassette.

Push Insert Close

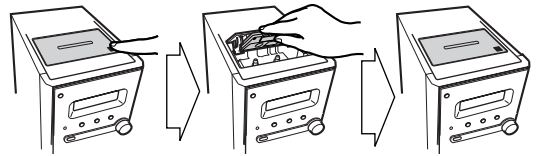


With the tape side facing outside


2 Check the tape running direction and Reverse mode settings on the display.

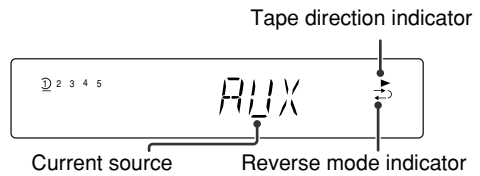

To change the direction

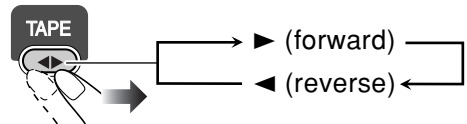


To change the Reverse mode if necessary

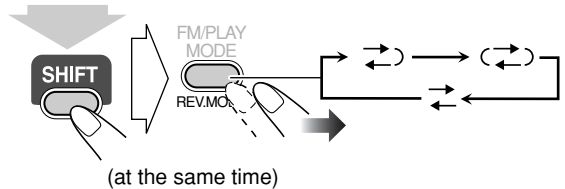

	To record on both sides. • When using Reverse mode, start recording in the forward (▶) direction.
	To record on only one side.


- 3 Select and start playing the source**—“FM,” “AM,” “DVD/CD,” or “AUX.”
- When recording a disc, you can also use “Synchronized Disc Recording” (see below).

 4 Start recording.



On the main unit

 To stop recording:




- While recording a disc, recording stops automatically after the disc player plays back the disc.


Synchronized Disc Recording

You can start and stop both disc play and tape recording at the same time.

- 1 Load a disc and insert a recordable cassette.**
 - If the current playing source is not the disc player, press DVD/CD ►, then ■.
- 2 Check the tape running direction and Reverse mode settings on the display.**
 - See step 2 of “Recording on a Tape” on page 32.
- 3 Select the disc number you want to start recording from.**

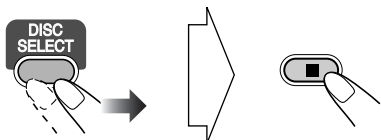


4 Select the Recording mode.

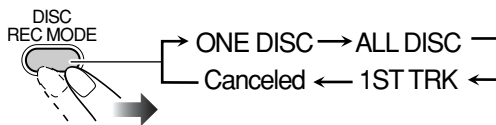

ONE DISC	Records the entire disc.
ALL DISC	Records the all loaded discs continuously (except for DVD Video/DVD Audio).
1ST TRK	Records the first track of each disc (only for SVCD/VCD/CD).

 5 Start recording when the recording mode selected in step 4 is still shown on the display.



On the main unit

The System automatically creates 4-second blanks between the tunes recorded on the tapes.

- If the loaded disc is not compatible for the current recording mode, the disc player skips the disc and loads the next one.
- When either disc play or recording ends, both disc player and the cassette deck stop at the same time.

To record a “Live” disc

It will not be desirable to put 4-second blank portions between the tunes recorded on the tape.

To record the entire disc without any interruption recorded, pause the disc play (press ■ on the remote control) before pressing REC.

To record Program Play or Random Play

1 Select Program Play (and make a program) or Random Play, but do not start playback.

2 Press REC to start recording.

- When disc play stops, recording continues. It is required that recording be stopped manually.

To record only your favorite track

 
You can specify tracks to be recorded on the tape while listening to a disc.

- This function is not available for DVD Video.

1 Start playing a disc.



2 While a track you want to record on the tape is playing...



On the main unit

The disc player returns to the beginning of that track and the track is recorded on the tape. After recording the track, the disc player and cassette deck automatically stop.

3 Repeat steps 2 and 3 to record other tracks you want.

- You can exchange the discs if necessary.

 
To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.




To re-record on a protected tape, cover the holes with adhesive tape.



Timer Operations

Remote control

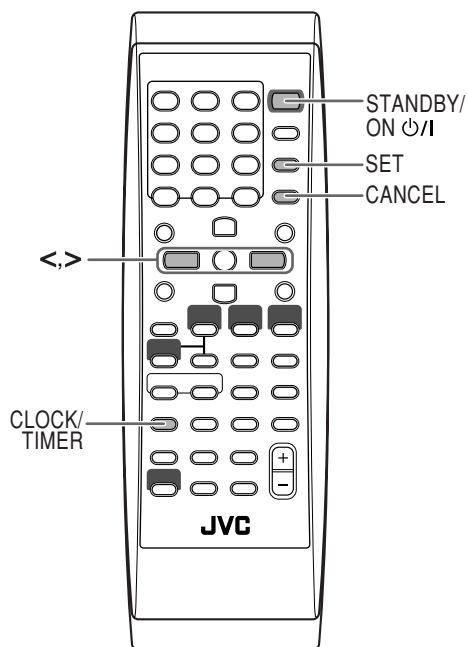

Setting the Timer



 

Using Daily Timer, you can wake up with your favorite music. On the other hand, with Recording Timer, you can make a tape of a radio broadcast automatically.

- You can store three Daily Timer settings and one Recording Timer setting; however, you can activate only one of Daily Timers or Recording Timer at the same time.
- To exit from the timer setting, press CLOCK/TIMER as required.
- To correct a misentry during the process, press CANCEL. You can return to the previous step.

Timer initial settings when shipped from the factory:

- DAILY 1: ON Time (6:00)/OFF Time (8:00)/ Source (TUNER FM 1)/Volume level (--)
- DAILY 2: ON Time (12:00)/OFF Time (14:00)/ Source (TUNER FM 1)/Volume level (--)
- DAILY 3: ON Time (18:00)/OFF Time (20:00)/ Source (TUNER FM 1)/Volume level (--)
- REC TMR: ON Time (8:00)/OFF Time (10:00)/ Source (TUNER FM 1)

- 1** Select one of the timer setting modes you want to set—**Daily 1 ON time, Daily 2 ON time, Daily 3 ON time, or Recording Timer ON time.**

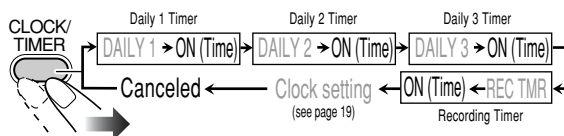


Ex. When Daily Timer 1 setting mode is selected

- When the clock has not been adjusted, pressing CLOCK/TIMER makes the System enter the clock setting mode.

- 2** Make the timer setting as you want.

Repeat the following operations until you finish setting in the following order—

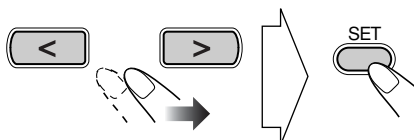

- ① Set the hour then minute for on-time.
- ② Set the hour then minute for off-time.

- ③ **For Daily Timers:** Select the playback source—“TUNER FM,” “TUNER AM,” “TAPE,” “DISC,” or “AUX.”



For Recording Timer: Select the playback source—“TUNER FM,” “TUNER AM” or “AUX.”

 
- ④ **For “TUNER FM” and “TUNER AM”:** Select a preset channel.
For “DISC”: Select the disc number, group/title number, then the track/chapter number.
- ⑤ **For Daily Timers:** Select the volume level.
- You can select the volume level (“VOL 1” to “VOL 50” and “VOL --”). If you select “VOL --,” the volume is set to the last level when the unit has been turned off.

For Recording Timer: The volume level is set automatically to the last level when the unit has been turned off.

Once settings are complete, the Timer setting information appears in sequence.

- 3 Turn off the unit (on standby) if you have set the timer with the System turned on.**

STANDBY/ON



How Daily Timer actually works

Once the Daily Timer has been set, the timer (⊖) indicator and timer number indicator (1/2/3) are lit on the display. Daily Timer is activated at the same time everyday until the timer is turned off manually (see the next column) or another timer is activated.

When the on-time comes

The System turns on, tunes in to the specified station or start playing the loaded disc with the specified chapter or track, and sets the volume level to the preset level.

- While Daily Timer is working, the timer (⊖) indicator and timer number indicator (1/2/3) flash on the display.

When the off-time comes

The System stops playback, and turns off (stands by) automatically.

- The timer setting remains in memory until you change it.

How Recording Timer actually works

When Recording Timer has been set, Timer (⊖) indicator and the REC indicator are lit on the display. Recording Timer works only once.

When the on-time comes

The System turns on, tunes in to the specified station, sets the volume level to last level when the unit has been turned off, and starts recording.

When the off-time comes

 

The System stops recording, and turns off (stands by).

- The timer setting remains in memory until you change it.

To turn off the Timer after its setting is done

Since Daily Timer is activated at the same time everyday, you may need to cancel it on some particular days.

- 1 Select the Timer you want to cancel.**

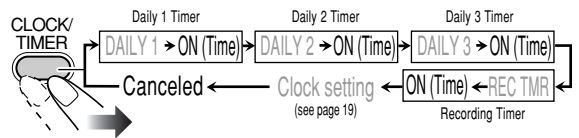



Ex.To cancel Daily Timer 1

- 2 Turn off the selected Timer.**



To turn on the Timer

 - 1 Select the Timer (DAILY 1, DAILY 2, DAILY 3, or REC TMR) you want to activate.**

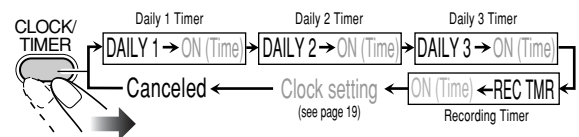


Ex.When Daily Timer 1 is selected

- 2 Activate the selected Timer.**



Setup Menu Operations


Remote control

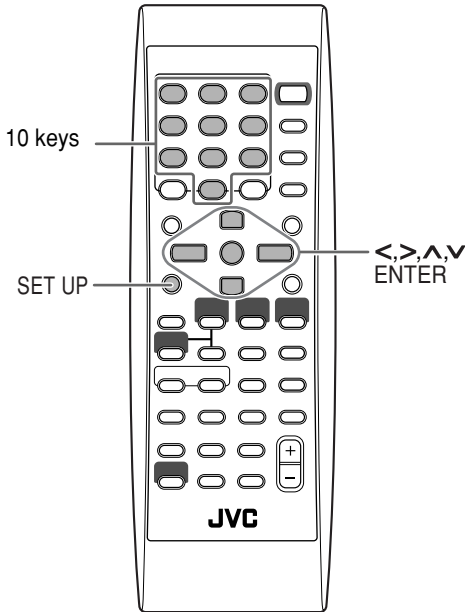

Setup Menu Icons

The icon for the selected Setup Menu will be highlighted.

Ex.: LANGUAGE Setup Menu is selected.

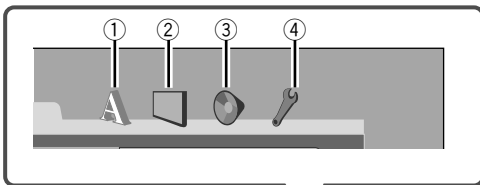

- ① LANGUAGE Setup Menu
- ② PICTURE Setup Menu
- ③ AUDIO Setup Menu
- ④ OTHERS Setup Menu


Operating Procedure





You can use the Setup Menus only when a disc is selected as the source and its playback is not yet started.

Ex.: Selecting "STILL PICTURE" for "FILE TYPE":



1 Display the Setup Menu.

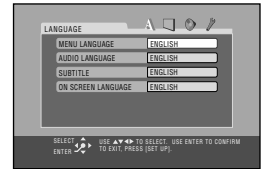


2 Select one of the Setup Menus.

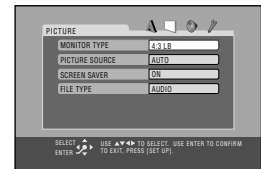 



3 Select the item you want to adjust.

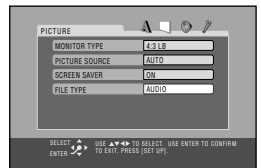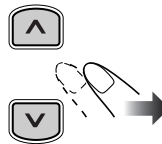

4 Display the pop-up window.

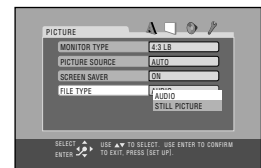

5 Select the desired option in the pop-up window.

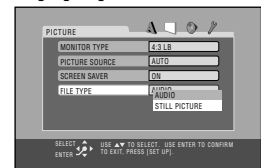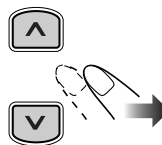

6 Finish the setting.

ENTER



- 7 Repeat steps 3 to 4 to set other items on the same Setup Menu.
Repeat steps 2 to 4 to set other items on another Setup Menu.


To erase the Setup Menu

SET UP



LANGUAGE Setup Menu

You can select the initial languages for disc playback. You can also select the language shown on the TV screen while operating this System.

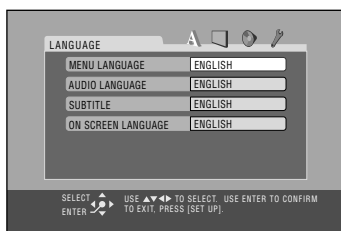

MENU LANGUAGE

Some discs have multiple menu languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47).

AUDIO LANGUAGE

Some discs have multiple audio languages.

Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47).

SUBTITLE

Some discs have multiple subtitle languages.


Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47) or “OFF (no subtitle).”

ON SCREEN LANGUAGE

Select one of the languages shown on the TV from—ENGLISH, CHINESE, and SPANISH.

PICTURE Setup Menu

You can select the desired options concerning a picture or monitor screen.

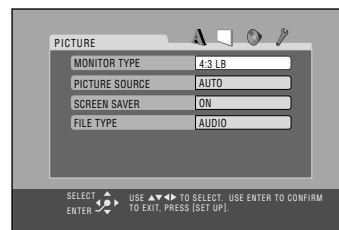

MONITOR TYPE

You can select the monitor type of your TV when you play DVD Video recorded with aspect ratio of 16:9.

For the multi-color system TV

When you use a multi-color system TV, you can change the color system of the System automatically by selecting “MULTI” options as the monitor type. In this case, the color system of the System is changed to match the color system of the loaded disc regardless the VIDEO OUT SELECT setting for better picture quality (see “To set the video output selector” on page 7).

Select one of the following:

16:9 / 16:9 MULTI (Wide television conversion):

 
Select when the aspect ratio of your TV is 16:9 and when the TV has the screen size adjustment function.

4:3 LB (Letter Box)/ 4:3 MULTI LB:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

4:3 PS (Pan Scan) / 4:3 MULTI PS:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9

 

Ex.: 4:3 LB

 

Ex: 4:3 PS

PICTURE SOURCE

You can obtain optimal picture quality by selecting an appropriate option—picture source type (either video source or film source).

Select one of the following:

AUTO: Normally select this.
When playing back a disc containing both video and film sources, the System automatically changes the processing to match it to the picture type (film or video source) of the current chapter.

FILM: To play a film source disc.

VIDEO: To play a video source disc.

SCREEN SAVER

You can activate or deactivate screen saver while operating the built-in disc player.

Select one of the following:

ON: The picture on the TV becomes dark when no operation is done for about 5 minutes.

OFF: To cancel the screen saver.

FILE TYPE

If both audio tracks (MP3 or WMA files) and still picture (JPEG files) are recorded on a disc, you can select which to play.


Select one of the following:

AUDIO: To play MP3/WMA files.

STILL PICTURE: To play JPEG files.

■ AUDIO Setup Menu

You can adjust the sound settings of the System.

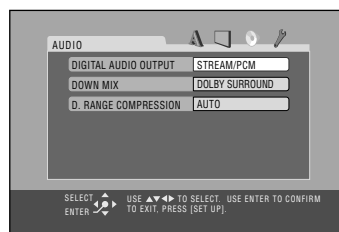

DIGITAL AUDIO OUTPUT

When using the digital output terminal on the rear, set this correctly according to the connected component.

Select one of the following:

PCM ONLY: To connect to a linear PCM digital equipment.

DOLBY DIGITAL /PCM: To connect to a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

STREAM/PCM: To connect to a DTS decoder or an amplifier with a built-in DTS decoder.

• See also “DVD OPTICAL DIGITAL OUT Signals” on page 49.

DOWN MIX

When using the digital output on the rear, set this correctly according to the connected component.

When playing a multi-channel DVD, the System converts the signals into 2 channels properly.

Select one of the following:

DOLBY SURROUND: To connect an amplifier with the Dolby Pro Logic decoder.

STEREO: To connect a conventional stereo amplifier, receiver, MD player, TV, etc.

D. RANGE COMPRESSION

You can compress the dynamic range (the difference between the loudest sound and the softest sound) to enjoy a powerful sound even at a low volume level when listening to Dolby Digital software. This is useful at night.


- The effectiveness varies depends on a software.

Select one of the following:

AUTO:	To apply the compression effect to the downmixed multi-channel sound.
ON:	To always apply the compression effect for all Dolby Digital software. Loud sound will become low and vice versa.

■ OTHERS Setup Menu

You can change some other convenient functions.

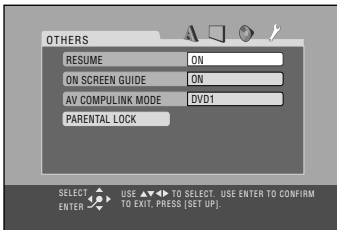

RESUME

You can activate or deactivate Resume for disc playback (see page 14).

Select one of the following:

ON:	To activate Resume.
OFF:	To cancel Resume.

ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons (see page 14).

- When recording the picture on a VCR, select “OFF” to avoid recording the guide icons on your video tape.

Select one of the following:

ON:	To activate the on-screen guide icons.
OFF:	To cancel the on-screen guide icons.

AV COMPULINK MODE

When connecting the System to a JVC's TV with the AV COMPU LINK remote control system, select the proper setting.

Select one of the following:

DVD1:	To connect to the VIDEO-3 Input jack on the TV.
DVD2:	To connect to the VIDEO-1 Input jack on the TV.
DVD3:	To connect to the VIDEO-2 Input jack on the TV.

For details, see “To connect the AV COMPU LINK cords” on page 7.

PARENTAL LOCK

Select this to enter the PARENTAL LOCK submenu. See the section that follows.

Restricting the Review


—Parental Lock

You can restrict playback of DVD Video containing violent scenes and those unsuitable for your family members. Once you have set the rating level, such violent scenes (for which a higher level than you set is assigned) may be skipped or changed to another scene (depending on how the disc is programmed).



To set Parental Lock

Set the rating level—Level 1 (most restrictive) to Level 8 (least restrictive).



1 Display the Setup Menu.

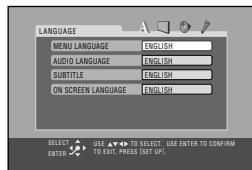

2 Select the OTHERS Setup Menus.

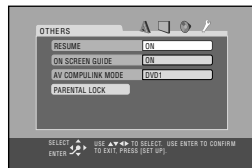 



3 Select "PARENTAL LOCK."

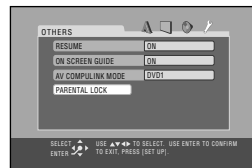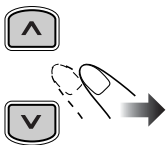

4 Enter the PARENTAL LOCK submenu.




5 Select "COUNTRY CODE," then display the pop-up window.

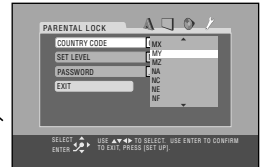
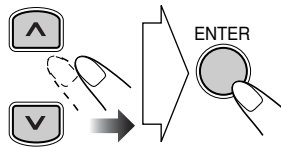


6 Select the country code of your area.


- See "Country/Area Codes List" on page 48 to find your country code.

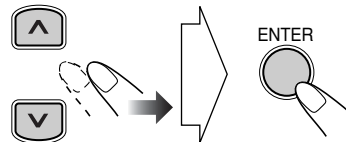

7 Make sure "SET LEVEL" is selected, then display the pop-up window.

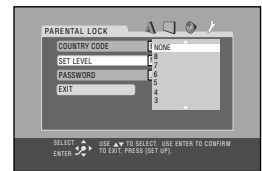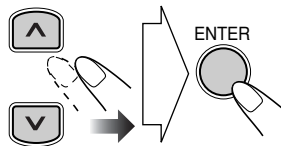


8 Set the rating level (NONE, 8 – 1).

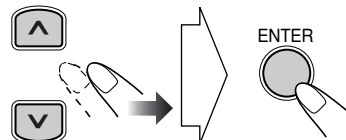

The System automatically enters "PASSWORD" entry mode.

9 Make sure "PASSWORD" is selected, then enter any 4-digit number for your password.

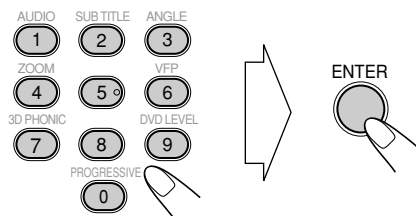

10 Finish the setting.



To change the setting

1 Display the PARENTAL LOCK sub menu.


- Follow steps **1** to **4** of “To set Parental Lock”.



“PASSWORD” is automatically selected.

- You cannot select any item other than “EXIT” until you enter the correct password.

2 Enter your password.

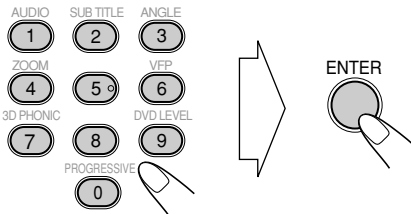


- If you enter a wrong password, “-----” appears again.
- If you enter a wrong password three times, “EXIT” is automatically selected. In this case, press ENTER to exit from the PARENTAL LOCK sub menu.
- If you forget your password, enter “8888.”

3 Change the settings.

- Follow steps **5** to **8** of “To set Parental Lock”.


4 Enter your password again.

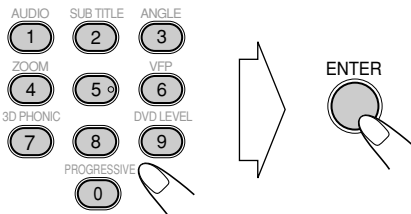


- If you want to change a password, enter a new four digit number in this step.

To release Parental Lock temporarily

When you set a strict rating level, some discs may not be played back at all. When you try to play such a disc, the following screen appears on the TV.

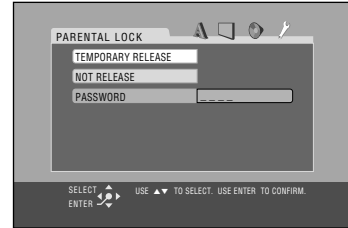


1 Select “TEMPORARY RELEASE,” then press ENTER.

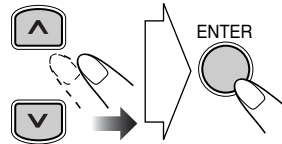

“PASSWORD” is automatically selected.

- If you do not play back such a disc, select “NOT RELEASE,” then press ENTER. Then eject the disc.

2 Enter your password.

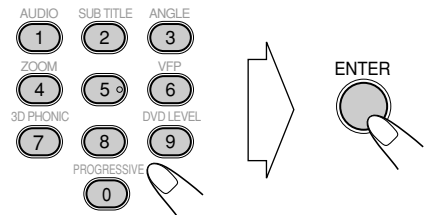

- If you enter a wrong password three times, “NOT RELEASE” is automatically selected. In this case, press ENTER. Then eject the disc.

Learning More about This System ● ● ●

Getting Started (see pages 3 to 7)

Changing the Scanning Mode:

- To enjoy the progressive video picture, connect a TV with the progressive video input using component video cord.

Before Operating the System (see pages 8 to 11)

Playable Disc Types:

- If you play back an NTSC disc with this setting set to “PAL,” you can watch the playback pictures (the disc will be reproduced using “PAL 60” format), but the TV screen may roll over upward and downward rapidly.
- If you play back a PAL disc with this setting set to “NTSC,” you can watch the playback pictures, but the following symptoms may occur:
 - The items on the disc menu will be blurred, and be shown slightly shifted when highlighted.
 - The aspect ratio of the picture may differ from the original aspect ratio.
 - The picture movement is not smooth.

Daily Operations—Playback (see pages 12 to 16)

Listening to the Radio:

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

Playing Back a Disc:

- When using an 8 cm disc, place it on the inner circle of the disc tray.
- On some DVD, SVCD, or VCD discs, the actual operations may be different from what is explained in this manual, due to the programming and disc structure; such differences are not a malfunction of this System.
- When discs* in more than one tray are loaded on the disc trays, they are played in sequence as follows:
Ex.: When DISC 2 is selected:
DISC 2⇒DISC 3⇒DISC 4⇒DISC 5⇒DISC 1
(then stops)
- * When no disc is loaded on the tray, that disc number is skipped.
- You can exchange discs while playing or selecting another disc.
- Some DVD Audio discs prohibit downmixed output. When you play back such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
- 3D Phonic setting is also applied to the optical digital output signals through the DVD OPTICAL DIGITAL OUT terminal.
- When using Resume on SVCD or VCD with PBC, the playback might start on a position slightly different from where you have stopped.

- You can use Resume only for the DVD/SVCD/VCD except for some discs—depending how the disc is programmed.
- Resume function does not work during Program Play and Random Play.
- For MP3/WMA/JPEG playback...
 - This System cannot play “packet write” discs.
 - MP3/WMA/JPEG discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file configuration.)
 - Some MP3/WMA/JPEG files cannot be played back and will be skipped. This result from their recording processes and conditions.
 - When making MP3/WMA discs, use ISO 9660 Level 1 or Level 2 for the disc format.
 - This System can play back MP3/WMA/JPEG files with the extension code <.mp3>, <.wma> or <.jpg> (regardless of the letter case—upper/lower).
 - It is recommended that you make each MP3 file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than 64 kbps.
 - This System can recognize the total of 1000 tracks and of 99 groups (each group can contain up to 150 tracks). Those exceeding the maximum number cannot be recognized.

Daily Operations—Sound&Other Adjustments (see pages 17 to 20)

Adjusting the Volume:

- Be sure to turn down the volume before connecting or putting the headphones.

Adjusting the Sound:

- This function also affects the sound through the headphones.

Setting the Clock:

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

Unique DVD/VCD Operations (see pages 21 to 23)

- During slow-motion playback, no sound will be reproduced.
- One touch replay function works only within the same title, though it works between chapters.
- One touch replay function does not work during Program Play and Random Play.
- While zoomed in, the picture may look coarse.

Advanced Disc Operations (see pages 24 to 26)

Programming the Playing Order—Program Play:

- If you try to program a 100th track, “MEM FULL (memory full)” appears on the display.
- While programming steps...
Your entry will be ignored if you have tried to program an item number that does not exist on the disc (for example, selecting track 14 on a disc that only has 12 tracks).

- You cannot use Program Play and Random Play for JPEG discs.
- You cannot eject tray while in Program Play.

Playing at Random—Random Play:

- The **◀◀** button does not work for skipping chapters or tracks, but only work for going back to the beginning of the current chapter or track.

On-Screen Disc Operations (see pages 27 to 31)

- For JPEG files playback...
 - It is recommended that you record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a long time to be shown.)
 - This System can play only baseline JPEG files. Progressive JPEG files or lossless JPEG files cannot be played.
 - Baseline JPEG format: Used for digital cameras, web, etc.
 - Progressive JPEG format: Used for web.
 - Lossless JPEG format: An old type and rarely used now.
 - This System may not play back JPEG files properly which are recorded by the devices other than digital still camera.
 - If progressive or lossless JPEG files are played back, a black screen appears. In this case, stop playback and select a baseline JPEG file. Note that it may take a long time to select another file.

Advanced Tape Operations (see pages 32 to 34)

Recording on a Tape:

- The recording level is automatically set correctly. Thus, you can adjust the sound you are actually listening to without affecting the recording level.
- There is leader tape which cannot be recorded onto at the start and end of cassette tapes. Thus, when recording CDs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any music part lost.
- If you start recording with no cassette inserted, “NO TAPE” appears on the display. If a protected tape has been inserted, “NO REC” appears.
- When using Reverse mode for recording, start recording in the forward (▶) direction first; otherwise, recording will stop when only one side (reverse) of the tape is recorded.
- You can also change Reverse mode setting (↔) and (↔) after starting recording.
- You cannot open or close the disc tray while recording a disc.

Synchronized Disc Recording:

- When the tape reaches its end in the forward direction (▶) during recording with Reverse mode set to (↔), the last tune will be re-recorded at the beginning of the reverse side (except for DVD Video).

Timer Operations (see pages 35 and 36)

- When you unplug the AC power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- Without stopping the recording, you cannot change the source after Recording Timer start recording.
- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.
- If you set the Sleep Timer after Recording Timer starts recording, Recording Timer is canceled, but recording continues until Sleep Timer shuts off the power.

Setup Menu Operations (see pages 37 to 42)

LANGUAGE Setup Menu:

- When the language you have selected for “MENU LANGUAGE,” “AUDIO LANGUAGE,” or “SUBTITLE” is not recorded on a disc, the original language is used as the initial language.

PICTURE Setup Menu—MONITOR TYPE:

- Even if “4:3 PS” is selected, the screen size may become 4:3 letter box with some DVD Video discs. This depends on how the discs are recorded.
- When you select “16:9” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

AUDIO Setup Menu—DOWN MIX:


- This setting is not effective when DTS multi-channel software is played back.

OTHERS Setup Menu—ON SCREEN GUIDE:

- Setup Menus and on-screen bar will be displayed (and recorded) even though this function is set to “OFF.” Subtitles and the information for zooming in always appear on the display regardless of this setting.

MP3/WMA/JPEG groups/tracks configuration

This System plays back the tracks as follows.

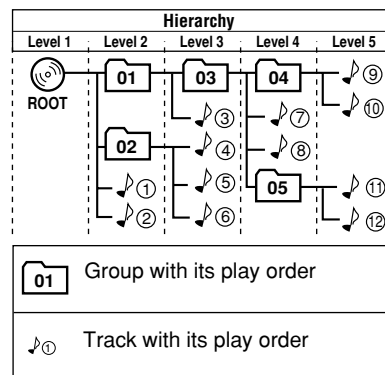

Maintenance

To get the best performance of the System, keep your discs and mechanism clean.

Handling discs

- When removing the disc from its case, hold it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

To clean the disc:

- Wipe the disc with a soft cloth in a straight line from center to edge.

Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotate it.
 - If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape—in dusty places, in direct sunlight or heat, in moist areas, on a TV or speaker, or near a magnet.


To keep the best recording and playback sound quality:

- Use a cotton swab moistened with alcohol to clean the heads, capstans, and pinch rollers.
- Use a head demagnetizer (available at electronics and audio shops) to demagnetize the heads (when the System turned off).

Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
 - DO NOT wipe it with a hard cloth.
 - DO NOT wipe it strongly.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substance such as insecticides to it.
- DO NOT allow any rubber or plastic to remain in contact for a long time.

To remove the speaker grilles

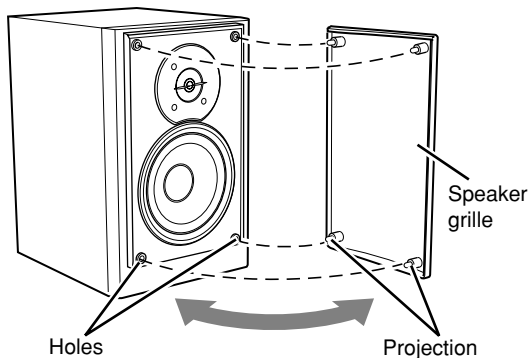

Troubleshooting

If you are having a problem with your System, check this list for a possible solution before calling for service.

General:

Adjustments or settings are suddenly canceled before you finish.

⇒ There is a time limit. Repeat the procedure again.

Operations are disabled.

⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

Unable to operate the System from the remote control.

⇒ The path between the remote control and the remote sensor on the System is blocked.

⇒ The batteries are exhausted.

No sound is heard.

⇒ Speaker connections are incorrect or loose.

⇒ Headphones are connected.

No picture appears on the screen.

⇒ The video cord connections are incorrect or loose.

No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.

⇒ The System is connected to a TV which does not support progressive scanning.

⇒ Incorrect color system is selected (see “To set the video output selector” on page 7).

The left and right edges of the picture are missing on the screen.

⇒ Select “4:3 LB/ 4:3 MULTI LB” for “MONITOR TYPE” (see page 38).

Radio Operations:

Hard to listen to broadcasts because of noise.

⇒ Antennas connections are incorrect or loose.

⇒ The AM loop antenna is too close to the System.

⇒ The FM antenna is not properly extended and positioned.

Disc Operations:

The disc does not play.

⇒ The disc is placed upside down. Place the disc with the label side up.

ID3 Tag on an MP3/WMA disc cannot be shown.

⇒ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.

MP3/WMA/JPEG groups and tracks are not played back as you expect.

⇒ The playing order is determined when the disc was recorded. It depends on the writing application.

MP3/WMA or JPEG tracks are not played back.

⇒ The inserted disc may include both type of tracks (MP3/WMA files and JPEG files). In this case, you can only play back the files selected by the “FILE TYPE” setting (see page 39).

⇒ You have changed the “FILE TYPE” setting after you inserted a disc. In this case, reload the disc.

“NO AUDIO” appears.

⇒ This System cannot play back illegally produced DVD Audio discs.

“LR ONLY” appears.

⇒ Some DVD Audio discs prohibit downmixed output. When you play back such a disc, this System plays back the left front and right front signals only.

The disc sound is discontinuous.

⇒ The disc is scratched or dirty.

The disc tray does not open or close.

⇒ The AC power cord is not plugged in.

⇒ Child Lock is in use (see page 26).

Tape Operations:

The cassette holder cannot be opened.

⇒ Power supply from the AC power cord has been cut off while the tape was running. Turn on the System.

Recordings:

Impossible to record.

⇒ Small tabs on the back of the cassette are removed. Cover the holes with adhesive tape.

Timer Operations:

Daily Timer and Recording Timer do not work.

⇒ The System has been turned on when the on-time comes. Timer starts working only when the System is turned off.

Setup Menu Operations:

No subtitle appears on the display though you have selected the initial subtitle language.

⇒ Some DVDs are programmed to always display no subtitle initially. If this happens, press SUB TITLE (while holding SHIFT) after starting play (see page 22).

Audio language is different from the one you have selected as the initial audio language.

⇒ Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO (while holding SHIFT) after starting play (see page 21).

Language Code List

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Ameharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue
IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish

JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laothian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance
RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sangho
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak

SL	Slovenian
SM	Samoan
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tonga
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

Country/Area Codes List

AD	Andorra
AE	United Arab Emirates
AF	Afghanistan
AG	Antigua and Barbuda
AI	Anguilla
AL	Albania
AM	Armenia
AN	Netherlands Antilles
AO	Angola
AQ	Antarctica
AR	Argentina
AS	American Samoa
AT	Austria
AU	Australia
AW	Aruba
AZ	Azerbaijan
BA	Bosnia and Herzegovina
BB	Barbados
BD	Bangladesh
BE	Belgium
BF	Burkina Faso
BG	Bulgaria
BH	Bahrain
BI	Burundi
BJ	Benin
BM	Bermuda
BN	Brunei Darussalam
BO	Bolivia
BR	Brazil
BS	Bahamas
BT	Bhutan
BV	Bouvet Island
BW	Botswana
BY	Belarus
BZ	Belize
CA	Canada
CC	Cocos (Keeling) Islands
CF	Central African Republic
CG	Congo
CH	Switzerland
CI	Côte d'Ivoire
CK	Cook Islands
CL	Chile
CM	Cameroon
CN	China
CO	Colombia
CR	Costa Rica
CU	Cuba
CV	Cape Verde
CX	Christmas Island
CY	Cyprus
CZ	Czech Republic
DE	Germany
DJ	Djibouti

DK	Denmark
DM	Dominica
DO	Dominican Republic
DZ	Algeria
EC	Ecuador
EE	Estonia
EG	Egypt
EH	Western Sahara
ER	Eritrea
ES	Spain
ET	Ethiopia
FI	Finland
FJ	Fiji
FK	Falkland Islands (Malvinas)
FM	Micronesia (Federated States of)
FO	Faroe Islands
FR	France
FX	France, Metropolitan
GA	Gabon
GB	United Kingdom
GD	Grenada
GE	Georgia
GF	French Guiana
GH	Ghana
GI	Gibraltar
GL	Greenland
GM	Gambia
GN	Guinea
GP	Guadeloupe
GQ	Equatorial Guinea
GR	Greece
GS	South Georgia and the South Sandwich
GT	Guatemala
GU	Guam
GW	Guinea-Bissau
GY	Guyana
HK	Hong Kong
HM	Heard Island and McDonald Islands
HN	Honduras
HR	Croatia
HT	Haiti
HU	Hungary
ID	Indonesia
IE	Ireland
IL	Israel
IN	India
IO	British Indian Ocean Territory
IQ	Iraq
IR	Iran (Islamic Republic of)
IS	Iceland
IT	Italy
JM	Jamaica

JO	Jordan
JP	Japan
KE	Kenya
KG	Kyrgyzstan
KH	Cambodia
KI	Kiribati
KM	Comoros
KN	Saint Kitts and Nevis
KP	Korea, Democratic People's Republic of
KR	Korea, Republic of
KW	Kuwait
KY	Cayman Islands
KZ	Kazakhstan
LA	Lao People's Democratic Republic
LB	Lebanon
LC	Saint Lucia
LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab Jamahiriya
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macau
MP	Northern Mariana Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway

NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama
PE	Peru
PF	French Polynesia
PG	Papua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
PM	Saint Pierre and Miquelon
PN	Pitcairn
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Réunion
RO	Romania
RU	Russian Federation
RW	Rwanda
SA	Saudi Arabia
SB	Solomon Islands
SC	Seychelles
SD	Sudan

SE	Sweden
SG	Singapore
SH	Saint Helena
SI	Slovenia
SJ	Svalbard and Jan Mayen
SK	Slovakia
SL	Sierra Leone
SM	San Marino
SN	Senegal
SO	Somalia
SR	Suriname
ST	Sao Tome and Principe
SV	El Salvador
SY	Syrian Arab Republic
SZ	Swaziland
TC	Turks and Caicos Islands
TD	Chad
TF	French Southern Territories
TG	Togo
TH	Thailand
TJ	Tajikistan
TK	Tokelau
TM	Turkmenistan
TN	Tunisia
TO	Tonga
TP	East Timor
TR	Turkey

TT	Trinidad and Tobago
TV	Tuvalu
TW	Taiwan
TZ	Tanzania, United Republic of
UA	Ukraine
UG	Uganda
UM	United States Minor Outlying Islands
US	United States
UY	Uruguay
UZ	Uzbekistan
VA	Vatican City State (Holy See)
VC	Saint Vincent and the Grenadines
VE	Venezuela
VG	Virgin Islands (British)
VI	Virgin Islands (U.S.)
VN	Vietnam
VU	Vanuatu
WF	Wallis and Futuna Islands
WS	Samoa
YE	Yemen
YT	Mayotte
YU	Yugoslavia
ZA	South Africa
ZM	Zambia
ZR	Zaire
ZW	Zimbabwe

DVD OPTICAL DIGITAL OUT Signals

DIGITAL AUDIO OUTPUT Playback disc	Output Signals		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
DVD Video	48 kHz, 16 bit Linear PCM*		
with 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM*		
with 96 kHz, Linear PCM	48 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS	DTS bitstream	48 kHz, 16 bit Linear PCM	
DVD Audio	48 kHz, 16 bit Linear PCM		
with 48/96/192 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM		
with 44.1/88.2/176.4 kHz, 16/20/24 bit Linear PCM	44.1 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS	DTS bitstream	48 kHz, 16 bit Linear PCM	
SVCD, VCD, CD	44.1 kHz, 16 bit Linear PCM/48 kHz, 16 bit Linear PCM		
CD with DTS	DTS bitstream	44.1 kHz, 16 bit Linear PCM	
MP3/WMA disc	32/44.1/48 kHz, 16 bit Linear PCM		

* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the DVD OPTICAL DIGITAL OUT terminal if the discs are not copy-protected.

Specifications

Amplifier section

Output Power:

HIGH:	40 W (20 W+ 20 W) at 4 Ω (10% THD) 50 W (25 W+ 25 W) at 4 Ω (10% MAX)
LOW:	40 W (20 W+ 20 W) at 4 Ω (10% THD) 50 W (25 W+ 25 W) at 4 Ω (10% MAX)

Analog input:

AUX:	Sensitivity/Impedance (at 1 kHz) 400 mV/47 kΩ (at "AUX LEVEL 1") 200 mV/47 kΩ (at "AUX LEVEL 2")
------	--

Digital output:

DVD OPTICAL DIGITAL OUT:
-21 dBm to -15 dBm (660 nm ±30 nm)

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite):	1 V(p-p)/75 Ω
S-VIDEO: Y (luminance)	1 V(p-p)/75 Ω
C (chrominance, burst)	0.286 V(p-p)/75 Ω

COMPONENT: (Interlace/Progressive):

(Y)	1 V(p-p)/75 Ω
(Pb/Pr)	0.7 V(p-p)/75 Ω

Speaker Terminals: 4 Ω – 16 Ω

Others:

AV COMPU LINK x 2 (φ 3.5)

Tuner section

FM tuning range:	87.5 MHz – 108.0 MHz
AM tuning range:	531 kHz – 1 710 kHz (at 9 kHz) 530 kHz – 1 710 kHz (at 10 kHz)

Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD
CD-R/CD-RW (recorded in Audio CD/
Video CD/ Super Video CD/ MP3/ WMA/
JPEG format)
DVD-R/DVD-RW (recorded in video
format)

Dynamic range:	90 dB
Horizontal resolution:	500 lines
Wow and flutter:	Immeasurable
MP3 recording format:	MPEG 1/2 Audio Layer 3
Max. Bit rate:	320 kbps

Cassette deck section

Frequency response	
Normal (type I):	50 Hz – 14 000 Hz
Wow and flutter:	0.15% (WRMS)

General

Power requirement:	AC 110 V / AC 127 V / AC 220 V – AC 230 V ~ , (adjustable with the voltage selector), 50 Hz/60 Hz
Power consumption:	90 W (at operation) 12 W (on standby) 5.3 W (with deactivating the clock indication)
Dimensions (approx.):	175 mm x 237 mm x 375 mm (W/H/D)
Mass (approx.):	7.5 kg

Supplied Accessories

See page 3.

Speakers

Type:	2-Way Bass-reflex type
Speaker Systems:	Woofers: 10 cm cone x 1 Tweeters: 4 cm cone x 1
Power handling capacity:	HIGH: 20 W LOW: 20 W
Impedance:	HIGH: 4 Ω LOW: 4 Ω
Frequency range:	56 Hz – 40 000 Hz
Sound pressure level:	84 dB/W•m
Dimensions (approx.):	145 mm x 236 mm x 205 mm (W/H/D)
Mass (approx.):	2.3 kg each


Design and specifications are subject to change without notice.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”

Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)

主 (AC) 电源线路说明 (不适用于香港、欧洲、美国、加拿大、澳大利亚及英国型号)

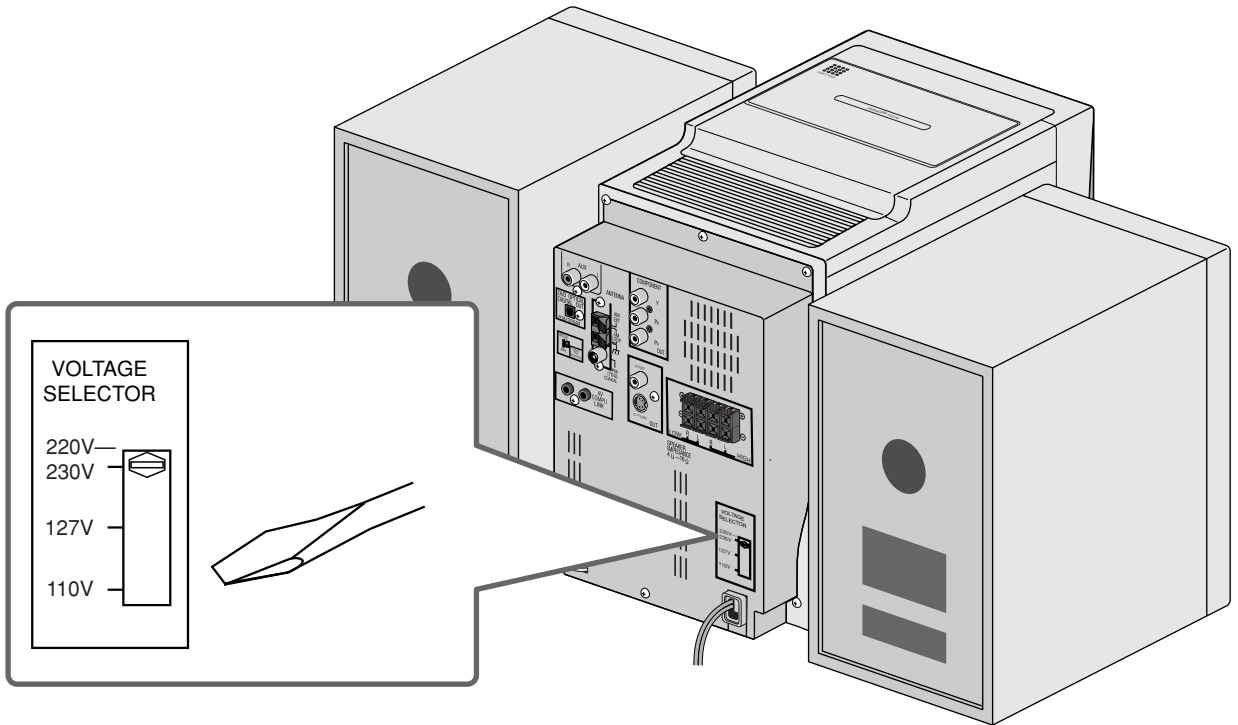

CAUTION for mains (AC) line


BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.

有关主 (AC) 电源线路的重要事项

接插电源以前, 请务必检查当地的主 (AC) 电源线路电压是否和位于本机外面的电压选择开关设定的位置一致。如果不一致, 请重新设定电压选择开关使其符合当地电压, 以免损坏机器或引起火灾/触电的危险。

JVC
VICTOR COMPANY OF JAPAN, LIMITED

JVC

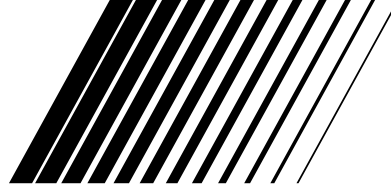

English

Español


Português

MICRO COMPONENT SYSTEM

SISTEMAS DE MICROCOMPONENTES

SISTEMA DE MICRO COMPONENTES

UX-S77

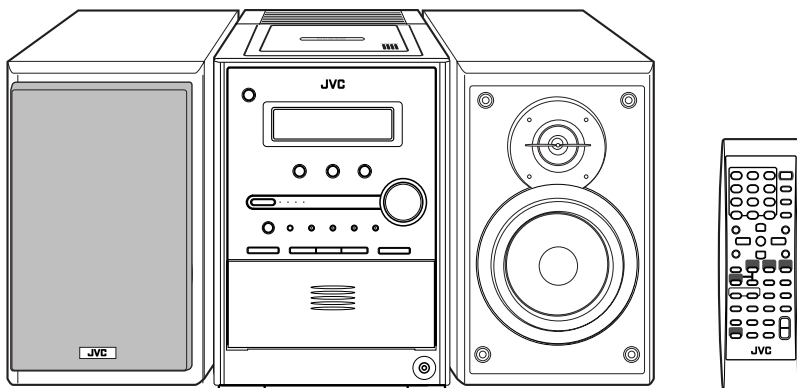 —Consists of CA-UXS77 and SP-UXS77

INSTRUCTIONS

MANUAL DE INSTRUCCIONES
INSTRUÇÕES

GVT0131-004A
[UW]

Warnings, Cautions and Others

Avisos, precauciones y otras notas

Advertências, precauções e outras notas

CAUTION—STANDBY/ON ϕ /I button!

Disconnect the mains plug to shut the power off completely (all lamps and indications go off). The STANDBY/ON ϕ /I button in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights in red.
- When the unit is turned on, the STANDBY/ON lamp lights in green.

The power can be remote controlled.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

PRECAUCIÓN—Botón STANDBY/ON ϕ /I !

Desconecte el enchufe tomacorriente para desconectar la alimentación completamente (se apagan todas las lámparas e indicaciones). Ninguna posición del botón STANDBY/ON ϕ /I conseguirá desconectar la red de alimentación eléctrica.

- Cuando la unidad está en espera, la lámpara STANDBY/ON se enciende en rojo.
- Cuando la unidad está encendida, la lámpara STANDBY/ON se apaga.

La alimentación puede controlarse mediante control remoto.

PRECAUCIÓN

Para reducir riesgos de choques eléctricos, incendio, etc.:

1. No extraiga los tornillos, las cubiertas ni la caja.
2. No exponga este aparato a la lluvia o a la humedad.

PRECAUCIÓN

- No obstruya las rendijas o los orificios de ventilación. (Si las rendijas o los orificios de ventilación quedan tapados con un periódico, un trozo de tela, etc., no se podrá disipar el calor).
- No ponga sobre el aparato ninguna llama al descubierto, como velas encendidas.
- Cuando tenga que descartar las pilas, tenga en cuenta los problemas ambientales y observe estrictamente los reglamentos o las leyes locales sobre disposición de las pilas.
- No exponga este aparato a la lluvia, humedad, goteos o salpicaduras. Tampoco ponga recipientes conteniendo líquidos, como floreros, encima del aparato.

CUIDADO—botão STANDBY/ON ϕ /I !

Desligue a ficha da tomada da parede para desligar completamente a alimentação (todas as luzes e indicadores apagam-se). O botão STANDBY/ON ϕ /I, quer esteja premido ou solto, não desliga a alimentação principal.

- Quando a unidade estiver em standby, a luz STANDBY/ON fica vermelha.
- Quando a unidade estiver ligada, a luz STANDBY/ON apaga-se.

A alimentação pode ser controlada à distância.

PRECAUÇÃO

Para reduzir riscos de choques elétricos, incêndio, etc.:

1. Não remova parafusos e tampas ou desmonte a caixa.
2. Não exponha este aparelho à chuva nem à umidade.

PRECAUÇÃO

- Não obstrua as aberturas e orifícios de ventilação. (Se os orifícios ou aberturas de ventilação estiverem obstruídos por qualquer papel ou tecido, não haverá circulação do ar quente.)
- Não coloque nenhum objeto com chamas, como velas acesas, sobre o aparelho.
- Ao descartar as baterias, leve em consideração os problemas que possam ser causados ao meio ambiente e os regulamentos e leis locais e governamentais sobre recolhimento dessas baterias devem ser rigorosamente seguidos.
- Não exponha este aparelho à chuva, umidade, pingos ou esguichos de água, nem coloque em cima do mesmo qualquer tipo de recipiente que contenha líquidos, como por exemplo vasos.

CAUTION: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on a level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

Precaución: Ventilación correcta


Para evitar el riesgo de descargas eléctricas e incendio y prevenir posibles daños, instale el equipo en un lugar que cumpla los siguientes requisitos:

1. Parte frontal: Sin obstrucciones, espacio abierto.
2. Lados/parte superior/parte posterior: No debe haber ninguna obstrucción en las áreas mostradas por las dimensiones de la siguiente figura.
3. Parte inferior: Sitúe el equipo sobre una superficie nivelada. Mantenga un espacio adecuado para permitir el paso del aire y una correcta ventilación, situando el equipo sobre un soporte de 10 o más cm de altura.

PRECAUÇÃO: Ventilação adequada

Para evitar riscos de choques elétricos e incêndios, e prevenir avarias, instale o aparelho como segue:

1. Parte frontal: Sem obstruções e espaços abertos.
2. Partes laterais/ Tampa/ Posterior: Nenhuma obstrução deverá ser colocada entre as áreas cujas dimensões são indicadas abaixo.
3. Parte inferior: Instale-o sobre uma superfície plana. Deverá ser mantido espaço suficiente para a ventilação se este for instalado numa posição que tenha uma altura de 10 cm ou mais.

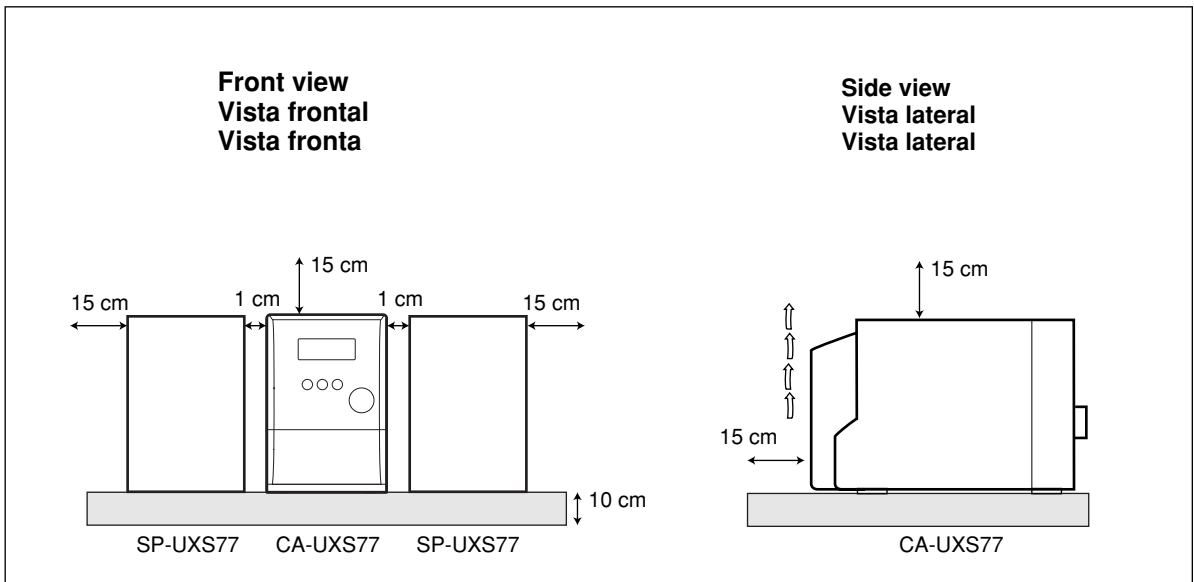

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE UNIT.

IMPORTANTE PARA PRODUCTOS LÁSER

1. PRODUCTO LÁSER CLASE 1
2. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no hay piezas que pueda reparar el usuario; encargue el servicio a personal técnico cualificado.
3. **PRECAUCIÓN:** Radiación láser visible e invisible en caso de apertura o con interbloqueo averiado o defectuoso. Evite la exposición directa a los haces.
4. REPRODUCCIÓN DE LA ETIQUETA: ETIQUETA DE PRECAUCIÓN, COLOCADA EN EL INTERIOR DE LA UNIDAD.

PARA PRODUTOS LASER, IMPORTANTE

1. PRODUTO LASER DE CLASSE 1
2. **PRECAUÇÃO:** não abrir a cobertura superior. Dentro da unidade não existem partes cuja manutenção tenha de ser feita pelo usuário; deixe qualquer manutenção a cargo do pessoal de serviço qualificado.
3. **PRECAUCAO:** radiação laser visível e invisível quando se abre e com a conexão interna em falha ou frustrada. Evite a exposição direta ao raio.
4. REPRODUÇÃO DE ETIQUETA: ETIQUETA DE AVISO SITUADA NO INTERIOR DA UNIDADE.

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

WARNING : Synlig och osynlig laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)

VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alttiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

Contents

Introduction	2	Advanced Tape Operations	32
Precautions	2	Recording on a Tape	32
How to Read This Manual	2	Synchronized Disc Recording	33
Getting Started	3	Timer Operations	35
Step 1: Unpack	3	Setting the Timer	35
Step 2: Prepare the Remote Control	3	Setup Menu Operations	37
Step 3: Hook Up	4	Operating Procedure	37
Changing the Scanning Mode	7	■ LANGUAGE Setup Menu	38
Before Operating the System	8	■ PICTURE Setup Menu	38
Playable Disc Types	8	■ AUDIO Setup Menu	39
Parts Index	9	■ OTHERS Setup Menu	40
Display Indicators	10	Restricting the Review—Parental Lock	41
Daily Operations—Playback	12	Additional Information	43
Listening to the Radio	13	Learning More about This System	43
Playing Back a Disc	14	Maintenance	45
Playing Back a Tape	16	Troubleshooting	46
Daily Operations—Sound&Other Adjustments	17	Language Code List	47
Adjusting the Volume	17	Country/Area Codes List	48
Adjusting the Sound	17	DVD OPTICAL DIGITAL OUT Signals	49
Presetting Automatic DVD Sound Increase Level	18	Specifications	50
Adjusting the Audio Input Level	18		
Changing the Display Brightness	18		
Changing the Picture Tone	18		
Setting the Clock	19		
Turning Off the Power Automatically	20		
Unique DVD/VCD Operations	21		
Selecting the Sound Track	21		
Selecting the Subtitle Language	22		
Selecting the View Angle	22		
Playing Back a Bonus Group	22		
Selecting Browsable Still Pictures	23		
Special Effect Playback	23		
Advanced Disc Operations	24		
Programming the Playing Order—Program Play	24		
Playing at Random—Random Play	25		
Playing Repeatedly	26		
Prohibiting Disc Ejection—Child Lock	26		
On-Screen Disc Operations	27		
On-screen Bar Information	27		
Operations Using the On-screen Bar	28		
Operations on the CONTROL Screen	30		

Introduction

Precautions

Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup in the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

Moisture condensation

Moisture may condense on the lenses inside the System in the following cases:

- After starting to heat the room
- In a damp room
- If the System is brought directly from a cold to a warm place.

Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

Internal heat

- A cooling fan is mounted on the rear panel to prevent heat buildup inside the unit.



For safety, observe the following carefully:

- Make sure there is good ventilation around the unit. Poor ventilation could overheat and damage the unit.
- DO NOT block the cooling fan and the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

Others

- Should any metallic object or liquid fall into the System, unplug the AC power cord and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC power cord from the wall outlet.

If anything goes wrong, unplug the AC power cord and consult your dealer.

How to Read This Manual


To make the explanations in this manual as simple and easy-to-understand as possible, we have adapted the following methods:

- Button and control operations are explained as listed in the table below. In this manual, the operations using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.
- **Some related tips and notes are explained later in the sections “Learning More about This System” and “Troubleshooting,” but not in the same section explaining the operations.** If you want to know more about the functions, or if you have a doubt about the function, go to these sections and you will find your answer there.

	Indicates that you press the button briefly .
	Indicates that you press the button briefly and repeatedly until an option you want is selected.
	Indicates that you press one of the buttons.
	Indicates that you press and hold the button for a specified period. <ul style="list-style-type: none"> • The number inside the arrow indicates the period of press (in this example, 2 seconds). • If no number is inside the arrow, press and hold until the entire procedure is complete or until you get a result you want.
	Indicates that you turn the control toward the specified direction(s).
	Indicates that this operation is only possible using the remote control.
	Indicates that this operation is only possible using the buttons and controls on the main unit.

Getting Started

Step 1: Unpack the package and check the accessories.

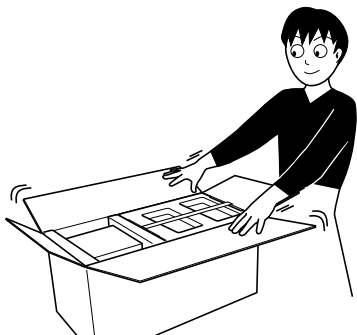

Step 1: Unpack

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.


- FM antenna (1)
- AM loop antenna (1)
- Remote control (1)
- Composite video cord (1)
- Batteries (2)
- AC plug adaptor (1)

If any item is missing, consult your dealer immediately.


Step 2: Prepare the Remote Control

Insert the batteries into the remote control by matching the polarity (+ and -) correctly.


Step 2: Prepare the remote control.

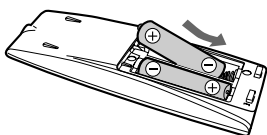


1

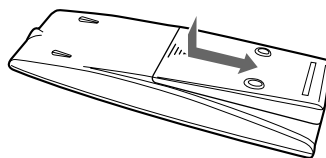


2

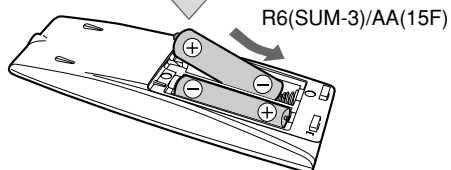

3

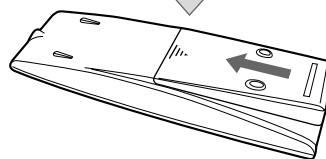

Step 3: Hook up the components such as AM/FM antennas, speakers, etc. (see pages 4 to 7).

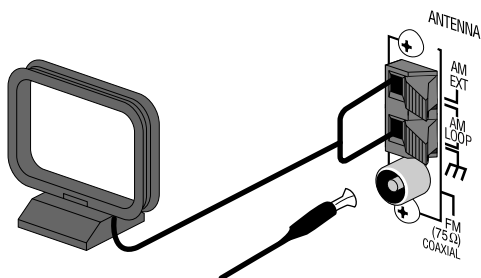

Finally plug the AC power cord.
Now you can operate the System.

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.





Step 3: Hook Up

If you need more detailed information, see page 6.

Illustrations of the input/output terminals below are typical examples.
When you connect other components, refer also to their manuals since the terminal names actually printed on the rear may vary.


Turn the power off to all components before connections.

AM loop antenna (supplied)
Turn it until the best reception is obtained.

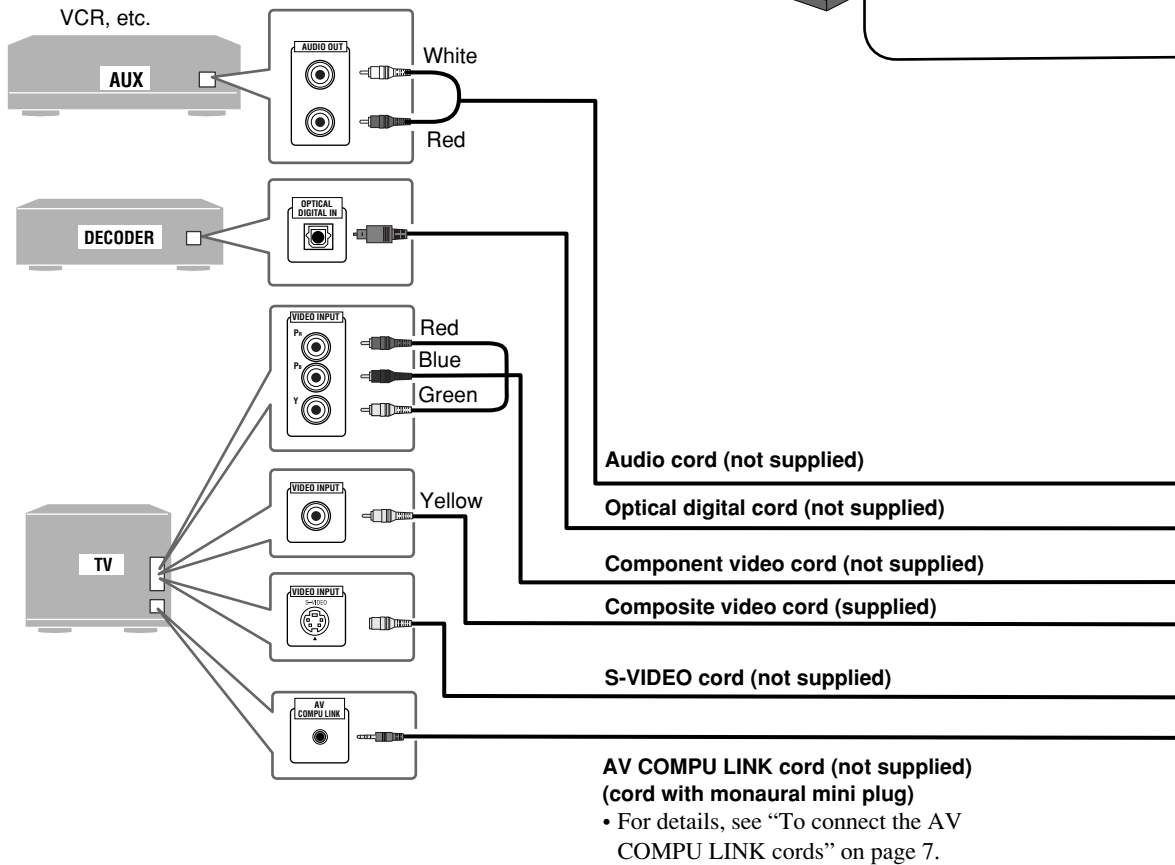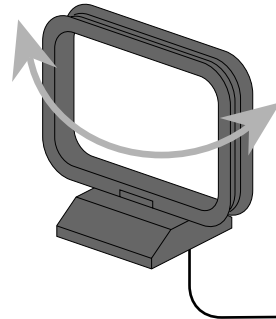


To a wall outlet
Plug the AC power cord only after all connections are complete.
• If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.

For better FM/AM reception

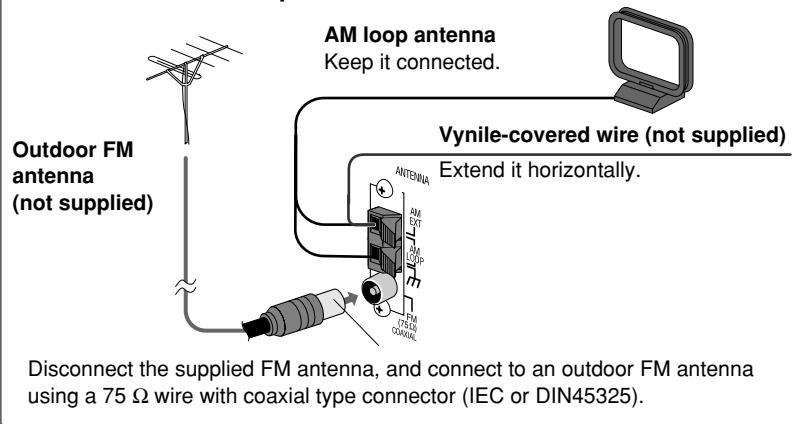


FM antenna (supplied)

Extend it so that you can obtain the best reception.

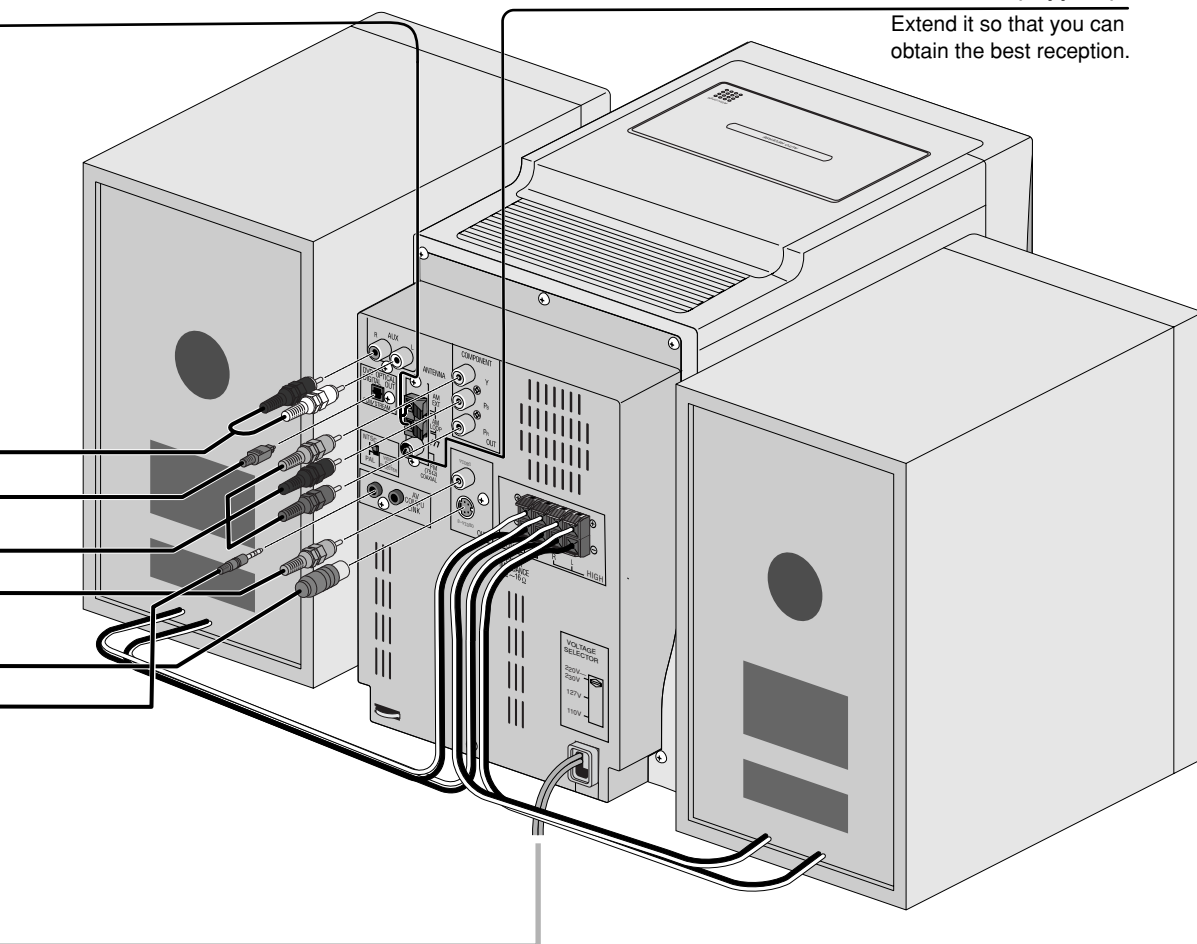


To assemble and connect the AM loop antenna

To assemble the AM loop antenna

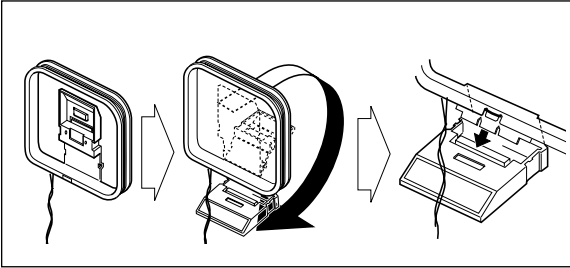


To connect the AM loop antenna

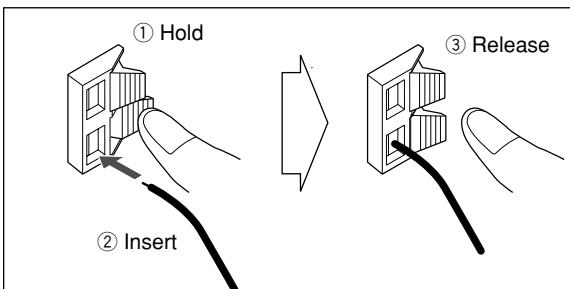

- If the AM loop antenna wire or speaker cords are covered with vinyl, remove the vinyl to expose the tip of the antenna by twisting the vinyl.
- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

To connect the speaker cords

Connect the right speaker to the RIGHT terminals, and the left speaker to the LEFT terminals.

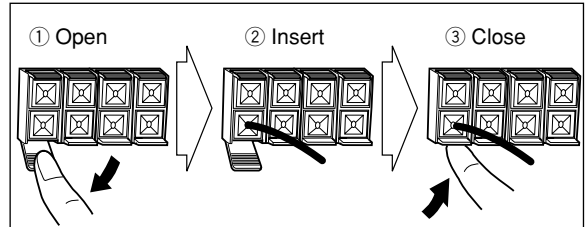

When connecting the speaker cords, match the polarity of the speaker terminals:

- For LOW terminals: Red cord to (+) and black cord to (–).
- For HIGH terminals: Grey cord to (+) and blue cord to (–)

The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, it may cause color distortions. So, pay attention to the following when installing the speakers.

– When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers.

Then wait at least 30 minutes before turning on the TV's main power switch again.

Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.




- DO NOT connect more than one speaker to each terminal.
- DO NOT allow the conductor of the speaker cords to be in touch with the metallic parts of the System.

To connect the AV COMPU LINK cords

This system allows you to use JVC's TV with simple operations; by starting playing back a disc, the TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

To use AV COMPU LINK, you need to connect the System and the TV by using a cord with monaural mini-plugs (not supplied) in addition to the video input/output connection through the COMPONENT jacks, S-VIDEO jack or VIDEO (composite) jack on the rear.

To connect digital audio

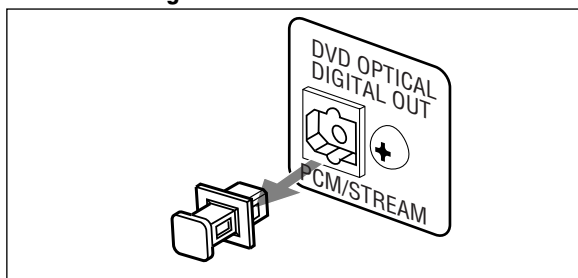

Before connecting optical digital cord, remove the protective cap from the DVD OPTICAL DIGITAL OUT terminal.


To set the video output selector

You can select the video output to match it to the color system of your TV.

	<p>NTSC: For an NTSC TV or Multi-color system TV.</p> <p>PAL: For a PAL TV or Multi-color system TV.</p>
--	--

Adjusting the Voltage Selector

Use a screwdriver to slide the voltage selector so that the voltage marker is pointing at the same voltage as where you are plugging in the unit. (See also the back cover page.)

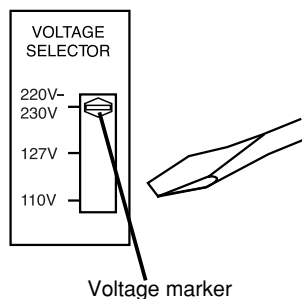


DO NOT plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

Changing the Scanning Mode



This System supports progressive scanning. If you connect a progressive TV through the COMPONENT jacks, you can enjoy a high quality picture from the built-in DVD player by selecting "PROGRE."

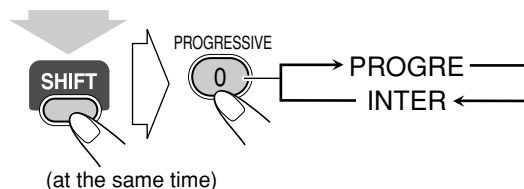






- PROGRE** Progressive scanning. For a progressive TV.
- INTER** Interlaced scanning. For a conventional TV.

Before Operating the System

Playable Disc Types

This unit has been designed to play back the following discs:

Disc Type	Mark (Logo)	Video Format	Region Code* Number
DVD Video		NTSC or PAL	4 or ALL
DVD Audio			
Video CD (VCD)			
Super Video CD (SVCD)			
Audio CD		—	—
CD-R	The System can play back CD-R or CD-RW recorded in the Audio CD, Video CD, SVCD, MP3, WMA, and JPEG formats.		
CD-RW			
DVD-R	The System can play back DVD-R or DVD-RW recorded in the video format.		
DVD-RW			

In addition to the above discs, this system can play back audio data recorded on CD Text, CD-G (CD Graphics), and CD-Extra.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD+R, DVD+RW, CD-I (CD-I Ready), CD-ROM, Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- In this manual, “file” and “track” are interchangeably used for MP3/WMA/JPEG operations.

* Note on Region Code

DVD players and DVDs have their own Region Code numbers. This System can play back only DVDs recorded with the NTSC or PAL color system whose Region Code numbers including “4.”

EX.:



If a DVD with the improper Region Code numbers is loaded, “RGN ERR (REGION CODE ERROR)” appears on the display and playback will not start.

DVD Video—digital audio formats

The System can play back the following digital audio formats.

- Linear PCM:** Uncompressed digital audio, the same format used for CDs and most studio masters.
- Dolby Digital:** Compressed digital audio, developed by Dolby Laboratories, which enables multi-channel encode to create the realistic surround sound.
- DTS (Digital Theater Systems):** Compressed digital audio, developed by Digital Theater Systems, Inc., which enables multi-channel like Dolby Digital. As the compression ratio is lower than for Dolby Digital, it provides wider dynamic range and better separation.

When playing a multi-channel encoded DVD, the System properly converts these multi-channel signals into 2 channels, and emits the downmixed sound from the speakers.

- To enjoy the powerful sound of these multi-channel encoded DVDs,** connect a proper decoder or an amplifier with a proper built-in decoder to the digital output terminal on the rear.

IMPORTANT: Before playing a disc, make sure of the following...

- Turn on the TV and select an appropriate input mode on the TV to view the pictures or on-screen displays on the TV screen.
- For disc playback, you can change the initial setting to your preference. See “Setup Menu Operations” on page 37.


If “⊘” appears on the TV screen when you press a button, the disc cannot accept the operation you have tried to do, or data required for that operation is not recorded on the disc.

- Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS2.0+DIGITAL OUT” are registered trademarks of Digital Theater Systems, Inc.


Parts Index

Refer to the pages to see how to use the buttons and controls.

Remote control

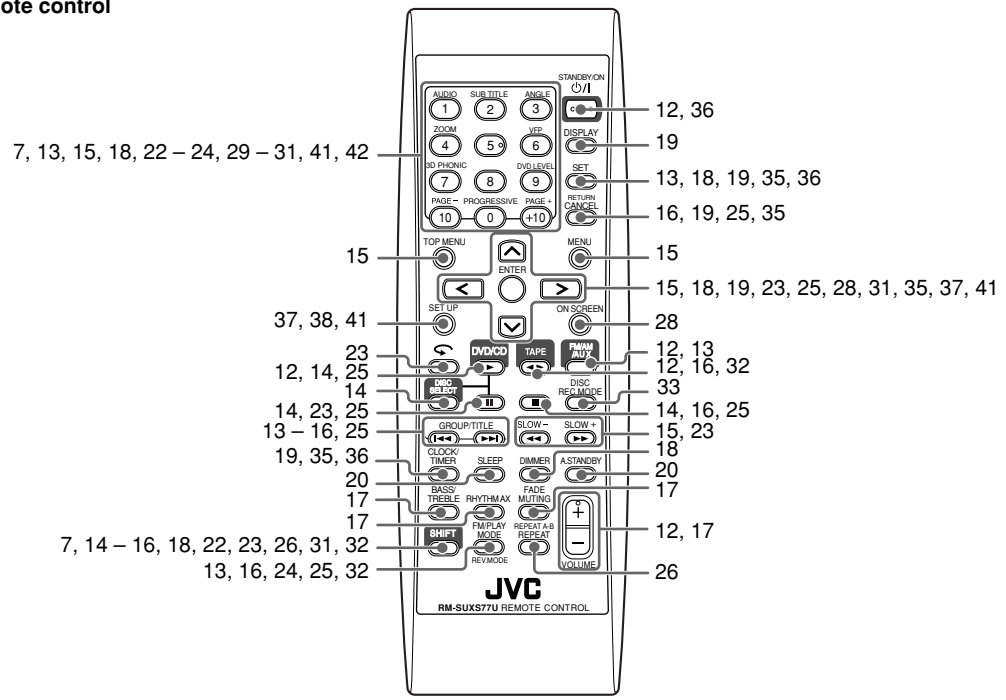


Main unit

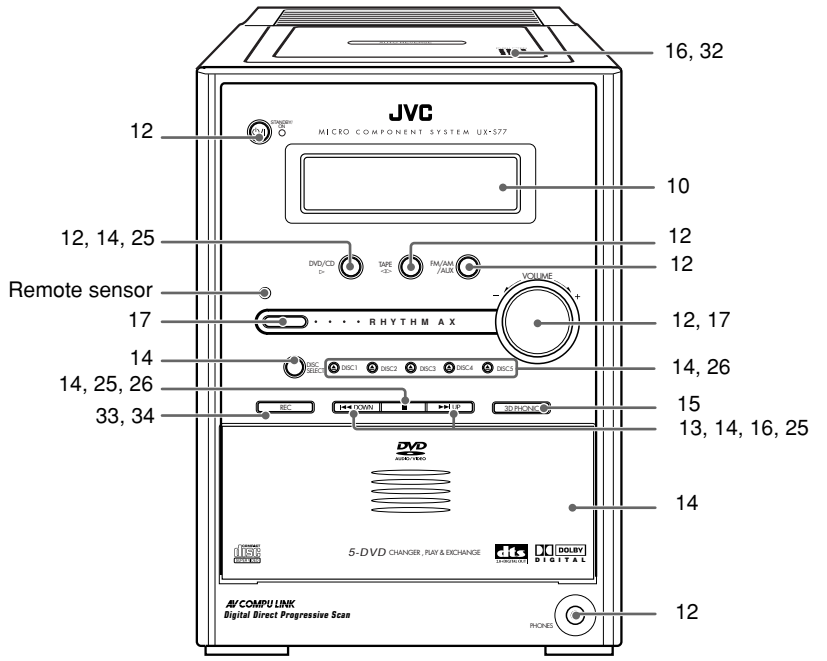





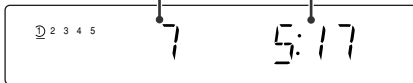
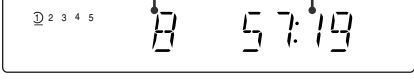
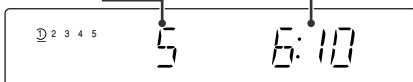
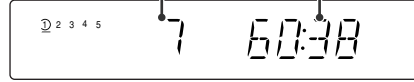

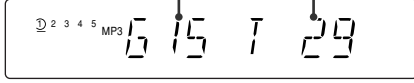
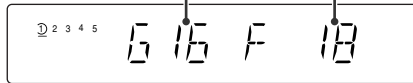
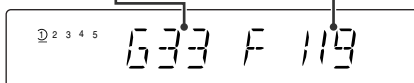
Display Indicators

The indications on the display teach you a lot of things while you are operating the System. Before operating the System, be familiar with when and how the indicator illuminates on the display.

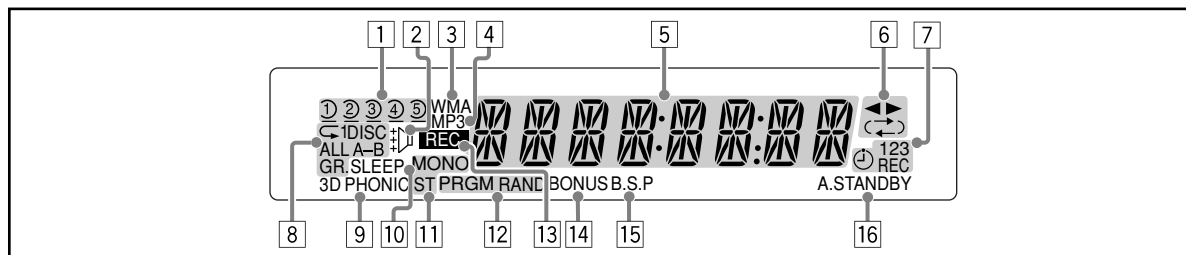


- 1 Disc tray indicators
 - 1-5: Disc tray number indicators.
 - \odot (tray indicator):
 - Lights when the disc is detected.
 - Flashes while playing back a disc.
 - Goes off when there is no disc in the tray.
 - \ominus (disc indicator): lights below when the tray indicator indicates the current selected disc.
- 2 RHYTHM AX indicator
 - Lights when RHYTHM AX is activated (see page 17).
- 3 WMA indicator
 - Lights when the current track is recorded in WMA format.
- 4 MP3 indicator
 - Lights when the current track is recorded in MP3 format.
- 5 Main display
 - While listening to radio: band (or preset number) and station frequency appear.
 - While selecting tape: “TAPE” appears.
 - While selecting “AUX”: “AUX” appears.
 - While playing a disc: see “Indications on the main display while operating a disc” on page 11.
- 6 Tape operation indicators
 - $\blacktriangleleft \blacktriangleright$ (tape direction):
 - Lights to indicate the current tape running direction.
 - Flashes slowly during playback and recording.
 - Flashes quickly while rewinding a tape.
 - \curvearrowright (Reverse mode):
 - \curvearrowright : tape play continues endlessly.
 - \curvearrowright : tape automatically reverses once.
 - \curvearrowright : tape play stops at the end of one side.
- 7 Timer indicators
 - \odot : lights when Daily Timer or Recording Timer stands by; flashes while working.
 - 1/2/3: lights up when a Daily Timer (1, 2, or 3) stands by; flashes while setting or working.
 - REC: lights when the Recording Timer stands by; flashes while setting or working.
- 8 Repeat mode indicators
 - \curvearrowright : lights when Repeat mode is activated.
 - 1 DISC ALL A-B GR.:
 - 1: lights when One Track Repeat is activated.
 - 1DISC: lights when One Disc Repeat is activated.
 - ALL: lights when All Disc Repeat is activated.
 - A-B: lights when A-B Repeat is activated.
 - GR.: lights when Group Repeat is activated.
- 9 3D PHONIC indicator
 - Lights when 3D PHONIC is activated (see page 15).
- 10 SLEEP indicator
 - Lights when the Sleep Timer is activated.
- 11 FM reception indicators
 - MONO: lights when FM reception mode is monaural.
 - ST (stereo): lights while an FM stereo station with sufficient signal strength is tuned in.
- 12 Disc operation indicators
 - PRGM (program): lights when Program Play mode is activated.
 - RAND (random): lights when Random Play mode is activated
- 13 REC indicators
 - Lights while recording.
- 14 BONUS indicator
 - Lights when a DVD Audio with a bonus group is detected (see page 22).
- 15 B.S.P indicator
 - Lights when the current disc is DVD Audio with browsable still picture (see page 23).
- 16 A (auto) STANDBY indicator
 - Lights when Auto Standby is activated.
 - Flashes when disc playback stops with Auto Standby activated.

Indications on the main display while operating a disc

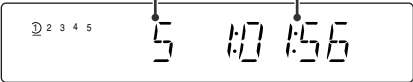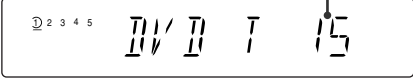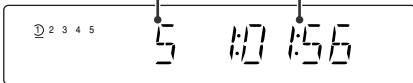While playing back a disc:	While disc play is stopped:
<ul style="list-style-type: none"> DVD Video: <p>Chapter no. Elapsed playing time</p>  <p>By pressing DISPLAY, you can show the current title and chapter numbers for a few seconds.</p>	<ul style="list-style-type: none"> DVD Video: <p>Total title no.</p> 
<ul style="list-style-type: none"> DVD Audio: <p>Track no. Elapsed playing time</p>  <p>By pressing DISPLAY, you can show the current group and track numbers for a few seconds.</p>	<ul style="list-style-type: none"> DVD Audio: <p>Group no. Track no.</p> 
<ul style="list-style-type: none"> Audio CD: <p>Track no. Elapsed playing time</p> 	<ul style="list-style-type: none"> Audio CD: <p>Total track no. Total playing time</p> 
<ul style="list-style-type: none"> SVCD/VCD: <p>Track no. Elapsed playing time*</p>  <p>* "PBC" appears while playing a disc with PBC.</p>	<ul style="list-style-type: none"> SVCD/VCD: <p>Total track no.* Total playing time</p>  <p>* Changes to "PBC" when stopping PBC playback.</p>
<ul style="list-style-type: none"> MP3/WMA: <p>Track no. Elapsed playing time</p>  <p>By pressing DISPLAY, you can show the current group and track numbers for a few seconds.</p>	<ul style="list-style-type: none"> MP3/WMA: <p>Current group no. Current track No.</p> 
<ul style="list-style-type: none"> JPEG: <p>Group no. File no.</p> 	<ul style="list-style-type: none"> JPEG: <p>Current group no. Current file No.</p> 

- If Resume is turned "ON" (see page 40), "RESUME" appears when you stop playback (except for Audio CD and MP3/WMA/JPEG discs).

Daily Operations—Playback

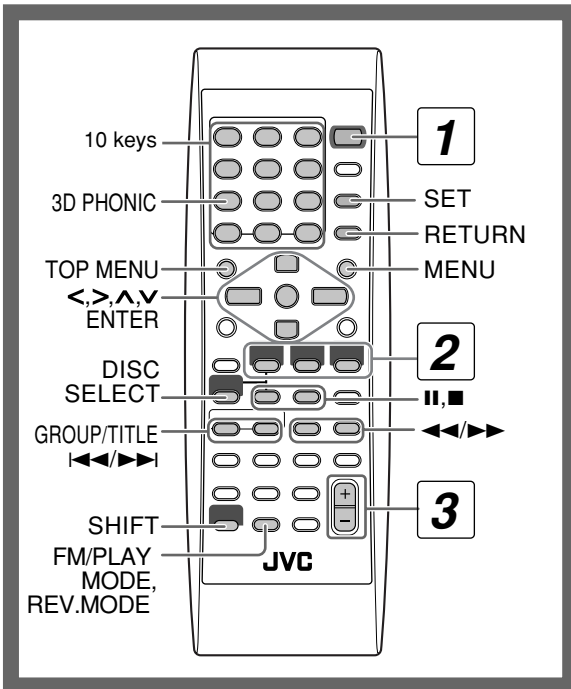

In this manual, the operation using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.

1 Turn on the power.

The STANDBY/ON lamp on the main unit lights in green.

- Without pressing STANDBY/ON \odot/I , the System turns on by pressing one of the source selecting buttons in the next step.

2 Select the source.

Playback automatically starts if the selected source is ready to start.

 
- If you press AUX, start playback source on the external component.

3 Adjust the volume.

4 Operate the target source as explained later.

To turn off (stand by) the unit

STANDBY/ON



The STANDBY/ON lamp on the main unit lights in red.

- A small amount of power is always consumed even while on standby.


For private listening

Connect a pair of headphones to the PHONES jack on the main unit. The sound will no longer come out of the speakers. Be sure to turn down the volume before connecting or putting the headphones.

- Disconnecting the headphones will activate the speakers again.



DO NOT turn off (stand by) the System with the volume set to an extremely high level; Otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the System or start playback.


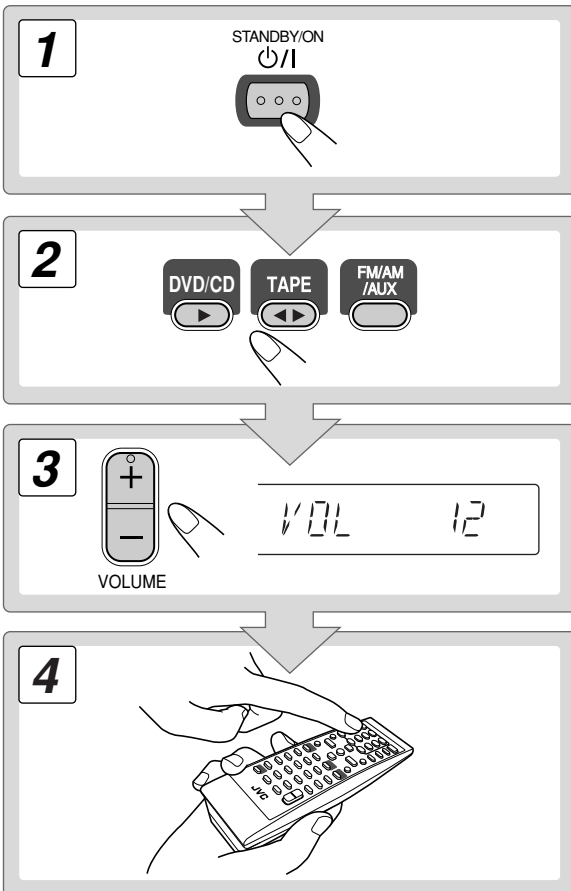


Listening to the Radio

To select the AM tuner interval spacing

Some countries space AM stations 9 kHz spacing, and other countries use 10 kHz spacing.

You can change the AM tuner intervals while the System is on stand by and the last selected source is AM.

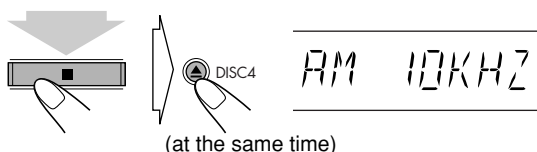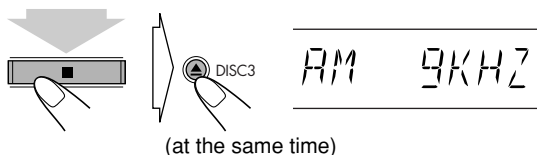

To select the band (FM or AM)



To tune in to a station

While FM or AM is selected...

Remote control:	Main unit:

Frequency starts changing on the display.

When a station (frequency) with sufficient signal strength is tuned in, the frequency stops changing.

- When you repeatedly press the button, the frequency changes step by step.

To stop searching manually, press either button.

If the received FM station is hard to listen



The MONO indicator lights on the display. Reception will improve though stereo effect is lost—Monaural reception mode.

To restore the stereo effect, press the button again (the MONO indicator goes off).

To preset the stations



You can preset 30 FM and 15 AM stations.

1 Tune in to a station you want to preset.


- You can also store the monaural reception mode for FM preset stations if selected.

2 Activate the preset number entry mode.



- Finish the following process while the indication on the display is flashing.

3 Select a preset number for the station you store.

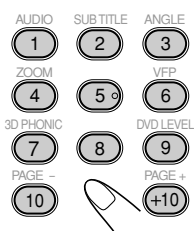

Examples:

 
To select preset number 5, press 5.

To select preset number 15, press +10, then 5.

To select preset number 30, press +10, +10, then 10.



4 Store the station.




To tune in to a preset station



1 Select the band (FM or AM).



2 Select a preset number for the station you store.

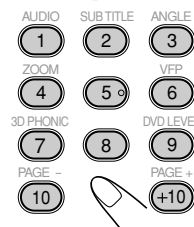

- You can also use the ◀▶ button to select a preset station.


Playing Back a Disc

Before operating a disc, be familiar how a disc is recorded.

- DVD Video comprises of “Titles” which includes “Chapters,” DVD Audio/MP3/WMA comprise of “Groups” which include “Tracks,” and CD/SVCD/VCD comprise of only “Tracks.”
- For JPEG playback, see “Operations on the CONTROL Screen” on page 30.

To insert a disc

You can insert a disc while playing another source.

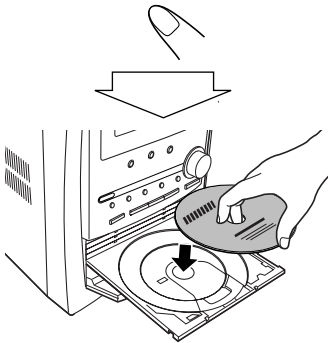

To close the disc tray, press the same ▲ again.

- When current selected disc tray open, you use DVD/CD ► button to close disc tray and start playback (depending on how the disc is programmed internally).
- When you press ▲ for the next tray you want to place another disc onto, the first disc tray automatically closes and then next tray comes out.

To start:	To pause:	To stop:
	To release, press DVD/CD ►.	

- **While playing DVD/SVCD/VCD:** This System can store the stop point, and when you start playback again by pressing DVD/CD ►, it starts from the position where you have stopped—Resume Play. (“RESUME” appears on the display when you stop playback.)

To stop completely while Resume is activated, press ■ twice. (To cancel Resume, see “RESUME” on page 40.)

- When operating the System, the on-screen guide icon (see the following table) appears on the TV.
- To deactivate the on-screen guide icons, see “ON SCREEN GUIDE” on page 40.

On-screen guide icons


- During DVD Video playback, the following icons may appear on the TV screen:

- At the beginning of a scene containing multi-angle views.
- At the beginning of a scene containing multi-audio sounds.
- At the beginning of a scene containing multi-subtitles.

- The following icons will be also shown on the TV screen to indicate your current operation.



To select a disc

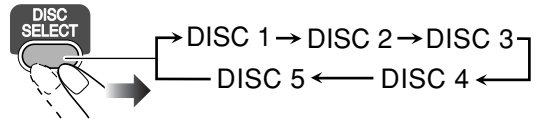


- When current source is not disc, press DVD/CD ► to select the disc player as the source during “PLAY” flashing on the display.

To select a title/group



While playing...

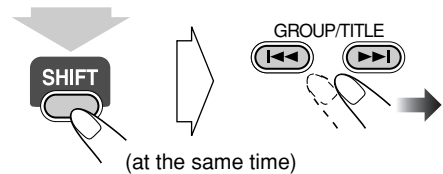

- Group name appears for MP3/WMA discs.

To select a chapter/track

While playing...



- First time you press ◀◀, you can go back to the beginning of the current chapter/track.

To locate a particular portion

While playing a disc except MP3/WMA...




- No sound comes out while searching on DVD Video/SVCD/VCD.

To return to normal playback, press DVD/CD ►.

To locate an item directly

You can select a title/chapter/track directly and start playback.

- For DVD Video, you can select a **title before starting playback**, while you can select a **chapter after starting playback**.

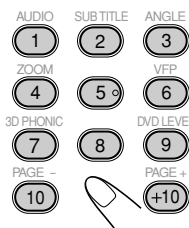


Examples:

- To select number 5, press 5.
- To select number 15, press +10, then 5.
- To select number 30, press +10, +10, then 10.

To use 3D Phonic

While playing...

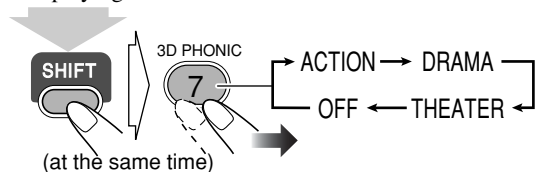

On the TV screen


ACTION	Suitable for action movies and sports programs.
DRAMA	Creates natural and warm sound. Enjoy movies in a relaxed mood.
THEATER	Enjoy sound effects like in a major theater.

To play back using the disc menu


You can operate a disc—DVD and SVCD/VCD with Playback Control (PBC)—using the disc menu shown on the TV screen.

■ For DVD Video/DVD Audio:

 1 Show the disc menu.



2 Select an item on the disc menu.

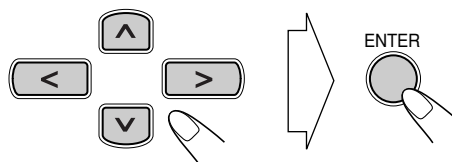


- With some discs, you can also select items by entering the number using the 10 keys.

■ For SVCD/VCD with PBC:

While playing a disc with PBC, "PBC" appears on the display.


When disc menu appears on the TV screen, select an item on the menu. Playback of the selected item starts.

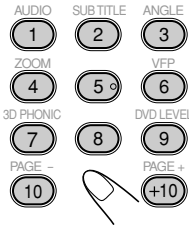


Examples:

- To select number 5, press 5.
- To select number 15, press +10, then 5.
- To select number 30, press +10, +10, then 10.


To move to the next or previous page of the current menu:

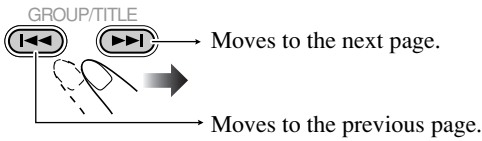

To return to the previous menu:

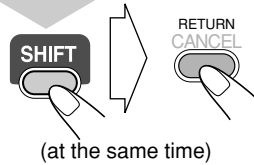

To cancel PBC

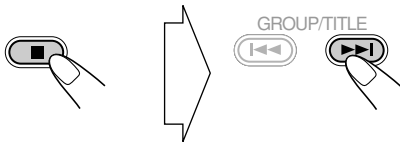


- You can also cancel PBC function by pressing the number button to select a track.

To reactivate PBC, press ■, then press ◀◀◀.

Playing Back a Tape


To insert a tape

You can play back type I tapes.

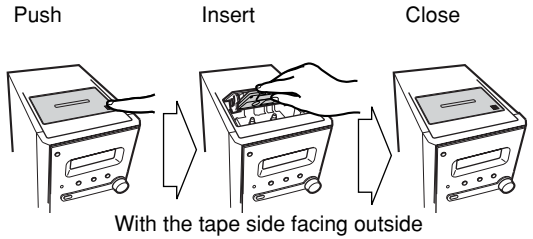


To start:	To stop:
To rewind tape:	
	Rewind the tape to the right.
	Rewind the tape to the left.

To change the tape running direction

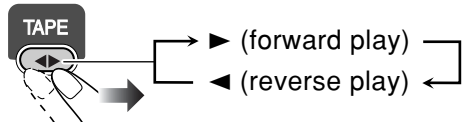


To reverse the tape automatically

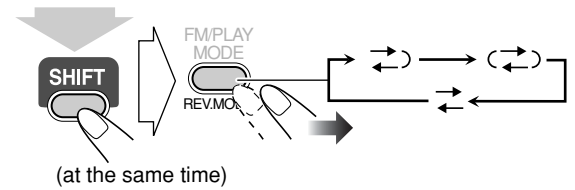


	Tape is played from the forward side to the reverse side. When the reverse side is played back, playback stops.
	Tape is automatically reversed, and playback repeats until you stop it.
	Tape will not be reversed. When the current side of the tape reaches its end, playback stops.

Daily Operations—Sound&Other Adjustments

Remote control

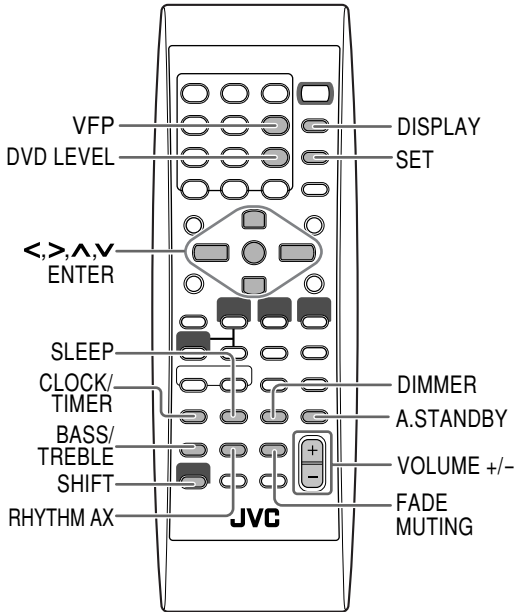


Main unit

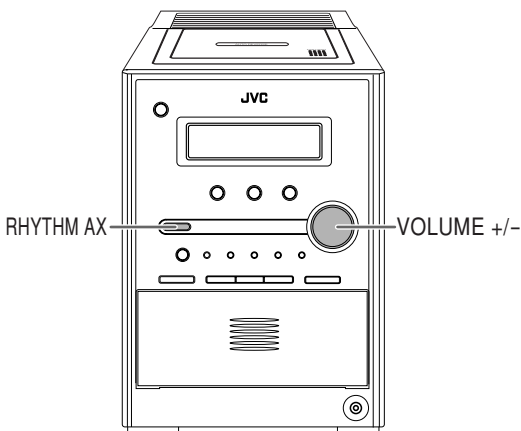

Adjusting the Volume

You can adjust the volume level from level 0 (VOL MIN) to level 50 (VOL MAX).

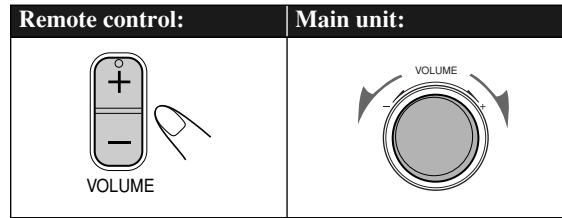

To drop the volume in a moment

 


To restore the volume, press again, or adjust the volume level.

Adjusting the Sound

To emphasize rhythm feeling—RHYTHM AX


This function emphasizes bass attack feeling.



To adjust the tone

You can adjust the bass and treble level from -5 to +5.

To adjust the bass

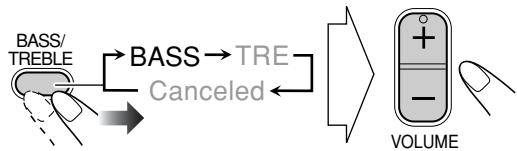


To adjust the treble



Presetting Automatic DVD Sound Increase Level

Level          

The DVD sound is sometimes recorded at a lower level than for other discs and sources. You can set the increase level for the currently loaded DVD, so you do not have to adjust the volume every time you change the source.

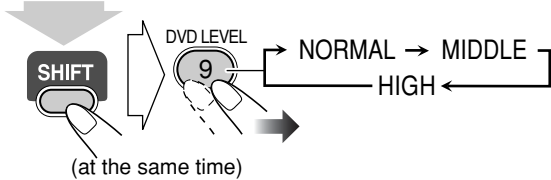


NORMAL	Original recording level.
MIDDLE	Output level is increased (less than "HIGH").
HIGH	Output level is increased (more than "MIDDLE").

- Once the current DVD is ejected, this setting is canceled and set automatically to "NORMAL."

Adjusting the Audio Input Level

If the sound from the component connected to the AUX jacks is too loud or is not loud enough when changing from another source to "AUX," you can change the audio input level through the AUX jacks (without changing the volume level).


While the "AUX" is selected as a source...

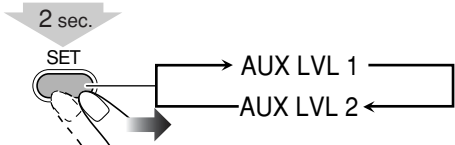

AUX LVL 1	Select this when the sound is too loud (initial setting).
AUX LVL 2	Select this when the sound is not loud enough.

Changing the Display Brightness

 You can dim the display window.





DIM 1	Dims the display.
DIM 2	Erases the display illumination.
AUTO DIM	Erases the display illumination a few seconds after disc playback starts. <ul style="list-style-type: none"> • The display illuminates when playback stops.

Changing the Picture Tone

While showing a playback picture on the TV screen, you can select the preset picture tone, or adjust it and store your own likeness.


To select a preset picture tone

1 Activate VFP.

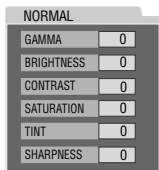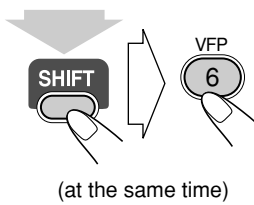

On the TV screen

 2 Select a preset picture tone.




NORMAL	Normally select this.
CINEMA	Suitable for a movie source.
USER1/USER2	You can adjust parameters and can store the settings (see page 19).

To adjust the picture tone

1 Select "USER1" or "USER2."


- Follow steps 1 and 2 explained on page 18.

2 Select a parameter you want to adjust.

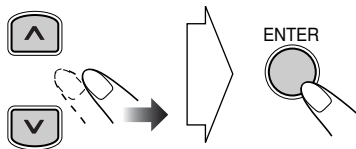

GAMMA	Adjust if the neutral color is bright or dark (-3 to +3).
BRIGHTNESS	Adjust if the entire picture is bright or dark (-8 to +8).
CONTRAST	Adjust if the far and near positions are unnatural (-7 to +7).
SATURATION	Adjust if the picture is whitish or blackish (-7 to +7).
TINT	Adjust if the human skin color is unnatural (-7 to +7).
SHARPNESS	Adjust if the picture is indistinct (-8 to +8).

3 Adjust the parameter.

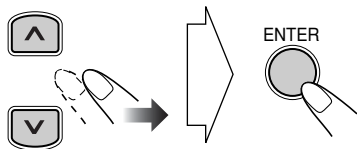

4 Repeat steps 2 to 3 to adjust other parameters.

 
To erase the screen, press VFP again while holding SHIFT.

Setting the Clock

Without setting the built-in clock, you cannot use Daily Timers (see page 35) and Sleep Timer.


- To exit from the clock setting, press CLOCK/TIMER as required.
- To go back to the previous step, press CANCEL.

1 Activate the clock setting mode.




- If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected.

2 Adjust the hour.

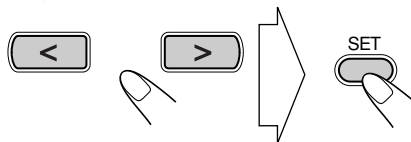


3 Adjust the minute.

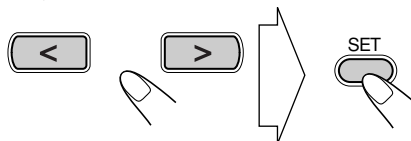

Now the built-in clock starts working.

 To check the current clock time during play




- While playing a DVD and MP3/WMA, you cannot check the current clock time (see page 11).



Turning Off the Power

Automatically

 To turn off the unit after playback is over—Auto Standby




When Auto Standby is in use, the A.STANDBY indicator lights on the display.

When disc or tape play stops, the A.STANDBY indicator starts flashing. If no operation is done for about 3 minutes while the indicator is flashing, the System turns off (stands by) automatically.

- Auto Standby does not work while you are listening to radio (FM/AM) and the external component (AUX).


To turn off the unit after a certain period of time—Sleep Timer

 1 Specify the time (in minutes).



2 Wait until the set time goes off.

 
To check the time remaining until the shut-off time



- If you press the button repeatedly, you can change the shut-off time.

Unique DVD/VCD Operations

Remote control

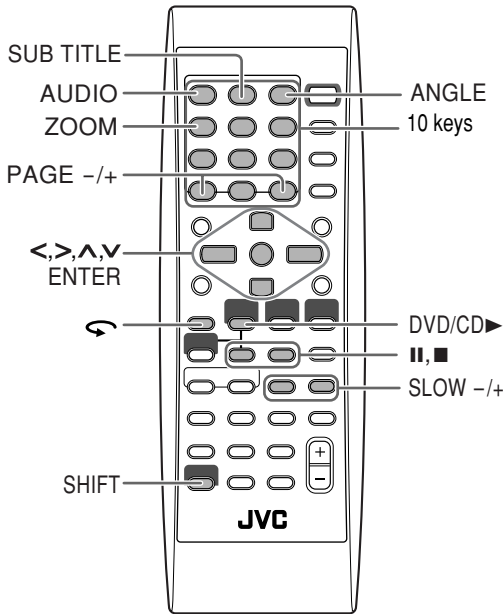

Selecting the Sound Track




For DVD Video: While playing back a chapter containing audio languages, you can select the language to listen to.

For DVD Audio: While playing back a track containing audio channels, you can select the audio channel to listen to.


For SVCD/VCD: When playing back a track, you can select the audio channel to play.

- You can also select the audio track using the on-screen bar (see page 27).

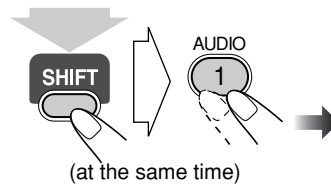


While playing a DVD Video...

Ex.:

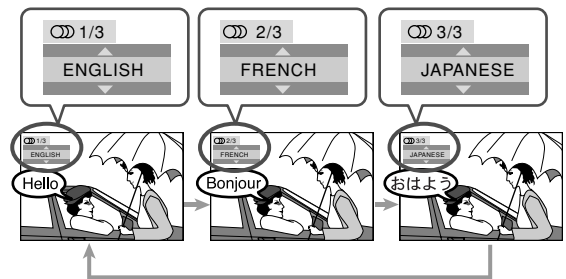


While playing a DVD Audio...

 Ex.:



While playing an SVCD or VCD...

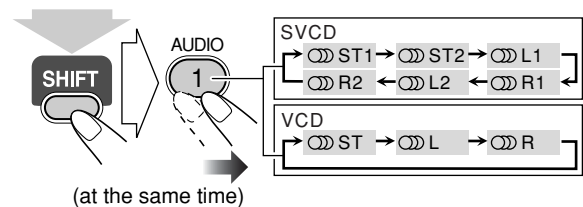

ST1/ST2/ST To listen to normal stereo (2 channel) playback.

L1/L2/L To listen to the left audio channel.

R1/R2/R To listen to the right audio channel.

- SVCD can have 4 audio channels. Karaoke SVCD usually uses these 4 channels to record two 2-channel recordings (ST1/ST2).

Selecting the Subtitle Language


For DVD Video: While playing back a chapter containing subtitles in different languages, you can select the subtitle language to display on the TV screen.

For SVCD: While playing, you can select the subtitles even if no subtitles are recorded on the disc.


- You can also select the subtitle language using the on-screen bar (see page 27).

While playing a DVD Video...


1 Display the subtitle selection window.

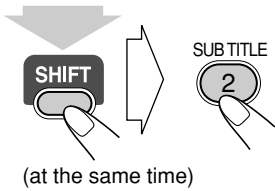



2 Select the subtitle language.

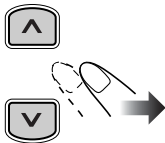

Ex.:

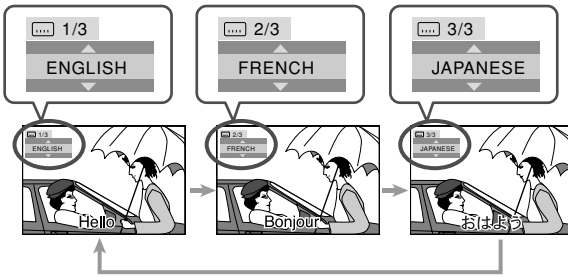

While playing an SVCD...

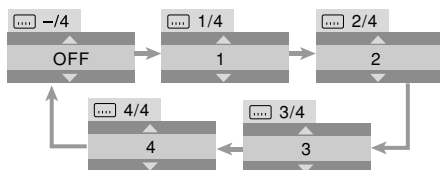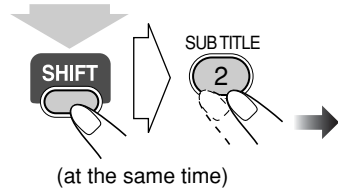


Selecting the View Angle

While playing back a chapter (of DVD Video) containing multi-view angles, you can view the same scene from different angles.


- You can also select the multi-view angles using the on-screen bar (see page 27).

While playing...

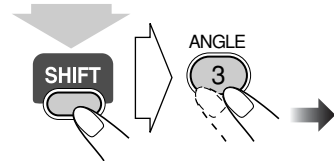

(at the same time)

Ex.:

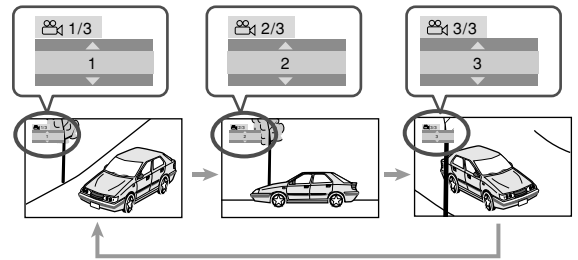

Playing Back a Bonus Group


Some DVD Audios have a special group called “bonus group” whose contents are not open to the public.

- To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. The way of getting the key number depends on the disc.

1 Select the bonus group.

- The bonus group is usually recorded as the last group (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).
- For how to select the group, see “To select a title/group” on page 14.

2 Enter the key number.

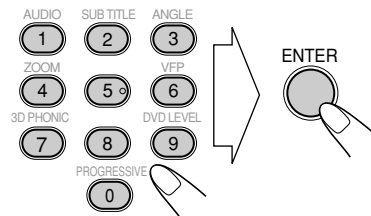


3 Follow the interactive instructions shown on the TV screen.

To cancel the key number entry, press ■.

Selecting Browseable Still Pictures



While playing back a track (of DVD Audio) linked to browsable still pictures (BSP), you can select the still picture (turn the page) to be shown on the TV screen.

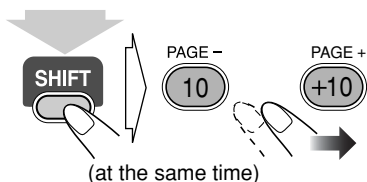- If a track is linked to browsable still pictures (BSP), they are usually shown in turn automatically during playback.
- You can also select the page using the on-screen bar (see page 27).




Special Effect Playback

Still picture playback

To start still picture playback:	To resume normal playback:
While playing... 	

Frame-by-frame playback

 1 While playing...




2 Advance the still picture frame by frame.





To resume normal playback, press DVD/CD ►.

Slow-motion playback

 1 While playing...



2 Select slow motion speed.

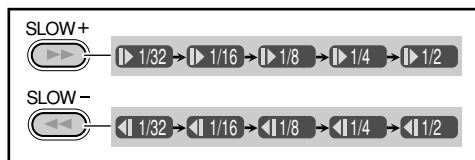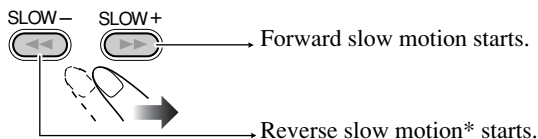


*Not available for SVCD/VCD.

To resume normal playback, press DVD/CD ►.



To replay the previous scenes (One touch replay function)

 - This function is only used while playing DVD Video.




Zoom

1 While playing back...

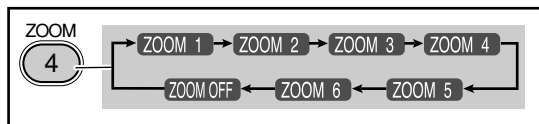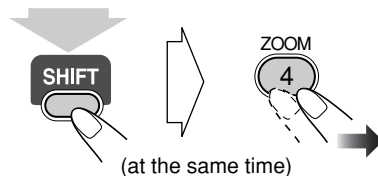

As the number increases, magnification also increases.


2 Move the zoomed-in position.

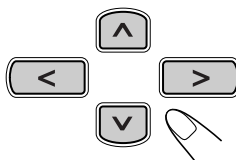


To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

Advanced Disc Operations

Remote control

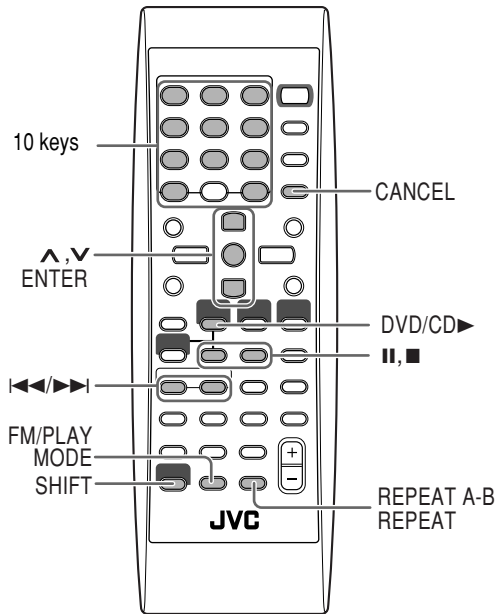

Main unit


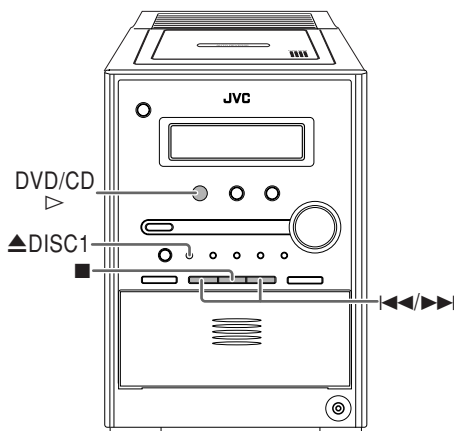


Programming the Playing Order


Program Play

You can arrange the playing order of the chapters or tracks (up to 99) before you start playback.

 1 Before starting playback, activate Program Play.

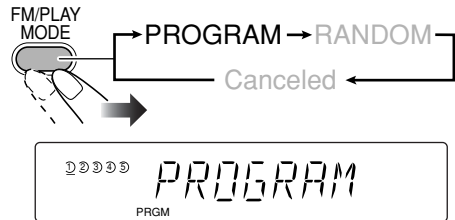

On the display

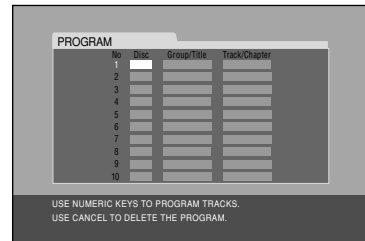

On the TV screen

2 Select chapters or tracks you want for Program Play.

• For DVD/MP3/WMA:

- 1 Select a disc number.
- 2 Select a title or group number.
- 3 Select a chapter or track number.


• For SVCD/VCD/CD:

- 1 Select a disc number.
- 2 Select tracks.

• If the disc is not in current tray, the System may prompt for the group/title number entry as well, however, during playback, the System will ignore these entries.

• You can use ENTER button to skip the group/title number entry.

To enter the numbers:

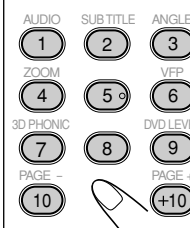

Examples:

To enter number 5, press 5.
To enter number 15, press +10, then 5.
To enter number 30, press +10, +10, then 10.

3 Repeat the above step 2.

4 Start playback.




Playback starts in the order you have programmed.

To skip a step:	To pause:	To stop:

To check the programmed contents

Before or after playback...

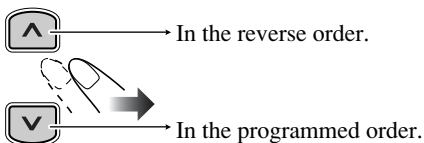


To modify the program

Before or after playback...

To erase the last step:	To erase the entire program:
To add steps in the program: Repeat steps 2 and 3 on page 24.	

To exit from Program Play

Before or after playback...

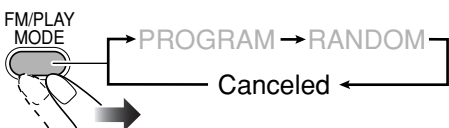


Playing at Random—Random Play



You can play the chapters or tracks of all loaded discs at random.

- Random Play cannot be used for some DVDs.

1 Before starting playback, activate Random Play.

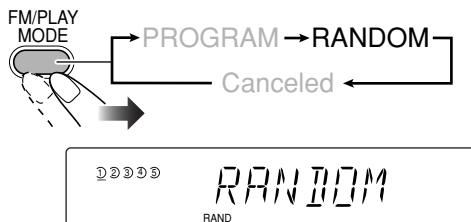

2 Start playback.




Playback starts in random order. Random Play ends when all the tracks are played once (when Repeat Play is not activated).

To skip a chapter/track:	To pause:	To stop:
To skip to the beginning of the current track, press ◀◀ .	To release, press DVD/CD ▶ .	

- During Random Play, you cannot select disc by using DISC SELECT button.

To exit from Random Play

Before or after playback...

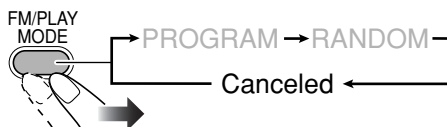

Playing Repeatedly



 
- You can also select the repeat mode using the on-screen bar (see page 28).

Repeat Play


You can repeat playback.

• For DVD Video:

While playing...




Before starting playback...

 


• For DVD Audio:

 While playing or before playback...




• For MP3/WMA:

 While playing or before playback...




• For CD/SVCD/VCD:

 While playing (without PBC for SVCD/VCD) or before playback...




 While playing (with PBC for SVCD/VCD) ...




• For Program Play:

 While playing or before playback...



• For Random Play:

 While playing or before playback...




ALL	Repeats all discs in all tray or all programmed tracks.
1	Repeats the current chapter/track.
GR.	Repeats the current title/group.
1DISC	Repeats the current disc.
Canceled	Cancels Repeat Play mode.

A-B Repeat

You can repeat playback of a desired portion by specifying the beginning (point A) and the ending (point B).


- A-B Repeat cannot be used for MP3/WMA and for some DVDs.
- A-B Repeat can be used within the same title while playing a DVD Video, and within the same track for the other discs.

1 While playing (without PBC for SVCD/VCD), select the start point (A).

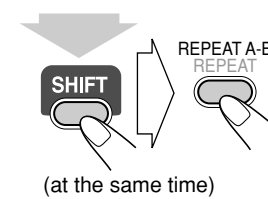

- A- lights on the display.
- appears on the TV screen if the TV is turned on.

2 Select the end point (B).

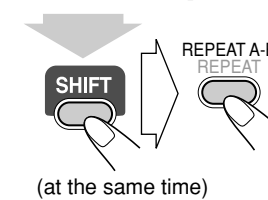

- A- changes to A-B.
- appears on the TV screen.
- You can search for the end point using the button.

To cancel A-B Repeat, press REPEAT A-B again while holding SHIFT.


Prohibiting Disc Ejection—Child Lock



You can lock the disc trays so that no one can eject the loaded disc.

- This is possible while the System is on standby.


While the disc trays are closed...

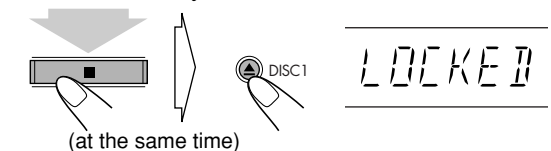

To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.


On-Screen Disc Operations

Remote control

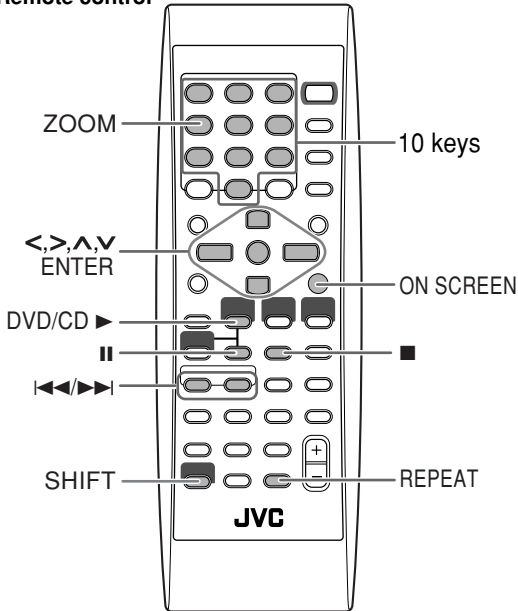


On-screen bars

 DVD Video



DVD Audio

 

SVCD



VCD



CD



On-screen Bar Information

You can check the disc information (except for MP3/WMA/JPEG disc) and use some functions through the on-screen bar.

1 Disc type

2 Playback information

Indication	Meanings
Mbps	Current transfer rate (Megabits per second)
DISC 2	Current disc
TITLE 2	Current title
CHAP 3	Current chapter
GROUP 1	Current group
TRACK 14	Current track
TOTAL 1:25:58	Time indications

3 Operation modes

Indication	Meanings
▶	Playback
▶▶ / ◀◀	Forward/Reverse search
▶▶ / ◀◀	Forward/Reverse slow-motion
⏸	Pause
■	Stop


4 Function icons (on the pull-down menu)

Indication	Meanings
TIME	Select to change the time indication.
↺ OFF	Select to repeat playback.
⌚ →	Select for time search.
CHAP →	Select for chapter search.
TRACK →	Select for track search.
🗣 1/3	Select to change the audio language or channel (see also page 21).
📄 1/3	Select to change subtitle language (see also page 22).
👁 1/3	Select to change the view angle (see also page 22).
PAGE 1/5	Select to change the page (see also page 23).


Operations Using the On-screen Bar

Ex.: Selecting a subtitle (French) for DVD Video:
While a disc is selected as the source...

1 Display the on-screen bar with the pull-down menu.

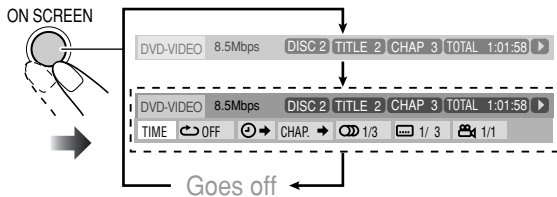


2 Select (highlight) the item you want.

 


3 Display the pop-up window.




4 Select the desired option in the pop-up window.

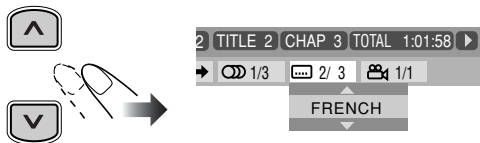

5 Finish the setting.

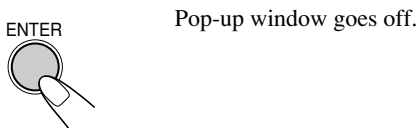

To erase the on-screen bar

 

For detailed operations of the following functions, see also "Operations Using the On-screen Bar" on the left.

Changing the time information


You can change the time information in the on-screen bar and the display window on the main unit.

1 Display the on-screen bar with the pull-down menu.



2 Make sure [TIME] is selected (highlighted).

3 Change the time indication.

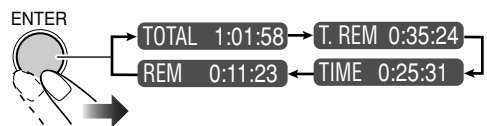

TOTAL	Elapsed disc time.
T. REM	Remaining disc time.
TIME	Elapsed playing time of the current chapter/track.
REM	Remaining time of the current chapter/track.

To erase the on-screen bar



Repeat Play

• See also page 26.

1 While playing a disc (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.

2 Select [OFF].

3 Display the pop-up window.



4 Select the repeat mode you want.

ALL	Repeats all discs or all programmed track.
A-B	Repeats a desired portion (see next column).
TITLE	Repeats the current title.
GROUP	Repeats the current group.
DISC	Repeats the disc (except for DVD).
CHAPTER	Repeats the current chapter.
TRACK*	Repeats the current track.
OFF	Cancels Repeat Play.

*During Program Play and Random Play, “STEP” appears.

5 Finish the setting.



A-B Repeat

• See also page 26.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **OFF**.
- 3 Display the pop-up window.



4 Select “A-B”.



5 Select the start point (A).



6 Select the end point (B).



A-B Repeat starts. The selected portion plays repeatedly.

- Before pressing ENTER, you can search for the end point using **▶▶**.

Time Search


You can move to a particular point by specifying the elapsed playing time from the beginning.

- 1 While playing (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.
 - Except for DVD: Time Search can be used before starting playback.
- 2 Select **TIME**.
- 3 Display the pop-up window.



4 Enter the time.

You can specify the time in hours/minutes/seconds.

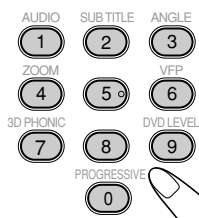

Examples:

To move to a point of 1 (hours): 02 (minutes): 00 (seconds), press 1, 0, 2, 0, then 0.

To move to a point of 54 (minutes): 00 (seconds), press 0, 5, 4, 0, then 0.

- It is always required to enter the hour digit (even “0” hour), but it is not required to enter trailing zeros (the last two digits in the examples above).
- To correct a misentry, press cursor **<** to erase the last entry.

5 Finish the setting.



The System starts playing the disc from the selected playing time.


Chapter/Track Search

You can search for the chapter (DVD Video) or track (DVD Audio) number to play.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **CHAP.** or **TRACK**.
- 3 Display the pop-up window.



4 Enter the desired chapter/track number.

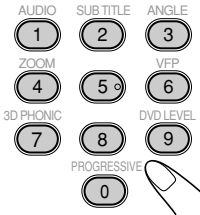

Examples:

- To select chapter/track 5, press 5.
- To select chapter/track 15, press 1, then 5.
- To select chapter/track 30, press 3, then 0.

- **To correct a misentry**, press the 10 keys until the desired number shown in the pop-up window.

5 Finish the setting.

ENTER



The System starts playing the searched chapter or track.

Operations on the CONTROL Screen



The CONTROL screen automatically appears on the TV screen when you load an MP3, WMA, or JPEG disc. You can search for and play the desired tracks through the CONTROL screen.

- If both types of files (MP3/WMA files and JPEG files) are recorded on a disc, select the file type to play (see page 39).


CONTROL screen

Ex.: When the MP3 disc is loaded.


FILE		REPEAT TRACK	Time: 00:00:14
Group : 2 / 3		Track : 5 / 14 (Total 41)	
Blue	Cloudy.mp3		
Red	Fair.mp3		
Green	Fog.mp3		
	Hail.mp3		
	Indian summer.mp3		
Track Information	Rain.mp3		
Title	Shower.mp3		
Rain	Snow.mp3		
Artist	Thunder.mp3		
	Typhoon.mp3		
Album	Wind.mp3		
	Winter sky.mp3		

- ① Current group number/total group number
- ② Current group
- ③ Group list
- ④ Current track (in blue)
- ⑤ Track information (ID3 Tag Version 1.0: only for MP3/WMA)
- ⑥ Repeat Play setting
- ⑦ Elapsed playing time of the current track (only for MP3/WMA)
- ⑧ Operation mode icon
- ⑨ Current track number/total number of tracks in the current group (total number of tracks on the loaded disc)
- ⑩ Highlight (green) bar
- ⑪ Track list

To move the highlight bar between group list and track list

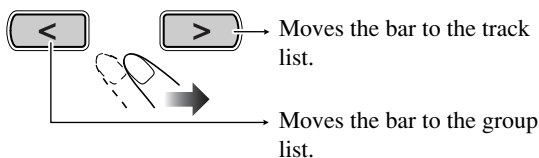

To select a group/track in the list

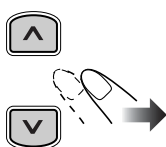

Move the highlight bar to a desired item.

- If you move the highlight bar while playing back an MP3/WMA disc, the selected track starts playback automatically.

To start playback


For MP3/WMA:	
	Playback starts with the selected track. • Pressing DVD/CD ► also starts playback.
For JPEG:	
	The selected track (still picture) is displayed until you change it.
	Slide-show playback starts. Each track (still picture) is shown on the screen for few seconds, then changes one after another.

- Once you start playing back a JPEG track, the CONTROL screen goes off.
- To cancel slide-show, and display the current still picture, press ENTER.

To skip a track:	To pause:	To stop playback:
	To release, press DVD/CD ►.	

To repeat slide-show for JPEG

While playing or before starting playback...

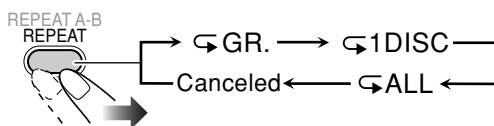


	Repeats the current group.
	Repeats the current disc.
	Repeats all disc.

- For Repeat Play of MP3/WMA, see page 26.



To zoom in the still picture

- You cannot zoom in the still picture during slide-show.

 1 While playing...




2 Change the magnification.

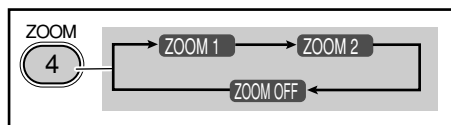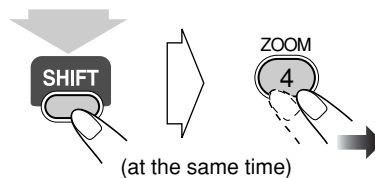

As the number increases, magnification also increases.


3 Move the zoomed-in position.

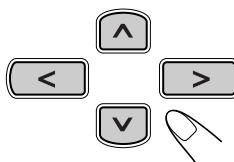


To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

Advanced Tape Operations

Remote control

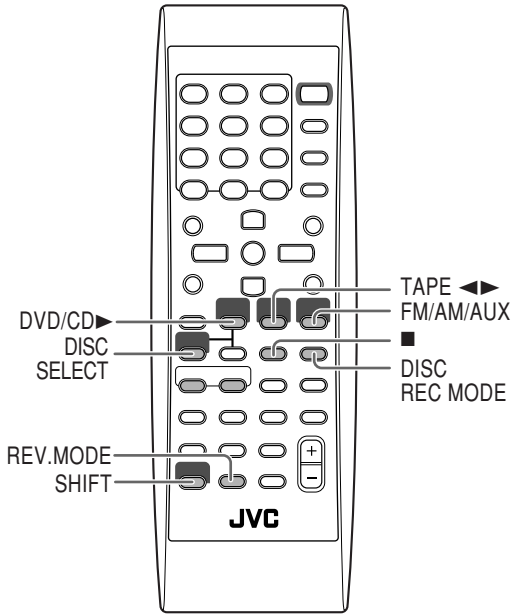

Main unit

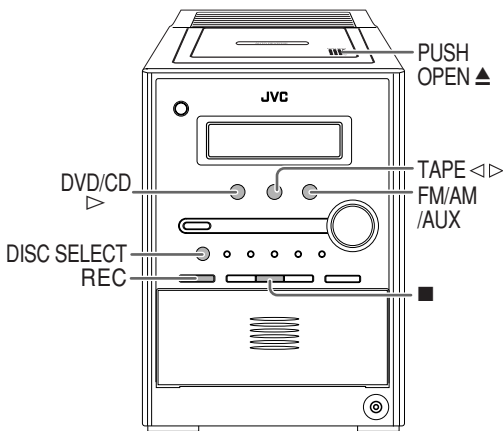


IMPORTANT

It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

Recording on a Tape


You can use type I tapes for recording.
 • To play a tape, see page 16.

1 Insert a recordable cassette.

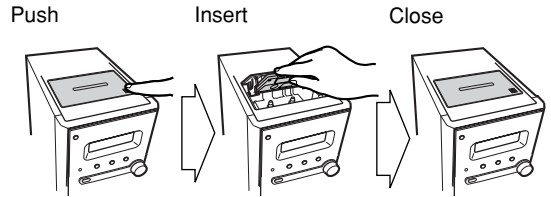


With the tape side facing outside


2 Check the tape running direction and Reverse mode settings on the display.

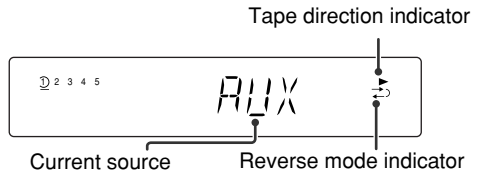

To change the direction

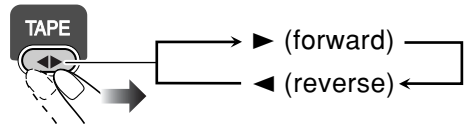

To change the Reverse mode if necessary

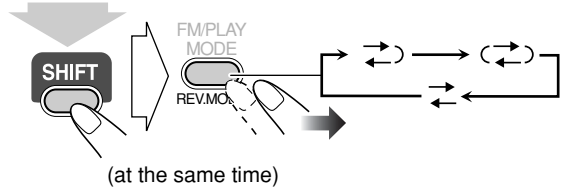


↻	To record on both sides. • When using Reverse mode, start recording in the forward (▶) direction.
(↻)	
↔	To record on only one side.

3 Select and start playing the source—“FM,” “AM,” “DVD/CD,” or “AUX.”


- When recording a disc, you can also use “Synchronized Disc Recording” (see below).

 4 Start recording.



On the main unit

 To stop recording:



- While recording a disc, recording stops automatically after the disc player plays back the disc.

Synchronized Disc Recording

You can start and stop both disc play and tape recording at the same time.


1 Load a disc and insert a recordable cassette.

- If the current playing source is not the disc player, press DVD/CD ►, then ■.


2 Check the tape running direction and Reverse mode settings on the display.

- See step 2 of “Recording on a Tape” on page 32.

3 Select the disc number you want to start recording from.

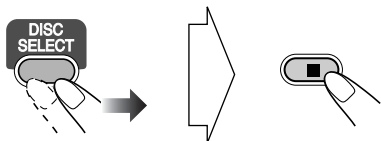


4 Select the Recording mode.

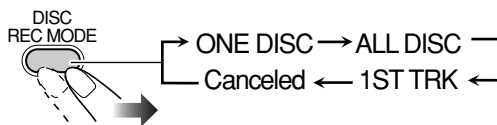

ONE DISC	Records the entire disc.
ALL DISC	Records the all loaded discs continuously (except for DVD Video/DVD Audio).
1ST TRK	Records the first track of each disc (only for SVCD/VCD/CD).

 5 Start recording when the recording mode selected in step 4 is still shown on the display.



On the main unit

The System automatically creates 4-second blanks between the tunes recorded on the tapes.

- If the loaded disc is not compatible for the current recording mode, the disc player skips the disc and loads the next one.
- When either disc play or recording ends, both disc player and the cassette deck stop at the same time.

To record a “Live” disc

It will not be desirable to put 4-second blank portions between the tunes recorded on the tape.

To record the entire disc without any interruption recorded, pause the disc play (press ■ on the remote control) before pressing REC.

To record Program Play or Random Play

1 Select Program Play (and make a program) or Random Play, but do not start playback.

2 Press REC to start recording.

- When disc play stops, recording continues. It is required that recording be stopped manually.

To record only your favorite track

 
You can specify tracks to be recorded on the tape while listening to a disc.

- This function is not available for DVD Video.

1 Start playing a disc.



2 While a track you want to record on the tape is playing...



On the main unit

The disc player returns to the beginning of that track and the track is recorded on the tape. After recording the track, the disc player and cassette deck automatically stop.

3 Repeat steps 2 and 3 to record other tracks you want.

- You can exchange the discs if necessary.

 
To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.




To re-record on a protected tape, cover the holes with adhesive tape.



Timer Operations

Remote control

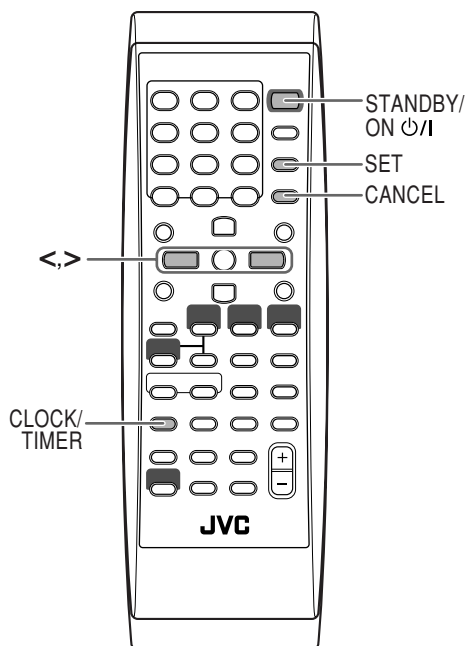

Setting the Timer



 

Using Daily Timer, you can wake up with your favorite music. On the other hand, with Recording Timer, you can make a tape of a radio broadcast automatically.

- You can store three Daily Timer settings and one Recording Timer setting; however, you can activate only one of Daily Timers or Recording Timer at the same time.
- To exit from the timer setting, press CLOCK/TIMER as required.
- To correct a misentry during the process, press CANCEL. You can return to the previous step.

Timer initial settings when shipped from the factory:

- DAILY 1: ON Time (6:00)/OFF Time (8:00)/ Source (TUNER FM 1)/Volume level (--)
- DAILY 2: ON Time (12:00)/OFF Time (14:00)/ Source (TUNER FM 1)/Volume level (--)
- DAILY 3: ON Time (18:00)/OFF Time (20:00)/ Source (TUNER FM 1)/Volume level (--)
- REC TMR: ON Time (8:00)/OFF Time (10:00)/ Source (TUNER FM 1)

- 1** Select one of the timer setting modes you want to set—**Daily 1 ON time, Daily 2 ON time, Daily 3 ON time, or Recording Timer ON time.**

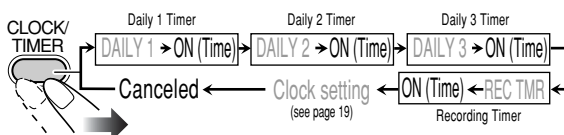


Ex. When Daily Timer 1 setting mode is selected

- When the clock has not been adjusted, pressing CLOCK/TIMER makes the System enter the clock setting mode.

- 2** Make the timer setting as you want.

Repeat the following operations until you finish setting in the following order—

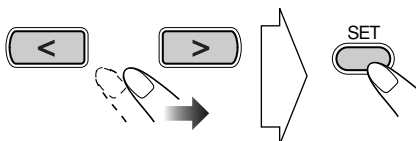

- ① Set the hour then minute for on-time.
- ② Set the hour then minute for off-time.

- ③ For Daily Timers: Select the playback source—“TUNER FM,” “TUNER AM,” “TAPE,” “DISC,” or “AUX.”



For Recording Timer: Select the playback source—“TUNER FM,” “TUNER AM” or “AUX.”

 
- ④ For “TUNER FM” and “TUNER AM”: Select a preset channel.
For “DISC”: Select the disc number, group/title number, then the track/chapter number.
- ⑤ For Daily Timers: Select the volume level.
- You can select the volume level (“VOL 1” to “VOL 50” and “VOL --”). If you select “VOL --,” the volume is set to the last level when the unit has been turned off.

For Recording Timer: The volume level is set automatically to the last level when the unit has been turned off.

Once settings are complete, the Timer setting information appears in sequence.

- 3 Turn off the unit (on standby) if you have set the timer with the System turned on.**

STANDBY/ON



How Daily Timer actually works

Once the Daily Timer has been set, the timer (⌚) indicator and timer number indicator (1/2/3) are lit on the display. Daily Timer is activated at the same time everyday until the timer is turned off manually (see the next column) or another timer is activated.

When the on-time comes

The System turns on, tunes in to the specified station or start playing the loaded disc with the specified chapter or track, and sets the volume level to the preset level.

- While Daily Timer is working, the timer (⌚) indicator and timer number indicator (1/2/3) flash on the display.

When the off-time comes

The System stops playback, and turns off (stands by) automatically.

- The timer setting remains in memory until you change it.

How Recording Timer actually works

When Recording Timer has been set, Timer (⌚) indicator and the REC indicator are lit on the display. Recording Timer works only once.

When the on-time comes

The System turns on, tunes in to the specified station, sets the volume level to last level when the unit has been turned off, and starts recording.

When the off-time comes

 

The System stops recording, and turns off (stands by).

- The timer setting remains in memory until you change it.

To turn off the Timer after its setting is done

Since Daily Timer is activated at the same time everyday, you may need to cancel it on some particular days.

- 1 Select the Timer you want to cancel.**

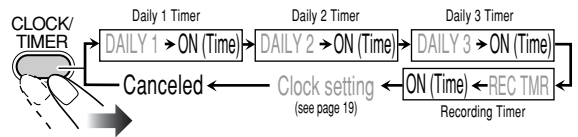



Ex.To cancel Daily Timer 1

- 2 Turn off the selected Timer.**



To turn on the Timer

 - 1 Select the Timer (DAILY 1, DAILY 2, DAILY 3, or REC TMR) you want to activate.**

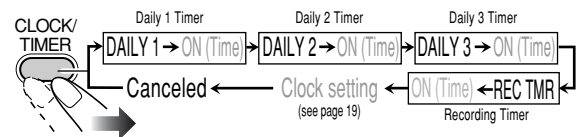


Ex.When Daily Timer 1 is selected

- 2 Activate the selected Timer.**



Setup Menu Operations


Remote control

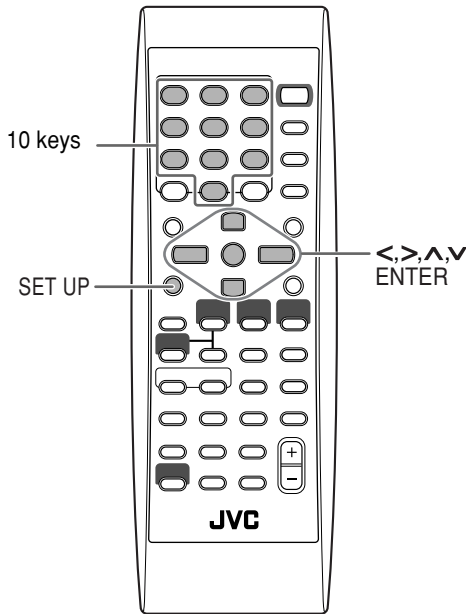

Setup Menu Icons

The icon for the selected Setup Menu will be highlighted.

Ex.: LANGUAGE Setup Menu is selected.

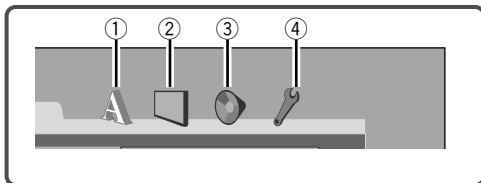

- ① LANGUAGE Setup Menu
- ② PICTURE Setup Menu
- ③ AUDIO Setup Menu
- ④ OTHERS Setup Menu

Operating Procedure



You can use the Setup Menus only when a disc is selected as the source and its playback is not yet started.


 
Ex.: Selecting "STILL PICTURE" for "FILE TYPE":

1 Display the Setup Menu.


SET UP



2 Select one of the Setup Menus.

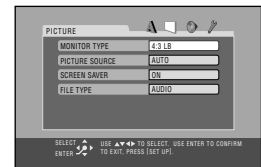


3 Select the item you want to adjust.


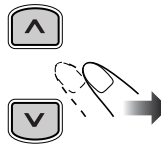


4 Display the pop-up window.

ENTER

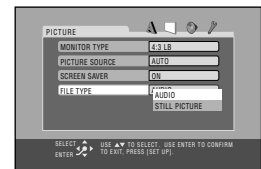

5 Select the desired option in the pop-up window.

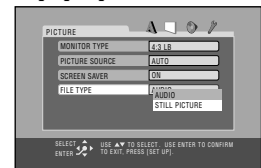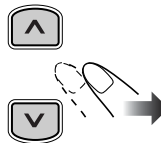

6 Finish the setting.




- 7 Repeat steps 3 to 4 to set other items on the same Setup Menu.**
Repeat steps 2 to 4 to set other items on another Setup Menu.

To erase the Setup Menu



■ LANGUAGE Setup Menu

You can select the initial languages for disc playback. You can also select the language shown on the TV screen while operating this System.

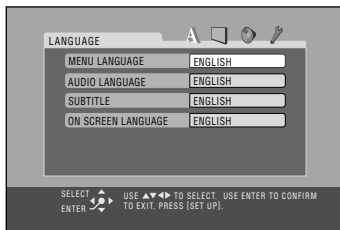

MENU LANGUAGE

Some discs have multiple menu languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47).

AUDIO LANGUAGE

Some discs have multiple audio languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47).

SUBTITLE

Some discs have multiple subtitle languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47) or “OFF (no subtitle).”

ON SCREEN LANGUAGE

Select one of the languages shown on the TV from—ENGLISH, CHINESE, and SPANISH.

■ PICTURE Setup Menu

You can select the desired options concerning a picture or monitor screen.



MONITOR TYPE

You can select the monitor type of your TV when you play DVD Video recorded with aspect ratio of 16:9.

For the multi-color system TV

When you use a multi-color system TV, you can change the color system of the System automatically by selecting “MULTI” options as the monitor type. In this case, the color system of the System is changed to match the color system of the loaded disc regardless the VIDEO OUT SELECT setting for better picture quality (see “To set the video output selector” on page 7).

Select one of the following:

16:9 / 16:9 MULTI (Wide television conversion):

 
Select when the aspect ratio of your TV is 16:9 and when the TV has the screen size adjustment function.

4:3 LB (Letter Box)/ 4:3 MULTI LB:

Select when the aspect ratio of your TV is 4:3 (conventional TV). While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

4:3 PS (Pan Scan) / 4:3 MULTI PS:


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



 Ex.: 4:3 LB



Ex.: 4:3 PS

PICTURE SOURCE

You can obtain optimal picture quality by selecting an appropriate option—picture source type (either video source or film source).

Select one of the following:

AUTO: Normally select this.
When playing back a disc containing both video and film sources, the System automatically changes the processing to match it to the picture type (film or video source) of the current chapter.

FILM: To play a film source disc.

VIDEO: To play a video source disc.

SCREEN SAVER

You can activate or deactivate screen saver while operating the built-in disc player.

Select one of the following:

ON: The picture on the TV becomes dark when no operation is done for about 5 minutes.

OFF: To cancel the screen saver.

FILE TYPE

If both audio tracks (MP3 or WMA files) and still picture (JPEG files) are recorded on a disc, you can select which to play.


Select one of the following:

AUDIO: To play MP3/WMA files.

STILL PICTURE: To play JPEG files.

■ AUDIO Setup Menu

You can adjust the sound settings of the System.

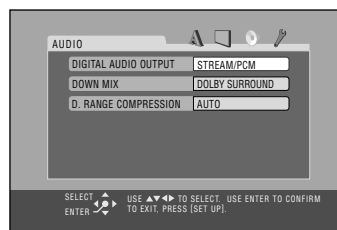

DIGITAL AUDIO OUTPUT

When using the digital output terminal on the rear, set this correctly according to the connected component.

Select one of the following:

PCM ONLY: To connect to a linear PCM digital equipment.

DOLBY DIGITAL /PCM: To connect to a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

STREAM/PCM: To connect to a DTS decoder or an amplifier with a built-in DTS decoder.

• See also “DVD OPTICAL DIGITAL OUT Signals” on page 49.

DOWN MIX

When using the digital output on the rear, set this correctly according to the connected component.

When playing a multi-channel DVD, the System converts the signals into 2 channels properly.

Select one of the following:

DOLBY SURROUND: To connect an amplifier with the Dolby Pro Logic decoder.

STEREO: To connect a conventional stereo amplifier, receiver, MD player, TV, etc.

D. RANGE COMPRESSION

You can compress the dynamic range (the difference between the loudest sound and the softest sound) to enjoy a powerful sound even at a low volume level when listening to Dolby Digital software. This is useful at night.


- The effectiveness varies depending on software.

Select one of the following:

AUTO:	To apply the compression effect to the downmixed multi-channel sound.
ON:	To always apply the compression effect for all Dolby Digital software. Loud sound will become low and vice versa.

■ OTHERS Setup Menu

You can change some other convenient functions.

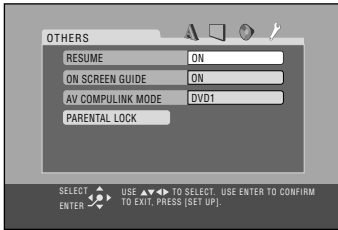

RESUME

You can activate or deactivate Resume for disc playback (see page 14).

Select one of the following:

ON:	To activate Resume.
OFF:	To cancel Resume.

ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons (see page 14).

- When recording the picture on a VCR, select “OFF” to avoid recording the guide icons on your video tape.

Select one of the following:

ON:	To activate the on-screen guide icons.
OFF:	To cancel the on-screen guide icons.

AV COMPULINK MODE

When connecting the System to a JVC’s TV with the AV COMPU LINK remote control system, select the proper setting.

Select one of the following:

DVD1:	To connect to the VIDEO-3 Input jack on the TV.
DVD2:	To connect to the VIDEO-1 Input jack on the TV.
DVD3:	To connect to the VIDEO-2 Input jack on the TV.

For details, see “To connect the AV COMPU LINK cords” on page 7.

PARENTAL LOCK

Select this to enter the PARENTAL LOCK submenu.

See the section that follows.

Restricting the Review


Parental Lock

You can restrict playback of DVD Video containing violent scenes and those unsuitable for your family members. Once you have set the rating level, such violent scenes (for which a higher level than you set is assigned) may be skipped or changed to another scene (depending on how the disc is programmed).



To set Parental Lock

Set the rating level—Level 1 (most restrictive) to Level 8 (least restrictive).



1 Display the Setup Menu.

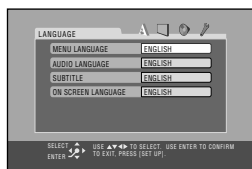

2 Select the OTHERS Setup Menus.

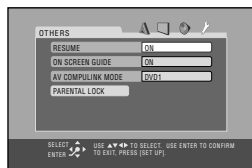 



3 Select “PARENTAL LOCK.”

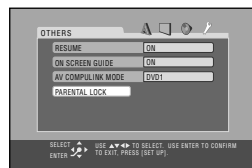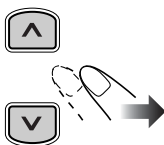

4 Enter the PARENTAL LOCK submenu.




5 Select “COUNTRY CODE,” then display the pop-up window.

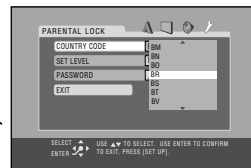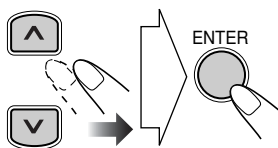


6 Select the country code of your area.


- See “Country/Area Codes List” on page 48 to find your country code.

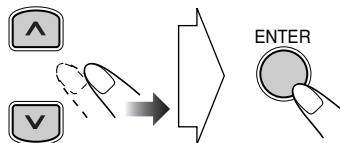

7 Make sure “SET LEVEL” is selected, then display the pop-up window.

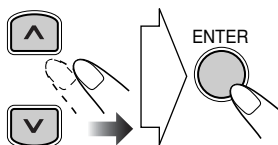


8 Set the rating level (NONE, 8 – 1).

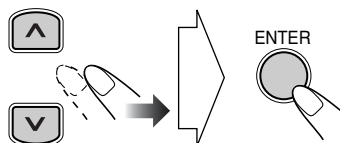

The System automatically enters “PASSWORD” entry mode.

9 Make sure “PASSWORD” is selected, then enter any 4-digit number for your password.

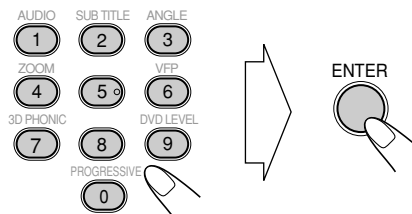

10 Finish the setting.



To change the setting

1 Display the PARENTAL LOCK sub menu.


- Follow steps **1** to **4** of “To set Parental Lock”.



“PASSWORD” is automatically selected.

- You cannot select any item other than “EXIT” until you enter the correct password.

2 Enter your password.

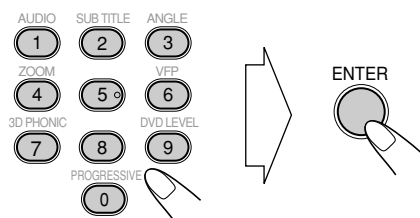


- If you enter a wrong password, “----” appears again.
- If you enter a wrong password three times, “EXIT” is automatically selected. In this case, press ENTER to exit from the PARENTAL LOCK sub menu.
- If you forget your password, enter “8888.”

3 Change the settings.

- Follow steps **5** to **8** of “To set Parental Lock”.


4 Enter your password again.

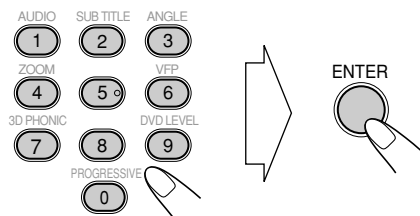


- If you want to change a password, enter a new four digit number in this step.

To release Parental Lock temporarily

When you set a strict rating level, some discs may not be played back at all. When you try to play such a disc, the following screen appears on the TV.

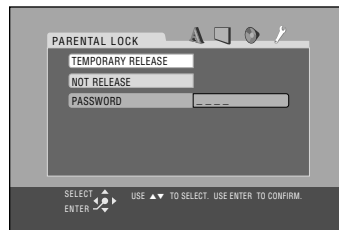


1 Select “TEMPORARY RELEASE,” then press ENTER.

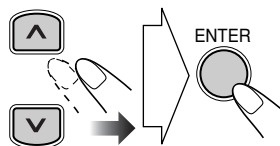

“PASSWORD” is automatically selected.

- If you do not play back such a disc, select “NOT RELEASE,” then press ENTER. Then eject the disc.

2 Enter your password.

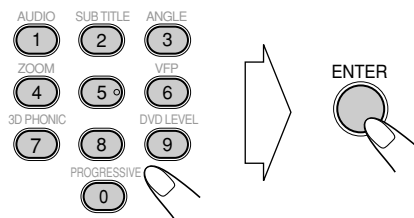

- If you enter a wrong password three times, “NOT RELEASE” is automatically selected. In this case, press ENTER. Then eject the disc.

Learning More about This System ● ● ●

Getting Started (see pages 3 to 7)

Changing the Scanning Mode:

- To enjoy the progressive video picture, connect a TV with the progressive video input using component video cord.

Before Operating the System (see pages 8 to 11)

Playable Disc Types:

- If you play back an NTSC disc with this setting set to “PAL,” you can watch the playback pictures (the disc will be reproduced using “PAL 60” format), but the TV screen may roll over upward and downward rapidly.
- If you play back a PAL disc with this setting set to “NTSC,” you can watch the playback pictures, but the following symptoms may occur:
 - The items on the disc menu will be blurred, and be shown slightly shifted when highlighted.
 - The aspect ratio of the picture may differ from the original aspect ratio.
 - The picture movement is not smooth.

Daily Operations—Playback (see pages 12 to 16)

Listening to the Radio:

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

Playing Back a Disc:

- When using an 8 cm disc, place it on the inner circle of the disc tray.
- On some DVD, SVCD, or VCD discs, the actual operations may be different from what is explained in this manual, due to the programming and disc structure; such differences are not a malfunction of this System.
- When discs* in more than one tray are loaded on the disc trays, they are played in sequence as follows:
Ex.: When DISC 2 is selected:
DISC 2⇒DISC 3⇒DISC 4⇒DISC 5⇒DISC 1
(then stops)
* When no disc is loaded on the tray, that disc number is skipped.
- You can exchange discs while playing or selecting another disc.
- Some DVD Audio discs prohibit downmixed output. When you play back such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
- 3D Phonic setting is also applied to the optical digital output signals through the DVD OPTICAL DIGITAL OUT terminal.
- When using Resume on SVCD or VCD with PBC, the playback might start on a position slightly different from where you have stopped.

- You can use Resume only for the DVD/SVCD/VCD except for some discs—depending how the disc is programmed.
- Resume function does not work during Program Play and Random Play.
- For MP3/WMA/JPEG playback...
 - This System cannot play “packet write” discs.
 - MP3/WMA/JPEG discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file configuration.)
 - Some MP3/WMA/JPEG files cannot be played back and will be skipped. This result from their recording processes and conditions.
 - When making MP3/WMA discs, use ISO 9660 Level 1 or Level 2 for the disc format.
 - This System can play back MP3/WMA/JPEG files with the extension code <.mp3>, <.wma> or <.jpg> (regardless of the letter case—upper/lower).
 - It is recommended that you make each MP3 file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than 64 kbps.
 - This System can recognize the total of 1000 tracks and of 99 groups (each group can contain up to 150 tracks). Those exceeding the maximum number cannot be recognized.

Daily Operations—Sound&Other Adjustments (see pages 17 to 20)

Adjusting the Volume:

- Be sure to turn down the volume before connecting or putting the headphones.

Adjusting the Sound:

- This function also affects the sound through the headphones.

Setting the Clock:

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

Unique DVD/VCD Operations (see pages 21 to 23)

- During slow-motion playback, no sound will be reproduced.
- One touch replay function works only within the same title, though it works between chapters.
- One touch replay function does not work during Program Play and Random Play.
- While zoomed in, the picture may look coarse.

Advanced Disc Operations (see pages 24 to 26)

Programming the Playing Order—Program Play:

- If you try to program a 100th track, “MEM FULL (memory full)” appears on the display.
- While programming steps...
Your entry will be ignored if you have tried to program an item number that does not exist on the disc (for example, selecting track 14 on a disc that only has 12 tracks).

- You cannot use Program Play and Random Play for JPEG discs.
- You cannot eject tray while in Program Play.

Playing at Random—Random Play:

- The ◀◀ button does not work for skipping chapters or tracks, but only work for going back to the beginning of the current chapter or track.

On-Screen Disc Operations (see pages 27 to 31)

- For JPEG files playback...
 - It is recommended that you record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a long time to be shown.)
 - This System can play only baseline JPEG files. Progressive JPEG files or lossless JPEG files cannot be played.
 - Baseline JPEG format: Used for digital cameras, web, etc.
 - Progressive JPEG format: Used for web.
 - Lossless JPEG format: An old type and rarely used now.
 - This System may not play back JPEG files properly which are recorded by the devices other than digital still camera.
 - If progressive or lossless JPEG files are played back, a black screen appears. In this case, stop playback and select a baseline JPEG file. Note that it may take a long time to select another file.

Advanced Tape Operations (see pages 32 to 34)

Recording on a Tape:

- The recording level is automatically set correctly. Thus, you can adjust the sound you are actually listening to without affecting the recording level.
- There is leader tape which cannot be recorded onto at the start and end of cassette tapes. Thus, when recording CDs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any music part lost.
- If you start recording with no cassette inserted, “NO TAPE” appears on the display. If a protected tape has been inserted, “NO REC” appears.
- When using Reverse mode for recording, start recording in the forward (▶) direction first; otherwise, recording will stop when only one side (reverse) of the tape is recorded.
- You can also change Reverse mode setting (↔) and (↔) after starting recording.
- You cannot open or close the disc tray while recording a disc.

Synchronized Disc Recording:

- When the tape reaches its end in the forward direction (▶) during recording with Reverse mode set to (↔), the last tune will be re-recorded at the beginning of the reverse side (except for DVD Video).

Timer Operations (see pages 35 and 36)

- When you unplug the AC power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- Without stopping the recording, you cannot change the source after Recording Timer start recording.
- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.
- If you set the Sleep Timer after Recording Timer starts recording, Recording Timer is canceled, but recording continues until Sleep Timer shuts off the power.

Setup Menu Operations (see pages 37 to 42)

LANGUAGE Setup Menu:

- When the language you have selected for “MENU LANGUAGE,” “AUDIO LANGUAGE,” or “SUBTITLE” is not recorded on a disc, the original language is used as the initial language.

PICTURE Setup Menu—MONITOR TYPE:


- Even if “4:3 PS” is selected, the screen size may become 4:3 letter box with some DVD Video discs. This depends on how the discs are recorded.
- When you select “16:9” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

AUDIO Setup Menu—DOWN MIX:

- This setting is not effective when DTS multi-channel software is played back.

OTHERS Setup Menu—ON SCREEN GUIDE:

- Setup Menus and on-screen bar will be displayed (and recorded) even though this function is set to “OFF.” Subtitles and the information for zooming in always appear on the display regardless of this setting.

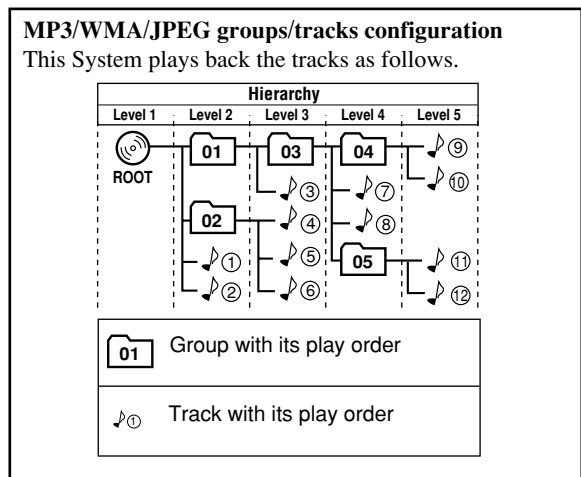

Maintenance

To get the best performance of the System, keep your discs and mechanism clean.

Handling discs

- When removing the disc from its case, hold it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

To clean the disc:

- Wipe the disc with a soft cloth in a straight line from center to edge.

Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotate it.
 - If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape—in dusty places, in direct sunlight or heat, in moist areas, on a TV or speaker, or near a magnet.


To keep the best recording and playback sound quality:

- Use a cotton swab moistened with alcohol to clean the heads, capstans, and pinch rollers.
- Use a head demagnetizer (available at electronics and audio shops) to demagnetize the heads (when the System turned off).

Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
 - DO NOT wipe it with a hard cloth.
 - DO NOT wipe it strongly.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substance such as insecticides to it.
- DO NOT allow any rubber or plastic to remain in contact for a long time.

To remove the speaker grilles

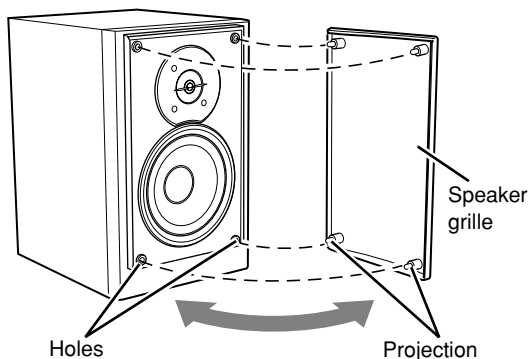

Troubleshooting ● ● ● ● ● ● ● ●

If you are having a problem with your System, check this list for a possible solution before calling for service.

General:

Adjustments or settings are suddenly canceled before you finish.

⇒ There is a time limit. Repeat the procedure again.

Operations are disabled.

⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

Unable to operate the System from the remote control.

⇒ The path between the remote control and the remote sensor on the System is blocked.

⇒ The batteries are exhausted.

No sound is heard.

⇒ Speaker connections are incorrect or loose.

⇒ Headphones are connected.

No picture appears on the screen.

⇒ The video cord connections are incorrect or loose.

No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.

⇒ The System is connected to a TV which does not support progressive scanning.

⇒ Incorrect color system is selected (see “To set the video output selector” on page 7).

The left and right edges of the picture are missing on the screen.

⇒ Select “4:3 LB/ 4:3 MULTI LB” for “MONITOR TYPE” (see page 38).

Radio Operations:

Hard to listen to broadcasts because of noise.

⇒ Antennas connections are incorrect or loose.

⇒ The AM loop antenna is too close to the System.

⇒ The FM antenna is not properly extended and positioned.

Disc Operations:

The disc does not play.

⇒ The disc is placed upside down. Place the disc with the label side up.

ID3 Tag on an MP3/WMA disc cannot be shown.

⇒ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.

MP3/WMA/JPEG groups and tracks are not played back as you expect.

⇒ The playing order is determined when the disc was recorded. It depends on the writing application.

MP3/WMA or JPEG tracks are not played back.

⇒ The inserted disc may include both type of tracks (MP3/WMA files and JPEG files). In this case, you can only play back the files selected by the “FILE TYPE” setting (see page 39).

⇒ You have changed the “FILE TYPE” setting after you inserted a disc. In this case, reload the disc.

“NO AUDIO” appears.

⇒ This System cannot play back illegally produced DVD Audio discs.

“LR ONLY” appears.

⇒ Some DVD Audio discs prohibit downmixed output. When you play back such a disc, this System plays back the left front and right front signals only.

The disc sound is discontinuous.

⇒ The disc is scratched or dirty.

The disc tray does not open or close.

⇒ The AC power cord is not plugged in.

⇒ Child Lock is in use (see page 26).

Tape Operations:

The cassette holder cannot be opened.

⇒ Power supply from the AC power cord has been cut off while the tape was running. Turn on the System.

Recordings:

Impossible to record.

⇒ Small tabs on the back of the cassette are removed. Cover the holes with adhesive tape.

Timer Operations:

Daily Timer and Recording Timer do not work.

⇒ The System has been turned on when the on-time comes. Timer starts working only when the System is turned off.

Setup Menu Operations:

No subtitle appears on the display though you have selected the initial subtitle language.

⇒ Some DVDs are programmed to always display no subtitle initially. If this happens, press SUB TITLE (while holding SHIFT) after starting play (see page 22).

Audio language is different from the one you have selected as the initial audio language.

⇒ Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO (while holding SHIFT) after starting play (see page 21).

Language Code List

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Ameharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue
IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish

JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laothian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance
RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sangho
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak

SL	Slovenian
SM	Samoaian
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tonga
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

Country/Area Codes List

AD	Andorra
AE	United Arab Emirates
AF	Afghanistan
AG	Antigua and Barbuda
AI	Anguilla
AL	Albania
AM	Armenia
AN	Netherlands Antilles
AO	Angola
AQ	Antarctica
AR	Argentina
AS	American Samoa
AT	Austria
AU	Australia
AW	Aruba
AZ	Azerbaijan
BA	Bosnia and Herzegovina
BB	Barbados
BD	Bangladesh
BE	Belgium
BF	Burkina Faso
BG	Bulgaria
BH	Bahrain
BI	Burundi
BJ	Benin
BM	Bermuda
BN	Brunei Darussalam
BO	Bolivia
BR	Brazil
BS	Bahamas
BT	Bhutan
BV	Bouvet Island
BW	Botswana
BY	Belarus
BZ	Belize
CA	Canada
CC	Cocos (Keeling) Islands
CF	Central African Republic
CG	Congo
CH	Switzerland
CI	Côte d'Ivoire
CK	Cook Islands
CL	Chile
CM	Cameroon
CN	China
CO	Colombia
CR	Costa Rica
CU	Cuba
CV	Cape Verde
CX	Christmas Island
CY	Cyprus
CZ	Czech Republic
DE	Germany
DJ	Djibouti

DK	Denmark
DM	Dominica
DO	Dominican Republic
DZ	Algeria
EC	Ecuador
EE	Estonia
EG	Egypt
EH	Western Sahara
ER	Eritrea
ES	Spain
ET	Ethiopia
FI	Finland
FJ	Fiji
FK	Falkland Islands (Malvinas)
FM	Micronesia (Federated States of)
FO	Faroe Islands
FR	France
FX	France, Metropolitan
GA	Gabon
GB	United Kingdom
GD	Grenada
GE	Georgia
GF	French Guiana
GH	Ghana
GI	Gibraltar
GL	Greenland
GM	Gambia
GN	Guinea
GP	Guadeloupe
GQ	Equatorial Guinea
GR	Greece
GS	South Georgia and the South Sandwich
GT	Guatemala
GU	Guam
GW	Guinea-Bissau
GY	Guyana
HK	Hong Kong
HM	Heard Island and McDonald Islands
HN	Honduras
HR	Croatia
HT	Haiti
HU	Hungary
ID	Indonesia
IE	Ireland
IL	Israel
IN	India
IO	British Indian Ocean Territory
IQ	Iraq
IR	Iran (Islamic Republic of)
IS	Iceland
IT	Italy
JM	Jamaica

JO	Jordan
JP	Japan
KE	Kenya
KG	Kyrgyzstan
KH	Cambodia
KI	Kiribati
KM	Comoros
KN	Saint Kitts and Nevis
KP	Korea, Democratic People's Republic of
KR	Korea, Republic of
KW	Kuwait
KY	Cayman Islands
KZ	Kazakhstan
LA	Lao People's Democratic Republic
LB	Lebanon
LC	Saint Lucia
LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab Jamahiriya
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macau
MP	Northern Mariana Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway

NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama
PE	Peru
PF	French Polynesia
PG	Papua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
PM	Saint Pierre and Miquelon
PN	Pitcairn
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Réunion
RO	Romania
RU	Russian Federation
RW	Rwanda
SA	Saudi Arabia
SB	Solomon Islands
SC	Seychelles
SD	Sudan

SE	Sweden
SG	Singapore
SH	Saint Helena
SI	Slovenia
SJ	Svalbard and Jan Mayen
SK	Slovakia
SL	Sierra Leone
SM	San Marino
SN	Senegal
SO	Somalia
SR	Suriname
ST	Sao Tome and Principe
SV	El Salvador
SY	Syrian Arab Republic
SZ	Swaziland
TC	Turks and Caicos Islands
TD	Chad
TF	French Southern Territories
TG	Togo
TH	Thailand
TJ	Tajikistan
TK	Tokelau
TM	Turkmenistan
TN	Tunisia
TO	Tonga
TP	East Timor
TR	Turkey

TT	Trinidad and Tobago
TV	Tuvalu
TW	Taiwan
TZ	Tanzania, United Republic of
UA	Ukraine
UG	Uganda
UM	United States Minor Outlying Islands
US	United States
UY	Uruguay
UZ	Uzbekistan
VA	Vatican City State (Holy See)
VC	Saint Vincent and the Grenadines
VE	Venezuela
VG	Virgin Islands (British)
VI	Virgin Islands (U.S.)
VN	Vietnam
VU	Vanuatu
WF	Wallis and Futuna Islands
WS	Samoa
YE	Yemen
YT	Mayotte
YU	Yugoslavia
ZA	South Africa
ZM	Zambia
ZR	Zaire
ZW	Zimbabwe

DVD OPTICAL DIGITAL OUT Signals

DIGITAL AUDIO OUTPUT Playback disc	Output Signals		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
DVD Video	48 kHz, 16 bit Linear PCM*		
with 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM*		
with 96 kHz, Linear PCM	48 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS	DTS bitstream	48 kHz, 16 bit Linear PCM	
DVD Audio	48 kHz, 16 bit Linear PCM		
with 48/96/192 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM		
with 44.1/88.2/176.4 kHz, 16/20/24 bit Linear PCM	44.1 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS	DTS bitstream	48 kHz, 16 bit Linear PCM	
SVCD, VCD, CD	44.1 kHz, 16 bit Linear PCM/48 kHz, 16 bit Linear PCM		
CD with DTS	DTS bitstream	44.1 kHz, 16 bit Linear PCM	
MP3/WMA disc	32/44.1/48 kHz, 16 bit Linear PCM		

* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the DVD OPTICAL DIGITAL OUT terminal if the discs are not copy-protected.

Specifications

Amplifier section

Output Power:

HIGH:	40 W (20 W+ 20 W) at 4 Ω (10% THD) 50 W (25 W+ 25 W) at 4 Ω (10% MAX)
LOW:	40 W (20 W+ 20 W) at 4 Ω (10% THD) 50 W (25 W+ 25 W) at 4 Ω (10% MAX)

Analog input:

AUX:	Sensitivity/Impedance (at 1 kHz) 400 mV/47 k Ω (at "AUX LEVEL 1") 200 mV/47 k Ω (at "AUX LEVEL 2")
------	--

Digital output:

DVD OPTICAL DIGITAL OUT:
-21 dBm to -15 dBm (660 nm \pm 30 nm)

VIDEO OUT:

Color system:NTSC/PAL selectable

VIDEO (composite):	1 V(p-p)/75 Ω
S-VIDEO: Y (luminance)	1 V(p-p)/75 Ω
C (chrominance, burst)	0.286 V(p-p)/75 Ω

COMPONENT: (Interlace/Progressive):	
(Y)	1 V(p-p)/75 Ω
(PB/Pr)	0.7 V(p-p)/75 Ω

Speaker Terminals: 4 Ω – 16 Ω

Others:

AV COMPU LINK x 2 (ϕ 3.5)

Tuner section

FM tuning range:	87.5 MHz – 108.0 MHz
AM tuning range:	531 kHz – 1 710 kHz (at 9 kHz) 530 kHz – 1 710 kHz (at 10 kHz)

Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD
CD-R/CD-RW (recorded in Audio CD/
Video CD/ Super Video CD/ MP3/ WMA/
JPEG format)
DVD-R/DVD-RW (recorded in video
format)

Dynamic range:	90 dB
Horizontal resolution:	500 lines
Wow and flutter:	Immeasurable
MP3 recording format:	MPEG 1/2 Audio Layer 3
Max. Bit rate:	320 kbps

Cassette deck section

Frequency response	
Normal (type I):	50 Hz – 14 000 Hz
Wow and flutter:	0.15% (WRMS)

General

Power requirement:	AC 110 V / AC 127 V / AC 220 V – AC 230 V \sim , (adjustable with the voltage selector), 50 Hz/60 Hz
Power consumption:	90 W (at operation) 12 W (on standby) 5.3 W (with deactivating the clock indication)
Dimensions (approx.):	175 mm x 237 mm x 375 mm (W/H/D)
Mass (approx.):	7.5 kg

Supplied Accessories

See page 3.

Speakers

Type:	2-Way Bass-reflex type
Speaker Systems:	Woofer: 10 cm cone x 1 Tweeter: 4 cm cone x 1
Power handling capacity:	HIGH: 20 W LOW: 20 W
Impedance:	HIGH: 4 Ω LOW: 4 Ω
Frequency range:	56 Hz – 40 000 Hz
Sound pressure level:	84 dB/W•m
Dimensions (approx.):	145 mm x 236 mm x 205 mm (W/H/D)
Mass (approx.):	2.3 kg each

Design and specifications are subject to change without notice.


This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

“CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 525 OR 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE ‘STANDARD DEFINITION’ OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 525p AND 625p DVD PLAYER, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.”

Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)

Instrucción sobre la línea de la red (CA) (no aplicable para Europa, EE.UU., Canadá, Australia, ni el Grã-Bretanha)

Instrução sobre a tensão da rede eléctrica (CA) (não aplicável para a Europa, os E.U.A., o Canadá, a Austrália e o Reino Unido)

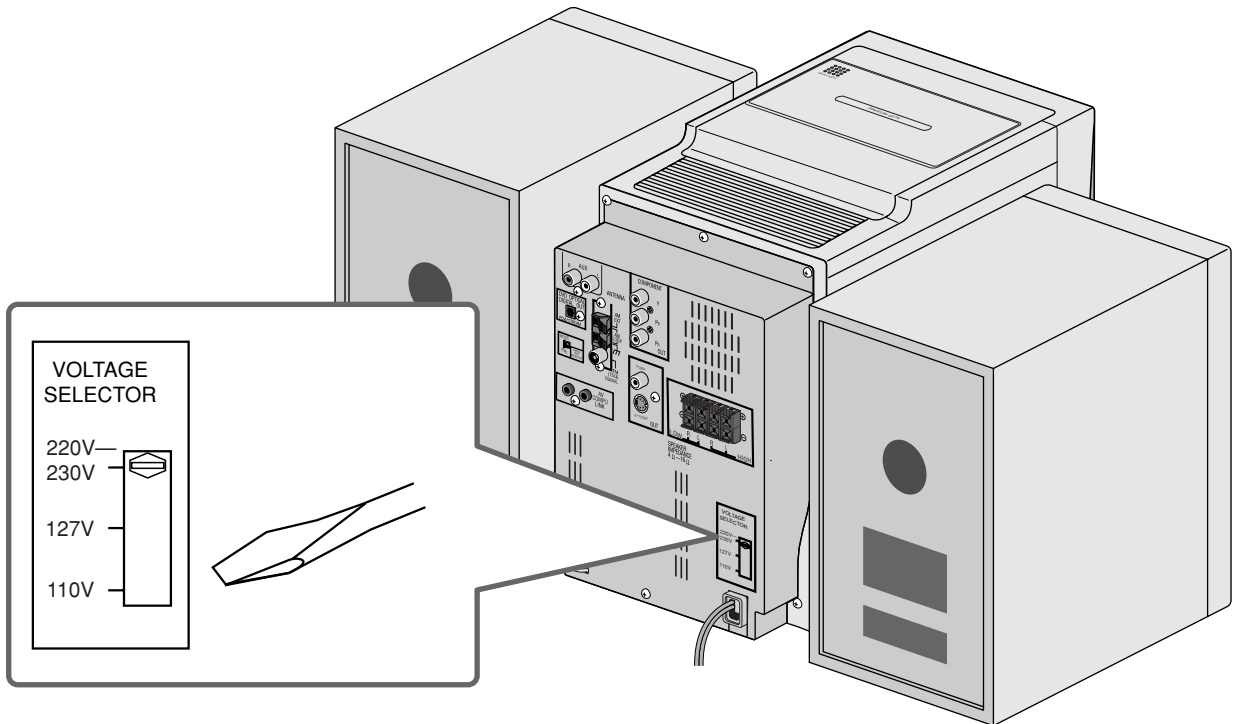

CAUTION for mains (AC) line

BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/ electric shock.

IMPORTANTE para la línea de la red (CA)

ANTES DE ENCHUFAR EL EQUIPO, compruebe si la tensión de la línea de la red (CA) corresponde con la posición del selector de tensión situado en la parte exterior del equipo, y si es diferente, reajuste el selector de tensión para evitar el riesgo de incendios/ descargas eléctricas.

IMPORTANTE para a ligação à tensão da rede (CA)

ANTES DE LIGAR O APARELHO A UMA TOMADA DA REDE, verifique se a tensão da rede CA corresponde à posição do seletor de voltagem localizado na parte externa deste equipamento. Caso não corresponda, reajuste o seletor de voltagem a fim de evitar avarias ou riscos de incêndio e choque elétrico.

JVC
VICTOR COMPANY OF JAPAN, LIMITED


JVC



MICRO COMPONENT SYSTEM

UX-S77

—Consists of CA-UXS77 and SP-UXS77

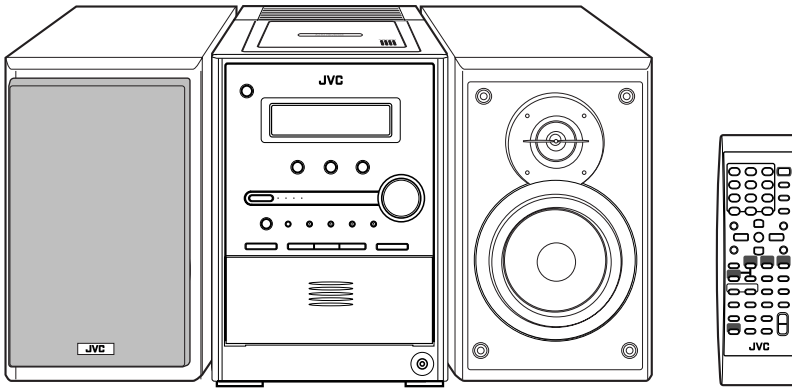

INSTRUCTIONS

Warnings, Cautions and Others

CAUTION—STANDBY/ON ϕ /I button!

Disconnect the mains plug to shut the power off completely (all lamps and indications go off). The STANDBY/ON ϕ /I button in any position does not disconnect the mains line.

- When the unit is on standby, the STANDBY/ON lamp lights in red.
- When the unit is turned on, the STANDBY/ON lamp lights in green.

The power can be remote controlled.

CAUTION

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.


CAUTION

- Do not block the ventilation openings or holes.
(If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION: Proper Ventilation

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

1. Front: No obstructions and open spacing.
2. Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
3. Bottom: Place on a level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

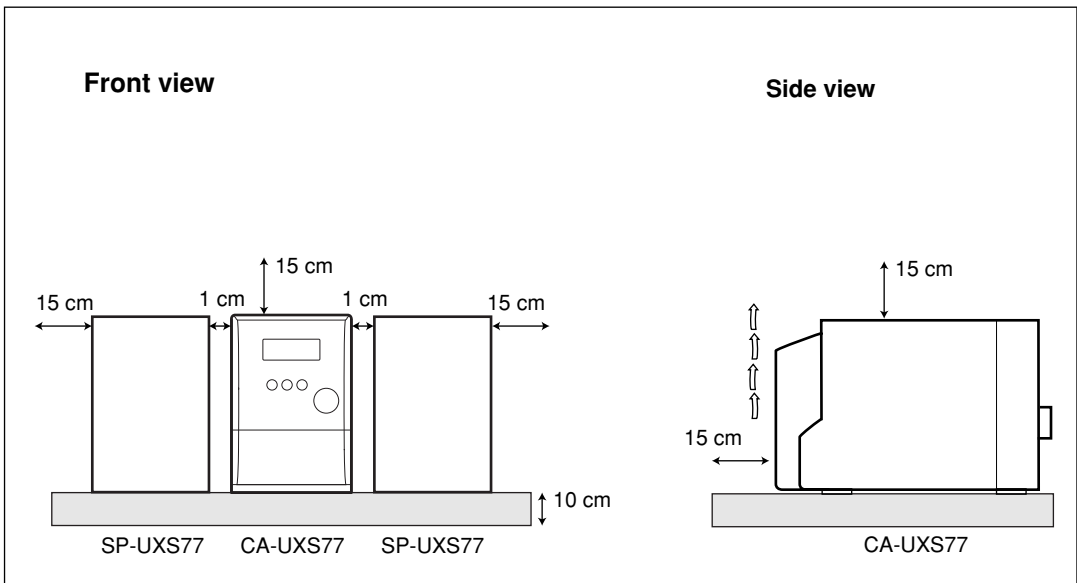

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE UNIT.

CAUTION : Visible and invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

WARNING : Synlig och osynlig laserstrålning när den öppnas och spärren är urkopplad. Betrakta ej strålen. (s)

ADVARSEL : Synlig og usynlig laserstråling når maskinen er åben eller interlocken fejler. Undgå direkte eksponering til stråling. (d)

VARO : Avattaessa ja suojalukitus ohitettuna tai viallisena olet alltiina näkyvälle ja näkymättömälle lasersäteilylle. Vältä säteen kohdistumista suoraan itseesi. (f)

Contents

Introduction	2	Advanced Tape Operations	32
Precautions	2	Recording on a Tape	32
How to Read This Manual	2	Synchronized Disc Recording	33
Getting Started	3	Timer Operations	35
Step 1: Unpack	3	Setting the Timer	35
Step 2: Prepare the Remote Control	3	Setup Menu Operations	37
Step 3: Hook Up	4	Operating Procedure	37
Changing the Scanning Mode	7	■ LANGUAGE Setup Menu	38
Before Operating the System	8	■ PICTURE Setup Menu	38
Playable Disc Types	8	■ AUDIO Setup Menu	39
Parts Index	9	■ OTHERS Setup Menu	40
Display Indicators	10	Restricting the Review—Parental Lock	41
Daily Operations—Playback	12	Additional Information	43
Listening to the Radio	13	Learning More about This System	43
Playing Back a Disc	14	Maintenance	45
Playing Back a Tape	16	Troubleshooting	46
Daily Operations—Sound&Other Adjustments	17	Language Code List	47
Adjusting the Volume	17	Country/Area Codes List	48
Adjusting the Sound	17	DVD OPTICAL DIGITAL OUT Signals	49
Presetting Automatic DVD Sound Increase Level	18	Specifications	50
Adjusting the Audio Input Level	18		
Changing the Display Brightness	18		
Changing the Picture Tone	18		
Setting the Clock	19		
Turning Off the Power Automatically	20		
Unique DVD/VCD Operations	21		
Selecting the Sound Track	21		
Selecting the Subtitle Language	22		
Selecting the View Angle	22		
Playing Back a Bonus Group	22		
Selecting Browsable Still Pictures	23		
Special Effect Playback	23		
Advanced Disc Operations	24		
Programming the Playing Order—Program Play	24		
Playing at Random—Random Play	25		
Playing Repeatedly	26		
Prohibiting Disc Ejection—Child Lock	26		
On-Screen Disc Operations	27		
On-screen Bar Information	27		
Operations Using the On-screen Bar	28		
Operations on the CONTROL Screen	30		

Introduction

Precautions

Installation

- Install in a place which is level, dry and neither too hot nor too cold—between 5°C and 35°C.
- Install the System in a location with adequate ventilation to prevent internal heat buildup in the System.



DO NOT install the System in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

- Leave sufficient distance between the System and the TV.
- Keep the speakers away from the TV to avoid interference with TV.

Power sources

- When unplugging the System from the wall outlet, always pull on the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

Moisture condensation

Moisture may condense on the lenses inside the System in the following cases:

- After starting to heat the room
- In a damp room
- If the System is brought directly from a cold to a warm place.

Should this occur, the System may malfunction. In this case, leave the System turned on for a few hours until the moisture evaporates, unplug the AC power cord, then plug it in again.

Internal heat

- A cooling fan is mounted on the rear panel to prevent heat buildup inside the unit.



For safety, observe the following carefully:

- Make sure there is good ventilation around the unit. Poor ventilation could overheat and damage the unit.
- DO NOT block the cooling fan and the ventilation openings or holes. If they are blocked by a newspaper or cloth, etc., the heat may not be able to get out.

Others

- Should any metallic object or liquid fall into the System, unplug the AC power cord and consult your dealer before operating any further.



DO NOT disassemble the System since there are no user serviceable parts inside.

- If you are not going to operate the System for an extended period of time, unplug the AC power cord from the wall outlet.

If anything goes wrong, unplug the AC power cord and consult your dealer.

How to Read This Manual

To make the explanations in this manual as simple and easy-to-understand as possible, we have adapted the following methods:

- Button and control operations are explained as listed in the table below. In this manual, the operations using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.
- **Some related tips and notes are explained later in the sections “Learning More about This System” and “Troubleshooting,” but not in the same section explaining the operations.** If you want to know more about the functions, or if you have a doubt about the function, go to these sections and you will find your answer there.

	Indicates that you press the button briefly .
	Indicates that you press the button briefly and repeatedly until an option you want is selected.
	Indicates that you press one of the buttons.
	Indicates that you press and hold the button for a specified period. <ul style="list-style-type: none"> • The number inside the arrow indicates the period of press (in this example, 2 seconds). • If no number is inside the arrow, press and hold until the entire procedure is complete or until you get a result you want.
	Indicates that you turn the control toward the specified direction(s).
	Indicates that this operation is only possible using the remote control.
	Indicates that this operation is only possible using the buttons and controls on the main unit.

Getting Started

Step 1: Unpack the package and check the accessories.



Step 1: Unpack

After unpacking, check to be sure that you have all the following items. The number in parentheses indicates the quantity of each piece supplied.


- FM antenna (1)
- AM loop antenna (1)
- Remote control (1)
- Composite video cord (1)
- Batteries (2)
- AC plug adaptor (1)

If any item is missing, consult your dealer immediately.


Step 2: Prepare the Remote Control

Insert the batteries into the remote control by matching the polarity (+ and -) correctly.


Step 2: Prepare the remote control.

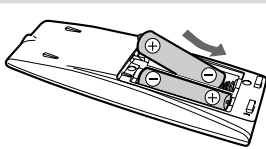


1

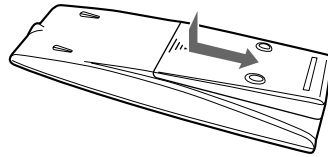


2

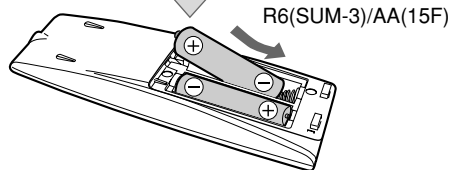

3

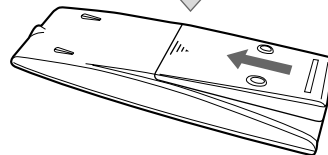

Step 3: Hook up the components such as AM/FM antennas, speakers, etc. (see pages 4 to 7).

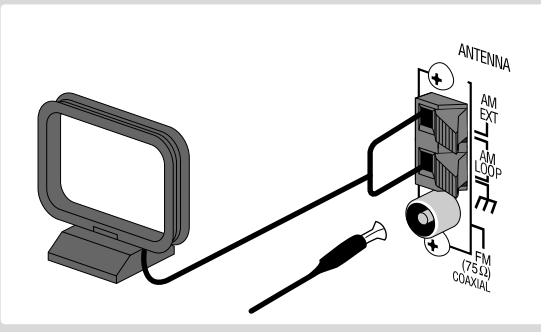

Finally plug the AC power cord.
Now you can operate the System.

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, the remote control will be damaged from battery leakage.





Step 3: Hook Up

If you need more detailed information, see pages 6 and 7.

Illustrations of the input/output terminals below are typical examples.
When you connect other components, refer also to their manuals since the terminal names actually printed on the rear may vary.


Turn the power off to all components before connections.

AM loop antenna (supplied)
 Turn it until the best reception is obtained.

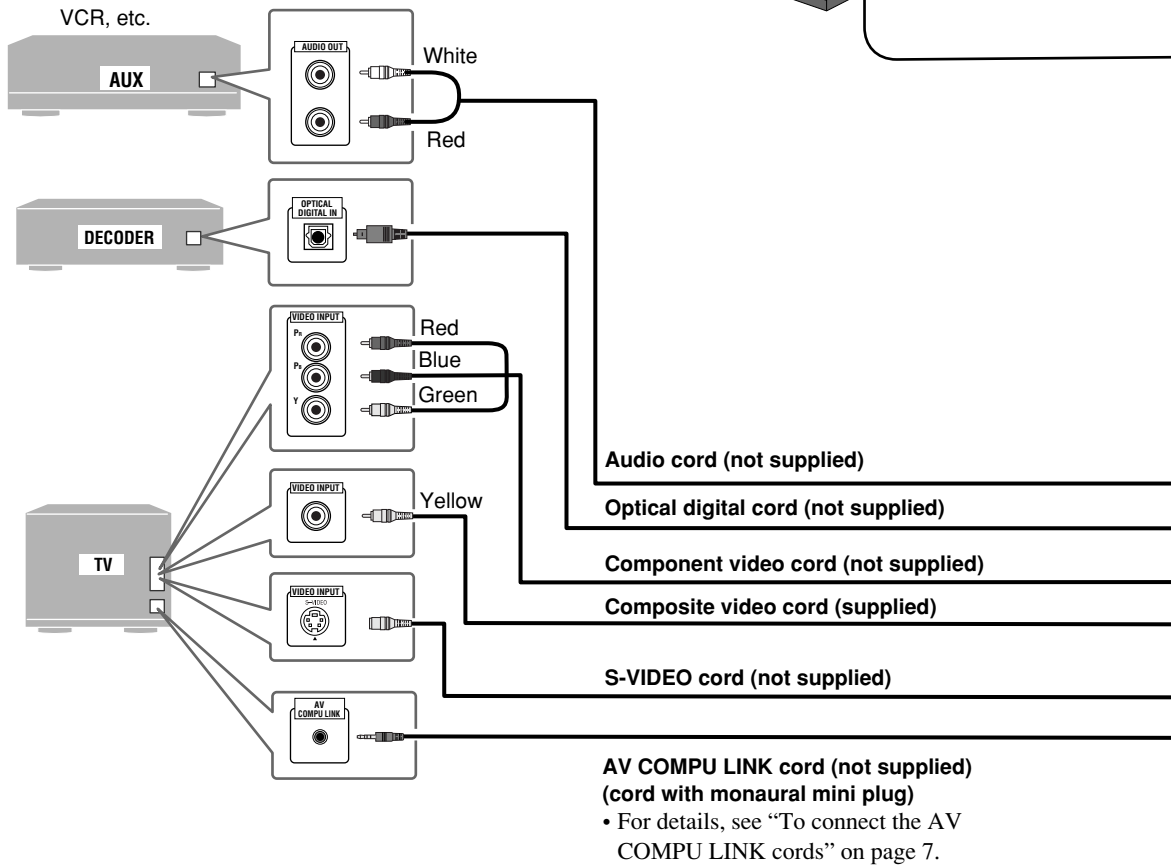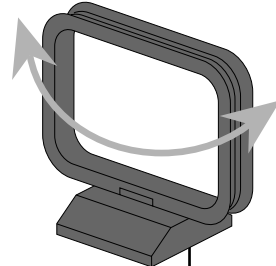


To a wall outlet
Plug the AC power cord only after all connections are complete.
 • If the wall outlet does not match the AC plug, use the supplied AC plug adaptor.

For better FM/AM reception

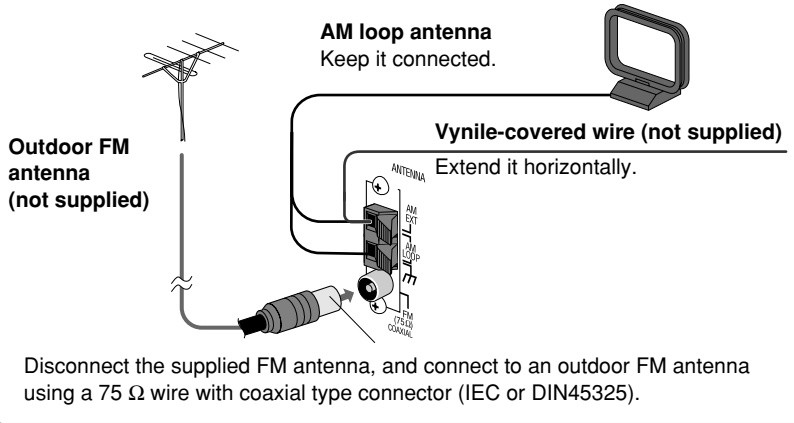


FM antenna (supplied)

Extend it so that you can obtain the best reception.

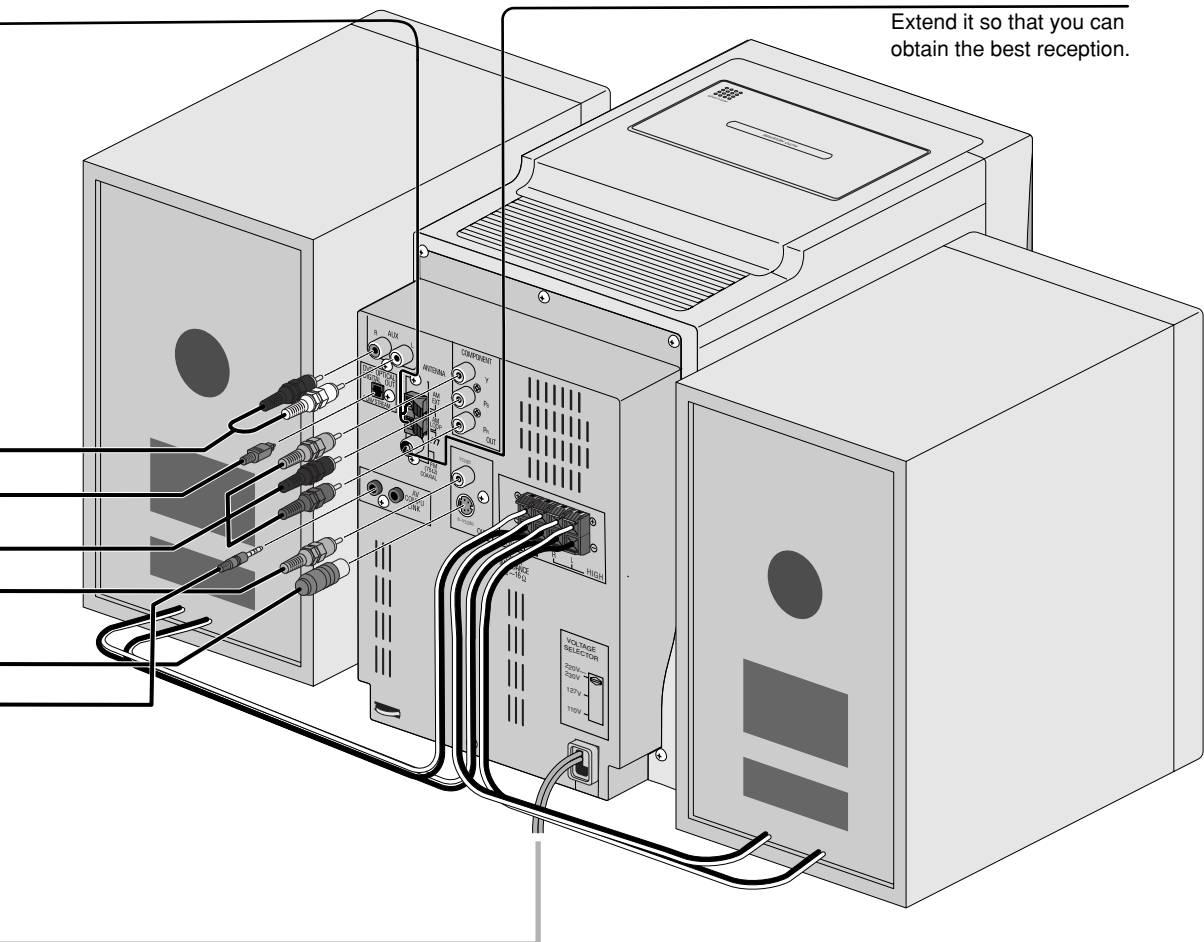


To assemble and connect the AM loop antenna

To assemble the AM loop antenna

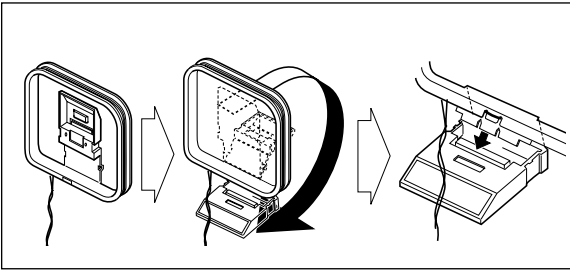


To connect the AM loop antenna

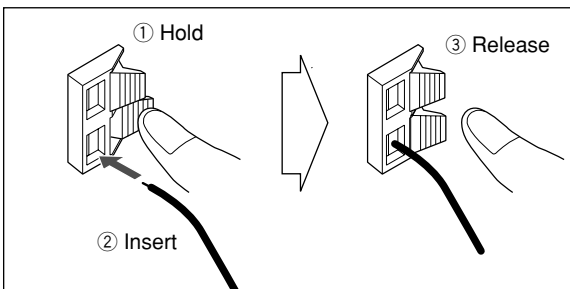

- If the AM loop antenna wire or speaker cords are covered with vinyl, remove the vinyl to expose the tip of the antenna by twisting the vinyl.
- Make sure the antenna conductors do not touch any other terminals, connecting cords and power cord. Also, keep the antennas away from metallic parts of the System, connecting cords, and the AC power cord. This could cause poor reception.

To connect the speaker cords

Connect the right speaker to the RIGHT terminals, and the left speaker to the LEFT terminals.

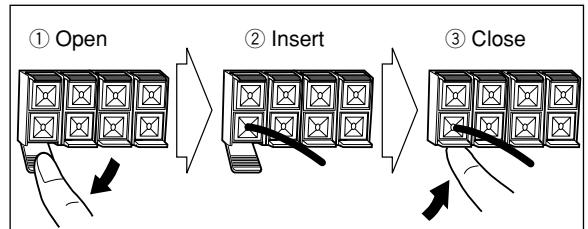

When connecting the speaker cords, match the polarity of the speaker terminals:

- For LOW terminals: Red cord to (+) and black cord to (-).
- For HIGH terminals: Grey cord to (+) and blue cord to (-)

The speakers are magnetically shielded to avoid color distortions on TVs. However, if not installed properly, it may cause color distortions. So, pay attention to the following when installing the speakers.

– When placing the speakers near a TV set, turn off the TV's main power switch or unplug it before installing the speakers.

Then wait at least 30 minutes before turning on the TV's main power switch again.

Some TVs may still be affected even though you have followed the above. If this happens, move the speakers away from the TV.




- DO NOT connect more than one speaker to each terminal.
- DO NOT allow the conductor of the speaker cords to be in touch with the metallic parts of the System.

To connect the AV COMPU LINK cords

This system allows you to use JVC's TV with simple operations; by starting playing back a disc, the TV automatically turns on and changes the input mode to the appropriate position so that you can view the playback picture.

To use AV COMPU LINK, you need to connect the System and the TV by using a cord with monaural mini-plugs (not supplied) in addition to the video input/output connection through the COMPONENT jacks, S-VIDEO jack or VIDEO (composite) jack on the rear.


To connect digital audio

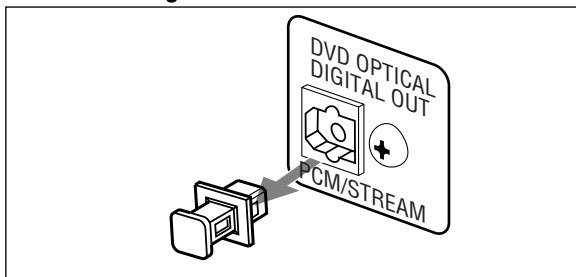

Before connecting optical digital cord, remove the protective cap from the DVD OPTICAL DIGITAL OUT terminal.

Adjusting the Voltage Selector

Use a screwdriver to slide the voltage selector so that the voltage marker is pointing at the same voltage as where you are plugging in the unit. (See also the back cover page.)

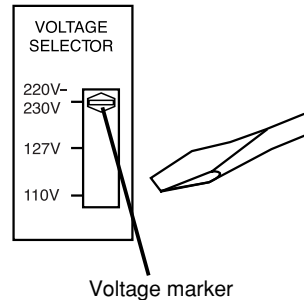


DO NOT plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

Changing the Scanning Mode



This System supports progressive scanning. If you connect a progressive TV through the COMPONENT jacks, you can enjoy a high quality picture from the built-in DVD player by selecting "PROGRE."

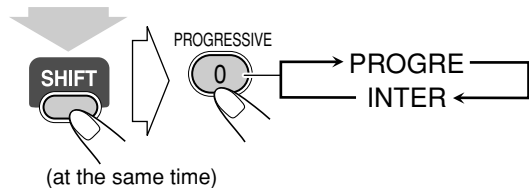







PROGRE Progressive scanning. For a progressive TV.

INTER Interlaced scanning. For a conventional TV.

Before Operating the System

Playable Disc Types

This unit has been designed to play back the following discs:

Disc Type	Mark (Logo)	Video Format	Region Code* Number
DVD Video		NTSC	1 or ALL
DVD Audio			
Video CD (VCD)	 Video CD		
Super Video CD (SVCD)	 		
Audio CD		—	—
CD-R	The System can play back CD-R or CD-RW recorded in the Audio CD, Video CD, SVCD, MP3, WMA, and JPEG formats.		
CD-RW			
DVD-R	The System can play back DVD-R or DVD-RW recorded in the video format.		
DVD-RW			

In addition to the above discs, this system can play back audio data recorded on CD Text, CD-G (CD Graphics), and CD-Extra.

- The following discs cannot be played back: DVD-ROM, DVD-RAM, DVD+R, DVD+RW, CD-I (CD-I Ready), CD-ROM, Photo CD, etc. Playing back these discs will generate noise and damage the speakers.
- In this manual, “file” and “track” are interchangeably used for MP3/WMA/JPEG operations.

* Note on Region Code

DVD players and DVDs have their own Region Code numbers. This System can play back only DVDs recorded with the NTSC color system whose Region Code numbers including “1.” EX.:



If a DVD with the improper Region Code numbers is loaded, “RGN ERR (REGION CODE ERROR)” appears on the display and playback will not start.

DVD Video—digital audio formats

The System can play back the following digital audio formats.


- **Linear PCM:** Uncompressed digital audio, the same format used for CDs and most studio masters.
- **Dolby Digital:** Compressed digital audio, developed by Dolby Laboratories, which enables multi-channel encode to create the realistic surround sound.
- **DTS (Digital Theater Systems):** Compressed digital audio, developed by Digital Theater Systems, Inc., which enables multi-channel like Dolby Digital. As the compression ratio is lower than for Dolby Digital, it provides wider dynamic range and better separation.

When playing a multi-channel encoded DVD, the System properly converts these multi-channel signals into 2 channels, and emits the downmixed sound from the speakers.

- **To enjoy the powerful sound of these multi-channel encoded DVDs,** connect a proper decoder or an amplifier with a proper built-in decoder to the digital output terminal on the rear.

IMPORTANT: Before playing a disc, make sure of the following...

- Turn on the TV and select an appropriate input mode on the TV to view the pictures or on-screen displays on the TV screen.
- For disc playback, you can change the initial setting to your preference. See “Setup Menu Operations” on page 37.


If “” appears on the TV screen when you press a **button**, the disc cannot accept the operation you have tried to do, or data required for that operation is not recorded on the disc.

- Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic”, “MLP Lossless”, and the double-D symbol are trademarks of Dolby Laboratories.
- “DTS” and “DTS2.0+DIGITAL OUT” are registered trademarks of Digital Theater Systems, Inc.


Parts Index

Refer to the pages to see how to use the buttons and controls.

Remote control

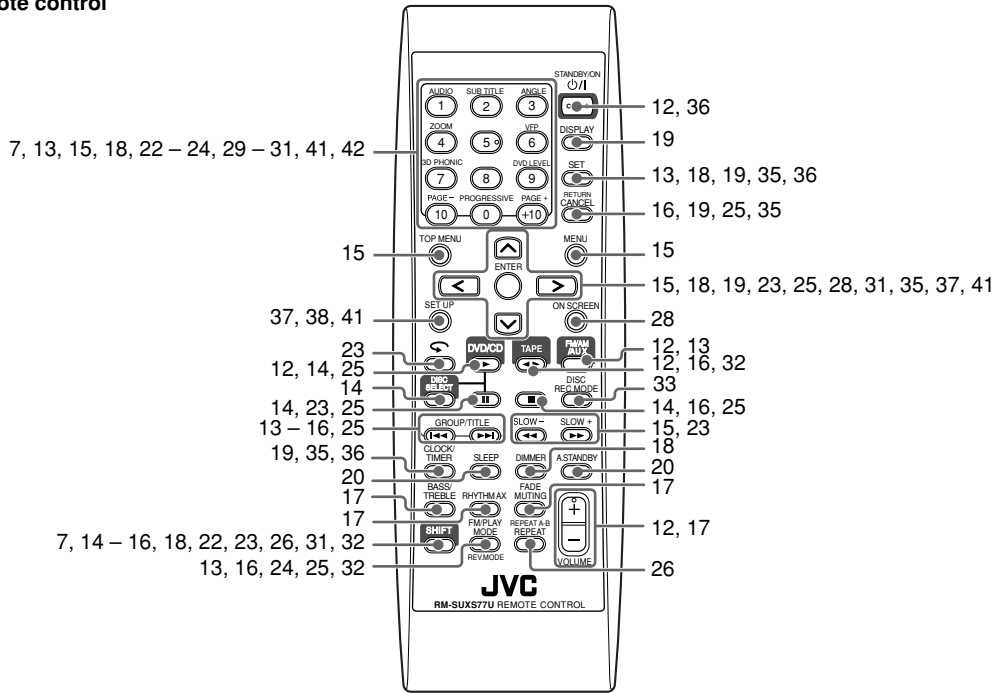


Main unit

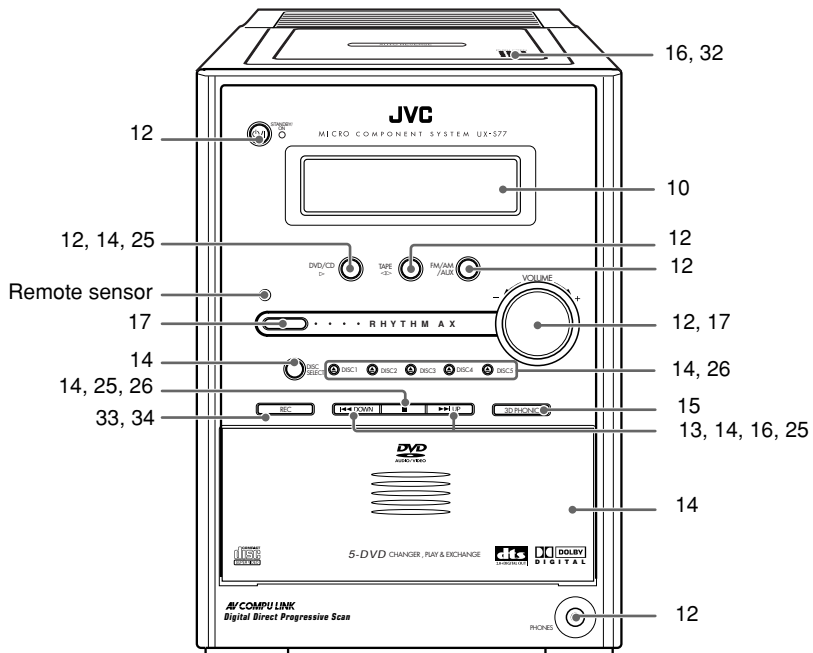













Display Indicators

The indications on the display teach you a lot of things while you are operating the System. Before operating the System, be familiar with when and how the indicator illuminates on the display.

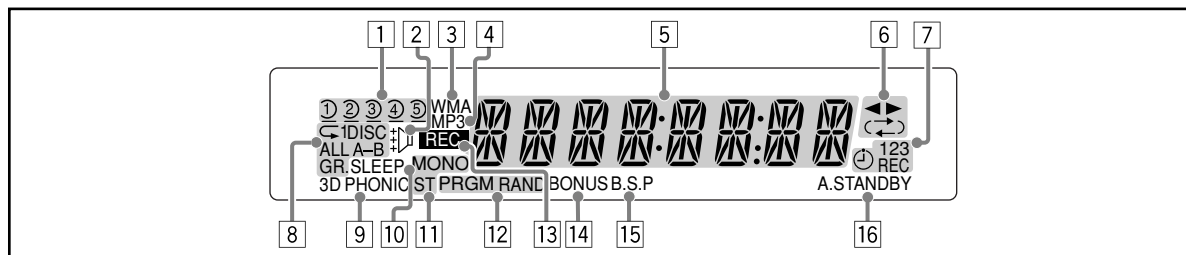


- 1 Disc tray indicators
 - 1-5: Disc tray number indicators.
 - ○ (tray indicator):
 - Lights when the disc is detected.
 - Flashes while playing back a disc.
 - Goes off when there is no disc in the tray.
 - ○ (disc indicator): lights below when the tray indicator indicates the current selected disc.
- 2 RHYTHM AX indicator
 - Lights when RHYTHM AX is activated (see page 17).
- 3 WMA indicator
 - Lights when the current track is recorded in WMA format.
- 4 MP3 indicator
 - Lights when the current track is recorded in MP3 format.
- 5 Main display
 - While listening to radio: band (or preset number) and station frequency appear.
 - While selecting tape: “TAPE” appears.
 - While selecting “AUX”: “AUX” appears.
 - While playing a disc: see “Indications on the main display while operating a disc” on page 11.
- 6 Tape operation indicators
 - ◀▶ (tape direction):
 - Lights to indicate the current tape running direction.
 - Flashes slowly during playback and recording.
 - Flashes quickly while rewinding a tape.
 - (↺) (Reverse mode):
 - (↺): tape play continues endlessly.
 - (↺): tape automatically reverses once.
 - (↺): tape play stops at the end of one side.
- 7 Timer indicators
 - ☹ : lights when Daily Timer or Recording Timer stands by; flashes while working.
 - 1/2/3: lights up when a Daily Timer (1, 2, or 3) stands by; flashes while setting or working.
 - REC: lights when the Recording Timer stands by; flashes while setting or working.
- 8 Repeat mode indicators
 - ↺ : lights when Repeat mode is activated.
 - 1 DISC ALL A-B GR.:
 - 1: lights when One Track Repeat is activated.
 - 1DISC: lights when One Disc Repeat is activated.
 - ALL: lights when All Disc Repeat is activated.
 - A-B: lights when A-B Repeat is activated.
 - GR.: lights when Group Repeat is activated.
- 9 3D PHONIC indicator
 - Lights when 3D PHONIC is activated (see page 15).
- 10 SLEEP indicator
 - Lights when the Sleep Timer is activated.
- 11 FM reception indicators
 - MONO: lights when FM reception mode is monaural.
 - ST (stereo): lights while an FM stereo station with sufficient signal strength is tuned in.
- 12 Disc operation indicators
 - PRGM (program): lights when Program Play mode is activated.
 - RAND (random): lights when Random Play mode is activated
- 13 REC indicators
 - Lights while recording.
- 14 BONUS indicator
 - Lights when a DVD Audio with a bonus group is detected (see page 22).
- 15 B.S.P indicator
 - Lights when the current disc is DVD Audio with browsable still picture (see page 23).
- 16 A (auto), STANDBY indicator
 - Lights when Auto Standby is activated.
 - Flashes when disc playback stops with Auto Standby activated.

Indications on the main display while operating a disc

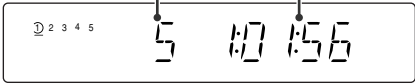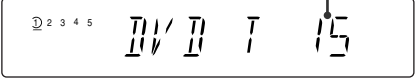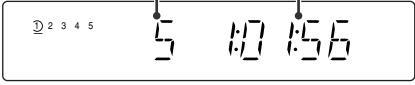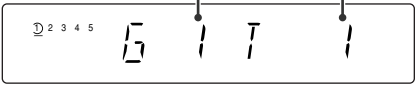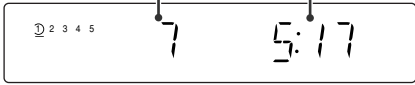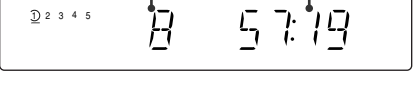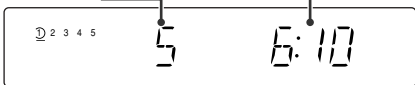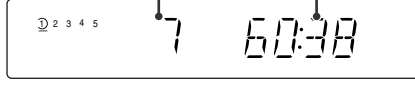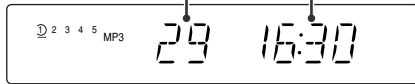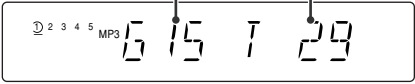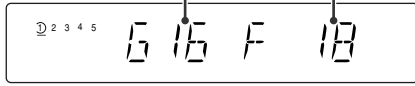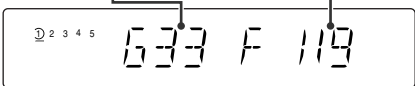While playing back a disc:	While disc play is stopped:
<ul style="list-style-type: none"> DVD Video: <p>Chapter no. Elapsed playing time</p>  <p>By pressing DISPLAY, you can show the current title and chapter numbers for a few seconds.</p>	<ul style="list-style-type: none"> DVD Video: <p>Total title no.</p> 
<ul style="list-style-type: none"> DVD Audio: <p>Track no. Elapsed playing time</p>  <p>By pressing DISPLAY, you can show the current group and track numbers for a few seconds.</p>	<ul style="list-style-type: none"> DVD Audio: <p>Group no. Track no.</p> 
<ul style="list-style-type: none"> Audio CD: <p>Track no. Elapsed playing time</p> 	<ul style="list-style-type: none"> Audio CD: <p>Total track no. Total playing time</p> 
<ul style="list-style-type: none"> SVCD/VCD: <p>Track no. Elapsed playing time*</p>  <p>* "PBC" appears while playing a disc with PBC.</p>	<ul style="list-style-type: none"> SVCD/VCD: <p>Total track no.* Total playing time</p>  <p>* Changes to "PBC" when stopping PBC playback.</p>
<ul style="list-style-type: none"> MP3/WMA: <p>Track no. Elapsed playing time</p>  <p>By pressing DISPLAY, you can show the current group and track numbers for a few seconds.</p>	<ul style="list-style-type: none"> MP3/WMA: <p>Current group no. Current track No.</p> 
<ul style="list-style-type: none"> JPEG: <p>Group no. File no.</p> 	<ul style="list-style-type: none"> JPEG: <p>Current group no. Current file no.</p> 

- If Resume is turned "ON" (see page 40), "RESUME" appears when you stop playback (except for Audio CD and MP3/WMA/JPEG discs).

Daily Operations—Playback

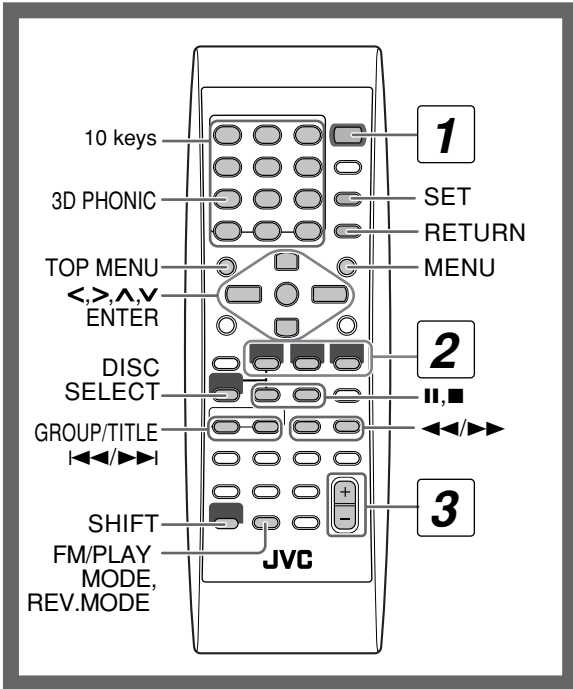

In this manual, the operation using the remote control is mainly explained; however, you can use the buttons and controls on the main unit if they have the same (or similar) name and marks.

1 Turn on the power.

The STANDBY/ON lamp on the main unit lights in green.

- Without pressing STANDBY/ON \odot/I , the System turns on by pressing one of the source selecting buttons in the next step.


2 Select the source.

Playback automatically starts if the selected source is ready to start.


- If you press AUX, start playback source on the external component.

3 Adjust the volume.

4 Operate the target source as explained later.

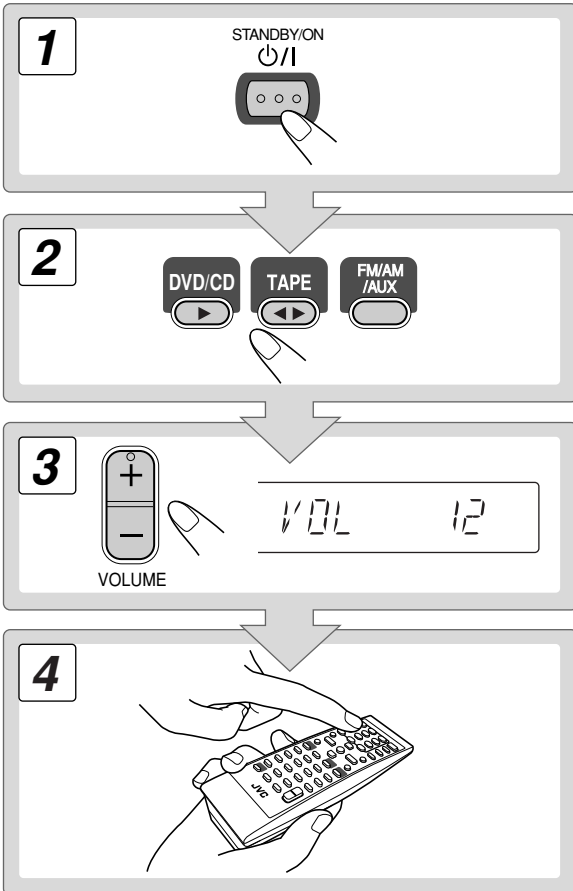

To turn off (stand by) the unit

 

The STANDBY/ON lamp on the main unit lights in red.

- A small amount of power is always consumed even while on standby.

For private listening

Connect a pair of headphones to the PHONES jack on the main unit. The sound will no longer come out of the speakers. Be sure to turn down the volume before connecting or putting the headphones.

- Disconnecting the headphones will activate the speakers again.





DO NOT turn off (stand by) the System with the volume set to an extremely high level; Otherwise, the sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the System or start playback.

Listening to the Radio

To select the AM tuner interval spacing

Some countries space AM stations 9 kHz spacing, and other countries use 10 kHz spacing.

You can change the AM tuner intervals while the System is on stand by and the last selected source is AM.

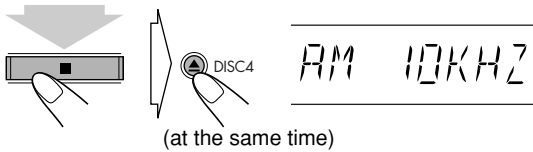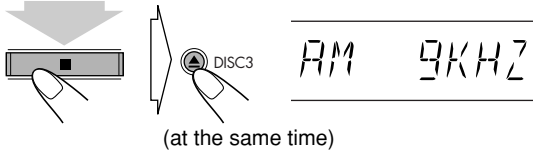

To select the band (FM or AM)



To tune in to a station

While FM or AM is selected...

Remote control:	Main unit:

Frequency starts changing on the display.

When a station (frequency) with sufficient signal strength is tuned in, the frequency stops changing.

- When you repeatedly press the button, the frequency changes step by step.

To stop searching manually, press either button.

If the received FM station is hard to listen



The MONO indicator lights on the display. Reception will improve though stereo effect is lost—Monaural reception mode.

To restore the stereo effect, press the button again (the MONO indicator goes off).

To preset the stations



You can preset 30 FM and 15 AM stations.

1 Tune in to a station you want to preset.


- You can also store the monaural reception mode for FM preset stations if selected.

2 Activate the preset number entry mode.



- Finish the following process while the indication on the display is flashing.

3 Select a preset number for the station you store.

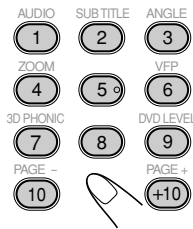


Examples:

- To select preset number 5, press 5.
- To select preset number 15, press +10, then 5.
- To select preset number 30, press +10, +10, then 10.



 
4 Store the station.




To tune in to a preset station



1 Select the band (FM or AM).

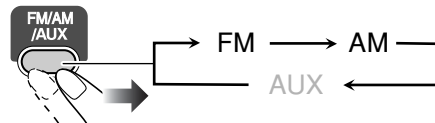

2 Select a preset number for the station you store.

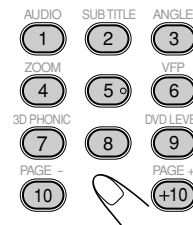

- You can also use the ◀▶ button to select a preset station.


Playing Back a Disc

Before operating a disc, be familiar how a disc is recorded.

- DVD Video comprises of “Titles” which includes “Chapters,” DVD Audio/MP3/WMA comprise of “Groups” which include “Tracks,” and CD/SVCD/VCD comprise of only “Tracks.”
- For JPEG playback, see “Operations on the CONTROL Screen” on page 30.

To insert a disc

You can insert a disc while playing another source.

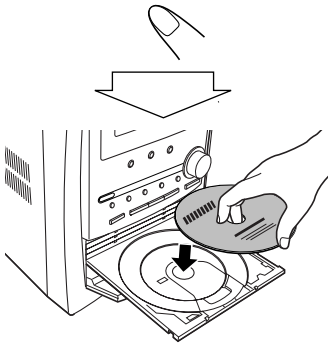

To close the disc tray, press the same ▲ again.

- When current selected disc tray open, you use DVD/CD ► button to close disc tray and start playback (depending on how the disc is programmed internally).
- When you press ▲ for the next tray you want to place another disc onto, the first disc tray automatically closes and then next tray comes out.

To start:	To pause:	To stop:
	To release, press DVD/CD ►.	

 
 
 
- **While playing DVD/SVCD/VCD:** This System can store the stop point, and when you start playback again by pressing DVD/CD ►, it starts from the position where you have stopped—Resume Play. (“RESUME” appears on the display when you stop playback.)

To stop completely while Resume is activated, press ■ twice. (To cancel Resume, see “RESUME” on page 40.)

- When operating the System, the on-screen guide icon (see the following table) appears on the TV.
- To deactivate the on-screen guide icons, see “ON SCREEN GUIDE” on page 40.

On-screen guide icons


- During DVD Video playback, the following icons may appear on the TV screen:



- The following icons will be also shown on the TV screen to indicate your current operation.



 To select a disc




- When current source is not disc, press DVD/CD ► to select the disc player as the source during “PLAY” flashing on the display.

To select a title/group



While playing...

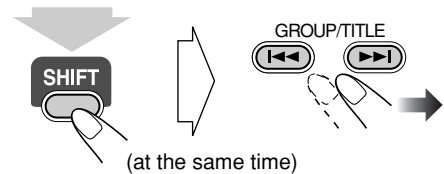

- Group name appears for MP3/WMA discs.

To select a chapter/track

While playing...



- First time you press ◀◀, you can go back to the beginning of the current chapter/track.

To locate a particular portion

While playing a disc except MP3/WMA...




- No sound comes out while searching on DVD Video/SVCD/VCD.

To return to normal playback, press DVD/CD ►.

To locate an item directly

You can select a title/chapter/track directly and start playback.

- For DVD Video, you can select a **title before starting playback**, while you can select a **chapter after starting playback**.

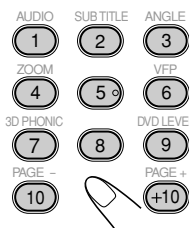


Examples:

- To select number 5, press 5.
- To select number 15, press +10, then 5.
- To select number 30, press +10, +10, then 10.

To use 3D Phonic

While playing...

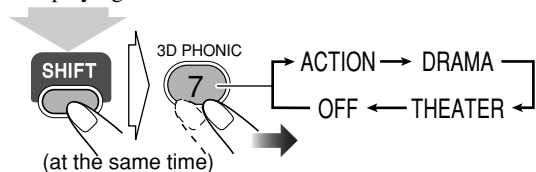

On the TV screen

ACTION	Suitable for action movies and sports programs.
DRAMA	Creates natural and warm sound. Enjoy movies in a relaxed mood.
THEATER	Enjoy sound effects like in a major theater.

To play back using the disc menu


You can operate a disc—DVD and SVCD/VCD with Playback Control (PBC)—using the disc menu shown on the TV screen.

■ For DVD Video/DVD Audio:

1 Show the disc menu.



2 Select an item on the disc menu.

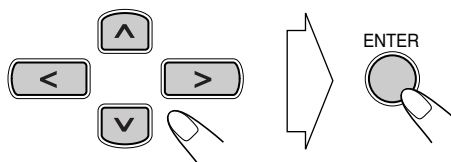


- With some discs, you can also select items by entering the number using the 10 keys.

■ For SVCD/VCD with PBC:

While playing a disc with PBC, "PBC" appears on the display.

When disc menu appears on the TV screen, select an item on the menu. Playback of the selected item starts.

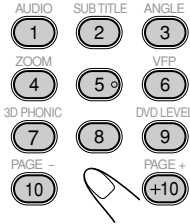


Examples:

To select number 5, press 5.


To select number 15, press +10, then 5.

To select number 30, press +10, +10, then 10.


To move to the next or previous page of the current menu:

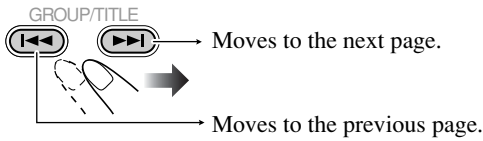

To return to the previous menu:

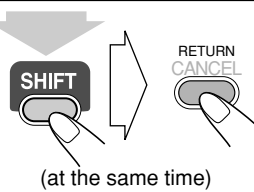

To cancel PBC

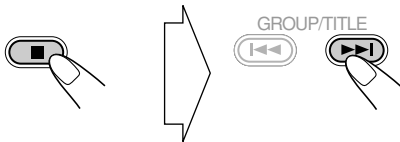



- You can also cancel PBC function by pressing the number button to select a track.

To reactivate PBC, press ■, then press |◀◀.


Playing Back a Tape

To insert a tape


You can play back type I tapes.

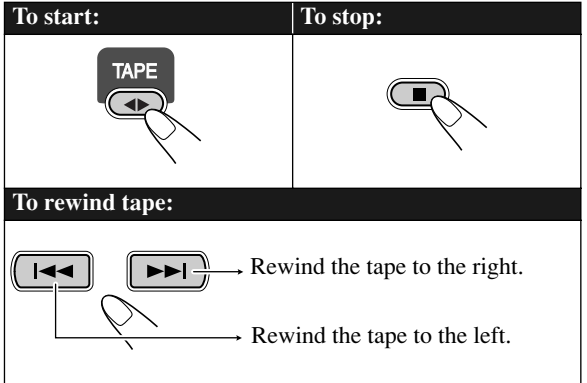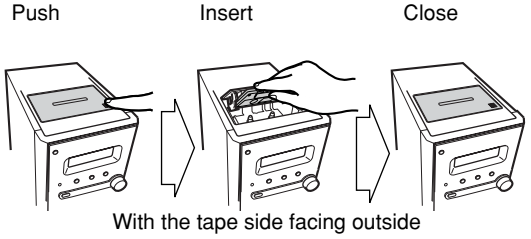

To change the tape running direction

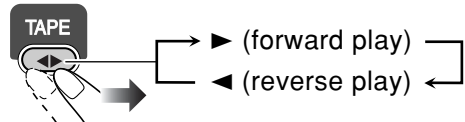


To reverse the tape automatically

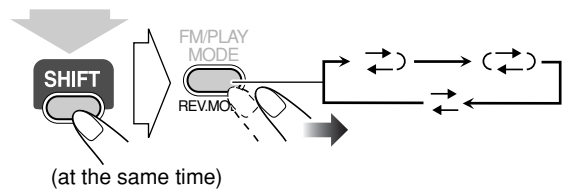


	Tape is played from the forward side to the reverse side. When the reverse side is played back, playback stops.
	Tape is automatically reversed, and playback repeats until you stop it.
	Tape will not be reversed. When the current side of the tape reaches its end, playback stops.

Daily Operations—Sound&Other Adjustments

Remote control

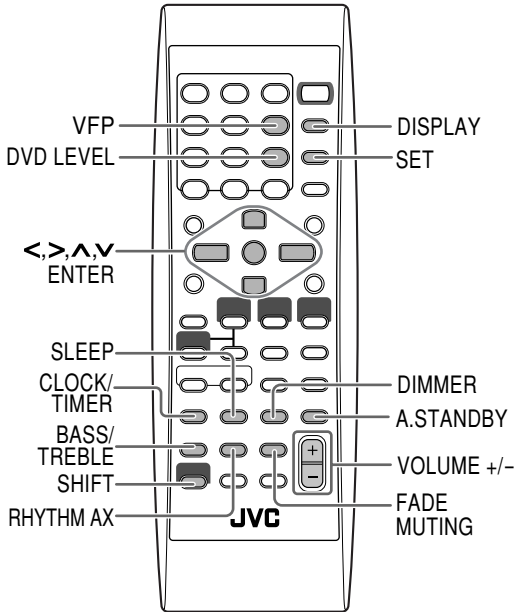


Main unit

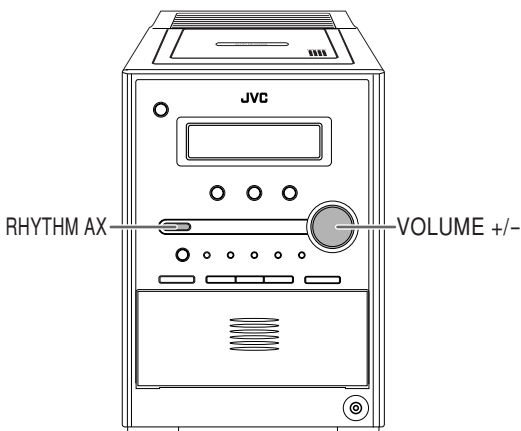

Adjusting the Volume

You can adjust the volume level from level 0 (VOL MIN) to level 50 (VOL MAX).

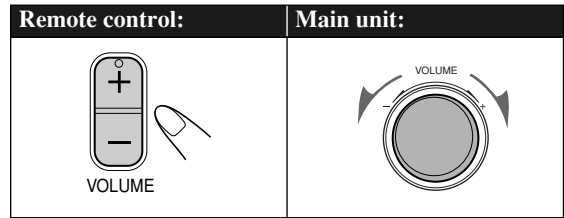

To drop the volume in a moment

 


To restore the volume, press again, or adjust the volume level.

Adjusting the Sound

To emphasize rhythm feeling—RHYTHM AX

This function emphasizes bass attack feeling.



To adjust the tone

You can adjust the bass and treble level from -5 to +5.

To adjust the bass




To adjust the treble



Presetting Automatic DVD Sound Increase Level

The DVD sound is sometimes recorded at a lower level than for other discs and sources. You can set the increase level for the currently loaded DVD, so you do not have to adjust the volume every time you change the source.

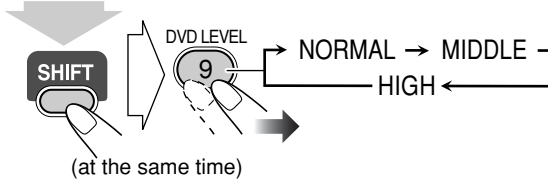


NORMAL	Original recording level.
MIDDLE	Output level is increased (less than "HIGH").
HIGH	Output level is increased (more than "MIDDLE").

- Once the current DVD is ejected, this setting is canceled and set automatically to "NORMAL."

Adjusting the Audio Input Level

If the sound from the component connected to the AUX jacks is too loud or is not loud enough when changing from another source to "AUX," you can change the audio input level through the AUX jacks (without changing the volume level).


While the "AUX" is selected as a source...

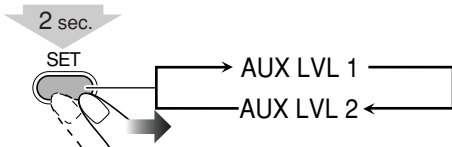

AUX LVL 1	Select this when the sound is too loud (initial setting).
AUX LVL 2	Select this when the sound is not loud enough.

Changing the Display Brightness

 You can dim the display window.





DIM 1	Dims the display.
DIM 2	Erases the display illumination.
AUTO DIM	Erases the display illumination a few seconds after disc playback starts. <ul style="list-style-type: none"> • The display illuminates when playback stops.

Changing the Picture Tone

While showing a playback picture on the TV screen, you can select the preset picture tone, or adjust it and store your own likeness.


To select a preset picture tone

1 Activate VFP.

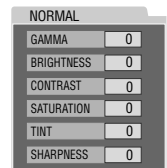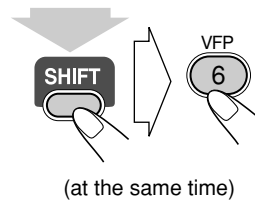

On the TV screen

 2 Select a preset picture tone.




NORMAL	Normally select this.
CINEMA	Suitable for a movie source.
USER1/USER2	You can adjust parameters and can store the settings (see page 19).

To adjust the picture tone

1 Select "USER1" or "USER2."


- Follow steps 1 and 2 explained on page 18.

2 Select a parameter you want to adjust.

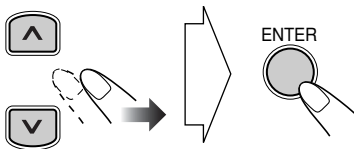

GAMMA	Adjust if the neutral color is bright or dark (-3 to +3).
BRIGHTNESS	Adjust if the entire picture is bright or dark (-8 to +8).
CONTRAST	Adjust if the far and near positions are unnatural (-7 to +7).
SATURATION	Adjust if the picture is whitish or blackish (-7 to +7).
TINT	Adjust if the human skin color is unnatural (-7 to +7).
SHARPNESS	Adjust if the picture is indistinct (-8 to +8).

3 Adjust the parameter.

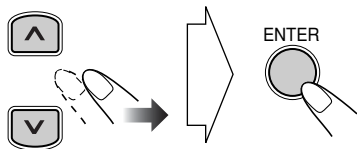

4 Repeat steps 2 to 3 to adjust other parameters.

 
To erase the screen, press VFP again while holding SHIFT.

Setting the Clock

Without setting the built-in clock, you cannot use Daily Timers (see page 35) and Sleep Timer.


- To exit from the clock setting, press CLOCK/TIMER as required.
- To go back to the previous step, press CANCEL.

1 Activate the clock setting mode.




- If you have already adjusted the clock before, press the button repeatedly until the clock setting mode is selected.

2 Adjust the hour.

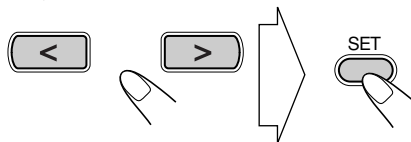


3 Adjust the minute.

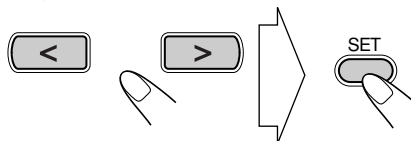

Now the built-in clock starts working.

 To check the current clock time during play




- While playing a DVD and MP3/WMA, you cannot check the current clock time (see page 11).

Turning Off the Power Automatically



 To turn off the unit after playback is over—Auto Standby




When Auto Standby is in use, the A.STANDBY indicator lights on the display.

When disc or tape play stops, the A.STANDBY indicator starts flashing. If no operation is done for about 3 minutes while the indicator is flashing, the System turns off (stands by) automatically.

- Auto Standby does not work while you are listening to radio (FM/AM) and the external component (AUX).


To turn off the unit after a certain period of time—Sleep Timer

 1 Specify the time (in minutes).



2 Wait until the set time goes off.

 
To check the time remaining until the shut-off time



- If you press the button repeatedly, you can change the shut-off time.

Unique DVD/VCD Operations

Remote control

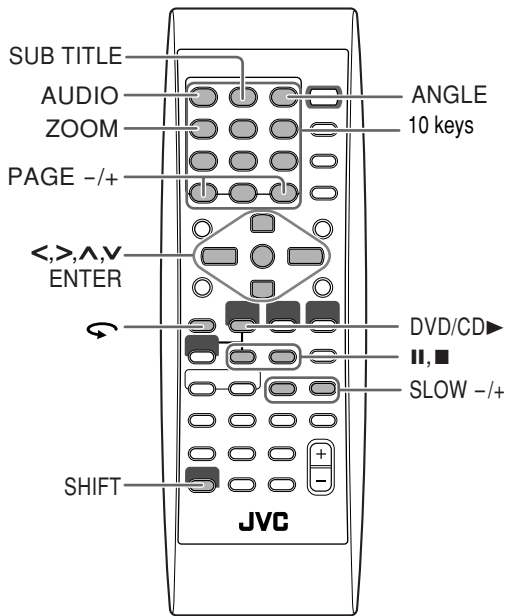

Selecting the Sound Track




For DVD Video: While playing back a chapter containing audio languages, you can select the language to listen to.

For DVD Audio: While playing back a track containing audio channels, you can select the audio channel to listen to.


For SVCD/VCD: When playing back a track, you can select the audio channel to play.

- You can also select the audio track using the on-screen bar (see page 27).

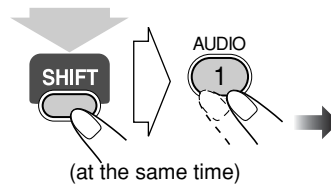


While playing a DVD Video...

Ex.:

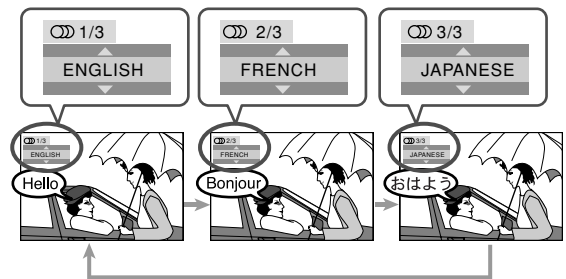


While playing a DVD Audio...

Ex.:

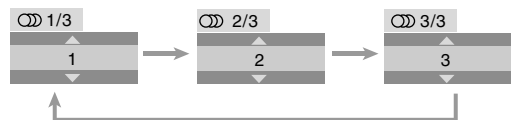

While playing an SVCD or VCD...

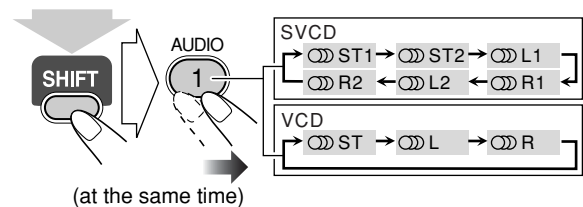

ST1/ST2/ST To listen to normal stereo (2 channel) playback.

L1/L2/L To listen to the left audio channel.

R1/R2/R To listen to the right audio channel.

- SVCD can have 4 audio channels. Karaoke SVCD usually uses these 4 channels to record two 2-channel recordings (ST1/ST2).

Selecting the Subtitle Language


For DVD Video: While playing back a chapter containing subtitles in different languages, you can select the subtitle language to display on the TV screen.

For SVCD: While playing, you can select the subtitles even if no subtitles are recorded on the disc.


- You can also select the subtitle language using the on-screen bar (see page 27).

While playing a DVD Video...


1 Display the subtitle selection window.

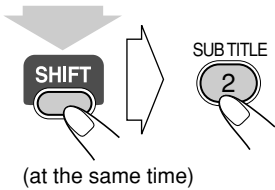



2 Select the subtitle language.

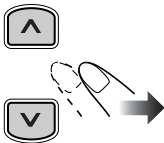

Ex.:

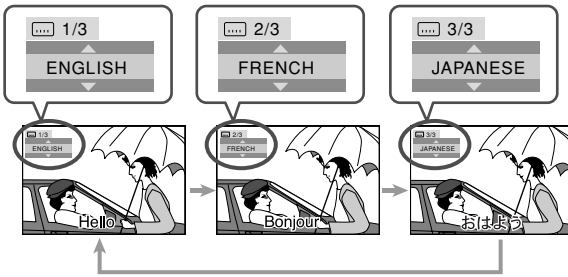

While playing an SVCD...

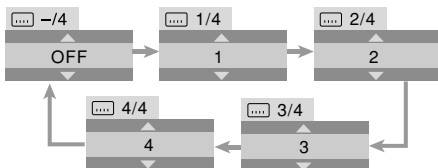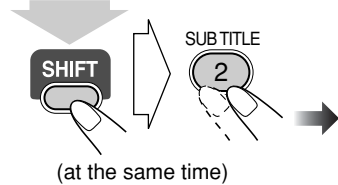


Selecting the View Angle

While playing back a chapter (of DVD Video) containing multi-view angles, you can view the same scene from different angles.


- You can also select the multi-view angles using the on-screen bar (see page 27).

While playing...

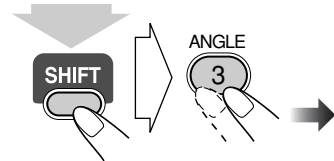

(at the same time)

Ex.:

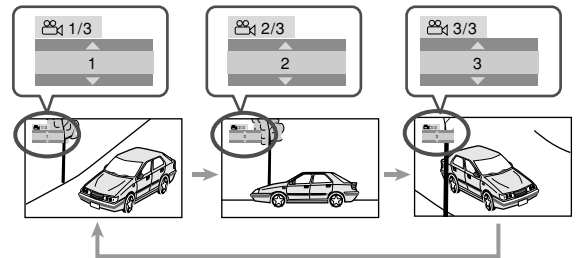

Playing Back a Bonus Group


Some DVD Audios have a special group called “bonus group” whose contents are not open to the public.

- To play back a bonus group, you have to enter the specific “key number” (a kind of password) for the bonus group. The way of getting the key number depends on the disc.

1 Select the bonus group.

- The bonus group is usually recorded as the last group (for example, if a disc contains 4 groups including a bonus group, “group 4” is the bonus group).
- For how to select the group, see “To select a title/group” on page 14.

2 Enter the key number.

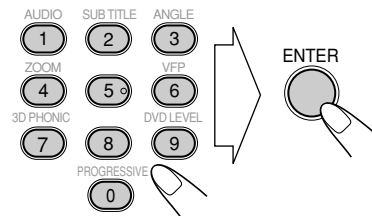


3 Follow the interactive instructions shown on the TV screen.

To cancel the key number entry, press ■.



Selecting Browseable Still Pictures

While playing back a track (of DVD Audio) linked to browsable still pictures (BSP), you can select the still picture (turn the page) to be shown on the TV screen.

- If a track is linked to browsable still pictures (BSP), they are usually shown in turn automatically during playback.
- You can also select the page using the on-screen bar (see page 27).

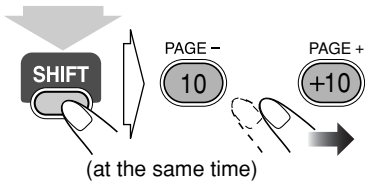

2 Select slow motion speed.

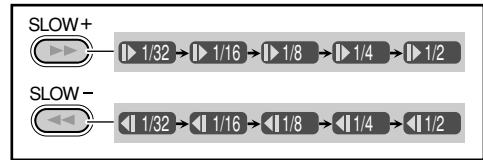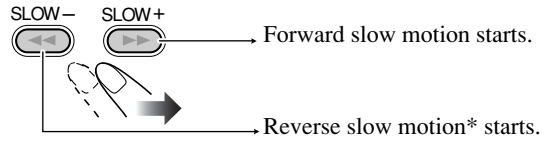



*Not available for SVCD/VCD.

To resume normal playback, press DVD/CD ►.


Special Effect Playback

Still picture playback

To start still picture playback:	To resume normal playback:
While playing... 	



To replay the previous scenes (One touch replay function)

 - This function is only used while playing DVD Video.




Zoom

1 While playing back...

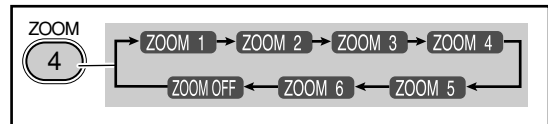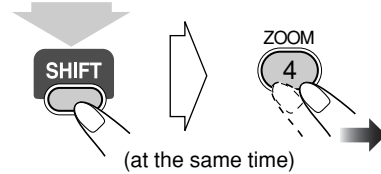

As the number increases, magnification also increases.


2 Move the zoomed-in position.

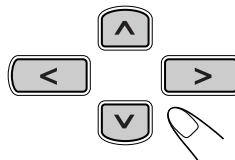

To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

Frame-by-frame playback

 1 While playing...




2 Advance the still picture frame by frame.



To resume normal playback, press DVD/CD ►.


Slow-motion playback

 1 While playing...




Advanced Disc Operations

Remote control

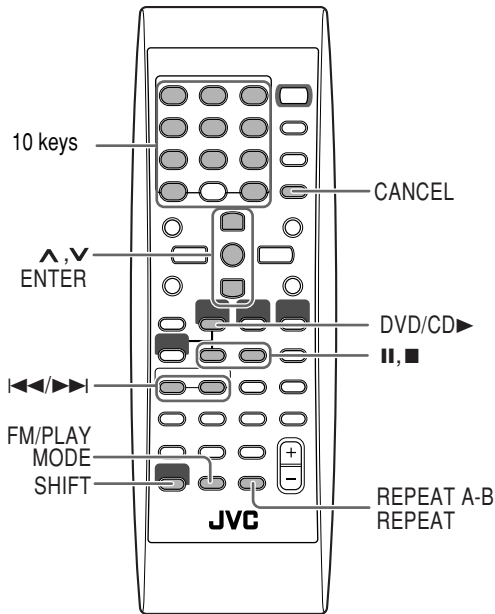

Main unit

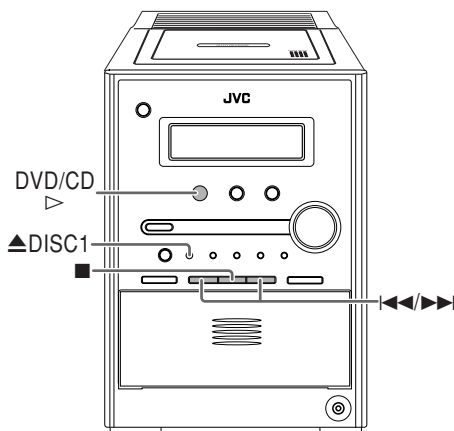


Programming the Playing Order


Program Play

You can arrange the playing order of the chapters or tracks (up to 99) before you start playback.

1 Before starting playback, activate Program Play.

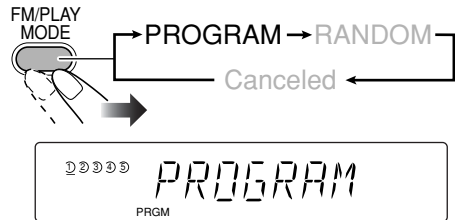

On the display

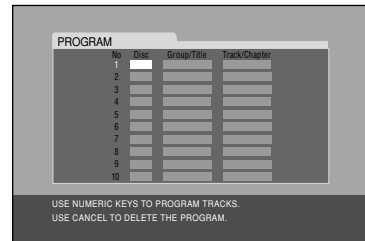

On the TV screen

2 Select chapters or tracks you want for Program Play.

• For DVD/MP3/WMA:

- ① Select a disc number.
- ② Select a title or group number.
- ③ Select a chapter or track number.


• For SVCD/VCD/CD:

- ① Select a disc number.
- ② Select tracks.

• If the disc is not in current tray, the System may prompt for the group/title number entry as well, however, during playback, the System will ignore these entries.

• You can use ENTER button to skip the group/title number entry.

To enter the numbers:

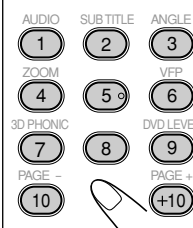

Examples:

To enter number 5, press 5.
To enter number 15, press +10, then 5.
To enter number 30, press +10, +10, then 10.

3 Repeat the above step 2.

4 Start playback.




Playback starts in the order you have programmed.

To skip a step:	To pause:	To stop:
	<p>To release, press DVD/CD ►.</p>	

To check the programmed contents

Before or after playback...

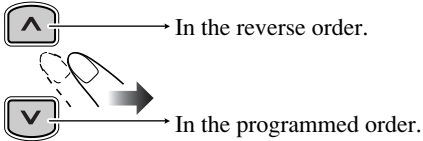


To modify the program

Before or after playback...

To erase the last step:	To erase the entire program:
To add steps in the program: Repeat steps 2 and 3 on page 24.	

To exit from Program Play

Before or after playback...

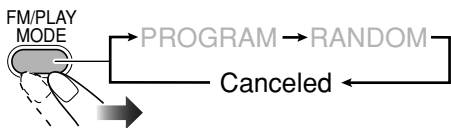


Playing at Random—Random Play

You can play the chapters or tracks of all loaded discs at random.

- Random Play cannot be used for some DVDs.

1 Before starting playback, activate Random Play.

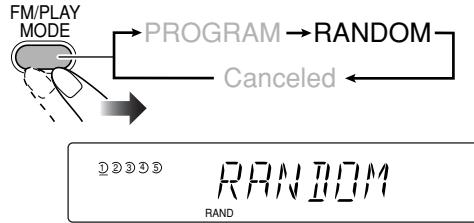

2 Start playback.




Playback starts in random order. Random Play ends when all the tracks are played once (when Repeat Play is not activated).

To skip a chapter/track:	To pause:	To stop:
<p>To skip to the beginning of the current track, press ◀◀.</p>	<p>To release, press DVD/CD ►.</p>	

- During Random Play, you cannot select disc by using DISC SELECT button.

To exit from Random Play

Before or after playback...

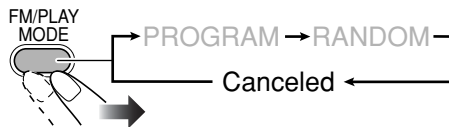

Playing Repeatedly



 
You can also select the repeat mode using the on-screen bar (see page 28).

Repeat Play


You can repeat playback.

• For DVD Video:

While playing...




Before starting playback...

 


• For DVD Audio:

 While playing or before playback...




• For MP3/WMA:

 While playing or before playback...




• For CD/SVCD/VCD:

 While playing (without PBC for SVCD/VCD) or before playback...




 While playing (with PBC for SVCD/VCD) ...




• For Program Play:

 While playing or before playback...



• For Random Play:

 While playing or before playback...




ALL	Repeats all discs in all tray or all programmed tracks.
1	Repeats the current chapter/track.
GR.	Repeats the current title/group.
1DISC	Repeats the current disc.
Canceled	Cancels Repeat Play mode.

A-B Repeat

You can repeat playback of a desired portion by specifying the beginning (point A) and the ending (point B).


- A-B Repeat cannot be used for MP3/WMA and for some DVDs.
- A-B Repeat can be used within the same title while playing a DVD Video, and within the same track for the other discs.

1 While playing (without PBC for SVCD/VCD), select the start point (A).

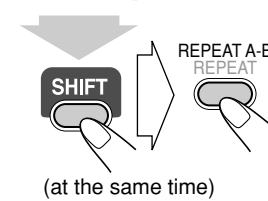

- A- lights on the display.
- appears on the TV screen if the TV is turned on.

2 Select the end point (B).

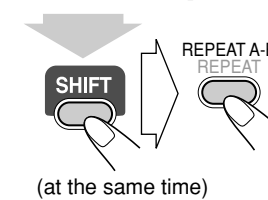

- A- changes to A-B.
- appears on the TV screen.
- You can search for the end point using the button.

To cancel A-B Repeat, press REPEAT A-B again while holding SHIFT.


Prohibiting Disc Ejection—Child Lock



You can lock the disc trays so that no one can eject the loaded disc.

- This is possible while the System is on standby.


While the disc trays are closed...

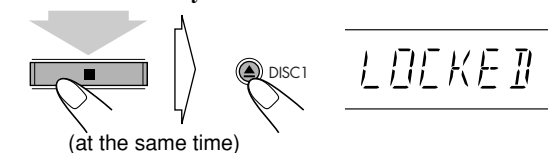

To cancel the prohibition, repeat the same procedure. "UNLOCKED" appears on the display.


On-Screen Disc Operations

Remote control

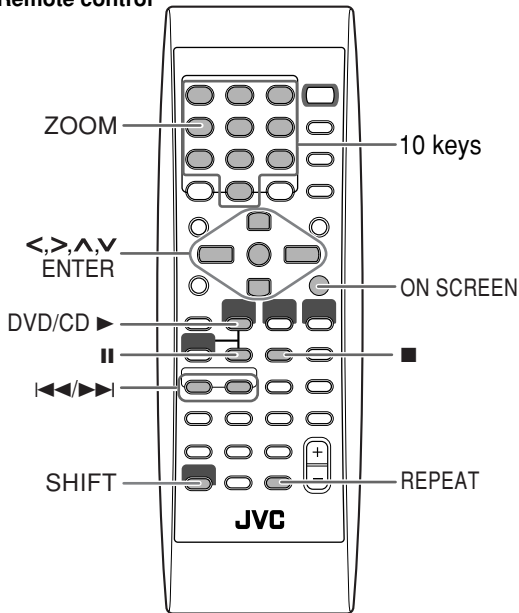


On-screen bars

 DVD Video




DVD Audio

 

SVCD



 VCD



CD



On-screen Bar Information

You can check the disc information (except for MP3/WMA/JPEG disc) and use some functions through the on-screen bar.

1 Disc type

2 Playback information

Indication	Meanings
Mbps	Current transfer rate (Megabits per second)
DISC 2	Current disc
TITLE 2	Current title
CHAP 3	Current chapter
GROUP 1	Current group
TRACK 14	Current track
TOTAL 1:25:58	Time indications

3 Operation modes

Indication	Meanings
▶	Playback
▶/◀	Forward/Reverse search
▶/◀	Forward/Reverse slow-motion
⏸	Pause
■	Stop


4 Function icons (on the pull-down menu)

Indication	Meanings
TIME	Select to change the time indication.
↺ OFF	Select to repeat playback.
⌚ →	Select for time search.
CHAP. →	Select for chapter search.
TRACK →	Select for track search.
🗣 1/3	Select to change the audio language or channel (see also page 21).
📄 1/3	Select to change subtitle language (see also page 22).
👁 1/3	Select to change the view angle (see also page 22).
PAGE 1/5	Select to change the page (see also page 23).


Operations Using the On-screen Bar

Ex.: Selecting a subtitle (French) for DVD Video:
While a disc is selected as the source...

1 Display the on-screen bar with the pull-down menu.

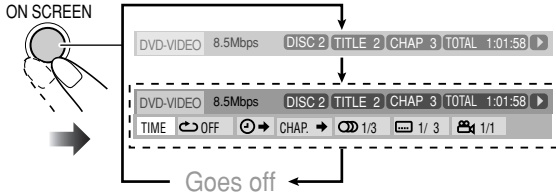


2 Select (highlight) the item you want.

 


3 Display the pop-up window.



4 Select the desired option in the pop-up window.

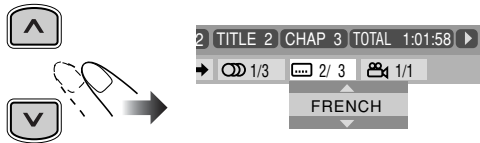

5 Finish the setting.

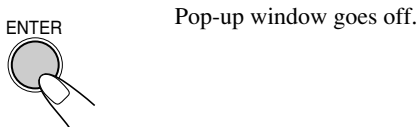

To erase the on-screen bar



For detailed operations of the following functions, see also "Operations Using the On-screen Bar" on the left.

Changing the time information


You can change the time information in the on-screen bar and the display window on the main unit.

1 Display the on-screen bar with the pull-down menu.



2 Make sure [TIME] is selected (highlighted).

3 Change the time indication.

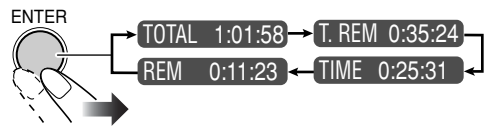

TOTAL	Elapsed disc time.
T. REM	Remaining disc time.
TIME	Elapsed playing time of the current chapter/track.
REM	Remaining time of the current chapter/track.

To erase the on-screen bar



Repeat Play

• See also page 26.

1 While playing a disc (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.

2 Select [OFF].

3 Display the pop-up window.



4 Select the repeat mode you want.

ALL	Repeats all discs or all programmed track.
A-B	Repeats a desired portion (see next column).
TITLE	Repeats the current title.
GROUP	Repeats the current group.
DISC	Repeats the disc (except for DVD).
CHAPTER	Repeats the current chapter.
TRACK*	Repeats the current track.
OFF	Cancels Repeat Play.

*During Program Play and Random Play, “STEP” appears.

5 Finish the setting.



A-B Repeat

• See also page 26.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **OFF**.
- 3 Display the pop-up window.



4 Select “A-B”.



5 Select the start point (A).



6 Select the end point (B).



A-B Repeat starts. The selected portion plays repeatedly.

- Before pressing ENTER, you can search for the end point using **▶▶**.

Time Search


You can move to a particular point by specifying the elapsed playing time from the beginning.

- 1 While playing (without PBC for SVCD/VCD), display the on-screen bar with the pull-down menu.
 - Except for DVD: Time Search can be used before starting playback.
- 2 Select **CHAP. →**.
- 3 Display the pop-up window.



4 Enter the time.

You can specify the time in hours/minutes/seconds.

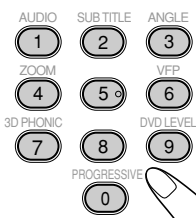

Examples:

To move to a point of 1 (hours): 02 (minutes): 00 (seconds), press 1, 0, 2, 0, then 0.

To move to a point of 54 (minutes): 00 (seconds), press 0, 5, 4, 0, then 0.

- It is always required to enter the hour digit (even “0” hour), but it is not required to enter trailing zeros (the last two digits in the examples above).
- To correct a misentry, press cursor **<** to erase the last entry.

5 Finish the setting.



The System starts playing the disc from the selected playing time.


Chapter/Track Search

You can search for the chapter (DVD Video) or track (DVD Audio) number to play.

- 1 While playing, display the on-screen bar with the pull-down menu.
- 2 Select **CHAP. →** or **TRACK →**.
- 3 Display the pop-up window.



4 Enter the desired chapter/track number.

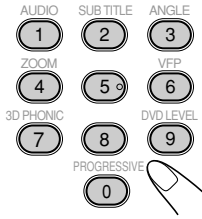

Examples:

To select chapter/track 5, press 5.

To select chapter/track 15, press 1, then 5.

To select chapter/track 30, press 3, then 0.

- To correct a misentry, press the 10 keys until the desired number shown in the pop-up window.

5 Finish the setting.

ENTER



The System starts playing the searched chapter or track.

Operations on the CONTROL Screen

The CONTROL screen automatically appears on the TV screen when you load an MP3, WMA, or JPEG disc. You can search for and play the desired tracks through the CONTROL screen.

- If both types of files (MP3/WMA files and JPEG files) are recorded on a disc, select the file type to play (see page 39).


CONTROL screen

Ex.: When the MP3 disc is loaded.


①	Group : (2 / 3)	Track : (5 / 14 (Total 41))	⑥
②	Blue	Cloudy.mp3	⑦
③	Red	Fair.mp3	⑧
④	Green	Fog.mp3	⑨
		Hail.mp3	
		Indian summer.mp3	
④	Track Information	Rain.mp3	⑩
	Title	Shower.mp3	⑪
	Rain	Snow.mp3	
	Artist	Thunder.mp3	
⑤	Album	Typhoon.mp3	
		Wind.mp3	
		Winter sky.mp3	

- ① Current group number/total group number
- ② Current group
- ③ Group list
- ④ Current track (in blue)
- ⑤ Track information (ID3 Tag Version 1.0: only for MP3/WMA)
- ⑥ Repeat Play setting
- ⑦ Elapsed playing time of the current track (only for MP3/WMA)
- ⑧ Operation mode icon
- ⑨ Current track number/total number of tracks in the current group (total number of tracks on the loaded disc)
- ⑩ Highlight (green) bar
- ⑪ Track list

To move the highlight bar between group list and track list

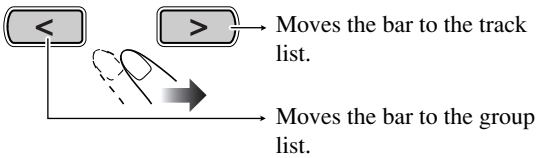

To select a group/track in the list

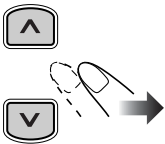

Move the highlight bar to a desired item.
 • If you move the highlight bar while playing back an MP3/WMA disc, the selected track starts playback automatically.

To start playback


For MP3/WMA:	
	Playback starts with the selected track. • Pressing DVD/CD ► also starts playback.
For JPEG:	
	The selected track (still picture) is displayed until you change it.
	Slide-show playback starts. Each track (still picture) is shown on the screen for few seconds, then changes one after another.

- Once you start playing back a JPEG track, the CONTROL screen goes off.
- To cancel slide-show, and display the current still picture, press ENTER.

To skip a track:	To pause:	To stop playback:
	<p>To release, press DVD/CD ►.</p>	

To repeat slide-show for JPEG

While playing or before starting playback...

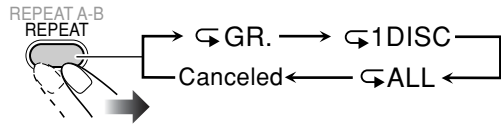


	Repeats the current group.
	Repeats the current disc.
	Repeats all disc.

- For Repeat Play of MP3/WMA, see page 26.



To zoom in the still picture

- You cannot zoom in the still picture during slide-show.

 1 While playing...




2 Change the magnification.

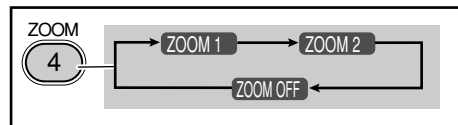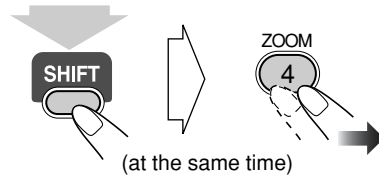

As the number increases, magnification also increases.


3 Move the zoomed-in position.

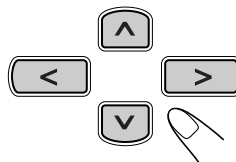


To resume normal playback, press ZOOM repeatedly until "ZOOM OFF" appears on the TV screen.

Advanced Tape Operations

Remote control

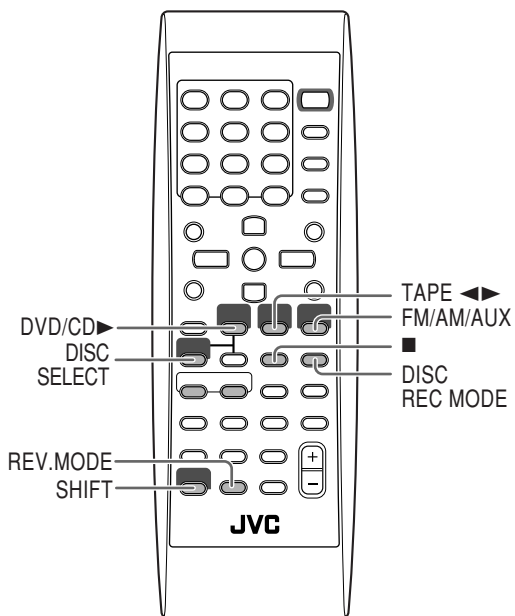

Main unit

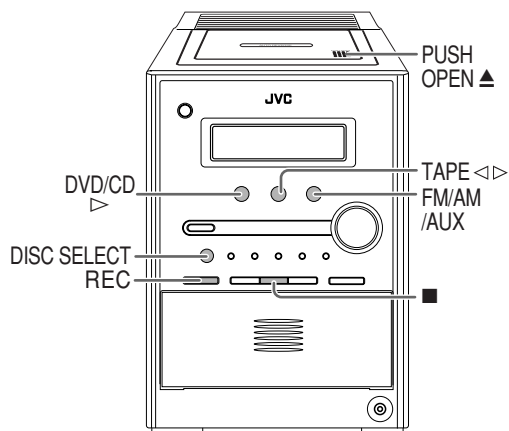

IMPORTANT


It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.

Recording on a Tape

You can use type I tapes for recording.


- To play a tape, see page 16.

1 Insert a recordable cassette.

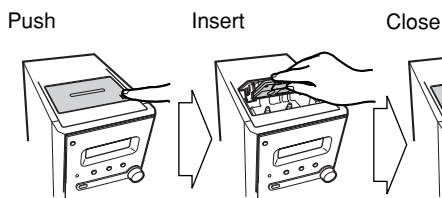


With the tape side facing outside


2 Check the tape running direction and Reverse mode settings on the display.

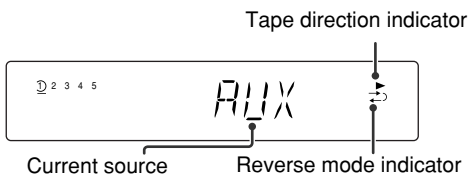

To change the direction

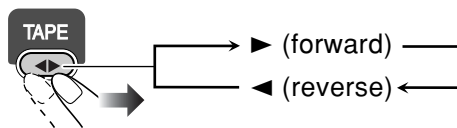

To change the Reverse mode if necessary

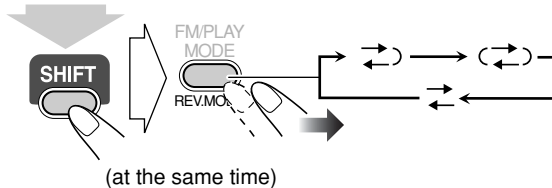

↻	To record on both sides.
((↻))	• When using Reverse mode, start recording in the forward (▶) direction.
↔	To record on only one side.


3 Select and start playing the source—“FM,” “AM,” “DVD/CD,” or “AUX.”

- When recording a disc, you can also use “Synchronized Disc Recording” (see below).

4 Start recording.



On the main unit

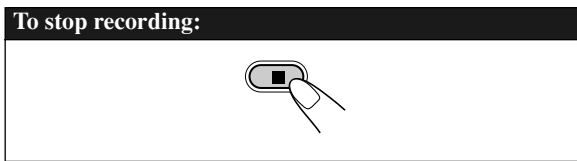

- While recording a disc, recording stops automatically after the disc player plays back the disc.

Synchronized Disc Recording

You can start and stop both disc play and tape recording at the same time.


1 Load a disc and insert a recordable cassette.

- If the current playing source is not the disc player, press DVD/CD ►, then ■.


2 Check the tape running direction and Reverse mode settings on the display.

- See step 2 of “Recording on a Tape” on page 32.

3 Select the disc number you want to start recording from.

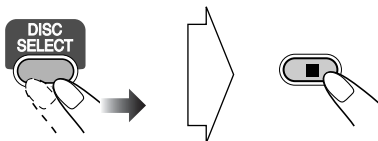


4 Select the Recording mode.

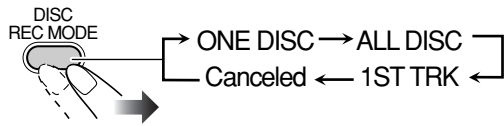

ONE DISC	Records the entire disc.
ALL DISC	Records the all loaded discs continuously (except for DVD Video/DVD Audio).
1ST TRK	Records the first track of each disc (only for SVCD/VCD/CD).

 5 Start recording when the recording mode selected in step 4 is still shown on the display.



On the main unit

The System automatically creates 4-second blanks between the tunes recorded on the tapes.

- If the loaded disc is not compatible for the current recording mode, the disc player skips the disc and loads the next one.
- When either disc play or recording ends, both disc player and the cassette deck stop at the same time.

To record a “Live” disc

It will not be desirable to put 4-second blank portions between the tunes recorded on the tape.

To record the entire disc without any interruption recorded, pause the disc play (press ■ on the remote control) before pressing REC.

To record Program Play or Random Play

1 Select Program Play (and make a program) or Random Play, but do not start playback.

2 Press REC to start recording.

- When disc play stops, recording continues. It is required that recording be stopped manually.

To record only your favorite track

 
You can specify tracks to be recorded on the tape while listening to a disc.

- This function is not available for DVD Video.

1 Start playing a disc.



2 While a track you want to record on the tape is playing...



On the main unit

The disc player returns to the beginning of that track and the track is recorded on the tape. After recording the track, the disc player and cassette deck automatically stop.

3 Repeat steps 2 and 3 to record other tracks you want.

- You can exchange the discs if necessary.

 
To protect your recording

Cassettes have two small tabs on the back to protect from unexpected erasure or re-recording.

To protect your recording, remove these tabs.




To re-record on a protected tape, cover the holes with adhesive tape.



Timer Operations

Remote control

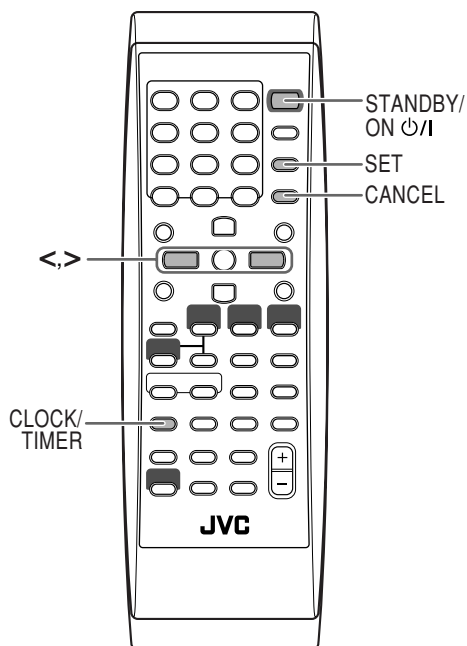

Setting the Timer



 

Using Daily Timer, you can wake up with your favorite music. On the other hand, with Recording Timer, you can make a tape of a radio broadcast automatically.

- You can store three Daily Timer settings and one Recording Timer setting; however, you can activate only one of Daily Timers or Recording Timer at the same time.
- To exit from the timer setting, press CLOCK/TIMER as required.
- To correct a misentry during the process, press CANCEL. You can return to the previous step.

Timer initial settings when shipped from the factory:

- DAILY 1: ON Time (6:00)/OFF Time (8:00)/ Source (TUNER FM 1)/Volume level (--)
- DAILY 2: ON Time (12:00)/OFF Time (14:00)/ Source (TUNER FM 1)/Volume level (--)
- DAILY 3: ON Time (18:00)/OFF Time (20:00)/ Source (TUNER FM 1)/Volume level (--)
- REC TMR: ON Time (8:00)/OFF Time (10:00)/ Source (TUNER FM 1)

- 1** Select one of the timer setting modes you want to set—Daily 1 ON time, Daily 2 ON time, Daily 3 ON time, or Recording Timer ON time.

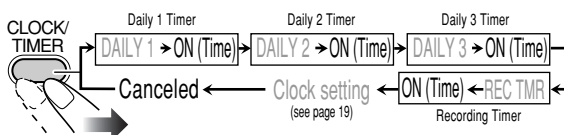


Ex. When Daily Timer 1 setting mode is selected

- When the clock has not been adjusted, pressing CLOCK/TIMER makes the System enter the clock setting mode.

- 2** Make the timer setting as you want.

Repeat the following operations until you finish setting in the following order—

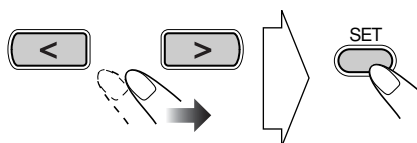

- ① Set the hour then minute for on-time.
- ② Set the hour then minute for off-time.

- ③ For Daily Timers: Select the playback source—“TUNER FM,” “TUNER AM,” “TAPE,” “DISC” or “AUX.”



For Recording Timer: Select the playback source—“TUNER FM,” “TUNER AM” or “AUX.”

- ④ For “TUNER FM” and “TUNER AM”: Select a preset channel.

For “DISC”: Select the disc number, group/title number, then the track/chapter number.

- ⑤ For Daily Timers: Select the volume level.


- You can select the volume level (“VOL 1” to “VOL 50” and “VOL --”). If you select “VOL --,” the volume is set to the last level when the unit has been turned off.

For Recording Timer: The volume level is set automatically to the last level when the unit has been turned off.

Once settings are complete, the Timer setting information appears in sequence.

- 3 Turn off the unit (on standby) if you have set the timer with the System turned on.

STANDBY/ON

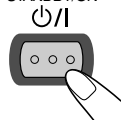

How Daily Timer actually works

Once the Daily Timer has been set, the timer (⏰) indicator and timer number indicator (1/2/3) are lit on the display. Daily Timer is activated at the same time everyday until the timer is turned off manually (see the next column) or another timer is activated.

When the on-time comes

The System turns on, tunes in to the specified station or start playing the loaded disc with the specified chapter or track, and sets the volume level to the preset level.

- While Daily Timer is working, the timer (⏰) indicator and timer number indicator (1/2/3) flash on the display.

When the off-time comes

The System stops playback, and turns off (stands by) automatically.

- The timer setting remains in memory until you change it.

How Recording Timer actually works

When Recording Timer has been set, Timer (⏰) indicator and the REC indicator are lit on the display. Recording Timer works only once.

When the on-time comes

The System turns on, tunes in to the specified station, sets the volume level to last level when the unit has been turned off, and starts recording.

When the off-time comes

 

The System stops recording, and turns off (stands by).

- The timer setting remains in memory until you change it.

To turn off the Timer after its setting is done

Since Daily Timer is activated at the same time everyday, you may need to cancel it on some particular days.

- 1 Select the Timer you want to cancel.

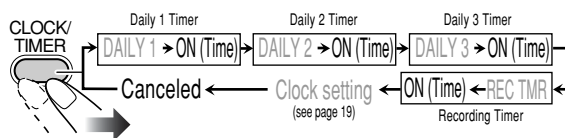



Ex.To cancel Daily Timer 1

- 2 Turn off the selected Timer.



To turn on the Timer

 - 1 Select the Timer (DAILY 1, DAILY 2, DAILY 3, or REC TMR) you want to activate.

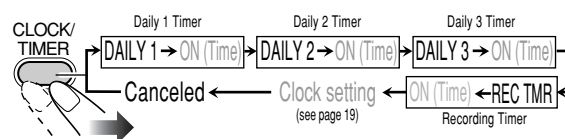


Ex.When Daily Timer 1 is selected

- 2 Activate the selected Timer.



Setup Menu Operations


Remote control

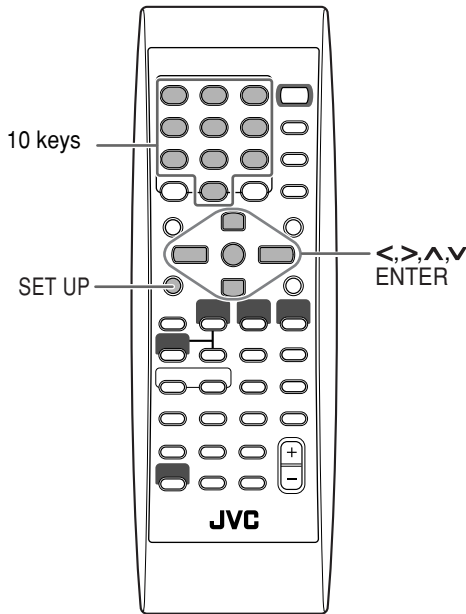

Setup Menu Icons

The icon for the selected Setup Menu will be highlighted.

Ex.: LANGUAGE Setup Menu is selected.

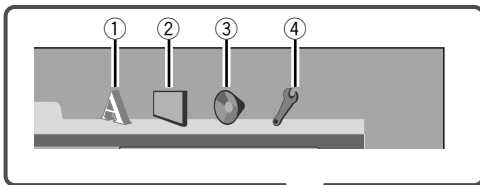

- ① LANGUAGE Setup Menu
- ② PICTURE Setup Menu
- ③ AUDIO Setup Menu
- ④ OTHERS Setup Menu

Operating Procedure




You can use the Setup Menus only when a disc is selected as the source and its playback is not yet started.



Ex.: Selecting "STILL PICTURE" for "FILE TYPE":

1 Display the Setup Menu.



SET UP

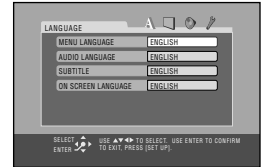

2 Select one of the Setup Menus.

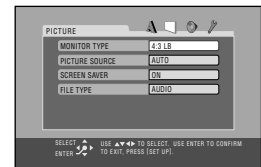 


3 Select the item you want to adjust.

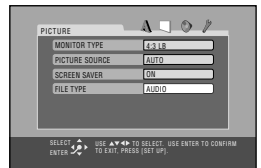
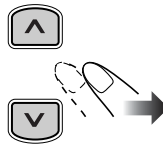


4 Display the pop-up window.

ENTER

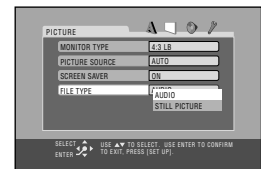

5 Select the desired option in the pop-up window.

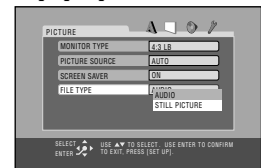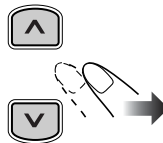

6 Finish the setting.




- 7 Repeat steps 3 to 4 to set other items on the same Setup Menu.
Repeat steps 2 to 4 to set other items on another Setup Menu.

To erase the Setup Menu



■ LANGUAGE Setup Menu

You can select the initial languages for disc playback. You can also select the language shown on the TV screen while operating this System.

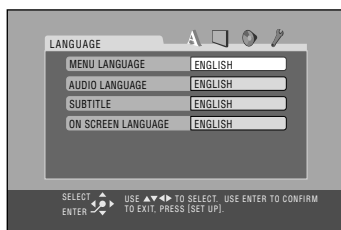

MENU LANGUAGE

Some discs have multiple menu languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47).

AUDIO LANGUAGE

Some discs have multiple audio languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47).

SUBTITLE


Some discs have multiple subtitle languages. Select from—ENGLISH, SPANISH, FRENCH, CHINESE, GERMAN, ITALIAN, JAPANESE, AA – ZU (see “Language Code List” on page 47) or “OFF (no subtitle).”

ON SCREEN LANGUAGE

Select one of the languages shown on the TV from—ENGLISH, SPANISH, and FRENCH.

■ PICTURE Setup Menu

You can select the desired options concerning a picture or monitor screen.

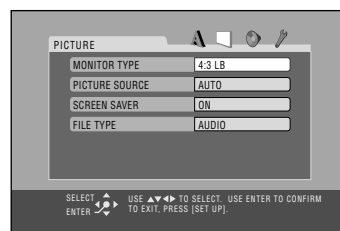

MONITOR TYPE

You can select the monitor type of your TV when you play DVD Video recorded with aspect ratio of 16:9.

Select one of the following:

16:9 (Wide television conversion):

 
Select when the aspect ratio of your TV is 16:9 and when the TV has the screen size adjustment function.

4:3 LB (Letter Box):

Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars appear on the top and the bottom of the screen.

4:3 PS (Pan Scan):


Select when the aspect ratio of your TV is 4:3. While viewing a wide screen picture, the black bars do not appear; however, the left and right edges of the pictures will not be shown on the screen.



Ex.: 16:9



 Ex.: 4:3 LB



Ex: 4:3 PS

PICTURE SOURCE

You can obtain optimal picture quality by selecting an appropriate option—picture source type (either video source or film source).

Select one of the following:

AUTO: Normally select this.
When playing back a disc containing both video and film sources, the System automatically changes the processing to match it to the picture type (film or video source) of the current chapter.

FILM: To play a film source disc.

VIDEO: To play a video source disc.

SCREEN SAVER

You can activate or deactivate screen saver while operating the built-in disc player.

Select one of the following:

ON: The picture on the TV becomes dark when no operation is done for about 5 minutes.

OFF: To cancel the screen saver.

FILE TYPE

If both audio tracks (MP3 or WMA files) and still picture (JPEG files) are recorded on a disc, you can select which to play.

Select one of the following:

AUDIO: To play MP3/WMA files.

STILL PICTURE: To play JPEG files.

■ AUDIO Setup Menu

You can adjust the sound settings of the System.



DIGITAL AUDIO OUTPUT

When using the digital output terminal on the rear, set this correctly according to the connected component.

Select one of the following:

PCM ONLY: To connect to a linear PCM digital equipment.

DOLBY DIGITAL /PCM: To connect to a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder.

STREAM/PCM: To connect to a DTS decoder or an amplifier with a built-in DTS decoder.

• See also “DVD OPTICAL DIGITAL OUT Signals” on page 49.

DOWN MIX

When using the digital output on the rear, set this correctly according to the connected component.

When playing a multi-channel DVD, the System converts the signals into 2 channels properly.

Select one of the following:

DOLBY SURROUND: To connect an amplifier with the Dolby Pro Logic decoder.

STEREO: To connect a conventional stereo amplifier, receiver, MD player, TV, etc.

D. RANGE COMPRESSION

You can compress the dynamic range (the difference between the loudest sound and the softest sound) to enjoy a powerful sound even at a low volume level when listening to Dolby Digital software. This is useful at night.

- The effectiveness varies depends on a software.


Select one of the following:

AUTO: To apply the compression effect to the downmixed multi-channel sound.

ON: To always apply the compression effect for all Dolby Digital software. Loud sound will become low and vice versa.

■ OTHERS Setup Menu

You can change some other convenient functions.

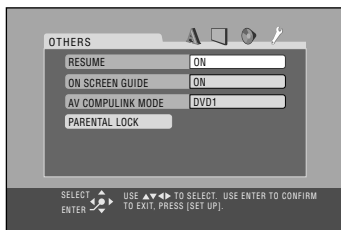

RESUME

You can activate or deactivate Resume for disc playback (see page 14).

Select one of the following:

ON: To activate Resume.

OFF: To cancel Resume.

ON SCREEN GUIDE

You can activate or deactivate the on-screen guide icons (see page 14).

- When recording the picture on a VCR, select “OFF” to avoid recording the guide icons on your video tape.

Select one of the following:

ON: To activate the on-screen guide icons.

OFF: To cancel the on-screen guide icons.

AV COMPULINK MODE

When connecting the System to a JVC's TV with the AV COMPU LINK remote control system, select the proper setting.

Select one of the following:

DVD1: To connect to the VIDEO-3 Input jack on the TV.

DVD2: To connect to the VIDEO-1 Input jack on the TV.

DVD3: To connect to the VIDEO-2 Input jack on the TV.

For details, see “To connect the AV COMPU LINK cords” on page 7.

PARENTAL LOCK

Select this to enter the PARENTAL LOCK submenu.

See the section that follows.

Restricting the Review


Parental Lock

You can restrict playback of DVD Video containing violent scenes and those unsuitable for your family members. Once you have set the rating level, such violent scenes (for which a higher level than you set is assigned) may be skipped or changed to another scene (depending on how the disc is programmed).



To set Parental Lock

Set the rating level—Level 1 (most restrictive) to Level 8 (least restrictive).



1 Display the Setup Menu.

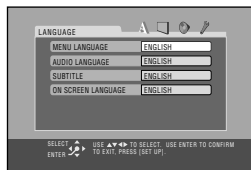

2 Select the OTHERS Setup Menus.

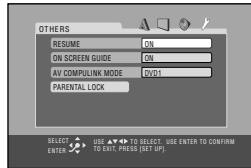 


3 Select "PARENTAL LOCK."

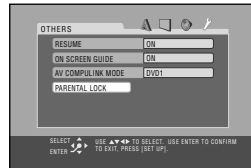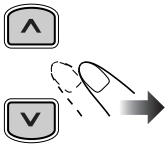

4 Enter the PARENTAL LOCK submenu.




5 Select "COUNTRY CODE," then display the pop-up window.

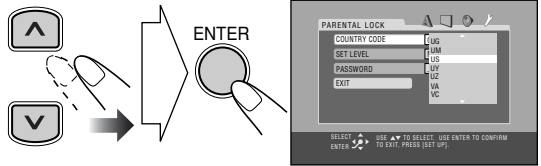


6 Select the country code of your area.


- See "Country/Area Codes List" on page 48 to find your country code.

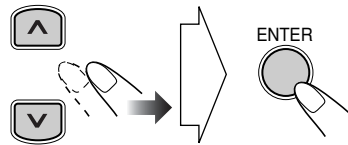

7 Make sure "SET LEVEL" is selected, then display the pop-up window.

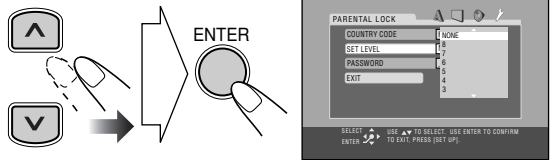


8 Set the rating level (NONE, 8 – 1).

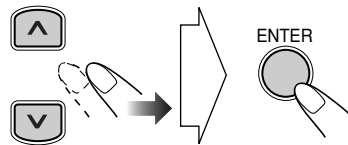

The System automatically enters "PASSWORD" entry mode.

9 Make sure "PASSWORD" is selected, then enter any 4-digit number for your password.

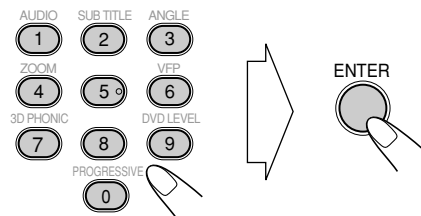

10 Finish the setting.



To change the setting

1 Display the PARENTAL LOCK sub menu.


- Follow steps **1** to **4** of “To set Parental Lock”.



“PASSWORD” is automatically selected.

- You cannot select any item other than “EXIT” until you enter the correct password.

2 Enter your password.

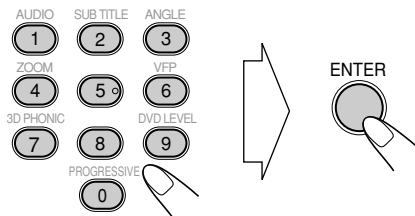


- If you enter a wrong password, “-----” appears again.
- If you enter a wrong password three times, “EXIT” is automatically selected. In this case, press ENTER to exit from the PARENTAL LOCK sub menu.
- If you forget your password, enter “8888.”

3 Change the settings.

- Follow steps **5** to **8** of “To set Parental Lock”.


4 Enter your password again.

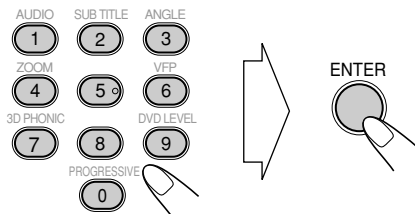


- If you want to change a password, enter a new four digit number in this step.

To release Parental Lock temporarily

When you set a strict rating level, some discs may not be played back at all. When you try to play such a disc, the following screen appears on the TV.

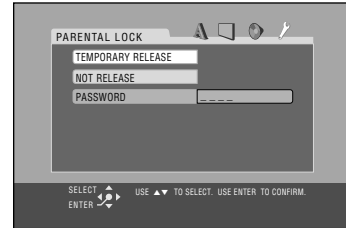


1 Select “TEMPORARY RELEASE,” then press ENTER.

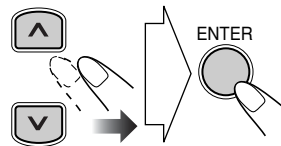

“PASSWORD” is automatically selected.

- If you do not play back such a disc, select “NOT RELEASE,” then press ENTER. Then eject the disc.

2 Enter your password.

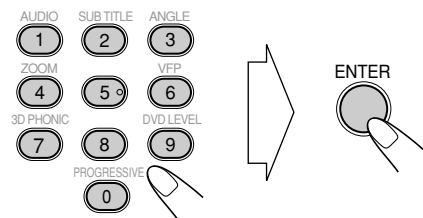

- If you enter a wrong password three times, “NOT RELEASE” is automatically selected. In this case, press ENTER. Then eject the disc.

Additional Information

Learning More about This System ● ● ●

Getting Started (see pages 3 to 7)

Changing the Scanning Mode:

- To enjoy the progressive video picture, connect a TV with the progressive video input using component video cord.

Daily Operations—Playback (see pages 12 to 16)

Listening to the Radio:

- If you store a new station into an occupied preset number, the previously stored station in that number will be erased.
- When you unplug the AC power cord or if a power failure occurs, the preset stations will be erased in a few days. If this happens, preset the stations again.

Playing Back a Disc:

- When using an 8 cm disc, place it on the inner circle of the disc tray.
- On some DVD, SVCD, or VCD discs, the actual operations may be different from what is explained in this manual, due to the programming and disc structure; such differences are not a malfunction of this System.
- When discs* in more than one tray are loaded on the disc trays, they are played in sequence as follows:
Ex.: When DISC 2 is selected:

DISC 2⇒DISC 3⇒DISC 4⇒DISC 5⇒DISC 1
(then stops)

- * When no disc is loaded on the tray, that disc number is skipped.
- You can exchange discs while playing or selecting another disc.
- Some DVD Audio discs prohibit downmixed output. When you play back such a disc, “LR ONLY” appears on the display and the System plays back the left front and right front signals.
- 3D Phonic setting is also applied to the optical digital output signals through the DVD OPTICAL DIGITAL OUT terminal.
- When using Resume on SVCD or VCD with PBC, the playback might start on a position slightly different from where you have stopped.
- You can use Resume only for the DVD/SVCD/VCD except for some discs—depending how the disc is programmed.
- Resume function does not work during Program Play and Random Play.

- For MP3/WMA/JPEG playback...
 - This System cannot play “packet write” discs.
 - MP3/WMA/JPEG discs are required a longer readout time than regular CDs. (It depends on the complexity of the group/file configuration.)
 - Some MP3/WMA/JPEG files cannot be played back and will be skipped. This result from their recording processes and conditions.
 - When making MP3/WMA discs, use ISO 9660 Level 1 or Level 2 for the disc format.
 - This System can play back MP3/WMA/JPEG files with the extension code <.mp3>, <.wma> or <.jpg> (regardless of the letter case—upper/lower).
 - It is recommended that you make each MP3 file at a sampling rate of 44.1 kHz and at bit rate of 128 kbps. This System cannot play back files made at bit rate of less than 64 kbps.
 - This System can recognize the total of 1000 tracks and of 99 groups (each group can contain up to 150 tracks). Those exceeding the maximum number cannot be recognized.

Daily Operations—Sound&Other Adjustments (see pages 17 to 20)

Adjusting the Volume:

- Be sure to turn down the volume before connecting or putting the headphones.

Adjusting the Sound:

- This function also affects the sound through the headphones.

Setting the Clock:

- “0:00” will flash on the display until you set the clock.
- The clock may gain or lose 1 to 2 minutes per month. If this happens, reset the clock.

Unique DVD/VCD Operations (see pages 21 to 23)

- During slow-motion playback, no sound will be reproduced.
- One touch replay function works only within the same title, though it works between chapters.
- One touch replay function does not work during Program Play and Random Play.
- While zoomed in, the picture may look coarse.

Advanced Disc Operations (see pages 24 to 26)

Programming the Playing Order—Program Play:

- If you try to program a 100th track, “MEM FULL (memory full)” appears on the display.
- While programming steps...
 - Your entry will be ignored if you have tried to program an item number that does not exist on the disc (for example, selecting track 14 on a disc that only has 12 tracks).
- You cannot use Program Play and Random Play for JPEG discs.
- You cannot eject tray while in Program Play.

Playing at Random—Random Play:

- The **◀◀** button does not work for skipping chapters or tracks, but only work for going back to the beginning of the current chapter or track.

On-Screen Disc Operations (see pages 27 to 31)

- For JPEG files playback...
 - It is recommended that you record a file at 640 x 480 resolution. (If a file has been recorded at a resolution of more than 640 x 480, it will take a long time to be shown.)
 - This System can play only baseline JPEG files. Progressive JPEG files or lossless JPEG files cannot be played.
 - Baseline JPEG format: Used for digital cameras, web, etc.
 - Progressive JPEG format: Used for web.
 - Lossless JPEG format: An old type and rarely used now.
 - This System may not play back JPEG files properly which are recorded by the devices other than digital still camera.
 - If progressive or lossless JPEG files are played back, a black screen appears. In this case, stop playback and select a baseline JPEG file. Note that it may take a long time to select another file.

Advanced Tape Operations (see pages 32 to 34)

Recording on a Tape:

- The recording level is automatically set correctly. Thus, you can adjust the sound you are actually listening to without affecting the recording level.
- There is leader tape which cannot be recorded onto at the start and end of cassette tapes. Thus, when recording CDs or radio broadcasts, wind the leader tape first to ensure that the recording will be made without any music part lost.
- If you start recording with no cassette inserted, “NO TAPE” appears on the display. If a protected tape has been inserted, “NO REC” appears.
- When using Reverse mode for recording, start recording in the forward (**▶**) direction first; otherwise, recording will stop when only one side (reverse) of the tape is recorded.
- You can also change Reverse mode setting (**↔**) and **↔** after starting recording.
- You cannot open or close the disc tray while recording a disc.

Synchronized Disc Recording:

- When the tape reaches its end in the forward direction (**▶**) during recording with Reverse mode set to **↔**, the last tune will be re-recorded at the beginning of the reverse side (except for DVD Video).

Timer Operations (see pages 35 and 36)

- When you unplug the AC power cord or if a power failure occurs, the timer will be canceled. You need to set the clock first, then the timer again.
- Without stopping the recording, you cannot change the source after Recording Timer start recording.
- If you set the Sleep Timer after Daily Timer starts playing the selected source, Daily Timer is canceled.
- If you set the Sleep Timer after Recording Timer starts recording, Recording Timer is canceled, but recording continues until Sleep Timer shuts off the power.

Setup Menu Operations (see pages 37 to 42)

LANGUAGE Setup Menu:

- When the language you have selected for “MENU LANGUAGE,” “AUDIO LANGUAGE,” or “SUBTITLE” is not recorded on a disc, the original language is used as the initial language.

PICTURE Setup Menu—MONITOR TYPE:

- Even if “4:3 PS” is selected, the screen size may become 4:3 letter box with some DVD Video discs. This depends on how the discs are recorded.
- When you select “16:9” for a picture whose aspect ratio is 4:3, the picture slightly changes due to the process for converting the picture width.

AUDIO Setup Menu—DOWN MIX:


- This setting is not effective when DTS multi-channel software is played back.

OTHERS Setup Menu—ON SCREEN GUIDE:

- Setup Menus and on-screen bar will be displayed (and recorded) even though this function is set to “OFF.” Subtitles and the information for zooming in always appear on the display regardless of this setting.

MP3/WMA/JPEG groups/tracks configuration

This System plays back the tracks as follows.

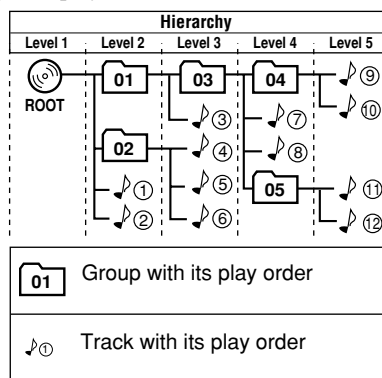

Maintenance

To get the best performance of the System, keep your discs and mechanism clean.

Handling discs

- When removing the disc from its case, hold it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.
- Be careful not to scratch the surface of the disc.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.

To clean the disc:

- Wipe the disc with a soft cloth in a straight line from center to edge.

Handling cassette tapes

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotate it.
 - If the tape is loose, it may get stretched, cut, or caught in the cassette.
- Be careful not to touch the tape surface.
- Avoid the following places to store the tape—in dusty places, in direct sunlight or heat, in moist areas, on a TV or speaker, or near a magnet.


To keep the best recording and playback sound quality:

- Use a cotton swab moistened with alcohol to clean the heads, capstans, and pinch rollers.
- Use a head demagnetizer (available at electronics and audio shops) to demagnetize the heads (when the System turned off).

Cleaning the System

- Stains should be wiped off with a soft cloth. If the System is heavily stained, wipe it with a cloth soaked in water-diluted neutral detergent and wrung well, then wipe clean with a dry cloth.
- Since the System may deteriorate in quality, become damaged or get its paint peeled off, be careful about the following:
 - DO NOT wipe it with a hard cloth.
 - DO NOT wipe it strongly.
 - DO NOT wipe it with thinner or benzine.
 - DO NOT apply any volatile substance such as insecticides to it.
- DO NOT allow any rubber or plastic to remain in contact for a long time.

To remove the speaker grilles

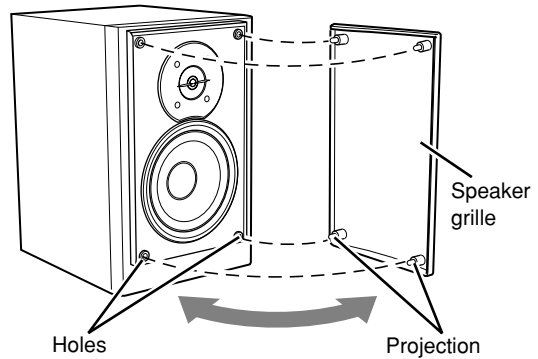

Troubleshooting ● ● ● ● ● ● ● ●

If you are having a problem with your System, check this list for a possible solution before calling for service.

General:

Adjustments or settings are suddenly canceled before you finish.

⇒ There is a time limit. Repeat the procedure again.

Operations are disabled.

⇒ The built-in microprocessor may malfunction due to external electrical interference. Unplug the AC power cord and then plug it back in.

Unable to operate the System from the remote control.

⇒ The path between the remote control and the remote sensor on the System is blocked.

⇒ The batteries are exhausted.

No sound is heard.

⇒ Speaker connections are incorrect or loose.

⇒ Headphones are connected.

No picture appears on the screen.

⇒ The video cord connections are incorrect or loose.

No picture is displayed on the TV screen, the picture is blurred, or the picture is divided into two parts.

⇒ The System is connected to a TV which does not support progressive scanning.

The left and right edges of the picture are missing on the screen.

⇒ Select “4:3 LB” for “MONITOR TYPE” (see page 38).

Radio Operations:

Hard to listen to broadcasts because of noise.

⇒ Antennas connections are incorrect or loose.

⇒ The AM loop antenna is too close to the System.

⇒ The FM antenna is not properly extended and positioned.

Disc Operations:

The disc does not play.

⇒ The disc is placed upside down. Place the disc with the label side up.

ID3 Tag on an MP3/WMA disc cannot be shown.

⇒ There are two types of ID3 Tag—Version 1 and Version 2. This System can only show ID3 Tag Version 1.

MP3/WMA/JPEG groups and tracks are not played back as you expect.

⇒ The playing order is determined when the disc was recorded. It depends on the writing application.

MP3/WMA or JPEG tracks are not played back.

⇒ The inserted disc may include both type of tracks (MP3/WMA files and JPEG files). In this case, you can only play back the files selected by the “FILE TYPE” setting (see page 39).

⇒ You have changed the “FILE TYPE” setting after you inserted a disc. In this case, reload the disc.

“NO AUDIO” appears.

⇒ This System cannot play back illegally produced DVD Audio discs.

“LR ONLY” appears.

⇒ Some DVD Audio discs prohibit downmixed output. When you play back such a disc, this System plays back the left front and right front signals only.

The disc sound is discontinuous.

⇒ The disc is scratched or dirty.

The disc tray does not open or close.

⇒ The AC power cord is not plugged in.

⇒ Child Lock is in use (see page 26).

Tape Operations:

The cassette holder cannot be opened.

⇒ Power supply from the AC power cord has been cut off while the tape was running. Turn on the System.

Recordings:

Impossible to record.

⇒ Small tabs on the back of the cassette are removed. Cover the holes with adhesive tape.

Timer Operations:

Daily Timer and Recording Timer do not work.

⇒ The System has been turned on when the on-time comes. Timer starts working only when the System is turned off.

Setup Menu Operations:

No subtitle appears on the display though you have selected the initial subtitle language.

⇒ Some DVDs are programmed to always display no subtitle initially. If this happens, press SUB TITLE (while holding SHIFT) after starting play (see page 22).

Audio language is different from the one you have selected as the initial audio language.

⇒ Some DVDs are programmed to always use the original language initially. If this happens, press AUDIO (while holding SHIFT) after starting play (see page 21).

Language Code List

AA	Afar
AB	Abkhazian
AF	Afrikaans
AM	Ameharic
AR	Arabic
AS	Assamese
AY	Aymara
AZ	Azerbaijani
BA	Bashkir
BE	Byelorussian
BG	Bulgarian
BH	Bihari
BI	Bislama
BN	Bengali, Bangla
BO	Tibetan
BR	Breton
CA	Catalan
CO	Corsican
CS	Czech
CY	Welsh
DA	Danish
DZ	Bhutani
EL	Greek
EO	Esperanto
ET	Estonian
EU	Basque
FA	Persian
FI	Finnish
FJ	Fiji
FO	Faroese
FY	Frisian
GA	Irish
GD	Scots Gaelic
GL	Galician
GN	Guarani
GU	Gujarati
HA	Hausa
HI	Hindi
HR	Croatian
HU	Hungarian
HY	Armenian
IA	Interlingua
IE	Interlingue
IK	Inupiak
IN	Indonesian
IS	Icelandic
IW	Hebrew
JI	Yiddish

JW	Javanese
KA	Georgian
KK	Kazakh
KL	Greenlandic
KM	Cambodian
KN	Kannada
KO	Korean (KOR)
KS	Kashmiri
KU	Kurdish
KY	Kirghiz
LA	Latin
LN	Lingala
LO	Laothian
LT	Lithuanian
LV	Latvian, Lettish
MG	Malagasy
MI	Maori
MK	Macedonian
ML	Malayalam
MN	Mongolian
MO	Moldavian
MR	Marathi
MS	Malay (MAY)
MT	Maltese
MY	Burmese
NA	Nauru
NE	Nepali
NL	Dutch
NO	Norwegian
OC	Occitan
OM	(Afan) Oromo
OR	Oriya
PA	Panjabi
PL	Polish
PS	Pashto, Pushto
PT	Portuguese
QU	Quechua
RM	Rhaeto-Romance
RN	Kirundi
RO	Rumanian
RU	Russian
RW	Kinyarwanda
SA	Sanskrit
SD	Sindhi
SG	Sangho
SH	Serbo-Croatian
SI	Singhalese
SK	Slovak

SL	Slovenian
SM	Samoaian
SN	Shona
SO	Somali
SQ	Albanian
SR	Serbian
SS	Siswati
ST	Sesotho
SU	Sundanese
SV	Swedish
SW	Swahili
TA	Tamil
TE	Telugu
TG	Tajik
TH	Thai
TI	Tigrinya
TK	Turkmen
TL	Tagalog
TN	Setswana
TO	Tonga
TR	Turkish
TS	Tsonga
TT	Tatar
TW	Twi
UK	Ukrainian
UR	Urdu
UZ	Uzbek
VI	Vietnamese
VO	Volapuk
WO	Wolof
XH	Xhosa
YO	Yoruba
ZU	Zulu

Country/Area Codes List

AD	Andorra
AE	United Arab Emirates
AF	Afghanistan
AG	Antigua and Barbuda
AI	Anguilla
AL	Albania
AM	Armenia
AN	Netherlands Antilles
AO	Angola
AQ	Antarctica
AR	Argentina
AS	American Samoa
AT	Austria
AU	Australia
AW	Aruba
AZ	Azerbaijan
BA	Bosnia and Herzegovina
BB	Barbados
BD	Bangladesh
BE	Belgium
BF	Burkina Faso
BG	Bulgaria
BH	Bahrain
BI	Burundi
BJ	Benin
BM	Bermuda
BN	Brunei Darussalam
BO	Bolivia
BR	Brazil
BS	Bahamas
BT	Bhutan
BV	Bouvet Island
BW	Botswana
BY	Belarus
BZ	Belize
CA	Canada
CC	Cocos (Keeling) Islands
CF	Central African Republic
CG	Congo
CH	Switzerland
CI	Côte d'Ivoire
CK	Cook Islands
CL	Chile
CM	Cameroon
CN	China
CO	Colombia
CR	Costa Rica
CU	Cuba
CV	Cape Verde
CX	Christmas Island
CY	Cyprus
CZ	Czech Republic
DE	Germany
DJ	Djibouti

DK	Denmark
DM	Dominica
DO	Dominican Republic
DZ	Algeria
EC	Ecuador
EE	Estonia
EG	Egypt
EH	Western Sahara
ER	Eritrea
ES	Spain
ET	Ethiopia
FI	Finland
FJ	Fiji
FK	Falkland Islands (Malvinas)
FM	Micronesia (Federated States of)
FO	Faroe Islands
FR	France
FX	France, Metropolitan
GA	Gabon
GB	United Kingdom
GD	Grenada
GE	Georgia
GF	French Guiana
GH	Ghana
GI	Gibraltar
GL	Greenland
GM	Gambia
GN	Guinea
GP	Guadeloupe
GQ	Equatorial Guinea
GR	Greece
GS	South Georgia and the South Sandwich
GT	Guatemala
GU	Guam
GW	Guinea-Bissau
GY	Guyana
HK	Hong Kong
HM	Heard Island and McDonald Islands
HN	Honduras
HR	Croatia
HT	Haiti
HU	Hungary
ID	Indonesia
IE	Ireland
IL	Israel
IN	India
IO	British Indian Ocean Territory
IQ	Iraq
IR	Iran (Islamic Republic of)
IS	Iceland
IT	Italy
JM	Jamaica

JO	Jordan
JP	Japan
KE	Kenya
KG	Kyrgyzstan
KH	Cambodia
KI	Kiribati
KM	Comoros
KN	Saint Kitts and Nevis
KP	Korea, Democratic People's Republic of
KR	Korea, Republic of
KW	Kuwait
KY	Cayman Islands
KZ	Kazakhstan
LA	Lao People's Democratic Republic
LB	Lebanon
LC	Saint Lucia
LI	Liechtenstein
LK	Sri Lanka
LR	Liberia
LS	Lesotho
LT	Lithuania
LU	Luxembourg
LV	Latvia
LY	Libyan Arab Jamahiriya
MA	Morocco
MC	Monaco
MD	Moldova, Republic of
MG	Madagascar
MH	Marshall Islands
ML	Mali
MM	Myanmar
MN	Mongolia
MO	Macau
MP	Northern Mariana Islands
MQ	Martinique
MR	Mauritania
MS	Montserrat
MT	Malta
MU	Mauritius
MV	Maldives
MW	Malawi
MX	Mexico
MY	Malaysia
MZ	Mozambique
NA	Namibia
NC	New Caledonia
NE	Niger
NF	Norfolk Island
NG	Nigeria
NI	Nicaragua
NL	Netherlands
NO	Norway

NP	Nepal
NR	Nauru
NU	Niue
NZ	New Zealand
OM	Oman
PA	Panama
PE	Peru
PF	French Polynesia
PG	Papua New Guinea
PH	Philippines
PK	Pakistan
PL	Poland
PM	Saint Pierre and Miquelon
PN	Pitcairn
PR	Puerto Rico
PT	Portugal
PW	Palau
PY	Paraguay
QA	Qatar
RE	Réunion
RO	Romania
RU	Russian Federation
RW	Rwanda
SA	Saudi Arabia
SB	Solomon Islands
SC	Seychelles
SD	Sudan

SE	Sweden
SG	Singapore
SH	Saint Helena
SI	Slovenia
SJ	Svalbard and Jan Mayen
SK	Slovakia
SL	Sierra Leone
SM	San Marino
SN	Senegal
SO	Somalia
SR	Suriname
ST	Sao Tome and Principe
SV	El Salvador
SY	Syrian Arab Republic
SZ	Swaziland
TC	Turks and Caicos Islands
TD	Chad
TF	French Southern Territories
TG	Togo
TH	Thailand
TJ	Tajikistan
TK	Tokelau
TM	Turkmenistan
TN	Tunisia
TO	Tonga
TP	East Timor
TR	Turkey

TT	Trinidad and Tobago
TV	Tuvalu
TW	Taiwan
TZ	Tanzania, United Republic of
UA	Ukraine
UG	Uganda
UM	United States Minor Outlying Islands
US	United States
UY	Uruguay
UZ	Uzbekistan
VA	Vatican City State (Holy See)
VC	Saint Vincent and the Grenadines
VE	Venezuela
VG	Virgin Islands (British)
VI	Virgin Islands (U.S.)
VN	Vietnam
VU	Vanuatu
WF	Wallis and Futuna Islands
WS	Samoa
YE	Yemen
YT	Mayotte
YU	Yugoslavia
ZA	South Africa
ZM	Zambia
ZR	Zaire
ZW	Zimbabwe

DVD OPTICAL DIGITAL OUT Signals

DIGITAL AUDIO OUTPUT Playback disc	Output Signals		
	STREAM/PCM	DOLBY DIGITAL/PCM	PCM ONLY
DVD Video	48 kHz, 16 bit Linear PCM*		
with 48 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM*		
with 96 kHz, Linear PCM	48 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS	DTS bitstream	48 kHz, 16 bit Linear PCM	
DVD Audio	48 kHz, 16 bit Linear PCM		
with 48/96/192 kHz, 16/20/24 bit Linear PCM	48 kHz, 16 bit Linear PCM		
with 44.1/88.2/176.4 kHz, 16/20/24 bit Linear PCM	44.1 kHz, 16 bit Linear PCM		
with Dolby Digital	Dolby Digital bitstream		48 kHz, 16 bit Linear PCM
with DTS	DTS bitstream	48 kHz, 16 bit Linear PCM	
SVCD, VCD, CD	44.1 kHz, 16 bit Linear PCM/48 kHz, 16 bit Linear PCM		
CD with DTS	DTS bitstream	44.1 kHz, 16 bit Linear PCM	
MP3/WMA disc	32/44.1/48 kHz, 16 bit Linear PCM		

* While playing some DVDs, digital signals may be emitted at 20 bits or 24 bits (at their original bit rate) through the DVD OPTICAL DIGITAL OUT terminal if the discs are not copy-protected.

Specifications

Amplifier section

Output Power:

HIGH:	40 W (20 W+ 20 W) at 4 Ω (10% THD) 50 W (25 W+ 25 W) at 4 Ω (10% MAX)
LOW:	40 W (20 W+ 20 W) at 4 Ω (10% THD) 50 W (25 W+ 25 W) at 4 Ω (10% MAX)

Analog input:

AUX:	Sensitivity/Impedance (at 1 kHz) 400 mV/47 k Ω (at "AUX LEVEL 1") 200 mV/47 k Ω (at "AUX LEVEL 2")
------	--

Digital output:

DVD OPTICAL DIGITAL OUT:

-21 dBm to -15 dBm (660 nm \pm 30 nm)

VIDEO OUT:

Color system:NTSC

VIDEO (composite):	1 V(p-p)/75 Ω
S-VIDEO: Y (luminance)	1 V(p-p)/75 Ω
C (chrominance, burst)	0.286 V(p-p)/75 Ω

COMPONENT: (Interlace/Progressive):

(Y)	1 V(p-p)/75 Ω
(P _B /P _R)	0.7 V(p-p)/75 Ω

Speaker Terminals: 4 Ω – 16 Ω

Others:

AV COMPU LINK x 2 (ϕ 3.5)

Tuner section

FM tuning range:	87.5 MHz – 108.0 MHz
AM tuning range:	531 kHz – 1 710 kHz (at 9 kHz) 530 kHz – 1 710 kHz (at 10 kHz)

Disc player section

Playable disc: DVD Video/DVD Audio/CD/VCD/SVCD
CD-R/CD-RW (recorded in Audio CD/
Video CD/ Super Video CD/ MP3/ WMA/
JPEG format)
DVD-R/DVD-RW (recorded in video
format)

Dynamic range:	90 dB
Horizontal resolution:	500 lines
Wow and flutter:	Immeasurable
MP3 recording format:	MPEG 1/2 Audio Layer 3
Max. Bit rate:	320 kbps

Cassette deck section

Frequency response

Normal (type I):	50 Hz – 14 000 Hz
Wow and flutter:	0.15% (WRMS)

General

Power requirement:	AC 110 V / AC 127 V / AC 220 V – AC 230 V \sim , (adjustable with the voltage selector), 50 Hz/60 Hz
Power consumption:	90 W (at operation) 12 W (on standby) 5.3 W (with deactivating the clock indication)
Dimensions (approx.):	175 mm x 237 mm x 375 mm (W/H/D)
Mass (approx.):	7.5 kg

Supplied Accessories

See page 3.

Speakers

Type:	2-Way Bass-reflex type
Speaker Systems:	Woofer: 10 cm cone x 1 Tweeter: 4 cm cone x 1
Power handling capacity:	HIGH: 20 W LOW: 20 W
Impedance:	HIGH: 4 Ω LOW: 4 Ω
Frequency range:	56 Hz – 40 000 Hz
Sound pressure level:	84 dB/W•m
Dimensions (approx.):	145 mm x 236 mm x 205 mm (W/H/D)
Mass (approx.):	2.3 kg each

Design and specifications are subject to change without notice.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

MEMO




A series of horizontal dashed lines for writing.

**Mains (AC) Line Instruction (not applicable for Europe, U.S.A.,
Canada, Australia, and U.K.)**

UX-S77

MICRO COMPONENT SYSTEM

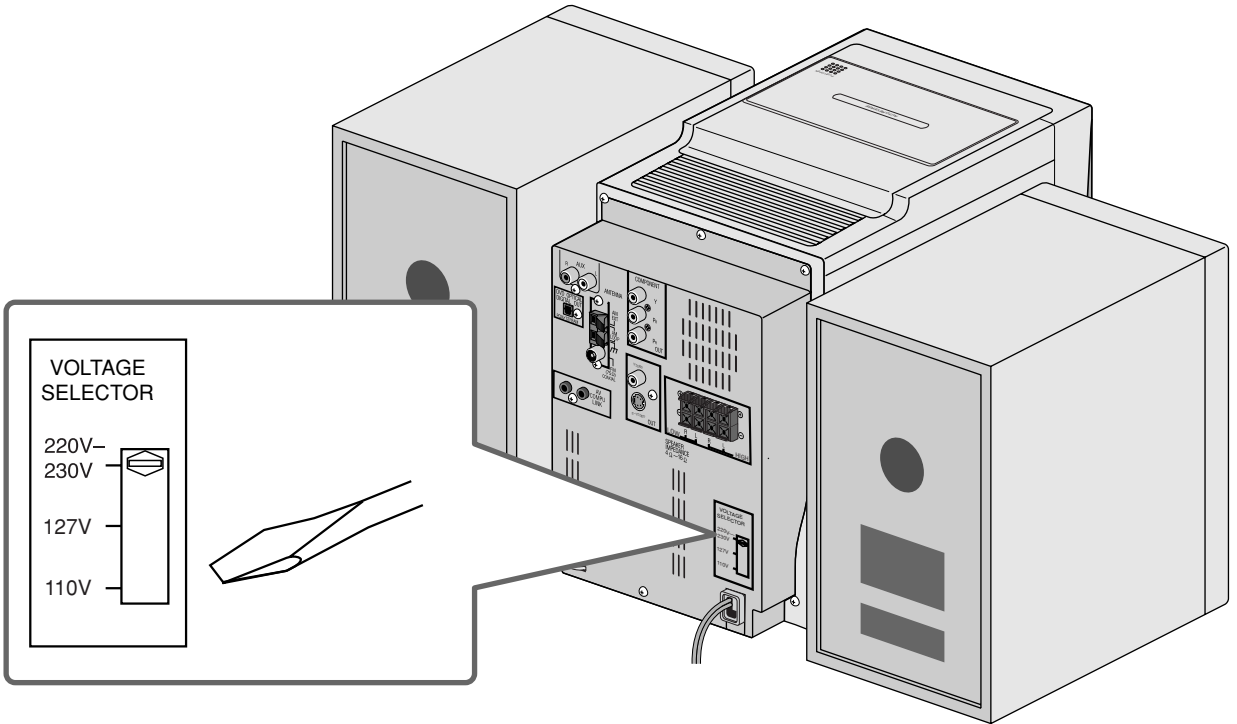

CAUTION for mains (AC) line

BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from a damage or risk of fire/electric shock.

JVC

VICTOR COMPANY OF JAPAN, LIMITED

