 


# JVC



## DVD VIDEO PLAYER

# XV-N5SL



Introduction	2
Getting started	6
Basic operations	13
Advanced operations	24
MP3 disc playback	41
JPEG disc playback	44
Changing the initial settings	49
Additional information	58

## INSTRUCTIONS

### For Customer Use:

Enter below the Model No. and Serial No. which are located on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_


Serial No \_\_\_\_\_

LET0204-001A

[J]

# Warnings, Cautions and Others
 
## Mises en garde, précautions et indications diverses



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### For Canada/pour le Canada

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT

**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND

### For Canada/pour le Canada

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS", ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUES DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUES", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

### CAUTION

To reduce the risk of electrical shocks, fire, etc.:

 
1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### ATTENTION

Afin d'éviter tout risque d'électrocution, d'incendie, etc.:


1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

### Caution — STANDBY/ON switch!

Disconnect the mains plug to shut the power off completely. The STANDBY/ON  switch in any position does not disconnect the mains line. The power can be remote controlled.

### Attention — Commutateur STANDBY/ON !

Déconnecter la fiche de secteur pour couper complètement le courant.

Le commutateur STANDBY/ON  ne coupe jamais complètement la ligne de secteur, quelle que soit sa position. Le courant peut être télécommandé.

### IMPORTANT FOR LASER PRODUCTS IMPORTANT POUR LES PRODUITS LASER

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user service-able parts inside the Unit; leave all servicing to qualified service personnel.
  1. PRODUIT LASER CLASSE 1
  2. **ATTENTION:** Radiation laser visible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Eviter une exposition directe au rayon.
  3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

### CAUTION

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### ATTENTION

- Ne bloquez pas les orifices ou les trous de ventilation. (Si les orifices ou les trous de ventilation sont bloqués par un journal un tissu, etc., la chaleur peut ne pas être évacuée correctement de l'appareil.)
- Ne placez aucune source de flamme nue, telle qu'une bougie, sur l'appareil.
- Lors de la mise au rebut des piles, veuillez prendre en considération les problèmes de l'environnement et suivre strictement les règles et les lois locales sur la mise au rebut des piles.
- N'exposez pas cet appareil à la pluie, à l'humidité, à un égouttement ou à des éclaboussures et ne placez pas des objets remplis de liquide, tels qu'un vase, sur l'appareil.

# Table of Contents

<b>Introduction</b> .....	Page 2
<b>Supplied accessories</b> .....	2
<b>Notes on handling</b> .....	3
Important cautions.....	3
Safety precautions.....	3
<b>About discs</b> .....	4
Playable disc types.....	4
Non-playable discs.....	4
Audio formats.....	4
Disc structure.....	5
Video CDs and SVCDs with Playback Control function.....	5
Care and handling of discs.....	5
<b>Getting started</b> .....	Page 6
<b>Connections</b> .....	6
Before making any connections.....	6
To connect to a TV.....	6
To connect to a stereo audio amplifier/receiver.....	9
To connect to a digital audio device.....	9
To connect the power cord.....	10
<b>Using the remote control unit</b> .....	11
To install batteries in the remote control unit.....	11
Remote sensor.....	11
To use the remote control unit for TV operation.....	12
To control the volume of a JVC's amplifier or receiver.....	12
<b>Basic operations</b> .....	Page 13
<b>Before operation</b> .....	13
Turning on/off the unit.....	13
Initial setup before using the unit.....	14
<b>Basic playback</b> .....	15
Inserting and removing discs.....	15
To start playback.....	16
To stop playback completely.....	16
To stop playback temporarily.....	17
<b>Resuming playback</b> .....	17
To memorize the interrupt position.....	17
To resume playback.....	18
<b>Variable speed playback</b> .....	19
To advance or reverse playback rapidly while monitoring.....	19
To advance a still picture frame by frame.....	19
To playback in slow motion.....	20
<b>To locate the beginning of the scene or song</b> .....	21
To locate a desired selection using ◀◀ or ▶▶.....	21
To locate a desired selection using the numeric buttons.....	21
<b>Other convenient functions</b> .....	22
To check the playback status.....	22
To move back the playback position during DVD VIDEO playback [One touch replay function].....	23
To change the brightness of the display window.....	23
<b>Advanced operations</b> .....	Page 24
<b>Playing from a specific position on a disc</b> .....	24
To locate a desired scene from the DVD menu.....	24
To locate a desired scene from the menu of a Video CD/SVCD with PBC.....	24
To specify a desired title.....	25
To locate a desired position in the current title or track [Time search].....	25
To locate a specific scene from the display [DIGEST].....	26
<b>Changing the playback order</b> .....	27
To playback in a specific order [Program play].....	27
To playback in random order [Random play].....	28

<b>Repeat playback</b> .....	29
To repeat the current selection or all tracks [Repeat playback].....	29
To repeat a desired part [A-B repeat playback].....	30
<b>Changing the language, sound and scene angle</b> .....	31
To select the subtitle language [SUBTITLE].....	31
To change the audio language or sound [AUDIO].....	32
To select a scene angle of DVD VIDEO [ANGLE].....	33
<b>Special picture playback and picture/sound effect</b> .....	34
To display continuous still pictures [STROBE].....	34
To zoom in or out pictures [ZOOM].....	34
To adjust the picture character [VFP].....	35
To simulate surround sound [3D PHONIC].....	36
<b>Menu bar functions</b> .....	37
To bring up the menu bar.....	37
Basic operation procedure.....	37
Menu bar functions for DVD VIDEO.....	38
Menu bar functions for Audio CD/Video CD/SVCD.....	39

<b>MP3 disc playback</b> .....	Page 41
<b>About MP3 discs</b> .....	41
<b>Operations</b> .....	41
Basic operations.....	41
Selecting the desired Group and Track.....	42
Direct selection.....	43
Repeat playback.....	43


<b>JPEG disc playback</b> .....	Page 44
<b>About JPEG discs</b> .....	44
<b>Basic operations</b> .....	45
To see a desired picture.....	45
To zoom in or out the picture [ZOOM].....	46
<b>To see pictures continuously [slide show mode]</b> .....	46
Playback features.....	46
Selecting the start point of the slide show.....	47
Repeat function.....	48

<b>Changing the initial settings</b> .....	Page 49
<b>Selecting preferences</b> .....	49
About the Preference display.....	49
How to set preferences.....	49
LANGUAGE menu.....	50
PICTURE menu.....	51
AUDIO menu.....	52
OTHERS menu.....	54
<b>Limiting playback by children</b> .....	55
To set Parental Lock for the first time [PARENTAL LOCK].....	55
To change the settings [PARENTAL LOCK].....	56
To temporarily release the Parental Lock [PARENTAL LOCK].....	57


<b>Additional information</b> .....	Page 58
<b>Names of parts and controls</b> .....	58
Front panel.....	58
Display window.....	58
Rear panel.....	58
Remote control unit.....	59
<b>AV COMPU LINK remote control system</b> .....	60
Connection and setup.....	60
Operation.....	60
<b>Troubleshooting</b> .....	61
<b>Frequently Asked Questions</b> .....	63
<b>Specifications</b> .....	64
<b>Appendix A: Country/Area code list for Parental Lock</b> .....	65
<b>Appendix B: Glossary</b> .....	66

## Supplied accessories


- Audio/Video cable (Yellow/White/Red) (× 1)

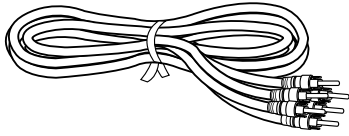


- Component video cable (Red/Green/Blue) (× 1)

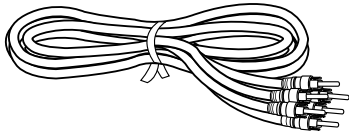

- Remote Control Unit (× 1)

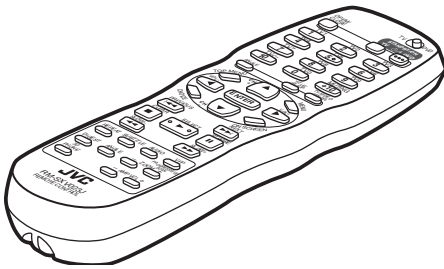

- R6P(SUM-3)/AA(15F) battery (× 2)

 

# Notes on handling

## Important cautions

### Installation of the unit

- Select a place which is level, dry and neither too hot nor too cold (between 5°C and 35°C, 41°F and 95°F).
- Leave sufficient distance between the unit and the TV.
- Do not use the unit in a place subject to vibrations.

### Power cord

- Do not handle the power cord with wet hands!
- A small amount of power (1.1 W) is always consumed while the power cord is connected to the wall outlet.
- When unplugging the unit from the wall outlet, always pull the plug, not the power cord.

### To prevent malfunction of the unit

- There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
- Do not insert any metallic object into the unit.
- Do not use any non-standard shape disc available on the market, because it may damage the unit.
- Do not use a disc with tape, seals, or paste on it, because damage to the unit may result.

### Note about copyright laws

- Please check the copyright laws in your country before recording from DVD VIDEO, Audio CD, Video CD, SVCD, MP3 and JPEG discs. Recording of copyrighted material may infringe copyright laws.

### Note about the copyguard system

- DVD VIDEO discs are protected by the copyguard system. When you connect the unit to your VCR (or integrated TV/Video system), the copyguard system activates and the picture may not play back correctly.

## Safety precautions

### Avoid moisture, water and dust

Do not place the unit in moist or dusty places.

### Avoid high temperatures

Do not expose the unit to direct sunlight or place it near a heating device.

### When you are away

When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet.

### Do not insert foreign objects into the unit

Do not insert wires, hairpins, coins, etc. into the unit.

### Do not block the vents

Blocking the vents may damage the unit.

### Care of the cabinet

When cleaning the unit, use a soft cloth and follow the relevant instructions on the use of chemically-coated cloths. Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

### If water gets inside the unit

Turn off the power switch and remove the plug from the wall outlet, then call the store where you made your purchase. Using the unit in this state may cause a fire or electrical shock.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Confidential unpublished works.

Copyright 1992-1997 Dolby Laboratories. All rights reserved.





Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other world-wide patents issued and pending. "DTS," "DTS Digital Surround," are trademarks of Digital Theater Systems, Inc.

Copyright 1996 Digital Theater Systems, Inc. All Rights Reserved.

# About discs

## Playable disc types

Playable and non-playable disc types are as follows:

<b>DVD VIDEO</b> 	<b>SVCD</b> 	<b>Video CD</b> 	<b>Audio CD</b> 
---	--	--	--

The DVD Logo is a trademark.

- CD-R and CD-RW discs recorded in the Audio CD, Video CD, SVCD, MP3 or JPEG format can be played back. However, some discs may not be played back because of the disc characteristics or recording conditions.  
Note that unfinalized discs cannot be played back.
- DVD-R discs recorded with the DVD VIDEO format can be played back. However, some discs may not be played back because of the disc characteristics or recording conditions.  
Note that unfinalized disc cannot be played back.
- DVD VIDEO players and DVD VIDEO discs have their own Region Code numbers. This unit can play back only DVD VIDEO discs whose Region Code numbers include "1."

Examples of playable DVD VIDEO discs:



This unit accommodates the NTSC system, also can play back discs recorded with PAL system whose Region Code numbers include "1."

Note that the PAL video signal on disc is converted to an NTSC signal and output.

## Non-playable discs

DVD-ROM, DVD-RAM, DVD-RW, DVD+RW, DVD-AUDIO, CD-ROM, PHOTO CD, CD-EXTRA, CD-G, CD-TEXT, SACD, MIX-MODE CD

- Playing back discs listed as "Non-playable discs" above may generate noise and damage speakers.
- This unit can play back audio signals recorded in CD-G, CD-EXTRA, CD-TEXT and MIX-MODE CD discs.

## Audio formats

Some audio formats used on discs are described below.

- **Linear PCM**  
Uncompressed digital audio, the same format used on CDs and most studio masters.  
DVD VIDEO supports 2 channels at sampling rates of 48/96 kHz and quantization of 16/20/24 bits.  
Audio CD/Video CD is limited to 2 channels at 44.1 kHz at 16 bits.
- **Dolby Digital**  
A surround audio format configured with six channels. Because the "LFE (Low-Frequency Effect for sub-woofer, etc)." channel, one of the six channels, is an auxiliary channel, this format is called "5.1-channel system."  
Not all Dolby Digital discs contain six (5.1) channel information.
- **DTS (Digital Theater Systems)**  
A surround audio format configured with six (5.1) channel which is same as Dolby Digital. Because the compression ratio is lower than Dolby Digital, it provides wider dynamic range and better separation.  
Not all DTS discs contain six (5.1) channel information.

The associated indicator lights up in the display window when playing back a disc.


Indicator	Audio format
LPCM	Linear PCM
DOLBY DIGITAL	Dolby Digital
DTS	DTS (Digital Theater Systems)

Note that with some formats and/or depending on the unit's "DIGITAL AUDIO OUTPUT" setting, digital audio signals may not always transmitted from the unit's DIGITAL OUT jacks as are recorded on the disc. See "DIGITAL AUDIO OUTPUT" on page 52 for details.

## Disc structure


### (For DVD VIDEO)

A DVD VIDEO disc is comprised of "titles" and each title may be divided into "chapters." For example, if a DVD VIDEO disc contains some movies, each movie may have its own title number, and each movie may be divided into some chapters. In a DVD VIDEO KARAOKE disc, each song usually has its own title number and does not have chapters.

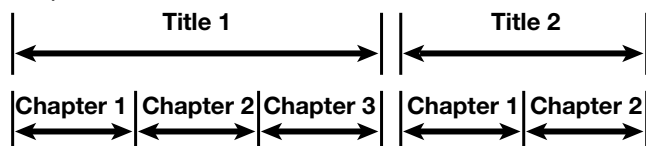

### (For Audio CD/Video CD/SVCD)

An Audio CD, Video CD or SVCD is simply comprised of "tracks."

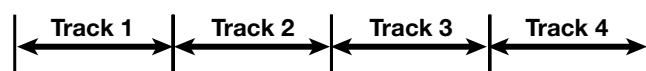

## Video CDs and SVCDs with Playback Control function

### What is Playback Control (PBC) function?

The Playback Control function allows you to enjoy menu-driven operation and high-resolution still images which have a resolution four times greater than moving pictures.


- **High-resolution still image display**  
You can display high-quality images four times clearer than moving pictures.

- **Menu-driven playback**

A selection menu is displayed when you start playing a Video CD or SVCD disc with the Playback Control feature. The selection menu shows a list of numbers for selection. Some discs may show moving pictures or a divided screen.

You can interact with the screen using the menu display to select and play an entry.


See illustration below about basic feature of menu-driven playback (See page 24 for more information about PBC (Playback Control)).

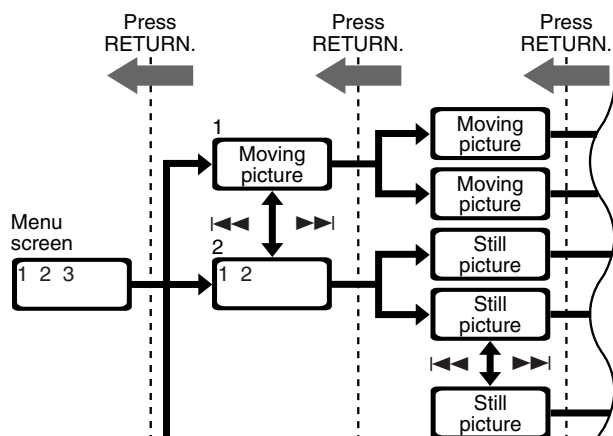

## Care and handling of discs

### How to handle discs

When handling a disc, do not touch the surface of the disc. Since discs are made of plastic, they are easily damaged. If a disc gets dirty, dusty, scratched or warped, the images and sound will not be picked up correctly, and such a disc may cause the player to malfunction.

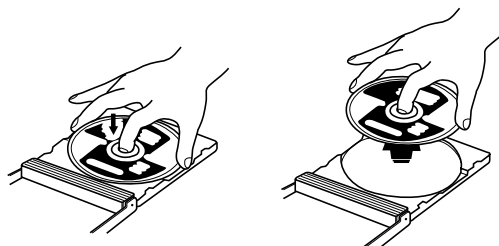

### Label side

Do not damage the label side, stick paper to or use any adhesive on its surface.


### Storage

Make sure that discs are kept in their cases. If discs are piled on top of one another without their protective cases, they can be damaged. Do not put discs in a location where they may be exposed to direct sunlight, or in a place where the humidity or temperature is high. Avoid leaving discs in your car!

### Maintenance of discs

If there are fingerprints or other dirt adhering to a disc, wipe with a soft dry cloth, moving from the center outwards.

If a disc is difficult to clean, wipe with a cloth moistened with water. Never use record cleaners, petrol, alcohol or any anti-static agents.

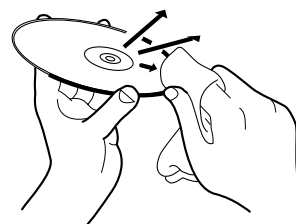

### CAUTION


The image may be sometimes poor or noisy due to defects in the disc itself.

## Connections

\*Before using the unit, you have to connect the unit to a TV and/or amplifier.

### Before making any connections

- Do not connect the AC power cord until all other connections have been made.
- Connect VIDEO OUT of the unit directly to the video input of your TV. Connecting VIDEO OUT of the unit to a TV via a VCR may cause a monitor problem when playing back a copy-protected disc. You may also have a monitor problem when connecting the unit to an integrated TV/Video system.

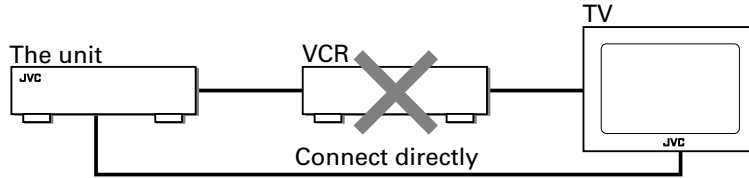

#### NOTES


- In the following description, "TV" may be substituted with "monitor" or "projector."
- Terminal names used for other components may be different from those used in the following description.

### To connect to a TV

#### Connection to a conventional TV


You can enjoy playback by simply connecting the unit to a TV.

Connect the unit to a TV equipped with stereo audio input and video input jacks using the supplied Audio/Video cables.

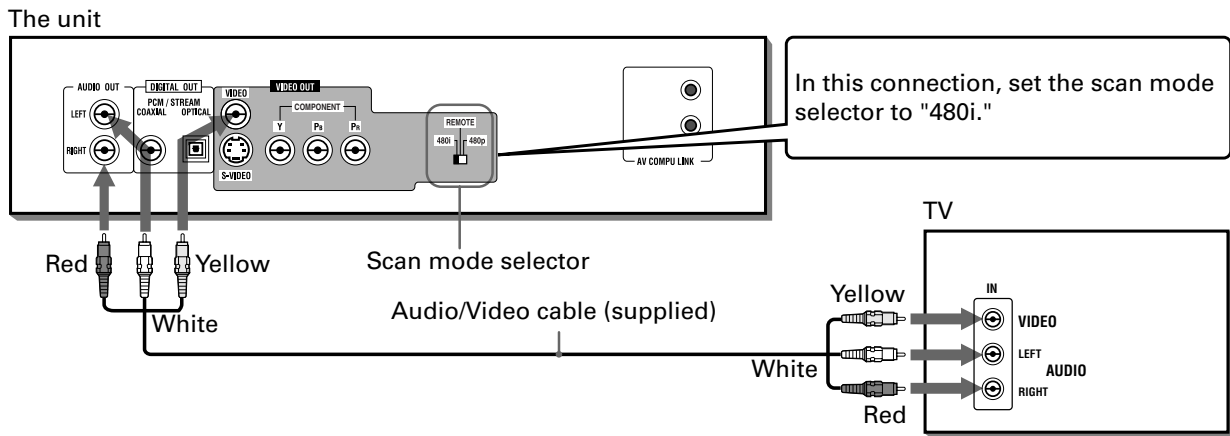

#### Connection to a TV equipped with an S-video jack


If your TV has an S-VIDEO input, you can get better picture quality by connecting it with the S-VIDEO output of the unit using an supplied S-video cable instead of connecting the video input of the TV to the VIDEO jack of the unit.

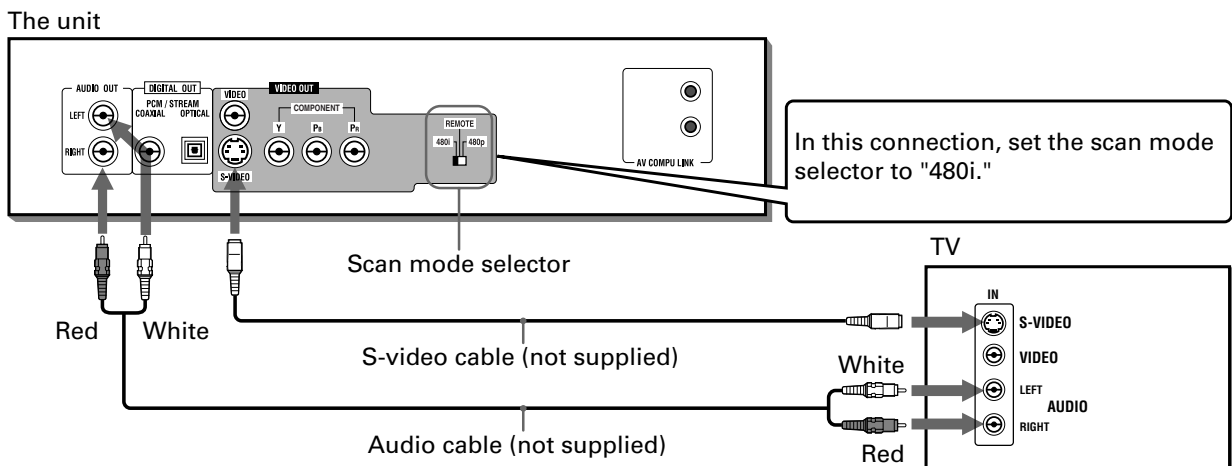



## Connection to a TV equipped with component jacks

You can enjoy high picture quality by connecting the unit's COMPONENT VIDEO OUT jacks to the COMPONENT VIDEO IN jacks of your TV with the video cables.

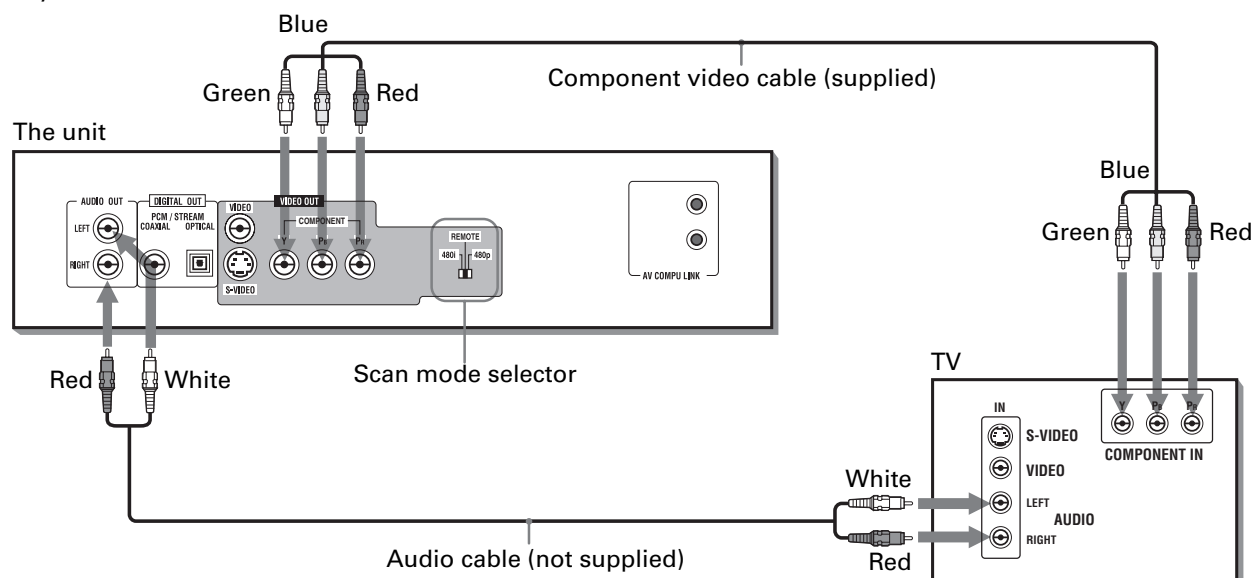

- Connect "Y" to "Y," "P<sub>B</sub>" to "P<sub>B</sub>"(C<sub>B</sub>), "P<sub>R</sub>" to "P<sub>R</sub>"(C<sub>R</sub>) correctly. The unit supports the Progressive scanning system (480p) as well as conventional Interlaced scanning system (480i). If your television or monitor equipped with component jacks supports the progressive video input, you can enjoy a high quality picture by making the Progressive scanning mode active.

- **If your television equipped with component jacks does not support the progressive scanning mode**  
Set the Scan mode selector to "480i."
- **If your television equipped with component jacks supports the progressive scanning mode**  
Set the Scan mode selector to "480p."
- **If you want to select the scan mode between the interlace and progressive modes (depending on the source condition, or when connecting more than one television etc.)**

You can select the mode from the remote control unit. To do this, set the scan mode selector to "REMOTE."  
(See "To make the Progressive scanning mode selection active from the remote control unit" on page 8 for details about how to select the scanning mode from the remote control unit when the scan mode selector is set to "REMOTE.")

### NOTES

- You must change the switch position on the rear panel while unit power is off. Otherwise, the changed setting is not effective.
- When the scan mode is set to the progressive mode, the PROGRESSIVE indicator on the front panel is lit. The color of the indicator depending on the "PROGRESSIVE MODE" setting on the "PICTURE" preference display and the status of the unit (see pages 8 and 51).
- When connecting to a TV using the VIDEO or S-VIDEO jack, make sure that the PROGRESSIVE indicator on the front panel is not lit. If it is lit, the VIDEO and S-VIDEO outputs do not feed the correct signals. To turn off the PROGRESSIVE indicator, set the scan mode selector on the rear panel to "480i." Or, while setting the scan mode selector to "REMOTE," make the Progressive scanning mode inactive by following the procedure described on page 8.
- When the component video input jacks of the TV is the BNC type, use an adaptor to convert a pin jack to a BNC jack (optional).
- Make "ANALOG DOWN MIX" in the "AUDIO" preference to "STEREO" (see page 53).
- If your TV has a monaural audio input instead of stereo, you need to use an optional audio cable which converts stereo audio output to monaural.
- To improve audio sound quality, connect the AUDIO OUT jacks to your separate audio equipment (see the following pages).
- If your TV has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 60 for details.

### About SCANNING MODE

To display video on the television (monitor) screen, the conventional scanning method is called "Interlaced scanning." With this method, only half of the horizontal lines are displayed at a time. So two fields complete a single picture (frame); i.e., the first field, containing all the odd-numbered lines, is displayed followed by the second field, containing all the even-numbered lines.

On the other hand, the Progressive scanning, resulting in flicker-free, high-density picture.

Depending on the material source format, DVD VIDEO discs can be classified into two types; film source and video source (note that some DVD VIDEO discs contain both film source and video source). Film sources are recorded as 24-frame-per-second information, while (NTSC) video sources are recorded as 30-frame-per-second (60-field-per-second interlaced) information.

When the unit plays back a film source material, uninterlaced progressive output signals are created using the original information. When a video source material is played back, the unit interleaves lines between the interlaced lines on each to create the interpolated picture and outputs as the progressive signal.

### To make the Progressive scanning mode selection active

The unit supports the Progressive scanning system as well as the conventional Interlaced scanning system. If your television or monitor supports the progressive video input, you can enjoy a high quality picture by making the Progressive scanning mode active.

If you want to select the scanning mode between the interlaced and progressive modes depending on the source condition or when connecting more than one television, you can select the mode from the remote control unit. To do this, set the scan mode selector on the rear panel to "REMOTE" (see page 7).


- When the unit is turned on, and the scan mode selector on the rear panel is set to "REMOTE."

### Press and hold down VFP - PROGRESSIVE SCAN for few seconds


The scanning mode switches between the Progressive scanning and Interlaced scanning modes.

- When the scanning mode is set to the progressive mode, the PROGRESSIVE indicator on the front panel is lit. Depending on the "PROGRESSIVE MODE" setting on the "PICTURE" preference display and whether the current DVD VIDEO disc is film-source or video-source, the color of the indicator differs, as shown in the table below. (see also page 51).

Setting of PROGRESSIVE MODE	Source type of DVD VIDEO		Note
	Film source	Video source	
VIDEO	Red	Red	While stopped in the Progressive scan mode, the PROGRESSIVE indicator is lit in red regardless of the "PROGRESSIVE MODE" selection.
FILM	Green	Green	
AUTO	Green	Red	

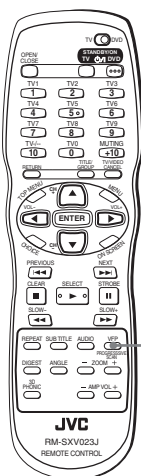

VFP - PROGRESSIVE SCAN

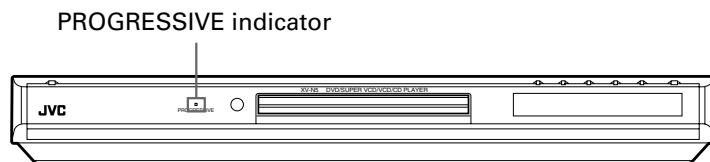


### NOTES

- There are some progressive TV and High-Definition TV sets that are not fully compatible with the unit, resulting in the unnatural picture when playing back a DVD VIDEO disc in the Progressive scanning mode. In such a case, use the Interlaced scanning mode. To check the compatibility of your TV set, contact your local JVC customer service center.
- All JVC progressive TV and High-Definition TV sets are fully compatible with the unit (Example : AV-61S902).

## To connect to a stereo audio amplifier/receiver

You can enjoy high-quality audio by connecting the unit's audio output to your amplifier or receiver. Connect the unit's AUDIO OUT (LEFT/RIGHT) jacks to any line-level inputs (such as AUX, DVD, CD, etc.) of an audio amplifier or receiver.

The unit

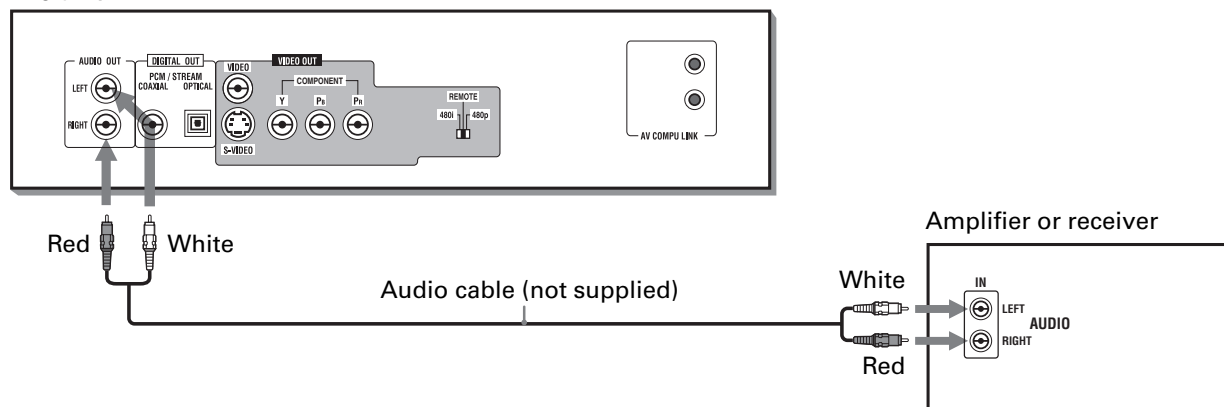


### NOTES

- When using the unit with a stereo amplifier or receiver, set "ANALOG DOWN MIX" in the "AUDIO" preferences to "STEREO" (see page 53).
- If your stereo amplifier or receiver has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 60 for details.

## To connect to a digital audio device

You can enhance the playback sound quality by connecting either of the unit's DIGITAL OUT jacks to the digital input of an amplifier, etc. by using an optical or a coaxial digital cable (optional). The digital audio signal from a disc will be transferred directly. If you connect the unit to a Dolby Digital or DTS decoder or an amplifier with a built-in decoder using an optional digital cable, you can enjoy high-quality surround sound.


For a digital connection, connect the unit's DIGITAL OUT (OPTICAL or COAXIAL) to the digital input of a digital audio device using an optical or a coaxial digital cable.

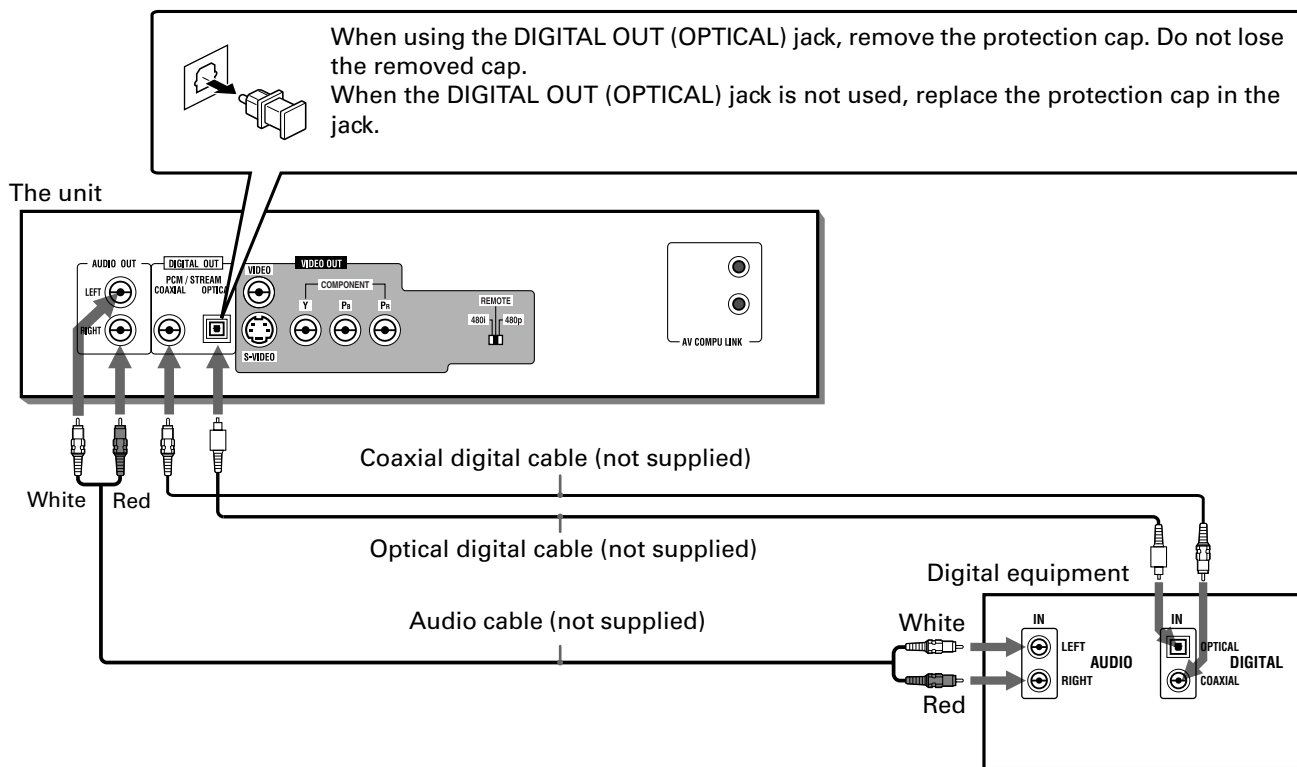

**NOTES**

- When you make digital connection, we recommend also to make the analog connection, because, depending on discs, no signal may be output from the DIGITAL OUT.
- When you connect the unit's DIGITAL OUT to a digital audio device, before using, set "DIGITAL AUDIO OUTPUT" in the "AUDIO" preferences correctly according to the connected audio device. If "DIGITAL AUDIO OUTPUT" is not set correctly, loud noise may be generated from speakers, causing damage to them. See "DIGITAL AUDIO OUTPUT" on page 52.
- When you connect the unit's DIGITAL OUT to a Dolby Digital or DTS decoder (or amplifier with a built-in decoder) to enjoy surround sound, the unit's "D. RANGE COMPRESSION" setting in the "AUDIO" preferences is invalid. Make appropriate surround audio settings on the decoder.
- If your digital audio device has an AV COMPU LINK terminal, you can use the AV COMPU LINK function. See "AV COMPU LINK remote control system" on page 60 for details.
 
## To connect the power cord

When all the audio/video connections have been made, insert the other end to the wall outlet. Make sure that plugs are inserted firmly. The STANDBY/ON  button on the front panel lights in red.

**Warning**

- Disconnect the power cord if you are not going to use the unit for a long time.
- Disconnect the power cord before cleaning the unit.
- Disconnect the power cord before moving the unit.
- Do not connect or disconnect the power cord with wet hands.
- Do not pull the power cord when disconnecting it, as this may damage the cord and cause fire, electric shock, or other accidents.

**Caution**

- Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents.
- If the cord is damaged, consult a dealer and have replacing to the new power cord.

## Using the remote control unit

Using the remote control, you can operate not only all the functions of the unit but also basic functions of your TV and amplifier/receiver.


### To install batteries in the remote control unit

The battery compartment is located on the back of the remote control unit.

- 1 Press down on the point shown by the arrow at the top of the compartment cover, and pull up the cover to open the compartment.



- 2 Place the two supplied R6P (SUM-3)/AA(15F) batteries in the remote control unit according to the polarity markings ("+" and "-") inside the compartment and on the batteries.

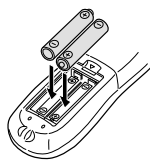

- 3 Place the cover over the compartment, and press down lightly.



The batteries will last about six months with normal use. If the functions of the remote control become erratic, replace the batteries. See below for more information.

### Precautions for the safe use of batteries


Observe the following precautions for the safe use of batteries. If they are used improperly their lives will be shortened, they may burst or their contents may leak.

#### Precaution

- Remove the batteries from the remote control if it is not going to be used for a long period of time.
- Remove dead batteries and dispose of them properly.
- Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into an incinerator.
- Never touch liquid that has leaked out of a battery.
- Do not mix new and old batteries, or batteries of different types, when replacing them.

### Remote sensor

- Operate the remote control unit while pointing it toward the remote sensor on the unit.
- The remote control unit can be used within a range of about 5 meters from the remote sensor. If you operate the remote control unit from a diagonal position, range may be shorter.

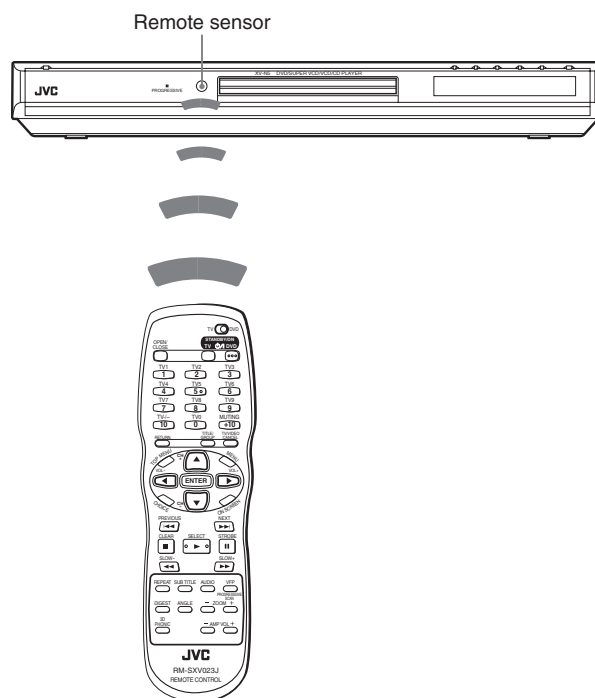


#### NOTE

- If the remote sensor on the unit is exposed to the sunshine or strong light, you may not be able to control the unit from the remote control unit.

## To use the remote control unit for TV operation

You can operate your TV from the remote control unit.

### Setting the remote control signal for operating your TV

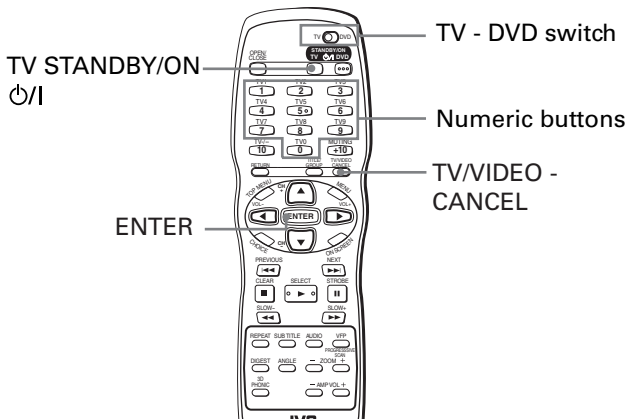

- 1 Set the TV - DVD switch to "TV."
- 2 Hold down TV/VIDEO - CANCEL until step 4 is finished.
- 3 Enter the manufacturer code of your TV listed below by using the numeric buttons (0 to 9).

**Example:**

To enter the manufacturer code "01": Press "0" then "1."

**Hints**

- When you purchased the unit, the manufacturer code is set to "JVC" (01).

- 4 Press ENTER.

 
**Manufacturer code list**

Manufacturer	No.	Manufacturer	No.
AIWA	36	MIVAR	29
BEIJING	22	NEC	20
CCE	02	NOBLEX	22
CHANGHONG	34	NOKIA	31
DAEWOO	17, 37	PANASONIC	04, 11
FERGUSON	27	PEONY	34, 38, 39
FINLUX	30	PHILCO	10, 17, 21
FUNAI	32	PHILIPS	02
GRADIENTE	15, 20	RCA	05
GRUNDIG	19	SAMSUNG	12, 33, 34, 35
HITACHI	10		
ITT	28	SANYO	13, 16
JINXING	38	SEARS	13
JVC	01, 23, 24, 25	SHARP	06
		SONY	07
KONKA	40	TCL	41
LG (GOLDSTAR)	18	THOMSON	26
MAGNAVOX	02	TOSHIBA	08, 14
mitsubishi	03	ZENITH	09

- 5 Release TV/VIDEO - CANCEL.
- 6 Try to operate the TV by pressing TV STANDBY/ON . If your TV turns on or off, you have successfully set the control signal.

The following buttons can be used for operating the TV.

To use (CH+, CH-), (VOL-, VOL+), TV/VIDEO - CANCEL and numeric buttons for TV control, set the TV - DVD switch to "TV."




	<b>Turns the TV on or off.</b>
	<b>Switches the TV input mode between TV and VIDEO.</b>
	<b>Selects the TV channels directly.</b> * For some TVs, pressing "+10" functions as the "100+," while "10" functions as the ENTER button if your TV requires pressing the ENTER button after selecting a channel number.
	<b>Mutes the TV sound.</b>
	<b>Changes the TV channels.</b>
	<b>Adjusts the TV volume.</b>

**NOTE**

 - If there is more than one code listed for the manufacturer of your TV, try them one by one until you succeed.

## To control the volume of a JVC's amplifier or receiver

You can control the volume of a JVC's amplifier or receiver by using the AMP VOL +/- buttons on the remote control unit.



Pressing the + button raises the audio volume of the amplifier or receiver, while pressing the - button lowers the volume.

# Basic operations

In the following description, we assume that the buttons on the remote control unit are mainly used; however, you may use the corresponding buttons on the front panel if available.

## NOTE





Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.

## Before operation

### Turning on/off the unit

Press DVD STANDBY/ON  $\odot/|$  on the remote control unit or press STANDBY/ON  $\odot/|$  on the front panel. The STANDBY/ON  $\odot/|$  button on the front panel, which light in red during standby, lights in green.

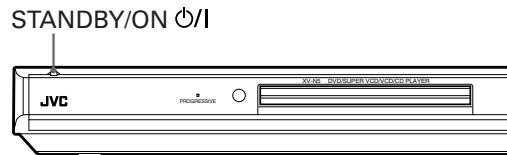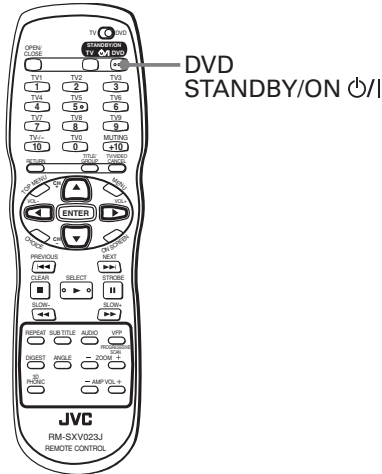


## Hints

- You can turn on the unit by pressing the ► button. In this case, the unit starts playback if the disc is set in the disc tray. If no disc is set, "NO DISC" appears on the display window.
- You can turn on the unit by pressing the ▲ button on the front panel. In this case, the disc tray opens.

The opening display shown at right appears on the TV screen. The following messages may appear at the bottom of the opening display.

- NOW READING: The unit is reading the disc information.
- REGION CODE ERROR!:  
The region code of the DVD VIDEO disc does not match the unit. The disc cannot be played back.
- OPEN: The disc tray is opening.
- CLOSE: The disc tray is closing.
- NO DISC: No disc is loaded.
- RESUME STOP: The unit stops and memorizes the interrupted.

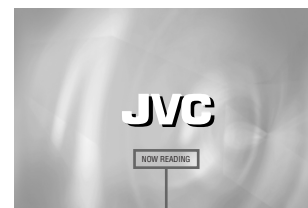

Message area


## NOTE

- Even if you press the DVD STANDBY/ON  $\odot/|$  on the remote control unit or STANDBY/ON  $\odot/|$  on the front panel to turn off the unit, the unit is not disconnected from the AC power source as long as it is connected to the wall outlet. This state is called standby mode. In this state, the unit consumes a very small amount of power.

## Initial setup before using the unit


We recommend you to set the display language, TV monitor type and digital output before using the unit, by following the procedure below.

See "Changing the initial settings" beginning on page 49 for details about each setting item.

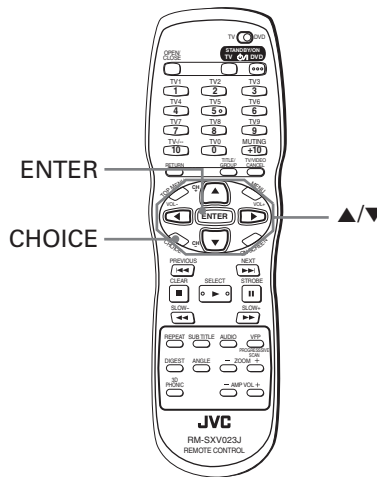

**1** Press CHOICE for a few seconds to bring up the first page of the DVD PLAYER SET UP display.

The pull-down menu of the "ON SCREEN LANGUAGE" is already open.

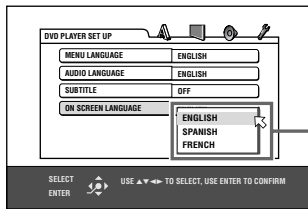


ON SCREEN LANGUAGE options

**2** Use ▲/▼ to select a desired language.

You can select the on-screen language for the preference displays, etc. from among English, Spanish and French.

**3** Press ENTER.

The second page is shown, in which the pull-down menu of the "MONITOR TYPE" is already open.

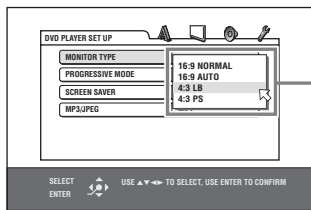

MONITOR TYPE options

**4** Use ▲/▼ to select a desired monitor type.


You can select the monitor type according to your TV.

- For a normal (conventional) TV, select "4:3 LB" or "4:3 PS."
- For a wide-screen TV, select "16:9 AUTO" or "16:9 NORMAL."

See page 51 for details about each mode.

**5** Press ENTER.

The third (final) page is shown, in which the pull-down menu of the "DIGITAL AUDIO OUTPUT" is already open.

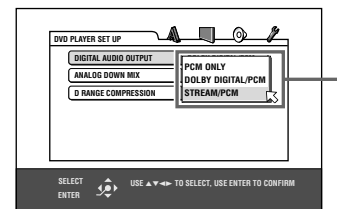

DIGITAL AUDIO OUTPUT options

**6** Use ▲/▼ to select a desired digital output signal type.

You must set this item correctly when you connect the unit to an external surround decoder or D/A convertor (including an amplifier/receiver with built-in surround decoder or D/A convertor). (If you do not connect the unit to such a device, you do not have to set this item.)

- When connecting with a Dolby Digital decoder, select "DOLBY DIGITAL/PCM."
- When connecting with a DTS or MPEG Multichannel decoder, select "STREAM/PCM."
- When connecting with other digital device, select "PCM ONLY."

See page 52 for details.

**7** Press ENTER.

The TV screen returns to showing the opening display.


### NOTES

- This setting may not be necessary except when first turning on the power after purchasing the unit.
- You can also set these items, as well as other preferences, by pressing CHOICE briefly to bring up the preference display. See "Changing the initial settings" on and after page 49 for details.



## Basic playback

This section describes basic operations for playback of DVD VIDEO, Audio CD, Video CD and SVCD discs. For MP3 and JPEG disc playback, see the separate chapter beginning on pages 41 and 44.

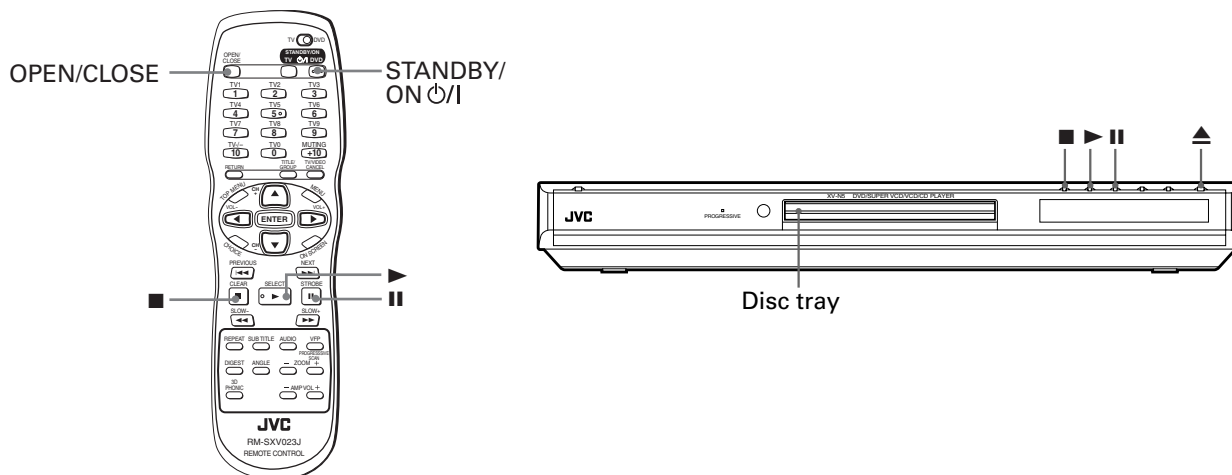

## Inserting and removing discs

- 1 Press ▲ to open the disc tray.
- 2 Place a disc in the disc tray.
- 3 Press ▲ to close the disc tray.

The unit reads the disc information and the opening display appears on the TV screen.



### If a menu is shown on the TV screen

When inserting a DVD VIDEO, Video CD or SVCD disc, a menu display may be automatically shown on the TV screen. From the menu, you can select a desired item to be played back by following the procedure below.


(for DVD VIDEO)

- 1 Use ▲/▼/◀/▶ to select a desired item.
- 2 Press ENTER.

The unit starts playback of the selected item.

(for Video CD/SVCD)

Use the numeric buttons to select a desired item.  
The unit starts playback of the selected item.

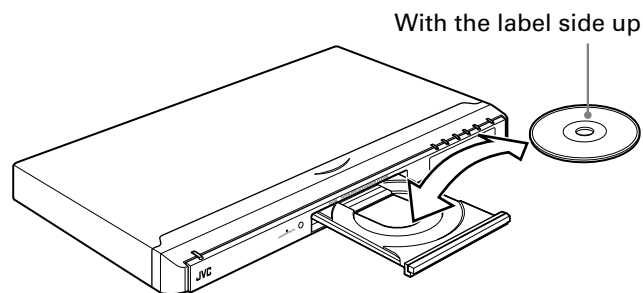

With the label side up

- To insert an 8-cm disc, place it in the inner recess.

## NOTES

- Do not load a non-playable disc. For details about playable and non-playable disc types, see page 4.
- When loading a disc on the disc tray, be sure to position the disc inside the recess. Otherwise, the disc may be damaged when the disc tray is closed, or you may not be able to remove the disc from the unit.
- Do not use any stabilizer when playing back a disc.
- With some DVD VIDEO discs, the unit starts playback automatically after inserting the disc.
- If you insert a DVD VIDEO disc whose region code does not match the unit, "REGION CODE ERROR!" is shown in the opening display. For details about the region code, see page 4.

## To start playback

Available :    

Press ►.

The unit starts playback from the beginning.



### About screen saver function

- A television monitor may have an image burned into it if a static image is displayed for a long time. To prevent this, the unit automatically activates the screen saver function if a static picture, such as an on-screen display or menu, is displayed for over 5 minutes.
- Pressing any buttons on the unit or the remote control unit will release the screen saver function and return to the previous display.
- You can also turn off the screen saver function (see page 52).

While the screen saver function is not activated








 

While the screen saver function is activated





### About On-screen guide icons

- When you make an operation, you may see the following icons displayed over the picture for about 3 seconds. These have the following meanings.

You can set the unit not to display these icons above via the preference settings described on page 54.

Icon	Status
	Appears at the beginning of playback mode.
	Appears at the beginning of pause mode.
	Appears at the beginning of fast forward/backward playback with the current speed (see page 19).
	Appears at the beginning of slow-motion playback with the current speed (see page 20).
	Appears at the beginning of a scene recorded from multiple angles (see page 33).
	Appears at the beginning of a scene recorded with multiple audio languages (see page 32).
	Appears at the beginning of a scene recorded with multiple subtitle languages (see page 31).
  
### About invalid operation icon

- When you press a button, if the unit does not accept its operation,  appears on your television screen. Operations are occasionally unacceptable even if  is not displayed.

Note that some operations may not be accepted. For example, some discs may not allow rapid advance/reverse or slow-motion playback.

### NOTES

- When the RESUME function is "ON" or "DISC RESUME" and a resume point is set, pressing ► starts playback from that point instead of the beginning. See page 18.
- During playback, the display window shows the title/chapter or track number being played.
- During DVD VIDEO playback, pressing ► moves the playback position back 10 seconds before the current position. See page 23 for details.

## To stop playback completely

Available :    

Press ■.

The unit stops playback.



- If you press ▲ during playback, the unit stops playback and opens the disc tray.

## To stop playback temporarily

Available :    

Press **■**.


The unit pauses playback. To resume playback, press **▶**.

## Resuming playback

The unit can memorize the position on a disc where you interrupt playback, and resume playback from that position later. You can set two resume modes (DISC RESUME and ON) using the preference display. See page 54 for details about how to set the resume mode.



- The resume mode is initially set to "ON" when you purchased.
- You can deactivate the resume mode by setting "RESUME" on the "OTHERS" preference display to "OFF."

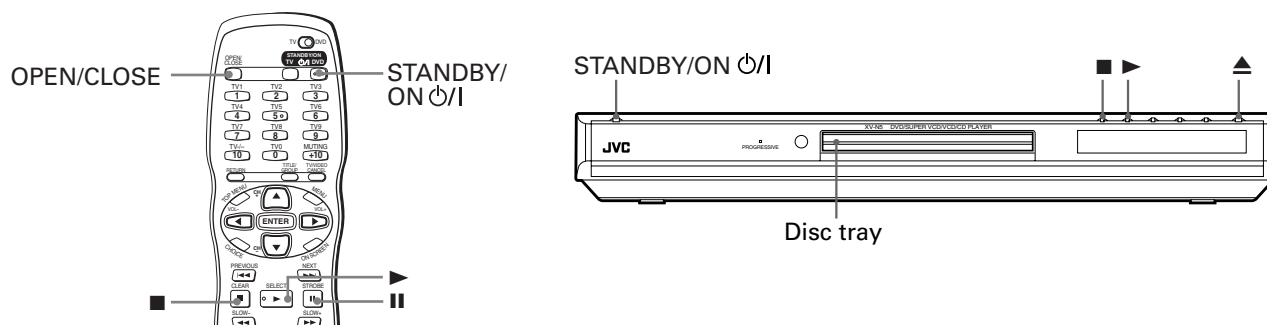

## To memorize the interrupt position

 

Available :   

- During playback



### When the resume mode is set to "DISC RESUME"

Press **■**.

The unit stops playback and memorizes the interrupt position. After pressing **■**, the display window on the front panel shows "RESUME STOP."

  In this condition, the memory of the interrupt position is not cleared if you press **▲** to open the disc tray, or press STANDBY/ON  (on the front panel) or DVD STANDBY/ON  (on the remote control unit) to turn off the unit.


 


- The interrupt position is also memorized when you press **▲**, STANDBY/ON  (on the front panel) or DVD STANDBY/ON  (on the remote control unit). In this case, "RESUME STOP" is not shown on the display window.
- To clear the memory, press **■** while the disc stopped.
- The unit memorizes interrupt positions for the last 30 discs played.
- If you interrupt the playback of a disc for which an interrupt position has already been stored, the memory will be updated with the new interrupt position.
- After the unit has stored interrupt positions for 30 discs, storing a new interrupt position will cause the unit to delete the oldest stored position. Interrupting playback of a disc for which an interrupt position is already stored may change the order in which the positions are stored. This may potentially change the order in which positions are deleted.

### When the resume mode is set to "ON"

Press **■**.

The unit stops playback and memorizes the interrupt position.

In this condition, the memory of the interrupt position is not cleared if you press STANDBY/ON  (on the front panel) or DVD STANDBY/ON  (on the remote control unit) to turn off the unit.

Note that if you press **▲** to open the disc tray, the memory of the interrupt position is cleared.



- The interrupt position is also stored by pressing STANDBY/ON  $\odot/|$  (on the front panel) or DVD STANDBY/ON  $\odot/|$  (on the remote control unit).
- To clear the memory, press ■ while the disc stopped.

## To resume playback

Available :

### When the resume mode is set to "DISC RESUME"

- While stopped, or no disc is inserted

**1** Press ▲ to insert a disc for which the unit has stored an interrupt position.

After loading the disc, the display window on the front panel shows "RESUME STOP."

(If a disc for which you want to resume playback is already set in the disc tray, go to step 2.)



**2** Press ►.

The display window shows "RESUME PLAY" and the unit resumes playback from the position where playback was interrupted.

The unit maintains the memory of the interrupt position for the disc, even if you remove the disc from the disc tray and replace it again. The unit also maintains the memory of the interrupt position while the disc is in the disc tray.

- **To play back a disc from the beginning (instead of the interrupted position)**

After loading the disc, press ■ before pressing ► to start playback.

Pressing ■ while the disc is stopped clears the memory of the interrupted position.

Every time you interrupt playback, the position is memorized as the new "resume" point.

### When the resume mode is set to "ON"

- While the disc you interrupted playback last time\* is still on the disc tray (\*by pressing ■ or by turning off the power).

Press ►.

The unit resumes playback from the position where playback was interrupted.

If you press ► then ■, the unit starts playback after the display window shows "RESUME PLAY."

Note that you cannot resume playback if you interrupted playback last time by opening the disc tray.

- **To play back a disc from the beginning (instead of the interrupted position)**

Do any of the following:

\* Press ■ while stopped, then press ►.


\* Turn on the unit by pressing DVD STANDBY/ON  $\odot/|$  (on the remote control unit) or STANDBY/ON  $\odot/|$  (on the front panel) then press ►.

#### NOTES

- If you use the "OTHERS" preference display to change the "RESUME" setting from "DISC RESUME" to "OFF" or "ON," you cannot resume playback of a disc whose "resuming" position is stored. However, if you again set "RESUME" to "DISC RESUME," you will then be able to resume playback of the disc.
- If you open the disc tray while RESUME mode is set to ON, the "resume" point will be cleared.
- The resume function does not work with Audio CD, MP3 and JPEG discs.
- In the case of a Video CD/SVCD disc with PBC function, the unit may resume playback from a point slightly earlier or later than the point where playback was interrupted.
- The unit may not resume playback exactly from the interrupt point.
- For a double-sided DVD VIDEO disc, the unit regards each side as a different disc. Therefore, to resume playback of such a disc, the disc must be loaded with the same side down.
- When the unit memorizes an interrupt point for a disc, it also memorizes Audio, Subtitle and Angle settings (regardless of whether "RESUME" is set to "DISC RESUME" or "ON").
- If you interrupt playback while the menu for a DVD VIDEO, SVCD or Video CD is shown on the TV screen, the unit may not correctly memorize the interrupt position, regardless of whether the "RESUME" mode is set to "ON" or "DISC RESUME."

## Variable speed playback

You can speed up or slow down playback, or advance the video frame by frame.

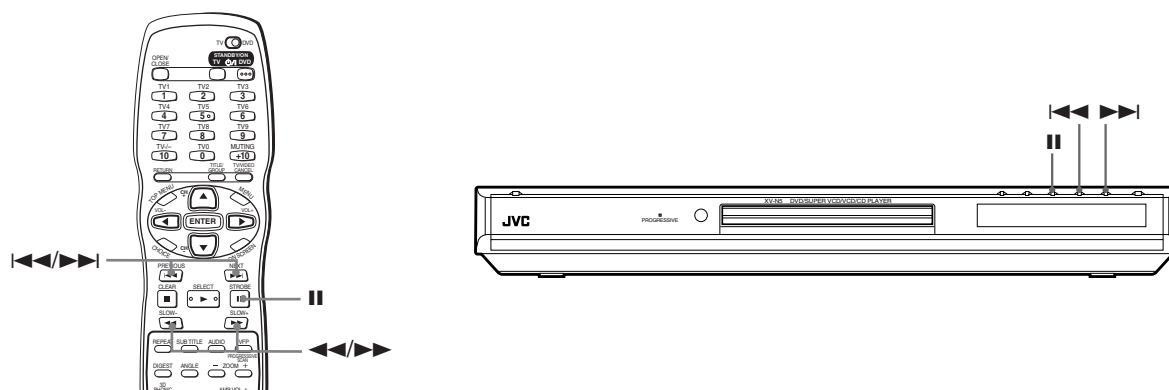

### To advance or reverse playback rapidly while monitoring

Available :    

- During playback

#### Method 1 (from the remote control unit only)

Press ◀◀ or ▶▶.

Each press of ◀◀ or ▶▶ decreases or increases the playback speed. You can select from 2 times, 5 times, 10 times, 20 times and 60 times normal speed.

Pressing ▶ returns the unit to normal playback.

#### Method 2

Hold down ◀◀ or ▶▶.

Holding down ▶▶ advances playback rapidly, while holding down ◀◀ reverses playback rapidly, at 5 times the normal speed. Releasing the button returns the unit to normal playback.

#### NOTES

- During rapid playback, the sound will be muted except when playing an Audio CD. When using rapid playback with an Audio CD, the sound will be played discontinuously.
- This function does not work for an MP3 disc.

### To advance a still picture frame by frame

Available :   

- While paused (still)

Press ⏏.

Each time you press ⏏, the still picture advances to the next frame.

Pressing ▶ returns to normal playback.

## To playback in slow motion

Available :   

You can play back video in slow-motion. You can select from 1/32 times, 1/16 times, 1/8 times, 1/4 times and 1/2 times normal speed.

● During playback

Press **II**, then use **◀◀/▶▶**.


To play forward slow motion, press **▶▶**, and to play reverse slow motion (for DVD VIDEO discs only), press **◀◀**. First, the unit plays the slowest speed, and each time you press the button, the playback speed increases. Pressing **▶** returns to normal playback. Pressing **II** pauses slow motion playback.

### **NOTES**

- The sound is muted during slow motion playback.
- Reverse slow motion playback is not possible for a Video CD and SVCD.

## To locate the beginning of the scene or song

You can locate the desired title or chapter (for DVD VIDEO), or track (for Audio CD/Video CD/SVCD) from which the unit starts playback.

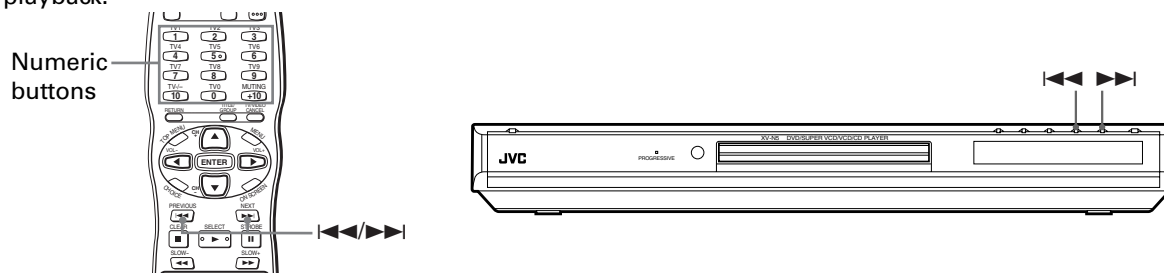

## To locate a desired selection using ◀◀ or ▶▶

Available : **DVD VIDEO** **Audio CD** **Video CD** **Super VCD**

- For DVD VIDEO: During playback
- For Audio CD: During playback or while stopped
- For Video CD/SVCD: During playback without PBC function

Press ◀◀ or ▶▶.

With an Audio CD, Video CD or SVCD, pressing the button skips a track. With a DVD VIDEO disc, pressing the button skips a chapter or title depending on the disc configuration.

The selection number appears in the display window on the front panel.

- To skip forward titles/chapters/tracks, press ▶▶ as many times as required.
- To skip to the beginning of the current track/title/chapter, press ◀◀ once.
- To skip back titles/chapters/tracks, press ◀◀ as many times as required.

### NOTES

- This function may not work with some DVD VIDEO discs.
- This function does not work during Video CD/SVCD playback with PBC function (see pages 5 and 24).

## To locate a desired selection using the numeric buttons

Available : **DVD VIDEO** **Audio CD** **Video CD** **Super VCD**

- For DVD VIDEO/Audio CD: During playback or while stopped
- For Video CD/SVCD: During playback without PBC function or while stopped

Use the numeric buttons to specify the number.

Depending on the disc type and the unit status, what is specified differs.

Unit status	Disc type	What is specified
While stopped	DVD VIDEO	title or chapter*
	Audio CD/ Video CD/SVCD	track
During playback	DVD VIDEO	chapter
	Audio CD/ Video CD/SVCD	track

\* If a disc contains more than one title, a title is specified. If a disc contains only one title, a chapter is specified.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:


To select 13: +10 → 3

To select 34: +10 → +10 → +10 → 4

To select 40: +10 → +10 → +10 → 10


The unit starts playback from the beginning of the selection. The selected title, chapter or track number appears in the display window on the front panel.

**NOTES**

- You can also specify the desired title during DVD VIDEO playback. See page 25 for details.
- During DVD VIDEO playback, if a menu is shown on the TV screen, the numeric buttons may be used for selecting an item in the menu.
- When  appears on the TV screen:  
The title, chapter or track you have selected is not contained in the disc.
- This function does not work during Video CD/SVCD playback with PBC function (see pages 5 and 24).

## Other convenient functions

You can check the playback status, as well as change the brightness of the display window. Also, you can move back the playback position 10 seconds from the current position.

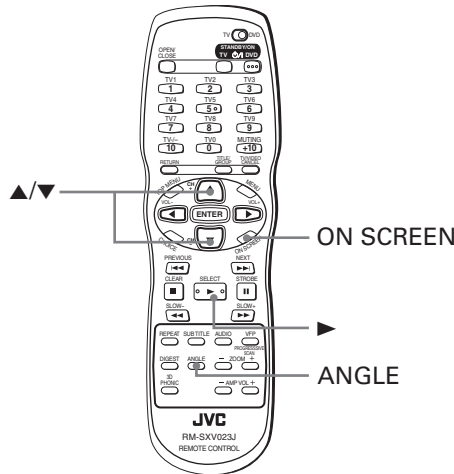

Basic operations

## To check the playback status

Available :    


You can see the current selection number (the title/chapter number for DVD VIDEO or track number for Audio CD/Video CD/SVCD), time information (the track or chapter time while stopped, or the elapsed track or chapter time during playback) and the transport status (stop, playback, pause etc.) on the TV screen.

- During playback or while stopped


Press ON SCREEN.

The playback status bar appears on the TV screen.


(for DVD VIDEO)

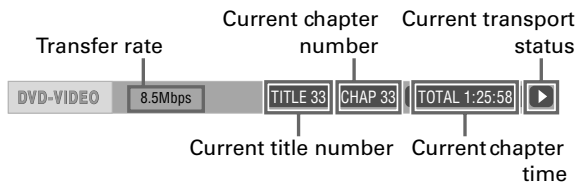


(for Audio CD)

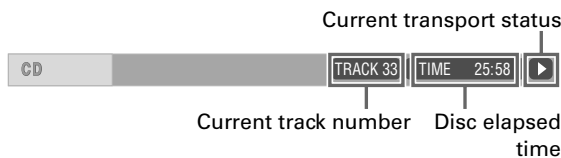

(for Video CD)

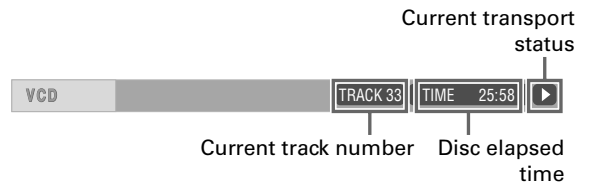



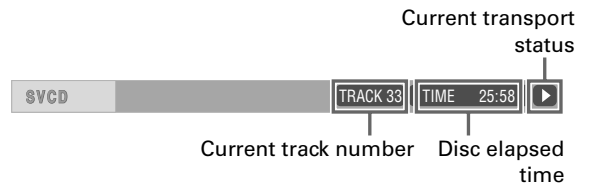


(for SVCD)





The indication on the rightmost end of the status bar shows the unit's transport status as follows:

Icon	Status
	Playback mode.
	Stop mode.
	Pause mode.
	Fast forward/backward playback mode.
	Slow motion playback mode.

Note that pressing ON SCREEN again brings up the menu bar under the status bar, from which you can access various functions.

(Example of the menu bar for DVD VIDEO)



See page 37 for details about the menu bar.

#### NOTE

- **To dismiss the status bar:**  
Press ON SCREEN until the status bar is dismissed.

## To move back the playback position during DVD VIDEO playback [One touch replay function]

Available : 


During playback of a DVD VIDEO disc, you can move back the playback position 10 seconds from the current position.

- During DVD VIDEO playback


Press .

The playback position moves back 10 seconds before the current position.

Note that this function works only within the same title, though it works between chapters.


 
If you press  within 10 seconds from the beginning of a title, playback starts from the beginning of the title.

#### NOTES

- **This function works only with DVD VIDEO discs.**
- **When  appears on the TV screen:**  
This function may not work with some DVD VIDEO discs.

## To change the brightness of the display window

You can dim the brightness of the display window.

 
Press  or  while holding down ANGLE.

You can select the display window brightness from four levels, or off. If the brightness is set to off, nothing will be shown on the display.

# Advanced operations

This chapter describes operations for various advanced functions of DVD VIDEO, Audio CD, Video CD and SVCD discs. For MP3 and JPEG disc playback, see the separate chapters beginning on pages 41 and 44.

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶, numeric and TV/VIDEO - CANCEL buttons for controlling the unit.


## Playing from a specific position on a disc

You can play a disc from the selected track, title or chapter, or from the specified time.

## To locate a desired scene from the DVD menu

Available :

DVD VIDEO discs generally have their own menus which show the disc contents. These menus contain various items such as titles of movies, names of songs, or artist information, and display them on the TV screen. You can locate a desired scene using the DVD menu.

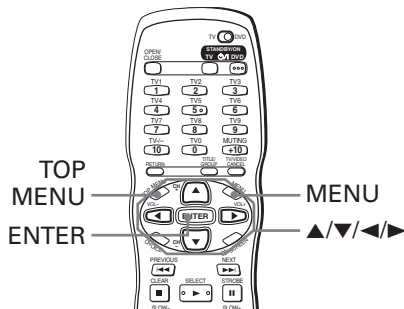


- Whenever a DVD VIDEO disc is loaded

### 1 Press TOP MENU or MENU.

The menu appears on the TV screen.

Example:

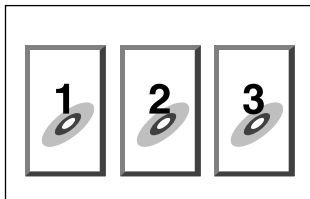

### About DVD VIDEO menu

Normally, a DVD VIDEO disc which contains more than one title may have a "title" menu which lists the titles. In this case, the menu appears on the TV screen when you press the TOP MENU button. Some DVD VIDEO discs may also have a different menu which appears when the MENU button is pressed.

See the instructions of each DVD VIDEO disc for its particular menu.

### 2 Use ▲/▼/◀/▶ to select a desired item, then press ENTER.

The unit starts playback of the selected item.



- With some discs, you can also select items by entering the corresponding number using the numeric buttons, which may cause the unit to automatically start playback.


## NOTES

- When appears on the TV screen when you press TOP MENU or MENU in step 1:  
The disc does not have an appropriate menu listing the titles.
- The MENU button does not work while stopped.

## To locate a desired scene from the menu of a Video CD/SVCD with PBC

Available :

Some Video CD/SVCD discs support the PBC function. PBC is an abbreviation of "PlayBack Control." A Video CD/SVCD disc recorded with PBC has its own menus, such as a list of the songs of the disc. You can locate a specific scene by using the PBC menu.

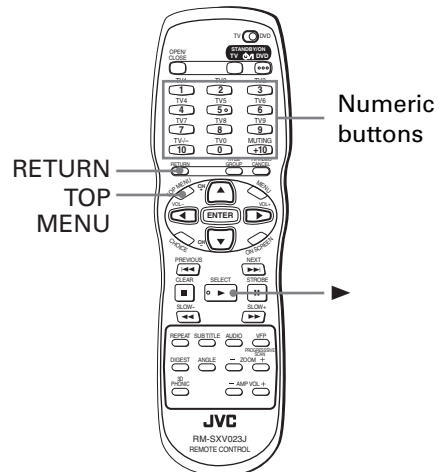


- When a Video CD/SVCD disc with PBC is stopped

### 1 Press ▶ or TOP MENU.

A disc menu appears on the TV screen (The PBC function is activated).

Example:

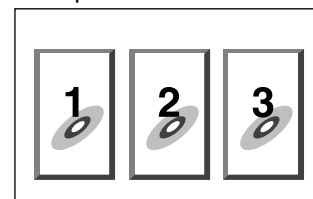

"PBC" is indicated in the display window on the front panel.

## 2 Use the numeric buttons to select the desired item.

- To select a number between 1 and 10:  
Press the corresponding button for the number.
- To select a number higher than 10:  
Use the +10 button.

Examples:

- To select 13: +10 → 3
- To select 34: +10 → +10 → +10 → 4
- To select 40: +10 → +10 → +10 → 10

The unit starts playback of the selected item. You can return to the menu by pressing the RETURN button.

When something like "NEXT" or "PREVIOUS" appears on the TV screen, the unit generally works as follows:

- Pressing ►► advances to the next page.
- Pressing ◀◀ returns to the previous page.
- \* The method of the operation may be different on different discs.


### Hints

- If you want to play a PBC-compatible Video CD/SVCD disc without activating the PBC function, start playback using the numeric buttons instead of ►. (See page 21.)
- To activate the PBC function when a PBC-compatible Video CD/SVCD disc is being played back without the PBC function, do any of the following:
  - \* Press TOP MENU or MENU.
  - \* Press ■ to stop playback, then press ►.

## To specify a desired title

Available : **DVD VIDEO**

While playing back a DVD VIDEO disc with more than one title, you can specify a desired title to be played using the numeric buttons.

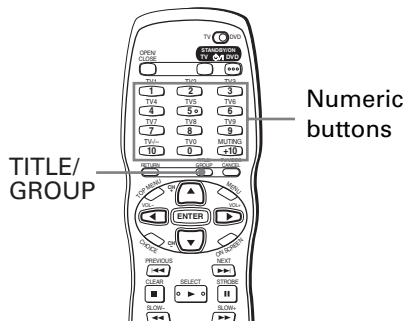


- During playback

### 1 Press TITLE/GROUP.

"-" is shown in the title display area of the display window.

(Display window example)

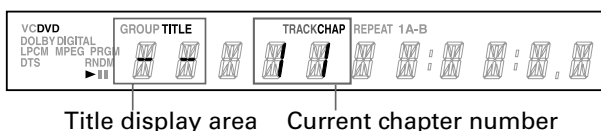

Title display area      Current chapter number

## 2 Use the numeric buttons to specify a title to be played.

- To select a number between 1 and 10:  
Press the corresponding button for the number.
- To select a number higher than 10:  
Use the +10 button.

Examples:

- To select 13: +10 → 3
- To select 34: +10 → +10 → +10 → 4
- To select 40: +10 → +10 → +10 → 10

The unit starts playback from the specified title.

### NOTE


- This function may not work with some DVD VIDEO discs.

## To locate a desired position in the current title or track [Time search]

Available : **DVD VIDEO** **Audio CD** **Video CD** **Super VCD**

You can play a disc from the desired position by specifying the time from the beginning of the current title (for DVD VIDEO), or the disc (for Audio CD/Video CD/SVCD) using the time search function.

Note that some DVD VIDEO discs do not contain time information, and the time search function cannot be used.

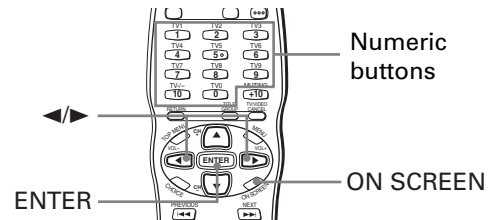

- For DVD VIDEO/Audio CD:

During playback or while stopped

- For Video CD/SVCD:

In any condition except Video CD/SVCD playback with PBC


### 1 Press ON SCREEN twice.

 The menu bar appears on the TV screen. (See page 37 for details about menu bar.)


### 2 Use ◀▶ to move [ ] to [ ] , then press ENTER.

The pull-down menu for entering time appears under the [ ] .

(Screen example for DVD VIDEO)



(Screen example for Audio CD)

 

### 3 Use the numeric buttons (0 to 10) to enter the desired time.

The specified time is displayed in the pull-down menu.

#### Hints


- "10" button works as "0" and "+10" button is not used with this function.
- You can specify the time in hour/minute/second format for DVD VIDEO discs, and in minute/second format for Audio CD and Video CD/SVCD discs.

### 4 Press ENTER.

The unit starts playback from the specified time.


#### • Example (for DVD VIDEO)

To playback from 2(H):34(M):00(S)

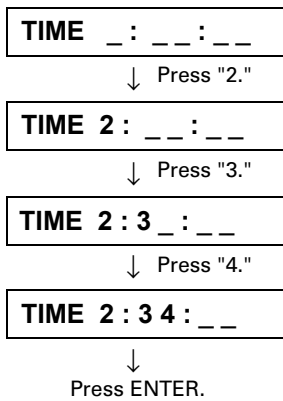

#### • Example (for Audio CD/Video CD/SVCD)

To playback from 23(M):40(S)

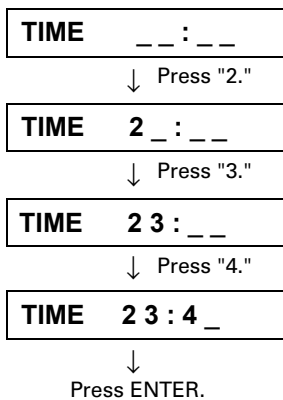


You do not have to press "0" to enter the trailing zeros (for the last two digits in the example above).

#### • To correct a mistake

Use ◀ repeatedly to move back to the digit where you entered a undesired numeral (the left most "-" digit), and reenter the correct time.

(Example : changing "2:35:\_" to "2:34:\_.")

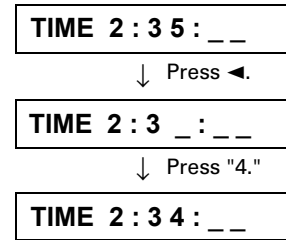


#### NOTES

- When ⓪ appears on the TV screen:  
The time you have selected is not contained on the disc, or the time search function does not work on the disc. Also note that the time search function does not work during Video CD/SVCD playback with the PBC function.
- To dismiss the menu bar:  
Press ON SCREEN.
- The time search function cannot be used during program playback.

## To locate a specific scene from the display [DIGEST]

Available : DVD VIDEO Video CD Super VCD

The unit can display the opening scene of each title or chapter on a DVD VIDEO or each track of a Video CD/SVCD. You can select a specific scene from those displayed on the TV screen.

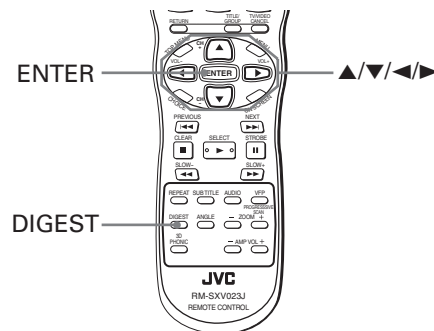

- For DVD VIDEO: During playback or while stopped
- For Video CD/SVCD: In any condition except Video CD/SVCD playback with PBC


### 1 Press DIGEST.

Up to nine opening scenes are displayed.



Depending on the disc type and whether the disc is being played back or not, the contents shown on the TV screen differ.

Disc type	Unit status	What is displayed
DVD VIDEO	While stopped	The opening scene of each title
	During playback	The opening scene of each chapter in the current title
Video CD/ SVCD	While stopped or during playback	The opening scene of each track

2 Use ▲/▼/◀/▶ to move  to select the desired scene.

If there are more than 9 scenes, the digest screen will have more than one page. In this case, pressing ▶▶ advances to the next page, while pressing ◀◀ returns to the previous page.



Selected scene

**Hints**

- When the lower right scene is selected, pressing ▶ advances to the next page if available. Similarly, when the upper left scene is selected, pressing ◀ returns to the previous page (if available).
- Depending on discs, it may take some time until all scenes of the current page appear on the TV screen. If you want to turn the page, you do not have to wait to press ◀◀ or ▶▶ until all scenes appear.

3 Press ENTER.

The unit starts playback from the selected scene.

**NOTE**

- With some discs, depending on the contents, it may take some time until all the scenes appear on the screen.


## Changing the playback order

You can play tracks on an Audio CD, Video CD or SVCD in a specific order or in random order.

### To playback in a specific order [Program play]

Available :   


By programming tracks, you can play up to 99 tracks in any order. You may program the same track more than once.

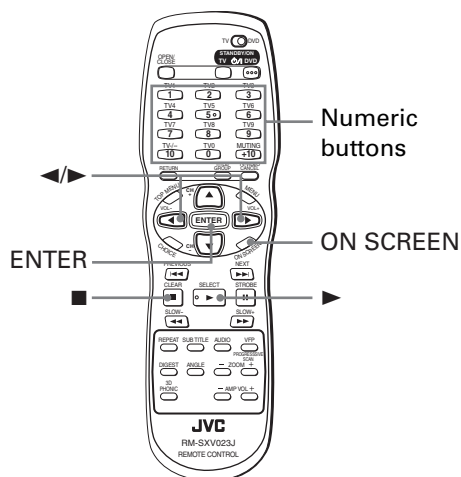


• While stopped

1 Press ON SCREEN twice.

The menu bar appears on the TV screen. (See page 37 for details about menu bar.)


2 Use ◀/▶ to move  to **PROG.**.

 (Screen example for Audio CD)



3 Press ENTER.

The program table appears instead of the menu bar. The PROGRAM indicator lights in the display window on the front panel.

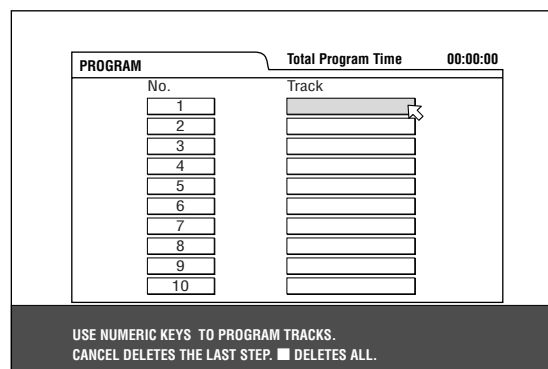

Advanced operations


#### 4 Specify tracks in the desired order using the numeric buttons.

- To select a number between 1 and 10:  
Press the corresponding button for the number.
- To select a number higher than 10:  
Use the +10 button.

Examples:

- To select 13: +10 → 3
- To select 34: +10 → +10 → +10 → 4
- To select 40: +10 → +10 → +10 → 10

Up to 99 tracks can be programmed. You may select the same track more than once. The total program time is shown at the right top of the program table.

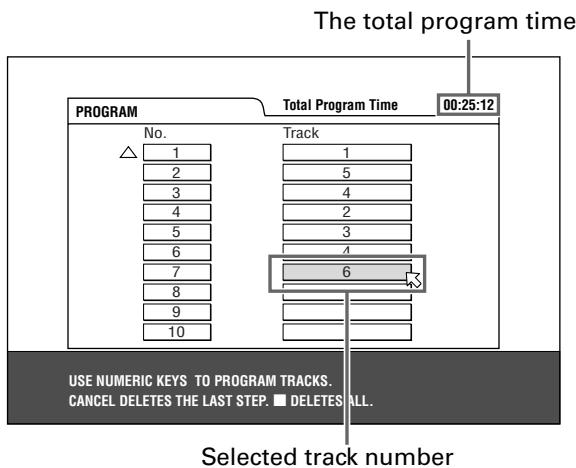

Selected track number

- **If you specify a wrong track**  
Use ▲/▼ to move to the wrong track, then press TV/VIDEO - CANCEL. The track is erased and the subsequent programmed tracks move up.
- **To clear the program while programming**  
Press ■.

#### 5 Press ► to start program playback.

With a Video CD/SVCD disc, the program table is automatically dismissed when the program playback starts. With an Audio CD disc, the program table remains on the TV screen during program playback. However, pressing the ON SCREEN button brings up the status bar. When all of the programmed tracks have finished playback, the unit stops and the program table appears again. Note that the program remains.

- **To check the program contents**  
During playback, press ■. Playback stops and the program table is shown. When the unit is playing back an Audio CD and the program table is not shown, you can bring up the table by carrying out steps 1 to 3. During Video CD/SVCD playback, you can check the program contents via the menu bar.
- **To quit program playback**  
Press ■. Note that the program remains.

- **To clear the program**  
While stopped and the program table is shown on the TV screen, press ■.  
All the programmed tracks are erased.
- **To exit the program mode**  
After clearing all programmed tracks, press ON SCREEN.  
The program table is dismissed and the status bar appears on the TV screen. The PROGRAM indicator in the display window disappears and the unit quits program playback mode.


#### NOTES

- **During program playback, you cannot edit the program contents.**
- **During program playback, pressing ► skips to the next selection of the program. Pressing ◀ returns to the beginning of the current selection.**
- **To dismiss the program table:**  
Press ON SCREEN. The program table is dismissed and the status bar is shown.
- **To dismiss the menu bar (and the status bar):**  
Press ON SCREEN.

### To playback in random order [Random play]


Available :

You can play tracks on a disc in random order by using the random function.

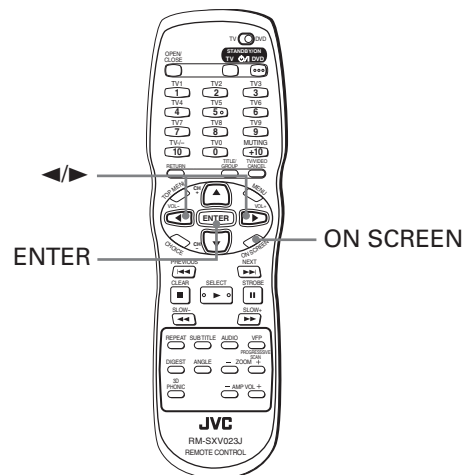

- While stopped
  - 1 Press ON SCREEN twice.  
The menu bar appears on the TV screen. (See page 37 for details about menu bar.)
  - 2 Use ◀/▶ to move to [RND].

 (Screen example for Audio CD)



### 3 Press ENTER.

The unit starts random playback.

With a Video CD/SVCD disc, the menu bar is automatically dismissed.

During random playback, the RANDOM indicator lights in the display window on the front panel.

After playing all tracks of the disc, the unit stops the disc and exits the random mode.

#### Hints

- The same track will not be played back more than once during random play.
- During random playback, if you bring up the menu bar and carry out steps 1 to 3 above, the unit cancels random playback mode and continues playback from the current selection in the recorded order.
- **To stop and quit random playback**  
Press ■. The unit stops playback and exits the random playback mode.

#### NOTE

- **To dismiss the menu bar:**  
Press ON SCREEN.

## Repeat playback

You can repeat playback of the current title/chapter (for DVD VIDEO), or current/all tracks (for Audio CD/Video CD/SVCD).

You can also repeat playback of a desired part.

### To repeat the current selection or all tracks [Repeat playback]



- For DVD VIDEO: During playback  
For Audio CD/Video CD/SVCD:  
In any condition except Video CD/SVCD playback with PBC

### 1 Press REPEAT.

Each time you press REPEAT, the repeat mode cycles among All repeat, Repeat 1 and off.

The selected mode is reflected in icons displayed in the front panel display window, as shown below.

If you press REPEAT while stopped, you need to press ► to start repeat playback.

**REPEAT:** Repeats the current title for DVD VIDEO or all tracks for Audio CD/Video CD/SVCD.

**REPEAT1:** Repeats the current chapter for DVD VIDEO or the current track for Audio CD/Video CD/SVCD.

No indication: The repeat mode is off.

(Display window)



Repeat mode indicators

A window which indicates the current repeat mode will be displayed on the TV screen.

The mode indication on the window is same as the one on the menu bar (see pages 38 and 39).

(Repeat mode example on the TV screen)



#### • To stop repeat playback

Press ■.

When a DVD VIDEO disc is set, the unit stops playback and quits the repeat mode.

When an Audio CD, Video CD or SVCD disc is set, the unit stops playback but does not quit the repeat mode.

#### • To quit repeat playback


Press REPEAT until the repeat mode indicator goes off in the display window.

**NOTES**

- You can also select the repeat mode via the menu bar. See pages 38 and 39.
- When the program playback mode is active with an Audio CD, Video CD or SVCD, the repeat mode changes in the same manner.  
Note that, however, in the "⏮" mode the unit repeats all the programmed tracks, instead of all tracks on the disc.
- During playback in the title/chapter/track repeat mode, if you skip the title/chapter/track using ◀◀/▶▶, etc., the destination title/chapter/track is repeated.
- If ⏸ appears when pressing REPEAT during DVD VIDEO playback.  
The disc content does not allow title or chapter repeat.
- Repeat playback function cannot be used during Video CD/SVCD playback with PBC function.

**To repeat a desired part [A-B repeat playback]**

Available : **DVD VIDEO** **Audio CD** **Video CD** **Super VCD**

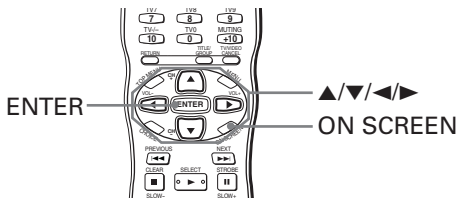

- During playback except Video CD/SVCD playback with PBC

**1** Press ON SCREEN twice.

The menu bar appears on the TV screen.  
(See page 37 for details about menu bar.)


**2** Use ◀/▶ to move to , then press ENTER.

The pull-down menu for repeat mode selection appears under the .

**3** Use ▲/▼ to select "A-B."

Depending on the disc type and unit's status the repeat mode changes as follows:

- During DVD VIDEO playback

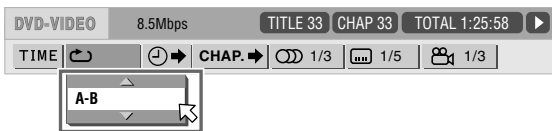


Selected repeat mode

- ➔ **CHAPTER** : current chapter repeat
- ↕
- TITLE** : current title repeat
- ↕
- A-B** : repeats a desired part (during playback only)
- ↕
- OFF**

- Audio CD/Video CD/SVCD

(Screen example for Audio CD)

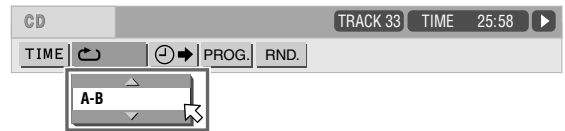

Selected repeat mode

- ➔ **TRACK** : current track repeat
- ↕
- ALL** : all track repeat
- ↕
- A-B** : repeats a desired part (during playback only)
- ↕
- OFF**

**4** Press ENTER at the beginning of the part you want to repeat (point A).

The pull-down menu disappears.

The repeat icon shows .

(Screen example for DVD VIDEO)



Repeat icon

**5** Press ENTER at the end of the part you want to repeat (point B).

The repeat icon show .

The unit locates "A" and starts repeat playback between "A" and "B."

- To quit A-B repeat playback

Press ENTER. The A-B repeat mode turns off, while the playback continues.



- Selecting "OFF" from the pull-down menu for repeat mode selection, or pressing ◀◀/▶▶ quits the A-B repeat mode and continues playback.
- You can also stop and quit A-B repeat mode by pressing ■.

**NOTES**

- The A and B points must be set in the same title/chapter/track.
- To dismiss the menu bar:  
Press ON SCREEN.
- If ⏸ appears when pressing ENTER during DVD VIDEO playback.  
The disc content does not allow you to repeat the selected part.



## Changing the language, sound and scene angle

With some DVD VIDEO discs, you can choose a desired subtitle language and/or audio language/sound, as well as a desired camera angle.


Similarly, you can choose a desired audio channel (or channel combination) of a Video CD/SVCD disc, as well as a subtitle channel of an SVCD disc.


### To select the subtitle language [SUBTITLE]

Available :  

Some DVD VIDEO and SVCD discs for movies, guides, etc. contain more than one subtitle language. You can choose a desired one from them.




- At the beginning of the part where the subtitles are recorded,  appears on the TV screen (except when the "ON SCREEN GUIDE" preference is set to "OFF"). See page 54 for details about "ON SCREEN GUIDE" preference.

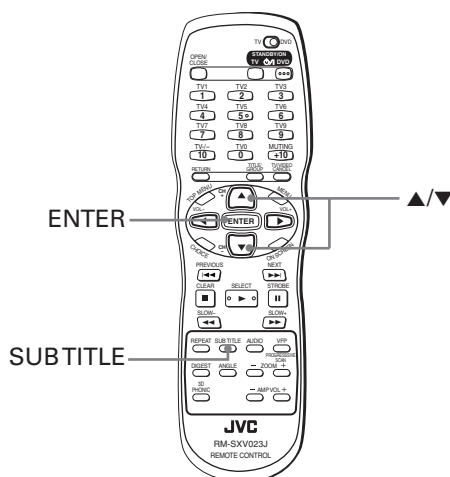

- During DVD VIDEO/SVCD playback (except when the status bar is shown)

### 1 Press SUBTITLE.

The Subtitle selection window appears on the TV screen.

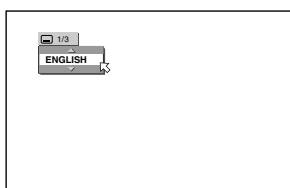

### 2 Use ▲/▼ or SUBTITLE to select the subtitle.


Each time you press ▲/▼ or SUBTITLE, the subtitle language changes.

See the following examples for subtitle selection.

#### • For DVD VIDEO

Pressing ▲/▼ or SUBTITLE cycles through the subtitles recorded on the disc.


Example:

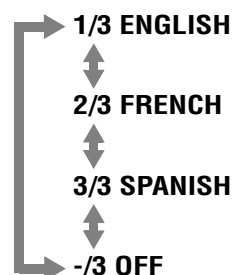

#### • For SVCD

An SVCD disc can have up to four subtitles.


Pressing ▲/▼ cycles through those channels as follows regardless of whether the subtitles are recorded or not.

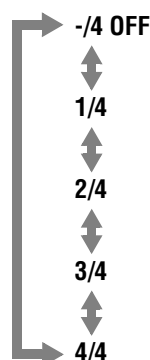

### 3 Press ENTER.

Subtitles are displayed in the selected language. The subtitle selection window is dismissed.

#### NOTES


- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Table of languages and their abbreviations" on page 50.
- The Subtitle selection window will automatically disappear if you do not change the subtitle for several seconds.
- When  appears on the TV screen (for DVD VIDEO disc):  
You cannot select the subtitle or no subtitle is recorded.
- You can also select the subtitle via the menu bar. See pages 38 and 40.


## To change the audio language or sound [AUDIO]

Available : **DVD VIDEO** **Video CD** **Super VCD**

The audio selection setting allows you to change the audio language of a movie, or to listen to karaoke with or without the vocal.


### Hints

- At the beginning of the part where multiple audio tracks are recorded,  appears on the TV screen (except when the "ON SCREEN GUIDE" preference is set to "OFF"). See page 54 for details about "ON SCREEN GUIDE" preference.

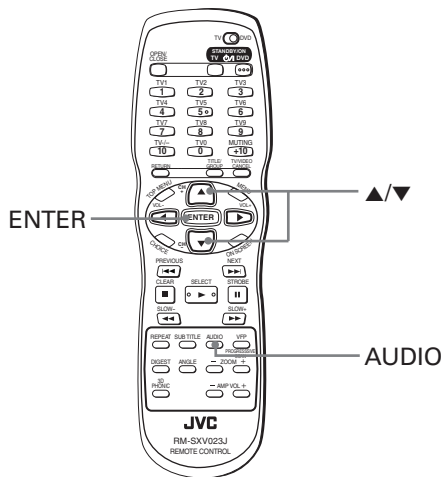


- For DVD VIDEO**  
Each time you press ▲/▼ or AUDIO, the audio language changes.

Example:

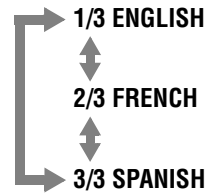

- For Video CD/SVCD**  
Each time you press ▲/▼ or AUDIO, the playback audio changes as follows.

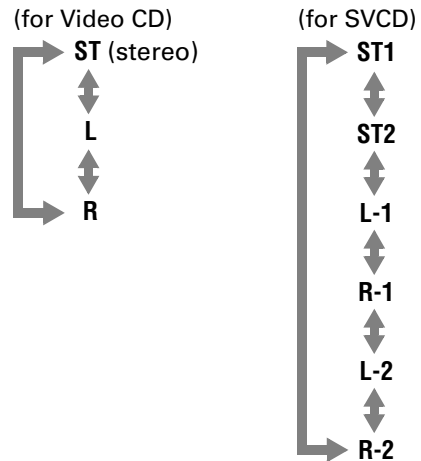


Advanced operations

- During playback (except when the status bar is shown)

### 1 Press AUDIO.

The audio selection window appears on the TV screen.

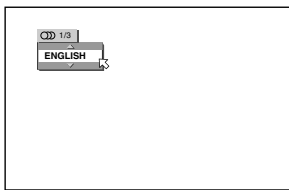


### 2 Use ▲/▼ or AUDIO to select the desired audio.

Each time you press ▲/▼ or AUDIO, the audio changes.  
See the following examples for audio selection.


### 3 Press ENTER.

You can hear the selected audio.  
The audio selection window is dismissed.
 
#### NOTES


- For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Table of languages and their abbreviations" on page 50.
- The Audio selection window will automatically disappear if you do not change the audio for several seconds.
- When  appears on the TV screen (for a DVD VIDEO disc):  
You cannot select the audio.
- If only one audio track is recorded, you cannot change the audio selection.
- You can also select the audio via the menu bar. See pages 38 and 40.


## To select a scene angle of DVD VIDEO [ANGLE]

Available : 

You can enjoy a variety of scene angles if the DVD VIDEO disc contains "multi-angle" parts, where multiple cameras were used to shoot the same scene from different angles.



- At the beginning of a "multi-angle" part,  appears on the TV screen (except when the "ON SCREEN GUIDE" preference is set to "OFF"). See page 54 for details about "ON SCREEN GUIDE" preference.

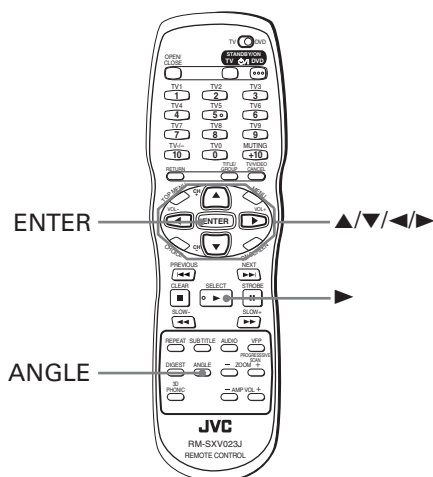


### From the Angle selection window

- During DVD VIDEO playback (except when the status bar is shown)

#### 1 Press ANGLE.


The Angle selection window appears on the TV screen.

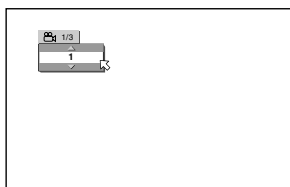

#### 2 Use ANGLE or ▲/▼ to select the desired angle.

Each time you press ANGLE or ▲/▼, the angle changes.

 Example:



#### 3 Press ENTER.


You can see the picture from the selected angle. The angle selection window is dismissed.

### From the angle list

- During DVD VIDEO playback

#### 1 Press and hold ANGLE for more than 1 second.

Up to nine camera angles recorded on a disc appear on the TV screen.

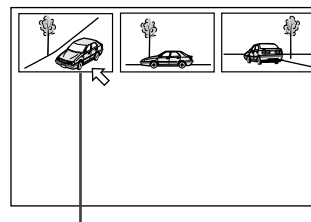


The selected camera angle

#### 2 Use ▲/▼/◀/▶ to select the desired angle.
 
#### 3 Press ENTER or ▶.

The unit starts playback using the selected angle on the full-sized screen.

### NOTES


- The Angle selection window will automatically disappear if you do not change the angle for several seconds.
- When  appears on the TV screen in step 1: The current scene is not recorded from multiple angles.
- During the operation from the angle list display, audio is muted.
- You can also select the angle via the menu bar. See page 39.

# Special picture playback and picture/sound effect

You can view continuous still images, or zoom in or out of the picture. You can also adjust the picture characteristics, as well as simulate surround sound using a stereo system.

## To display continuous still pictures [STROBE]

Available : **DVD VIDEO** **Video CD** **Super VCD**

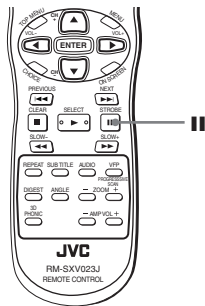

- During playback

**1** At the point where you want to begin viewing continuous still images, press **||**.

The unit pauses playback.


**2** Press and hold **||** for more than 1 second.

Nine copies of the same frame (still images) will appear on the TV screen.

You can advance these frames using the following step.

**3** Press **||** once.

The image in the middle of the top row shows the next frame of video after the one on the upper left.

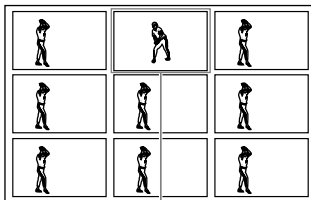

Advanced frame

Each press of **||** advances the video by one frame.

- **To return to the normal screen**


Press and hold **||** for more than 1 second to return to the pause mode, then press **▶**.

**NOTE**

- If you press and hold **||** for more than 1 second during playback, nine still pictures also appear but they advance at normal playback speed (while the sound is muted).

## To zoom in or out pictures [ZOOM]

Available : **DVD VIDEO** **Video CD** **Super VCD**

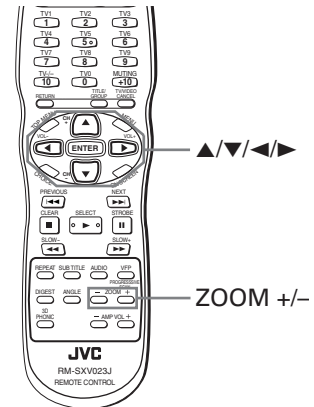



- During playback or while paused

**1** Press ZOOM + or -.

Pressing ZOOM + causes the unit to zoom in on the image, and pressing ZOOM - causes the unit to zoom out.

Each time you press ZOOM +, the magnification is doubled (up to 1024 times).

Each time you press ZOOM -, the magnification is halved (down to 1/8 times).

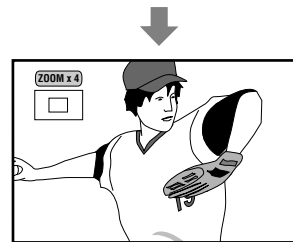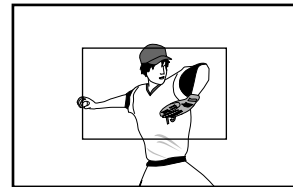


At the top left of the screen, the information for the current magnification appears for 5 seconds. While zoomed in, an indication of the zoomed image position also is displayed. The next step can be used to move the image position.

**2** Use **▲/▼/◀/▶** to move the zoomed position.

If no button pressed for 5 seconds, the information for the current magnification disappears.

To display the information, press ZOOM +/- or **▲/▼/◀/▶** again.

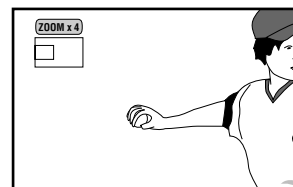


**NOTES**

- To return to normal playback.  
Press ENTER.
- While zoomed, the picture may look coarse.

**To adjust the picture character [VFP]**

Available : **DVD VIDEO** **Video CD** **Super VCD**

The VFP (Video Fine Processor) function allows you to adjust the picture character according to the type of programming, picture tone or personal preferences.

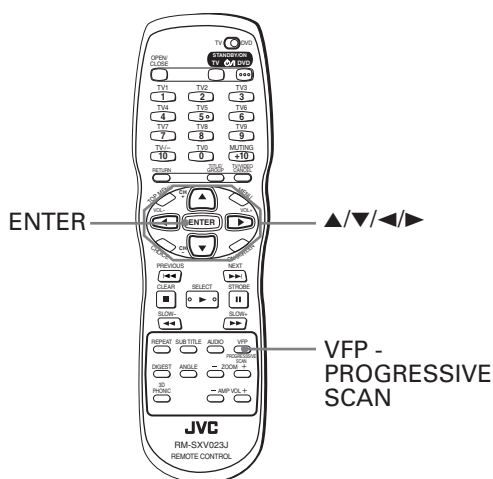

- During playback


**1 Press VFP - PROGRESSIVE SCAN.**

The VFP mode selection window appears on the TV screen.

**2 Use ◀/▶ to select the desired preset.**

Each time you press the button, the VFP mode changes as follows.

Set the video type most suitable to the current program or the room conditions.

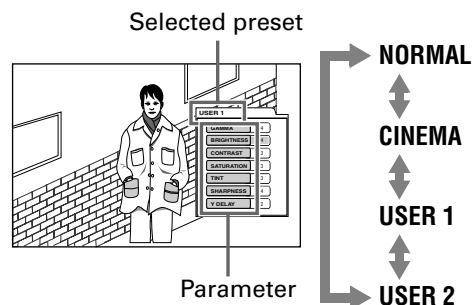

"NORMAL" is suitable for watching TV in a general room. "CINEMA" is suitable for watching a movie software in a room with suppressed light.

They are factory presets and you cannot change parameters for them.


If you select "USER 1" or "USER 2," you can adjust parameters that affect the picture character and store the settings as a user preset. See the next step.

**3 To define a user setting, select a parameter to be edited using ▲/▼ from the following.**

- **GAMMA**  
Controls the brightness of a shaded portion without changing the brightness of the entire picture.  
This control is optimum when you adjust the pictures of software which generates subdued black in a bright room.  
The setting range is +4 to -4.
- **BRIGHTNESS**  
Controls the brightness of the screen.  
The setting range is +16 to -16.
- **CONTRAST**  
Controls the contrast of the screen.  
The setting range is +16 to -16.
- **SATURATION**  
Controls the color depth of the screen.  
The setting range is +16 to -16.
- **TINT**  
Controls the tint of the screen.  
Use the appearance of a natural skin tone as a guideline.  
The setting range is +16 to -16.
- **SHARPNESS**  
Controls the sharpness of the screen.  
The setting range is +3 to 0.
- **Y DELAY**  
Controls the color gap of the screen.  
The setting range is +2 to -2.

**4 Press ENTER.**

A window for setting parameters appears instead of the VFP mode selection window.

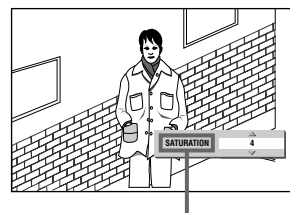**5 Adjust the level of the parameter using ▲/▼.**

The higher value enhances the effect.

**6 Press ENTER.**

The parameter is set and the VFP mode selection window appears again.

Repeat steps 3 to 6 if you want to set other parameters.


**NOTES**

- The number of setting steps varies for different parameters.
- To dismiss the VFP mode selection window:  
Press VFP - PROGRESSIVE SCAN.
- The window for VFP mode selection and parameter setting disappears if no operation is made for about 10 seconds.

**To simulate surround sound [3D PHONIC]**

Available : **DVD VIDEO**

Using the 3D PHONIC function, you can get a simulated surround effect from your stereo system.

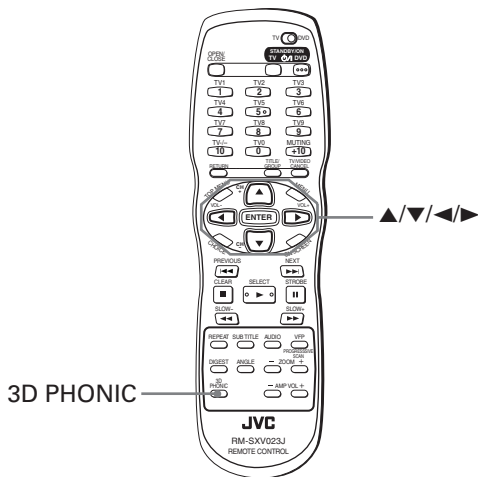

Advanced operations


● During playback

**1** Press 3D PHONIC.

The 3D PHONIC window appears on the TV screen.

**2** Select the desired mode by using ◀▶.

Each time you press the button, the 3D PHONIC mode changes as follows:

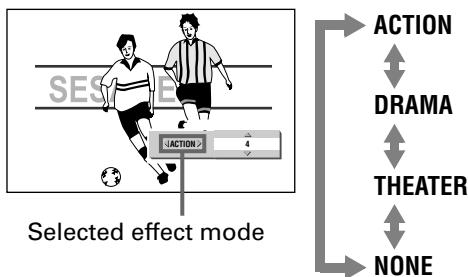


Selected effect mode

- **ACTION**  
Suitable for action movies and sports programs in which the sound source moves.
- **DRAMA**  
Natural and warm sound. You can enjoy movies in a relaxed mood.
- **THEATER**  
You can enjoy sound effects like in a major theater in Hollywood.

**3** Press ▲/▼ to adjust the effect level.

You can set the effect level from "1" to "5." The higher value enhances the effect.

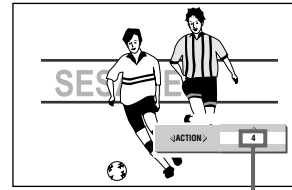

Effect level


**NOTES**

- To dismiss the 3D PHONIC window:  
Press 3D PHONIC.
- The 3D PHONIC window disappears if no operation is made for about 10 seconds.
- The 3D PHONIC function works correctly only when playing back a DVD VIDEO disc recorded with Dolby Digital. Pressing the 3D PHONIC button will have no effect with other content.
- When playing back a DVD VIDEO disc recorded with Dolby Digital that does not contain the rear signal, you can change the 3D PHONIC setting, but you will not be able to achieve a correct 3D effect.
- The 3D PHONIC function does not affect the Dolby Digital bitstream signal from the DIGITAL OUT jack.
- When the 3D PHONIC function is active, the "ANALOG DOWN MIX" and "D. RANGE COMPRESSION" settings in the "AUDIO" setting display are disabled.

# Menu bar functions

This section describes the functions you can perform via the menu bar.  
The available menu bar functions differ depending on the disc type.

## To bring up the menu bar

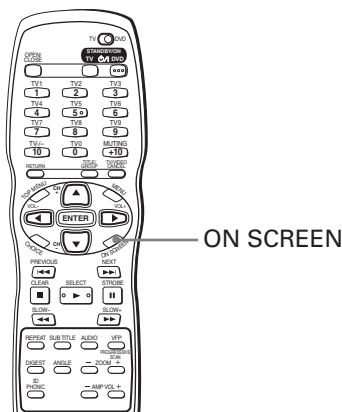

- When a disc is inserted

### 1 Press ON SCREEN.

A status bar for the type of disc loaded will appear on the TV screen.  
See page 22 about the status bar.

(Example of the status bar for DVD VIDEO)



 
### 2 Press ON SCREEN again.

A menu bar for the type of disc loaded will appear together with the status bar. The menu bar includes some icons which indicate their functions.


(for DVD VIDEO)




(for Audio CD)



(for Video CD)

 


(for SVCD)

 

### NOTE

- **To dismiss the menu bar (and status bar):**  
Press ON SCREEN.

# Basic operation procedure

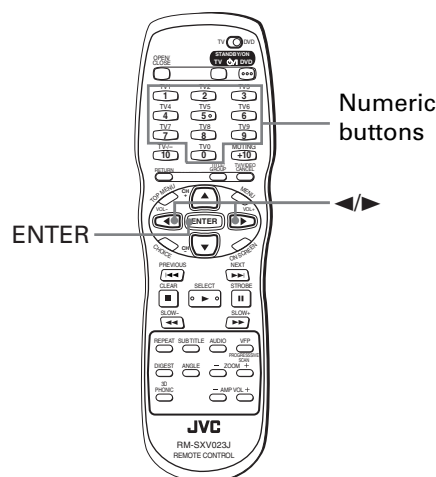

- 1 Use to select the icon you want to work with.

The selected icon is pointed to by .

- 2 Press ENTER.

With many icons, an appropriate pull-down window appears, however, there are some exceptions.


- See the following pages for details about each function.
- Note that some functions are not available during playback. (You cannot move to the associated icon when it is not available.)

### NOTES

- **When appears on the TV screen:**  
You cannot use the selected function because of disc contents.
- **A mark or text on the menu icon for the function or mode currently selected is shown in blue.**

Advanced operations


## Menu bar functions for DVD VIDEO

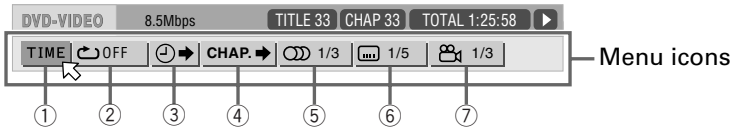


The following table shows the menu bar functions available for DVD VIDEO. Note that, in the description of the operation column, we assume the associated icon is selected.

Selected Icon	Operation	Note
<p>① <b>TIME</b></p> <p><b>Time mode selection</b> (During playback only)</p> <p>Selects the time mode shown in the display window on the front panel and in the status bar.</p>	<p>Press ENTER to select the time mode from the following.  <b>TOTAL</b> → <b>T.REM</b> → <b>TIME</b> → <b>REM</b> → Return to initial</p> <ul style="list-style-type: none"> <li>• <b>TOTAL:</b> Current title elapsed time</li> <li>• <b>T.REM:</b> Current title remaining time</li> <li>• <b>TIME:</b> Current chapter elapsed time</li> <li>• <b>REM:</b> Current chapter remaining time</li> </ul>	<ul style="list-style-type: none"> <li>• If a disc has only one title and one chapter, "TOTAL" and "TIME" show the same value.</li> </ul>
<p>② <b>Repeat</b></p> <p><b>Repeat mode</b> (During playback only)</p> <p>Selects the repeat mode.</p>	<ol style="list-style-type: none"> <li>1 Press ENTER to open the pull-down window.</li> <li>2 Use ▲/▼ to select the repeat mode from the following.  <b>CHAPTER</b> ↔ <b>TITLE</b> ↔ <b>A-B</b> ↔ <b>OFF</b> <ul style="list-style-type: none"> <li>• <b>CHAPTER:</b> Current chapter repeat</li> <li>• <b>TITLE:</b> Current title repeat</li> <li>• <b>A-B:</b> Repeats a desired part (A-B repeat)</li> </ul> </li> <li>3 Press ENTER to make the selected repeat function active. (See pages 29 and 30 for details about repeat function.)</li> </ol>	<ul style="list-style-type: none"> <li>• If you select "OFF" during repeat playback, the unit continues playback without repeating.</li> <li>• For information on subsequent operations for A-B repeat, see page 30.</li> </ul>
<p>③ <b>Time search</b></p> <p>Specifies a time from the beginning of the current title as the point from which to begin playback.</p>	<ol style="list-style-type: none"> <li>1 Press ENTER to open the pull-down window.</li> <li>2 Use numeric buttons to enter a desired time.</li> <li>3 Press ENTER to begin playback from the specified time. (See page 25 for details about the time search.)</li> </ol>	<hr/>
<p>④ <b>CHAP.</b></p> <p><b>Chapter search</b> (During playback only)</p> <p>Specifies a desired chapter to be played back from.</p>	<ol style="list-style-type: none"> <li>1 Press ENTER to open the pull-down window.</li> <li>2 Use numeric buttons to enter a desired chapter number. <ul style="list-style-type: none"> <li>• For example, to enter "12," press "1" then "2."</li> </ul> </li> <li>3 Press ENTER to begin playback from the specified chapter. <ul style="list-style-type: none"> <li>• <b>When the chapter number is incorrect:</b> Overwrite the incorrect number with the correct number.</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>• The "10" and "+10" buttons are not used in this function.</li> <li>• You can also locate a desired chapter directly by specifying the chapter number using the numeric buttons during playback. See page 21.</li> </ul>
<p>⑤ <b>Audio selection</b> (During playback only)</p> <p>Selects the audio language or sound track.</p>	<ol style="list-style-type: none"> <li>1 Press ENTER to open the pull-down window.</li> <li>2 Use ▲/▼ to select a desired audio language or sound track.  <b>Example:</b>  <b>1/3 ENGLISH</b> ↔ <b>2/3 FRENCH</b> ↔ <b>3/3 SPANISH</b></li> <li>3 Press ENTER to begin playback with the selected audio. (See page 32 for details about audio selection.)</li> </ol>	<ul style="list-style-type: none"> <li>• For DVD VIDEO, the selected language may be abbreviated on the TV screen. See "Table of languages and their abbreviations" on page 50.</li> </ul>
<p>⑥ <b>Subtitle selection</b> (During playback only)</p> <p>Selects the subtitle language.</p>	<ol style="list-style-type: none"> <li>1 Press ENTER to open the pull-down window.</li> <li>2 Use ▲/▼ to select a desired subtitle language.  <b>Example:</b>  <b>1/3 ENGLISH</b> ↔ <b>2/3 FRENCH</b> ↔ <b>3/3 SPANISH</b> ↔ <b>-3 OFF</b></li> <li>3 Press ENTER to begin playback with the selected subtitle. (See page 31 for details about subtitle selection.)</li> </ol>	







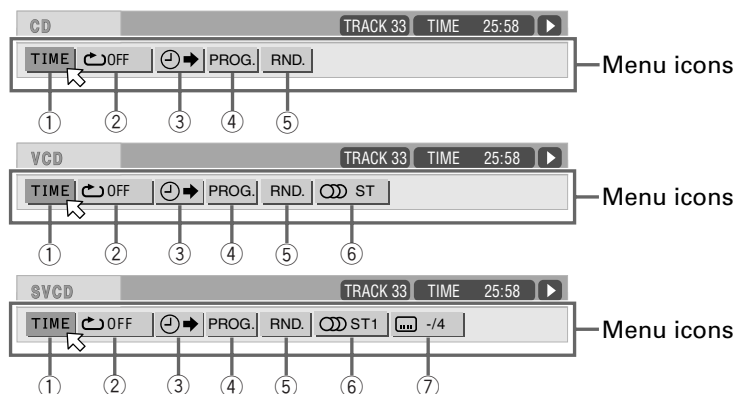


Selected Icon	Operation	Note
<p>⑦ </p> <p><b>Angle selection</b> (during playback only)</p> <p>Selects a desired scene angle in a multi-angle part.</p>	<p>1 Press ENTER to open the pull-down window.</p> <p>2 Use ▲/▼ to select a scene angle.</p> <p><b>Example:</b> 1/3 ↔ 2/3 ↔ 3/3</p> <p>3 Press ENTER to begin playback with the selected scene angle. (See page 33 for details about angle selection.)</p>	<hr/>

## Menu bar functions for Audio CD/Video CD/SVCD



The following table shows the menu bar functions available for Audio CD/Video CD/SVCD. Note that, in the description of the operation column, we assume the associated icon is selected.

Selected Icon	Operation	Note
<p>① </p> <p><b>Time mode selection</b></p> <p>Selects the time mode shown in the display window on the front panel and in the status bar.</p>	<p>Press ENTER to select the time mode among the followings.</p> <p><b>TIME → REM → TOTAL → T.REM → Return to initial</b></p> <ul style="list-style-type: none"> <li>• <b>TIME:</b> Current track elapsed time</li> <li>• <b>REM:</b> Current track remaining time</li> <li>• <b>TOTAL:</b> Disc elapsed time</li> <li>• <b>T.REM:</b> Disc remaining time</li> </ul>	<ul style="list-style-type: none"> <li>• When you have selected "REM" and the disc is stopped, you can change the track by pressing ◀◀ or ▶▶.</li> <li>• While the disc is stopped, "REM" shows the total time of the current track, and "T.REM" shows the total time of the disc.</li> </ul>
<p>② </p> <p><b>Repeat mode</b></p> <p>Selects the repeat mode.</p>	<p>1 Press ENTER to open the pull-down window.</p> <p>2 Use ▲/▼ to select the repeat mode from the following.</p> <p><b>OFF ↔ TRACK ↔ ALL ↔ A-B ↔ OFF</b></p> <ul style="list-style-type: none"> <li>• <b>TRACK:</b> Current track repeat</li> <li>• <b>ALL:</b> All track repeat</li> <li>• <b>A-B:</b> Repeats a desired part (A-B repeat)</li> </ul> <p>3 Press ENTER to make the selected repeat function active. (See pages 29 and 30 for details about repeat function.)</p>	<ul style="list-style-type: none"> <li>• If you select "OFF" during repeat playback, the unit continues playback without repeating.</li> <li>• For information on subsequent operations for A-B repeat, see page 30.</li> </ul>
<p>③ </p> <p><b>Time search</b> (Except during Video CD/SVCD playback with PBC)</p> <p>Specifies a time from the beginning of the current title as the point from which to begin playback.</p>	<p>1 Press ENTER to open the pull-down window.</p> <p>2 Use numeric buttons to enter a desired time.</p> <p>3 Press ENTER to begin playback from the specified time. (See page 25 for details about the time search.)</p>	<ul style="list-style-type: none"> <li>• This function cannot be used during program playback.</li> </ul>
<p>④ </p> <p><b>Program</b> (While stopped only)</p> <p>Specifies the playback order of tracks.</p>	<p>1 Press ENTER to bring up the program table.</p> <p>2 Specify tracks in the desired order using the numeric buttons.</p> <p>3 Press ▶ to start program playback. (See page 27 for details about the program.)</p>	<hr/>

Selected Icon	Operation	Note
⑤  <b>Random</b> (While stopped only) Activates random playback.	1 Press ENTER to activate random playback. (See page 28 for details about random.)	<hr/>
⑥  <b>Audio selection</b> (During Video CD/SVCD playback only) Selects the audio channel(s).	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired audio channel(s). 3 Press ENTER to playback with the selected audio channel(s). (See page 32 for details about audio selection.)	<hr/>
⑦  <b>Subtitle selection</b> (During SVCD playback only) Selects the subtitle.	1 Press ENTER to open the pull-down window. 2 Use ▲/▼ to select a desired subtitle. 3 Press ENTER to begin playback with the selected subtitle. (See page 31 for details about subtitle selection.)	<hr/>

# MP3 disc playback

The unit can play back MP3 files on a personally recorded CD-R/RW disc or commercial CD. We refer to a disc that contains MP3 file as an "MP3 disc" in this manual.

Though functions available with MP3 discs are limited, operations for the available functions are similar to those for Audio CD discs.

Note that if a disc contains both of MP3 and JPEG files, you can only play back files of the type selected by the MP3/JPEG setting in the PICTURE preference display (see page 52).

## What is MP3?

"MP3" stands for "MPEG Audio Layer-3," and is a part of the MPEG standard. It can store high quality stereo audio using very little space by only saving the audible sounds and discarding the sounds your ears won't pick up. A CD can store up to around 10 hours of MP3 audio, which is nearly 10 times as much as an Audio CD.

### NOTE




Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.

## About MP3 discs

On an MP3 disc, each song is recorded as a file. Files are sometimes grouped into folders by artists, album, category, etc. Folders can exist within other folders, creating hierarchical layers of folders. If you are familiar with personal computers, the hierarchical file and folder structure of an MP3 disc will be familiar to you as well. This unit simplifies the hierarchical structure of a disc and manages files and folders using "Tracks" and "Groups," in the following manner.

- Each file is regarded as a Track.
- A folder which has one or more files (Tracks) is regarded as a Group.
- A folder which does not directly contain any files is ignored.
- Files which do not belong to any folder are grouped into "Group 1."
- The unit recognizes up to 150 Tracks per Group, and up to 99 Groups per disc. It ignores those exceeding the maximum numbers and cannot play them back. If there are files other than MP3 files, they also count against the 150-file total.

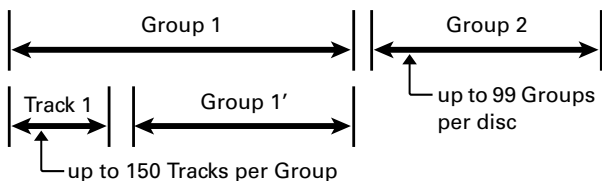

## NOTES for making your own MP3 disc using a CD-R/CD-RW disc:

- Select "ISO 9660" as the disc format.
- Finalize the disc after completing recording.
- We recommend you record your material at a 44.1 kHz sampling rate, using the 128 kbps data transfer rate.


## NOTES

- The unit does not support "packet writing" discs.
- Some tracks on an MP3 disc are skipped and may not be played back normally because of the disc configuration or characteristics determined by the writing (encoding) software and hardware used for recording. Such symptoms may occur regardless of whether using a disc you recorded or using a commercially available disc.
- The unit does not support the ID3 tag.
- If the disc is recorded with multiple sessions, the unit supports up to five sessions.
- Some discs may not play due to disc characteristics or recording conditions.
- Programmed and random playback functions do not work with MP3 discs.
- The unit only can play back Tracks with the following file extensions; ".MP3," ".Mp3," ".mp3" and ".mP3."
- Time required for reading the disc contents may vary for different discs, depending on the numbers of Groups (folders) and Tracks (files) recorded, etc.
- While an MP3 disc is loaded, you cannot bring up any preference display (see page 49).

## Operations

### Basic operations

Available : **MP3**

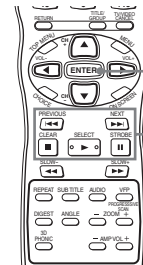

Basic control buttons

The following table shows the basic functions of the basic control buttons.


Button	Functions
	Starts playback while stopped.
	Starts playback while stopped or paused.
	Stops playback.
	Pauses playback.
	Skips back or forward a Track in the Group* during playback. Selects the previous or next Track in the Group* while stopped.

\*You can skip a Track across a Group.

- If you press ► during playback, or press ■ to stop playback followed by ►, the unit starts playback from the beginning of the current track.
- The ▲/▼ buttons work the same as the ◀/▶ buttons.

**NOTES**

 - The current Group and Track number are shown on the display window in the following manner.




Current Group number      Current Track number      Current Track elapsed time

- You cannot advance or reverse playback of an MP3 disc rapidly.
- You cannot see any other time information but the current track elapsed time.


## Selecting the desired Group and Track

Available : **MP3**

When loading an MP3 disc, after the disc contents are read, the MP3 CONTROL display automatically appears on the TV screen.

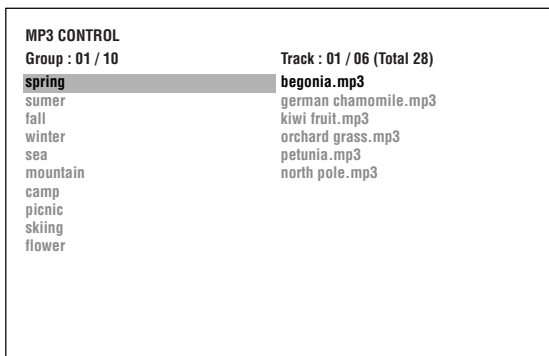

You can specify the desired Group/Track from the display using the following procedure.

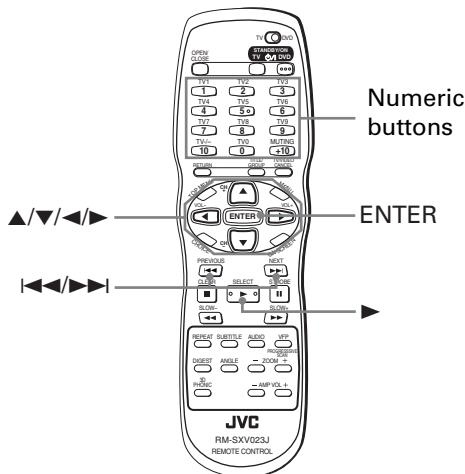

- When the MP3 CONTROL display is shown.

**1** Make sure that the black (cursor) bar is in the left (Group) column.

If it is in the right column, press ◀ to move it to the left column.

**2** Move the bar to a desired Group using ▲/▼.

On the right column, Tracks in the selected Group are shown.

When selecting a Group, Track 1 is initially selected (highlighted).

**3** Select a desired Track using ◀◀/▶▶, then press ENTER or ▶.

or

Use the numeric buttons to directly specify a desired Track number.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.


Examples:

To select 13: +10 → 3

To select 34: +10 → +10 → +10 → 4

To select 40: +10 → +10 → +10 → 10

The unit starts playback from the selected Track. In the MP3 CONTROL display and the display window on the front panel, you can see the current Group and Track numbers, as well as Track elapsed time.

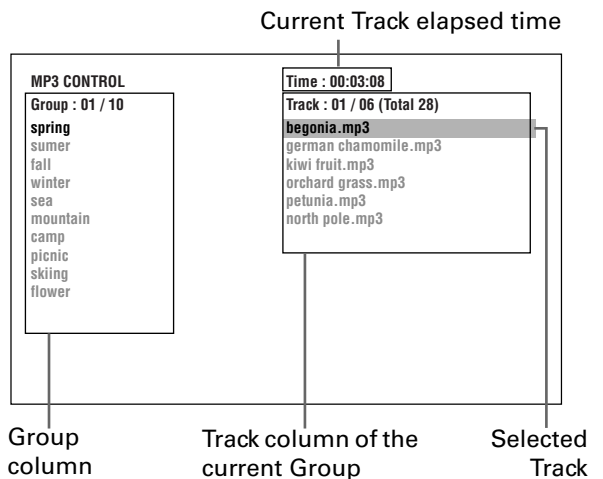

**Hints**

- You can also select a desired Track by pressing ▶ to move the black bar to the right (Track) column then using ▲/▼.


**NOTES**

- If a MP3 file name includes any 2-byte character, the unit may not show the file name correctly.
- Only MP3 files are shown on the MP3 CONTROL display.
- The order of Groups/Tracks shown in the MP3 CONTROL display may differ from the order shown on your personal computer when you set the disc on your computer.

## Direct selection

Available : **MP3**

You can select a desired Group directly by specifying the Group number.

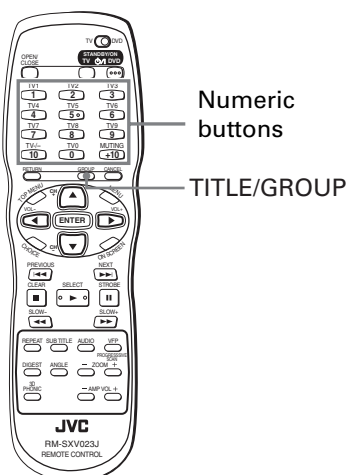


- During playback or while stopped

### 1 Press TITLE/GROUP.

"--" is shown in the Group display area of the display window.

(Front panel display window example)

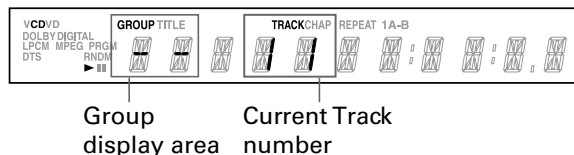

### 2 Use the numeric buttons to specify a desired Group number.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:

- To select 13: +10 → 3
- To select 34: +10 → +10 → +10 → 4
- To select 40: +10 → +10 → +10 → 10

Specify the Group number within several seconds after pressing TITLE/GROUP (i.e. while the display window shows "--" for the Group number, instead of the current Group number).

The unit starts playback from Track 1 of the selected Group.


### 3 Use the numeric buttons to specify a desired Track number.

The unit starts playback from the specified Track. You can also use ◀◀/▶▶ or ▲/▼ to specify a track, instead of the numeric buttons.

## Repeat playback

Available : **MP3**

You can repeat playback of the current Track, current Group or all MP3 files on the disc.

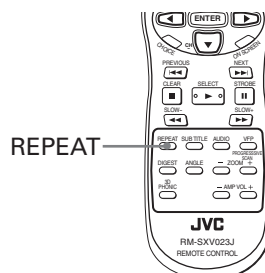

- During playback or while stopped


### 1 Press REPEAT.

Each time you press REPEAT, the repeat mode changes as follows. You can see the current mode via the display window as well as the MP3 CONTROL display.

If you press REPEAT while stopped, you need to press ENTER or ▶ to start repeat playback.

MP3 CONTROL display	Display Window	Function
REPEAT TRACK	REPEAT 1	Repeats the current Track.
REPEAT GROUP	REPEAT	Repeats all Tracks in the current Group.
REPEAT ALL	REPEAT	Repeats all Tracks on the disc.
No indication		The repeat mode is off.

(TV screen) Selected repeat mode

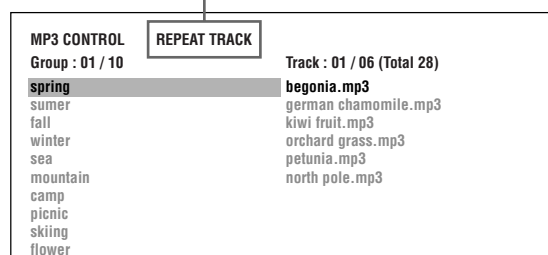

(Display window)



- **To stop repeat playback**  
Press ■. Note that the repeat mode remains active.
- **To quit repeat playback**  
During playback, press REPEAT until no repeat icon is shown on the display window. While stopped, press REPEAT until repeat mode indication on the MP3 CONTROL display goes off.

MP3 disc playback

# JPEG disc playback

The unit can play back JPEG files on a personally recorded CD-R/RW disc. We refer to a disc that contains JPEG files as a "JPEG disc" in this manual.

Note that if a disc contains both of MP3 and JPEG files, you can only play back files of the type selected by the MP3/JPEG setting in the PICTURE preference display (see page 52).

## What is JPEG?

"JPEG" is an abbreviation for the Joint Photographic Experts Group. "JPEG" is used to refer to an image file format that utilizes a certain compression technique. There are three sub-types of the JPEG format as follows.

- baseline JPEG: used for digital cameras, the web, etc.
- progressive JPEG: used for the web
- lossless JPEG: an old type, rarely used now

The unit supports only the baseline JPEG format; Therefore, it cannot display pictures saved in the progressive or lossless formats. If a JPEG disc contains JPEG files of non-baseline type, the unit recognizes those files as JPEG files, the JPEG CONTROL display and the display window shows the information of the contents (filename, file number, etc.), but you cannot show the still pictures of those files (the TV screen appears only in black).

## NOTE




Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶, numeric buttons for controlling the unit.

## About JPEG discs

On a JPEG disc, each picture is recorded as a file. Files are sometimes grouped into folders by category, etc. Folders can exist within other folders, creating hierarchical layers of folders. If you are familiar with personal computers, the hierarchical file and folder structure of a JPEG disc will be familiar to you as well. This unit simplifies the hierarchical structure of a disc and manages folders using "Groups," in the following manner.

- A folder which has one or more files is regarded as a Group.
- A folder which does not directly contain any files is ignored.
- Files which do not belong to any folder are grouped into "Group 1."
- The unit recognizes up to 150 files per Group, and up to 99 Groups per disc. It ignores those exceeding the maximum numbers and cannot display them. If there are files other than JPEG files, they also count against the 150-file total.

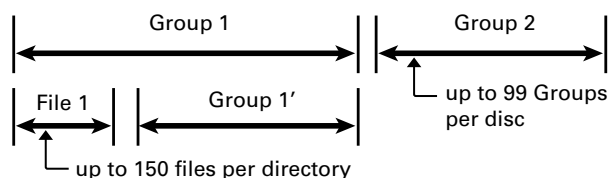

## NOTES for making your own JPEG disc using a CD-R/CD-RW disc:

- Select "ISO 9660" as the disc format.
- Finalize the disc after completing recording.
- We recommend you record your material at a 640 x 480 pixel resolution.
- This unit supports only the baseline JPEG format. Therefore, it cannot display pictures saved in the progressive or lossless formats. If a JPEG disc contains JPEG files of non-baseline type, the unit recognizes those files as JPEG files. the JPEG CONTROL display and the display window show the information of the contents (filename, file number, etc.), but you cannot show the still pictures of those files (the TV screen appears only in black).

## NOTES


- The unit does not support "packet writing" discs.
- If the disc is recorded with multiple sessions, the unit supports up to five sessions.
- The unit may not be able to read some discs, or may take a long time to display a picture on the disc, due to disc characteristics or recording conditions.
- Programmed and random playback functions do not work with JPEG discs.
- The screen saver function will be activated if the same picture is displayed for more than 5 minutes except during slide show playback (see page 46).
- The unit only can play back files with the following file extensions; ".jpg," ".jpeg," ".JPG," ".JPEG" and any other combination of upper case and lower case letters (such as ".Jpg").
- If a JPEG file name includes any 2-byte character, the unit may not show the file name correctly.
- If a picture has been saved at greater than 640 x 480 pixel resolution, it may take some time to display the picture.
- The unit will not accept any commands (stopping playback, zooming in or out of an image, etc.) while in the process of displaying a picture.
- The time required to read the disc contents may vary for different discs, depending on the numbers of Groups (folders) and files recorded, etc.
- If you attempt to display a non-baseline JPEG image: The unit will not be able to display the picture (the TV screen will be black). Other operations (stopping display, selecting a file, etc.) will be possible, but may take a long time.
- While a JPEG disc is loaded, you cannot bring up any preference display (see page 49).
- This unit does not support pixel size picture of more than 2400 pixels. Make sure that the picture pixel size is 2400 pixels or less.

# Basic operations


## To see a desired picture

Available : **JPEG**

When loading a JPEG disc, after the disc contents are read, the JPEG CONTROL display automatically appears on the TV screen.

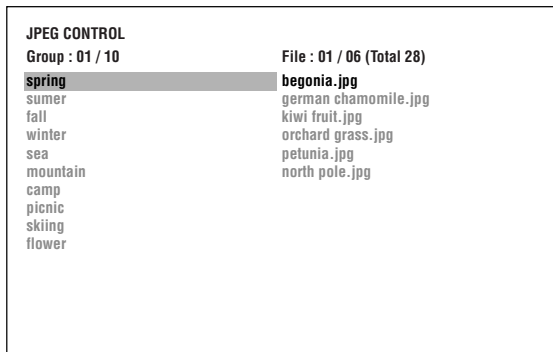


You can select a desired file for playback via this display.

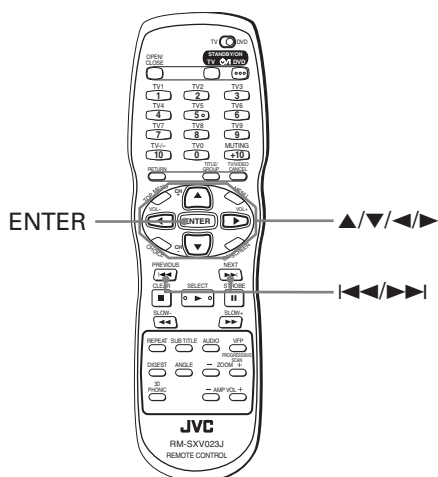

- When the JPEG CONTROL display is shown
  - 1 Make sure that the black (cursor) bar is in the left (Group) column.  
If it is in the right column, press ◀ to move it to the left column.
  - 2 Move the bar to a desired Group using ▲/▼.  
On the right column, Files in the selected Group are shown.  
When selecting a Group, File 1 is initially selected (highlighted).

- 3 Select a desired file using ◀◀/▶▶.
- 4 Press ENTER.

The selected file (still picture) is shown on the TV. In the display window, you can see the current Group and File numbers.

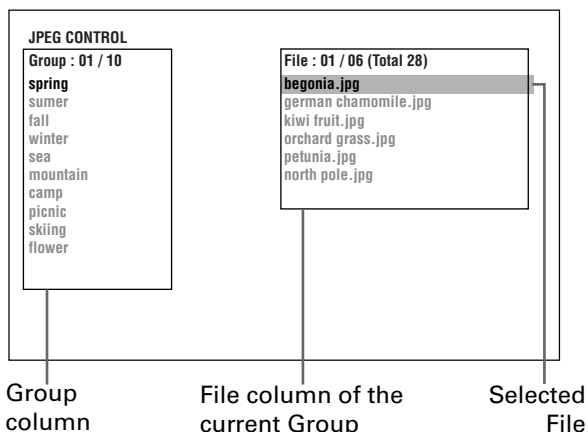


### Hints

- You can also select a desired file by pressing ▶ to move the black bar to the right (File) column then using ▲/▼.
- To return the black bar to the Group column, press ◀.
- **To display another picture:**  
Use ◀◀/▶▶ or ▲/▼ to select the desired picture. You can select a picture in another Group.
- **To dismiss the picture:**  
Press ■ or MENU.  
The TV screen returns to showing the JPEG CONTROL display.

### NOTES


- The current Group and File number are also shown on the display window in the following manner.

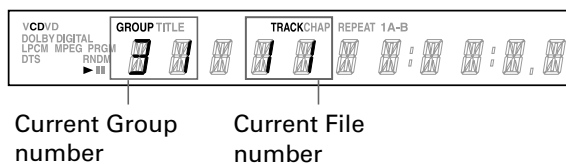

- Only JPEG files are shown on the display window.

## To zoom in or out the picture [ZOOM]

Available : **JPEG**

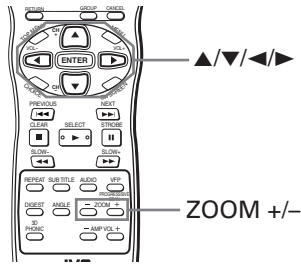


- While a JPEG image is displayed on the TV screen

### 1 Press ZOOM + or -.

Pressing ZOOM + causes the unit to zoom in on the image, and pressing ZOOM - causes the unit to zoom out.

Each time you press ZOOM +, the magnification is doubled (up to 1024 times).

Each time you press ZOOM -, the magnification is halved (down to 1/8 times).

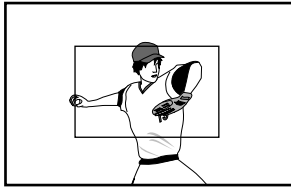


At the top left of the screen, the information for the current magnification appears for 5 seconds. While zoomed in, an indication of the zoomed image position also is displayed. The next step can be used to move the image position.

### 2 Use ▲/▼/◀/▶ to move the zoomed position.

If no button pressed for 5 seconds, the information for the current magnification disappears.

To display the information, press ZOOM +/- or ▲/▼/◀/▶ again.

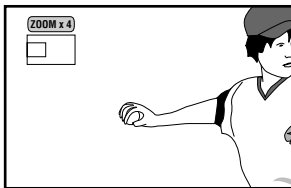

#### NOTES

- You can zoom in or out of a picture in slide show mode if the show is paused (see next column).
- To return to a normal screen:  
Press ENTER.
- The image may look coarse when a zoomed image is displayed.


## To see pictures continuously [slide show mode]

You can see Files (still pictures) one after another automatically in the slide show mode.

In this mode, each File (still picture) is displayed for approximately 3 seconds. The next File will then be displayed.

## Playback features

Available : **JPEG**

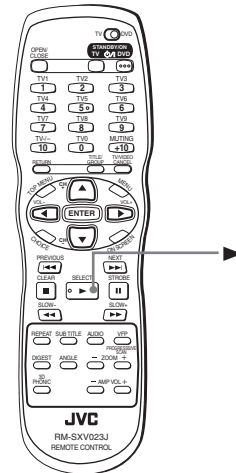

- After inserting a JPEG disc

### 1 Press ►.

The slide show starts from the beginning of the disc.


#### NOTES

- To stop slide show playback (to dismiss the picture) in the middle of slide show playback:  
Press ■ or MENU.  
The TV screen returns to showing the JPEG CONTROL display.  
Pressing ► resumes slide show playback from the last picture displayed.
- To keep showing the current picture while in slide show mode:  
Press ■ or ENTER.  
The picture does not change to the next picture.  
Pressing ► resumes the slide show playback from the next picture.
- If a black screen appears continuously in the slide show playback:  
The File currently displayed may be non-baseline JPEG file. In this case, select a playable file (a baseline JPEG file) again (e.g., pressing ■ or MENU to open the JPEG CONTROL display, etc).  
Note that it may take a long time to select another File.



## Selecting the start point of the slide show

Available : **JPEG**

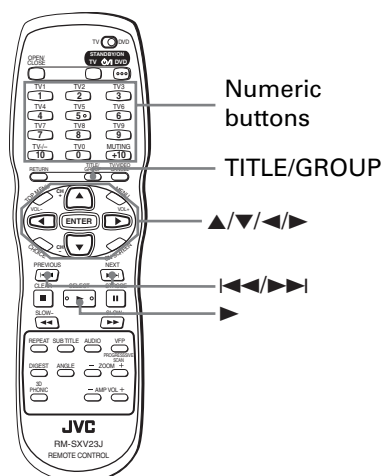

### From the JPEG CONTROL display

- While the JPEG CONTROL display is shown

#### 1 Make sure that the black (cursor) bar is in the left (Group) column.

If it is in the right column, press ◀ to move it to the left column.

JPEG CONTROL	
Group : 01 / 10	File : 01 / 06 (Total 28)
<b>spring</b>	<b>begonia.jpg</b>
summer	german chamomile.jpg
fall	kiwi fruit.jpg
winter	orchard grass.jpg
sea	petunia.jpg
mountain	north pole.jpg
camp	
picnic	
skiing	
flower	

#### 2 Move the bar to a desired Group using ▲/▼.

In the right column, Files in the selected Group are shown.

When selecting a Group, File 1 is initially selected (highlighted).

#### 3 Select a desired file using ◀/▶/▶▶.

#### 4 Press ▶.

The slide show starts from the specified File.


## Direct selection

- During playback or while stopped

### 1 Press TITLE/GROUP.

"--" is shown in the Group display area of the display window.

(Front panel display window example)

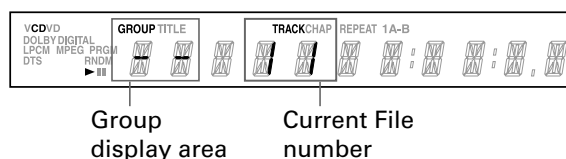

### 2 Use the numeric buttons to specify a desired Group number.

- To select a number between 1 and 10: Press the corresponding button for the number.
- To select a number higher than 10: Use the +10 button.

Examples:

To select 13: +10 → 3

To select 34: +10 → +10 → +10 → 4

To select 40: +10 → +10 → +10 → 10

Specify the Group number within several seconds after pressing TITLE/GROUP (i.e. while the display window shows "--" for the Group number, instead of the current Group number).

### 3 Use the numeric buttons to specify a desired File number.

You can specify the File number according to the order in the JPEG CONTROL display. You must specify a File number within 5 seconds after carrying out step 2.

The unit starts slide show playback from the specified File. If you do not specify a File number, the unit starts slide show playback from the first File in the Group.




#### Hints

- You can skip a File in the slide show by using ◀/▶/▶▶ or ▲/▼.
- You can select a File in the current Group by using the numeric buttons.

**NOTES**

- **To stop slide show playback (to dismiss the picture) in the middle of slide show playback:**  
Press ■ or MENU.  
The TV screen returns to showing the JPEG CONTROL display.  
Pressing ► resumes slide show playback from the last picture you displayed.
- **To keep showing the current picture while in slide show mode:**  
Press || or ENTER.  
The picture does not change to the next picture.  
Pressing ► resumes the slide show playback from the next picture.
- **If a black screen appears continuously in the slide show playback:**  
The File currently displayed may be non-baseline JPEG file. In this case, select a playable File (a baseline JPEG file) again (e.g., pressing ■ or MENU to open the JPEG CONTROL display, etc).  
Note that it may take a long time to select another file.

(TV Screen)

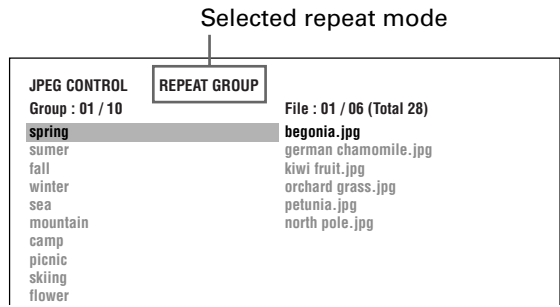

(Display window)




Repeat mode indicator

- **To stop repeat playback**  
Press ■. Note that the repeat mode remains active.
- **To quit repeat playback**  
Press ■ or MENU while the JPEG CONTROL display is shown, press REPEAT until the repeat mode indication on the JPEG CONTROL display goes off.

**Repeat function**

Available : **JPEG**

In the slide show mode, you can repeat playback of JPEG files in a Group or on the disc.

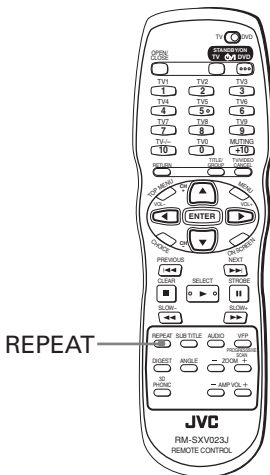

- While the JPEG CONTROL display is shown

**1 Press REPEAT.**

Pressing REPEAT switch the repeat mode. If you press REPEAT while the JPEG CONTROL display is shown, you need to press ► to start repeat playback. The selected mode is reflected by an icon displayed in the front panel display window, and by the mode name shown in the JPEG CONTROL display, as described below.

JPEG CONTROL display	Display Window	Function
REPEAT ALL	REPEAT	All Files on the disc are repeated.
REPEAT GROUP		All Files in the current Group are repeated.
No indication		The repeat mode is off.

# Changing the initial settings

## NOTE



Make sure that the TV - DVD switch on the remote control unit is set to "DVD" when using the ▲/▼/◀/▶ and numeric buttons for controlling the unit.


## Selecting preferences

This chapter refers to the settings which are already made when you purchase the unit. Read this section when you want to connect this machine to a wide-vision TV set, or when you want to otherwise change the settings according to your preferences and viewing environment.


## About the Preference display

The preference display screen consists of the LANGUAGE, PICTURE, AUDIO, and OTHERS setting displays, each having setting items.


### • LANGUAGE

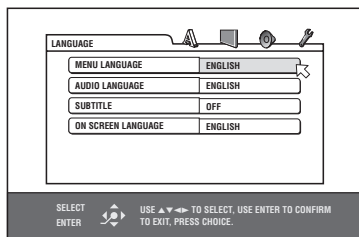


### • PICTURE

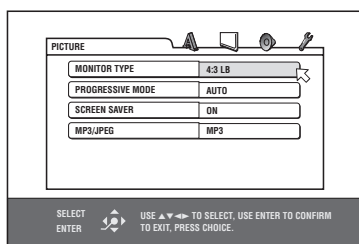


### • AUDIO

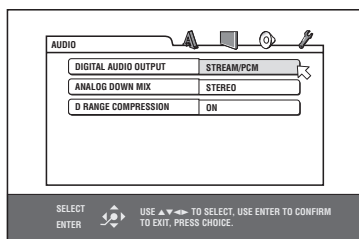

### • OTHERS

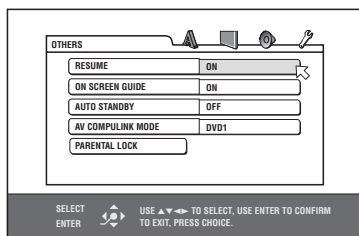

## How to set preferences

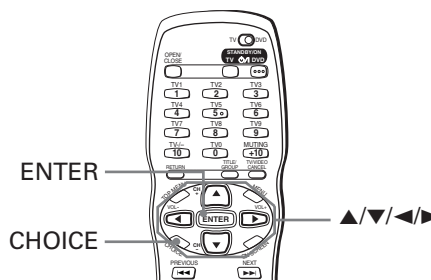

- While stopped

### 1 Press CHOICE.

One of the Preference on-screen displays appears on the TV screen.

You can see four icons at the top right of the on-screen display for the settings.

- : Language menu
- : Picture menu
- : Audio menu
- : Others menu (system setting)

### 2 Select the appropriate icon using ◀/▶.


The appropriate display appears on the TV screen.

### 3 Move to select the item you want to edit using ▲/▼.

The color of the selected item changes.

### 4 Press ENTER.

A pull-down menu appears over the selected item.

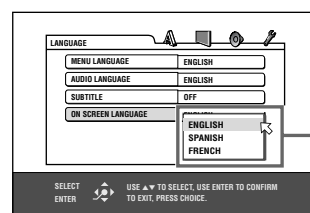

Selected item

### 5 Press ▲/▼ to select from the options and press ENTER.


The selected option is set.

- For details about each setting, see the following.

## NOTES

- To dismiss a preference display:  
Press CHOICE.
- While an MP3 or JPEG disc is loaded, you cannot bring up any preference display.
- When a preference display is shown on a wide TV screen, the upper and lower parts of the TV picture sometimes may be cut off. If this happens, adjust the picture size control of the TV.

## LANGUAGE menu

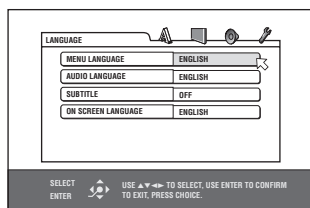

This menu allows you to select the languages used for DVD VIDEO playback, as well as the on-screen display language of the unit.

### NOTE


- During playback, you can bring up any page of the preference displays; however, only "ON SCREEN LANGUAGE" can be set on the "LANGUAGE" page.

Menu item	Setting options	Notes/examples
<b>MENU LANGUAGE</b> You can select the default menu language to be displayed if it is contained on a DVD VIDEO disc.	<b>ENGLISH ↔ SPANISH ↔ FRENCH</b> <b>↔ CHINESE ↔ GERMAN ↔</b> <b>ITALIAN ↔ JAPANESE ↔ language</b> <b>code from AA to ZU</b>	<ul style="list-style-type: none"> <li>• If the disc does not have a menu in the selected language, the disc's default language will be used.</li> <li>• For details about language codes, see "Table of languages and their abbreviations" at the bottom of this page.</li> </ul>
<b>AUDIO LANGUAGE</b> You can select the default audio language to be played if it is contained on a DVD VIDEO disc.		
<b>SUBTITLE</b> You can select the default subtitle language to be displayed if it is contained on a DVD VIDEO disc.		
<b>ON SCREEN LANGUAGE</b> You can select the on-screen display language of the unit.	<b>ENGLISH ↔ SPANISH ↔ FRENCH</b>	English <input type="text" value="ON SCREEN LANGUAGE"/> <input type="text" value="ENGLISH"/> Spanish <input type="text" value="IDIOMA EN PANTALLA"/> <input type="text" value="ESPAÑOL"/> French <input type="text" value="LANGUE D' ECRAN"/> <input type="text" value="FRANCAIS"/> <ul style="list-style-type: none"> <li>• Some on-screen messages are shown in English regardless of the setting.</li> <li>• You cannot change the on-screen language shown on the MP3 and JPEG CONTROL displays.</li> </ul>



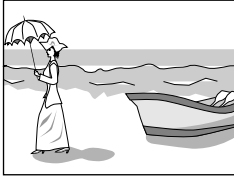
## Table of languages and their abbreviations

AA	Afar	FA	Persian	KM	Cambodian	OM	(Afan) Oromo	SU	Sundanese
AB	Abkhazian	FI	Finnish	KN	Kannada	OR	Oriya	SV	Swedish
AF	Afrikaans	FJ	Fiji	KO	Korean (KOR)	PA	Panjabi	SW	Swahili
AM	Ameharic	FO	Faroese	KS	Kashmiri	PL	Polish	TA	Tamil
AR	Arabic	FY	Frisian	KU	Kurdish	PS	Pashto, Pushto	TE	Telugu
AS	Assamese	GA	Irish	KY	Kirghiz	PT	Portuguese	TG	Tajik
AY	Aymara	GD	Scots Gaelic	LA	Latin	QU	Quechua	TH	Thai
AZ	Azerbaijani	GL	Galician	LN	Lingala	RM	Rhaeto-Romance	TI	Tigrinya
BA	Bashkir	GN	Guarani	LO	Laothian	RN	Kirundi	TK	Turkmen
BE	Byelorussian	GU	Gujarati	LT	Lithuanian	RO	Rumanian	TL	Tagalog
BG	Bulgarian	HA	Hausa	LV	Latvian, Lettish	RU	Russian	TN	Setswana
BH	Bihari	HI	Hindi	MG	Malagasy	RW	Kinyarwanda	TO	Tongan
BI	Bislama	HR	Croatian	MI	Maori	SA	Sanskrit	TR	Turkish
BN	Bengali, Bangla	HU	Hungarian	MK	Macedonian	SD	Sindhi	TS	Tsonga
BO	Tibetan	HY	Armenian	ML	Malayalam	SG	Sangho	TT	Tatar
BR	Breton	IA	Interlingua	MN	Mongolian	SH	Serbo-Croatian	TW	Twi
CA	Catalan	IE	Interlingue	MO	Moldavian	SI	Singhalese	UK	Ukrainian
CO	Corsican	IK	Inupiak	MR	Marathi	SK	Slovak	UR	Urdu
CS	Czech	IN	Indonesian	MS	Malay (MAY)	SL	Slovenian	UZ	Uzbek
CY	Welsh	IS	Icelandic	MT	Maltese	SM	Samoan	VI	Vietnamese
DA	Danish	IW	Hebrew	MY	Burmese	SN	Shona	VO	Volapuk
DZ	Bhutani	JI	Yiddish	NA	Nauru	SO	Somali	WO	Wolof
EL	Greek	JW	Javanese	NE	Nepali	SQ	Albanian	XH	Xhosa
EO	Esperanto	KA	Georgian	NL	Dutch	SR	Serbian	YO	Yoruba
ET	Estonian	KK	Kazakh	NO	Norwegian	SS	Siswati	ZU	Zulu
EU	Basque	KL	Greenlandic	OC	Occitan	ST	Sesotho		

## PICTURE menu

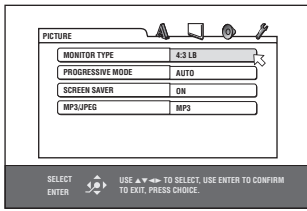


This menu allows you to select options having to do with picture quality or the monitor screen.

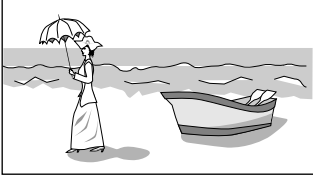Menu item	Setting options	Notes/examples
<p><b>MONITOR TYPE</b> You can select the monitor type to match your TV when you playback DVD VIDEO discs recorded for wide-screen televisions.</p>	<ul style="list-style-type: none"> <li>• <b>16:9 NORMAL (Wide Television screen)</b> Should be selected when you connect the unit to a wide-screen (16:9) TV whose aspect ratio is set to 16:9 (the unit automatically adjusts the screen width of the output signal correctly when playing back a 4:3 source).</li> </ul>	 <ul style="list-style-type: none"> <li>• If you play a 4:3 DVD VIDEO source using the "16:9 NORMAL" mode, the picture character changes slightly due to the process for converting the picture width.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>16:9 AUTO (Wide Television screen)</b> Should be selected when you connect a wide-screen (16:9) TV to the unit.</li> </ul>	
	<ul style="list-style-type: none"> <li>• <b>4:3 LB (Letter Box Conversion)</b> Should be selected when you connect a normal (4:3) TV to the unit. When playing back a DVD VIDEO disc recorded in wide picture format, the picture is shown with black bars at the top and bottom.</li> </ul>	
	<ul style="list-style-type: none"> <li>• <b>4:3 PS (Pan Scan Conversion)</b> Should be selected when you connect a normal (4:3) TV to the unit. When playing back a DVD VIDEO disc recorded in wide picture format, the picture is zoomed to fill the screen vertically, and the left and right sides of the image are chopped off.</li> </ul>	 <ul style="list-style-type: none"> <li>• With some discs recorded in wide picture format, the picture will be shown in the 4:3 LB mode even if you select the 4:3 PS mode.</li> </ul>
<p><b>PROGRESSIVE MODE</b> When the unit is in the progressive scanning mode, you can select a desired mode from three options. Normally, set to "AUTO."</p>	<ul style="list-style-type: none"> <li>• <b>VIDEO</b> Suitable for playing back a video source disc.</li> <li>• <b>FILM</b> Suitable for playing back a film source disc.</li> <li>• <b>AUTO</b> Used to playback a disc containing both video and film source materials. The unit recognizes the picture type (film or video source) of the current disc according to the disc information.</li> </ul>	<ul style="list-style-type: none"> <li>• When progressive scanning mode is active, the PROGRESSIVE indicator is lit. Note that the color of indication changes depending on this setting, source type and the unit's status (see pages 7 and 8).</li> <li>• Some DVD VIDEO discs may not be played back correctly with the "AUTO" mode. If the playback picture is unclear or noisy with a particular DVD VIDEO disc, try to change the mode.</li> </ul>

Menu item	Setting options	Notes/examples
<b>SCREEN SAVER</b> You can set the screen saver function ON or OFF. See page 16 for details about the screen saver function.	<ul style="list-style-type: none"> <li>• <b>ON</b> The current picture gets dark.</li> </ul>	
	<ul style="list-style-type: none"> <li>• <b>OFF</b> The screen saver function is off.</li> </ul>	
<b>MP3/JPEG</b> The unit can play MP3 and JPEG files recorded on a CD-R/CD-RW disc. However, if a disc contains both MP3 and JPEG files, you can only play files of the type selected in this menu item.	<ul style="list-style-type: none"> <li>• <b>MP3</b> Only MP3 files can be played back if a disc contains both MP3 and JPEG files.</li> </ul>	<ul style="list-style-type: none"> <li>• When a disc contains either only MP3 files or only JPEG files, the unit can play back the files regardless of the setting.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>JPEG</b> Only JPEG files can be played back if a disc contains both MP3 and JPEG files.</li> </ul>	

## AUDIO menu

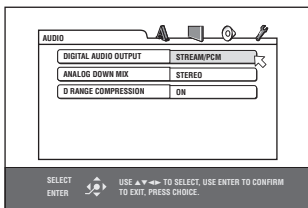

This menu allows you to select desired options concerning with audio sound.

Menu item	Setting options	Notes/examples
<b>DIGITAL AUDIO OUTPUT</b> To connect the unit's digital output to an external device equipped with a digital input, this item must be set correctly. See the table following for details about the relation between the setting and output signals.	<ul style="list-style-type: none"> <li>• <b>PCM ONLY</b> Should be selected when you connect the DIGITAL OUT jack of the unit to the linear PCM digital input of other audio equipment.</li> </ul>	<ul style="list-style-type: none"> <li>• When playing a DVD VIDEO or Audio CD disc with DTS, use a DTS decoder to get correct signals from your speakers.</li> <li>• With some DVD VIDEO discs that are not fully copy-protected, a 20 or 24 bit digital signal may be output.</li> <li>• A signal recorded with the 88.2 kHz or higher sampling frequency cannot be output from the DIGITAL OUT jack, regardless of the setting (due to copy protection issues).</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>DOLBY DIGITAL/PCM</b> Should be selected when you connect the digital input of a Dolby Digital decoder or an amplifier with a built-in Dolby Digital decoder. When this option is selected, playing back a disc recorded by the DTS or MPEG Multichannel format outputs a linear PCM digital signal.</li> </ul>	
	<ul style="list-style-type: none"> <li>• <b>STREAM/PCM</b> Should be selected when you connect the digital input of an amplifier with a built-in DTS, MPEG Multichannel or Dolby Digital decoder, or the stand-alone unit of such a decoder.</li> </ul>	


## Digital output signal chart

Disc type	Output		
	PCM ONLY	DOLBY DIGITAL/PCM	STREAM/PCM
DVD with 48/44.1 kHz, 16/20/24 bit linear PCM	48/44.1 kHz, 16 bit, stereo linear PCM		
DVD with 96/88.2 kHz, 16/22/24 bit linear PCM	No output		
DVD with DTS	48 kHz, 16 bit, stereo linear PCM		DTS bitstream
DVD with Dolby Digital	48 kHz, 16 bit, stereo linear PCM	Dolby Digital bitstream	
DVD with MPEG Multichannel	48 kHz, 16 bit, stereo linear PCM		MPEG bitstream
Audio CD/Video CD/SVCD	44.1 kHz, 16 bit, stereo linear PCM		
Audio CD with DTS	44.1 kHz, 16 bit, stereo linear PCM		DTS bitstream
CD-R/RW with MP3	Linear PCM		

Menu item	Setting options	Notes/examples
<b>ANALOG DOWN MIX</b> To correctly play the audio on a DVD VIDEO disc recorded with surround multichannel audio, you must set this item properly according to your audio system configuration.	<ul style="list-style-type: none"> <li> <b>DOLBY SURROUND</b>                Should be selected when listening to multichannel surround audio when the unit's analog AUDIO OUT terminals are connected to a surround decoder.             </li> </ul>	<ul style="list-style-type: none"> <li>This function does not work when the 3D PHONIC function is activated (see page 36).</li> <li>This setting affects only the output signal from the analog AUDIO OUT jacks when playing back a DVD VIDEO disc recorded with surround multichannel audio.</li> </ul>
	<ul style="list-style-type: none"> <li> <b>STEREO</b>                Should be selected when listening to conventional two-channel stereo audio when the unit's analog AUDIO OUT terminals are connected to a stereo amplifier/receiver or television set, or when you want to record the audio from a DVD VIDEO disc to MiniDisc, cassette, etc.             </li> </ul>	
<b>D. RANGE COMPRESSION</b> This setting provides optimal audio quality for listening to DVD VIDEO discs recorded in Dolby Digital format, at low or middle volume.	<ul style="list-style-type: none"> <li> <b>AUTO</b>                Audio is played back with the dynamic range compressed except when playing a disc recorded with Dolby Digital 1- or 2-channel format.             </li> </ul>	<ul style="list-style-type: none"> <li>This function works only when playing back a disc recorded with Dolby Digital. The setting does not affect audio from other discs.</li> <li>This function does not work when the 3D PHONIC function is activated (see page 36).</li> </ul>
	<ul style="list-style-type: none"> <li> <b>ON</b>                Audio is always played back with the dynamic range compressed.             </li> </ul>	

# OTHERS menu

This menu allows you to set various system options.

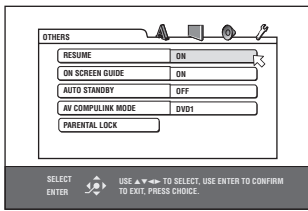


Menu item	Setting options	Notes/examples
<p><b>RESUME</b> You can select the resume playback mode.</p>	<ul style="list-style-type: none"> <li><b>ON</b> The unit can resume playback of the disc from the position where play was last interrupted, if the disc is still in the disc tray.</li> <li><b>OFF</b> The resume function is not active.</li> <li><b>DISC RESUME</b> The unit can resume playback of the last 30 discs played. The unit retains a memory of the interrupt positions of the last 30 discs played, even though they have been removed from the disc tray.</li> </ul>	<ul style="list-style-type: none"> <li>See page 18 for details about the resume playback function.</li> </ul>
<p><b>ON SCREEN GUIDE</b> The unit can display "on-screen guide" icons or characters on the picture, which show what is happening to the disc or the unit.</p>	<ul style="list-style-type: none"> <li><b>ON</b> "On-screen guide" icons will be displayed.</li> <li><b>OFF</b> "On-screen guide" icons will not be displayed.</li> </ul>	<ul style="list-style-type: none"> <li>See page 16 for information about on-screen guide icons.</li> <li>Examples of "on-screen guide" icons or characters: </li> </ul>
<p><b>AUTO STANDBY</b> When the unit is stopped for more than 30 minutes or 60 minutes, the unit enters standby mode automatically.</p>	<p>60 ↔ 30 ↔ OFF</p>	<hr/>
<p><b>AV COMPULINK MODE</b> You must set this item correctly to use the AV COMPU LINK system.</p>	<p>DVD 1 ↔ DVD 2 ↔ DVD 3</p>	<ul style="list-style-type: none"> <li>See page 60 for details about AV COMPU LINK function.</li> </ul>
<p><b>PARENTAL LOCK</b> When this option is selected, pressing ENTER on the remote control unit brings up to the PARENTAL LOCK display shown following. This allows you to restrict children from playing DVD VIDEO discs.</p>	<p>See page 55 for details about the Parental Lock setting.</p>	<p>(PARENTAL LOCK display)</p>

Changing the initial settings




## Limiting playback by children

This function restricts playback of DVD VIDEO discs which contain violent (and other) scenes according to the level set by the user. For example, if a movie which includes violent scenes supports the parental lock feature, such scenes which you do not want to let children view can be cut or replaced with other scenes. When PARENTAL LOCK is set in the OTHERS menu of the Preference display (see page 54), pressing ENTER on the remote control unit brings up the PARENTAL LOCK display shown following. This allows you to set limits on DVD VIDEO playback.

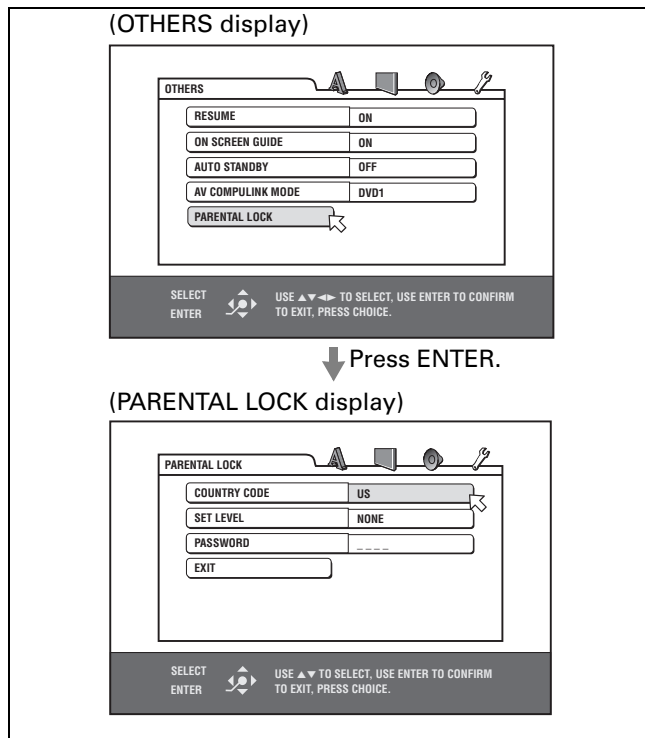

## To set Parental Lock for the first time [PARENTAL LOCK]

Available :

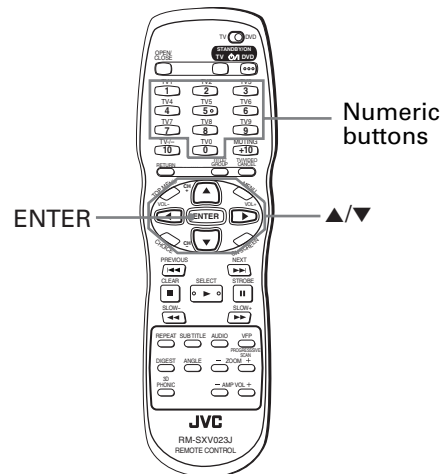

- While the "OTHERS" menu of the preference display is shown

1 Use ▲/▼ to move to select "PARENTAL LOCK" and press ENTER.

See page 54 for details about how to bring up the "OTHERS" menu.

The Parental Lock on-screen display appears on the TV screen.


points [COUNTRY CODE].

2 While points to [COUNTRY CODE], press ENTER to bring up the pull-down menu.

3 Use ▲/▼ to select the country code.

Select the code of the country whose standards were used to rate the DVD VIDEO disc content.

See "Appendix A: Country/Area code list for Parental Lock" on page 65.

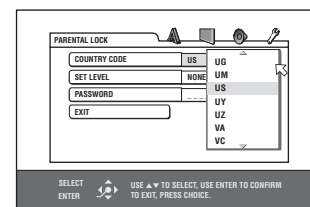


4 Press ENTER.

moves to [SET LEVEL].


**5** While  points [SET LEVEL], press ENTER to bring up the pull-down menu.

In the pull-down menu, "NONE" and levels "8" to "1" are available.


"NONE" does not restrict playback. Level "1" is the strictest level. Discs rated higher than the selected level are restricted.

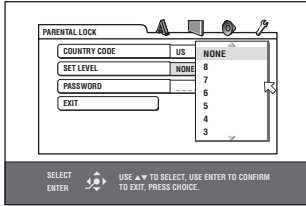

**6** Use ▲/▼ to select a desired parental lock level, then press ENTER.


 moves to [PASSWORD].

**7** Enter a 4-digit password using the numeric buttons (0 to 9).

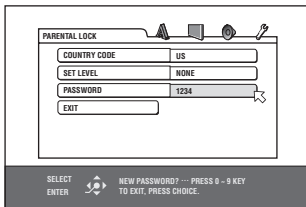

**8** Press ENTER.

The parental lock feature is set.


 moves to [EXIT].

Pressing ENTER again returns to the "OTHERS" menu of the preference display.


 Hints

- If you want to change the password in step 7, do it before pressing ENTER.

## To change the settings [PARENTAL LOCK]

Available : 


You can change the Parental Lock settings later.

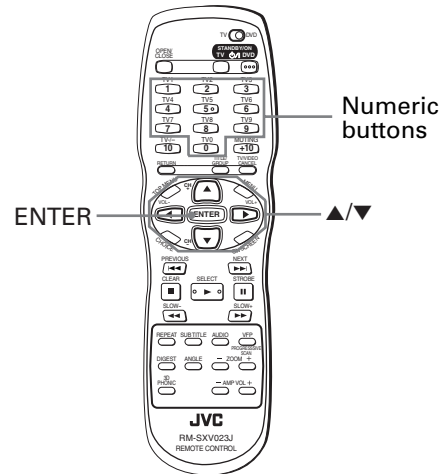


- While the "OTHERS" menu of the preference display is shown

**1** Use ▲/▼ to move  to select "PARENTAL LOCK" and press ENTER.


The Parental Lock on-screen display appears on the TV screen.

 points to [PASSWORD].


See page 54 for details about how to bring up the "OTHERS" menu.

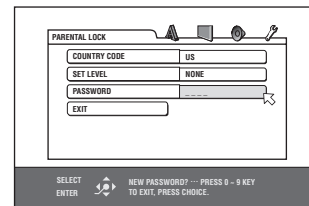

**2** Enter your current 4-digit password using the numeric buttons (0 to 9) and press ENTER.

 moves to [COUNTRY CODE] if you enter the correct password.


If you enter the wrong password, "WRONG! RETRY..." appears on the TV screen, and you cannot go to the next step.

**3** To change the "COUNTRY CODE" or "SET LEVEL," press ENTER to bring up the associated pull-down menu when  is pointing the desired item.

To select the item to be set, use ▲/▼ when no pull-down menu is shown.


**4** Use ▲/▼ to select the desired option and press ENTER.

Note that if you change the country code, you must reselect the Parental Lock level.

**5** With  pointing to [PASSWORD], enter a 4-digit password using the numeric buttons (0 to 9).


The password entered in this step becomes the new password. If you want to keep the same password as before, enter the same password you did in step 2. Do not forget to enter a password after changing the country code and/or parental level. Otherwise, the new country code and/or parental level will not take effect.

**6** Press ENTER.


 moves to [EXIT].

Pressing ENTER again returns to the "OTHERS" menu of the preference display.


**NOTES**


- If you enter the wrong password more than 3 times in step 2 above,  moves to [EXIT] automatically and ▲/▼ do not work.
- If you forget your password in step 2  
Enter "8888." The current password is deleted and you can set a new password.


**To temporarily release the Parental Lock [PARENTAL LOCK]**

Available : 


If the parental level is set to a strict value, some discs may not play at all. When you insert such a disc and try to play it, the following Parental Lock on-screen display appears on the TV screen, asking you whether you want the Parental Lock to be temporarily released or not.

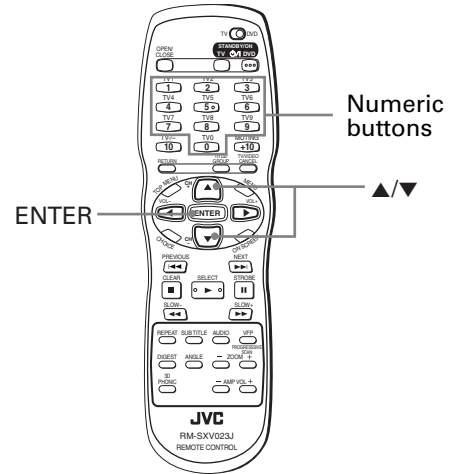

**1** Use the ▲/▼ to move  to [TEMPORARY RELEASE], then press ENTER.

 moves to [PASSWORD].

When selecting [NOT RELEASE], press ▲ (OPEN/CLOSE) to remove the disc.

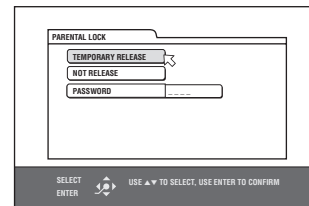


**2** Enter your 4-digit password using the numeric buttons (0 to 9).

The Parental Lock is released, and the unit starts playback.

If you enter the wrong password, "WRONG! RETRY..." appears on the TV screen.

Enter the correct password.

**NOTE**


- When you enter the wrong password more than 3 times in step 2 above,  moves to [NOT RELEASE] automatically and ▲/▼ do not work.

# Additional information

## Names of parts and controls


Refer to the corresponding pages indicated in ( ) for details.

### Front panel

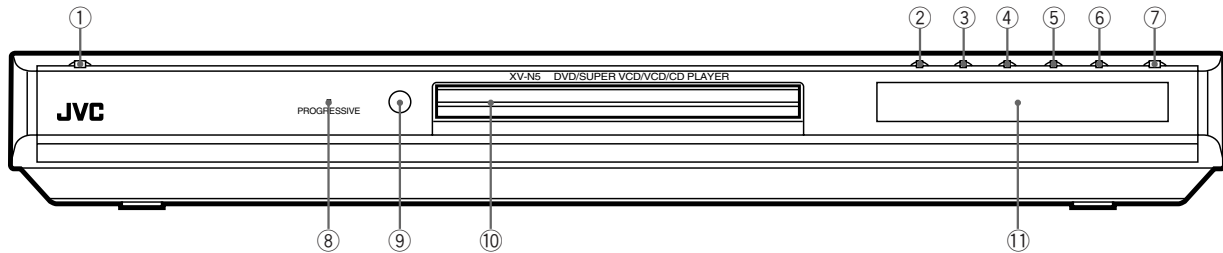


- |  |   |
|--|---|
| ① STANDBY/ON $\phi$ /I button (13)                             | ⑦ $\blacktriangle$ button (15, 17, 18)        |
| ② $\blacksquare$ button (16, 17, 41)                           | ⑧ PROGRESSIVE indicator (8)                   |
| ③ $\blacktriangleright$ button (16, 18, 41)                    | ⑨ Remote sensor (11)                          |
| ④ $\parallel$ PAUSE button (17, 19, 41)                        | ⑩ Disc tray (15, 17, 18)                      |
| ⑤ $\blacktriangleleft\blacktriangleleft$ button (19, 21, 41)   | ⑪ Display window (see the illustration below) |
| ⑥ $\blacktriangleright\blacktriangleright$ button (19, 21, 41) |   |

### Display window

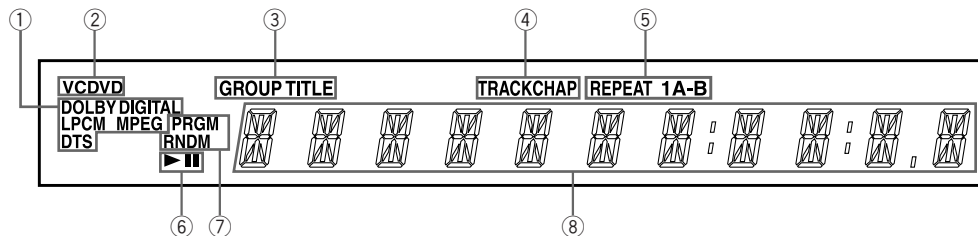


- |                            |   |
|----------------------------|---|
| ① Audio format indicators  | ⑤ Repeat mode indicator   |
| ② Disc indicator           | ⑥ $\blacktriangleright$ /(play)/ $\parallel$ (pause) indicators |
| ③ Group/title indicators   | ⑦ PROGRAM/RANDOM indicators                                     |
| ④ Track/chapter indicators | ⑧ Multi-information window                                      |

### Rear panel

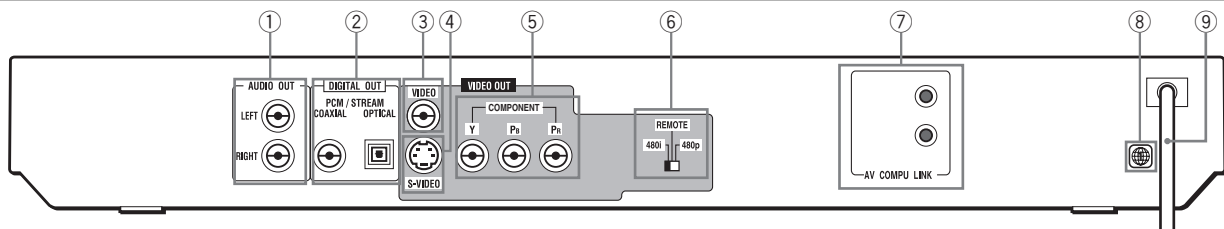

- |   |   |
|---|---|
| ① AUDIO OUT jacks (6, 7, 9)               | ⑤ VIDEO OUT - COMPONENT jacks (Y/Pb/Pr) (7)           |
| ② DIGITAL OUT jacks (OPTICAL/COAXIAL) (9) | ⑥ Scanning mode selector (480i/REMOTE/480p) (6, 7, 8) |
| ③ VIDEO OUT - VIDEO jack (6)              | ⑦ AV COMPU LINK jacks (60)                            |
| ④ VIDEO OUT - S-VIDEO jack (6)            | ⑧ Region code label (4)                               |
|   | ⑨ AC Power Cord (10)                                  |

## Remote control unit

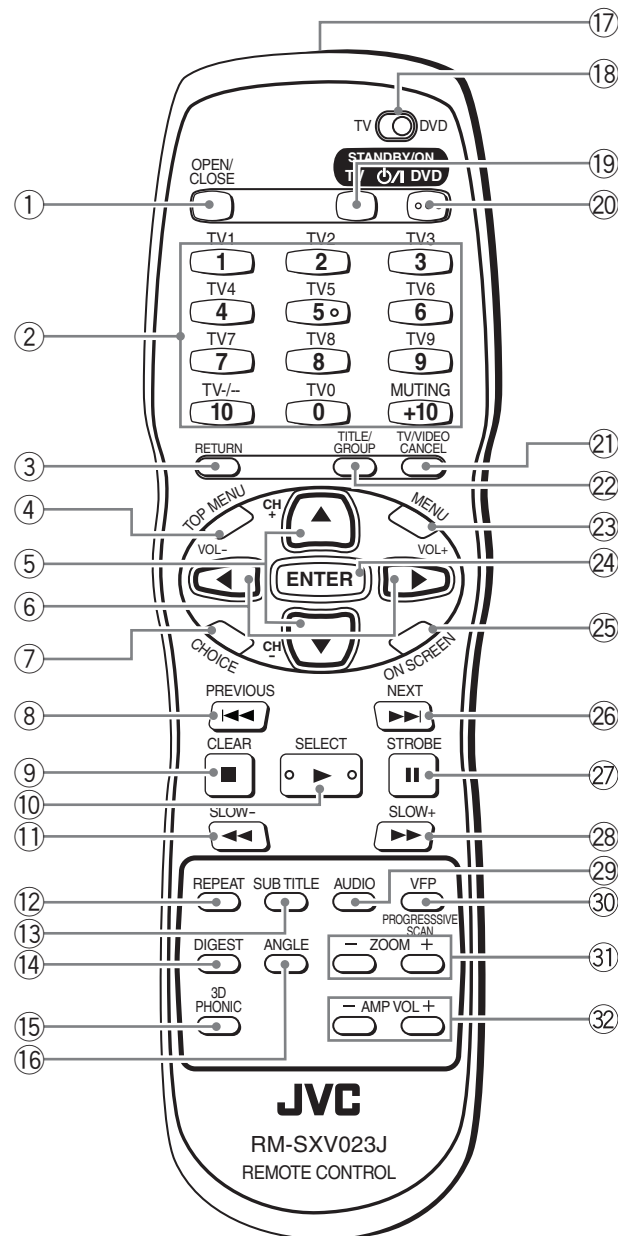

- |   |  |
|---|--|
| ① OPEN/CLOSE button (15, 17)                                  | ⑩ ▶/SELECT button (16, 18, 23, 24, 41, 46) |
| ② Numeric buttons   | ⑪ ◀◀/SLOW- button (19)                     |
| ③ RETURN button (24)  | ⑫ REPEAT button (29, 43, 48)               |
| ④ TOP MENU button (24)  | ⑬ SUB TITLE button (31)                    |
| ⑤ Cursor selection (▲ Up, ▼ Down) - CH (+/-) buttons (12)     | ⑭ DIGEST button (26)                       |
| ⑥ Cursor selection (◀ Left, ▶ Right) - VOL (+/-) buttons (12) | ⑮ 3D PHONIC button (36)                    |
| ⑦ CHOICE button (14, 49)                                      | ⑯ ANGLE button (23, 33)                    |
| ⑧ ◀◀/PREVIOUS button (19, 21, 41, 45)                         | ⑰ Infrared signal window (11)              |
| ⑨ ■/CLEAR button (16, 17, 28, 41, 48)                         | ⑱ TV - DVD switch (12, 13, 24, 41, 44, 49) |
|   | ⑲ TV STANDBY/ON $\text{O/I}$ button (12)   |
|   | ⑳ DVD STANDBY/ON $\text{O/I}$ button (13)  |
|   | ㉑ TV/VIDEO - CANCEL button (12)            |
|   | ㉒ TITLE/GROUP button (25, 43, 47)          |
|   | ㉓ MENU button (24)                         |
|   | ㉔ ENTER button                             |
|   | ㉕ ON SCREEN button (22, 37)                |
|   | ㉖ ▶▶/NEXT button (19, 21, 41, 45)          |
|   | ㉗   /STROBE button (17, 19, 20, 34, 41)    |
|   | ㉘ ▶▶/SLOW+ button (19)                     |
|   | ㉙ AUDIO button (32)                        |
|   | ㉚ VFP - PROGRESSIVE SCAN button (8, 35)    |
|   | ㉛ ZOOM +/- buttons (34, 46)                |
|   | ㉜ AMP VOL +/- buttons (12)                 |

# AV COMPU LINK remote control system


The JVC AV COMPU LINK system allows you to enjoy video or audio with the simplest operation. If your video/audio player (such as a DVD player, CD player and VCR) and television or/and amplifier/receiver support the JVC AV COMPU LINK system and are tied with the JVC AV COMPU LINK cable(s), simply starting the player will automatically make all necessary settings on the television and/or amplifier/receiver to allow you to enjoy the playback.



## Connection and setup

Using an AV COMPU LINK cable, connect the AV COMPU LINK terminals of each component to one another.


- The unit's AV COMPU LINK setting is controlled using the OTHERS menu in the preference display. See page 54 for operation.
- For information on the connection between a TV and a receiver, refer to the receiver's instructions.

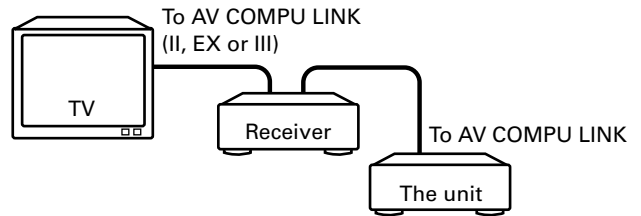

- If you connect the unit to a television and receiver via AV COMPU LINK, set the unit's AV COMPU LINK setting to DVD1.

### IMPORTANT!


- When you make video connection between the unit and another device (such as a receiver and TV) via the composite, S-video or component jacks, as well as AV COMPU LINK connection, see also the instruction manual of the other device.

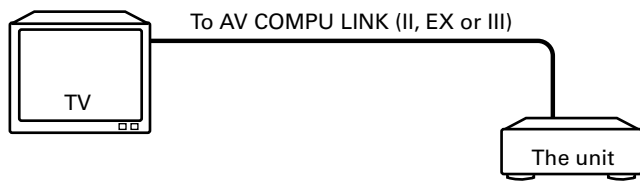

- If you connect the unit to a television via AV COMPU LINK, set the unit's AV COMPU LINK setting as follows.
  - When connecting to the VIDEO-1 input terminal of the television: DVD2
  - When connecting to the VIDEO-2 input terminal of the television: DVD3

### Notes for connection

- If you connect the unit to a receiver via AV COMPU LINK in a system including a Dolby Digital decoder, some functions may not be performed automatically.
- Connect the AUDIO OUT jacks of the unit to the audio input jacks of a receiver that indicating "DVD." Otherwise, the system will not work correctly.
- There may be no description about connections to the unit in the instruction manual of a television or VCR. However a television or VCR with AV COMPU LINK terminals indicating "II," "EX" or "III" can be connected to the unit.

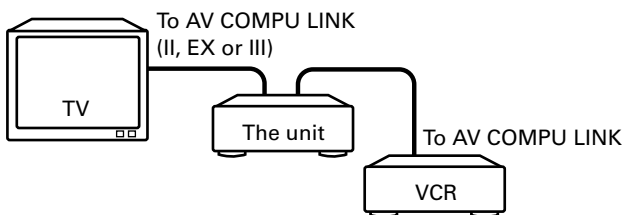

- If you connect the unit to a television and VCR via AV COMPU LINK, set the VCR's Remote Control Code and the unit's AV COMPU LINK setting as follows.
  - When connecting to the VIDEO-1 input terminal of the television:  
The unit's AV COMPU LINK setting: DVD2  
VCR's Remote Control Code: B
  - When connecting to the VIDEO-2 input terminal of the television:  
The unit's AV COMPU LINK setting: DVD3  
VCR's Remote Control Code: A

## Operation

The JVC COMPU LINK system allows you to enjoy video and/or audio by simply pressing Play on the source component (the component which plays back the video or audio, such as a DVD player or VCR). You don't even have to switch on power on the TV or receiver.

- 1 Turn on the main power of the television.
- 2 Insert a disc (or tape) into the source component.
- 3 Press ► of the source component.

The following actions are performed automatically:

- Turning on television power.
- Setting the source of the television to the external input (VIDEO-1 or VIDEO-2).
- Turning on receiver power.
- Setting the source of the receiver to the component which has started playback.

# Troubleshooting

What appears to be a malfunction may not always be serious. Please go through the following list before requesting service.

POWER		
Symptom	Possible cause	Remedy
Power does not come on.	Power plug is not inserted securely.	Plug in securely.
OPERATION		
Symptom	Possible cause	Remedy
The remote control unit does not work.	Too far from the unit.	More closer to the unit.
	The tip of the remote control unit is not pointed in the right direction.	Point the infrared signal window toward the remote sensor on the front panel (see page 11).
	Batteries are exhausted.	Replace the batteries with new ones.
	Battery polarity is incorrect.	Take out the batteries and insert them again in the correct direction.
	The remote control unit is not set for operating your TV.	Set the remote control unit for operating your TV (see page 12).
The TV/VIDEO - CANCEL, ▲/▼/◀/▶ or numeric buttons do not work.	The TV - DVD switch is not correctly set.	To control the unit, set the TV - DVD switch to "DVD." To control your TV, set the TV - DVD switch to "TV" (see page 12).
Operation is not possible.	Microcomputer malfunction due to lightning or static electricity.	Turn off the power and unplug the power cord, then connect the power cord again.
	Moisture condensation caused by a sudden change of temperature or humidity.	Turn off the power, then turn it on a few hours later.
	The disc does not allow the operation, or a non-playable disc is loaded.	Check and replace the disc (see page 4).
When using the TITLE/GROUP button to select a title during DVD VIDEO playback, ⊙ appears on the TV screen and the title cannot be selected.	Disc content does not allow the operation.	Try to press ■ and select a title using the numeric buttons on the remote control.

<b>PICTURE</b>		
<b>Symptom</b>	<b>Possible cause</b>	<b>Remedy</b>
No picture is displayed on the monitor.	Connection of video cable is incorrect.	Connect the cable correctly.
	Input selection of TV is incorrect.	Select correctly.
	Disc is not playable.	Use a playable disc (see page 4).
No picture is displayed on the monitor or the screen is blurred or divided into two parts.	The unit is in the progressive scanning mode (i.e. the PROGRESSIVE indicator is lit) through it is connected to a TV via the VIDEO or S-VIDEO jack.	Set the Scan mode selector on the rear panel to "480i," or set it to "REMOTE" and make the Progressive scanning mode inactive by using the VFP - PROGRESSIVE SCAN button (see pages 7 and 8).
The picture is noisy or blurred.	The unit is connected to a VCR directly and the copyguard function is activated.	Connect the unit so that the picture signal flows directly to the TV.
	With some discs, the picture may be blurred when "PROGRESSIVE MODE" is set to "FILM" or "AUTO."	Set "PROGRESSIVE MODE" to "VIDEO" (see page 51).
The picture does not fit the television screen.	MONITOR TYPE is not set correctly.	Select monitor type correctly (see page 51).
	TV settings are incorrect.	Set the television correctly.
The upper and lower parts of the preference display are cut off when using wide-aspect TV.	It depends on the setting on the TV.	Adjust the TV screen using the controls on the TV.
<b>AUDIO</b>		
<b>Symptom</b>	<b>Possible cause</b>	<b>Remedy</b>
No audio is reproduced.	Connection is incorrect.	Check the connection.
	Input selection of amplifier is incorrect.	Select correctly.
No audio is reproduced when playing back a DVD disc recorded with high sampling frequency (88.2 kHz or more) linear PCM audio using the DIGITAL OUT jack.	Audio signal is not emitted from the unit's DIGITAL OUT (see page 53).	Use AUDIO OUT when playing back such discs.
Audio volume is low when playing back with the unit, compared with the TV or VCR.	The audio level recorded on a DVD VIDEO is lower compared with a TV broadcast.	Turn up the volume of the TV or amplifier/receiver. Remember to turn the volume back down before switching back to a TV broadcast to prevent a sudden burst of high-volume sound.
Sound is distorted or noise is generated.	Disc is dirty.	Wipe the disc surface (see page 5).



## Frequently Asked Questions

Question	Answer	Ref. page
Can I play back DVD VIDEO and Video CD discs purchased abroad?	You can play DVD VIDEO discs with the Region Code (local code) containing "ALL" or "1" recorded using the NTSC or PAL formats (PAL disc signals are reproduced by converting to the NTSC system). You can also play back the Video CD discs recorded in the NTSC system. Please check the information on each disc jacket.	4
Can I play back a DVD VIDEO disc without any Region Code number?	The Region code indicates conformity to DVD standards. Any DVD VIDEO which does not conform to the DVD standards cannot be played.	4
Can I play back a CD-R/RW disc with still pictures in other than the JPEG format?	No, the unit cannot display pictures in formats other than JPEG.	4
Can I play back audio on a disc labeled "Dolby Digital EX"?	Yes, you can play back the disc because Dolby Digital EX is compatible with Dolby Digital. However, to get the maximum performance of Dolby Digital EX, we recommend to connect the DIGITAL OUT jack to a decoder or amplifier/receiver with built-in decoder that supports Dolby Digital EX. In this case, set "DIGITAL AUDIO OUTPUT" on the "AUDIO" preference display to "STREAM/PCM."	52, 53
Can I play back audio on a disc labeled "DTS ES"? Is there any difference in the playback settings between Discrete and Matrix recording systems for DTS ES?	You cannot listen to the audio using the analog audio outputs (AUDIO OUT). However, you can listen to DTS ES audio by connecting the DIGITAL OUT jack to a decoder or amplifier/receiver with built-in decoder that supports DTS ES. In this case, set "DIGITAL AUDIO OUTPUT" on the "AUDIO" preference display to "STREAM/PCM."	52, 53
Can this unit play back a disc labeled "THX"? What does "THX" mean?	Yes you can. "THX" is the name of a standard for high quality picture and audio recording, established by Lucasfilm Ltd. The "THX" label on a disc certifies that it meets this standard.	—
When files of the MP3 and Audio CD formats are recorded on a same disc, can the unit play files of both formats?	Discs like this are of the data CD format, not the Audio CD format. The unit can play only the MP3 files.	4, 41
Some Dolby Digital discs contain 5.1-ch Surround or Dolby Surround audio data. What is the difference between these two types?	Both are surround sound standards developed by Dolby Laboratories Inc. in the U.S.A. In Dolby Surround, two-channel surround audio information is recorded onto the analog stereo (left and right) channels together with front stereo audio information. When played back, the surround signals are separated by a Dolby Surround or Dolby Pro Logic decoder. Dolby Digital digitally encodes and records up to six channels of information for left, right, center, rear left, rear right and LFE (Low-Frequency Effect, for use with a subwoofer). When played back, a Dolby Digital decoder decodes the data and outputs signals separately. Generally, Dolby Digital sounds better.	4
When playing back a DVD VIDEO or Video CD disc, something like a mosaic appears on the TV screen. Is this because of a malfunction of the unit?	This is block noise specific to a digitally recorded motion picture. It is not a malfunction of the unit.	—
The unit does not function as described in this Instruction Manual.	The operation of this unit may occasionally be unacceptable due to the intention of the disc contents creator and/or structural restrictions.	—
Can I record DVD VIDEO data on a video tape?	Most of all DVD VIDEO discs are copy-protected so that you cannot record DVD VIDEO data onto any video tape.	3
Can this unit record data?	No, it cannot.	—

# Specifications

\*Specifications and appearance are subject to change without prior notice.

## General

Readable discs: DVD VIDEO, DVD-R (Video format), SVCD, Video CD, Audio CD (CD-DA), MP3 format, JPEG, CD-R/RW (CD-DA, SVCD, Video CD, MP3 format, JPEG)

Video format: NTSC, 480i (Interlaced scan)/480p (Progressive scan) selectable

## Other

Power requirements: AC 120 V  $\sim$ , 60 Hz

Power consumption: 14 W (POWER ON), 1.1 W (STANDBY mode)

Mass: 2.4 kg (5.3 lbs)

Dimensions (W × H × D): 435 mm × 55 mm × 258.4 mm  
(17 - 3/16 inch × 2 - 3/16 inch × 10 - 3/16 inch)

## Video outputs

COMPONENT (pin jacks): Y Output: 1.0 Vp-p (75  $\Omega$ )  
P<sub>B</sub>/P<sub>R</sub> Output: 0.7 Vp-p (75  $\Omega$ )

VIDEO OUT (pin jack): 1.0 Vp-p (75  $\Omega$ )

S-VIDEO OUT (S jack): Y Output: 1.0 Vp-p (75  $\Omega$ )  
C Output: 286 mVp-p (75  $\Omega$ )

Horizontal resolution: 500 Lines or more

## Audio outputs

ANALOG OUT (pin jack): 2.0 V<sub>rms</sub> (10 k $\Omega$ )

DIGITAL OUT: (COAXIAL): 0.5 Vp-p (75  $\Omega$  termination)  
(OPTICAL): -21 dBm to -15 dBm (peak)

## Audio characteristics

Frequency response: CD (sampling frequency 44.1 kHz): 2 Hz to 20 kHz  
DVD (sampling frequency 48 kHz): 2 Hz to 22 kHz  
(4 Hz to 20 kHz for DTS and Dolby Digital bitstream signals)

DVD (sampling frequency 96 kHz/88.2 kHz): 2 Hz to 44 kHz

Dynamic range: 16 bit: More than 98 dB  
20 bit: More than 106 dB  
24 bit: More than 106 dB

Wow and flutter: Unmeasurable (less than  $\pm$  0.002%)

Total harmonic distortion: Less than 0.002%

## Appendix A: Country/Area code list for Parental Lock

This list is used for the Parental Lock operation. For details, see page 55.

AD	Andorra	ER	Eritrea	LB	Lebanon	SB	Solomon Islands
AE	United Arab Emirates	ES	Spain	LC	Saint Lucia	SC	Seychelles
AF	Afghanistan	ET	Ethiopia	LI	Liechtenstein	SD	Sudan
AG	Antigua and Barbuda	FI	Finland	LK	Sri Lanka	SE	Sweden
AI	Anguilla	FJ	Fiji	LR	Liberia	SG	Singapore
AL	Albania	FK	Falkland Islands	LS	Lesotho	SH	Saint Helena
AM	Armenia	FM	Micronesia (Federated States of)	LT	Lithuania	SI	Slovenia
AN	Netherlands Antilles	FO	Faroe Islands	LU	Luxembourg	SJ	Svalbard and Jan Mayen
AO	Angola	FR	France	LV	Latvia	SK	Slovakia
AQ	Antarctica	FX	France, Metropolitan	LY	Libyan Arab Jamahiriya	SL	Sierra Leone
AR	Argentina	GA	Gabon	MA	Morocco	SM	San Marino
AS	American Samoa	GB	United Kingdom	MC	Monaco	SN	Senegal
AT	Austria	GD	Grenada	MD	Moldova, Republic of	SO	Somalia
AU	Australia	GE	Georgia	MG	Madagascar	SR	Suriname
AW	Aruba	GF	French Guiana	MH	Marshall Islands	ST	Sao Tome and Principe
AZ	Azerbaijan	GH	Ghana	ML	Mali	SV	El Salvador
BA	Bosnia and Herzegovina	GI	Gibraltar	MM	Myanmar	SY	Syrian Arab Republic
BB	Barbados	GL	Greenland	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GM	Gambia	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GP	Guadeloupe	MQ	Martinique	TF	French Southern Territories
BG	Bulgaria	GQ	Equatorial Guinea	MR	Mauritania	TG	Togo
BH	Bahrain	GR	Greece	MS	Montserrat	TH	Thailand
BI	Burundi	GS	South Georgia and the South Sandwich	MT	Malta	TJ	Tajikistan
BJ	Benin	GT	Guatemala	MU	Mauritius	TK	Tokelau
BM	Bermuda	GU	Guam	MV	Maldives	TM	Turkmenistan
BN	Brunei Darussalam	GW	Guinea-Bissau	MW	Malawi	TN	Tunisia
BO	Bolivia	GY	Guyana	MX	Mexico	TO	Tonga
BR	Brazil	HK	Hong Kong	MY	Malaysia	TP	East Timor
BS	Bahamas	HM	Heard Island and McDonald Islands	MZ	Mozambique	TR	Turkey
BT	Bhutan	HN	Honduras	NA	Namibia	TT	Trinidad and Tobago
BV	Bouvet Island	HR	Croatia	NC	New Caledonia	TV	Tuvalu
BW	Botswana	HT	Haiti	NE	Niger	TW	Taiwan
BY	Belarus	HU	Hungary	NF	Norfolk Island	TZ	Tanzania, United Republic of
BZ	Belize	ID	Indonesia	NG	Nigeria	UA	Ukraine
CA	Canada	IE	Ireland	NI	Nicaragua	UG	Uganda
CC	Cocos (Keeling) Islands	IL	Israel	NL	Netherlands	UM	United States Minor Outlying Islands
CF	Central African Republic	IN	India	NO	Norway	US	United States
CG	Congo	IO	British Indian Ocean Territory	NP	Nepal	UY	Uruguay
CH	Switzerland	IQ	Iraq	NR	Nauru	UZ	Uzbekistan
CI	Côte d'Ivoire	IR	Iran (Islamic Republic of)	NU	Niue	VA	Vatican City State (Holy See)
CK	Cook Islands	IS	Iceland	NZ	New Zealand	VC	Saint Vincent and the Grenadines
CL	Chile	IT	Italy	OM	Oman	VE	Venezuela
CM	Cameroon	JM	Jamaica	PA	Panama	VG	Virgin Islands (British)
CN	China	JO	Jordan	PE	Peru	VI	Virgin Islands (U.S.)
CO	Colombia	JP	Japan	PF	French Polynesia	VN	Vietnam
CR	Costa Rica	KE	Kenya	PG	Papua New Guinea	VU	Vanuatu
CU	Cuba	KG	Kyrgyzstan	PH	Philippines	WF	Wallis and Futuna Islands
CV	Cape Verde	KH	Cambodia	PK	Pakistan	WS	Samoa
CX	Christmas Island	KI	Kiribati	PL	Poland	YE	Yemen
CY	Cyprus	KM	Comoros	PM	Saint Pierre and Miquelon	YT	Mayotte
CZ	Czech Republic	KN	Saint Kitts and Nevis	PN	Pitcairn	YU	Yugoslavia
DE	Germany	KP	Korea, Democratic People's Republic of	PR	Puerto Rico	ZA	South Africa
DJ	Djibouti	KR	Korea, Republic of	PT	Portugal	ZM	Zambia
DK	Denmark	KW	Kuwait	PW	Palau	ZR	Zaire
DM	Dominica	KY	Cayman Islands	PY	Paraguay	ZW	Zimbabwe
DO	Dominican Republic	KZ	Kazakhstan	QA	Qatar		
DZ	Algeria	LA	Lao People's Democratic Republic	RE	Réunion		
EC	Ecuador			RO	Romania		
EE	Estonia			RU	Russian Federation		
EG	Egypt			RW	Rwanda		
EH	Western Sahara			SA	Saudi Arabia		

## Appendix B: Glossary

### 480i/480p

Indicates the number of scanning lines and scanning format of an image signal. 480i indicates 480 scanning lines with interlace format, and 480p indicates 480 scanning lines with progressive format.

### Aspect ratio

A ratio which defines the shape of the rectangular picture in a TV. It is the width of the picture relative to the height. A conventional TV picture is 4:3 in aspect ratio.

### Bitstream

The digital form of multichannel audio data (e.g., 5.1-channel) before it is decoded into its various channels.

### Channel, CH

Stereo or multichannel audio consists of "channel" signals. "Stereo" audio consists of left and right channels, while 5.1-channel Dolby Digital consists of six channels (front left, front right, rear left, rear right, center and LFE (Low-Frequency Effect channel), for use with a sub-woofer).

### Chapter

The smallest division on DVD VIDEO. It is a division of a title and similar to a track for Audio CD or Video CD.

### Component video

Video signals with three channels of separate information that makes up the picture. There are some types of component video, such as R/G/B and Y/C<sub>B</sub>(P<sub>B</sub>)/C<sub>R</sub>(P<sub>R</sub>).

### Composite video

A single video signal commonly used in most consumer video products that contains all luminance, color, and synchronization information.

### Dolby Digital (AC3)

A six-channel system consisting of left, center, right, left rear, right rear and LFE (Low-Frequency Effect channel, for use with a sub-woofer) channels. All processing is done in the digital domain. Not all Dolby Digital discs contain six (5.1) channels of information.

### Dolby Surround/Dolby Pro Logic

Dolby Surround is a five-channel system consisting of left, center, right and left rear, right rear channels. All processing is done in the digital domain. Dolby Pro Logic is a four-channel system consisting of left, center, right and rear channels. The single rear channel is usually played through two speakers.

### Down-mix

Internal stereo mix of multichannel surround audio by a DVD player. The down-mix signals are output from stereo output connectors.

### DTS

A Digital Surround audio encoding format configured with six (5.1) channels, similar to Dolby Digital. It requires a decoder, either in the player or in an external receiver. DTS stands for Digital Theater Systems.

Not all DTS discs contain six (5.1) channels of information.

### Dynamic range

The difference between the loudest and softest sounds.

### Dynamic range compression

The dynamic range compression (DRC) reduces the dynamic range so that you can turn down the volume to avoid disturbing others yet still hear the detail of quiet passages.

### Extension

Several letters at the end of a file name. File name extensions usually follow a period and indicate the type of information stored in the file.

### Finalize

When conducting multisession recording, this means the closing of a session (fixing) by indicating the halting of writing so as to prevent the addition of any more sessions.

### F<sub>s</sub>

See "Sampling frequency."

### ID3 tag

A tag embedded in an MP3 file indicating what song, artist, and album it comes from. You can edit these tags.

### Interlaced scanning

In a conventional video system, a picture is shown on the display monitor in between lines of two halves. The Interlaced scanning system places lines of the second half of the picture in-between lines of the first half of the picture.

### ISO 9660 Format

The most common international standard for the logical format of files and directories on a CD-ROM.

### JPEG

A popular file format for still image compression and storage.

JPEG stands for Joint Photographic Experts Group. There are three sub-types of the JPEG format as follows.

- baseline JPEG: used for digital cameras, the web, etc.
- progressive JPEG: used for the web
- lossless JPEG: an old type, rarely used now

**Letter box**

A type of video display for normal (4:3) TV screens. Black bars are shown at the top and bottom of the image to allow playing of a wide-screen (16:9) movie without cutting off any of the image.

**Linear PCM audio**

PCM stands for "pulse code modulation." Linear PCM is the usual method for digitally encoding audio without compression, and is used for the audio tracks on DVD VIDEO discs, Audio CDs, etc.

**Menu**

Most DVD VIDEO or Video CD/SVCD discs provide a menu, through which users can select desired material, conditions, etc.

**MP3**

MP3 is an audio data compression format, which stands for MPEG-1 Audio Layer 3. Using MP3, you can achieve a data reduction of about 1:10.

**MPEG**

A family of Standards for compressing audio-visual information. "MPEG" standards include MPEG-1, MPEG-2 and MPEG-4. Video CD and MP3 are based on MPEG-1, while DVD is based on MPEG-2. MPEG stands for Moving Picture coding Experts Group.

**Multisession**

A method of adding data to a CD-R/CD-RW in more than one recording session using the Track-At-Once method.

**NTSC (National television system committee)**

A black and white and color television system format used in the U.S.A., Canada, Mexico and Japan.

**Packet Writing**

A method of writing data on a CD-R/CD-RW in small increments. Packets can be of fixed or variable length.

**PAL (Phase Alternation by Line)**

A color television system format used extensively in Western Europe.

**Pan and scan**

A type of video display for normal (4:3) TV screens. The image is zoomed to fill the screen vertically, and the field of view may be panned while the left and/or right sides of the picture are cut off.

**Parental lock**

A DVD function that prevents undesired viewing by children depending on disc content. Ordinarily, a password is required to play back a locked disc. Otherwise, undesirable scenes are automatically skipped or replaced with other pictures.

**PBC**

PBC stands for "Playback control" and is a method of controlling disc play for Video CDs (VCD). You are able to interact with the disc through menus.

**Progressive scanning**

Progressive scanning displays all the horizontal lines of a picture at one time, as a single frame. A progressive scanning DVD player converts the interlaced (480i) video from DVD into progressive (480p) format for connection to a progressive display. It dramatically increases the vertical resolution.

**Region code**

Code identifying a geographic region of compatibility for a DVD.

**Sampling frequency**

The rate at which measurements of an audio signal are taken during A/D conversion. The sampling frequency is expressed in samples per second.

**Surround**

An audio system with more than two (left and right) channels, usually including rear channels, etc.

**S-video**

A video signal which improves picture quality over standard composite connections. Used on Super VHS, DVD, high end TV monitors, etc.

**Title**

The largest division on DVD VIDEO.

**Track**

The smallest division on Audio CD, Video CD and SVCD discs.

**Transfer rate**

The rate of transferring digital data. The transfer rate is usually expressed in bits per second. The DVD system uses a variable transfer rate for high efficiency.

# Authorized Service Centers

---

QUALITY **JVC**<sup>®</sup> SERVICE  
*HOW TO LOCATE YOUR JVC SERVICE CENTER*  
**TOLL FREE: 1 (800) 537-5722**  
**<http://www.jvc.com>**

Dear Customer,

In order to receive the most satisfaction from your purchase, please read the instruction booklet before operating the unit. In the event that repairs are necessary, please call 1 (800)537-5722 for your nearest authorized servicer or visit our website at **[www.JVC.com](http://www.JVC.com)**

Remember to retain your Bill of Sale for Warranty Service.

---

## **Do not service the television yourself**

---

### **Caution**

To prevent electrical shock, do not open the cabinet. There are no user serviceable parts inside. Please refer to qualified service personnel for repairs.

### **Accessories**

To purchase accessories for your JVC product, please call toll free: 1 (800)882-2345 or on the web at **[www.JVC.com](http://www.JVC.com)**

---



# LIMITED WARRANTY

CONSUMER VIDEO 1-90

JVC COMPANY OF AMERICA warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIALS AND WORKMANSHIP from the date of original retail purchase for the period as shown below. ("The Warranty Period")

PARTS	<b>1 YR</b>	LABOR	<b>90 DAYS</b>
-------	-------------	-------	----------------

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY (50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN COMMONWEALTH OF PUERTO RICO.

**WHAT WE WILL DO:**

If this product is found to be defective, JVC will repair or replace defective parts at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products and parts thereof may be brought to a JVC authorized service center on a carry-in basis except for Television sets having a screen size 25 inches and above which are covered on an in-home basis.

**WHAT YOU MUST DO FOR WARRANTY SERVICE:**

Return your product to a JVC authorized service center with a copy of your bill of sale. For your nearest JVC authorized service center, please call toll free: (800) 537-5722.

If service is not available locally, box the product carefully, preferably in the original carton, and ship, insured, with a copy of your bill of sale plus a letter of explanation of the problem to the nearest JVC Factory Service Center, the name and location of which will be given to you by the toll-free number.

If you have any questions concerning your JVC Product, please contact our Customer Relations Department.

**WHAT IS NOT COVERED:**

This limited warranty provided by JVC does not cover:

1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model number or serial number has been altered, tampered with, defaced or removed;
2. Initial installation and installation and removal for repair;
3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
5. Signal reception problems and failures due to line power surge;
6. Video Pick-up Tubes/CCD Image Sensor, Cartridge, Stylus (Needle) are covered for 90 days from the date of purchase;
7. Accessories;
8. Batteries (except that Rechargeable Batteries are covered for 90 days from the date of purchase);

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty lasts, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.


JVC COMPANY OF AMERICA                      1700 Valley Road  
 DIVISION OF JVC AMERICAS CORP.            Wayne, NJ 07470

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

**For customer use:**

Enter below the Model No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. : \_\_\_\_\_ Serial No. : \_\_\_\_\_  
 Purchase data : \_\_\_\_\_ Name of dealer : \_\_\_\_\_

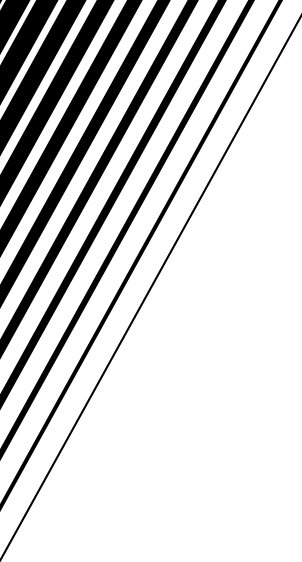

**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED