 
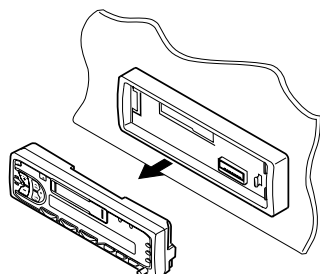 


# JVC

# SERVICE MANUAL

## CASSETTE RECEIVER

### KS-FX388

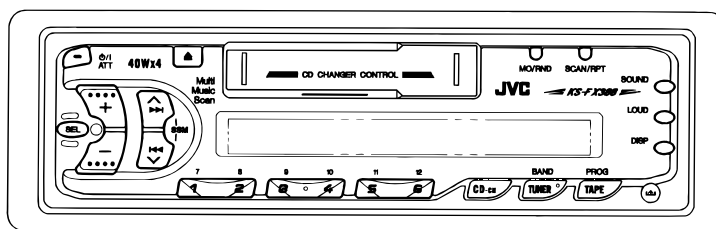

Areas suffix  
UF ----- China

When servicing this unit, please refer to the KS-FX230(No.49565) service manual, which has been issued previously.

A part different from KS-FX230 was described in this manual.

Contents of alteration

 
	KS-FX230	KS-FX388
Panel color	M.Dark gray	L.Gold
Volume button	M.Gray	L.Gold
Up/Down button	M.Gray	L.Gold
LCD Display	Nega	3D(Posi)

■ Parts list(General assembly)

P3-3

Block No.M1MM

△	Item	Parts name	Parts number		Q'ty
			KS-FX230UF	KS-FX388UF	
	11	SCREW	QYSDST2606Z	QYSDST2604Z	2
	25	UP/DOWN BUTTON	FSXP2026-032	FSXP2026-033	1
	26	+/- BUTTON	FSXP2033-031	FSXP2033-033	1
	36	NAME PLATE	FSYN3031-001A	FSYN3153-407	1
	40	LCD LENS	FSJK3010-002	FSJK3012-002	1
	44	SHEET	FSYH4046-002	FSYH4049-001	1
	49	LCD	QLD0034-001	QLD0023-001	1
	53	LCD LENS(REAR)	-----	FSJK3013-001	1
	B	NOSE PIECE ASSY	ZCKSFX230J-NPA	-----	1
	B-1	FRONT PANEL	FSJC1030-001	FSJC1030-002	1
	B-2	FINDER ASS'Y	FSJD3009-00B	FSJD3009-00J	1

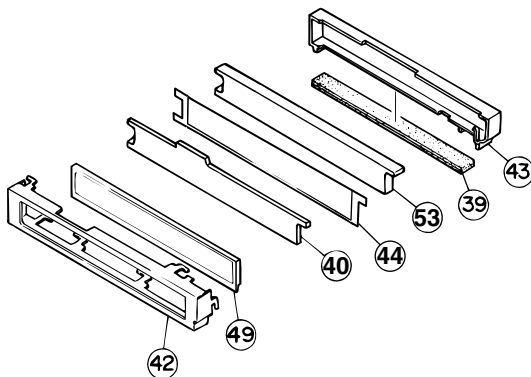

■ Electrical Parts list(Switch board)

P3-9

Block No.02

△	Item	Parts name	Parts number	
			KS-FX230UF	KS-FX388UF
	PL601	LAMP	QLL0033-001	QLL0024-001
	PL603	LAMP	QLL0033-001	QLL0024-001

■ Parts list(Packing)

P3-11

Block No.M3MM

△	Item	Parts name	Parts number		Q'ty
			KS-FX230UF	KS-FX388UF	
	P1	CARTON	FSPE3001-129	FSPE3001-196	1

■ Parts list(Accessories)

P3-11

Block No.M4MM

△	Item	Parts name	Parts number		Q'ty
			KS-FX230UF	KS-FX388UF	
	A1	INST BOOK	FSUN3029-181S	FSUN3153-181	1
	A2	INSTALL MANUAL	FSUN3029-T181S	FSUN3153-T181	1



VICTOR COMPANY OF JAPAN, LIMITED  
 MOBILE ELECTRONICS DIVISION  
 PERSONAL & MOBILE NETWORK B.U. 10-1,1Chome,Ohwatari-machi,Maebashi-city,Japan