

# JVC




## COMPACT COMPONENT SYSTEM

# MX-K5 — Consists of CA-MXK5 and SP-MXK5.

SP-MXK5

CA-MXK5

SP-MXK5

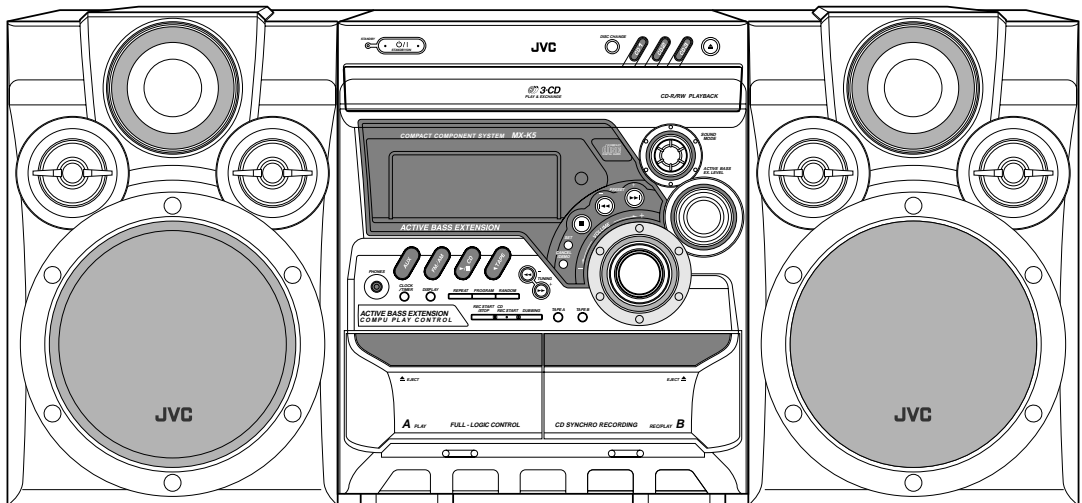

**COMPACT**  
**disc**  
DIGITAL AUDIO

## INSTRUCTIONS

**For Customer Use:**

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

LVT0689 -001A

[J]

# Warnings, Cautions and Others

## Mises en garde, précautions et indications diverses



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### For U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.  
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

### CAUTION

To reduce the risk of electrical shocks, fire, etc.:


1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

### ATTENTION


Afin d'éviter tout risque d'électrocution, d'incendie, etc.:

1. Ne pas enlever les vis ni les panneaux et ne pas ouvrir le coffret de l'appareil.
2. Ne pas exposer l'appareil à la pluie ni à l'humidité.

### Caution — STANDBY/ON switch!

Disconnect the mains plug to shut the power off completely. The  STANDBY/ON switch in any position does not disconnect the mains line. The power can be remote controlled.

### Attention — Commutateur STANDBY/ON!

Déconnecter la fiche de secteur pour couper complètement le courant. Le commutateur  STANDBY/ON ne coupe jamais complètement la ligne de secteur, quelle que soit sa position. Le courant peut être télécommandé.

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

1. PRODUIT LASER CLASSE 1
2. **ATTENTION:** Radiation laser invisible quand l'appareil est ouvert ou que le verrouillage est en panne ou désactivé. Éviter une exposition directe au rayon.
3. **ATTENTION:** Ne pas ouvrir le couvercle du dessus. Il n'y a aucune pièce utilisable à l'intérieur. Laisser à un personnel qualifié le soin de réparer votre appareil.

**For Canada/pour le Canada**

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.


**ATTENTION:** POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

**For Canada/pour le Canada**

THIS DIGITAL APPARATUS DOES NOT EXCEED THE CLASS B LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS AS SET OUT IN THE INTERFERENCE-CAUSING EQUIPMENT STANDARD ENTITLED "DIGITAL APPARATUS," ICES-003 OF THE DEPARTMENT OF COMMUNICATIONS.

CET APPAREIL NUMERIQUE RESPECTE LES LIMITES DE BRUITS RADIOELECTRIQUES APPLICABLES AUX APPAREILS NUMERIQUES DE CLASSE B PRESCRITES DANS LA NORME SUR LE MATERIEL BROUILLEUR: "APPAREILS NUMERIQUES", NMB-003 EDICTEE PAR LE MINISTRE DES COMMUNICATIONS.

# Introduction

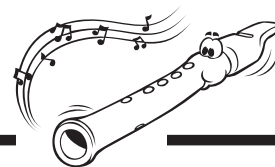

We would like to thank you for purchasing one of our JVC products. Before operating this unit, read this manual carefully and thoroughly to obtain the best possible performance from your unit, and retain this manual for future reference.

## About This Manual

This manual is organized as follows:

- The manual mainly explains operations using the buttons and controls on the unit. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the unit. If operation using the remote control is different from that using the unit, it is then explained.
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the unit, setting the volume, changing the sound effects, and others, which are explained in the section “Common Operations” on pages 9 and 10.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent damage or risk of fire/electric shock. Also gives you information which is not good for obtaining the best possible performance from the unit.



Gives you information and hints you had better know.

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold — between 5°C (41°F) and 35°C (95°F).
- Install the unit in a location with adequate ventilation to prevent internal heat built-up in the unit.
- Leave sufficient distance between the unit and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting heating in the room
  - In a damp room
  - If the unit is brought directly from a cold to a warm place
- Should this occur, the unit may malfunction. In this case, leave the unit turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.


### Others

- Should any metallic object or liquid fall into the unit, unplug the unit and consult your dealer before operating any further.
- If you are not going to operate the unit for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the unit since there are no user serviceable parts inside.

If anything goes wrong, unplug the AC power cord and consult your dealer.

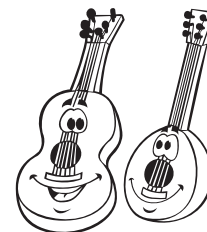



<b>Location of the Buttons and Controls .....</b>	<b>3</b>
Front Panel .....	3
Remote Control .....	5
<b>Getting Started .....</b>	<b>6</b>
Unpacking .....	6
Putting the Batteries into the Remote Control .....	6
Connecting Antennas .....	6
Connecting Speakers .....	7
Connecting Other Equipment .....	8
Cancelling the Display Demonstration .....	8
<b>Common Operations .....</b>	<b>9</b>
Turning On or Off the Power .....	9
Setting the Clock .....	9
Selecting the Sources .....	9
Adjusting the Volume .....	10
Reinforcing the Bass Sound .....	10
Selecting the Sound Modes .....	10
<b>Listening to FM and AM Broadcasts .....</b>	<b>11</b>
Tuning in a Station .....	11
Presetting Stations .....	11
Tuning in a Preset Station .....	11
<b>Playing Back CDs .....</b>	<b>12</b>
Loading CDs .....	12
Playing Back the Entire Discs	
— Continuous Play .....	12
Basic CD Operations .....	13
Programming the Playing Order of the Tracks	
— Program Play .....	13
Playing at Random — Random Play .....	14
Repeating Tracks or CDs — Repeat Play .....	14
Prohibiting Disc Ejection — Tray Lock .....	14
<b>Playing Back Tapes .....</b>	<b>15</b>
Playing Back a Tape .....	15
<b>Recording .....</b>	<b>16</b>
Recording a Tape on Deck B .....	16
Dubbing Tapes .....	17
CD Synchro Recording .....	17
<b>Using the Timers .....</b>	<b>18</b>
Using Daily Timer .....	18
Using Recording Timer .....	19
Using Sleep Timer .....	20
Timer Priority .....	20
<b>Maintenance .....</b>	<b>21</b>
<b>Troubleshooting .....</b>	<b>21</b>
<b>Specifications .....</b>	<b>22</b>

# Location of the Buttons and Controls

Become familiar with the buttons and controls on your unit.

## Front Panel

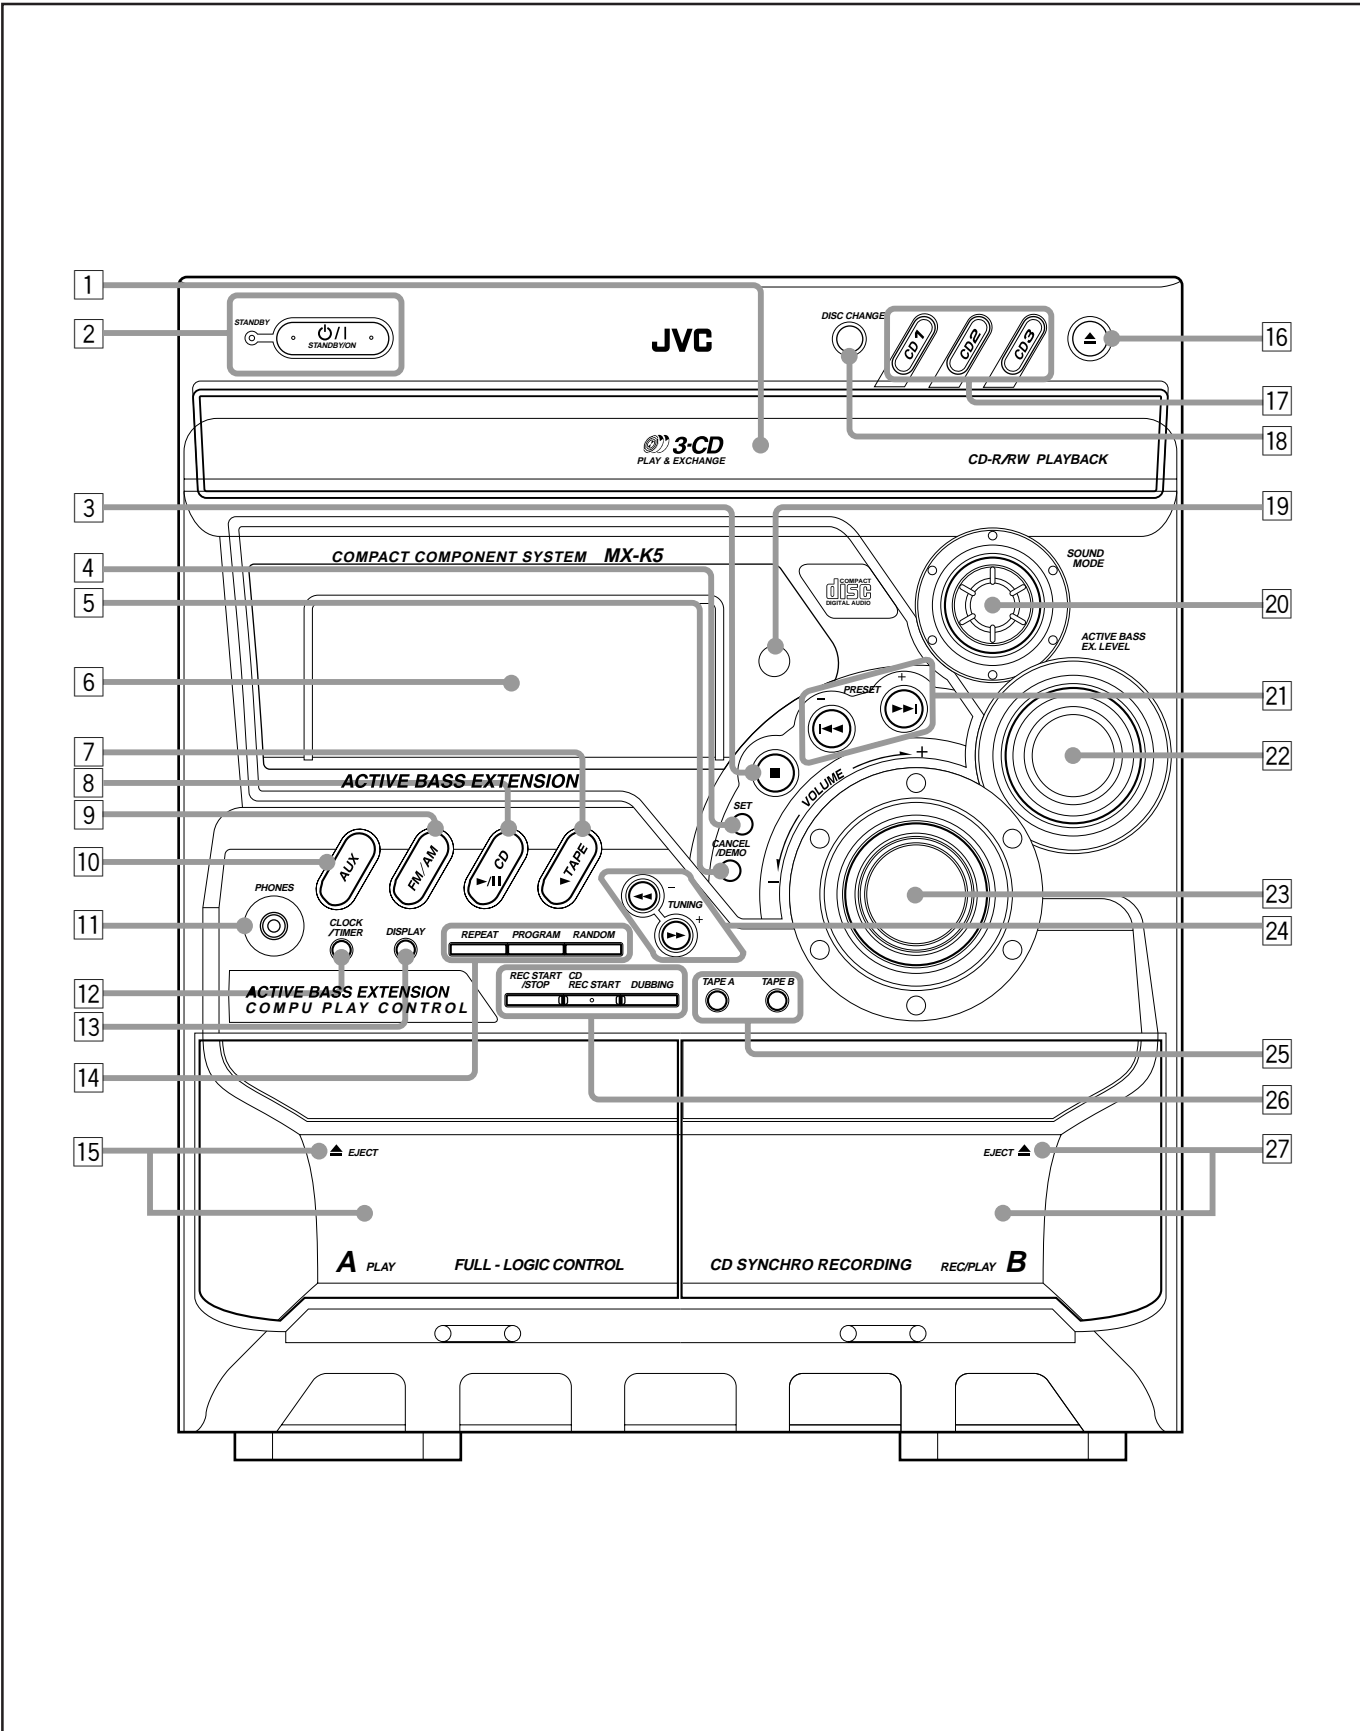

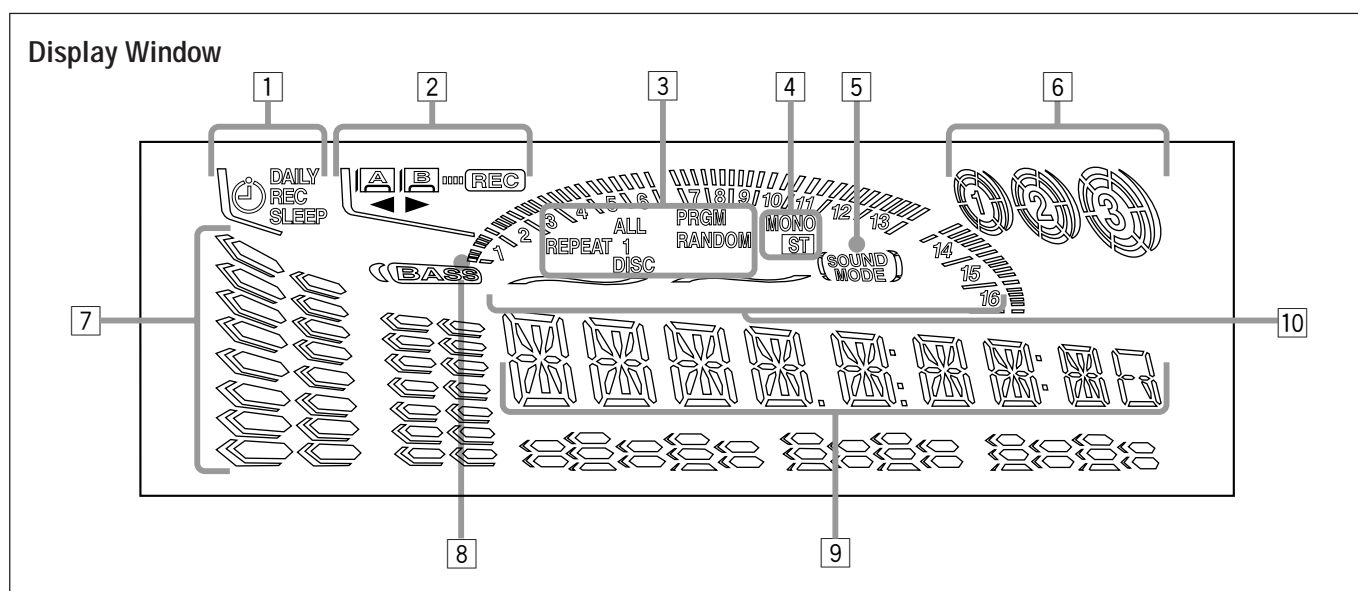

See pages in the parentheses for details.

### Front Panel

- 1 Carrousel
- 2 / STANDBY/ON button and STANDBY lamp (9)
- 3 (stop) button (12 – 17)
- 4 SET button (9, 11, 13, 18 – 20)
- 5 CANCEL button (9, 14, 19, 20)  
DEMO button (8)
- 6 Display window
- 7 TAPE button and lamp (9, 15, 17)  
*Pressing this button also turns on the unit.*
- 8 CD (play/pause) button and lamp (9, 12 – 14)  
*Pressing this button also turns on the unit.*
- 9 FM/AM button and lamp (9, 11)  
*Pressing this button also turns on the unit.*
- 10 AUX button and lamp (9)  
*Pressing this button also turns on the unit.*
- 11 PHONES jack (10)
- 12 CLOCK/TIMER button (9, 18 – 20)
- 13 DISPLAY button (9)
- 14 REPEAT button (14)  
PROGRAM button (13)  
RANDOM button (14)
- 15 Deck A cassette holder (15, 17)  
• Pressing the EJECT portion opens the holder.
- 16 (Carrousel open/close) button (12 – 14)  
*Pressing this button also turns on the unit.*
- 17 Disc number buttons and lamps (CD1, CD2, and CD3) (12, 13, 17)  
*Pressing one of these buttons also turns on the unit.*
- 18 DISC CHANGE button (12, 13)
- 19 Remote sensor
- 20 SOUND MODE control (10)
- 21 PRESET + / – buttons (11)  
 / (reverse search/forward search) buttons (9, 13, 18 – 20)
- 22 ACTIVE BASS EX. LEVEL control (10)


- 23 VOLUME control (10)
- 24 TUNING + / – buttons (11)  
 / (fast rewind/fast forward) buttons (13, 15)
- 25 TAPE A button (15)  
TAPE B button (15)
- 26 REC START/STOP button (16)  
CD REC START button (17)  
DUBBING button (17)
- 27 Deck B cassette holder (15 – 17)  
• Pressing the EJECT portion opens the holder.

### Display window

- 1 Timer indicators
  - DAILY (daily timer), REC (recording timer), SLEEP (sleep timer), and (timer) indicators
- 2 Tape operation indicators
  - A/B (operating deck), REC (recording), and (tape running) indicators
- 3 CD play mode indicators
  - REPEAT (1, 1 DISC, ALL DISC), PRGM (program), and RANDOM indicators
- 4 Tuner operation indicators
  - MONO and ST (stereo) indicators
- 5 SOUND MODE indicator
- 6 Disc indicators
- 7 Volume level, Bass level, and Sound Mode pattern indicators
- 8 BASS and its level indicators
- 9 Main display
  - Shows the source name, frequency, etc.
- 10 CD track number indicators




## Remote Control

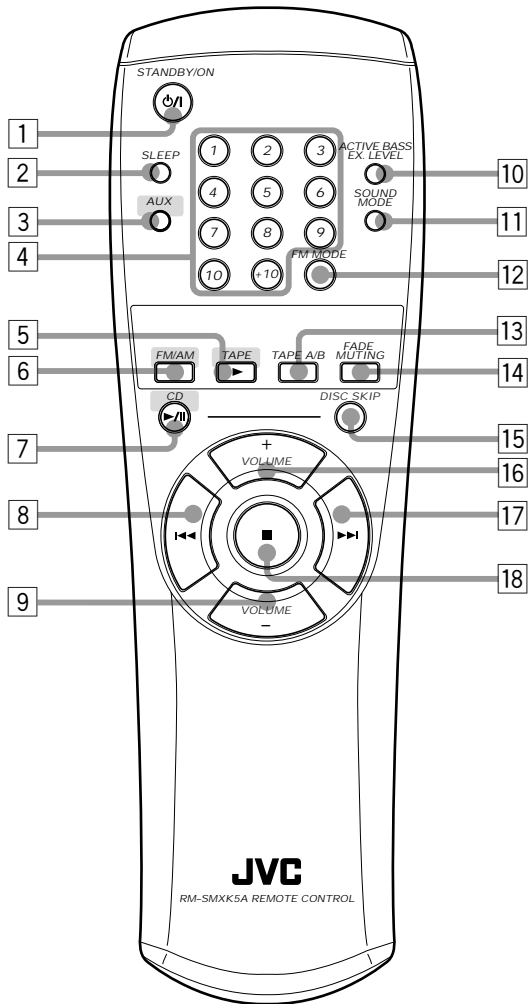

## Remote Control

- 1 STANDBY/ON button (9)  
*Pressing this button also turns on the unit.*
- 2 SLEEP button (20)
- 3 AUX button (9)  
*Pressing this button also turns on the unit.*
- 4 Number buttons (11, 13)
- 5 TAPE button (9, 15)  
*Pressing this button also turns on the unit.*
- 6 FM/AM button (9, 11)  
*Pressing this button also turns on the unit.*
- 7 CD button (9, 12 – 14)  
*Pressing this button also turns on the unit.*
- 8 (fast rewind/reverse search) button (11, 13, 15)
- 9 VOLUME – button (10)
- 10 ACTIVE BASS EX. LEVEL button (10)
- 11 SOUND MODE button (10)
- 12 FM MODE button (11)
- 13 TAPE A/B button (15)
- 14 FADE MUTING button (10)
- 15 DISC SKIP button (12)
- 16 VOLUME + button (10)
- 17 (fast forward/forward search) button (11, 13, 15)
- 18 (stop) button (12 – 17)

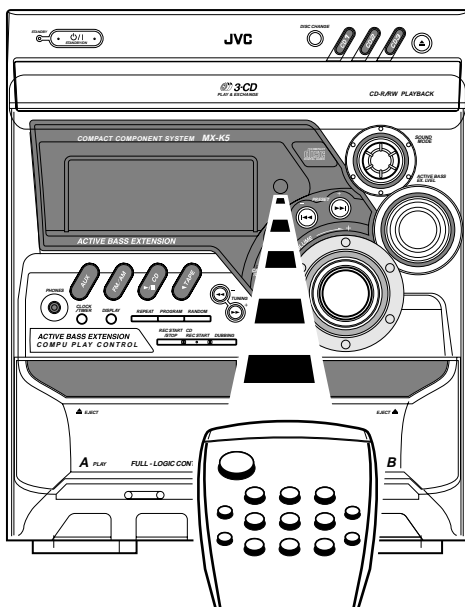

When using the remote control, point it at the remote sensor on the front panel.



## Unpacking

After unpacking, check to be sure that you have all the following items.

The number in the parentheses indicates the quantity of the pieces supplied.


- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)

If any is missing, consult your dealer immediately.

## Putting the Batteries into the Remote Control

Insert the batteries — UM-4/AAA/IEC R03 — into the remote control, by matching the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.


When the remote control can no longer operate the unit, replace both batteries at the same time.

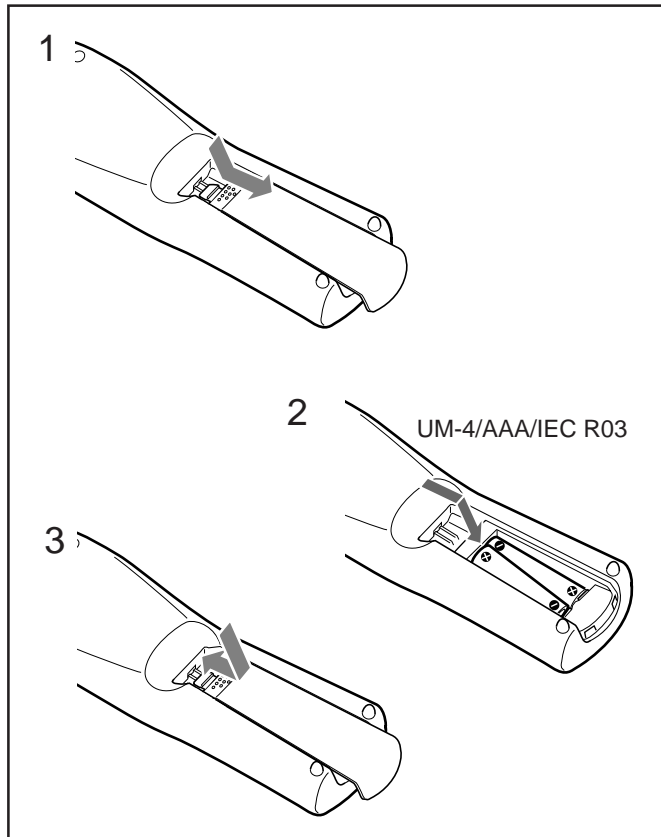

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, it will be damaged from battery leakage.

## Connecting Antennas

### FM antenna

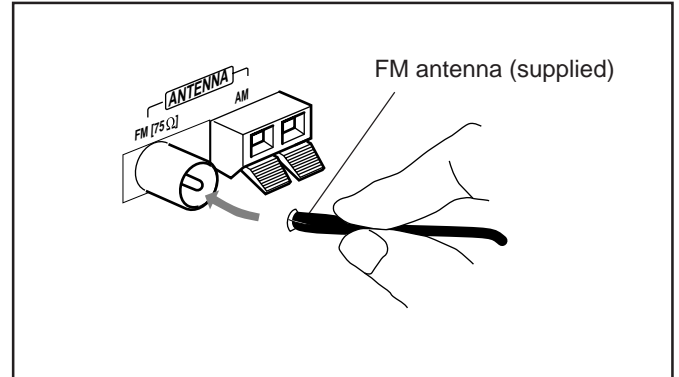

- 1 **Attach the FM antenna to the FM [75 Ω ] coaxial terminal.**
- 2 **Extend the FM antenna.**
- 3 **Fasten it up in the position which gives you the best reception, then fix it on the wall, etc.**




### About the supplied FM antenna


The FM antenna supplied with this unit can be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.

### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

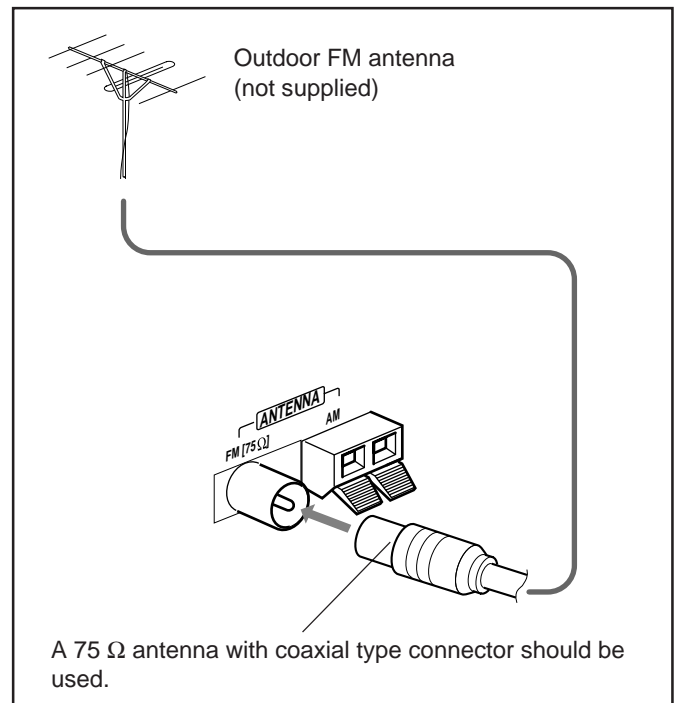

## AM antenna

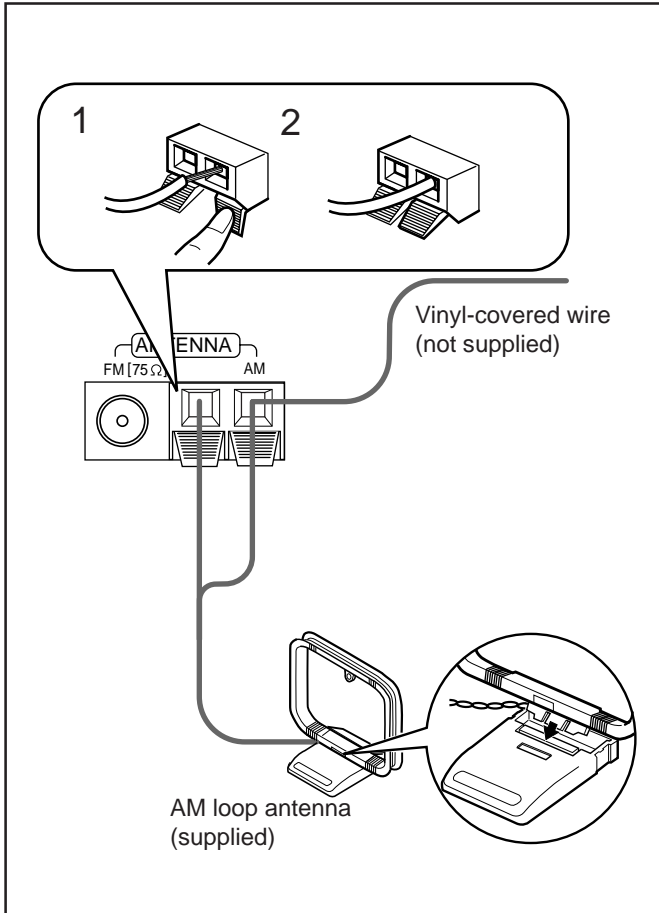

- 1 Press and hold the clamp of the AM terminal on the rear of the unit.
- 2 Insert the end of the AM loop antenna cord into the terminal.
- 3 Release the finger from the clamp.
- 4 Turn the AM loop antenna until you have the best reception.

### To connect an outdoor AM antenna


When reception is poor, connect a single vinyl-covered wire to the AM terminal and extend it horizontally. (The AM loop antenna must remain connected.)



#### For better reception of both FM and AM

- Make sure the antenna conductors do not touch any other terminals and connecting cords.
- Keep the antennas away from metallic parts of the unit, connecting cords, and the AC power cord.

## Connecting Speakers

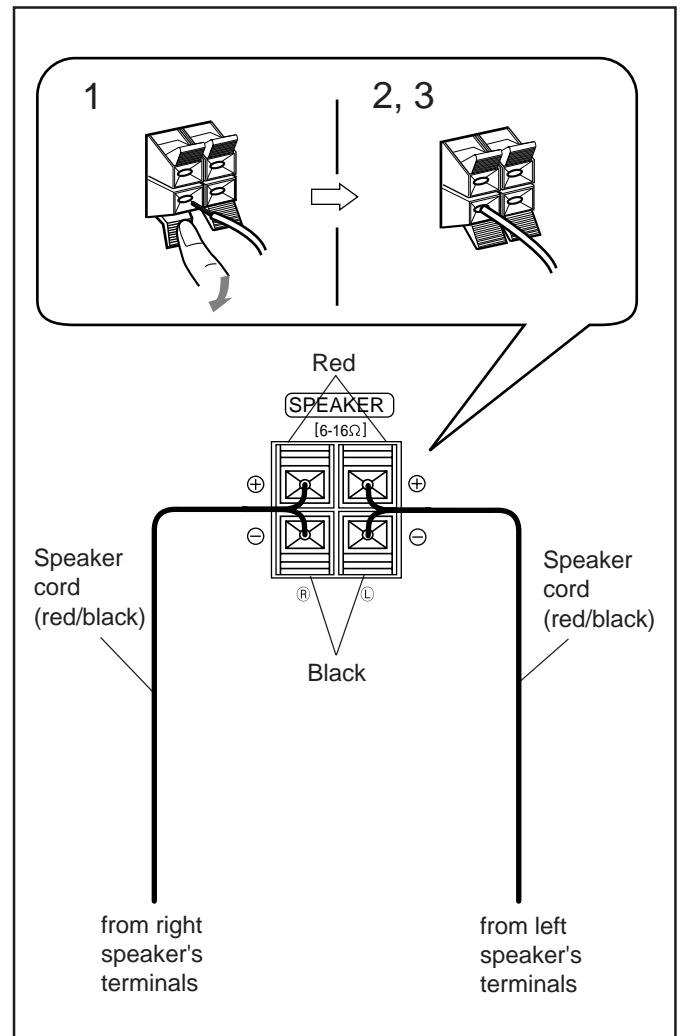

- 1 Press and hold the clamp of the speaker terminal on the rear of the unit.
- 2 Insert the end of the speaker cord into the terminal.  
Match the polarity (colors); Red (+) to red (+) and black (-) to black (-).
- 3 Release the finger from the clamp.

**IMPORTANT:** Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.



## Connecting Other Equipment


You can connect an audio equipment.



- DO NOT connect any equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

### To connect an analog component

Be sure that the plugs of the audio cords are color coded: White plugs and jacks are for left audio signals, and red ones for right audio signals.

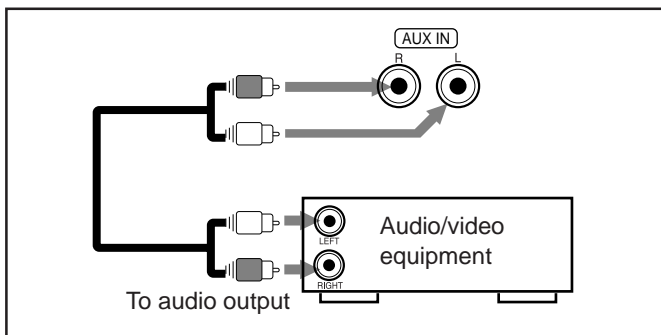

**For playing the other equipment through this unit,** connect between the audio output jacks on the other equipment and AUX IN jacks by using audio cords (not supplied).

**NOW, you can plug in the unit and other connected equipment FINALLY!**

## Canceling the Display Demonstration

When connecting the AC power cord into a wall outlet, the unit automatically starts display demonstration.

### On the unit ONLY:

**To cancel the display demonstration,** press DEMO.

CANCEL  
/DEMO



### When you press other buttons

The display demonstration stops temporarily. It will start automatically again (if no operation is done for 2 minutes) until you cancel it by pressing DEMO.

### To start the display demonstration manually


Press and hold DEMO again for more than 2 seconds.

CANCEL  
/DEMO

 



# Common Operations

## Turning On or Off the Power


To turn on the unit, press  STANDBY/ON so that the STANDBY lamp goes off.

WELCOME



To turn off the unit (on standby), press  STANDBY/ON again so that the STANDBY lamp lights up.

 GOOD BYE



A little power is always consumed even while the unit is on standby.

To switch off the power supply completely, unplug the AC power cord from the AC outlet.



**When you unplug the AC power cord or if a power failure occurs**

 
The clock is reset to “--:--” soon, while the tuner preset stations (see page 11) will be erased in a few days.

## Setting the Clock

Before operating the unit any further, first set the clock built in this unit. You can set the clock whether the unit is on or off.

### On the unit ONLY:


1 Press **CLOCK/TIMER**.



The hour digits start flashing on the display.




2 Press  or  to adjust the hour, then press **SET**.

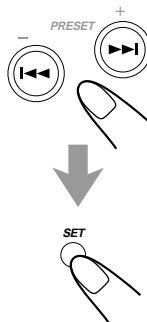

3 Press  or  to adjust the minute, then press **SET**.

CLOCK OK

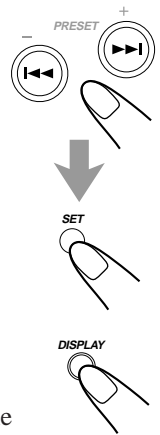

### To check the clock time

 
Press **DISPLAY** while playing any source.

- Each time you press the button, the source indication and the clock time alternate on the display.

### To adjust the clock again

If you have adjusted the clock before, you need to press **CLOCK/TIMER** repeatedly until “CLOCK” is selected.

- Each time you press the button, the clock/timer setting modes change as follows:



**If there is a power failure**

The clock loses the setting and is reset to “--:--”. You need to set the clock again.


## Selecting the Sources

To listen to the FM/AM broadcasts, press **FM/AM**. (See page 11.)

To play back CDs, press **CD ▶/||**. (See pages 12 – 14.)


To play back tapes, press **TAPE ▶**. (See page 15.)

To select the external equipment as the source, press **AUX**.

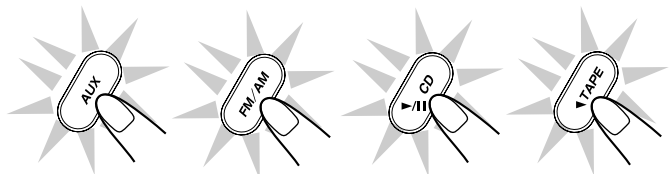

When you press the play button for a particular source (AUX, FM/AM, CD ▶/||, and TAPE ▶), the unit turns on (and the unit starts playing the source if it is ready — **COMPU PLAY CONTROL**).

- If you want to correct the hour after pressing **SET**, press **CANCEL**. The hour digits start flashing again.

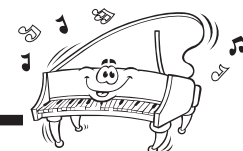


## Adjusting the Volume

You can adjust the volume level only while the unit is turned on.

Turn the **VOLUME** control clockwise to increase the volume or counterclockwise to decrease it.

- The volume level can be adjusted in 32 steps (VOL MIN, VOL 1 — VOL 30, and VOL MAX).

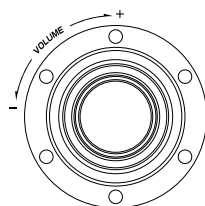

VOL 15

When using the remote control, press **VOLUME +** to increase the volume or press **VOLUME -** to decrease it.



### For private listening

Connect a pair of headphones to the **PHONES** jack. No sound comes out of the speakers. Be sure to turn down the volume before connecting or putting on headphones.



DO NOT turn off (on standby) the unit with the volume set to an extremely high level; otherwise, a sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the unit or start playing any source next time. REMEMBER you cannot adjust the volume level while the unit is on standby.

### To turn down the volume level temporarily

Press **FADE MUTING** on the remote control.

The volume level gradually decreases to "VOL MIN."

To restore the sound, press the button again.



## Reinforcing the Bass Sound


This function only affects the playback sound, but does not affect your recording.

The **ACTIVE BASS EX. (extension) LEVEL** control provided for this unit can maintain the richness and fullness of the bass sound while listening to any source at low volume.


Turn the **ACTIVE BASS EX. LEVEL** control clockwise to increase the bass sound or counterclockwise to decrease it.

- The bass sound level can be adjusted in 3 steps (LOW, MID, HIGH).

ACTIVE BASS EX. LEVEL

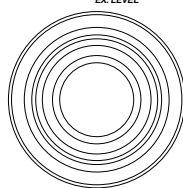

BASS indicator lights up when the Active Bass Extension is turned on.

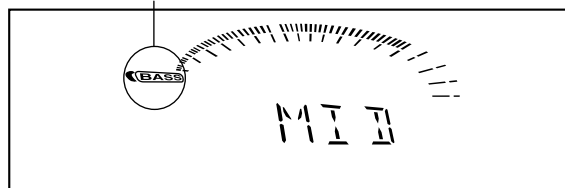

When using the remote control, press **ACTIVE BASS EX. LEVEL** to adjust the bass sound level. The Active Bass Extension level changes as **LOW → MID → HIGH → OFF → (back to the beginning)**.


To cancel the **Active Bass Extension**, turn the control counterclockwise until "OFF" appears.

## Selecting the Sound Modes


This function only affects the playback sound, but does not affect your recording.

You can select one of the 6 preset sound modes (3 surround modes and 3 SEA — Sound Effect Amplifier — modes).


To select the sound modes, turn the **SOUND MODE** control until the sound mode you want appears on the display.

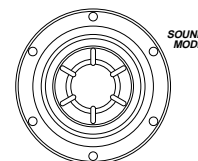

**SOUND MODE** indicator also lights up on the display.

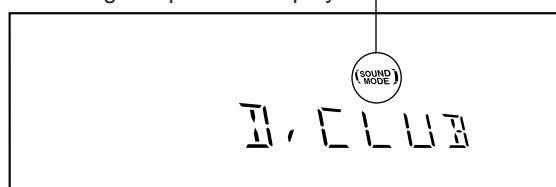

- As you turn the control, the sound modes change as follows:

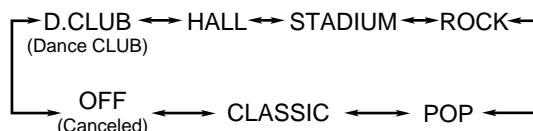

### Surround modes\*:

**D.CLUB:** Increases resonance and bass.

**HALL:** Adds depth and brilliance to the sound.

**STADIUM:** Adds clarity and spreads the sound, like in an outdoor stadium.

### SEA (Sound Effect Amplifier) modes:

**ROCK:** Boosts low and high frequency. Good for acoustic music.

**POP:** Good for vocal music.

**CLASSIC:** Good for classical music.

**OFF:** Cancels the sound mode.


- \* Surround elements are added to the SEA elements to create a being-there feeling in your room.

When one of these modes is selected, the **SOUND MODE** indicator lights up as — **(SOUND MODE)**

While one of the SEA modes (SEA elements without surround elements) is selected, the **SOUND MODE** indicator lights up as — **SOUND MODE**

When using the remote control, press **SOUND MODE** to adjust the sound mode.

- Each time you press the button, the sound modes change as follows:

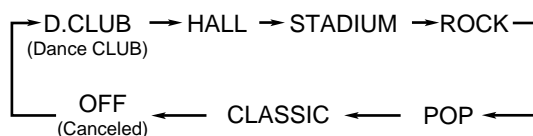

# Listening to FM and AM Broadcasts



## Tuning in a Station

### 1 Press FM/AM.

The unit automatically turns on and tunes in the previously tuned station (either FM or AM).

 
- Each time you press the button, the band alternates between FM and AM.



### 2 Start searching for stations.


#### On the unit:

Press and hold **TUNING +** or **TUNING -** for more than 1 second.



#### On the remote control:

Press and hold **◀◀** or **▶▶** for more than 1 second.

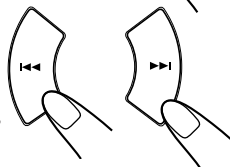

The unit starts searching for stations and stops when a station of sufficient signal strength is tuned in. If a program is broadcast in stereo, the ST (stereo) indicator lights up.

To stop during searching, press **TUNING +** or **TUNING -** (or **◀◀** or **▶▶** on the remote control).



When you press **TUNING +** or **TUNING -** (or **◀◀** or **▶▶** on the remote control) briefly and repeatedly

The frequency changes step by step.

### To change the FM reception mode

When an FM stereo broadcast is hard to receive or noisy, press **FM MODE** on the remote control so that "MONO" appears and the MONO indicator lights up on the display. Reception improves.



To restore the stereo effect, press **FM MODE** again so that "STEREO" appears on the display and the MONO indicator goes off from the display.

In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.

## Presetting Stations

### You can preset 30 FM and 15 AM stations.

In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

 
#### On the unit ONLY:

### 1 Tune in the station you want to preset.


- See "Tuning in a Station" above.

F-M 87.50


### 2 Press SET.



### 3 Press PRESET + or PRESET - to select a preset number.

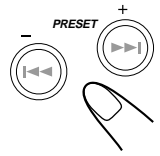

### 4 Press SET again.

 

The tuned station in step 1 is stored in the preset number selected in step 3.

- Storing a new station on a used number erases the previously stored one.



When you unplug the AC power cord or if a power failure occurs


The preset stations will be erased in a few days. If this happens, preset the stations again.

## Tuning in a Preset Station

### 1 Press FM/AM.

The unit automatically turns on and tunes in the previously tuned station (either FM or AM).


- Each time you press the button, the band alternates between FM and AM.

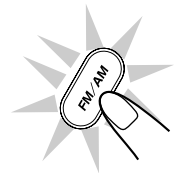

### 2 Select a preset number.

#### On the unit:

Press **PRESET +** or **PRESET -**.

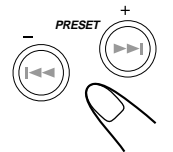

#### On the remote control:

Press the number buttons.


Ex.: For track number 5, press 5.

For track number 15, press +10, then 5.

For track number 20, press +10, then 10.

For track number 25, press +10, +10, then 5.

For track number 30, press +10, +10, then 10.

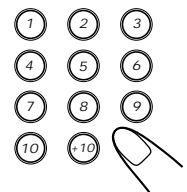



# Playing Back CDs

This unit has been designed to playback the following CDs: Audio CD, CD-R, and CD-RW.

Continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.

### When playing a CD-R or CD-RW


User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already “finalized.”

- You can play back your original CD-Rs or CD-RWs recorded in music CD format. (However, they may not be played back depending on their characteristics or recording conditions.)
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player’s lens is dirty.
- CD-RWs may require a longer readout time. (This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.)



### About the disc indicators

Each disc indicator corresponds to the disc tray of the same number.

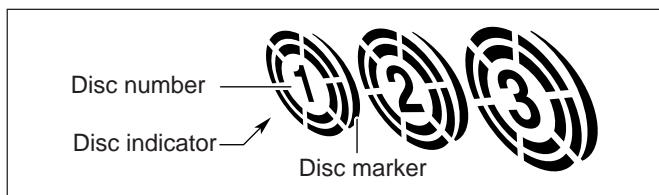

- The disc marker lights up for the disc number you have selected.
- The disc indicator rotates while the corresponding CD is being played.
- The disc indicator goes off when the unit has detected that there is no CD on the corresponding disc tray.


## Playing Back the Entire Discs — Continuous Play

You can play CDs continuously.


### 1 Load CDs.

### 2 Press one of the disc number buttons (CD1, CD2 or CD3) for the disc you want to play.

CD play starts from the first track of the selected disc.

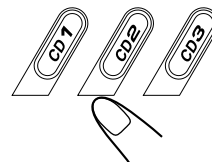


Track number of the currently playing disc is flashing. (Track numbers exceeding 16 are not displayed.)

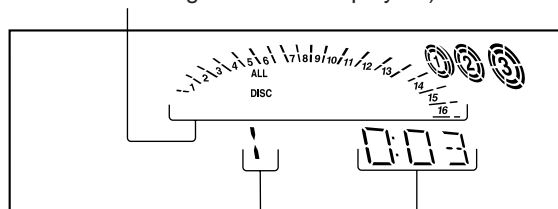

Track number Elapsed playing time

- Pressing CD ►/|| instead of the disc number buttons starts playing back if a CD is on the tray.

 When you turn on the unit, ALL DISC indicator lights up on the display automatically. If you do not want all the CDs to play back, select 1 DISC by pressing REPEAT.



- ALL DISC:** Plays all loaded CD.
- 1 DISC:** Plays back one CD.

To stop during play, press ■.

To remove the disc, press ▲.


## Loading CDs

### 1 Press ▲.

The unit automatically turns on and the carousel comes out.



### 2 Place one or two discs correctly on the front slots of the carousel, with its label side up.

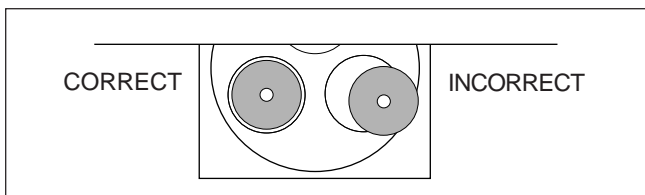

- When using a CD single (8 cm), place it on the inner circle of the disc tray.

### 3 If you wish to load a third disc, press DISC CHANGE on the unit or DISC SKIP on the remote control.

The carousel rotates by 120°.



### 4 Press ▲ again.

The carousel closes.





### CD playback sequence (when ALL DISC is selected)

When 3 CDs are loaded on the disc trays, they are played in one of the following sequences.

- When CD1 is pressed : CD1 ⇒ CD2 ⇒ CD3 (then stops)
- When CD2 is pressed : CD2 ⇒ CD3 ⇒ CD1 (then stops)
- When CD3 is pressed : CD3 ⇒ CD1 ⇒ CD2 (then stops)

\* When only 2 CDs are loaded, they are played in the same order, but the disc tray without a CD is skipped.

 
## Basic CD Operations

While playing a CD, you can do the following operations.

### To exchange CDs during playback of another

Press DISC CHANGE to change the CD, and the carousel comes out.

If you change CDs during play, the current play will not stop until all CDs you have changed are played.



To close the carousel, press DISC CHANGE or ▲.

### To skip to the another CD in the carousel


Press DISC SKIP on the remote control.



### To stop play for a moment

Press CD ►/||.

While pausing, "PAUSE" appears on the display.

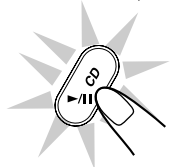


To resume play, press CD ►/|| again.

### To locate a particular point in a track

During play, press and hold ◀◀ or ▶▶.

- ◀◀: Fast reverses the disc.
- ▶▶: Fast forwards the disc.


When using the remote control, press and hold ◀◀ or ▶▶.

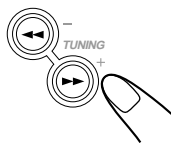

### To go to another track

Press ◀◀ or ▶▶ repeatedly before or during playback.

- ◀◀: Goes back to the beginning of the current or previous tracks.
- ▶▶: Skips to the beginning of the next or succeeding tracks.

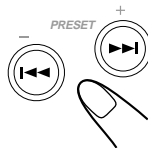


If you press and hold ◀◀ or ▶▶ on the unit before or during play

You can change the tracks continuously.

### To go to another track directly using the number buttons

Pressing the number button(s) before or during play allows you to start playing the track number you want.

- Ex.: For track number 5, press 5.  
 For track number 15, press +10, then 5.  
 For track number 20, press +10, then 10.  
 For track number 32, press +10, +10, +10, then 2.

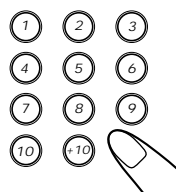

## Programming the Playing Order of the Tracks — Program Play

You can arrange the order in which the tracks play before you start playing. **You can program up to 32 tracks.**

- To use Repeat play (see page 14) for Program play, press REPEAT after starting Program play.

### On the unit ONLY:

#### 1 Load CDs.

- If the current playing source is not the CD player, press CD ►/||, then ■ before going to the next step.



#### 2 Press PROGRAM so that "PROGRAM" appears on the display:

The PRGM (program) indicator also lights up on the display.





- If a program has been stored in memory, the program is called up.

#### 3 Press one of the disc number buttons (CD1, CD2 or CD3) to select the disc number you want to play.

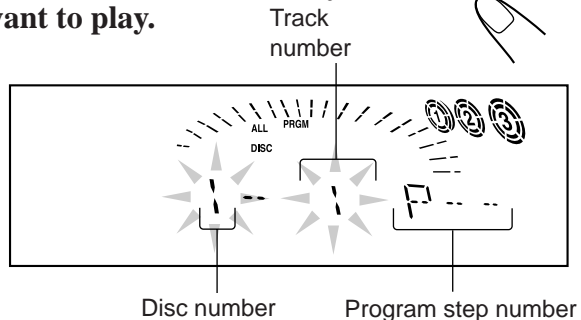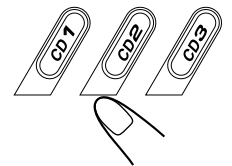

#### 4 Press ◀◀ or ▶▶ to select the track number, then press SET.

Each time you select a track and press SET, the selected track number is added to the CD track number indicator.

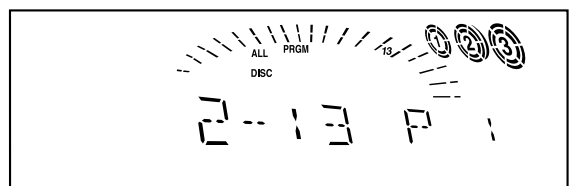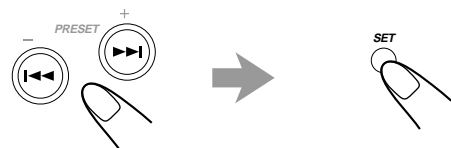





## 5 Program other tracks you want.

- To program tracks from the same disc, repeat step 4.
- To program tracks from a different disc, repeat steps 3 and 4.

## 6 Press CD ►/II.

The tracks are played in the order you have programmed.



**To stop during play, press ■.**

**To exit from Program play mode, press PROGRAM** again before or after play so that the unit enters Continuous play mode. (The program you have made is stored in memory until you turn off the unit or erase the program.)

### To modify the program

Before playing, you can erase the programmed tracks shown on the display by pressing CANCEL.

- Each time you press the button, the last programmed track is erased from the program.



**To check the program during play, press ►► (or ◀◀)** so that the playing track will change according to the program (or reverse) order.

**To add tracks in the program before play, simply select the disc numbers and/or track numbers you want to add by following steps 3 and 4 of the programming procedure on page 13.**

**To erase the entire program before or during play, press ■ twice.**

- Ejecting a carousel will also erase the stored memory.



**If you try to program a 33rd track**

“FULL” will appear on the display.



**If your entry is ignored**

You have tried to program a track from an empty tray, or a track number that does not exist on the CD. Such entries are ignored.

## Playing at Random — Random Play

The tracks of the selected CD will play at random.

### 1 Load a CD.

- If the current playing source is not the CD player, press CD ►/II, then ■ before going to the next step.



### 2 Press RANDOM so that “RANDOM” appears on the display.

The RANDOM indicator also lights up on the display.



- The tracks are played automatically at random. Random play ends when all tracks are played once.

**To stop during play, press ■.**

- Random play also stops when ▲ is pressed.

**To exit from Random play mode, press RANDOM** again during play so that the unit enters Continuous play mode.

**To use Random play mode, you have to exit from the Program play mode.**



**If you press ◀◀ or ►►**

Skips to the next track selected randomly.

## Repeating Tracks or CDs — Repeat Play

You can have all the CDs, the program or the individual track currently playing repeat as many times as you like.

**To repeat play, press REPEAT** during or before playing.

- Each time you press the button, Repeat play mode changes as follows, and the following indicator lights up on the display:



**REPEAT 1:** Repeats one track on one CD.

**REPEAT 1 DISC\*:** Repeats all the tracks on one CD.

**REPEAT ALL DISC:** Repeats all the tracks on all the CDs.

\* REPEAT 1 DISC is not used for Program play.

**To cancel Repeat play, press REPEAT** repeatedly until the REPEAT indicator (REPEAT 1, REPEAT 1 DISC or REPEAT ALL DISC) goes off from the display.

- Repeat play and Random play cannot be used at the same time.

## Prohibiting Disc Ejection — Tray Lock

You can prohibit CD ejection from the unit and lock CDs.

- This operation is possible only while the unit is on with CD selected as the source.

### On the unit ONLY:

**To prohibit disc ejection, press ▲** for the carousel while holding ■.

“LOCKED” appears for a while, and the carousel is locked.

**To cancel the prohibition and unlock the CDs, press ▲** for the carousel while holding ■.

“UNLOCKED” appears for a while, and the carousel is unlocked.



**If you try to eject CDs**


“LOCKED” appears to inform you that the Tray Lock is in use.

# Playing Back Tapes






## Playing Back a Tape

**1 Press EJECT (▲) for the deck you want to use.**

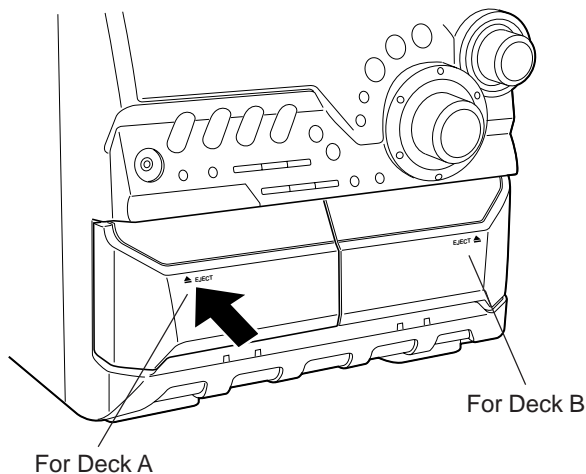

**2 Put a cassette in with the exposed part of the tape down.**

- You can play back only type I.

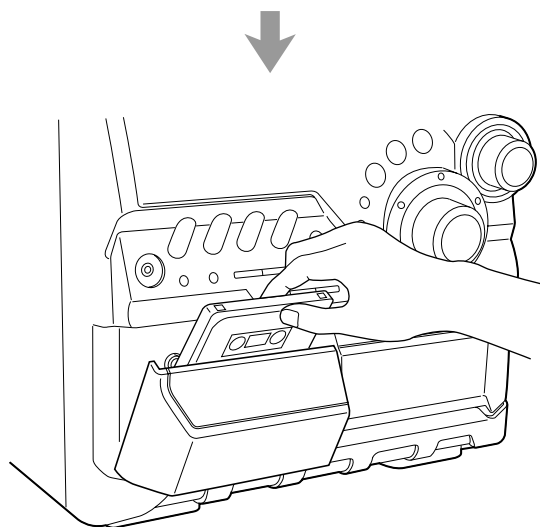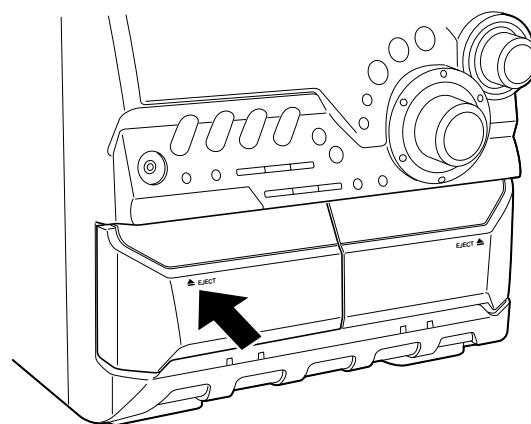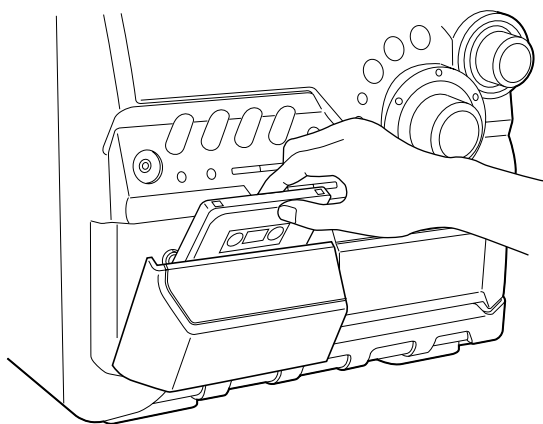

**3 Close the cassette holder gently.**

If you put cassettes in both decks A and B, the last deck which you have put a cassette into is selected.

**To operate the other deck,** press TAPE A or TAPE B (or TAPE A/B on the remote control).

**4 Press TAPE ►.**

The tape play starts and the tape running indicator (►) starts flashing slowly.

When the tape plays to the end, the deck automatically stops.




**To stop during play,** press ■.

**To operate the other deck,** press TAPE A or TAPE B (or TAPE A/B on the remote control), then TAPE ►.

**To fast-forward the tape,** press ►► (or ►►| on the remote control). The tape direction indicator (►) starts flashing quickly.

**To rewind the tape,** press ◀◀ (or |◀◀ on the remote control). The tape direction indicator (◀) starts flashing quickly.

**To remove the cassette,** press ▲ EJECT for deck A or EJECT ▲ for deck B.


 The use of the C-120 or thinner tape is not recommended, since characteristic deterioration may occur and this tape easily jams in the pinch-rollers and the capstans.

**IMPORTANT:**

- It should be noted that it may be unlawful to re-record pre-recorded tapes, records, or discs without the consent of the owner of copyright in the sound or video recording, broadcast or cable programme and in any literary, dramatic, musical, or artistic embodied therein.
- The recording level is automatically set correctly, so it is not affected by the VOLUME control, the SOUND MODE control, and the ACTIVE BASS EX. LEVEL control. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- While recording, you can hear sound modes through the speakers or headphones. However, the sound is recorded without these effects (see page 10).
- If recordings you have made have excessive noise or static, the unit may be too close to a TV. Place the unit away from the TV.
- You can use type I tape for recording.

**To protect your recording**

Cassettes have two small tabs on the back to protect unexpected erasure or re-recording.

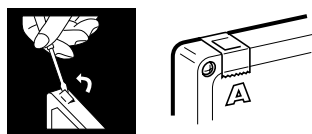

To protect your recording, remove these tabs.

To re-record on a protected tape, cover the holes with adhesive tape.


**To keep the best recording and playback sound quality**

If the heads, capstans, and pinch rollers of the cassette decks become dirty, the following will occur:

- Impaired sound quality
- Discontinuous sound
- Fading
- Incomplete erasure
- Difficulty in recording

**To clean the head, capstan, and pinch roller**

Use a cotton swab moistened with alcohol.

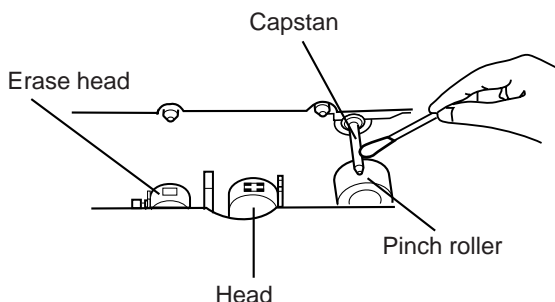


**To demagnetize the head**

Turn off the unit, and use a head demagnetizer (available at electronics and record shops).

## Recording a Tape on Deck B

**On the unit ONLY:**

**1 Press EJECT ▲ for the deck B.**

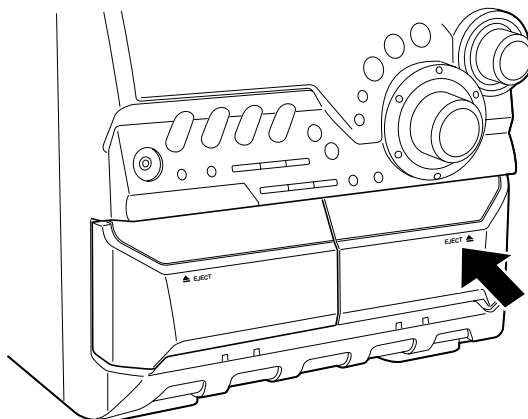

**2 Put a recordable cassette in with the exposed part of the tape down.**

**3 Close the cassette holder gently.**

**4 Start playing the source — FM, AM, CD player or auxiliary equipment connected to AUX IN jacks.**

- When you want to use the dubbing method, see “Dubbing Tapes” on page 17.
- When the source is CD, you can also use CD Synchro Recording (see “CD Synchro Recording” on page 17.)

**5 Press REC START/STOP.**

The REC (recording) indicator lights up on the display and recording starts.



**To stop during recording,** press REC START/STOP again or ■.


**To remove the cassette,** press EJECT ▲ for deck B.



## Dubbing Tapes

### On the unit ONLY:



1 Press TAPE ►, then ■.

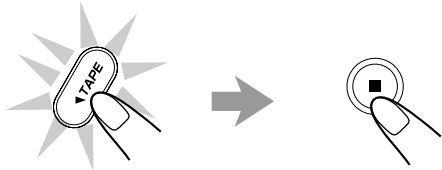

2 Put the source cassette into deck A, and a recordable cassette into deck B.

3 Press DUBBING.

 Dubbing starts.  
“DUBBING” appears, and the REC (recording) indicator lights up on the display.

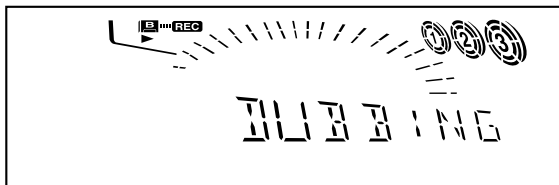

To stop during dubbing, press ■.

To remove the cassette, press ▲ EJECT for deck A and EJECT ▲ for deck B.

## CD Synchro Recording

You can easily record a CD onto a tape.


- You can also record the tracks in order you have made the program.

### On the unit ONLY:

1 Put a recordable cassette into deck B.



2 Place a disc correctly on the circle of the disc tray, with its label side up.

3 Press one of the disc number buttons (CD1, CD2 or CD3) to select the disc, then ■.

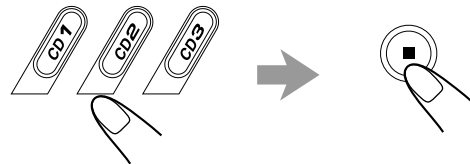

4 Press CD REC START.

 “CD REC” appears, and the REC (recording) indicator lights up on the display.

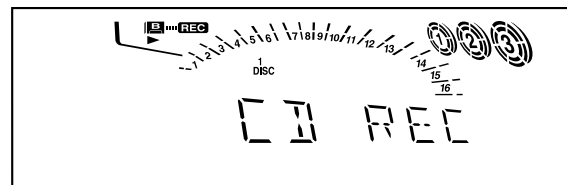

Deck B starts recording and the CD player starts playing.  
When the recording is done, the CD player and deck B stop.

To stop during CD Synchro Recording, press ■.

To remove the cassette, press EJECT ▲ for deck B.

There are three timers available — Daily Timer, Recording Timer, and Sleep Timer.

Before using the timers, you need to set the clock built in the unit. (See “Setting the Clock” on page 9.)

## Using Daily Timer

With Daily Timer, you can wake to your favorite music or radio program. You can set the timer whether the unit is on or off.

### How Daily Timer actually works

The unit automatically turns on, set the volume level to the preset level, and starts playing the specified source when the on-time comes (the ☺ indicator flashes while the timer is operating). Then, when the off-time comes, the unit automatically turns off (stands by).

The timer setting remains in memory until you change it.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- If you have made a mistake while setting timer, press CANCEL. (However, this does not always work. If CANCEL does not work, press CLOCK/TIMER repeatedly and start from step 1 again.)


### Before you start...

- *When using a CD as the source to play —*  
– Make sure there is a CD on the currently selected disc number tray.
- *When using a tape as the source to play —*  
– Make sure that a tape is in the deck whose deck indicator (A or B) is lit on the display.
- *When using the external component as the source to play —*  
– Set the timer equipped with the external component at the same time.


### On the unit ONLY:

#### 1 Press CLOCK/TIMER repeatedly until “DAILY” appears on the display.

☺ indicator lights up and the DAILY (daily timer) indicator also starts flashing on the display.

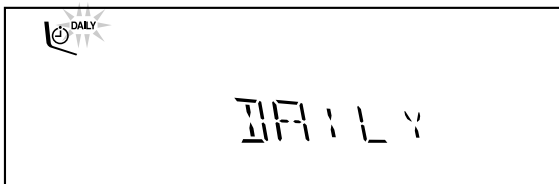

 
- Each time you press the button, the timer setting modes change as follows:



(See page 9.)


#### 2 Press CLOCK/TIMER again.

“ON TIME” appears for 2 seconds, then the unit enters on-time setting mode.

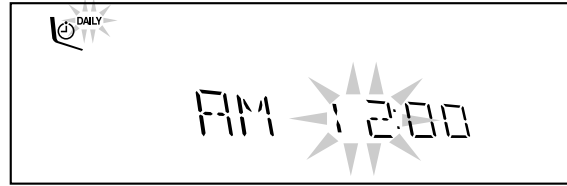


#### 3 Set the on-time you want the unit to turn on.

- 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
  - 2) Press ◀◀ or ▶▶ to set the minute, then press SET.
- “OFF TIME” appears for 2 seconds, then the unit enters off-time setting mode.

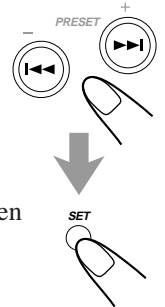


#### 4 Set the off-time you want the unit to turn off (on standby).

- 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
  - 2) Press ◀◀ or ▶▶ to set the minute, then press SET.
- The unit enters source selecting mode.

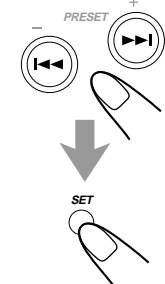

#### 5 Press ◀◀ or ▶▶ to select the source to play, then press SET.

- Each time you press ◀◀ or ▶▶, the source changes as follows:

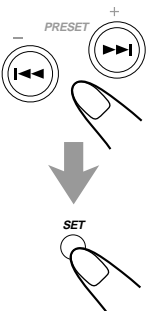

TUNER FM: tunes into a specified preset FM station.

→ go to step 6.

TUNER AM: tunes into a specified preset AM station.

→ go to step 6.

CD: plays a disc from the first track.


→ go to step 7.

TAPE: plays a tape in deck A or B. → go to step 7.

AUX: plays an external source. → go to step 7.



## 6 Select the preset station number.

Press ◀◀ or ▶▶ to select the preset station number, then press SET.  
The unit enters volume setting mode.

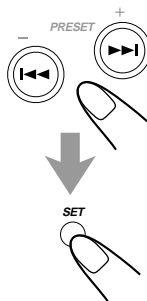


## 7 Press ◀◀ or ▶▶ to set the volume level.

- You can select the volume level from VOL MIN, VOL 1 — VOL 30, and VOL MAX.

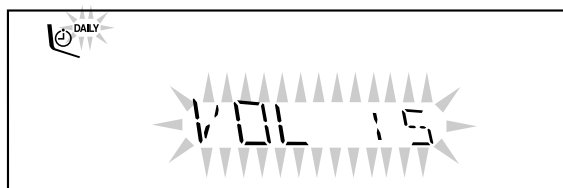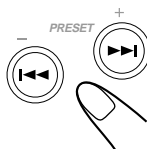


## 8 Press SET to complete the Daily Timer setting.

 The DAILY (daily timer) indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence for your confirmation.



## 9 Press ⏻/STANDBY/ON to turn off the unit (on standby) if you have set the Daily Timer with the unit turned on.

 

If the unit is turned on when the timer-on time comes Daily Timer does not work.

To turn on or off Daily Timer after its setting is done

### 1 Press CLOCK/TIMER repeatedly until "DAILY" appears on the display.



 
### 2 To turn off the Daily Timer, press CANCEL.

The DAILY (daily timer) indicator goes off from the display ("OFF" appears for a while). The Daily Timer is canceled, but the setting for the Daily Timer remains in memory.



### To turn on the Daily Timer, press SET.

The DAILY (daily timer) indicator lights up on the display. The settings you have done are shown on the display in sequence for your confirmation.



## Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically. You can set the timer whether the unit is on or off.

### How Recording Timer actually works

The unit automatically turns on, tunes into the specified station, sets the volume level to "VOL MIN," and starts recording when the on-time comes (the Ⓢ indicator flashes while the timer is operating). Then, when the off-time comes, the unit automatically turns off (stands by).

The timer setting remains in memory until you change it.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- If you have made a mistake while setting the timer, press CANCEL. (However, this does not always work. If CANCEL does not work, press CLOCK/TIMER repeatedly and start from step 1 again.)

### On the unit ONLY:

#### 1 Put a recordable cassette into deck B.

 
#### 2 Press CLOCK/TIMER repeatedly until "REC" appears on the display.



Ⓢ indicator lights up and the REC (recording timer) indicator also starts flashing on the display.




- Each time you press the button, the timer setting modes change as follows:



#### 3 Press CLOCK/TIMER again.

"ON TIME" appears for 2 seconds, then the unit enters on-time setting mode.

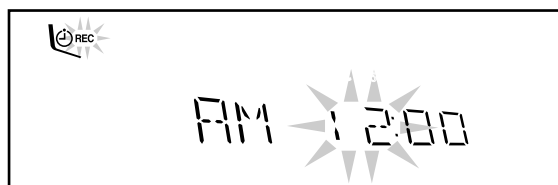







#### 4 Set the on-time you want the unit to turn on.

- 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
- 2) Press ◀◀ or ▶▶ to set the minute, then press SET.  
“OFF TIME” appears for 2 seconds, then the unit enters off-time setting mode.

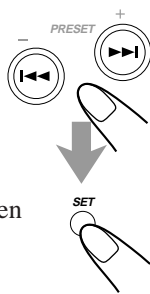


#### 5 Set the off-time you want the unit to turn off (on standby).

- 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
- 2) Press ◀◀ or ▶▶ to set the minute, then press SET.  
The unit enters preset station selecting mode.

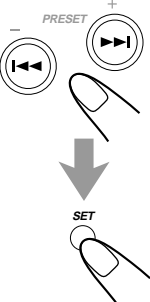



#### 6 Select the preset station.

- 1) Press ◀◀ or ▶▶ to select the band (“TUNER FM” or “TUNER AM”), then press SET.
- 2) Press ◀◀ or ▶▶ to select a preset channel number, then press SET.  
The REC (recording timer) indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence for your confirmation.

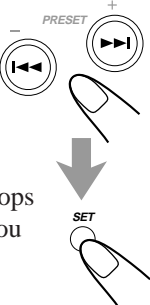

#### 7 Press STANDBY/ON to turn off the unit (on standby) if necessary.

 

**notes** If you want to listen to another source while recording Press REC START/STOP or  to stop recording. Without stopping it, you cannot change the source.

#### To turn on or off Recording Timer after its setting is done

- 1 Press CLOCK/TIMER repeatedly until “REC” appears on the display.



 
- 2 To turn off the Recording Timer, press CANCEL.

The REC (recording timer) indicator goes off from the display (“OFF” appears for a while). The Recording Timer is canceled, but the setting for the Recording Timer remains in memory.



#### To turn on the Recording Timer, press SET.

The REC (recording timer) indicator lights up on the display. The settings you have done are shown on the display in sequence for your confirmation.



## Using Sleep Timer

With Sleep Timer, you can fall asleep to music. You can set Sleep Timer when the unit is turned on.

### How Sleep Timer actually works

The unit automatically turns off after the specified time length passes.

 
### On the remote control ONLY:

#### 1 Press SLEEP.

The time length until the shut-off time appears and the SLEEP indicator starts flashing on the display.



- Each time you press the button, the time length changes as follows:



#### 2 Wait for about 5 seconds after specifying the time length.

The SLEEP indicator stops flashing and remains lit.

**To check the remaining time until the shut-off time**, press SLEEP once so that the remaining time until the shut-off time appears for about 5 seconds.

**To change the shut-off time**, press SLEEP repeatedly until the desired time length appears on the display.

**To cancel the setting**, press SLEEP repeatedly until “OFF” appears on the display so that the SLEEP indicator goes off from the display.


- Sleep Timer is also canceled when you turn off the unit.

## Timer Priority


Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are examples.

- **Recording Timer has priority over Daily Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

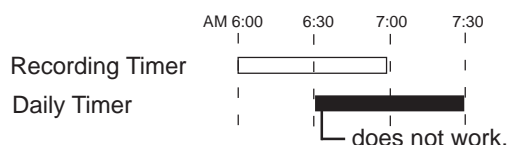

- If Sleep Timer overlaps with another timer (either Daily Timer or Recording Timer), a timer with the earlier shut-off time has priority.

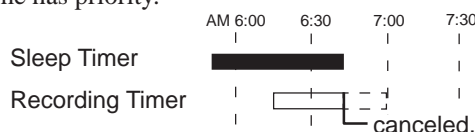

**When using the Recording Timer and Sleep Timer at the same time, pay special attention to the shut-off time.**

# Maintenance




To get the best performance of the unit, keep your discs, tapes, and mechanism clean.

## Handling discs



- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.

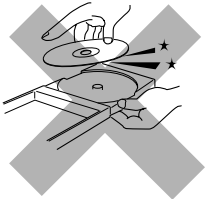

- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.




### To clean the disc

Wipe the disc with a soft cloth in a straight line from center to edge.



DO NOT use any solvent — such as conventional record cleaner, spray, thinner, or benzine — to clean the disc.

## Handling cassette tapes

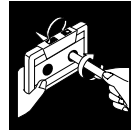

- If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.



- Be careful not to touch the tape surface.



- Avoid the following places to store the tape:
  - In dusty places
  - In direct sunlight or heat
  - In moist areas
  - Near a magnet

# Troubleshooting




If you are having a problem with your unit, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Cause	Action
No sound is heard.	Connections are incorrect or loose.	Check all connections and make corrections. (See pages 6 to 8.)
Hard to listen to broadcasts because of noise.	<ul style="list-style-type: none"> <li>• Antennas are disconnected.</li> <li>• The AM loop antenna is too close to the unit.</li> <li>• The FM antenna is not properly extended and positioned.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the antennas correctly and securely.</li> <li>• Change the position and direction of the AM loop antenna.</li> <li>• Extend the FM antenna at the best position.</li> </ul>
The disc sound is discontinuous.	The disc is scratched or dirty.	Clean or replace the disc. (See above.)
The carousel does not open or close.	<ul style="list-style-type: none"> <li>• The AC power cord is not plugged in.</li> <li>• The carousel is locked.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug the AC power cord.</li> <li>• Unlock the carousel. (See page 14.)</li> </ul>
The disc does not play.	The disc is placed upside down.	Place the disc with the label side up.
The cassette holders cannot be opened.	Power supply from the AC power cord has been cut off while the tape was running.	Turn on the unit.
Impossible to record.	Small tabs on the back of the cassette are removed.	Cover the holes with adhesive tape.
Operations are disabled.	The built-in microprocessor may malfunction due to external electrical interference.	Unplug the AC power cord and then plug it back in.
Unable to operate the unit from the remote control.	<ul style="list-style-type: none"> <li>• The path between the remote control and the remote sensor on the unit is blocked.</li> <li>• The batteries are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries.</li> </ul>



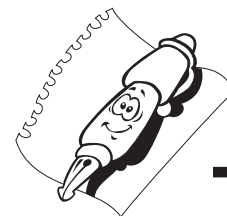

## Amplifier section — CA-MXK5

Output Power:

**90 W per channel, min. RMS, driven into 6  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.**

Audio input sensitivity/Impedance (at 1 kHz)

AUX: 400 mV/50 k $\Omega$

Speakers/Impedance: 6  $\Omega$  – 16  $\Omega$

### Tuner

FM tuning range: 87.50 MHz – 108.00 MHz

AM tuning range: 530 kHz – 1 710 kHz

### CD player

CD Capacity: 3 CDs

Dynamic range: 85 dB

Signal-to-noise ratio: 85 dB

### Cassette deck

Frequency response

Normal (type I): 50 Hz — 14 000 Hz

Wow and flutter

0.15% (WRMS)

### General

Power requirement: AC 120 V  $\sim$ , 60 Hz

Power consumption: 120 W / 158 VA (at operation)  
17 W (on standby)

Dimensions (approx.): 270 mm x 317 mm x 447 mm (W/H/D)  
(10 <sup>11</sup>/<sub>16</sub> in. x 12 <sup>1</sup>/<sub>2</sub> in. x 17 <sup>5</sup>/<sub>8</sub> in.)

Mass (approx.): 8.6 kg (19.0 lbs)

### Supplied accessories

See page 6.

## Speaker section — SP-MXK5

Type: 3-way bass-reflex type

Speaker units: Woofer: 13.5 cm (5 <sup>3</sup>/<sub>8</sub> in.) cone x1

Midrange: 5 cm (2 in.) cone x1

Tweeter: 2 cm (<sup>13</sup>/<sub>16</sub> in.) dome x1

Power handling capacity:

90 W

Impedance: 6  $\Omega$

Frequency range: 45 Hz — 20 000 Hz

Sound pressure level: 82 dB/W•m

Dimensions (approx.): 215 mm x 323 mm x 242 mm (W/H/D)  
(8 <sup>1</sup>/<sub>2</sub> in. x 12 <sup>3</sup>/<sub>4</sub> in. x 9 <sup>9</sup>/<sub>16</sub> in.)

Mass (approx.): 3.3 kg (7.3 lbs) each

Design and specifications are subject to change without notice.

## HOW TO LOCATE YOUR JVC SERVICE CENTER

TOLL FREE : 1-800-537-5722

<http://www.jvcservice.com>

Dear customer:

In order to receive the most satisfaction from your purchase, read the instruction booklet before operating the unit. In the event that repair is necessary, or for the address nearest your location, please refer to the factory service center list below or within the Continental United States, Call 1-800-537-5722 for your authorized servicer. Remember to retain your Bill of Sale for Warranty Service.

—JVC

### JVC SERVICE & ENGINEERING

#### COMPANY OF AMERICA

DIVISION OF JVC AMERICAS CORP.

#### FACTORY SERVICE CENTER LOCATIONS

10 New Maple Avenue  
Pine Brook, NJ 07058-9641  
(973) 396-1000

1500 Lakes Parkway  
Lawrenceville, GA 30243-5857  
(770) 339-2582

705 Enterprise Street  
Aurora, IL 60504-8149  
(630) 851-7855

5665 Corporate Avenue  
Cypress, CA 90630-0024  
(714) 229-8011

2969 Mapunapuna Place  
Honolulu, HI 96819-2040  
(808) 833-5828

10700 Hammerly, Suite 110  
Houston, TX 77043  
(713) 935-9331

13 Cummings Park  
Woburn, MA 01801  
(781) 376-9100

8192 State Road 84  
Davie, FL 33324  
(954) 472-1960

890 Dubuque Avenue  
South San Francisco, CA 94080-1804  
(650) 871-2666

*Sophisticated electronic products may require occasional service. Just as quality is a keyword in the engineering and production of the wide array of JVC products, service is the key to maintaining the high level of performance for which JVC is world famous. The JVC service and engineering organization stands behind our products.*

NATIONAL HEADQUARTERS  
JVC SERVICE & ENGINEERING COMPANY OF AMERICA  
DIVISION OF JVC AMERICAS CORP.

1700 Valley Road  
Wayne, NJ 07470

#### **If you ship the product •••**

Pack your JVC unit in the original carton or one of equivalent size and strength. Enclose, with the unit, a letter stating the problem or symptom that exists and also a copy of the receipt or bill of sale you received when you purchased your JVC unit. Print your home return address on the outside and the inside of the carton. Send to the appropriate JVC Factory Service Center as listed above.

#### **Don't service it yourself.**

##### **CAUTION**

To prevent electrical shock, do not open the cabinet. No user serviceable parts inside.  
Refer servicing to qualified service personnel.

#### **ACCESSORIES**

To purchase accessories for your JVC product, you may contact your local JVC Dealer. Or from the 48 Continental United States call toll free : 800-882-2345



# LIMITED WARRANTY AUDIO-1

JVC COMPANY OF AMERICA warrants this product and all parts thereof, except as set forth below ONLY TO THE ORIGINAL PURCHASER AT RETAIL to be FREE FROM DEFECTIVE MATERIAL AND WORKMANSHIP from the date of original retail purchase for the period as shown below. ("The Warranty Period.")

PARTS	LABOR
1YR	1YR

THIS LIMITED WARRANTY IS VALID ONLY IN THE FIFTY(50) UNITED STATES, THE DISTRICT OF COLUMBIA AND IN COMMONWEALTH OF PUERTO RICO.

### WHAT WE WILL DO:

If this product is found to be defective, JVC will repair or replace defective parts at no charge to the original owner. Such repair and replacement services shall be rendered by JVC during normal business hours at JVC authorized service centers. Parts used for replacement are warranted only for the remainder of the Warranty Period. All products and parts thereof may be brought to a JVC authorized service center on a carry-in basis except for Television sets having a screen size 25 inches and above which are covered on an in-home basis.

### WHAT YOU MUST DO FOR WARRANTY SERVICE:

Return your product to a JVC authorized service center with a copy of your bill of sale. For your nearest JVC authorized service center, please call toll free: (800)537-5722. If service is not available locally, box the product carefully, preferably in the original carton, and ship, insured, with a copy of your bill of sale plus and letter of explanation of the problem to the nearest JVC Factory Service Center, the name and location of which will be given to you by the toll-free number. If you have any questions concerning your JVC Product, please contact our Customer Relations Department.

### WHAT IS NOT COVERED:

- This limited warranty provided by JVC does not cover:
1. Products which have been subject to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, or if repaired or serviced by anyone other than a service facility authorized by JVC to render such service, or if affixed to any attachment not provided with the products, or if the model number or serial number has been altered, tampered with, defaced or removed;
  2. Initial installation and installation and removal for repair;
  3. Operational adjustments covered in the Owner's Manual, normal maintenance, video and audio head cleaning;
  4. Damage that occurs in shipment, due to act of God, and cosmetic damage;
  5. Signal reception problems and failures due to line power surge;
  6. Video Pick-up Tubes/CCD Image Sensor, Cartridge, Stylus(Needle) are covered for 90 days from the date of purchase;
  7. Accessories;
  8. Batteries (except the Rechargeable Batteries are covered for 90 days from the date of purchase);

There are no express warranties except as listed above.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN.

JVC SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, WHETHER DIRECT, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS) RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion of incidental or consequential damages or limitations on how long an implied warranty last, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

JVC COMPANY OF AMERICA  
DIVISION OF JVC AMERICAS CORP.

1700 Valley Road  
Wayne, NJ 07470

REFURBISHED PRODUCTS CARRY A SEPARATE WARRANTY, THIS WARRANTY DOES NOT APPLY. FOR DETAILS OF REFURBISHED PRODUCT WARRANTY, PLEASE REFER TO THE REFURBISHED PRODUCT WARRANTY INFORMATION PACKAGED WITH EACH REFURBISHED PRODUCT.

For customer use:

Enter below the Model No. and Serial No. which is located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase date: \_\_\_\_\_

Name of dealer: \_\_\_\_\_

