 


# JVC



## COMPACT COMPONENT SYSTEM SISTEMAS DE COMPONENTES COMPACTOS SISTEMA DE COMPONENTE COMPACTO

# CA-MXG50

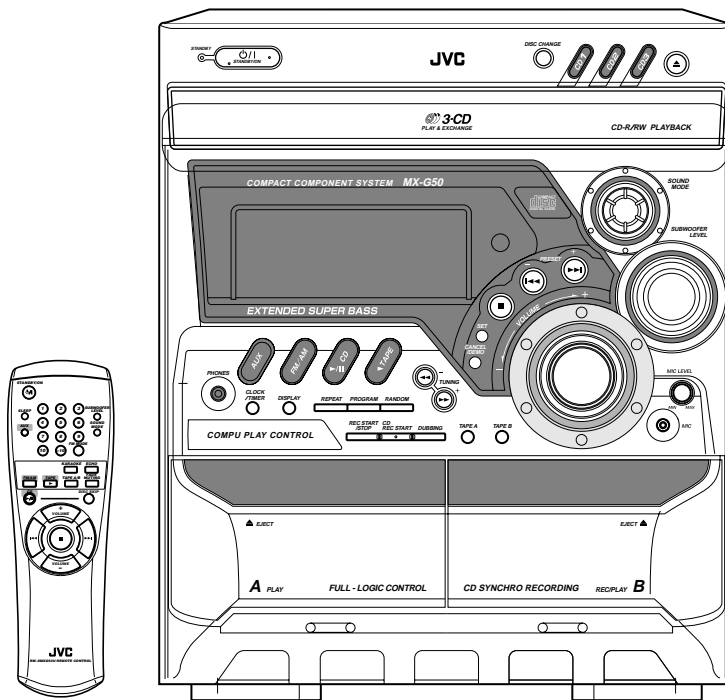

**COMPACT**  
**disc**  
**DIGITAL AUDIO**

## INSTRUCTIONS MANUAL DE INSTRUCCIONES INSTRUÇÕES


### For Customer Use:

Enter below the Model No. and Serial No. which are located either on the rear, bottom or side of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

 LVT0692-007A  
[UW]

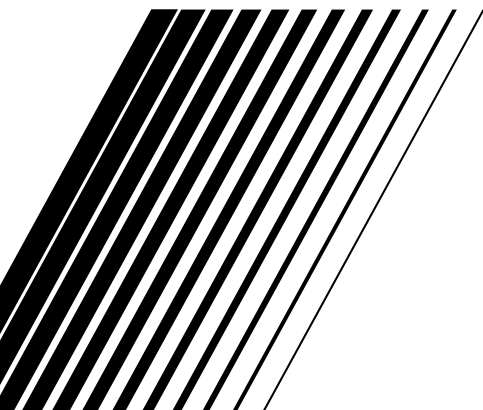

## **Warnings, Cautions and Others Avisos, precauciones y otras notas Advertências, precauções e outras notas**

---

### **Caution — $\odot/I$ switch!**

Disconnect the mains plug to shut the power off completely. The  $\odot/I$  switch in any position does not disconnect the mains line. The power can be remote controlled.

### **Precaución — Interruptor $\odot/I$ !**

Desconectar el cable de alimentación para desactivar la alimentación totalmente. Cualquiera que sea la posición de ajuste del interruptor  $\odot/I$ , la alimentación no es cortada completamente. La alimentación puede ser controlada remotamente.

### **Precaução — Interruptor $\odot/I$ !**

Desconectar o cabo de alimentação para desligar a alimentação por completo. Qualquer que seja a posição de ajuste do interruptor  $\odot/I$ , a alimentação não é completamente cortada. A alimentação pode ser controlada remotamente.

**CAUTION**

To reduce the risk of electrical shocks, fire, etc.:

1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

**CAUTION**

- Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
- Do not place any naked flame sources, such as lighted candles, on the apparatus.
- When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
- Do not use this apparatus in a bathroom or places with water. Also do not place any containers filled with water or liquids (such as cosmetics or medicines, flower vases, potted plants, cups, etc.) on top of this apparatus.

**PRECAUCIÓN**

Para reducir riesgos de choques eléctricos, incendio, etc.:

1. No extraiga los tornillos, los cubiertas ni la caja.
2. No exponga este aparato a la lluvia o a la humedad.

**PRECAUCIÓN**

- No obstruya las rendijas o los orificios de ventilación. (Si las rendijas o los orificios de ventilación quedan tapados con un periódico, un trozo de tela, etc., no se podrá disipar el calor).
- No ponga sobre el aparato ninguna llama al descubierto, como velas encendidas.
- Cuando tenga que descartar las pilas, tenga en cuenta los problemas ambientales y observe estrictamente los reglamentos o las leyes locales sobre disposición de las pilas.
- No utilice este aparato en el cuarto de baño o en lugares donde hay agua. Tampoco coloque ningún recipiente que contenga agua u otros líquidos (frascos de cosméticos o medicinas, floreros, macetas, vasos, etc.) encima de este aparato.

**PRECAUÇÃO**

Para reduzir riscos de choques elétricos, incêndio, etc.:

1. Não remova parafusos e tampas ou desmonte a caixa.
2. Não exponha este aparelho à chuva nem à umidade.

**AVISO**

- Não obstrua as aberturas e orifícios de ventilação. (Se os orifícios ou aberturas de ventilação estiverem obstruídos por qualquer papel ou tecido, não haverá circulação do ar quente.)
- Não coloque nenhum objeto com chamas, como velas acesas, sobre o aparelho.
- Ao descartar as baterias, leve em consideração os problemas que possam ser causados ao meio ambiente e os regulamentos e leis locais e governamentais sobre recolhimento dessas baterias devem ser rigorosamente seguidos.
- Não utilize este aparelho em banheiros ou em locais com água. Além disso, não coloque nenhum recipiente com água ou qualquer tipo de líquido (como cosméticos ou remédios, vasos com flores, plantas, xícaras, etc.) sobre o aparelho.

**Caution: Proper Ventilation**

To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

- 1 Front: No obstructions and open spacing.
- 2 Sides/ Top/ Back: No obstructions should be placed in the areas shown by the dimensions below.
- 3 Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm or more.

**Precaución: el aparato debe estar bien ventilado**

 
Para evitar posibles riesgos de descargas eléctricas e incendios y prevenir cualquier posible daño, coloque el aparato del modo siguiente:

- 1 Parte delantera: No ponga nada delante, deje el espacio libre.
- 2 Laterales/ parte superior/ parte trasera: No se debería colocar nada en las áreas y las distancias que se detallan a continuación.
- 3 Parte inferior: Coloque el aparato sobre una superficie recta. Debe haber buena circulación de aire; para ello, coloque el aparato sobre una base a una altura mínima de 10 cm.

**Precaução: Ventilação adequada**

Para evitar riscos de choques elétricos e incêndios, e prevenir avarias, instale o aparelho como segue:


- 1 Parte frontal: Sem obstruções e espaços abertos.
- 2 Partes laterais/Tampa/Posterior: Nenhuma obstrução deverá ser colocada entre as áreas cujas dimensões são indicadas abaixo.
- 3 Parte inferior: Instale-o sobre uma superfície plana. Deverá ser mantido espaço suficiente para a ventilação se este for instalado numa posição que tenha uma altura de 10 cm ou mais.

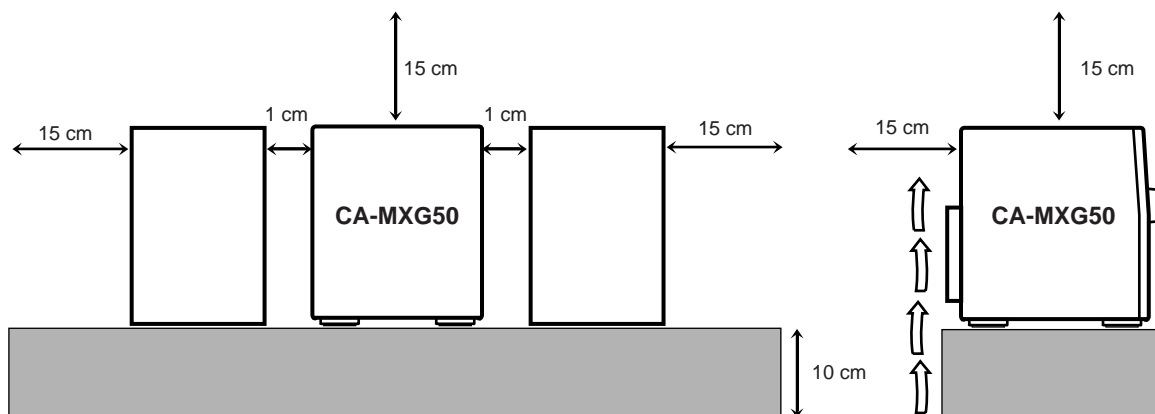

## IMPORTANT FOR LASER PRODUCTS / IMPORTANTE PARA PRODUCTOS LÁSER / IMPORTANTE PARA PRODUCTOS LASER

### REPRODUCTION OF LABELS / REPRODUCCIÓN DE ETIQUETAS / REPRODUÇÃO DE ETIQUETAS

 - |   |   |
|---|---|
| ① CLASSIFICATION LABEL, PLACED ON REAR ENCLOSURE                                | ② WARNING LABEL, PLACED INSIDE THE UNIT                           |
| ① ETIQUETA DE CLASIFICACIÓN, PEGADA EN LA PARTE POSTERIOR DE LA CAJA            | ② ETIQUETA DE ADVERTENCIA, PEGADA EN EL INTERIOR DE LA UNIDAD     |
| ① ETIQUETA DE CLASSIFICAÇÃO LOCALIZADA NA PARTE POSTERIOR DA CAIXA DO APARELHO. | ② ETIQUETA DE ADVERTÊNCIA LOCALIZADA NA PARTE INTERNA DA UNIDADE. |

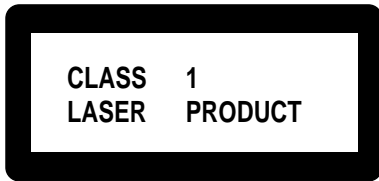

**DANGER:** Invisible laser radiation when open and interlock failed or defeated. AVOID DIRECT EXPOSURE TO BEAM. (e)

**WARNING:** Osynlig laserstrålning när denna del är öppnad och spärren är urkopplad. Betrakta ej strålen. (s)

**ADVARSEL:** Usynlig laserstrålning ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling (d)


**VARO:** Avattaessa ja suojalukitus ohitettaessa olet alttiina näkymättömälle lasersäteilylle. Älä katso säteeseen. (f)

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the Unit; leave all servicing to qualified service personnel.

1. PRODUCTO LÁSER CLASE 1
2. **PELIGRO:** En el interior hay radiación láser invisible. Evite el contacto directo con el haz.
3. **PRECAUCIÓN:** No abra la tapa superior. En el interior de la unidad no existen piezas reparables por el usuario; deje todo servicio técnico en manos de personal calificado.

1. PRODUTO LASER CLASSE 1
2. **PERIGO:** O laser emite uma radiação invisível que é perigosa, caso o aparelho esteja aberto e a trava inoperante ou danificada. Evite exposição direta ao feixe dos raios.
3. **CUIDADO:** Não abra a caixa do aparelho. Não existem peças reparáveis pelo usuário na parte interna da unidade. Solicite assistência técnica somente a pessoal técnico qualificado.

# Introduction

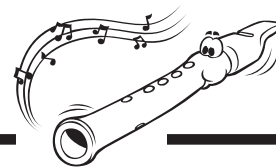 

We would like to thank you for purchasing one of our JVC products. Before operating this unit, read this manual carefully and thoroughly to obtain the best possible performance from your unit, and retain this manual for future reference.

## About This Manual

This manual is organized as follows:

- **The manual mainly explains operations using the buttons and controls on the unit. You can also use the buttons on the remote control if they have the same or similar names (or marks) as those on the unit. If operation using the remote control is different from that using the unit, it is then explained.**
- Basic and common information that is the same for many functions is grouped in one place, and is not repeated in each procedure. For instance, we do not repeat the information about turning on/off the unit, setting the volume, changing the sound effects, and others, which are explained in the section “Common Operations” on pages 9 to 11.
- The following marks are used in this manual:



Gives you warnings and cautions to prevent damage or risk of fire/electric shock. Also gives you information which is not good for obtaining the best possible performance from the unit.



Gives you information and hints you had better know.

## Precautions

### Installation

- Install in a place which is level, dry and neither too hot nor too cold — between 5°C (41°F) and 35°C (95°F).
- Install the unit in a location with adequate ventilation to prevent internal heat built-up in the unit.
- Leave sufficient distance between the unit and the TV.
- Keep the speakers away from the TV to avoid interference with TV.



DO NOT install the unit in a location near heat sources, or in a place subject to direct sunlight, excessive dust or vibration.

### Power sources

- When unplugging from the wall outlet, always pull the plug, not the AC power cord.



DO NOT handle the AC power cord with wet hands.

### Moisture condensation

Moisture may condense on the lens inside the unit in the following cases:

- After starting heating in the room
  - In a damp room
  - If the unit is brought directly from a cold to a warm place
- Should this occur, the unit may malfunction. In this case, leave the unit turned on for a few hours until the moisture evaporates, unplug the AC power cord, and then plug it in again.

### Others

 
- Should any metallic object or liquid fall into the unit, unplug the unit and consult your dealer before operating any further.
- If you are not going to operate the unit for an extended period of time, unplug the AC power cord from the wall outlet.



DO NOT disassemble the unit since there are no user serviceable parts inside.

If anything goes wrong, unplug the AC power cord and consult your dealer.

# Contents

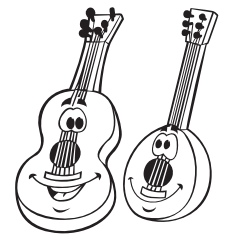


<b>Location of the Buttons and Controls</b> .....	<b>3</b>	<b>Playing Back Tapes</b> .....	<b>16</b>
Front Panel .....	3	Playing Back a Tape .....	16
Remote Control .....	5	<b>Recording</b> .....	<b>17</b>
<b>Getting Started</b> .....	<b>6</b>	Recording a Tape on Deck B .....	17
Unpacking .....	6	Dubbing Tapes .....	18
Putting the Batteries into the Remote Control .....	6	CD Synchronized Recording .....	18
Connecting Antennas .....	6	<b>Using the Microphones</b> .....	<b>19</b>
Connecting Speakers .....	7	Singing Along (Karaoke) .....	19
Connecting Other Equipment .....	8	Microphone Mixing .....	19
Adjusting the Voltage Selector .....	8	<b>Using the Timers</b> .....	<b>20</b>
Cancelling the Display Demonstration .....	8	Using Daily Timer .....	20
<b>Common Operations</b> .....	<b>9</b>	Using Recording Timer .....	21
Turning On or Off the Power .....	9	Using Sleep Timer .....	22
Setting the Clock .....	9	Timer Priority .....	22
Selecting the Sources .....	10	<b>Maintenance</b> .....	<b>23</b>
Setting the AM Tuner Interval Spacing .....	10	<b>Troubleshooting</b> .....	<b>23</b>
Adjusting the Volume .....	10	<b>Specifications</b> .....	<b>24</b>
Reinforcing the Bass Sound .....	11		
Selecting the Sound Modes .....	11		
<b>Listening to FM and AM Broadcasts</b> .....	<b>12</b>		
Tuning in a Station .....	12		
Presetting Stations .....	12		
Tuning in a Preset Station .....	12		
<b>Playing Back CDs</b> .....	<b>13</b>		
Loading CDs .....	13		
Playing Back the Entire Discs			
— Continuous Play .....	13		
Basic CD Operations .....	14		
Programming the Playing Order of the Tracks			
— Program Play .....	14		
Playing at Random — Random Play .....	15		
Repeating Tracks or CDs — Repeat Play .....	15		
Prohibiting Disc Ejection — Tray Lock .....	15		


# Location of the Buttons and Controls

  Become familiar with the buttons and controls on your unit.

## Front Panel

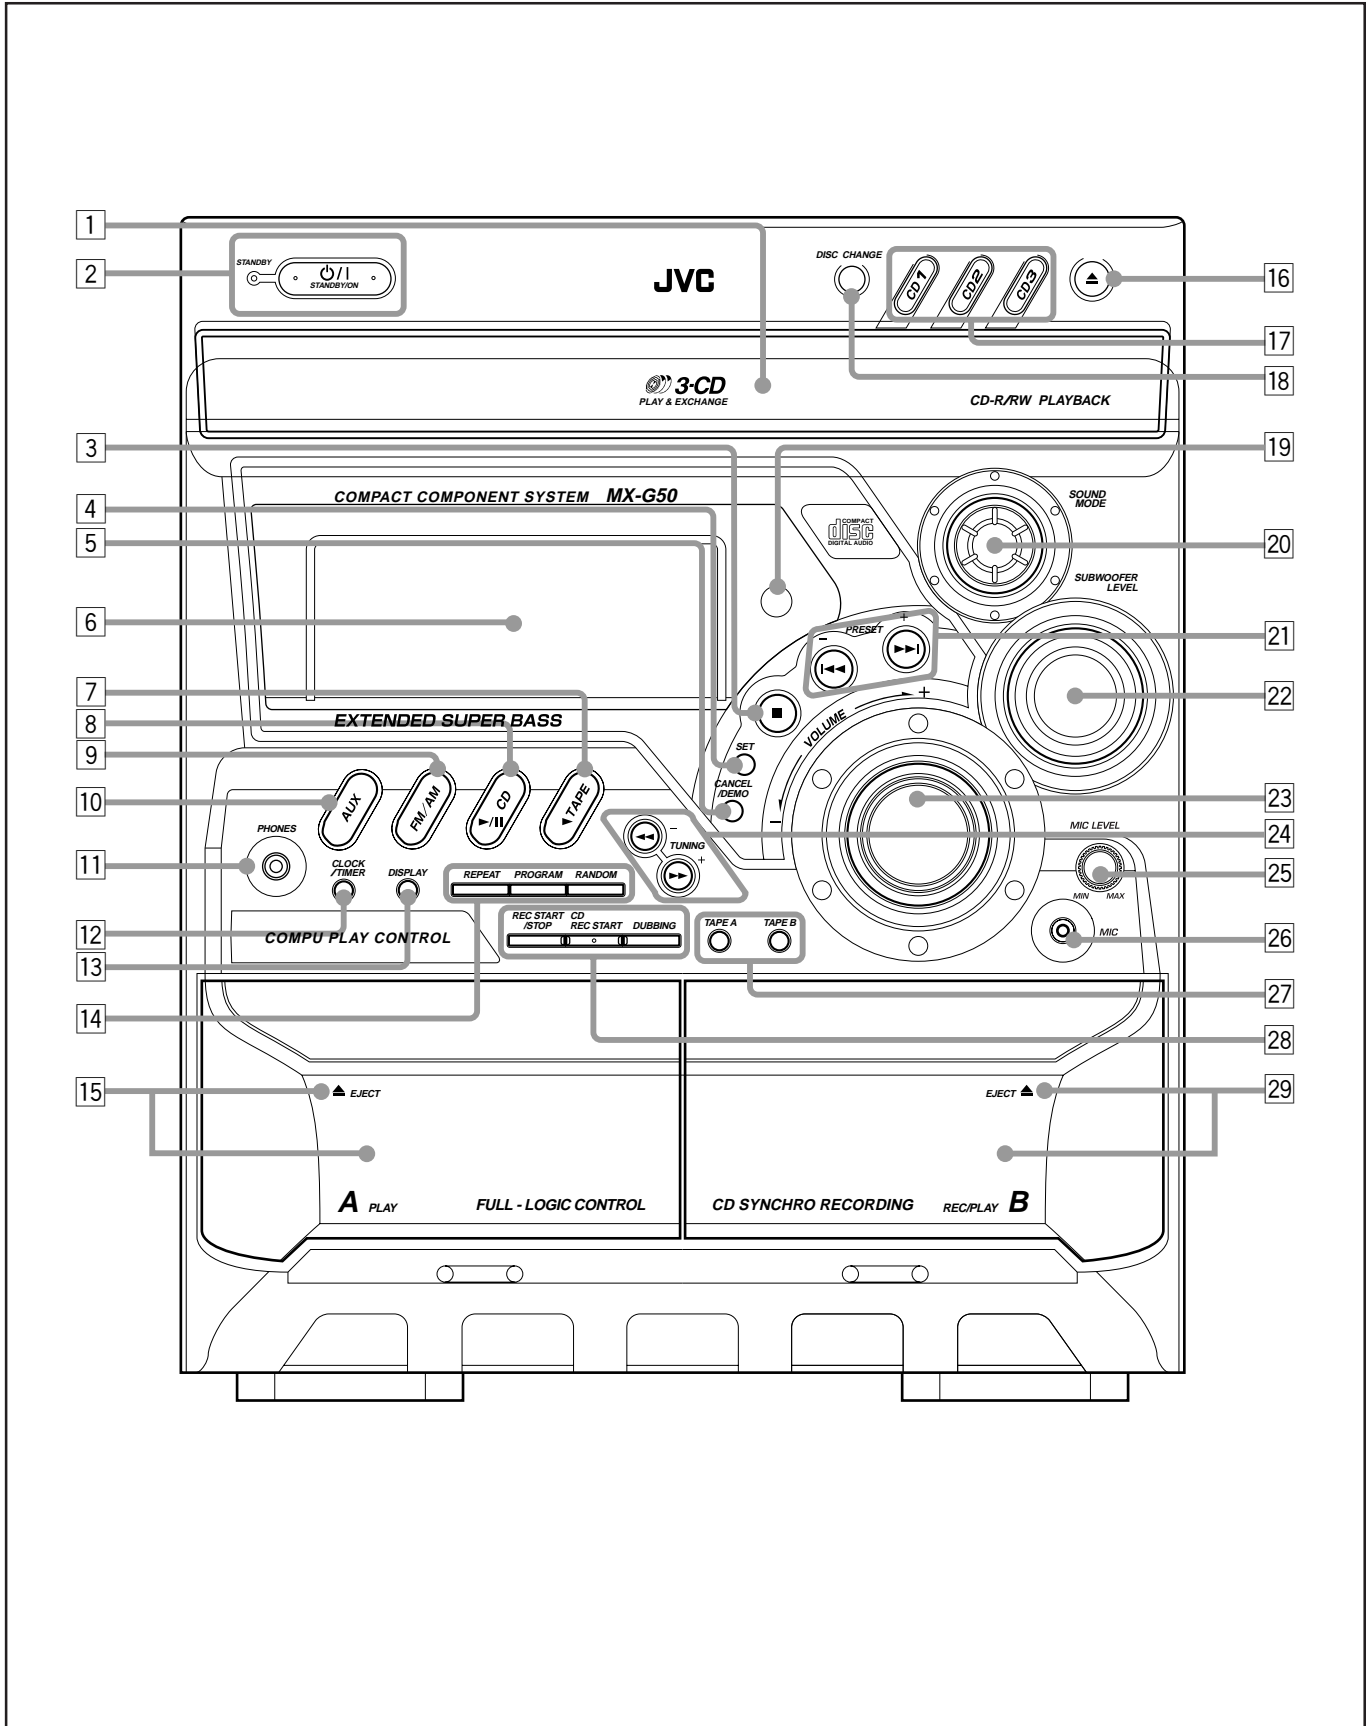



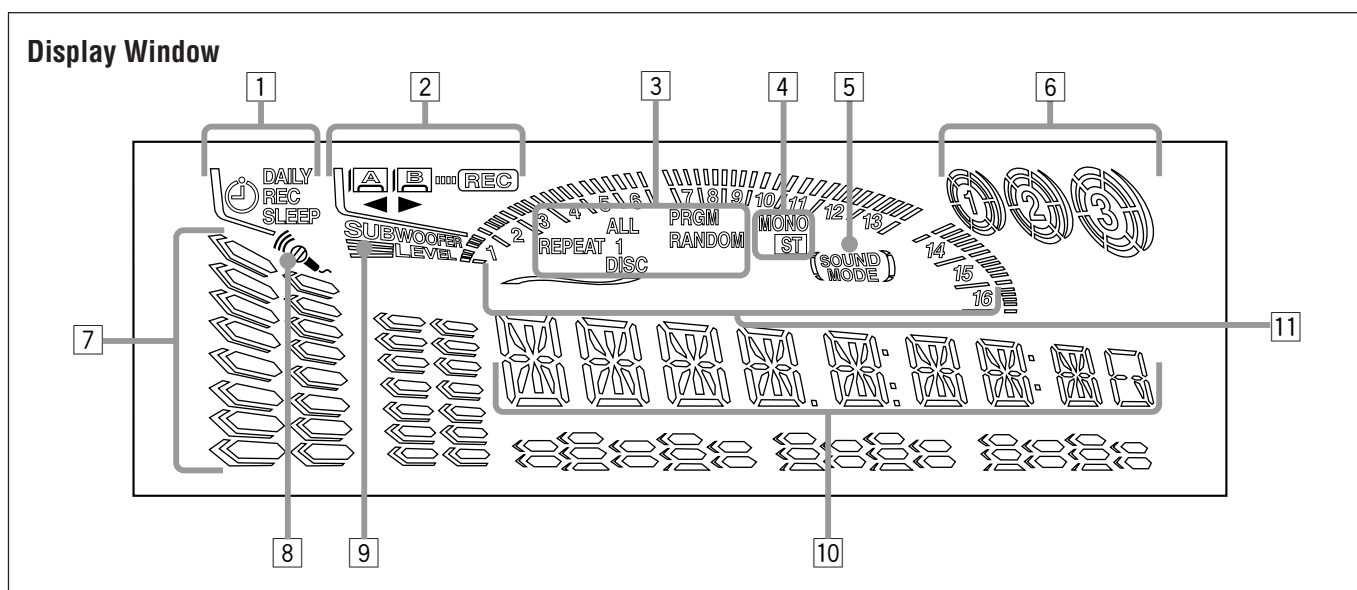

See pages in the parentheses for details.

### Front Panel

- 1 Carrousel
- 2  $\text{O/I}$  STANDBY/ON button and STANDBY lamp (9)
- 3  $\blacksquare$  (stop) button (13 – 18)
- 4 SET button (9, 12, 14, 20 – 22)
- 5 CANCEL button (9, 15, 21, 22)  
DEMO button (8)
- 6 Display window
- 7 TAPE  $\blacktriangleright$  button and lamp (10, 16, 18)  
*Pressing this button also turns on the unit.*
- 8 CD  $\blacktriangleright/\text{II}$  (play/pause) button and lamp (9, 13 – 15)  
*Pressing this button also turns on the unit.*
- 9 FM/AM button and lamp (10, 12)  
*Pressing this button also turns on the unit.*
- 10 AUX button and lamp (10)  
*Pressing this button also turns on the unit.*
- 11 PHONES jack (10)
- 12 CLOCK/TIMER button (9, 20 – 22)
- 13 DISPLAY button (9)
- 14 REPEAT button (15)  
PROGRAM button (14)  
RANDOM button (15)
- 15 Deck A cassette holder (16, 18)  
• Pressing the  $\blacktriangle$  EJECT portion opens the holder.
- 16  $\blacktriangle$  (Carrousel open/close) button (13 – 15)  
*Pressing this button also turns on the unit.*
- 17 Disc number buttons and lamps (CD1, CD2, and CD3)  
(13, 14, 18)  
*Pressing one of these buttons also turns on the unit.*
- 18 DISC CHANGE button (13, 14)
- 19 Remote sensor
- 20 SOUND MODE control (11)
- 21 PRESET  $+/-$  buttons (12)  
 $\blacktriangleleft/\blacktriangleright$  (reverse search/forward search) buttons  
(9, 14, 20 – 22)
- 22 SUBWOOFER LEVEL control (11)

 
 
- 23 VOLUME control (10)
- 24 TUNING  $+/-$  buttons (10, 12)  
 $\blacktriangleleft/\blacktriangleright$  (fast rewind/fast forward) buttons (14, 16)
- 25 MIC LEVEL control (19)
- 26 MIC jack (19)
- 27 TAPE A button (16)  
TAPE B button (16)
- 28 REC START/STOP button (17)  
CD REC START button (18)  
DUBBING button (18)
- 29 Deck B cassette holder (16 – 18)  
• Pressing the EJECT  $\blacktriangle$  portion opens the holder.

### Display window

- 1 Timer indicators  
• DAILY (daily timer), REC (recording timer), SLEEP (sleep timer), and  $\text{O}$  (timer) indicators
- 2 Tape operation indicators  
• A/B (operating deck), REC (recording), and  $\blacktriangleleft/\blacktriangleright$  (tape running) indicators
- 3 CD play mode indicators  
• REPEAT (1, 1 DISC, ALL DISC), PRGM (program), and RANDOM indicators
- 4 Tuner operation indicators  
• MONO and ST (stereo) indicators
- 5 SOUND MODE indicator
- 6 Disc indicators
- 7 Volume level, Subwoofer level, and Sound Mode pattern indicators
- 8 Karaoke ( $\text{K}$ ) and echo ( $\text{E}$ ) indicators
- 9 SUBWOOFER LEVEL indicator
- 10 Main display  
• Shows the source name, frequency, etc.
- 11 CD track number indicators



## Remote Control

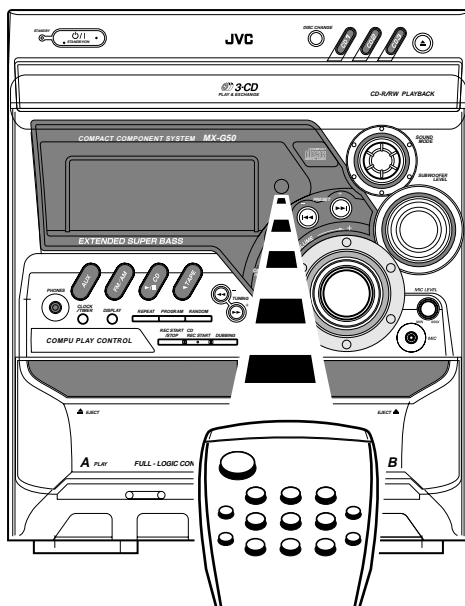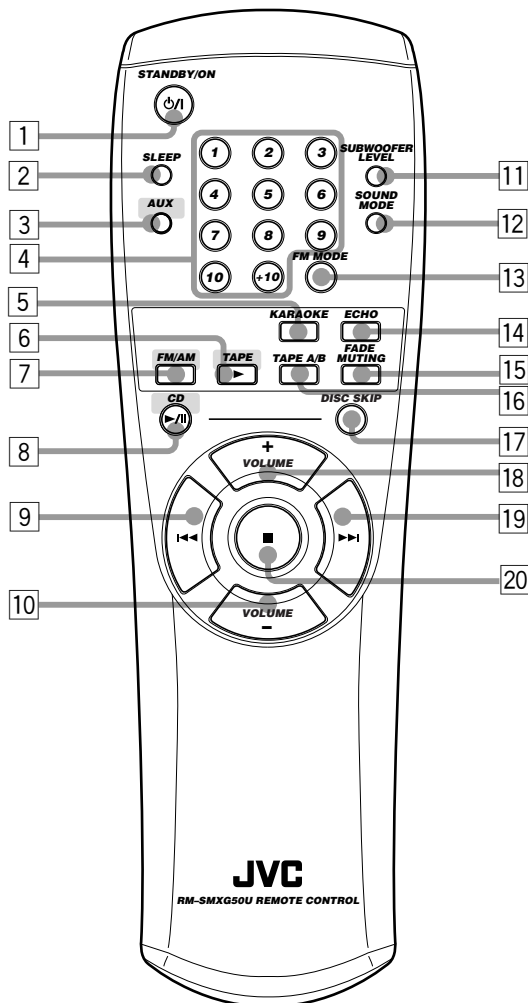

When using the remote control, point it at the remote sensor on the front panel.

## Remote Control

- 1 STANDBY/ON button (9)
- 2 SLEEP button (22)
- 3 AUX button (10)  
*Pressing this button also turns on the unit.*
- 4 Number buttons (12, 14)
- 5 KARAOKE button (19)
- 6 TAPE button (10, 16)  
*Pressing this button also turns on the unit.*
- 7 FM/AM button (10, 12)  
*Pressing this button also turns on the unit.*
- 8 CD button (10, 13 – 15)  
*Pressing this button also turns on the unit.*
- 9 (fast rewind/reverse search) button (12, 14, 16)
- 10 VOLUME – button (10)
- 11 SUBWOOFER LEVEL button (11)
- 12 SOUND MODE button (11)
- 13 FM MODE button (12)
- 14 ECHO button (19)
- 15 FADE MUTING button (10)
- 16 TAPE A/B button (16)
- 17 DISC SKIP button (13)
- 18 VOLUME + button (10)
- 19 (fast forward/forward search) button (12, 14, 16)
- 20 (stop) button (13 – 18)

## Unpacking

After unpacking, check to be sure that you have all the following items.

The number in the parentheses indicates the quantity of the pieces supplied.

 
- AM loop antenna (1)
- FM antenna (1)
- Remote control (1)
- Batteries (2)
- AC plug adaptor (1)

If any is missing, consult your dealer immediately.

## Putting the Batteries into the Remote Control

Insert the batteries — UM-4/AAA/IEC R03 — into the remote control, by matching the polarity (+ and -) on the batteries with the + and - markings on the battery compartment.


When the remote control can no longer operate the unit, replace both batteries at the same time.

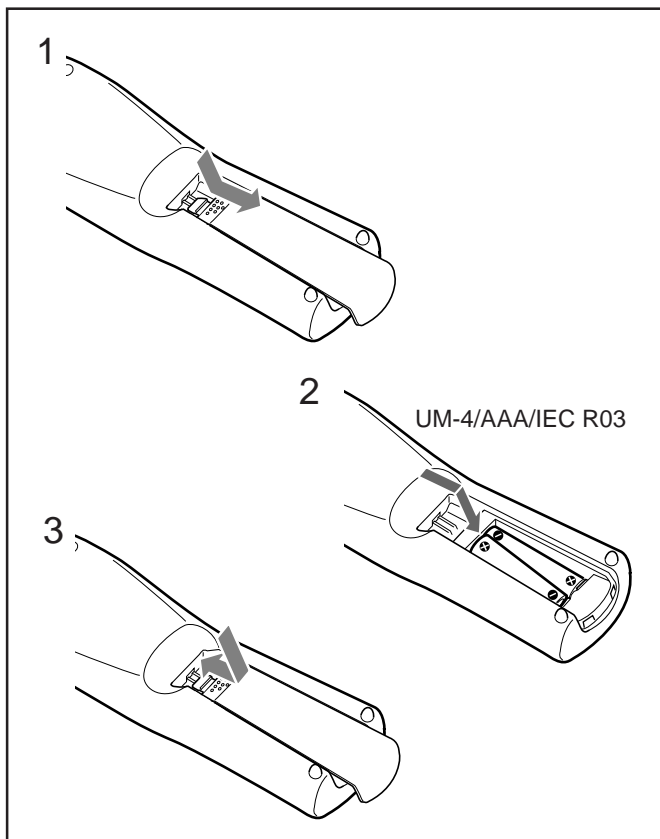

- DO NOT use an old battery together with a new one.
- DO NOT use different types of batteries together.
- DO NOT expose batteries to heat or flame.
- DO NOT leave the batteries in the battery compartment when you are not going to use the remote control for an extended period of time. Otherwise, it will be damaged from battery leakage.

## Connecting Antennas
 
### FM antenna

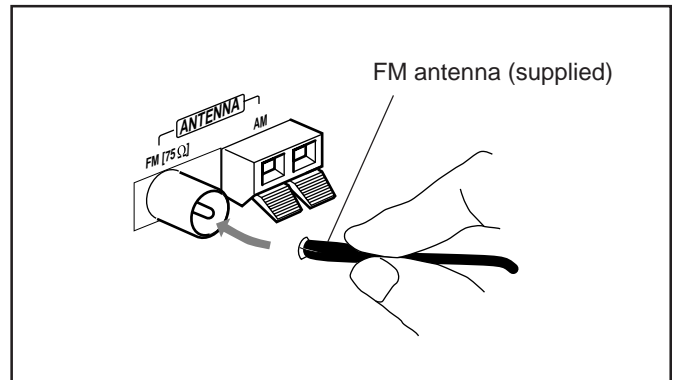

- 1 Attach the FM antenna to the FM [75 Ω] coaxial terminal.
- 2 Extend the FM antenna.
- 3 Fasten it up in the position which gives you the best reception, then fix it on the wall, etc.




### About the supplied FM antenna

 
The FM antenna supplied with this unit can be used as temporary measure. If reception is poor, you can connect an outdoor FM antenna.

### To connect an outdoor FM antenna

Before connecting it, disconnect the supplied FM antenna.

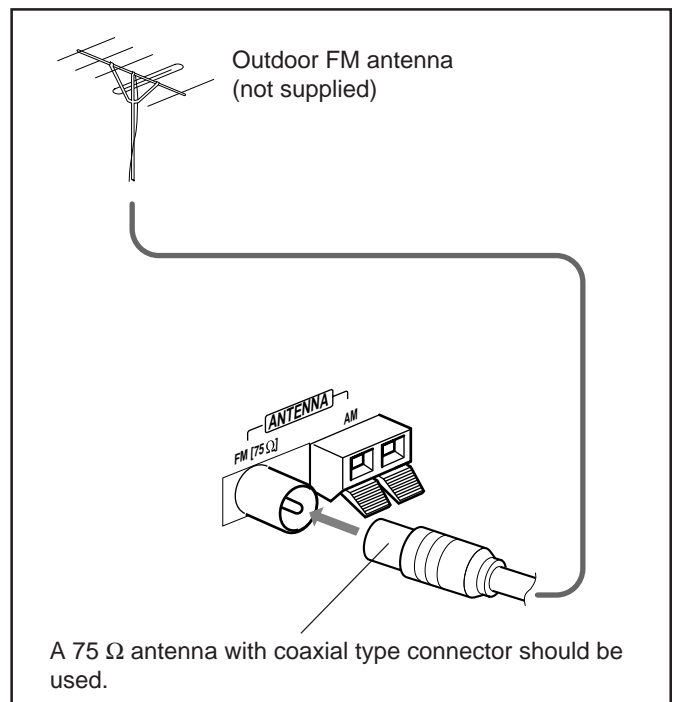

## AM antenna

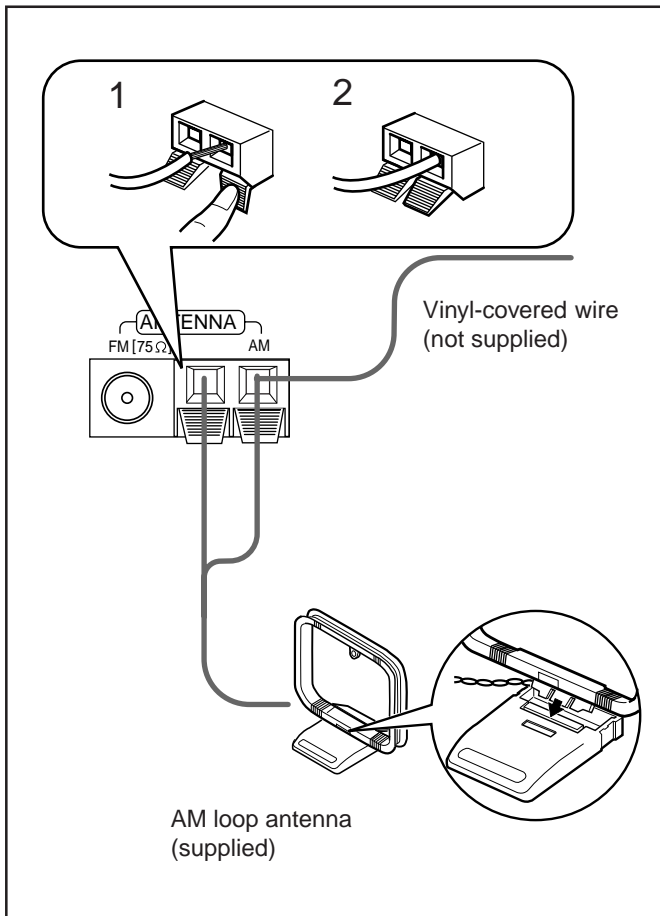 

- 1 Press and hold the clamp of the AM terminals on the rear of the unit.
- 2 Insert the end of the AM loop antenna cord into the terminal.
- 3 Release the finger from the clamp.
- 4 Turn the AM loop antenna until you have the best reception.

### To connect an outdoor AM antenna

 
When reception is poor, connect a single vinyl-covered wire to the AM terminal and extend it horizontally. (The AM loop antenna must remain connected.)



#### For better reception of both FM and AM

- Make sure the antenna conductors do not touch any other terminals and connecting cords.
- Keep the antennas away from metallic parts of the unit, connecting cords, and the AC power cord.

## Connecting Speakers

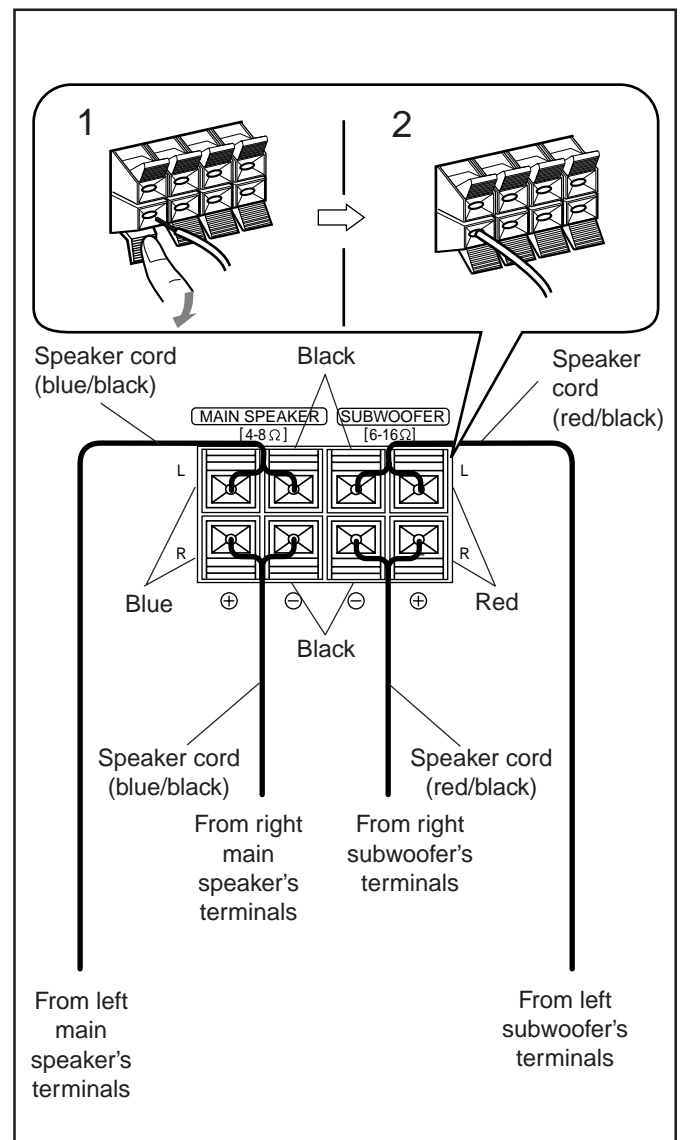

- 1 Press and hold the clamp of the speaker terminal on the rear of the unit.
- 2 Insert the end of the speaker cord into the terminal.  
Match the polarity (colors): Blue (+) to blue (+) and black (-) to black (-); Red (+) to red (+) and black (-) to black (-).
- 3 Release the finger from the clamp.

**IMPORTANT:** Use only speakers with the same speaker impedance as indicated by the speaker terminals on the rear of the unit.



## Connecting Other Equipment

 
You can connect both analog and digital equipment.



- DO NOT connect any equipment while the power is on.
- DO NOT plug in any equipment until all connections are complete.

### To connect an analog component

Be sure that the plugs of the audio cords are color coded: White plugs and jacks are for left audio signals, and red ones for right audio signals.

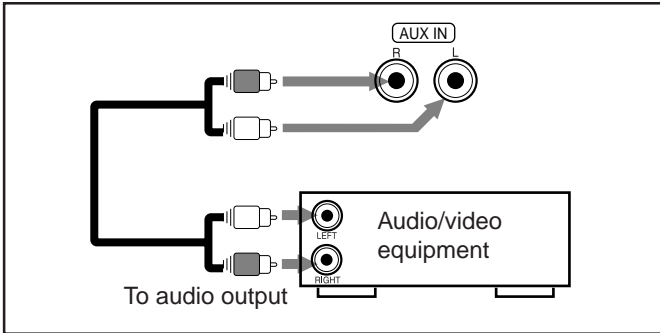


For playing the other equipment through this unit, connect between the audio output jacks on the other equipment and AUX IN jacks by using audio cords (not supplied).

## Adjusting the Voltage Selector

 Before plugging in the unit, set the correct voltage for your area with the voltage selector on the rear of the unit.




- DO NOT plug in before setting the voltage selector on the rear of the unit and all connection procedures are complete.

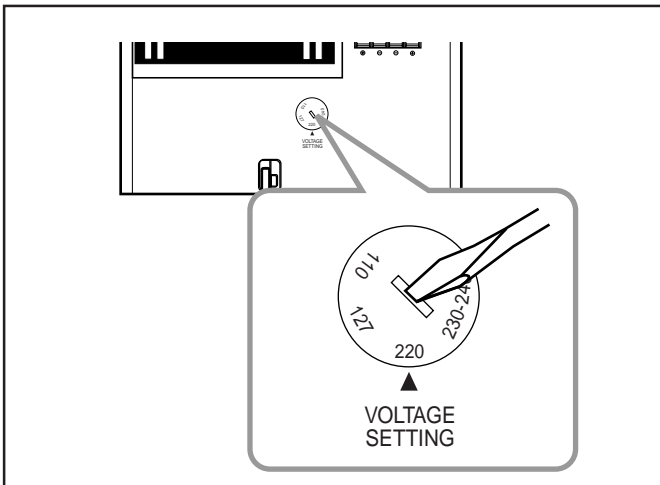

Using a screw driver, set the voltage selector so that the arrow on printed on the rear points the correct voltage where you use this unit. (See the back cover page.)

### To connect audio equipment with an optical digital input terminal

 You can record CD sound onto the connected digital equipment.

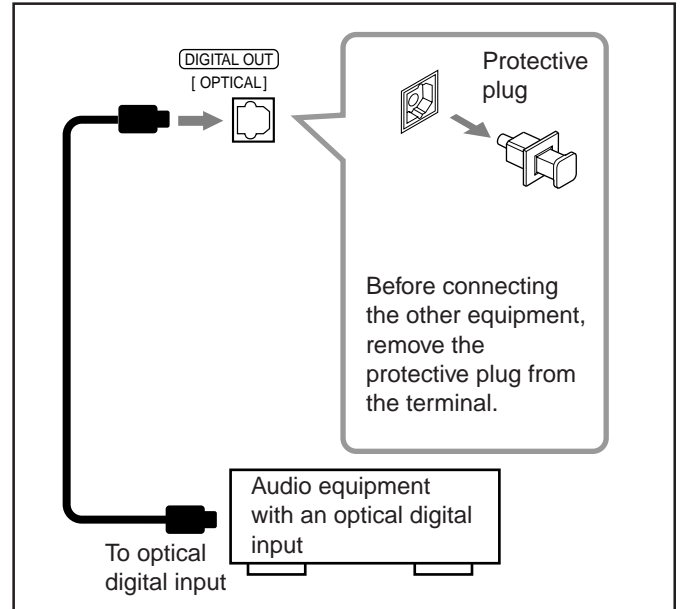

Connect an optical digital cord (not supplied) between the optical digital input terminal on the other equipment and the DIGITAL OUT [OPTICAL] terminal.

## NOW, you can plug in the unit and other connected equipment FINALLY!

## Canceling the Display Demonstration

When connecting the AC power cord into a wall outlet, the unit automatically starts display demonstration.

### On the unit ONLY:

To cancel the display demonstration, press DEMO.



### When you press other buttons

The display demonstration stops temporarily. It will start automatically again (if no operation is done for 2 minutes) until you cancel it by pressing DEMO.

### To start the display demonstration manually

Press and hold DEMO again for more than 2 seconds.



 
# Common Operations

## Turning On or Off the Power

To turn on the unit, press

⏻/STANDBY/ON so that the STANDBY lamp goes off.


WELCOME



To turn off the unit (on standby), press

⏻/STANDBY/ON again so that the STANDBY lamp lights up.

 GOOD BYE



A little power is always consumed even while the unit is on standby.

To switch off the power supply completely, unplug the AC power cord from the AC outlet.



**notes** When you unplug the AC power cord or if a power failure occurs


The clock is reset to “-- : --” soon, while the tuner preset stations (see page 12) will be erased in a few days.

## Setting the Clock

 Before operating the unit any further, first set the clock built in this unit. You can set the clock whether the unit is on or off.


**On the unit ONLY:**

**1** Press CLOCK/TIMER.




The hour digits start flashing on the display.

 **2** Press ◀◀ or ▶▶ to adjust the hour, then press SET.

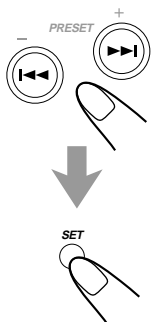

**3** Press ◀◀ or ▶▶ to adjust the minute, then press SET.

 CLOCK OK

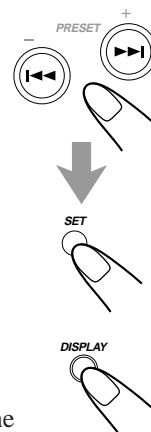

**To check the clock time**

Press DISPLAY while playing any source.

 
- Each time you press the button, the source indication and the clock time alternate on the display.



**To adjust the clock again**

If you have adjusted the clock before, you need to press CLOCK/TIMER repeatedly until “CLOCK” is selected.

- Each time you press the button, the clock/timer setting modes change as follows:



**notes** If there is a power failure

The clock loses the setting and is reset to “-- : --.” You need to set the clock again.

- If you want to correct the hour after pressing SET, press CANCEL. The hour digits start flashing again.


## Selecting the Sources

 To listen to the FM/AM broadcasts, press FM/AM. (See page 12.)

To play back CDs, press CD ►/II. (See pages 13 – 15.)

To play back tapes, press TAPE ►. (See page 16.)

To select the external equipment as the source, press AUX.

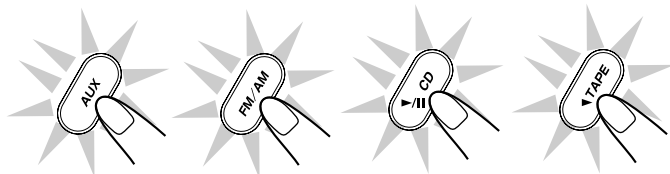

When you press the play button for a particular source (AUX, FM/AM, CD ►/II, and TAPE ►), the unit turns on (and the unit starts playing the source if it is ready — COMPU PLAY CONTROL).

## Setting the AM Tuner Interval Spacing

 
Some countries space AM stations 9 kHz apart, and some countries use 10 kHz spacing.

 

### On the unit ONLY:

When shipped, the unit is set to 10 kHz spacing.


To select 9 kHz, press  STANDBY/ON while holding down  when the unit is in standby mode.

“AM -- 9” appears on the display.



To change back to 10 kHz interval, press  STANDBY/ON while holding down  when the unit is in standby mode.

 “AM -- 10” appears on the display.

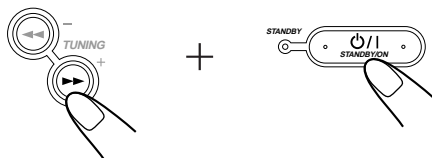


## Adjusting the Volume

You can adjust the volume level only while the unit is turned on.

Turn the VOLUME control clockwise to increase the volume or counterclockwise to decrease it.

 - The volume level can be adjusted in 32 steps (VOL MIN, VOL 1 — VOL 30, and VOL MAX).

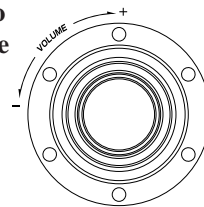

VOL 15

When using the remote control, press VOLUME + to increase the volume or press VOLUME – to decrease it.



### For private listening

Connect a pair of headphones to the PHONES jack. No sound comes out of the speakers. Be sure to turn down the volume before connecting or putting on headphones.



DO NOT turn off (on standby) the unit with the volume set to an extremely high level; otherwise, a sudden blast of sound can damage your hearing, speakers and/or headphones when you turn on the unit or start playing any source next time. REMEMBER you cannot adjust the volume level while the unit is on standby.

 
### To turn down the volume level temporarily

Press FADE MUTING on the remote control. The volume level gradually decreases to “VOL MIN.”

To restore the sound, press the button again.





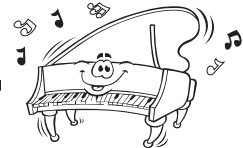


## Reinforcing the Bass Sound

This function only affects the playback sound, but does not affect your recording.


Turn the **SUBWOOFER LEVEL** control clockwise to increase the subwoofer sound or counterclockwise to decrease it.

- The subwoofer level can be adjusted in 4 steps (LEVEL 1 — LEVEL 4.)

 If you turn the control clockwise up to the volume LEVEL 4, “MAX” flashes on the display for a few seconds.

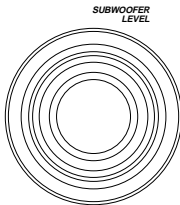

 SUBWOOFER LEVEL indicator always lights up when the unit is on.

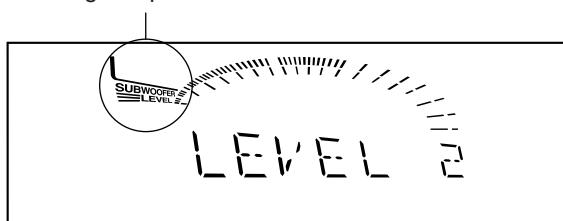


When using the remote control, press SUBWOOFER LEVEL to adjust the subwoofer level. The subwoofer level changes as LEVEL 1 → LEVEL 2 → LEVEL 3 → LEVEL 4 → (back to the beginning).

## Selecting the Sound Modes

 
This function only affects the playback sound, but does not affect your recording.

You can select one of the 6 preset sound modes (3 surround modes and 3 SEA — Sound Effect Amplifier — modes).


To select the sound modes, turn the **SOUND MODE** control until the sound mode you want appears on the display.

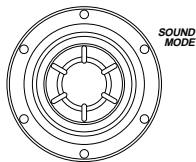

 SOUND MODE indicator also lights up on the display

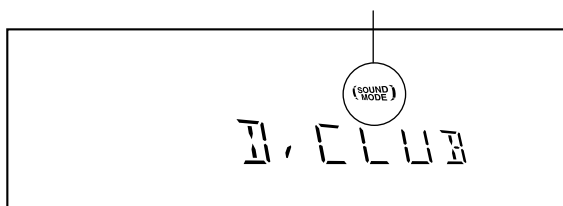

 As you turn the control, the sound modes change as follows:

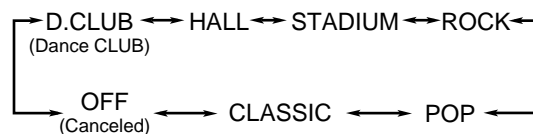

### Surround modes\*:

- D.CLUB:** Increases resonance and bass.
- HALL:** Adds depth and brilliance to the sound.
- STADIUM:** Adds clarity and spreads the sound, like in an outdoor stadium.

### SEA (Sound Effect Amplifier) modes:

- ROCK:** Boosts low and high frequency. Good for acoustic music.
- POP:** Good for vocal music.
- CLASSIC:** Good for classical music.
- OFF:** Cancels the sound mode.

 
\* Surround elements are added to the SEA elements to create a being-there feeling in your room.

When one of these modes is selected, the SOUND MODE indicator lights up as — **(SOUND MODE)**

While one of the SEA modes (SEA elements without surround elements) is selected, the SOUND MODE indicator lights up as — **SOUND MODE**

When using the remote control, press SOUND MODE to adjust the sound mode.

- Each time you press the button, the sound modes change as follows:

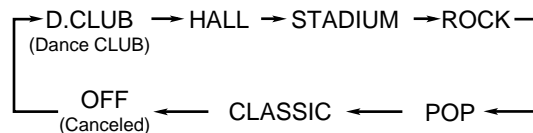





# Listening to FM and AM Broadcasts

Before operating the tuner, make sure you have selected the correct AM spacing intervals (see page 10).

## Tuning in a Station

### 1 Press FM/AM.

The unit automatically turns on and tunes in the previously tuned station (either FM or AM).

- Each time you press the button, the band alternates between FM and AM.



### 2 Start searching for stations.

**On the unit:**

 
Press and hold TUNING + or TUNING – for more than 1 second.

**On the remote control:**

Press and hold ◀◀ or ▶▶ for more than 1 second.

The unit starts searching for stations and stops when a station of sufficient signal strength is tuned in.

If a program is broadcast in stereo, the ST (stereo) indicator lights up.

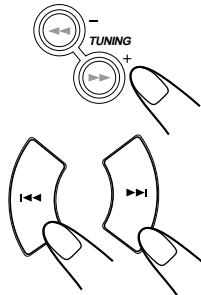

**To stop during searching,** press TUNING + or TUNING – (or ◀◀ or ▶▶ on the remote control).



When you press TUNING + or TUNING – (or ◀◀ or ▶▶ on the remote control) briefly and repeatedly

The frequency changes step by step.

### To change the FM reception mode

When an FM stereo broadcast is hard to receive or noisy, press FM MODE on the remote control so that “MONO” appears and the MONO indicator lights up on the display. Reception improves.



**To restore the stereo effect,** press FM MODE again so that “STEREO” appears on the display and the MONO indicator goes off from the display.

In this stereo mode, you can hear stereo sounds when a program is broadcast in stereo.

## Presetting Stations

**You can preset 30 FM and 15 AM stations.**

In some cases, test frequencies have been already memorized for the tuner since the factory examined the tuner preset function before shipment. This is not a malfunction. You can preset the stations you want into memory by following the presetting method.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.

### On the unit ONLY:


#### 1 Tune in the station you want to preset.

- See “Tuning in a Station” on the left column.

FM 87.50


#### 2 Press SET.

 SET




#### 3 Press PRESET + or PRESET – to select a preset number.

 P-01

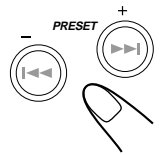

#### 4 Press SET again.

 STORED



The tuned station in step 1 is stored in the preset number selected in step 3.

- Storing a new station on a used number erases the previously stored one.



When you unplug the AC power cord or if a power failure occurs

The preset stations will be erased in a few days. If this happens, preset the stations again.

## Tuning in a Preset Station

### 1 Press FM/AM.

The unit automatically turns on and tunes in the previously tuned station (either FM or AM).

 
- Each time you press the button, the band alternates between FM and AM.



### 2 Select a preset number.

**On the unit:**

Press PRESET + or PRESET –.

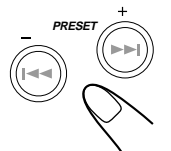

**On the remote control:**

Press the number buttons.

 
Ex.: For preset number 5, press 5.

For preset number 15, press +10 then 5.

For preset number 20, press +10, then 10.

For preset number 25, press +10, +10, then 5.

For preset number 30, press +10, +10, then 10.

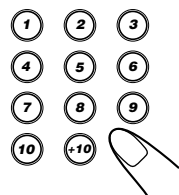

# Playing Back CDs

This unit has been designed to playback the following CDs: Audio CD, CD-R, and CD-RW.

Continued use of irregular shape CDs (heart-shape, octagonal, etc.) can damage the unit.

## When playing a CD-R or CD-RW

User-edited CD-Rs (Recordable) and CD-RWs (Rewritable) can be played back only if they are already "finalized."

- You can play back your original CD-Rs or CD-RWs recorded in music CD format. (However, they may not be played back depending on their characteristics or recording conditions.)
- Before playing back CD-Rs or CD-RWs, read their instructions or cautions carefully.
- Some CD-Rs or CD-RWs may not be played back on this unit because of their disc characteristics, damage or stain on them, or if the player's lens is dirty.
- CD-RWs may require a longer readout time. (This is caused by the fact that the reflectance of CD-RWs is lower than for regular CDs.)

 
## Loading CDs

### 1 Press .

The unit automatically turns on and the carousel comes out.



### 2 Place one or two discs correctly on the front slots of the carousel, with its label side up.

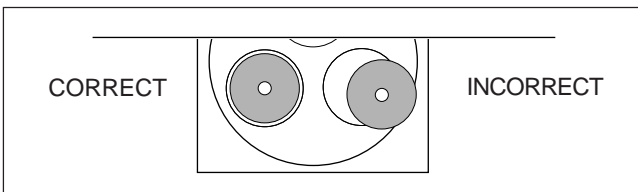

- When using a CD single (8 cm), place it on the inner circle of the disc tray.

### 3 If you wish to load a third disc, press **DISC CHANGE** on the unit or **DISC SKIP** on the remote control.

The carousel rotates by 120°.



 
### 4 Press again.

The carousel closes.



## About the disc indicators

Each disc indicator corresponds to the disc tray of the same number.

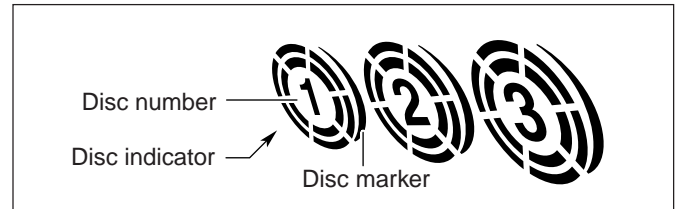

- The disc marker lights up for the disc number you have selected.
- The disc indicator rotates while the corresponding CD is being played.
- The disc indicator goes off when the unit has detected that there is no CD on the corresponding disc tray.


## Playing Back the Entire Discs — Continuous Play

 You can play CDs continuously.


### 1 Load CDs.


### 2 Press one of the disc number buttons (CD1, CD2 or CD3) for the disc you want to play.

CD play starts from the first track of the selected disc.

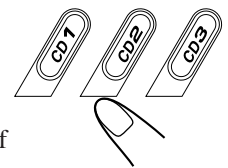


  Track number of the currently playing disc is flashing. (Track numbers exceeding 16 are not displayed.)

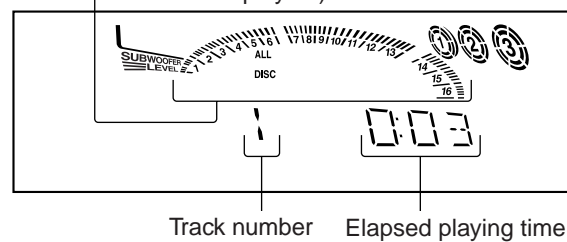

- Pressing CD  instead of the disc number buttons starts playing back if a CD is on the tray.

 When you turn on the unit, ALL DISC indicator lights up on the display automatically. If you do not want all the CDs to play back, select 1 DISC by pressing REPEAT.



- ALL DISC:** Plays all loaded CD.
- 1 DISC:** Plays back one CD.

To stop during play, press .

To remove the disc, press .



**CD playback sequence (when ALL DISC is selected)**

When 3 CDs are loaded on the disc trays, they are played in one of the following sequences.

- When CD1 is pressed : CD1 ⇒ CD2 ⇒ CD3 (then stops)
- When CD2 is pressed : CD2 ⇒ CD3 ⇒ CD1 (then stops)
- When CD3 is pressed : CD3 ⇒ CD1 ⇒ CD2 (then stops)
- \* When only 2 CDs are loaded, they are played in the same order, but the disc tray without a CD is skipped.

**Basic CD Operations**

While playing a CD, you can do the following operations.

**To exchange CDs during playback of another**

Press DISC CHANGE to change the CD and the carousel comes out.

If you change CDs during play, the current play will not stop until all CDs you have changed are played.

To close the carousel, press DISC CHANGE or ▲.



**To skip to the another CD in the carousel**

Press DISC SKIP on the remote control.

 


**To stop play for a moment**

Press CD ►/II.

While pausing, “PAUSE” appears on the display.

To resume play, press CD ►/II again.

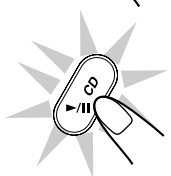


**To locate a particular point in a track**

During play, press and hold ◀◀ or ▶▶.

- ◀◀: Fast reverses the disc.
- ▶▶: Fast forwards the disc.

 
When using the remote control, press and hold ◀◀ or ▶▶.

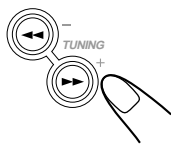

**To go to another track**

Press ◀◀ or ▶▶ repeatedly before or during playback.

 - ◀◀: Goes back to the beginning of the current or previous tracks.
- ▶▶: Skips to the beginning of the next or succeeding tracks.

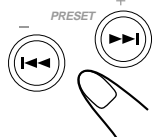


If you press and hold ◀◀ or ▶▶ on the unit before or during play

You can change the tracks continuously.

**To go to another track directly using the number buttons**

 Pressing the number button(s) before or during play allows you to start playing the track number you want.

- Ex.: For track number 5, press 5.  
 For track number 15, press +10, then 5.  
 For track number 20, press +10, then 10.  
 For track number 32, press +10, +10, +10, then 2.

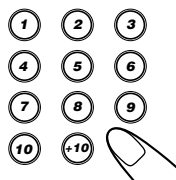

**Programming the Playing Order of the Tracks — Program Play**

You can arrange the order in which the tracks play before you start playing. **You can program up to 32 tracks.**

 
- To use Repeat play (see page 15) for Program play, press REPEAT after starting Program play.

**On the unit ONLY:**


**1 Load CDs.**

- If the current playing source is not the CD player, press CD ►/II, then ■ before going to the next step.

**2 Press PROGRAM so that “PROGRAM” appears on the display.**





 The PRGM (program) indicator also lights up on the display.

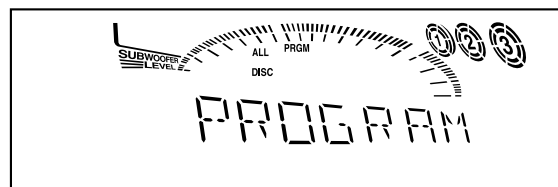



- If a program has been stored in memory, the program is called up.

**3 Press one of the disc number buttons (CD1, CD2 or CD3) to select the disc number you want to play.**

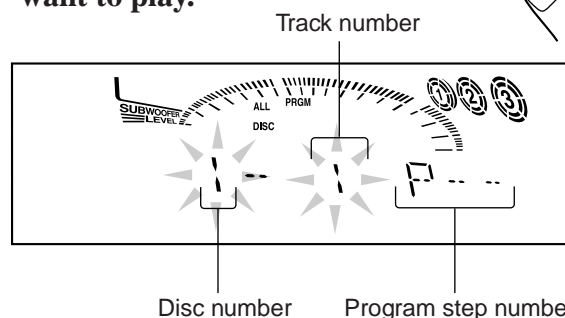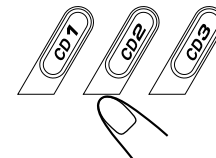  

**4 Press ◀◀ or ▶▶ to select the track number, then press SET.**

  Each time you select a track and press SET, the selected track number is added to the CD track number indicator.

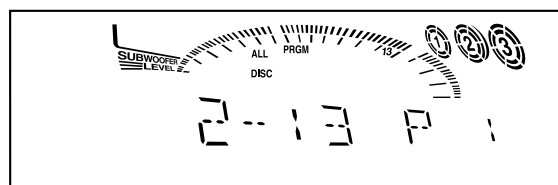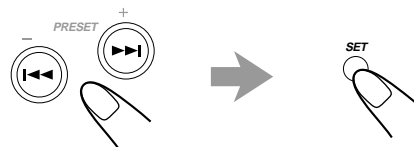



### 5 Program other tracks you want.

- To program tracks from the same disc, repeat step 4.
- To program tracks from a different disc, repeat steps 3 and 4.

### 6 Press CD ►/II.

The tracks are played in the order you have programmed.



To stop during play, press ■.

To exit from Program play mode, press PROGRAM again before or after play so that the unit enters Continuous play mode. (The program you have made is stored in memory until you turn off the unit or erase the program.)

### To modify the program

Before playing, you can erase the programmed tracks shown on the display by pressing CANCEL.



- Each time you press the button, the last programmed track is erased from the program.

To check the program during play, press ►► (or ◀◀) so that the playing track will change according to the program (or reverse) order.

To add tracks in the program before play, simply select the disc numbers and/or track numbers you want to add by following steps 3 and 4 of the programming procedure on page 14.

To erase the entire program before or during play, press ■ twice.

- Ejecting a carousel will also erase the stored memory.



If you try to program a 33rd track "FULL" will appear on the display.



If your entry is ignored

You have tried to program a track from an empty tray, or a track number that does not exist on the CD. Such entries are ignored.

## Playing at Random — Random Play

The tracks of the selected CD will play at random.

### 1 Load a CD.

- If the current playing source is not the CD player, press CD ►/II, then ■ before going to the next step.

### 2 Press RANDOM so that "RANDOM" appears on the display.



The RANDOM indicator also lights up on the display.



- The tracks are played automatically at random. Random play ends when all tracks are played once.

To stop during play, press ■.

- Random play also stops when ▲ is pressed.

To exit from Random play mode, press RANDOM again during play so that the unit enters Continuous play mode.

To use Random play mode, you have to exit from the Program play mode.



If you press ►► or ◀◀

Skips to the next track selected randomly.

## Repeating Tracks or CDs — Repeat Play

You can have all the CDs, the program or the individual track currently playing repeat as many times as you like.

To repeat play, press REPEAT during or before playing.



- Each time you press the button, Repeat play mode changes as follows, and the following indicator lights up on the display:



REPEAT 1: Repeats one track on one CD.

REPEAT 1 DISC\*: Repeats all the tracks on one CD.

REPEAT ALL DISC: Repeats all the tracks on all the CDs.

\* REPEAT 1 DISC is not used for Program play.

To cancel Repeat play, press REPEAT repeatedly until the REPEAT indicator (REPEAT 1, REPEAT 1 DISC or REPEAT ALL DISC) goes off from the display.

- Repeat play and Random play cannot be used at the same time.

## Prohibiting Disc Ejection — Tray Lock

You can prohibit CD ejection from the unit and lock CDs.

- This operation is possible only while the unit is on with CD selected as the source.

### On the unit ONLY:

To prohibit disc ejection, press ▲ for the carousel while holding ■.

"LOCKED" appears for a while, and the carousel is locked.

To cancel the prohibition and unlock the CDs, press ▲ for the carousel while holding ■.

"UNLOCKED" appears for a while, and the carousel is unlocked.



If you try to eject CDs

 
"LOCKED" appears to inform you that the Tray Lock is in use.



# Playing Back Tapes




## Playing Back a Tape

- 1** Press EJECT (▲) for the deck you want to use.

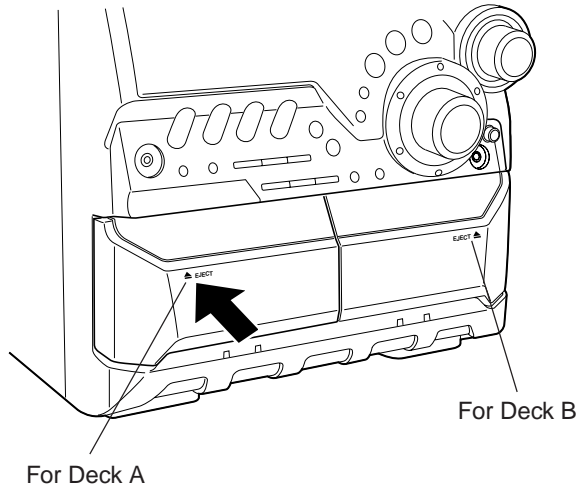

- 2** Put a cassette in with the exposed part of the tape down.

   - You can play back only type I.

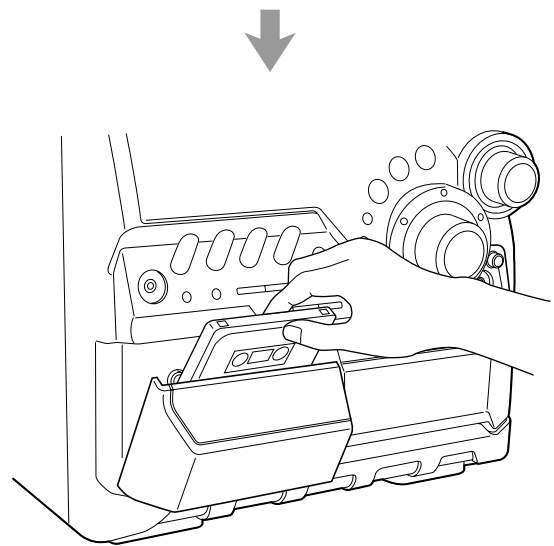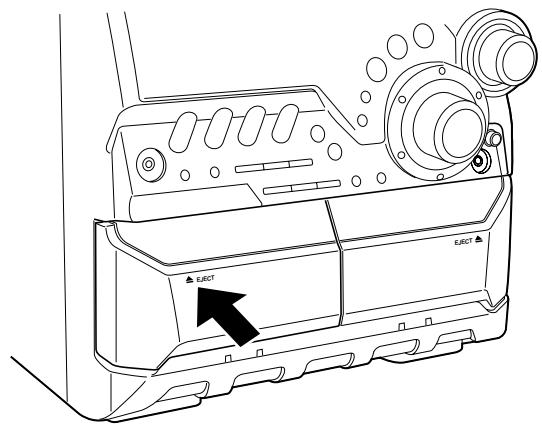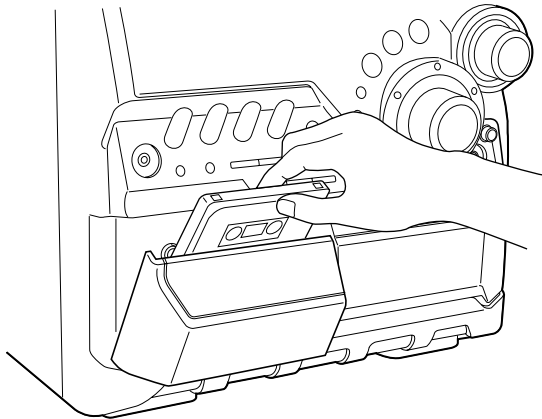

- 3** Close the cassette holder gently.

 
If you put cassettes in both decks A and B, the last deck which you have put a cassette into is selected.

To operate the other deck, press TAPE A or TAPE B (or TAPE A/B on the remote control).

- 4** Press TAPE ►.

The tape play starts and the tape running indicator (►) starts flashing slowly.

When the tape plays to the end, the deck automatically stops.

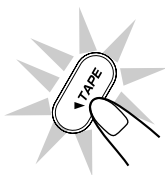

To stop during play, press ■.

To operate the other deck, press TAPE A or TAPE B (or TAPE A/B on the remote control), then TAPE ►.

To fast-forward the tape, press ►► (or ►►| on the remote control). The tape running indicator (►) starts flashing quickly.

To rewind the tape, press ◀◀ (or |◀◀ on the remote control). The tape running indicator (◀) starts flashing quickly.

To remove the cassette, press ▲ EJECT for deck A or EJECT ▲ for deck B.



The use of the C-120 or thinner tape is not recommended, since characteristic deterioration may occur and this tape easily jams in the pinch-rollers and the capstans.




# Recording
 
## IMPORTANT:

- It may be unlawful to record or play back copyrighted material without the consent of the copyright owner.
- The recording level is automatically set correctly, so it is not affected by the VOLUME control, the SOUND MODE control and the SUBWOOFER LEVEL control. Thus, during recording you can adjust the sound you are actually listening to without affecting the recording level.
- While recording, you can hear sound modes through the speakers or headphones. However, the sound is recorded without these effects (see page 11).
- If recordings you have made have excessive noise or static, the unit may be too close to a TV. Place the unit away from the TV.
- You can use type I tape for recording.

## To protect your recording

Cassettes have two small tabs on the back to protect unexpected erasure or re-recording.

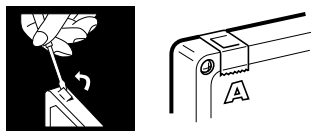

To protect your recording, remove these tabs.

To re-record on a protected tape, cover the holes with adhesive tape.


## To keep the best recording and playback sound quality

 If the heads, capstans, and pinch rollers of the cassette decks become dirty, the following will occur:

- Impaired sound quality
- Discontinuous sound
- Fading
- Incomplete erasure
- Difficulty in recording

## To clean the head, capstan, and pinch roller

Use a cotton swab moistened with alcohol.

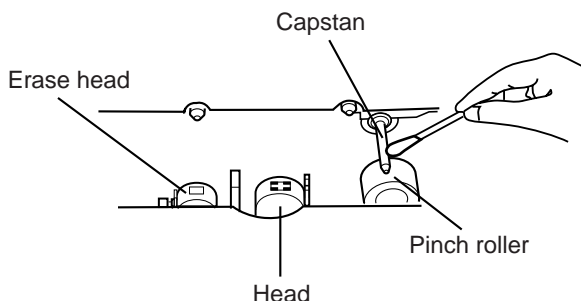


## To demagnetize the head

Turn off the unit, and use a head demagnetizer (available at electronics and audio shops).

## Recording a Tape on Deck B

### On the unit ONLY:

 **1** Press EJECT ▲ for the deck B.

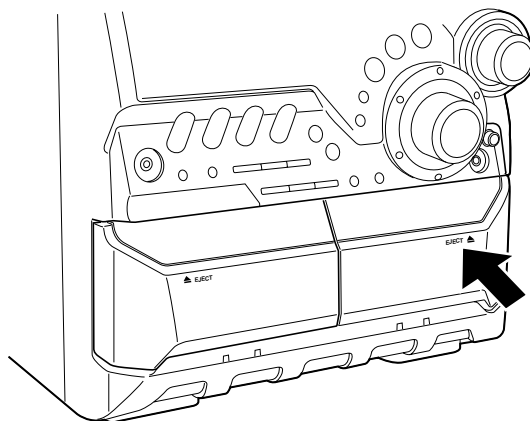

**2** Put a recordable cassette in with the exposed part of the tape down.

**3** Close the cassette holder gently.

**4** Start playing the source — FM, AM, CD player or auxiliary equipment connected to AUX IN jacks.

- When you want to use the dubbing method, see “Dubbing Tapes” on page 18.
- When the source is CD, you can also use CD Synchro Recording (see “CD Synchronized Recording” on page 18.)

**5** Press REC START/STOP.

The REC (recording) indicator lights up on the display and recording starts.



To stop during recording, press REC START/STOP again or ■.


To remove the cassette, press EJECT ▲ for deck B.



## Dubbing Tapes
 
### On the unit ONLY:


**1** Press **TAPE** ►, then ■.

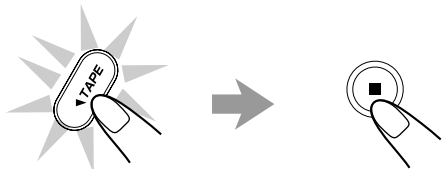

**2** Put the source cassette in deck A, and a recordable cassette into deck B.

**3** Press **DUBBING**.

 Dubbing starts.  
“DUBBING” appears, and the REC (recording) indicator lights up on the display.

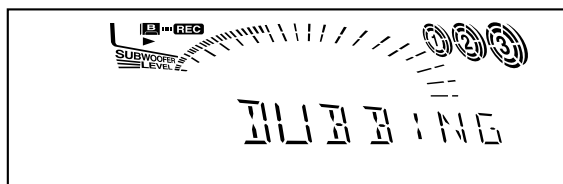

To stop during dubbing, press ■.

To remove the cassette, press ▲ EJECT for deck A and EJECT ▲ for deck B.

## CD Synchronized Recording

You can easily record a CD onto a tape.

 
- You can also record the tracks in order you have made the program.

### On the unit ONLY:

**1** Put a recordable cassette into deck B.



**2** Place a disc correctly on the circle of the disc tray, with its label side up.

**3** Press one of the disc number buttons (CD1, CD2 or CD3) to select the disc, then ■.

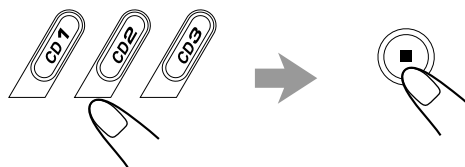

**4** Press **CD REC START**.

  “CD REC” appears, and the REC (recording) indicator lights up on the display.

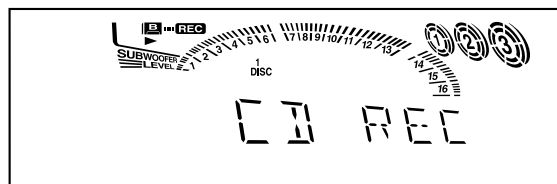

Deck B starts recording and the CD player starts playing.  
When the recording is done, the CD player and deck B stop.

To stop during CD Synchronized Recording, press ■.

To remove the cassette, press EJECT ▲ for deck B.

# Using the Microphones



You can enjoy singing along (Karaoke) and microphone mixing.

## IMPORTANT:

- Always set the MIC LEVEL to MIN when connecting or disconnecting the microphone.
- When you do not use the microphone, keep the microphones unconnected.

If howling or squealing (feedback) occurs while using the microphone, take the following actions to prevent these noises.

- Adjust the MIC LEVEL and VOLUME controls.
- Avoid pointing the microphone towards the speakers.

## Singing Along (Karaoke)

You can enjoy singing along (Karaoke) using Vocal Masking. Vocal Masking reduce the lead vocal of the playing source while playing back a stereo source.

- This function cannot be used for multiplex discs or tapes.

### 1 Rotate MIC LEVEL to MIN.



### 2 Connect the microphone (not supplied) by plugging it into the MIC jack.

The karaoke indicator (  ) lights up on the display.

### 3 Start playing the source — CD, tape or other connected component.

### 4 Press KARAOKE on the remote control repeatedly.



 
Each time you press the button, Vocal Masking turns on (V.MASK) and off (OFF).

- V.MASK: Reduces the vocals.  
 OFF: Cancels Vocal Masking (normal stereo playback resumes).

### 5 Rotate MIC LEVEL and VOLUME controls as you sing into the microphone.

When you finish singing, cancel the Karaoke function by pressing KARAOKE.


- By pressing REC START/STOP, you can record your singing along if you want. (For more details, see page 17.)
- To stop during recording, press ■.

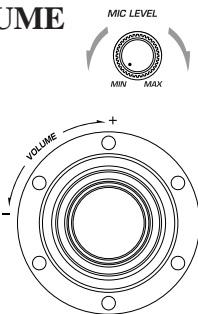


If you use the following sources as the playing source for Vocal Masking, you cannot get the satisfactory results

- Radio programs — a radio signal is not as reliable as the signals coming from a tape or CD.
- Monaural sources.
- Poorly dubbed tapes.
- Sources recorded with duets, strong echo, a chorus, or only a few instruments.

## To apply an echo to your voice

 Press ECHO on the remote control so that the echo (  ) indicator lights up on the display. Each time you press the button, the echo level changes as follows:



As the number increases, a stronger echo effect applies to your voice.

## Microphone Mixing

When you use microphone with any playback source, follow the procedure below.

### 1 Rotate MIC LEVEL to MIN.



 
### 2 Connect the microphone (not supplied) by plugging it into the MIC jack.

### 3 Start playing the source — CD, tape or other connected component.

### 4 Rotate MIC LEVEL and VOLUME controls as you sing into the microphone.



- By pressing REC START/STOP, you can record your singing along if you want. (For more details, see page 17.)
- To stop during recording, press ■.

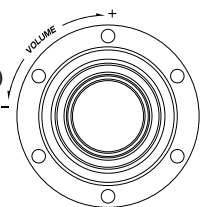



# Using the Timers

Continued 

There are three timers available — Daily Timer, Recording Timer, and Sleep Timer.

Before using the timers, you need to set the clock built in the unit. (See “Setting the Clock” on page 9.)

## Using Daily Timer

With Daily Timer, you can wake to your favorite music or radio program. You can set the timer whether the unit is on or off.

### How Daily Timer actually works

The unit automatically turns on, set the volume level to the preset level, and starts playing the specified source when the on-time comes (the ☺ indicator flashes while the timer is operating). Then, when the off-time comes, the unit automatically turns off (stands by).

The timer setting remains in memory until you change it.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- If you have made a mistake while setting timer, press CANCEL. (However, this does not always work. If CANCEL does not work, press CLOCK/TIMER repeatedly and start from step 1 again.)

 
### Before you start...

- *When using a CD as the source to play —*
  - Make sure there is a CD on the currently selected disc number tray.
- *When using a tape as the source to play —*
  - Make sure that a tape is in the deck whose deck indicator (A or B) is lit on the display.
- *When using the external component as the source to play —*
  - Set the timer equipped with the external component at the same time.


### On the unit ONLY:

#### 1 Press CLOCK/TIMER repeatedly until “DAILY” appears on the display.

☺ indicator lights up and the DAILY (daily timer) indicator also starts flashing on the display.

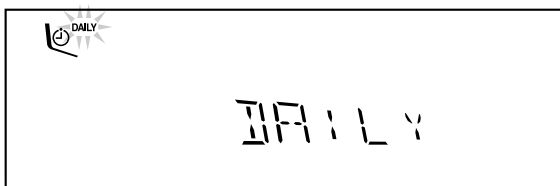

 
- Each time you press the button, the timer setting modes change as follows:



(See page 9.)


#### 2 Press CLOCK/TIMER again.

 “ON TIME” appears for 2 seconds, then the unit enters on-time setting mode.

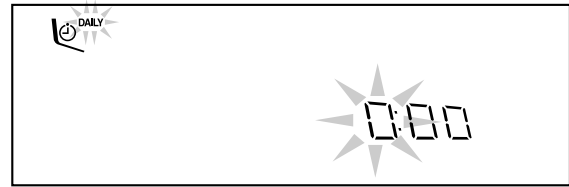


#### 3 Set the on-time you want the unit to turn on.

 - 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
  - 2) Press ◀◀ or ▶▶ to set the minute, then press SET.
- “OFF TIME” appears for 2 seconds, then the unit enters off-time setting mode.

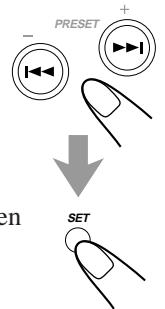

#### 4 Set the off-time you want the unit to turn off (on standby).

 - 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
  - 2) Press ◀◀ or ▶▶ to set the minute, then press SET.
- The unit enters source selecting mode.

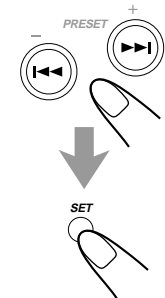

#### 5 Press ◀◀ or ▶▶ to select the source to play, then press SET.

- Each time you press ◀◀ or ▶▶, the source changes as follows:



TUNER FM: tunes into a specified preset FM station.

→ go to step 6.

TUNER AM: tunes into a specified preset AM station.

→ go to step 6.

CD: plays a disc from the first track.

→ go to step 7.

 
TAPE: plays a tape in deck A or B. → go to step 7.

AUX: plays an external source. → go to step 7.

## 6 When you have selected “TUNER FM” or “TUNER AM” in step 5. Select a preset station number.


Press ◀◀ or ▶▶ to select the preset station number, then press SET.

The unit enters volume setting mode.

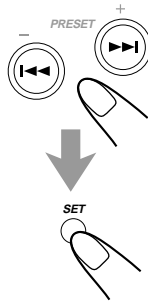


## 7 Press ◀◀ or ▶▶ to set the volume level.

 - You can select the volume level from VOL MIN, VOL 1 — VOL 30, and VOL MAX.

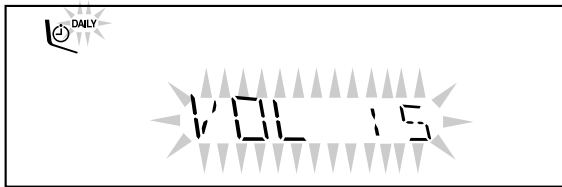


## 8 Press SET to complete the Daily Timer setting.

 The DAILY (daily timer) indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence for your confirmation.



## 9 Press ⏻/STANDBY/ON to turn off the unit (on standby) if you have set the Daily Timer with the unit turned on.

 

If the unit is turned on when the timer-on time comes Daily Timer does not work.

### To turn on or off Daily Timer after its setting is done

#### 1 Press CLOCK/TIMER repeatedly until “DAILY” appears on the display.



 
#### 2 To turn off the Daily Timer, press CANCEL.

The DAILY (daily timer) indicator goes off from the display (“OFF” appears for a while). The Daily Timer is canceled, but the setting for the Daily Timer remains in memory.



#### To turn on the Daily Timer, press SET.

The DAILY (daily timer) indicator lights up on the display. The settings you have done are shown on the display in sequence for your confirmation.



## Using Recording Timer

With Recording Timer, you can make a tape of a radio broadcast automatically. You can set the timer whether the unit is on or off.

### How Recording Timer actually works

The unit automatically turns on, tunes into the specified station, sets the volume level to “VOL MIN,” and starts recording when the on-time comes (the ⏻ indicator flashes while the timer is operating). Then, when the off-time comes, the unit automatically turns off (stands by).

The timer setting remains in memory until you change it.

- There is a time limit in doing the following steps. If the setting is canceled before you finish, start from step 1 again.
- If you have made a mistake while setting the timer, press CANCEL. (However, this does not always work. If CANCEL does not work, press CLOCK/TIMER repeatedly and start from step 1 again.)

### On the unit ONLY:

 
#### 1 Put a recordable cassette into deck B.

#### 2 Press CLOCK/TIMER repeatedly until “REC” appears on the display.

⏻ indicator lights up and the REC (recording timer) indicator also starts flashing on the display.



- Each time you press the button, the timer setting modes change as follows:



#### 3 Press CLOCK/TIMER again.

 
“ON TIME” appears for 2 seconds, then the unit enters on-time setting mode.






#### 4 Set the on-time you want the unit to turn on.

- 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
- 2) Press ◀◀ or ▶▶ to set the minute, then press SET.  
“OFF TIME” appears for 2 seconds, then the unit enters off-time setting mode.

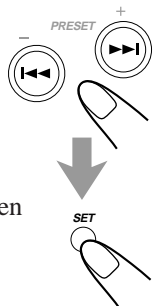


#### 5 Set the off-time you want the unit to turn off (on standby).

 - 1) Press ◀◀ or ▶▶ to set the hour, then press SET.
- 2) Press ◀◀ or ▶▶ to set the minute, then press SET.  
The unit enters preset station selecting mode.

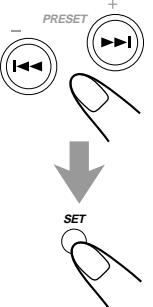



#### 6 Select the preset station.

 - 1) Press ◀◀ or ▶▶ to select the band (“TUNER FM” or “TUNER AM”), then press SET.
- 2) Press ◀◀ or ▶▶ to select a preset channel number, then press SET.  
The REC (recording timer) indicator stops flashing and remains lit. The settings you have done are shown on the display in sequence for your confirmation.

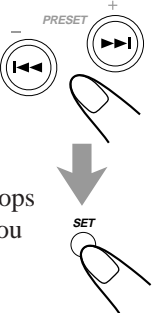

#### 7 Press /STANDBY/ON to turn off the unit (on standby) if necessary.

 

**notes** If you want to listen to another source while recording Press REC START/STOP or  to stop recording. Without stopping it, you cannot change the source.

#### To turn on or off Recording Timer after its setting is done

- 1 Press CLOCK/TIMER repeatedly until “REC” appears on the display.



 
- 2 To turn off the Recording Timer, press CANCEL.

The REC (recording timer) indicator goes off from the display (“OFF” appears for a while). The Recording Timer is canceled, but the setting for the Recording Timer remains in memory.



#### To turn on the Recording Timer, press SET.

The REC (recording timer) indicator lights up on the display. The settings you have done are shown on the display in sequence for your confirmation.



## Using Sleep Timer

With Sleep Timer, you can fall asleep to music. You can set Sleep Timer when the unit is turned on.

### How Sleep Timer actually works

The unit automatically turns off after the specified time length passes.

 
### On the remote control ONLY:

#### 1 Press SLEEP.

The time length until the shut-off time appears and the SLEEP indicator starts flashing on the display.



- Each time you press the button, the time length changes as follows:



#### 2 Wait for about 5 seconds after specifying the time length.

The SLEEP indicator stops flashing and remains lit.

**To check the remaining time until the shut-off time**, press SLEEP once so that the remaining time until the shut-off time appears for about 5 seconds.

**To change the shut-off time**, press SLEEP repeatedly until the desired time length appears on the display.

**To cancel the setting**, press SLEEP repeatedly until “OFF” appears on the display so that the SLEEP indicator goes off from the display.

- Sleep Timer is also canceled when you turn off the unit.

 
## Timer Priority

Since each timer can be set separately, you may wonder what happens if the setting for these timers overlaps. Here are examples.

- **Recording Timer has priority over Daily Timer.**

If Daily Timer is set to come on while Recording Timer is operating, Daily Timer will not come on at all.

- If Sleep Timer overlaps with another timer (either Daily Timer or Recording Timer), a timer with the earlier shut-off time has priority.

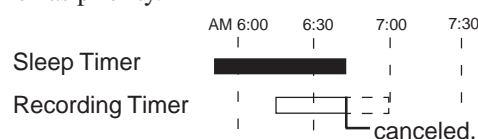

**When using the Recording Timer and Sleep Timer at the same time, pay special attention to the shut-off time.**

# Maintenance

 


To get the best performance of the unit, keep your discs, tapes, and mechanism clean.

## Handling discs



- Remove the disc from its case by holding it at the edge while pressing the center hole lightly.
- Do not touch the shiny surface of the disc, or bend the disc.
- Put the disc back in its case after use to prevent warping.

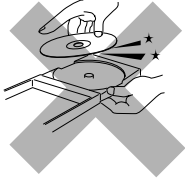


- Be careful not to scratch the surface of the disc when placing it back in its case.
- Avoid exposure to direct sunlight, temperature extremes, and moisture.




### To clean the disc

 Wipe the disc with a soft cloth in a straight line from center to edge.

## Handling cassette tapes

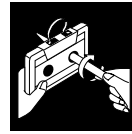

 - If the tape is loose in its cassette, take up the slack by inserting a pencil in one of the reels and rotating.
- If the tape is loose, it may get stretched, cut, or caught in the cassette.

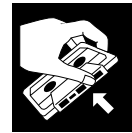

- Be careful not to touch the tape surface.



- Avoid the following places to store the tape:
  - In dusty places
  - In direct sunlight or heat
  - In moist areas
  - Near a magnet



DO NOT use any solvent — such as conventional record cleaner, spray, thinner, or benzine — to clean the disc.


# Troubleshooting



 If you are having a problem with your unit, check this list for a possible solution before calling for service.

If you cannot solve the problem from the hints given here, or the unit has been physically damaged, call a qualified person, such as your dealer, for service.

Symptom	Cause	Action
Unable to cancel the display demonstration.	Other buttons are pressed to cancel the display demonstration.	Press DEMO on the unit. (See page 8.)
No sound is heard.	Connections are incorrect or loose.	Check all connections and make corrections. (See pages 6 to 8.)
Hard to listen to broadcasts because of noise.	<ul style="list-style-type: none"> <li>• Antennas are disconnected.</li> <li>• The AM loop antenna is too close to the unit.</li> <li>• The FM antenna is not properly extended and positioned.</li> </ul>	<ul style="list-style-type: none"> <li>• Reconnect the antennas correctly and securely.</li> <li>• Change the position and direction of the AM loop antenna.</li> <li>• Extend the FM antenna at the best position.</li> </ul>
The disc sound is discontinuous.	The disc is scratched or dirty.	Clean or replace the disc. (See above.)
The carousel does not open or close.	<ul style="list-style-type: none"> <li>• The AC power cord is not plugged in.</li> <li>• The carousel is locked.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug the AC power cord.</li> <li>• Unlock the carousel. (See page 15.)</li> </ul>
The disc does not play.	The disc is placed upside down.	Place the disc with the label side up.
The cassette holders cannot be opened.	Power supply from the AC power cord has been cut off while the tape was running.	Turn on the unit.
Impossible to record.	Small tabs on the back of the cassette are removed.	Cover the holes with adhesive tape.
Stereo effect is lost.	Vocal Masking is activated.	Cancel the Vocal Masking. (See page 19.)
Operations are disabled.	The built-in microprocessor may malfunction due to external electrical interference.	Unplug the AC power cord and then plug it back in.
Unable to operate the unit from the remote control.	<ul style="list-style-type: none"> <li>• The path between the remote control and the remote sensor on the unit is blocked.</li> <li>• The batteries are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove the obstruction.</li> <li>• Replace the batteries.</li> </ul>

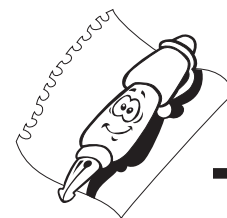

## Amplifier section — CA-MXG50

Output Power

**SUBWOOFERS:** 70 W per channel, min. RMS, driven into 6  $\Omega$  at 63 Hz with no more than 10% total harmonic distortion.

**MAIN SPEAKERS:** 30 W per channel, min. RMS, driven into 4  $\Omega$  at 1 kHz with no more than 10% total harmonic distortion.

Audio input sensitivity/Impedance

(at 1 kHz, measured at MAIN SPEAKERS)

AUX: 400 mV/50 k $\Omega$

MIC: 2.5 mV/5 k $\Omega$

Digital output: DIGITAL OUT (OPTICAL)

Signal wave length: 660 nm

Output level: -21 dBm to -15 dBm

Speakers/Impedance: Subwoofer: 6  $\Omega$  — 16  $\Omega$

Main speaker: 4  $\Omega$  — 8  $\Omega$

## Tuner

FM tuning range: 87.50 MHz — 108.00 MHz

AM tuning range:

At 9 kHz intervals : 531 kHz — 1 602 kHz

At 10 kHz intervals : 530 kHz — 1 710 kHz

## CD player

CD Capacity: 3 CDs

Dynamic range: 85 dB

Signal-to-noise ratio: 85 dB

## Cassette deck

Frequency response

Normal (type I): 50 Hz — 14 000 Hz

Wow and flutter

0.15% (WRMS)

## General

Power requirement: AC 110 V / AC 127 V / AC 220 V / AC 230 V — AC 240 V  $\sim$  (adjustable with the voltage selector), 50 Hz / 60 Hz

Power consumption: 130 W (at operation)  
17 W (on standby)

Dimensions (approx.): 270 mm x 317 mm x 447 mm (W/H/D)  
(10 <sup>11</sup>/<sub>16</sub> in. x 12 <sup>1</sup>/<sub>2</sub> in. x 17 <sup>5</sup>/<sub>8</sub> in.)

Mass (approx.): 8.9 kg (19.6 lbs)

## Supplied accessories

 
See page 6.

Design and specifications are subject to change without notice.

**Mains (AC) Line Instruction (not applicable for Europe, U.S.A., Canada, Australia, and U.K.)**

**Instrucción sobre la línea de la red (CA) (no aplicable para Europa, EE.UU., Canadá, Australia, ni el Grã-Bretanha)**

**Instrução sobre a tensão da rede eléctrica (CA) (não aplicável para a Europa, os E.U.A., o Canadá, a Austrália e o Reino Unido)**

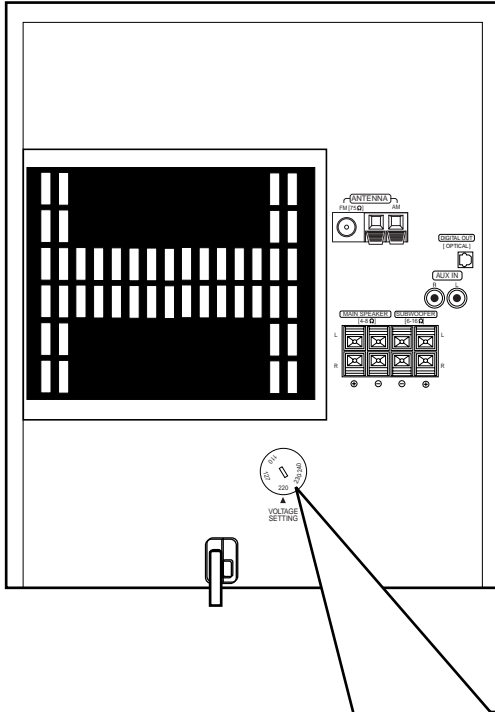

**IMPORTANT for mains (AC) line**

 
BEFORE PLUGGING IN, do check that your mains (AC) line voltage corresponds with the position of the voltage selector switch provided on the outside of this equipment and, if different, reset the voltage selector switch, to prevent from damage or risk of fire/electric shock.

**IMPORTANTE para la línea de la red (CA)**

ANTES DE ENCHUFAR EL EQUIPO, compruebe si la tensión de la línea de la red (CA) corresponde con la posición del selector de tensión situado en la parte exterior del equipo, y si es diferente, reajuste el selector de tensión para evitar el riesgo de incendios/ descargas eléctricas.

**IMPORTANTE para a ligação à tensão da rede (CA)**

ANTES DE LIGAR O APARELHO A UMA TOMADA DA REDE, verifique se a tensão da rede CA corresponde à posição do seletor de voltagem localizado na parte externa deste equipamento. Caso não corresponda, reajuste o seletor de voltagem a fim de evitar avarias ou riscos de incêndio e choque elétrico.

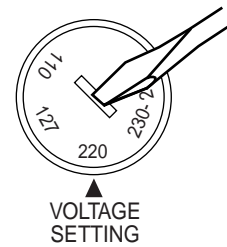



# JVC INSTRUCTIONS

## SPEAKER SYSTEM SP-MXG50/SP-MXG56

MANUAL DE INSTRUCCIONES: SISTEMA DE ALTAVOCES

INSTRUÇÕES: SISTEMA DE ALTIFALANTES

  说明书: 扬声器系统

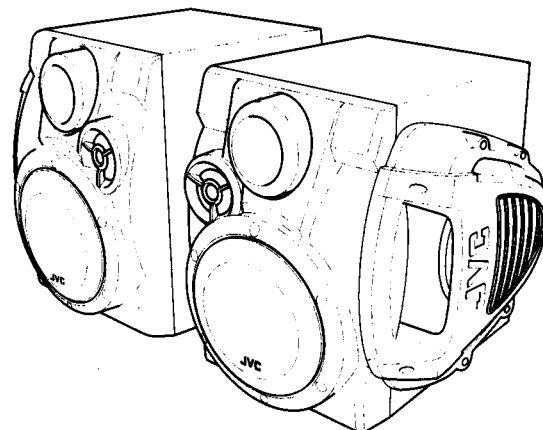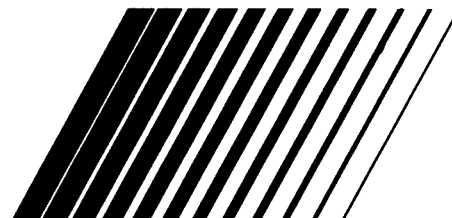

Thank you for purchasing JVC speakers.

Before you begin using them, please read the instructions carefully to be sure you get the best possible performance. If you have any questions, consult your JVC dealer.

Le estamos muy agradecidos por haber adquirido estos altavoces de JVC. Antes de utilizarlos, sírvase leer las instrucciones detenidamente a fin de obtener el mejor rendimiento posible. Si tienen alguna pregunta, acuda a su agente de JVC.

Gratos pela aquisição dos altifalantes JVC.

Antes de desfrutar este sistema, leia atentamente as instruções que o acompanham, de modo a assegurar-se da obtenção do melhor desempenho possível. Caso surjam dúvidas concernentes a este sistema, consulte o seu agente JVC.

感谢您惠购 JVC 扬声器。

在开始使用之前，请您仔细阅读本使用说明书，以确保您获得扬声器的最佳性能。如有疑问，请与 JVC 代理销售商联系。

### — SAFETY INSTRUCTIONS —

#### “SOME DOS AND DON'TS ON THE SAFE USE OF EQUIPMENT”

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read the operating instructions before you attempt to use the equipment.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

Do be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way — switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Switch off using the switch on the equipment and make sure that your family know how to do this.

Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or soft furnishing.

Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws — to ensure complete safety always fit the manufacturer's approved stand or legs with the fixings provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

#### ABOVE ALL

- NEVER let anyone, especially children, push anything into holes, slots or any other opening in the case.
- this could result in a fatal electrical shock;
- NEVER guess or take chances with electrical equipment of any kind
- it is better to be safe than sorry!

 


## Connection

## Conexión

## Ligaçao

## 接线

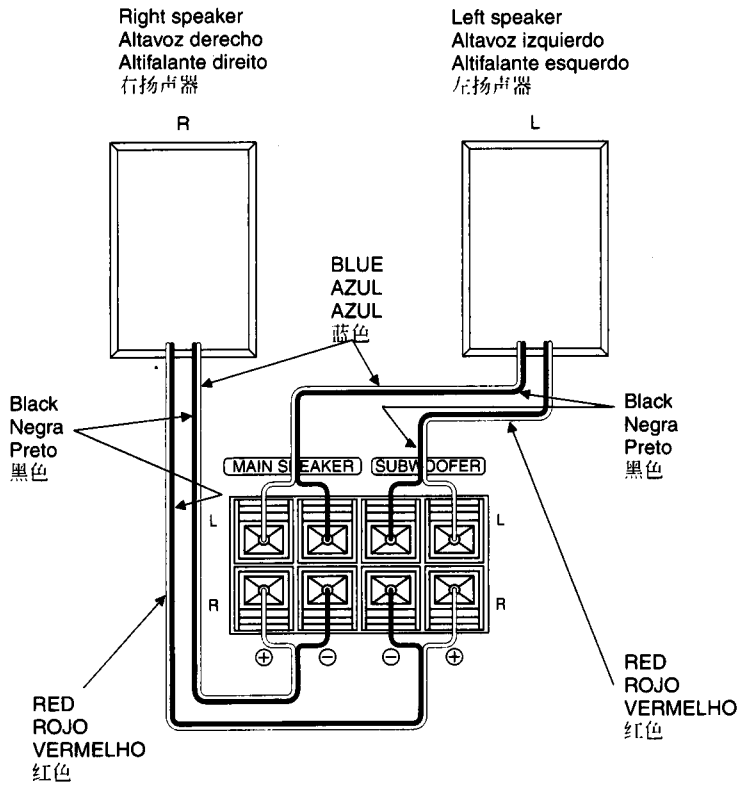

Amplifier output terminals  
Terminales de salida de amplificador  
Terminais de saída do amplificador  
放大器输出端子

## CONNECTION

- DO NOT use other amplifier to operate this speaker system except for CA-MXG50/CA-MXG56.
- Turn off power to the whole system before connecting the speakers to the amplifier.
- The maximum power handling capacity of the SP-MXG50/SP-MXG56 main speaker is 40 W and Subwoofer is 80 W. Excessive input will result in abnormal noise and possible damage. In cases where the signals described below are applied to the speakers, even if the signals are below the maximum allowable input, they may cause an overload and burn the wiring of the speakers. Be sure to lower the amplifier volume beforehand.
  - 1) Noise during FM tuning.
  - 2) High level signals containing high frequency components produced by a tape deck in the fast forward mode.
  - 3) Click noise produced when turning power of other components on and off.
  - 4) Click noise produced when connecting or disconnecting cords with the power on.
  - 5) Click noise produced when the cartridge is replaced with the power on.
  - 6) Click noise produced when operating amplifier switches.
  - 7) Continuous high frequency oscillation or high pitch electronically produced musical instrument sound.
  - 8) Howling when using a microphones.

## SPECIFICATIONS

Type	: 3-way 3-speaker Bass-Reflex Type Twin Hyper Power-Drive Subwoofer
Speakers:	
Subwoofer	: 13.5 cm (5-3/8 in.) cone × 1
Main Woofer	: 13.5 cm (5-3/8 in.) cone × 1
Tweeter	: 5.0 cm (2 in.) cone × 1
Power Handling Capacity:	
Subwoofer	: 80 W
Main Speaker	: 40 W
Impedance:	
Subwoofer	: 6 Ω
Main Speaker	: 4 Ω
Frequency Range:	
Subwoofer	: 26 Hz — 92 Hz
Main Speaker	: 92 Hz — 20 000 Hz
Sound Pressure Level:	
Subwoofer	: 75 dB/W·m
Main Speaker	: 88 dB/W·m
Dimensions (W × H × D)	: 275 mm × 317 mm × 309 mm (10-11/16 in. × 12-1/2 in. × 12-3/16 in.)
Mass	: 5.0 kg (11.0 lbs) each

*Design and specifications subject to change without notice.*



## CONEXIÓN

- NO utilice ningún otro amplificador para operar este sistema de altavoces excepto CA-MXG50/CA-MXG56.
- Desactive la alimentación de todo el sistema antes de conectar los altavoces al amplificador.
- La capacidad máxima de potencia del altavoz principal del SP-MXG50/SP-MXG56 es de 40 W y la del altavoz de subgraves es de 80 W. Uná entrada excesiva resultará en ruido anormal y posibles daños.

En casos donde las señales descritas más abajo se apliquen a los altavoces, aunque las mismas resulten menores que la entrada máxima permisible, pueden causar una sobrecarga y quemar el cableado de los altavoces. Asegúrese de disminuir el volumen del amplificador con anterioridad.

- 1) Ruido durante la sintonía en FM.
- 2) Señales de alto nivel que contengan componentes de alta frecuencia producidos por un magnetófono en el modo de avance rápido.
- 3) Ruidos de conmutación provocados al encender y apagar otros componentes.
- 4) Ruido de conmutación al conectar o desconectar cables con los componentes encendidos.
- 5) Ruido de conmutación cuando se reemplaza la cápsula con los componentes encendidos.
- 6) Ruido de conmutación provocados por la operación de los selectores del amplificador.
- 7) Continua oscilación de alta frecuencia o de sonidos de tonos altos provocados por instrumentos electrónicos.
- 8) Aullidos al utilizar micrófonos.

## ESPECIFICACIONES

Tipo	: Reflex bajo con 3-altavoces y 3 vías Twin Hyper Power-Drive Subwoofer
Altavoces:	
De subgraves	: Tipo cónico de 13,5 cm × 1
Principal	: Tipo cónico de 13,5 cm × 1
De agudos	: Tipo cónico de 5,0 cm × 1
Capacidad de potencia:	
De subgraves	: 80 W
Principal	: 40 W
Impedancia:	
De subgraves	: 6 Ω
Principal	: 4 Ω
Gama de frecuencias:	
De subgraves	: 26 Hz — 92 Hz
Principal	: 92 Hz — 20 000 Hz
Nivel de presión acústica:	
De subgraves	: 75 dB/W·m
Principal	: 88 dB/W·m
Dimensiones (An × Al × Prf)	: 275 mm × 317 mm × 309 mm
Peso	: 5,0 kg cada uno

*El diseño y las especificaciones están sujetos a cambio sin previo aviso.*

## LIGAÇÃO

- NÃO use outro amplificador para operar este sistema de altifalantes à exceção do CA-MXG50/CA-MXG56.
- Desligue a alimentação de todo o sistema antes de iniciar as ligações dos altifalantes ao amplificador.
- A potência efectiva máxima do altifalante principal do SP-MXG50/SP-MXG56 é de 40 W; a do subwoofer é de 80 W.

Uma entrada excessiva resultará em ruídos anormais e possíveis avarias. Nos casos em que os sinais descritos abaixo apresentem-se nos altifalantes, mesmo que os sinais estejam abaixo do nível de entrada permível, poderão causar uma sobrecarga e o curto-circuito dos fios dos altifalantes. Certifique-se de reduzir o volume do amplificador de antemão.

- 1) Interferências durante a sintonia de FM.
- 2) Sinais com níveis elevados e com componentes de alta frequência produzidos pelo deck de cassetes durante o modo do avanço rápido.
- 3) Estalidos produzidos quando do ligar/desligar da alimentação de outros componentes.
- 4) Estalidos produzidos ao se ligar/desligar cabos de ligação com a alimentação ligada.
- 5) Estalidos produzidos quando da troca da célula fonocaptadora com a alimentação ligada.
- 6) Estalidos produzidos quando do activar/desactivar dos interruptores do amplificador.
- 7) Oscilação contínua das altas frequências ou altas tonalidades electronicamente produzidas por sons de músicas instrumentais.
- 8) Efeito de realimentação acústica (microfonia) quando da utilização de microfone.

## ESPECIFICAÇÕES

Tipo	: Reflector de graves de 3 vías e 3 altifalantes Twin Hyper Power-Drive Subwoofer
Altifalantes:	
Subwoofer	: Cónico de 13,5 cm × 1
Woofer principal	: Cónico de 13,5 cm × 1
Tweeter	: Cónico de 5,0 cm × 1
Potência efectiva:	
Subwoofer	: 80 W
Altifalante principal	: 40 W
Impedância:	
Subwoofer	: 6 Ω
Altifalante principal	: 4 Ω
Amplitude de frequência:	
Subwoofer	: 26 Hz — 92 Hz
Altifalante principal	: 92 Hz — 20 000 Hz
Nível da pressão sonora:	
Subwoofer	: 75 dB/W·m
Altifalante principal	: 88 dB/W·m
Dimensões (larg. × alt. × prof.)	: 275 mm × 317 mm × 309 mm
Peso	: 5,0 kg cada

*Desenho e especificações sob reserva de alterações sem aviso prévio.*

## 接线

- 请勿使用其他放大器操作 CA-MXG50/CA-MXG56 以外的扬声器系统。
- 要将扬声器连接到放大器时，须关掉全装置系统的电源。
- SP-MXG50/SP-MXG56 主扬声器的最大功率储备容量为 40 W（瓦），副低音喇叭的为 80 W（瓦）。过大的输入，将造成异常噪声，甚至损坏扬声器。当下列信号输入扬声器时，即使该信号低于最大容许输入，仍有可能造成过载而烧毁扬声器导线，故请预先调低放大器的音量控制，以策安全。
  - 1) 在 FM 调谐中产生的噪声。
  - 2) 磁带录音机的快进模式中产生的含有高频成分的高电平信号。
  - 3) 开关其他组成部分电源时产生的卡嗒噪声。
  - 4) 接通着电源进行接线或断线时产生的卡嗒噪声。
  - 5) 接通着电源更换卡盘时产生的卡嗒噪声。
  - 6) 操作放大器开关时产生的卡嗒噪声。
  - 7) 连续的高频率振荡或高音调电子装置产生的乐器声。
  - 8) 使用麦克风时产生的啸声。

## 规格

类型	: 3 通道 3 扬声器低音反射型 Twin Hyper Power-Drive Subwoofer
扬声器:	
副低音喇叭	: 锥形纸盆 13.5 cm × 1
主喇叭	: 锥形纸盆 13.5 cm × 1
高音喇叭	: 锥形纸盆 5.0 cm × 1
最大功率:	
副低音喇叭	: 80 W (瓦)
主扬声器	: 40 W (瓦)
阻抗:	
副低音喇叭	: 6 Ω (欧姆)
主扬声器	: 4 Ω (欧姆)
频率范围:	
副低音喇叭	: 26 Hz — 92 Hz
主扬声器	: 92 Hz — 20 000 Hz
声压级:	
副低音喇叭	: 75 dB/W · m
主扬声器	: 88 dB/W · m
尺寸 (W × H × D)	: 275 mm × 317 mm × 309 mm
质量	: 每个 5.0 kg

设计与规格如有变更，恕不另行通知。

**JVC**  
VICTOR COMPANY OF JAPAN, LIMITED