


Locations


Locations of remote control buttons

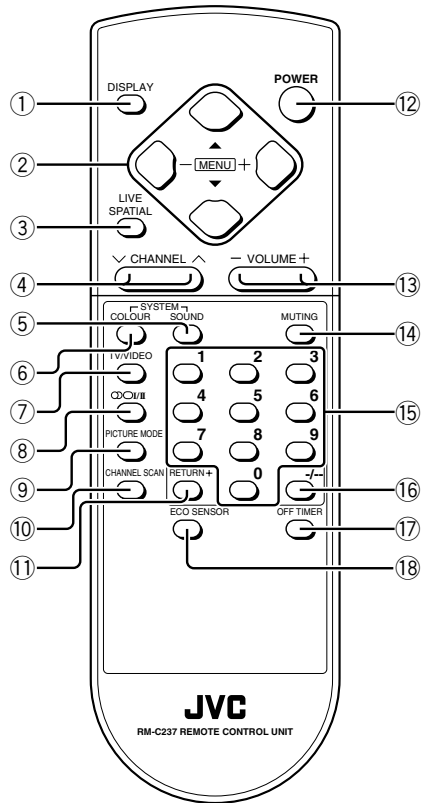

①	DISPLAY button	p.21
②	MENU buttons	
	• MENU ▲/▼ buttons	
	• MENU -/+ buttons	
③	LIVE SPATIAL button	p.17
④	CHANNEL V/^ buttons	p.13
⑤	SOUND SYSTEM button	p.16
⑥	COLOUR SYSTEM button	p.16
⑦	TV/VIDEO button	p.15
⑧	Multi Sound button	p.17
⑨	PICTURE MODE button	p.16
⑩	CHANNEL SCAN button	p.22
⑪	RETURN + button	p.22
⑫	POWER button	p.6,13,14
⑬	VOLUME -/+ buttons	p.14
⑭	MUTING button	p.17
⑮	Number buttons	p.13
⑯	-/-- button	p.13
⑰	OFF TIMER button	p.21
⑱	ECO SENSOR button	p.21

Locations

Locations of front panel buttons and lamps

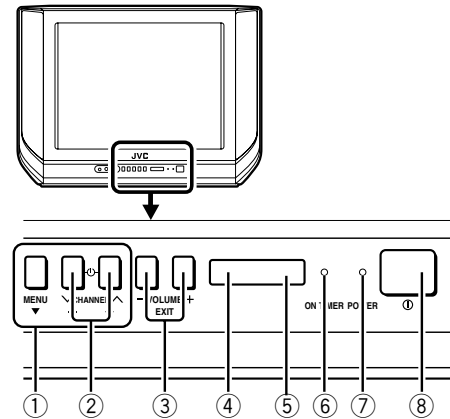

①	MENU buttons	p.26
	• MENU button	
	• MENU -/+ buttons	
②	CHANNEL V/^ buttons	p.14
③	VOLUME -/+ buttons	p.14

④	ECO sensor	
⑤	Remote control sensor	
⑥	ON TIMER lamp	p.23
⑦	POWER lamp	p.6,13,14
⑧	Main power button	p.6,14