

JVC

SERVICE MANUAL

DUAL MODE DIGITAL CAMERA

GC-A33 (J)/(K)/(E)

The "Product Exchange System" is applicable to this product.
For limited spare parts, refer to the parts list.



Contents

Specifications	Front cover
1. Packing method	2
2. part list	3
3. How to exchange the Battery Cover.....	3

Specifications

- Dual Mode Digital Camera
- Built-in Flash Memory : 8 MB
- 60 Images (Fine), 60-120 Images (Normal)
- 1/3 CMOS with VGA (640 x 480) pixels
- Built-in Flash 2 Way Flash (Auto/Off)
- Self-timer with 10 sec. Delay
- Auto White Balance
- Dimensions : 97 mm (w) x 65 mm (H) x 37 mm (D)
(3-7/8" x 2-9/16" x 1-1/2")
- B/W LCD for Status Display

- USB Interface
- USB Frame Rate : 30 frame/sec. (320 x 240)
15 frame/sec. (640 x 480)
- Alkaline Battery (AA x 2)
- MGI Photo Suite® III SE*
- MGI Photo Vista™*
- Weight : 110 g (3.9 oz) without Battery


* MGI Photo Suite is a trademark of MGI Software Corp.
MGI Photo Vista is a trademark of MGI Software Corp.

System Requirements

- Microsoft® Windows® 98/98SE/Me/2000
(Pre-installed Model)
- Intel® Pentium® Processor or higher
- Free USB Port
- Minimum RAM : 32 MB
- 20 MB of available hard disk space
- Color display : VGA or better
- CD-ROM drive

* Design and specifications subject to change without notice.

1. Packing Method

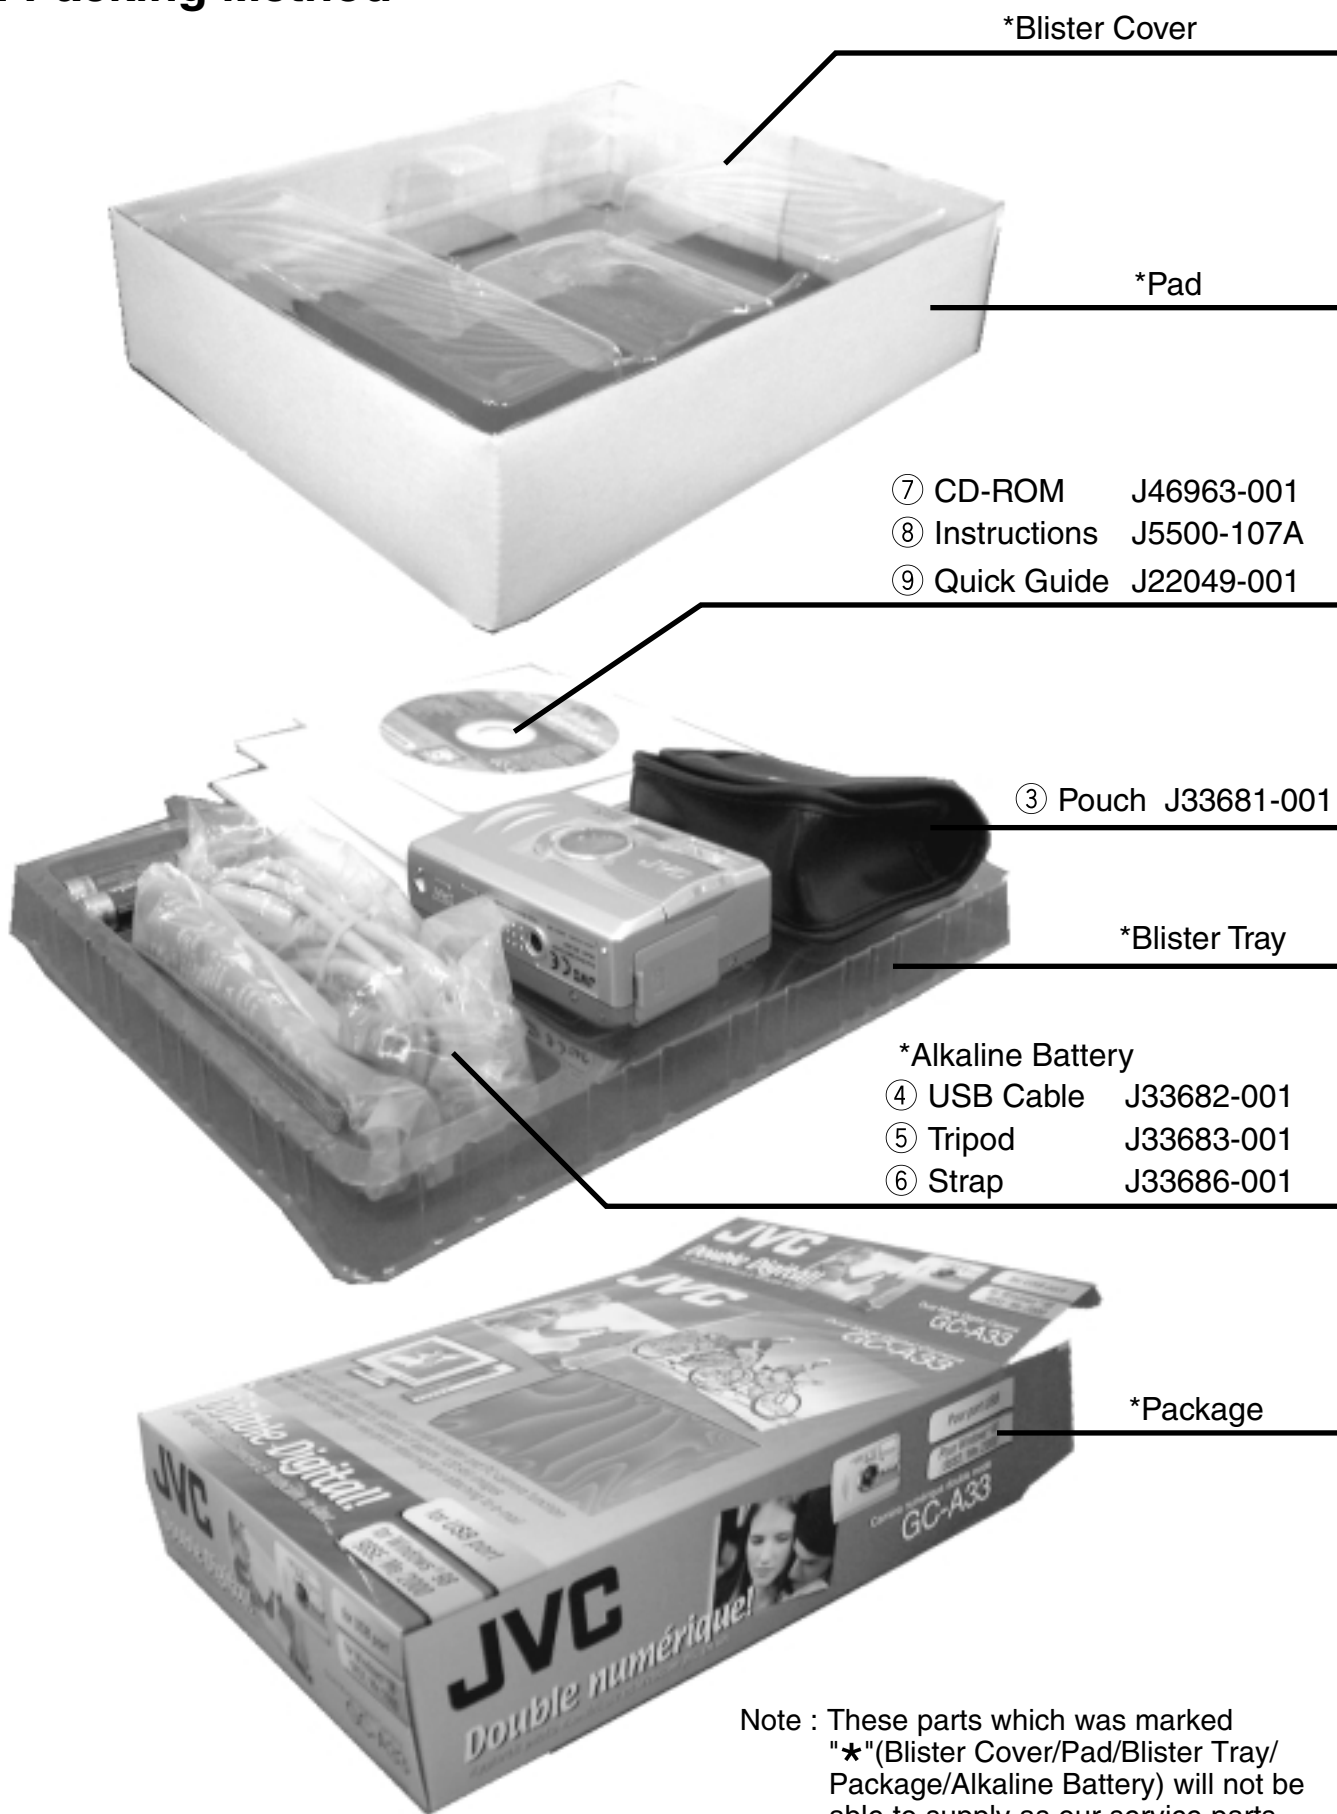

Note : These parts which was marked "★"(Blister Cover/Pad/Blister Tray/Package/Alkaline Battery) will not be able to supply as our service parts.

2. Parts list

△	Item No.	Parts No.	Parts Name	Q'ty	Description
	1	J33685-001	Battery Cover	1	
	2	J33684-001	USB Port Cover	1	
	3	J33681-001	Pouch	1	
	4	J33682-001	USB Cable	1	
	5	J33683-001	Tripod	1	
	6	J33686-001	Strap	1	
	7	J46963-001	CD-ROM	1	
△	8	J5500-107A	Instructions	1	With caution sheet (J33690-001, J47009-001)
	9	J22049-001	Quick Guide	1	

* Parts marked (△) are safety parts. When replacing, be sure to use the specified one.



3. How to exchange the Battery Cover



1. Remove 4 screws from the Camera.
2. Remove the Front Cover from the Body.
3. Remove 2 screws for the Battery Case.
4. Remove the Battery Case from the Front Cover.
5. Exchange the Battery Cover.

JVC

VICTOR COMPANY OF JAPAN, LIMITED

COMMUNICATION NETWORK BUSINESS UNIT

AV & MULTIMEDIA COMPANY 1644, Shimotsuruma, Yamato, Kanagawa 242-8514, Japan