## JVC

## **SERVICE MANUAL**

#### HANDS FREE KIT FOR MOBILE PHONES

# TF-HF10(J) TF-HF20-NK(J)/TF-HF20-ER(J)

The "Product Exchange System" is applicable to this product. For limited spare parts, refer to the parts list.







TF-HF20-NK(J)



TF-HF20-ER(J)

Design and specifications subject to change without notice.

#### **Specifications**

	TF-HF10(J)	TF-HF20-NK(J)/-ER(J)		
Earphone section				
Type	Moving coil	Moving coil		
Nominal impedance	32 ohms	32 ohms		
Sensitivity	111 dB/1 mW	111 dB/1 mW		
Max.input capability	10 mW	10 mW		
Microphone section				
Type	Electrical condenser	Electrical condenser Non-directional		
Directivity	Non-directional			
Sensitivity	-60 dB(0dB=1V/0.5Pa)	-60 dB(0dB=1V/0.5Pa)		
Cord length	1.2 m (3.94 ft) with 2.5mm triple-pole plug	1.2 m (3.94 ft) with 2.5mm triple-pole plug		
Mass	5.0g (0.18 oz) without cord	5.5g (0.19 oz) without cord		
	13.6g (0.48 oz) with cord	15.1g (0.53 oz) with cord		
Accessory		Plug adaptor for Nokia(for NK model only)		
Plug adaptor f		Plug adaptor for Ericsson(for ER model only)		

#### Using the earphone


TF-HF10(J)










#### Method of switching the nozzle direction

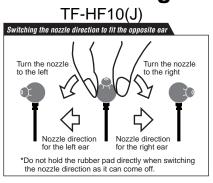

TF-HF20NK(J)/-ER(J)

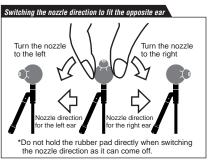

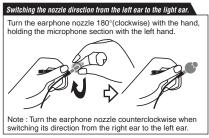

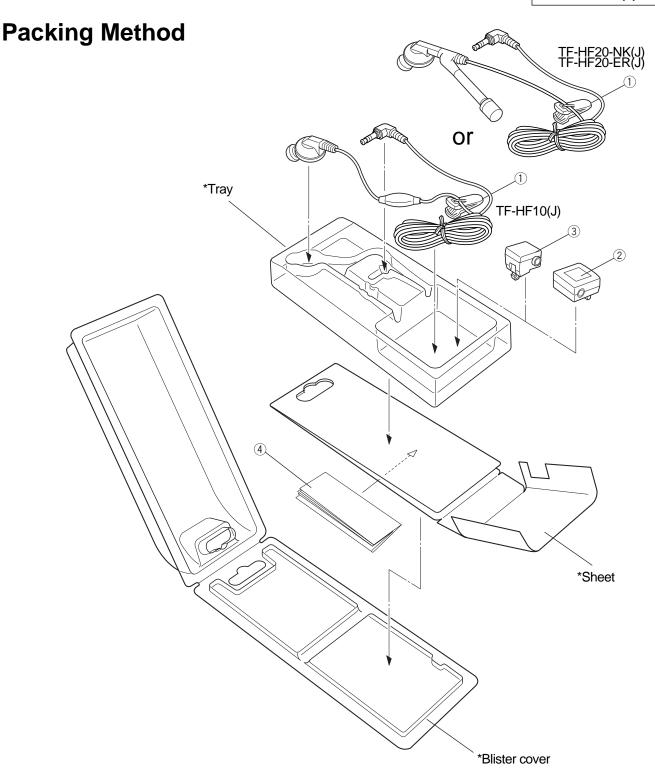


Note: These parts which was marked (\*) will not be able to supply as our service parts.

#### ■ Parts List

	<u> </u>	Item No.	Parts No.	Parts Name	Q'ty	Description
		1	J46987-001	Clip	1	
1		2	J46980-002	Adaptor	1	for NK model only
1		3	J46986-001	Adaptor	1	for ER model only
		4	BT-51007-5	Warranty infomation card	1	

<sup>\*</sup>Parts marked ( $\triangle$ ) are safety parts. When replacing, be sure to use the specified one.

### **Wiring Diagram**

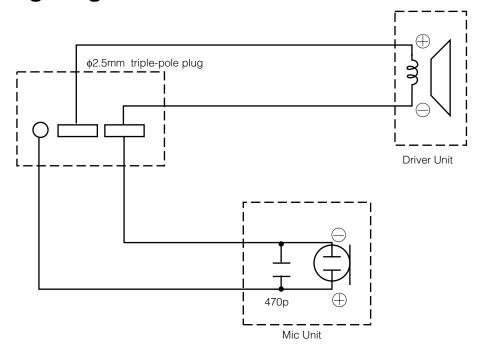



VICTOR COMPANY OF JAPAN, LIMITED

AV ACCESSORY DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI KANAGAWA-KEN, 242-8514, JAPAN

