

# JVC

# SERVICE MANUAL

## SPEAKER SYSTEM

## SX-LC3WD


**Area Suffix**

E .....Continental Europe  
U ..... Other Areas

**Contents**

Safety precautions .....	1-2
Disassembly method .....	1-3
Standard schematic diagram .....	2-1

## Safety precaution

 **CAUTION** Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of performing repair of this system.

## Disassembly method

### ■ Removing the front net (See Fig.1)

1. Remove the front net from the six holders that are fixing the front net.

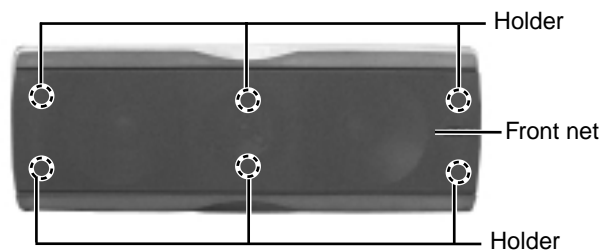


Fig.1

### ■ Removing the tweeter (See Fig.2&3)

- Removing the front net.

1. Remove the three screws **A** attaching the tweeter using a hexagon wrench.
2. Remove the speaker cord (Yellow, Black).

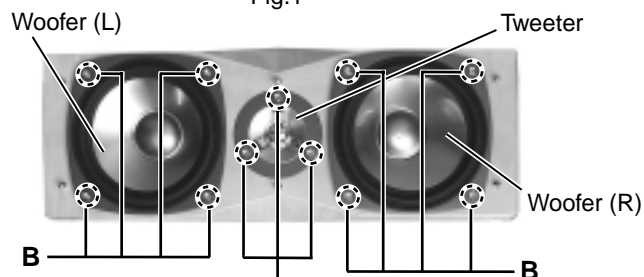


Fig.2

### ■ Removing the woofer (See Fig.2&4)

- Removing the front net.

1. Remove the eight screws **B** on both sides of the woofer using a hexagon wrench.
2. Remove the speaker cord (Red, Black) on both sides of the woofer.

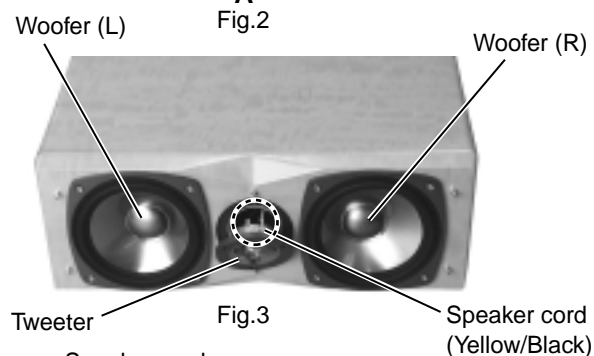


Fig.3

### ■ Removing the net walk assembly (See Fig.5)

- Removing the front net.
- Removing the tweeter.
- Removing the woofer of right side.

1. Remove the sound absorbent material inside of the speaker box.
2. Remove the four screws **C** attaching the net walk assembly.
3. Lift the net walk assembly.

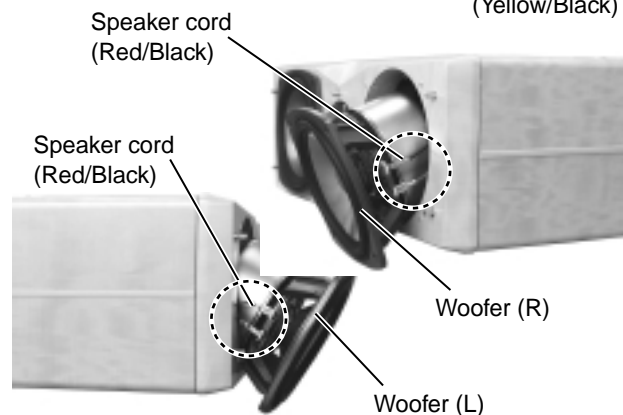


Fig.4

### Caution

Care should be taken not to turn the speaker face down. Turning the speaker face down may damage the edges of the speaker.

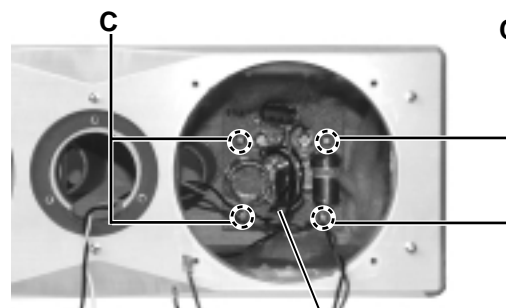


Fig.5

**JVC**

**VICTOR COMPANY OF JAPAN, LIMITED**

AUDIO & COMMUNICATION BUSINESS DIVISION

PERSONAL & MOBILE NETWORK B.U. 10-1,1Chome,Ohwatari-machi,maebashi-city,371-8543,Japan