

# JVC

# SERVICE MANUAL

## SPEAKER SYSTEM

## SX-L3WD

### Area Suffix

E --- Continental Europe


U ..... Other Areas



### Contents

Safety Precautions .....	1-2
Disassembly method .....	1-3
Standard schematic diagram .....	1-4

## Safety precaution

 **CAUTION** Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of performing repair of this system.

# Disassembly method

## ■ Removing the front net (See Fig. 1)

1. Remove the front net from the four holders that are fixing the front net.

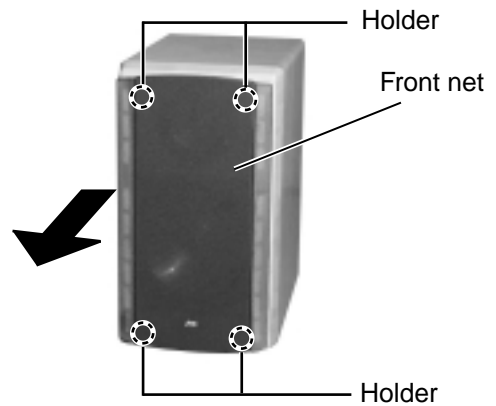


Fig. 1

## ■ Removing the tweeter (See Fig. 2&3)

- Removing the front net.
1. Remove the three screws A attaching the tweeter using a hexagon wrench.
  2. Remove the speaker cord (Yellow, Black).

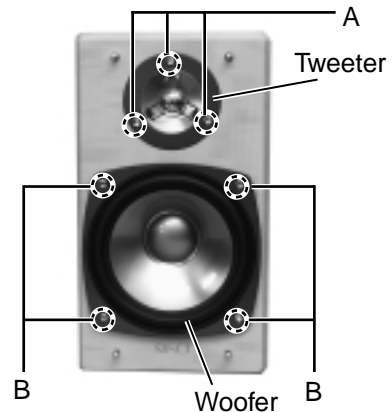


Fig. 2

## ■ Removing the woofer (See Fig. 2&4)

- Removing the front net.
1. Remove the four screws B attaching the woofer using a hexagon wrench.
  2. Remove the speaker cord (Red, Black).

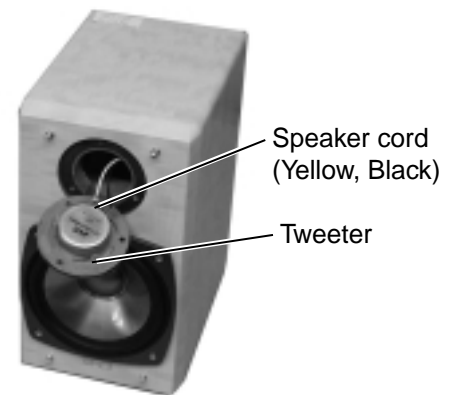


Fig. 3

## ■ Removing the net walk assembly (See Fig. 5)

- Removing the front net.
  - Removing the tweeter.
  - Removing the woofer.
1. Remove the sound absorbent material inside of the speaker box.
  2. Remove the four screws C attaching the net walk assembly.
  3. Lift the net walk assembly.

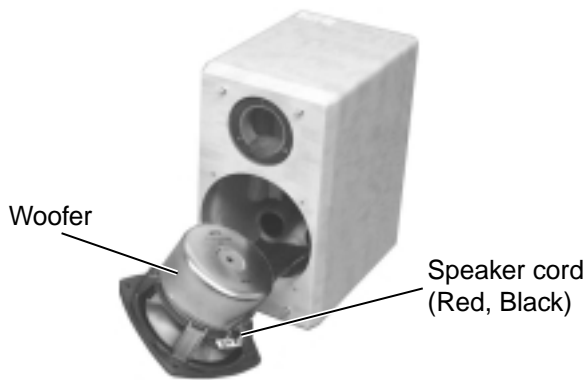


Fig. 4


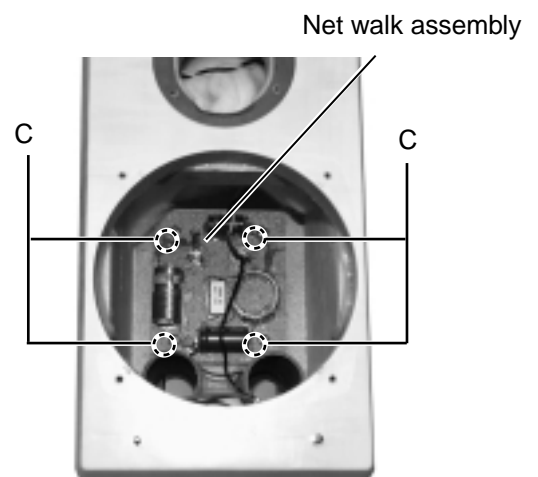


Fig. 5

### Caution

Care should be taken not to turn the speaker face down.  
Turning the speaker face down may damage the edges of the speaker.

## Standard schematic diagram

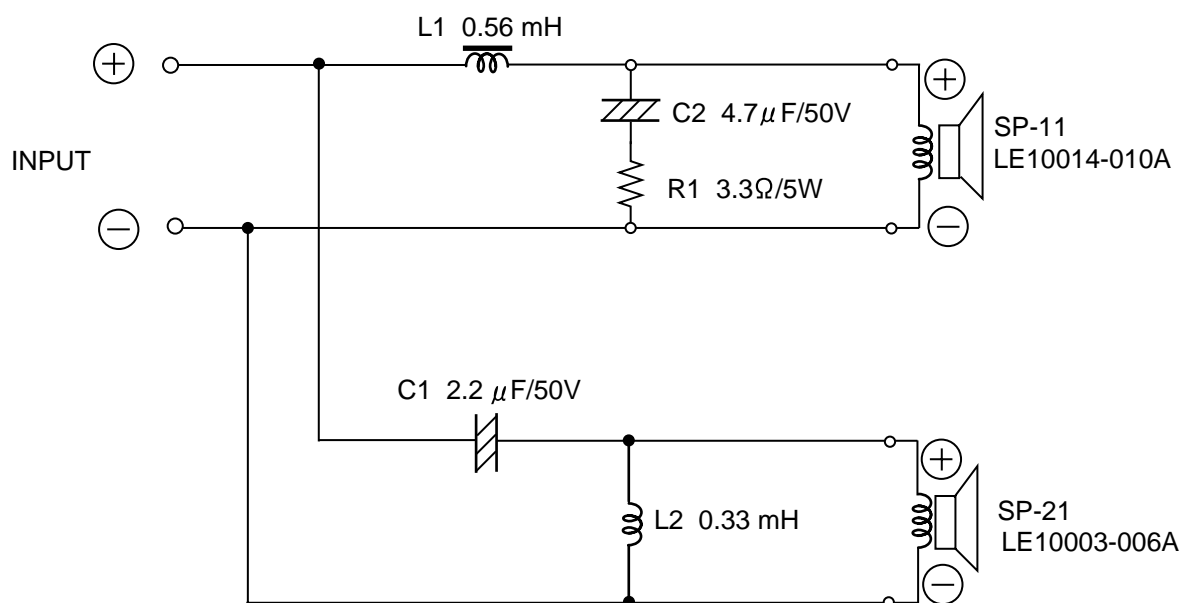

# JVC

VICTOR COMPANY OF JAPAN, LIMITED  
 AUDIO & COMMUNICATION BUSINESS DIVISION  
 PERSONAL & MOBILE NETWORK BUSINESS UNIT. 10-1,1Chome,Ohwatari-machi,Maebashi-city,371-8543,Japan