
# **JVC**

# SERVICE MANUAL

### SATELLITE SPEAKER SYSTEM

# SP-X100 / SP-CR100 SP-R100

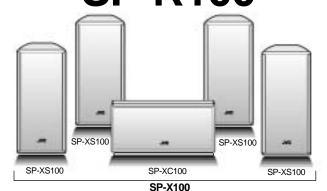


#### SP-X100/SP-CR100

Area Suffix						
E Continental Europe						
UJ ·····U.S.Military						
USSingapore						

#### **SP-R100**

Area Suffix
E ---- Continental Europe

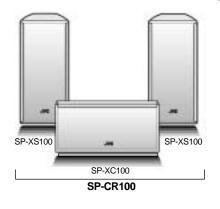



#### Each difference points

Model	SP-X100		SP-CR100		SP-R100		Description
	Parts name	Q'ty	Parts name	Q'ty	Parts name	Q'ty	2000 i pilon
Center speaker	SP-XC100	x1	SP-XC100	x1			Interchangeable
Side speaker	SP-XS100	х5	SP-XS100	x2	SP-XS100	x2	Interchangeable

#### **Contents**

Safety precautions	1-2
Disassembly method	1-3

## **Safety precaution**

A CAUTION Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.

### **Disassembly method**

#### The speaker box of this model is a unit supply.

Therefore, we do not supply it as individual parts though the method of disassembling the speaker box has been described.

#### ■ Removing the Ornament Panel (See Fig.1)


 Remove the six hooks a attaching the ornament panel from front side. In that case, ornament panel is fixed with the adhesive, and remove the ornament panel by using a minus driver etc., please.

#### ■ Removing the front panel (See Fig.2)

- Prior to performing the following procedure, remove the ornament panel.
- 1. Remove the two screws **A** attaching the front panel.
- 2. Pull out the front Panel. In that case, front panel is fixed with the adhesive, and remove the front panel by using a minus driver etc., please.

#### ■ Removing the speaker (See Fig.3 to 4)

- Prior to performing the following procedure, remove the ornament panel. and front panel.
- 1. Disconnect the speaker wire from speaker terminal.
- 2. Remove the four screws **B** attaching the speaker.

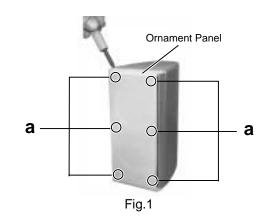


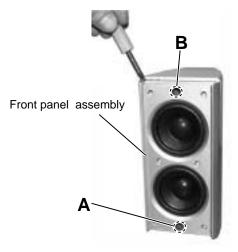


Fig.2



1-3

SP-X100/ SP-CR100 SP-R100

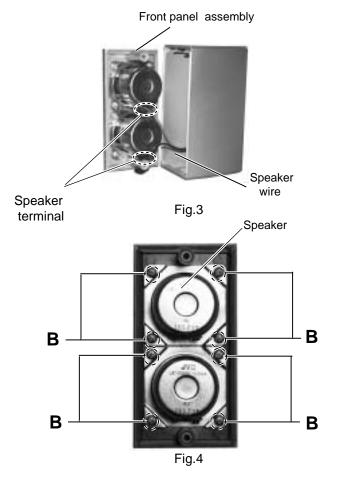

VICTOR COMPANY OF JAPAN, LIMITED
AUDIO & COMMUNICATION BUSINESS DIVISION

PERSONAL & MOBILE NETWORK BUSINESS UNIT. 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan

