

JVC

SERVICE MANUAL

SPEAKER SYSTEM

SX-F300WD

Area Suffix


E --- Continental Europe



Contents

Safety precautions	1- 2
Disassembly method	1- 3~4

Safety precaution

 **CAUTION** Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of performing repair of this system.

Disassembly method

<Main body>

■ Removing the front net (See Fig.1 and 2)

1. Remove the front net from the four holders that are fixing the front net.

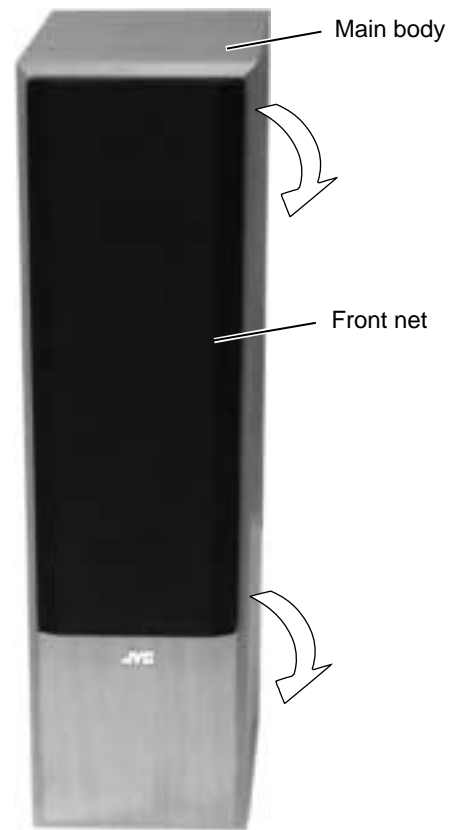


Fig.1

■ Removing the woofer (See Fig.2 and 3)

- Remove the front net.
1. Remove the six screws **A** attaching the woofer.
 2. Pull out the woofer toward you.
 3. Remove the speaker cord.

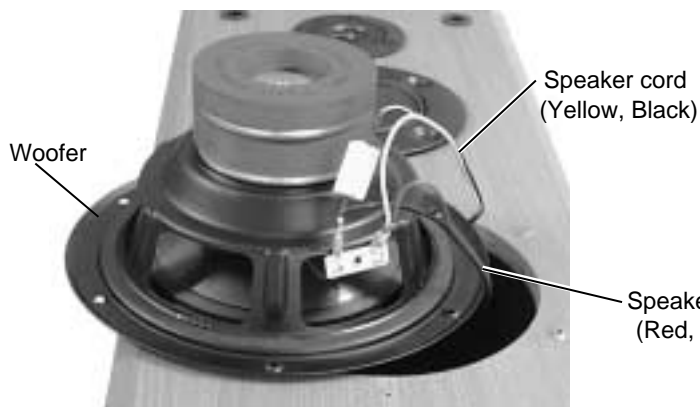


Fig.3

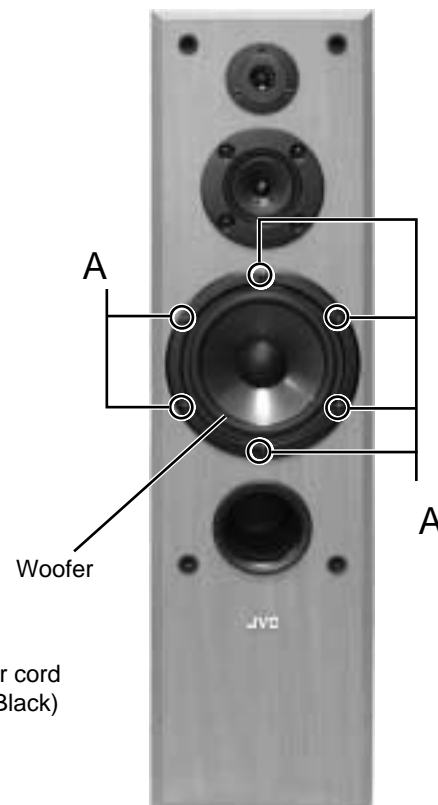


Fig.2

■ **Removing the woofer (See Fig.4 and 5)**

- Remove the front net.
1. Remove the four screws **B** attaching the squawker.
 2. Pull out the squawker toward you.
 3. Remove the speaker cord.

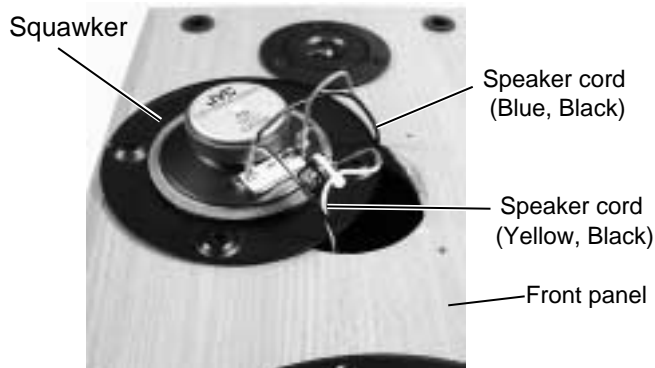


Fig.5

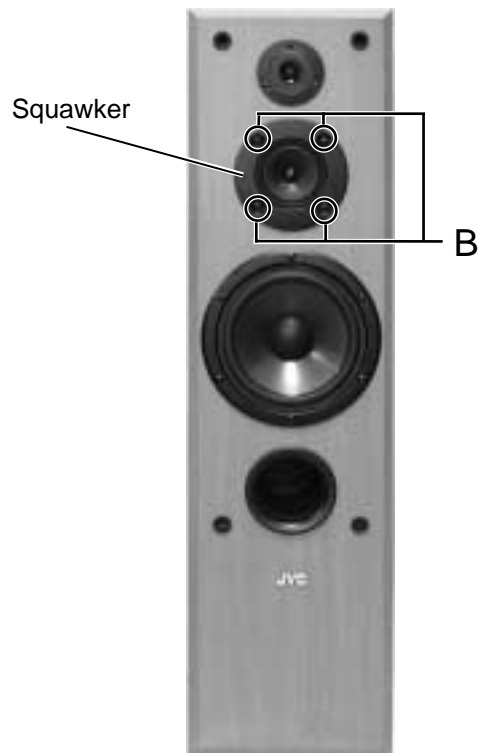


Fig.4

■ **Removing the tweeter (See Fig.6 and 7)**

- Remove the front net.
1. Remove the three screws **C** attaching the tweeter.
 2. Pull out the tweeter toward you.
 3. Remove the speaker cord.

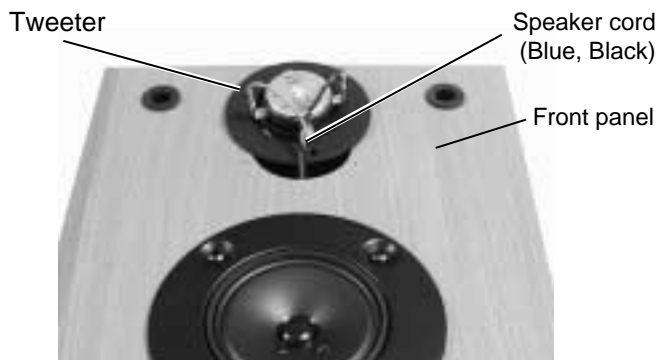


Fig.7



Fig.6

< MEMO >

SX-F300WD

JVC

VICTOR COMPANY OF JAPAN, LIMITED

AUDIO & COMMUNICATION BUSINESS DIVISION

PERSONAL & MOBILE NETWORK BUSINESS UNIT. 10-1,1chome,Ohwatari-machi,Maebashi-city,371-8543,Japan