


SECTION 4 CHARTS AND DIAGRAMS

4.1 REMOTE CONTROLLER SCHEMATIC DIAGRAM

NOTES:

1. All parts shown in this schematic are critical for safety.
2. This schematic is only for reference.
3. Avoid replacing individual parts.
4. Replace the entire unit only.

REMOTE CONTROLLER

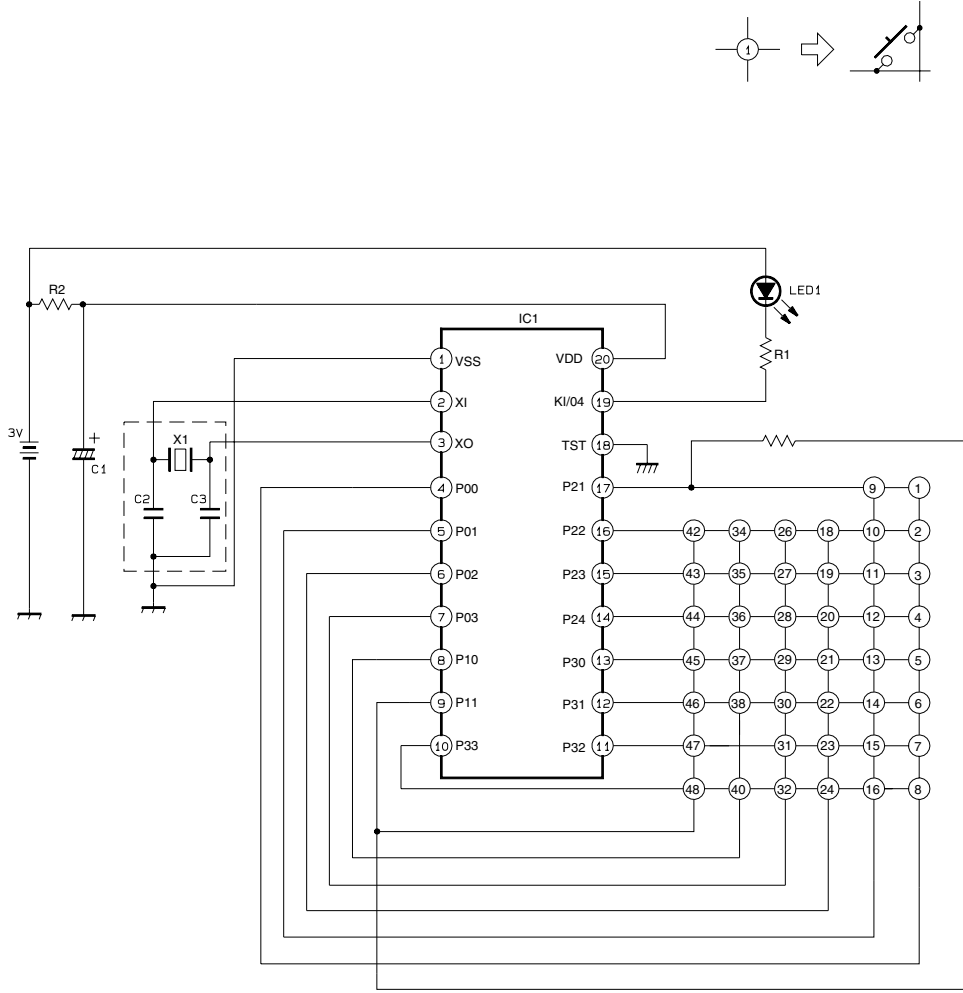

(LP20878-010#, LP20878-011#)

Key No.	Key Name
1	TV
2	PROG
3	⊙?(PROG CHECK)
4	ENTREE
5	30 SEC (⏮)
6	PR -
7	DATE -
8	- - - -
9	● (REC)
10	◀ (REW)
11	PR +
12	START/DEBUT +
13	STOP/FIN +
14	DATE +
15	START/DEBUT -
16	STOP/FIN -
18	MENU
19	0 / AUX
20	8 TUV / DAILY/QTDN.
21	4 GHI
22	▼
23	▶
24	⊙
26	AUDIO/ ⏸ / ⏹ (MUTE)
27	▶ (PLAY)
28	X/0000 (CANCEL)
29	7 PORS / VSP/PDC
30	⊙ / (POWER)
31	5 JKL
32	■ (PAUSE)
34	2 ABC
35	6 MNO
36	TV/VCR
37	/// (SP/LP)
38	↔
40	▲
42	3 DEF
43	▶▶ (FF)
44	■ (STOP)
45	RE-VIEW
46	1. . /
47	9 wxyz / WEEKLY/HEBDO
48	OK
9+27	REC START
9+32	REC PAUSE
1+30	POWER
1+36	TV/VCR
1+26	MUTE
1+37	MAIN/SUB
1+38	TV ⏪ -
1+40	TV PR +
1+23	TV ⏩ +
1+22	TV PR -