

SECTION 3 PARTS LIST

3.1 DVC MECHANISM ASSEMBLY

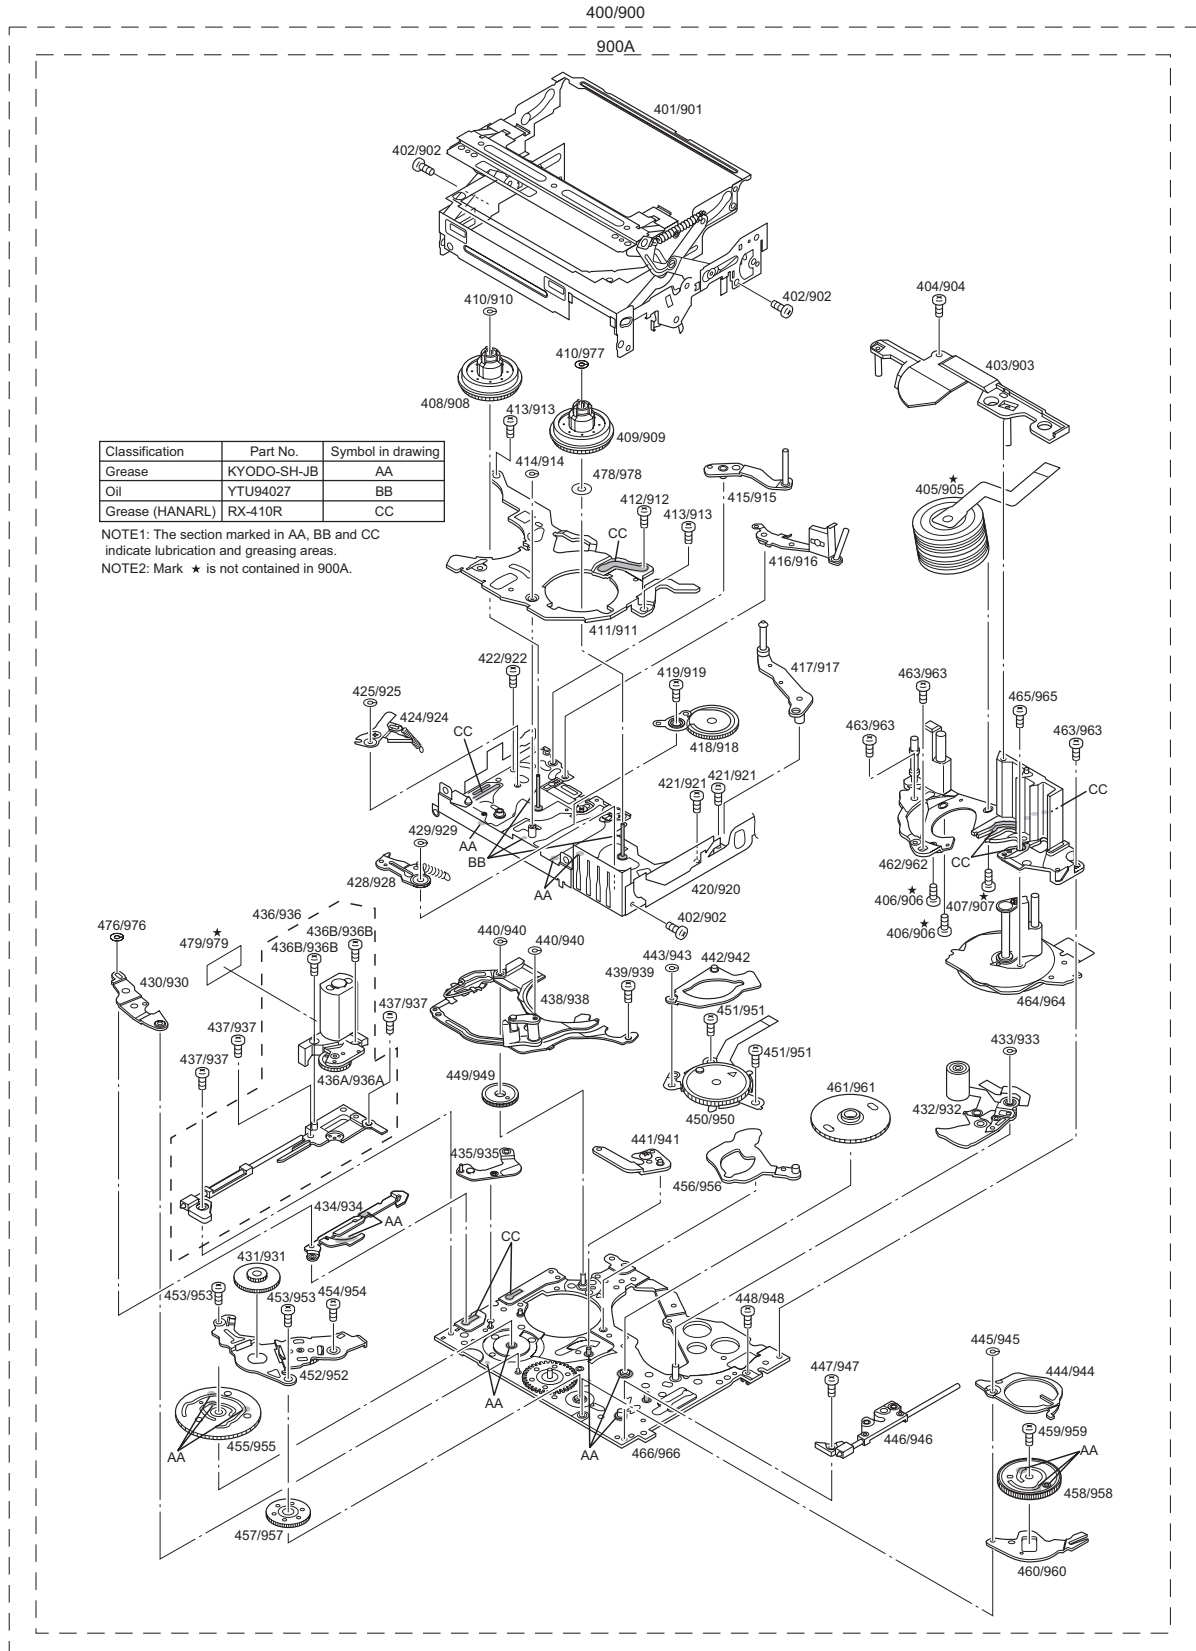


Fig.3-1-1

3.1.1 DVC MECHANISM ASSEMBLY PART LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.
- To distinguish the mechanism assembly with the symbol number of 400-499 from the mechanism assembly with the symbol number of 900-999, see the following procedures.

(1) See the numbers on the backside of the MAIN DECK ASSY.

For example, "29D*****" is printed on the backside of the mechanism assembly with the symbol number of 900-999 (YMA0029D in this example). See the first three characters and numbers from the left.

(2) See the color of the SLIT WASHER on the REEL DISK (TU).

A red slit washer is used (the same color as a slit washer of CASSETTE GUIDE (SUP)) in the mechanism assembly with the symbol number of 400-499. A black slit washer is used in the mechanism assembly with the symbol number of 900-999.

However, the black slit washer may be changed into a red one for the purpose of parts unification.


(3) See the color of the CASSETTE GUIDE(SUP).

Light-brown CASSETTE GUIDE(SUP) is used in the mechanism assembly with the symbol number of 400-499.

Black CASSETTE GUIDE(SUP) is used in the mechanism assembly with the symbol number of 900-999.

(4) See the shape of the LED PRISM. LED PRISM consists of only resin in the mechanism assembly with the symbol number of 400-499.

Upper part of the LED PRISM is covered with black metal in the mechanism assembly with the symbol number of 900-999.

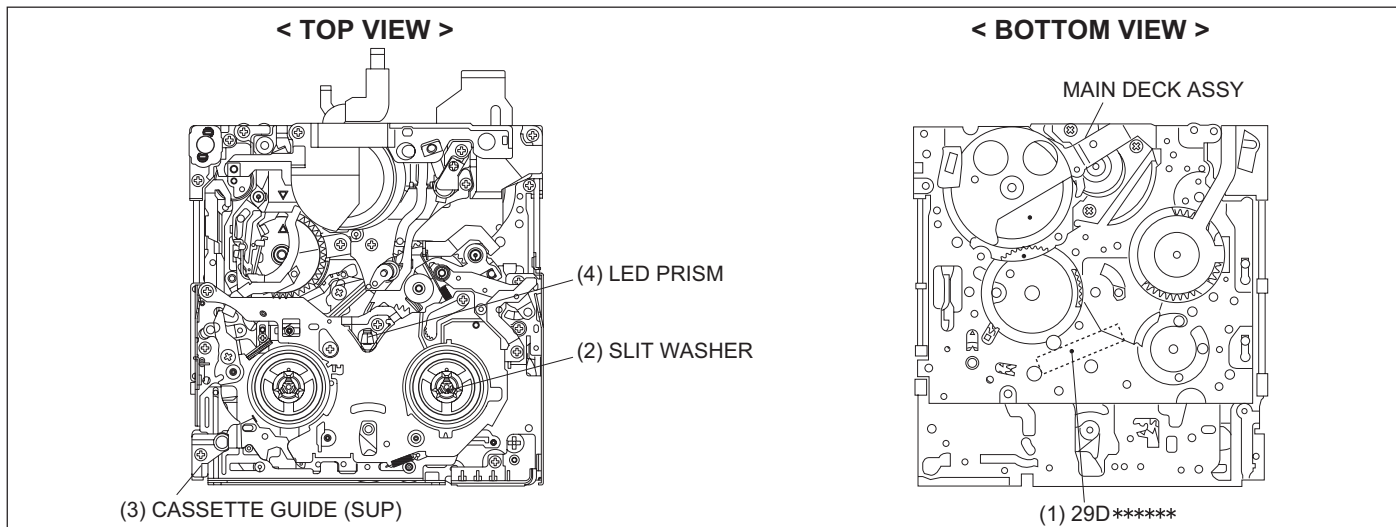

Part Name	Symbol No.	Part No.	Part No.	Part No.	Symbol No.	Part No.	Patr No.
MECHA(A) ASSY	400	YMA0029C	YMA0029M	YMA0029L	900	YMA0029H	YMA0029E
MECHA(A) ASSY	-	-	-	-	900A	YMA0029D	-
CASSETTE HOUSING ASSY	401	LY31543-002E*	LY31543-002H	←	901	LY32870-001G*	LY32870-001J
MINI SCREW,X3	402	YQ43893-8	←	←	902	←	←
UPPER BASE ASSY	403	LY31542-001J	←	←	903	LYH30420-001A	←
MINI SCREW	404	YQ43893*	QYSPSPU1425M	←	904	←	←
DRUM ASSY	405	**	**	**	905	**	**
DAMP.SCREW ASSY,X2	406	LY42820-001A	←	←	906	←	←
DAMP.SCREW ASSY	407	LY42820-002A	←	←	907	←	←
REEL DISK ASSY (SUP)	408	LY31538-001B*	LY31538-001F	←	908	←	←
REEL DISK ASSY (TU)	409	LY31538-002B*	LY31538-002H	LY31538-002G	909	LY31538-002H	←
SLIT WASHER,X2 or X1	410	YQ44246,(x2)	←,(x2)	←,(x2)	910	←*,(x1)	←,(x2)
REEL COVER ASSY	411	LY10217-001A*	LY10217-001F	←	911	LY10372-001D	←
MINI SCREW	412	LY42120-001A*	LY42120-002A	←	912	←	←
MINI SCREW,X2	413	LY41945-003A	←	←	913	←	←
SLIT WASHER	414	YQ44246	←	←	914	←	←
TENSION ARM ASSY	415	LY42025-001C	←	←	915	LY43725-001D	←
SLANT POLE ARM ASSY	416	LY31535-001F	←	←	916	LYH40269-001A	←
TU ARM ASSY	417	LY42031-001G*	LY42031-001K	←	917	LY43731-001F	←
SWING ARM ASSY	418	LY31531-001D	←	←	918	←	←
MINI SCREW	419	YQ43893	←	←	919	←	←
SLIDE DECK FINAL ASSY	420	LY20530-003B*	LY20530-003E	←	920	LYH30424-001A	←

Part Name	Symbol No.	Part No.	Part No.	Part No.	Symbol No.	Part No.	Patr No.
MINI SCREW,X2	421	YQ43893	←	←	921	←	←
MINI SCREW	422	LY43023-001A	←	←	922	←	←
PAD ARM ASSY	424	LY31533-001E	←	←	924	LYH30419-001A	←
SLIT WASHER	425	YQ44246	←	←	925	←	←
TU BRAKE ASSY	428	LY42016-001B	←	←	928	LYH40270-001A	←
SLIT WASHER	429	YQ44246	←	←	929	←	←
TENSION CONTROL LEVER ASSY	430	LY41959-001B	←	←	930	LY43684-001A	←
CENTER GEAR	431	LY31525-001B	←	←	931	LY32861-001A	←
PINCH ROLLER ARM FINAL ASSY	432	LY31516-001E	←	LY31516-001F	932	←	←
SLIT WASHER	433	YQ44246	←	←	933	←	←
TENSION CONTROL PLATE ASSY	434	LY41956-001C	←	←	934	LY43681-001A	←
BRAKE CONTROL LEVER ASSY	435	LY41962-001B*	LY41962-001C	←	935	LY43687-001A	←
MOTOR BRACKET ASSY	436	LY20525-002C	←	←	936	LYH30421-001A	←
LOADING MOTOR	436A	QAR0138-001	←	←	936A	←	←
TAPPING SCREW,x2	436B	LY41940-001A	←	←	936B	←	←
MINI SCREW,x3	437	YQ43893	←	←	937	←	←
GUIDE RAIL ASSY	438	LY20528-001R*	LY20528-001U	←	938	LYH30422-001A	←
MINI SCREW	439	YQ43893	←	←	939	←	←
SLIT WASHER,X2	440	YQ44246	←	←	940	←	←
SLIDE LEVER2 ASSY	441	LY31498-001C	←	LY31498-001D	941	LY32843-001A	←
LOADING PLATE ASSY	442	LY41965-001A	←	←	942	LY43690-001A	←
SLIT WASHER	443	YQ44246	←	←	943	←	←
EJECT LEVER	444	LY31522-001B	←	←	944	LY32858-001A	←
SLIT WASHER	445	YQ44246	←	←	945	←	←
BASE R ASSY	446	LY41929-001E*	LY41929-001F	←	946	LYH40271-001A	←
MINI SCREW	447	YQ43893	←	←	947	←	←
MINI SCREW	448	LY41945-001B	←	←	948	←	←
MODE GEAR	449	LY41930-001A	←	←	949	LY43665-001A	←
ROTARY ENCODER	450	QSW0876-003	←	←	950	←	←
MINI SCREW,X2	451	YQ43893	←	←	951	←	←
GEAR COVER ASSY	452	LY31524-001A	←	←	952	LY32860-001A	←
MINI SCREW,X2	453	YQ43893	←	←	953	←	←
MINI SCREW	454	YQ43893-4	←	←	954	←	←
MAIN CAM ASSY	455	LY41948-001C	←	←	955	LY43676-001A	←
SLIDE ARM ASSY	456	LY41941-001B	←	←	956	←	←
CONNECT GEAR 2	457	LY41951-001B	←	←	957	LY43678-001A	←
SUB CAM ASSY	458	LY41954-001B	←	LY41954-001E	958	←	←
MINI SCREW	459	LY42120-001A	←	←	959	←	←
CONTROL ARM ASSY	460	LY41952-001A	←	←	960	LY43692-001A	←
REEL GEAR 1	461	LY31523-001B	←	←	961	LY32859-001A	←
DRUM BASE ASSY	462	LY31508-002A*	LY31508-002B	LY33372-001A	962	LY31508-002B	←
SCREW,X3	463	QYSPSPU1425M	←	←	963	←	←
CAPSTAN MOTOR	464	QAR0142-001	←	←	964	←	←
MINI SCREW	465	YQ43893	←	←	965	←	←
MAIN DECK ASSY	466	LY10210-001D*	LY10210-001G	←	966	LY10367-001D*	LY10367-001E
SLIT WASHER	476	YQ44246	←	←	976	←	←
SLIT WASHER	477	-	-	-	977	YQ44246-6	-
WASHER	478	-	-	-	978	LY42047-005A	←
SPACER	479	-*	LY43987-001B	←	979	←	←

NOTE:


MARK ← is same as left.

MARK - is not used.

MARK * reference model was also changed.

MARK ** shows different parts number, depending on models.

3-4 (No.86700)

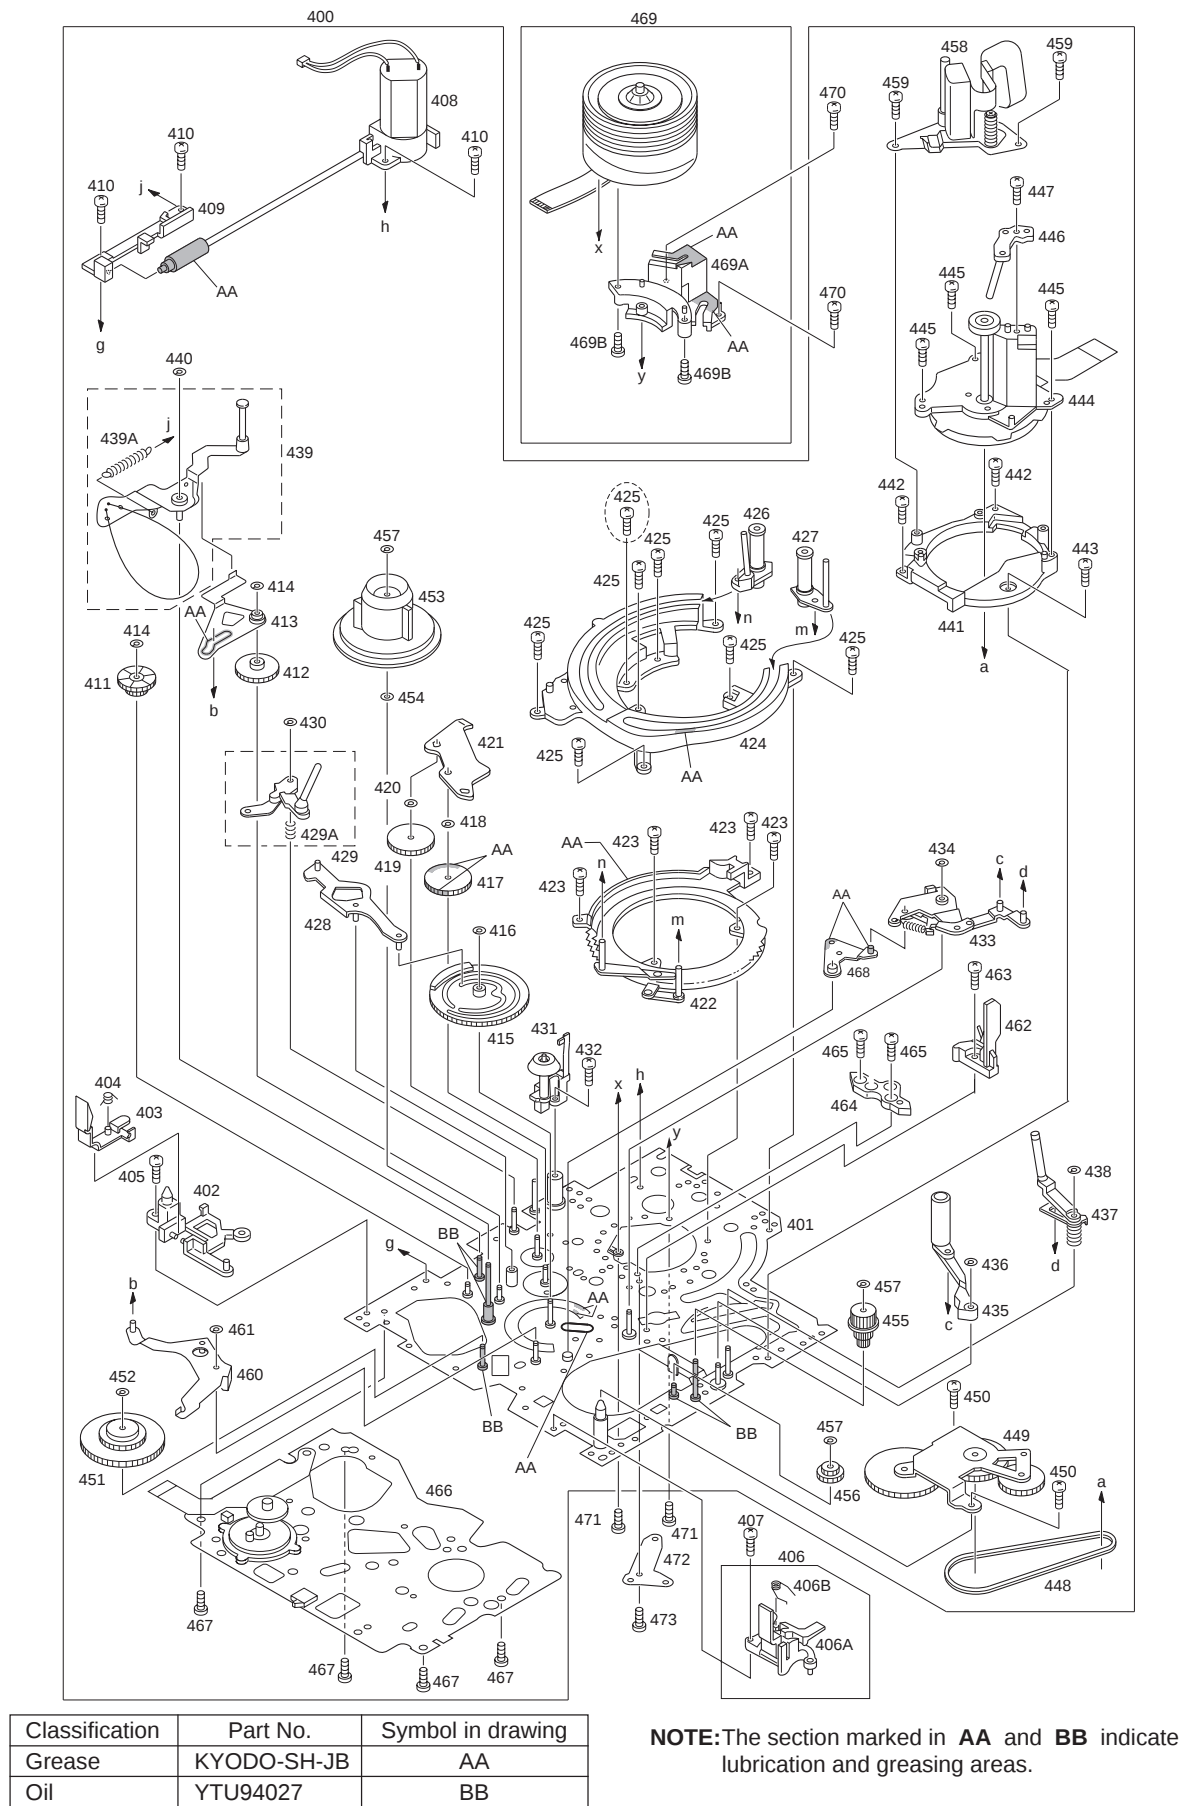

3.2.1 VHS-C MECHANISM ASSEMBLY PARTS LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.

Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.	Part No.
MECHA(B) ASSY	400	YMA0033A-E	YMA0042A-E	YMA0034A-E	YMA0036A-E	YMA0040A-E
MAIN DECK ASSY	401	LY20612-001B	←	←	←	←
CASSETTE GUIDE (LEFT)	402	LY31817-001A	←	←	←	←
SW LEVER (LEFT)	403	LY31815-001A	←	←	←	←
TORSION SPRING	404	LY42581-001A	←	←	←	←
SCREW	405	LY42722-001A	←	←	←	←
CASSETTE GUIDE ASSY(RIGHT)	406	-	-	YQ44339A-7	←	←
SW.LEVER(RIGHT)	406A	-	-	YQ32162-1-3	←	←
TORSION SPRING	406B	-	-	YQ44340-1-4	←	←
SCREW	407	-	-	LY42819-001A	←	←
MOTOR BRACKET ASSY	408	LY31826-001A	←	←	←	←
WORM BRACKET	409	YQ20793	LY20951-001A	YQ20793	←	LY20951-001A
SCREW,X3	410	LY42722-001A	←	←	←	←
WHEEL GEAR	411	LY31925-001A	←	←	←	←
MIDDLE GEAR	412	LY42730-001A	←	←	←	←
CANCEL LEVER ASSY	413	LY42521-001A	←	←	←	←
SLIT WASHER,X2	414	LY42754-003A	←	←	←	←
CONTROL CAM	415	YQ20827-2-1	←	←	←	←
SLIT WASHER	416	PQM30017-25	←	←	←	←
LOADING GEAR(T)ASSY	417	LY42733-001A	←	←	←	←
SLIT WASHER	418	LY42754-003A	←	←	←	←
LOADING GEAR(S)ASSY	419	LY42732-001A	←	←	←	←
SLIT WASHER	420	LY42754-003A	←	←	←	←
COVER PLATE	421	LY42403-001A	←	←	←	←
LOADING RING ASSY	422	LY42452-001A	←	←	←	←
SCREW,X4	423	LY42728-001A	←	←	←	←
GUIDE RAIL	424	LY10239-001A	←	←	←	←
SCREW,X8 or X7	425	LY42728-001A,(X8)	←,(X7)	←,(X8)	←,(X8)	←,(X7)
POLE BASE(S)ASSY	426	LY30161-001B	←	←	←	←
POLE BASE(T)ASSY	427	LY30162-002A	←	←	←	←
DRIVE LEVER ASSY	428	LY42523-001A	←	←	←	←
SLANT ARM ASSY	429	LY42545-001B	LY44000-001B	LY42545-001B	←	LY44000-001B
TORSION SPRING(S)	429A	LY42547-001A	LY43992-001A	LY42547-001A	←	LY43992-001A
SLIT WASHER	430	LY42754-003A	←	←	←	←
ROLLER BASE ASSY	431	LY42739-003A	←	←	←	←
SCREW	432	LY42722-001A	←	←	←	←
LINK ARM ASSY	433	LY42494-001A	←	←	←	←
SLIT WASHER	434	PQM30017-25	←	←	←	←
PINCH ROLLER ARM ASSY	435	LY40018-002A	←	←	LY40018-005A	←
SLIT WASHER	436	PQM30017-25	←	←	←	←
TAKE UP GUIDE ARM ASSY	437	LY42541-001B	←	←	←	←
SLIT WASHER	438	LY42754-003A	←	←	←	←
TENSION ARM ASSY	439	LY42571-001A	←	←	←	←
TENSION SPRING	439A	LY42669-001A	←	←	←	←
SLIT WASHER	440	LY42754-003A	←	←	←	←
MOTOR BASE	441	YQ20797-1-5	←	←	←	←
SCREW,X2	442	LY42722-001A	←	←	←	←
SCREW	443	YQ44460	←	←	←	←
CAPSTAN MOTOR	444	QAR0212-001	QAR0212-002	QAR0212-001	QAR0212-002	←
TAPPING SCREW,X3	445	YQ44304	←	←	←	←
SLANT POLE BASE ASSY	446	LY42731-001A	←	←	←	←
TAPPING SCREW	447	YQ44304	←	←	←	←
TIMING BELT	448	YQ43710-2	←	←	←	←
CENTER PULLEY UNIT	449	LY42678-001A	←	←	←	LY42678-003A

Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.	Part No.
SCREW,X2	450	LY42722-002A	←	←	←	←
SUPPLY CLUTCH ASSY	451	LY42670-001A	←	←	←	←
SLIT WASHER	452	LY42754-003A	←	←	←	←
REEL DISC	453	YQ31861-1-7	←	←	←	←
WASHER	454	LY42755-001A	←	←	←	←
TAKE UP GEAR	455	LY31924-001A	←	←	←	←
BRAKE SUB GEAR	456	LY42738-001A	←	←	←	←
SLIT WASHER,X3	457	LY42754-003A	←	←	←	←
A/C HEAD UNIT	458	LY42544-001B	LY42544-002A	LY42544-001B	←	LY42544-002A
SCREW,X2	459	SPSN1750Z	←	←	←	←
EJECT LEVER ASSY	460	LY42517-001A	←	←	←	←
SLIT WASHER	461	LY42754-003A	←	←	←	←
LED GUIDE	462	YQ31833-1-1	←	←	←	←
SCREW	463	LY42722-001A	←	←	←	←
DRUM SPACER	464	LY42729-001A	←	←	←	←
SCREW,X2	465	LY42722-001A	←	←	←	←
ROTARY ENCODER	466	QSW0888-001	←	QSW0888-002	←	←
SCREW,X4	467	LY42722-002A	←	←	←	←
LINK LEVER	468	LY31814-001A	←	←	←	←
DRUM FINAL ASSY	469	**	**	**	**	**
CATCHER	469A	YDM1003-1-5	←	←	←	←
SCREW,X2	469B	QYSPSPU1735M	←	←	←	←
SCREW,X2	470	LY42722-001A	←	←	←	←
SCREW,X2	471	SPSH1740Z	←	←	←	←
BRUSH	472	LY43542-001A	←	←	←	←
SCREW	473	LY42722-003A	←	←	←	←
CASSETTE HOUSING FINAL ASSY	*155/481	LY31808-001C	LY31808-002C	LY31808-001C	LY31808-001D	LY31808-002C
SCREW,X4	*156/482	LY42722-003A	←	←	←	←
BRACKET(MECHA)	*161/484	LY32326-001A	←	←	←	←
SCREW,X2	*162/485	LY42722-003A	←	←	←	←
SIDE BRACKET L	*164/487	LY31807-001A	←	←	←	←
SCREW	*165/488	LY42722-003A	←	←	←	←

NOTE:


MARK ← is same as left.

MARK - is not used.

MARK * are shown in the parts list of FINAL ASSY of service manual of each model.

MARK ** shows different parts number, depending on models.

3.3 VHS MECHANISM ASSEMBLY

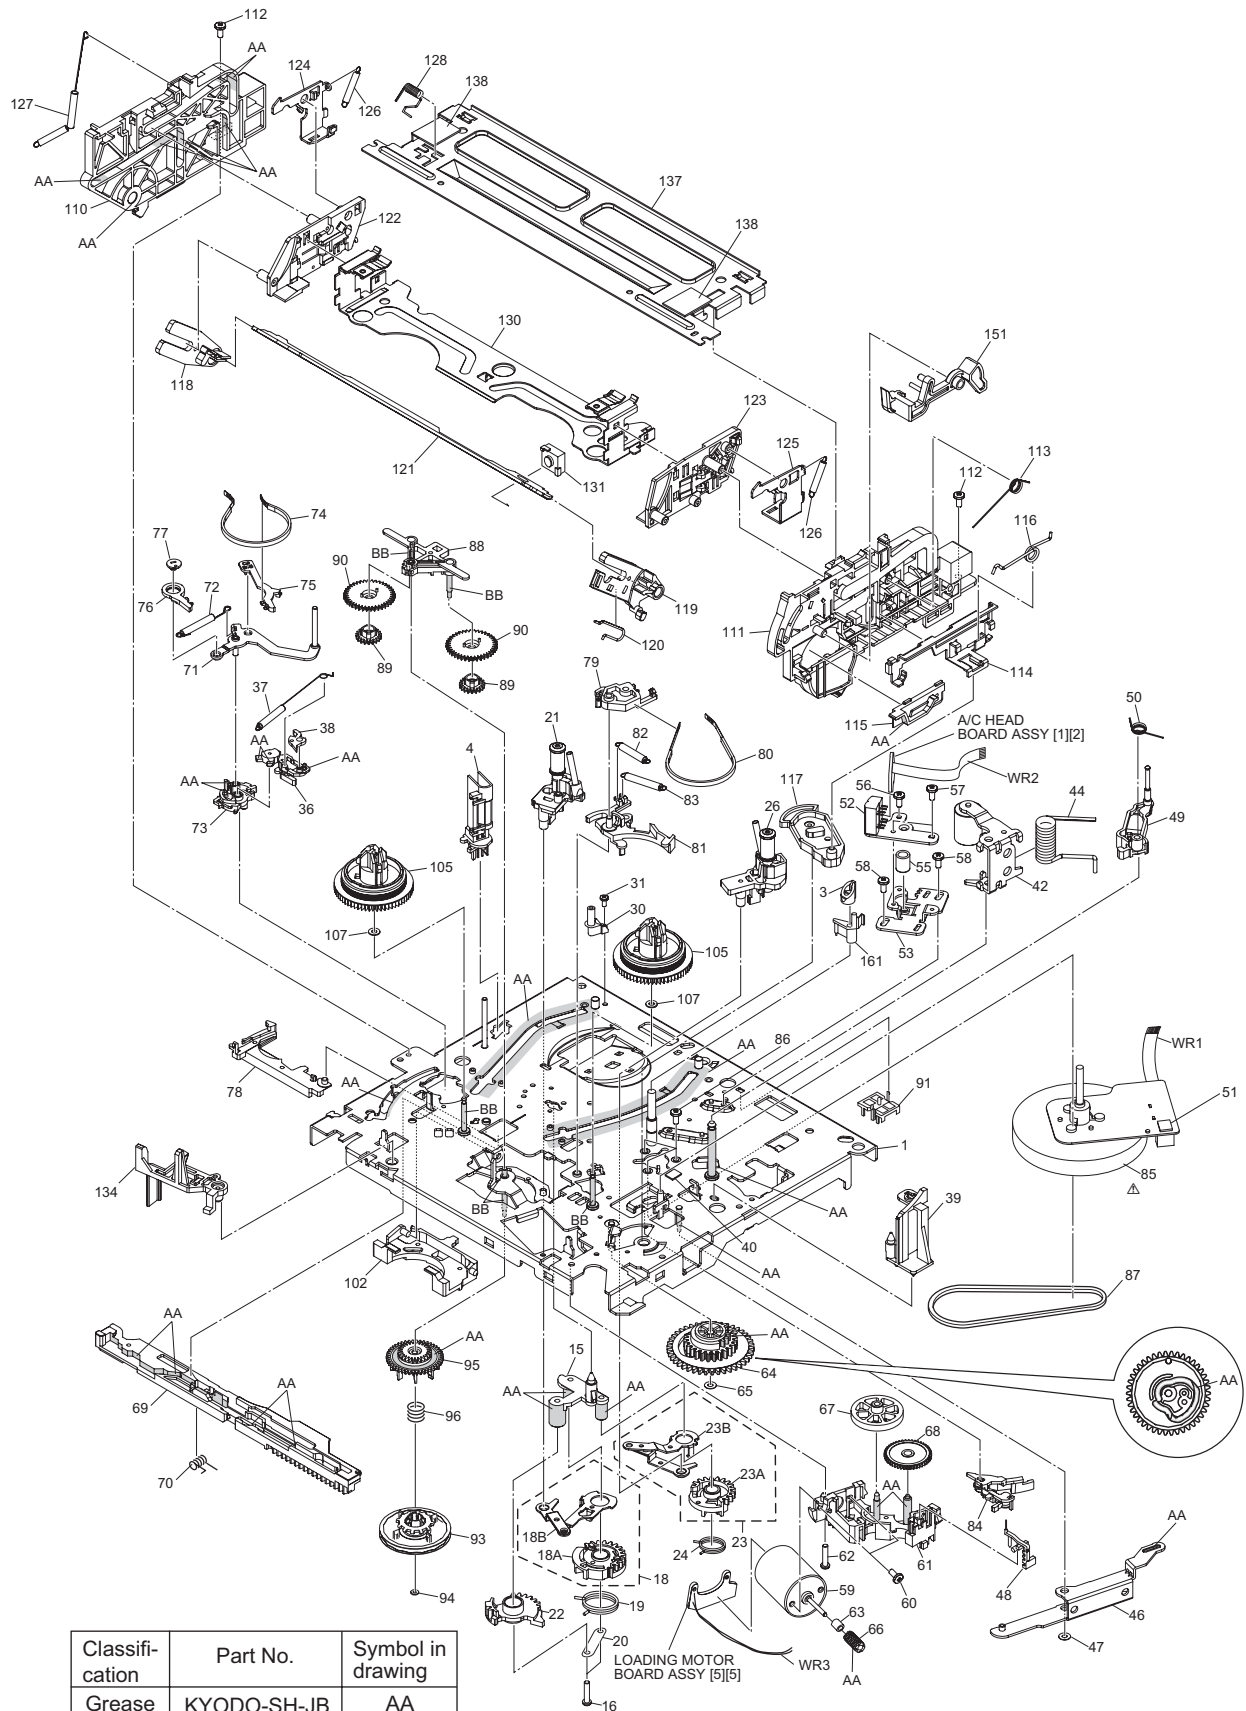

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	COSMO-HV56	BB

NOTE: The section marked in AA and BB indicate lubrication and greasing areas.

Fig.3-3-1

3.3.1 VHS MECHANISM ASSEMBLY PARTS LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
MAIN DECK ASSY	1	LP21039-001N	LP21039-001S	LP21039-001R	LP21039-001S
GUIDE POLE CAP	3	LP40097-002D	←	←	←
FULL ERASE HEAD	4	QAH0082-001	←	←	←
LOAD.GEAR BASE	15	LP30958-001B	←	←	←
SCREW,X2	16	QYTPST2620Z	←	←	←
LORD.GEAR(SUPPLY) ASSY	18	LP40798-001A	←	←	←
LORD.GEAR(SUPPLY)	18A	LP21040-001A	←	←	←
LORD.ARM(SUPPLY) ASSY	18B	LP40799-001A	←	←	←
TORSION SPRING(SUPPLY)	19	LP40837-001A	←	←	←
FIXING PLATE	20	LP40903-001A	←	←	←
POLE BASE ASSY(SUPPLY)	21	LP40806-001D	←	←	←
LOAD GEAR	22	LP30959-002A	←	←	←
LORD. GEAR(TAKE UP) ASSY	23	LP40802-001B	LP40802-001C	LP40802-001B	LP40802-001C
LORD. GEAR(TAKE UP)	23A	LP21041-001B	LP21041-001C	LP21041-001B	LP21041-001C
LORD.ARM(TAKE UP) ASSY	23B	LP40803-001A	←	←	←
TORSION SPRING(TAKE UP)	24	LP40838-001A	←	←	←
POLE BASE ASSY(TAKE UP)	26	LP40808-001F	LP40808-001E	←	←
ARM BASE	30	-	←	LP31020-004A	←
SCREW	31	-	←	QYTDST2606Z	-
TU LEVER	36	LP21055-001E	←	←	←
TENSION SPRING	37	LP40943-001A	←	←	←
T-UP HEAD	38	LP40859-001D	←	←	←
LID GUIDE	39	LP30961-001C	←	←	←
SPACER	40	LP30002-0B7A	←	←	-
PINCH ROLLER ARM ASSY	42	LP40810-001A	←	←	←
TORSION SPRING	44	LP40840-001C	LP40840-001D	←	←
PRESS LEVER	46	LP30963-001B	←	←	←
SLIT WASHER	47	PQM30017-24	←	←	←
S-SWITCH	48	-	←	LP40930-002E	←
GIDE ARM ASSY	49	LP40813-001D	←	←	←
TORSION SPRING	50	LP40841-001A	←	←	←
SPACER	51	LP30002-090A	←	←	-
A/C HEAD	52	QAH0081-001	←	←	←
HEAD BASE	53	LP30965-001A	←	←	←
COMPRESSION SPRING	55	LP40842-001A	LP40842-001D	LP40842-001A	LP40842-001D
SCREWX1 A/C HEAD	*56	QYTDST2006M	←	←	←
A/C HEAD SCREW,X2	*57	LP41036-001A	←	←	←
SCREW,X2 A/C HEAD	*58	QYTDST2606Z	←	←	←
LOADING MOTOR	59	QAR0023-001	←	←	←
SCREW,X2	60	QYTPSP3003Z	←	←	←
MOTOR BRACKET	61	LP21056-002F	LP21056-002G	←	←
TAP SCREW	62	QYTPST2620Z	←	←	←
WORM BEARING	63	LP40814-001B	←	←	←
CONTROL CAM	64	LP21044-001D	←	←	←
SLIT WASHER	65	PQM30017-24	←	←	←
WORM GEAR	66	LP40815-001A	←	←	←
HELICAL GEAR	67	LP40816-001B	←	←	←
CONNECT GEAR	68	LP40817-001A	←	←	←

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
CONTROL PLATE	69	LP10400-001H	←	←	LP10400-001J
TORTION SPRING	70	LP40843-001A	←	←	←
TENSION ARM ASSY	71	LP40818-001B	←	←	←
TENSION SPRING	72	LP40844-001C	LP40844-001E	LP40844-001D	LP40844-001E
TENSION ARM BASE	73	LP21045-001D	←	←	←
TENSION BAND ASSY	74	LP40821-001A	←	←	←
BAND HOLDER-1	75	LP30967-001B	←	←	←
BAND HOLDER-2	76	LP30968-001C	←	←	←
ADJUST PIN	77	LP40822-002B	←	←	←
TENSION ARM LEVER	78	LP31000-005E	←	←	←
MAIN BRAKE(TAKE UP)	79	LP21046-001C	←	←	←
BAND BRAKE ASSY	80	LP40824-001A	←	←	←
BRAKE LEVER	81	LP30969-002A	LP30969-002B	LP30969-002A	LP30969-002B
TENSION SPRING	82	LP30003-033B	←	←	←
TENSION SPRING	83	LP30003-035B	←	←	←
CAPSTAN BRAKE ASSY	84	LP40825-001B	←	←	←
CAPSTAN MOTOR	85	QAR0204-002	←	←	←
SCREW,X3 CAPSTAN MOTOR	86	QYTPSG2606M	QYTPSG2606Z	QYTPSG2606M	QYTPSG2606Z
BELTCAPSTAN MOTOR	87	LP30005-010A	←	←	←
IDLER ARM	88	LP30970-001A	←	←	←
IDLER GEAR 1,X2	89	LP40828-004A	←	←	←
IDLER GEAR 2,X2	90	LP40829-001B	LP40829-002A	LP40829-001B	LP40829-002A
WIRE HOLDER	91	LP31014-001A	←	←	←
CLUTCH UNIT	93	LP40934-001B	←	←	←
SLIT WASHER	94	PQM30017-47	←	←	←
DIRECT GEAR	95	LP30973-001A	←	←	←
COMPRESS. SPRING	96	LP40939-001A	←	←	←
CHANGE LEVER	102	LP30974-001B	←	←	←
REEL DISK,X2	105	LP21049-001A	←	←	←
SPACER,X2	107	LP30017-004A	←	←	←
SIDE FRAME(L)	110	LP10401-001F	LP10401-001H	LP10401-001F	LP10401-001H
SIDE FRAME(R)	111	LP10402-001F	LP10402-001K	LP10402-001G	LP10402-001K
SCREW,X2	112	QYTDST2606Z	←	←	←
TORSION SPRING	113	LP40917-001C	LP40917-001D	←	←
SIDE PLATE	114	LP30976-001D	LP30976-001E	←	←
LIMIT PLATE	115	LP30977-002D	←	←	←
LIMIT SPRING	116	LP40846-001C	←	←	←
DRIVE LEVER	117	LP31100-001B	←	←	←
DRIVE ARM(L)	118	LP30978-001B	←	←	←
DRIVE ARM(R)	119	LP30979-001H	LP30979-001N	LP30979-001H	LP30979-001N
TORSION SPRING	120	LP40847-001B	←	←	←
CONNECT PLATE	121	LP30980-001A	LP30980-001E	LP30980-001B	LP30980-001E
SIDE HOLDER(L)	122	LP10403-001C	←	←	←
SIDE HOLDER(R)	123	LP10404-001D	LP10404-001E	←	←
LOCK LEVER(L)	124	LP30983-001A	LP30983-001B	LP30983-001A	LP30983-001B
LOCK LEVER(R)	125	LP30984-001A	LP30984-001B	LP30984-001A	LP30984-001B
TENSION SPRING,X2	126	LP40924-001C	LP40924-001D	←	←
EARTH SPRING(1)	127	LP40856-001A	←	LP40856-001B	LP40972-001A
EARTH SPRING(2)	128	LP40857-001B	←	←	←
C.HOLDER ASSY	130	LP30981-001E	LP30981-001G	LP30981-001F	LP30981-001G
C.H STOPPER	131	LP31135-001A	-	LP31135-001A	-

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
R.SAFETY LEVER	134	LP21051-002C	←	←	←
TOP FRAME	137	LP21052-001F	LP21052-001J	LP21052-001H	LP21052-001J
SPACER	138	LP30002-0A7A	-	LP30002-0A7A	-
DOOR OPENER	151	LP30985-001G	←	←	←
TAPE GUIDE	161	-	LP40993-001A	-	LP40993-001A
E-CARD WIRE DRUM.M	WR1	WJT0059-001C	WJT0059-001E	WJT0059-001D	WJT0059-001E
E-CARD WIRE AC HEAD CN2001	WR2	WJT0067-001B	←	←	←
E-FL/RB WIRE LOADING MOTOR	WR3	WJS0022-001A	←	←	←
MEMO	-	PMD0035B-C	PMD0040A-C	PMD0036B-C /PMD0039A-C	PMD0037A-C /PMD0041A-C

NOTE:

MARK ← is same as left.

MARK - is not used.

MARK * shows that Symbol No. and Parts No. may sometimes be different from those in each manual. See the table below for final Symbol No. and Parts No.

MARK ** is Job No.

To identify a model, see the Job No. of the model.

Job No. is shown just above the service manual number at the lower right of the service manual of each model.