



M A R I N E

JMS2212

QUICK REFERENCE GUIDE

BASIC OPERATION

MODE: Each press of the button will cycle through the following modes: TUNER (AM/FM), SAT (SIRIUS), IPOD, USB and AUX.

POWER: Press to turn unit ON or OFF.

DISP/SCROLL: Press and hold button to view entire title when the info is too long to be displayed on the LCD (only in SAT, IPOD, and USB modes).



MUTE: Press to MUTE audio.

EQ/LOUD: Press to choose one of the pre-defined bass and treble curves: FLAT, ROCK, CLASSICAL, POP. Press and hold to turn loudness ON/OFF.

AUDIO MENU: Each press of the button will cycle through the following AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADER (front to back). Use the volume buttons to adjust up or down.

PTY/CAT/MENU: Press and hold to access the SYSTEM MENU. Use the VOL+UP/DOWN VOL- buttons to navigate the menu.

TUNER OPERATION

STATION STORE BUTTONS:

Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 18 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

BAND/WB: Press to select from three FM bands and two AM bands. Press and hold to listen to WEATHER-BAND. Use the SEEK>> or << buttons or the preset buttons to tune to each of the seven channels until you find the one broadcasting in your area.

AS/PS/FAV: Press to scan through currently stored presets. Press & hold to store the 18 strongest stations in your area.



TUNE: Press SEEK>> to tune up in frequency and SEEK<< to tune down in frequency. Press and hold to automatically find the next station.


PTY/CAT/MENU: Press to access the PTY menu and view the current category. Press SEEK>> or << to navigate through the list. After reaching the desired category, press INFO/ENTER to select.

DIGITAL FILE PLAYBACK

3RDM: Press to play all the tracks in the current folder in random order. Press again to stop random play.

2INT: Press to play first 10 seconds of each track in current folder. Press again to stop intro scan and resume play of current track.

1RPT: Press to REPEAT current playing track. Press to release function.

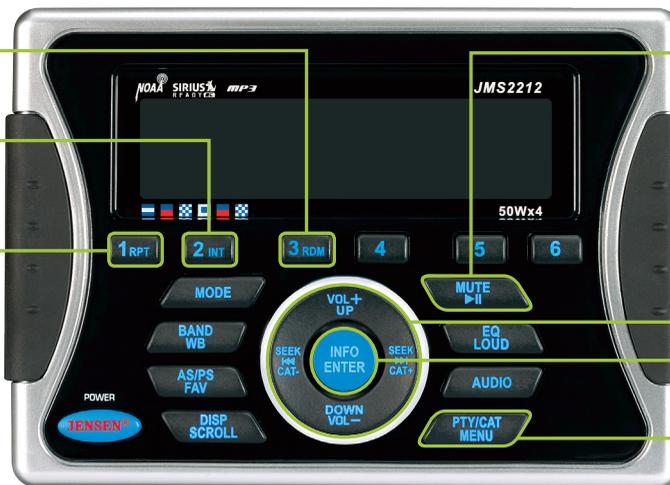

MUTE>||: Press to suspend playback. Press again to resume play.

TUNE: Press SEEK>> or << buttons to advance to the next or previous file/track. Press and hold to fast forward or fast reverse.

VOL+/UP and DOWN/VOL-: Press to navigate the list of songs in current folder.

INFO/ENTER: Press to play the highlighted song or view files in the selected folder. Continue pressing until the desired file is selected.

PTY/CAT/MENU: Press to view the all songs in current folder. Press again to navigate up through the folders.

*Some features may not be available depending on installed factory options.

STATION STORE BUTTONS:

Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 18 channels (6 channels per band SIR1, SIR2, SIR3).

MODE: Press until mode is at SIRIUS Radio.

BAND/WB: Press to access the preset groups SR1, SR2, or SR3.

AS/PS/FAV: Press to scan stations in all three user-preset channel groups. Press again to stop scanning when desired station is reached.

DISP/SCROLL: Press to change display info between single and dual line text display. Press and hold to scroll the artist/song title information.



SEEK<<: Press to tune to channel "000" to display your "SID" or "SIRIUS ID".

TUNE: Press SEEK>> or << to search for channel. Press and hold to fast search.

INFO/ENTER: Press and hold to enter direct tuning mode. Continue pressing until the desired file is selected. Press VOL+/- to change the first three digits for desired channel. Press INFO/ENTER to confirm the entry and move to second digit field and so on until all 3 digit fields have been entered.

PTY/CAT/MENU: Press to access Category mode. Press SEEK>>/CAT+ or SEEK>>/CAT- to choose category. Press VOL+UP/DOWN VOL- buttons to choose desired channels in that category. Press INFO/ENTER to play the highlighted channel and return to channel tuning mode.

*Requires SIRIUS Tuner & Antenna. Sold Separately.

3RDM: Press to play all the tracks in the current folder in random order. Press again to stop random play.

1RPT: Press to REPEAT current playing track. Press to release function.

MODE: Press until mode is at iPod.

AS/PS/FAV: Press to scan stations in all three user-preset channel groups. Press again to stop scanning when desired station is reached.

DISP/SCROLL: Press to change display info between single and dual line text display. Press and hold to scroll the artist/song title information.



MUTE>||: Press to suspend playback. Press again to resume play.

SEEK<<|>|>: During playback, press to play the previous or next track in the current category. Press and hold to fast reverse/forward the song.

PTY/CAT/MENU: Press to search for music by Playlist, Artist, Album, Genre, Song, Audiobook or Podcast. Use the VOL+UP/DOWN VOL- buttons to navigate these categories. Press the INFO/ENTER button to select the desired category. Then use the VOL+UP/DOWN VOL- buttons to search the available folders or files within that category. Press the INFO-ENTER button to play the selected song or file.

*Full iPod control requires JENSEN iPod interface cable. Sold Separately.

Activating your SIRIUS® Subscription —

Before you can listen to Sirius Satellite Radio, you must subscribe to the service.

1. With the radio power ON, press the MODE button to enter Sirius Ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels.
NOTE: Don't push any buttons or perform any operations until updating has been completed.
2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other Sirius Radio channels until you activate your subscription.
3. You will need to access your Sirius ID, which is displayed on channel 000. Press the INFO button on the radio to enter Direct Tuning mode. Using the Tune Adjust UP/DN knob, select digits 000. Press the INFO button to enter your selection. This will display your unit's unique 12-digit SIRIUS ID Number.
4. Write the Sirius ID number down and have your credit card handy.
5. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/>
Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474)