



LCD TV Quick Reference Guide

Powering on the TV



POWER: Set on the back of the TV to first.

Press the POWER button on TV or Remote Control to turn the TV ON/OFF.

Selecting an Input Source



SOURCE: Press the SOURCE button on the TV or Remote Control to access the Source Menu. Use Channel UP/DOWN on the TV or Arrow UP/DOWN on the Remote Control to navigate to desired source input. To select desired source input press a VOLUME button on the TV or the Arrow Right button on the Remote Control. To EXIT the Source Menu press the SOURCE button on the TV or the EXIT button on the Remote Control.

Selecting a Menu




MENU: Press the MENU button on the TV or Remote Control to access the Main Menu Options. Use Volume RIGHT/LEFT on the TV or Arrow RIGHT/LEFT on the Remote Control to navigate to desired menu option. To edit desired menu option press Channel UP/DOWN on the TV or Arrow UP/DOWN on the Remote Control. To edit desired Sub-Menu option use Volume RIGHT/LEFT on the TV or Arrow RIGHT/LEFT on the Remote Control. To EXIT the Sub-Menu press the MENU button on the TV or the Remote Control. Press the MENU button again or EXIT button on the Remote Control to exit the Main Menu.



PICTURE: Allows you to make adjustments to your picture settings.



AUDIO: Allows you to customize the sound options and effects.

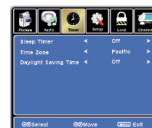

TIMER: Allows you to set up a variety of time options.



SETUP: Allows you to set up a variety of setup options.




LOCK: Allows you to set up a variety of lock options.



CHANNEL: Allows you to search channels and set up a variety of channel options.

Remote Control Basic Functions

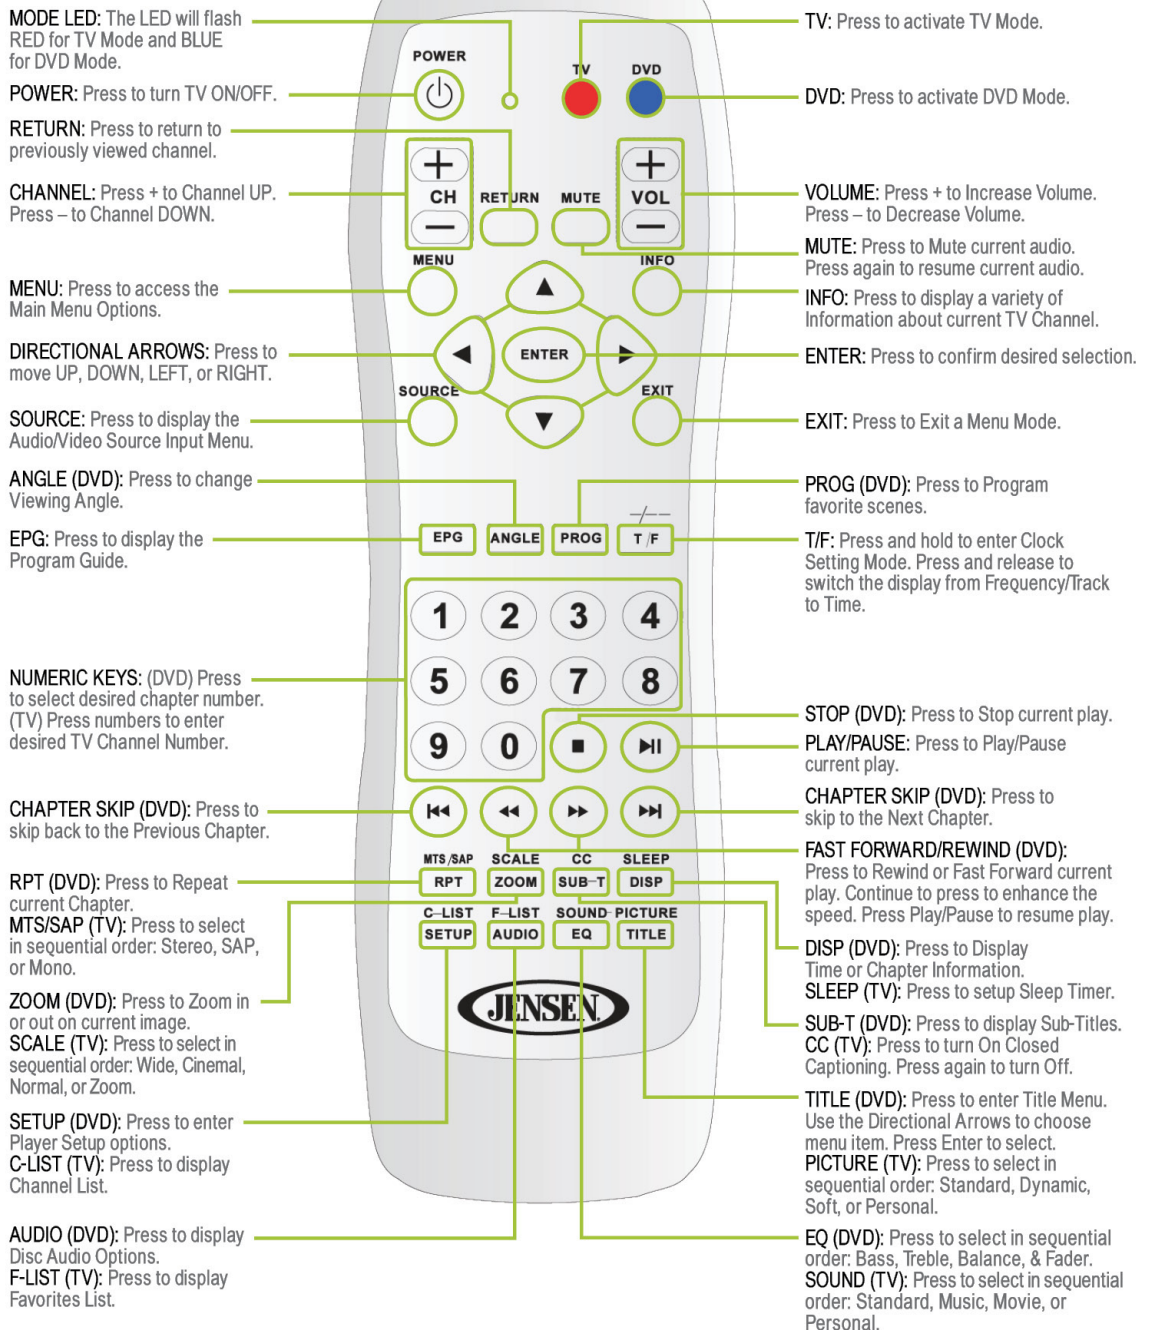

Channel Auto Scan



CHANNEL: Press the MENU button on the TV or Remote Control to access the Main Menu Options. Use Volume RIGHT/LEFT on the TV or Arrow RIGHT/LEFT on the Remote Control to navigate to the CHANNEL option. Press Channel DOWN on the TV or Arrow DOWN on the Remote Control to highlight AIR/CABLE. Continue to press Volume RIGHT on the TV or Arrow RIGHT on the Remote Control and select AIR. Press Channel DOWN on the TV or Arrow DOWN on the Remote Control to highlight AUTO SCAN. Press Volume RIGHT on the TV or the Enter button on the Remote Control to access Auto Scan Menu. Press Volume Right on the TV or the Enter button on the Remote Control to scan channels.