



Model 7707

Packing List

PA-770 Rev. A / 6-01

The Model 7707 can be used with
Keithley Models 2700, 2701, and 2750.
All references to the Models 2700 and
2750 also apply to the Model 2701.

WARRANTY

Keithley Instruments, Inc. warrants this product to be free from defects in material and workmanship for a period of 1 year from date of shipment.

Keithley Instruments, Inc. warrants the following items for 90 days from the date of shipment: probes, cables, rechargeable batteries, diskettes, and documentation.

During the warranty period, we will, at our option, either repair or replace any product that proves to be defective.

To exercise this warranty, write or call your local Keithley representative, or contact Keithley headquarters in Cleveland, Ohio. You will be given prompt assistance and return instructions. Send the product, transportation prepaid, to the indicated service facility. Repairs will be made and the product returned, transportation prepaid. Repaired or replaced products are warranted for the balance of the original warranty period, or at least 90 days.

LIMITATION OF WARRANTY

This warranty does not apply to defects resulting from product modification without Keithley's express written consent, or misuse of any product or part. This warranty also does not apply to fuses, software, non-rechargeable batteries, damage from battery leakage, or problems arising from normal wear or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE. THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES.

NEITHER KEITHLEY INSTRUMENTS, INC. NOR ANY OF ITS EMPLOYEES SHALL BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF ITS INSTRUMENTS AND SOFTWARE EVEN IF KEITHLEY INSTRUMENTS, INC., HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SUCH EXCLUDED DAMAGES SHALL INCLUDE, BUT ARE NOT LIMITED TO: COSTS OF REMOVAL AND INSTALLATION, LOSSES SUSTAINED AS THE RESULT OF INJURY TO ANY PERSON, OR DAMAGE TO PROPERTY.



Keithley Instruments, Inc. 28775 Aurora Road • Cleveland, Ohio 44139 • 440-248-0400 • Fax: 440-248-6168
1-888-KEITHLEY (534-8453) • www.keithley.com

Sales Offices: BELGIUM: Bergensesteenweg 709 • B-1600 Sint-Pieters-Leeuw • 02-363 00 40 • Fax: 02/363 00 64
CHINA: Yuan Chen Xin Building, Room 705 • 12 Yumin Road, Dewai, Madian • Beijing 100029 • 8610-6202-2886 • Fax: 8610-6202-2892
FINLAND: Tietäjäsentie 2 • 02130 Espoo • Phone: 09-54 75 08 10 • Fax: 09-25 10 51 00
FRANCE: 3, allée des Garays • 91127 Palaiseau Cédex • 01-64 53 20 20 • Fax: 01-60 11 77 26
GERMANY: Landsberger Strasse 65 • 82110 Germering • 089/84 93 07-40 • Fax: 089/84 93 07-34
GREAT BRITAIN: Unit 2 Commerce Park, Brunel Road • Theale • Berkshire RG7 4AB • 0118 929 7500 • Fax: 0118 929 7519
INDIA: Flat 2B, Willocrissa • 14, Rest House Crescent • Bangalore 560 001 • 91-80-509-1320/21 • Fax: 91-80-509-1322
ITALY: Viale San Gimignano, 38 • 20146 Milano • 02-48 39 16 01 • Fax: 02-48 30 22 74
JAPAN: New Pier Takeshiba North Tower 13F • 11-1, Kaigan 1-chome • Minato-ku, Tokyo 105-0022 • 81-3-5733-7555 • Fax: 81-3-5733-7556
KOREA: 2FL., URI Building • 2-14 Yangjae-Dong • Seocho-Gu, Seoul 137-888 • 82-2-574-7778 • Fax: 82-2-574-7838
NETHERLANDS: Postbus 559 • 4200 AN Gorinchem • 0183-635333 • Fax: 0183-630821
SWEDEN: c/o Regus Business Centre • Frosundaviks Allé 15, 4tr • 169 70 Solna • 08-509 04 679 • Fax: 08-655 26 10
SWITZERLAND: Kriesbachstrasse 4 • 8600 Dübendorf • 01-821 94 44 • Fax: 01-820 30 81
TAIWAN: IFL., 85 Po Ai Street • Hsinchu, Taiwan, R.O.C. • 886-3-572-9077 • Fax: 886-3-572-9031

The following safety precautions should be observed before using this product and any associated instrumentation. Although some instruments and accessories would normally be used with non-hazardous voltages, there are situations where hazardous conditions may be present.

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the safety precautions required to avoid possible injury. Read and follow all installation, operation, and maintenance information carefully before using the product. Refer to the manual for complete product specifications.

If the product is used in a manner not specified, the protection provided by the product may be impaired.

The types of product users are:

Responsible body is the individual or group responsible for the use and maintenance of equipment, for ensuring that the equipment is operated within its specifications and operating limits, and for ensuring that operators are adequately trained.

Operators use the product for its intended function. They must be trained in electrical safety procedures and proper use of the instrument. They must be protected from electric shock and contact with hazardous live circuits.

Maintenance personnel perform routine procedures on the product to keep it operating properly, for example, setting the line voltage or replacing consumable materials. Maintenance procedures are described in the manual. The procedures explicitly state if the operator may perform them. Otherwise, they should be performed only by service personnel.

Service personnel are trained to work on live circuits, and perform safe installations and repairs of products. Only properly trained service personnel may perform installation and service procedures.

Keithley products are designed for use with electrical signals that are rated Installation Category I and Installation Category II, as described in the International Electrotechnical Commission (IEC) Standard IEC 60664. Most measurement, control, and data I/O signals are Installation Category I and must not be directly connected to mains voltage or to voltage sources with high transient over-voltages. Installation Category II connections require protection for high transient over-voltages often associated with local AC mains connections. Assume all measurement, control, and data I/O connections are for connection to Category I sources unless otherwise marked or described in the Manual.

Exercise extreme caution when a shock hazard is present. Lethal voltage may be present on cable connector jacks or test fixtures. The American National Standards Institute (ANSI) states that a shock hazard exists when voltage levels greater than 30V RMS, 42.4V peak, or 60VDC are present. **A good safety practice is to expect that hazardous voltage is present in any unknown circuit before measuring.**

Operators of this product must be protected from electric shock at all times. The responsible body must ensure that operators are prevented access and/or insulated from every connection point. In some cases, connections must be exposed to potential human contact. Product operators in these circumstances must be trained to protect themselves from the risk of electric shock. If the circuit is capable of operating at or above 1000 volts, **no conductive part of the circuit may be exposed.**

Do not connect switching cards directly to unlimited power circuits. They are intended to be used with impedance limited sources. NEVER connect switching cards directly to AC mains. When connecting sources to switching cards, install protective devices to limit fault current and voltage to the card.

Before operating an instrument, make sure the line cord is connected to a properly grounded power receptacle. Inspect the connecting cables, test leads, and jumpers for possible wear, cracks, or breaks before each use.

When installing equipment where access to the main power cord is restricted, such as rack mounting, a separate main input power disconnect device must be provided, in close proximity to the equipment and within easy reach of the operator.

For maximum safety, do not touch the product, test cables, or any other instruments while power is applied to the circuit under test. ALWAYS remove power from the entire test system and discharge any capacitors before: connecting or disconnecting cables or jumpers, installing or removing switching cards, or making internal changes, such as installing or removing jumpers.

Do not touch any object that could provide a current path to the common side of the circuit under test or power line (earth) ground. Always make measurements with dry hands while standing on a dry, insulated surface capable of withstanding the voltage being measured.


 
The instrument and accessories must be used in accordance with its specifications and operating instructions or the safety of the equipment may be impaired.


Do not exceed the maximum signal levels of the instruments and accessories, as defined in the specifications and operating information, and as shown on the instrument or test fixture panels, or switching card.


When fuses are used in a product, replace with same type and rating for continued protection against fire hazard.

Chassis connections must only be used as shield connections for measuring circuits, NOT as safety earth ground connections.

If you are using a test fixture, keep the lid closed while power is applied to the device under test. Safe operation requires the use of a lid interlock.

If  or  is present, connect it to safety earth ground using the wire recommended in the user documentation.

The  symbol on an instrument indicates that the user should refer to the operating instructions located in the manual.

The  symbol on an instrument shows that it can source or measure 1000 volts or more, including the combined effect of normal and common mode voltages. Use standard safety precautions to avoid personal contact with these voltages.

The **WARNING** heading in a manual explains dangers that might result in personal injury or death. Always read the associated information very carefully before performing the indicated procedure.

The **CAUTION** heading in a manual explains hazards that could damage the instrument. Such damage may invalidate the warranty.

Instrumentation and accessories shall not be connected to humans.

Before performing any maintenance, disconnect the line cord and all test cables.

To maintain protection from electric shock and fire, replacement components in mains circuits, including the power transformer, test leads, and input jacks, must be purchased from Keithley Instruments. Standard fuses, with applicable national safety approvals, may be used if the rating and type are the same. Other components that are not safety related may be purchased from other suppliers as long as they are equivalent to the original component. (Note that selected parts should be purchased only through Keithley Instruments to maintain accuracy and functionality of the product.) If you are unsure about the applicability of a replacement component, call a Keithley Instruments office for information.

To clean an instrument, use a damp cloth or mild, water based cleaner. Clean the exterior of the instrument only. Do not apply cleaner directly to the instrument or allow liquids to enter or spill on the instrument. Products that consist of a circuit board with no case or chassis (e.g., data acquisition board for installation into a computer) should never require cleaning if handled according to instructions. If the board becomes contaminated and operation is affected, the board should be returned to the factory for proper cleaning/servicing.

Model 7707

The information in this packing list is organized as follows:

- Card configuration — schematic on page 2.
- Connections and wiring overview on page 4.
 - D-shell connectors on page 4.
 - Wiring on page 5.
 - Connection log on page 10.
- Analog inputs on page 11.
 - Operation on page 11.
 - Typical analog input connections on page 11.
- Digital I/O on page 12.
- Digital outputs on page 13.
 - Sink or source on page 13.
 - Digital I/O protection on page 16.
 - Output bit patterns on page 17.
 - Setting digital outputs on page 19.
- Digital inputs on page 26.
 - Input bit patterns on page 26.
 - Reading digital inputs on page 28.
- CARD menu on page 32.
- Digital I/O command summary on page 34.
- Service on page 35.
 - Performance verification on page 35.
 - Replaceable parts on page 35.
- Specifications — 7707 Multiplexer-Digital I/O Module on page 40.
- Measurement considerations (digital outputs) on page 42

Introduction

The Model 7707 is a 10-channel differential multiplexer card with the following features:

- 10 channels of analog input with 300V, 1A capacity; 60W, 125VA maximum.
- 32 digital input/output channels.
- 2-wire or 4-wire Ω measurement (automatically pairs switches for four wire measurements — $n + 5$).
- Temperature applications (RTD, thermistor).
- 50-pin male D-Shell connector (DB-50) for digital I/O channels 11 through 14.
- 25-pin female D-Shell connector (DB-25) for analog input channels 1 through 10.

WARNING Before operating the Model 2700 or 2750 with an accessory card, verify the card is properly installed and the mounting screws are tightly fastened. If the mounting screws are not properly connected, an electrical shock hazard may be present.

Card configuration — schematic

Figure 1 shows a simplified schematic diagram of the Model 7707 module. As shown, the Model 7707 has channels that are grouped into two banks of five channels (10 channels total). Backplane isolation is provided for each bank. The first bank contains channels 1 through 5 while the second bank contains channels 6 through 10. Each channel of the 10-channel multiplexer card is wired with separate inputs for HI/LO providing fully isolated inputs.

NOTE Although the Model 7707 relays are the latching type (relays hold their state even after power has been removed), all relay states are set to open a few seconds after either a power cycle or an *RST command is issued.

Connections to DMM functions are provided through the card backplane connector for the following:

INPUT connections

SENSE (Ω 4-wire) connections

Channel 15 (2W/4W configuration), Channel 16 (sense isolation), and Channel 17 (input isolation) are automatically configured for normal system channel operation. When a 4-wire function is selected, the channels are paired as follows:

- CH1 and CH6
- CH2 and CH7
- CH3 and CH8
- CH4 and CH9
- CH5 and CH10

Dual independent multiplexers

Multiple channel operation (ROUT:MULT:CLOS command) allows individual control of switching module channels. Multiple channel operation allows the switching module to be configured as two independent multiplexers. The Model 7707 is normally used as a single 1×10 multiplexer, but it can also be configured as two 1×5 multiplexers.

In Figure 1, the open position of channel 15 is shown. When channel 15 is closed, Multiplexer 1 (channels 1 through 5) is isolated from Multiplexer 2 (channels 6 through 10).

For the dual multiplexer configuration, only channels 1 through 5 can be internally connected to the DMM of the Model 2700/2750. Closing channel 17 allows channels 1 through 5 to be measured by the DMM.




When using the dual multiplexer configuration, channels 6 through 10 must be isolated from the sense terminals of the DMM by keeping channel 16 open.

WARNING Multiple channel operation should only be performed by experienced test engineers who recognize the dangers associated with multiple channel closures.

Digital I/O

As shown in Figure 1, channels 11, 12, 13, and 14 are digital I/O channels. Each digital I/O port can be configured as eight bits of digital input or eight bits of digital output.

Figure 1
Simplified schematic for Model 7707

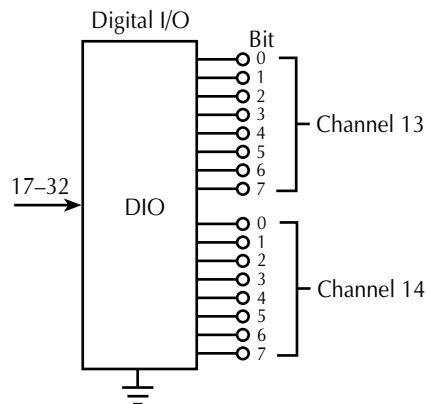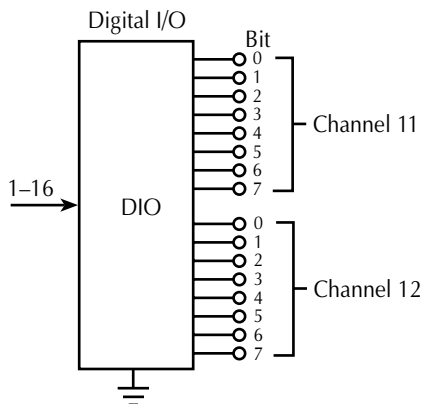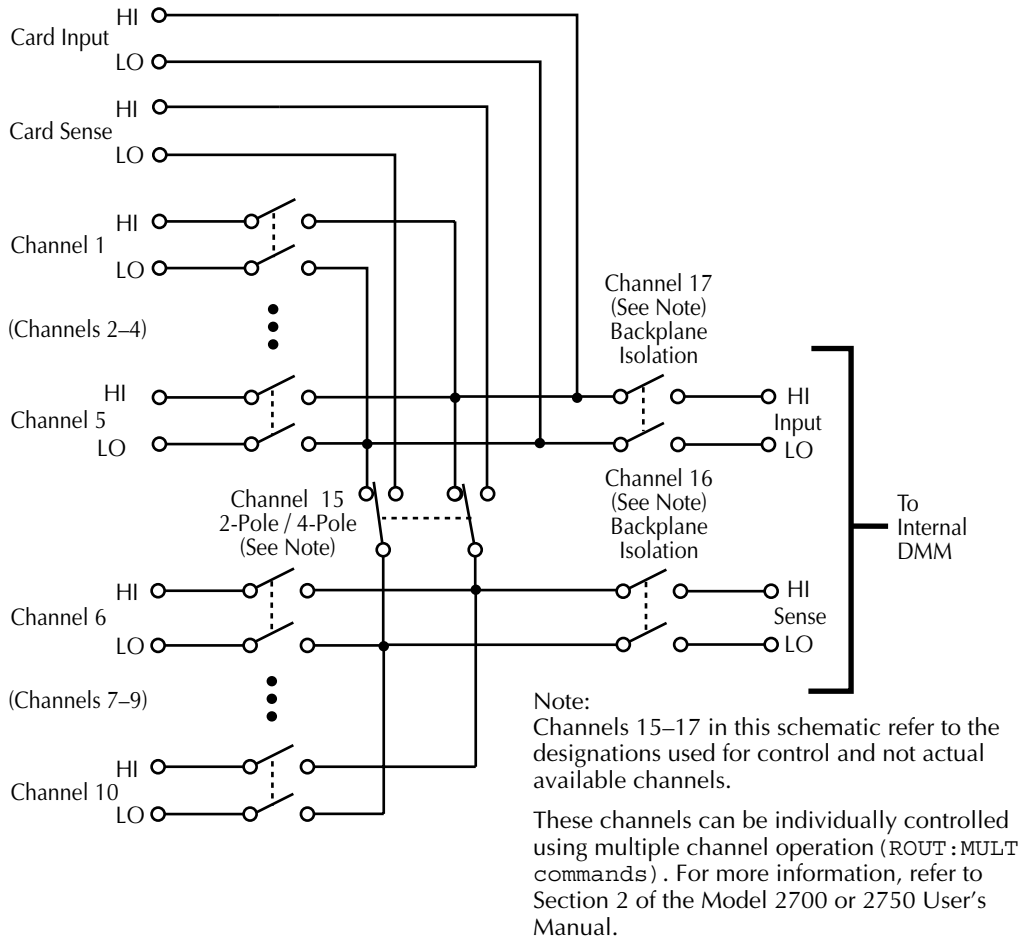

Connections and wiring overview

WARNING All connection and wiring information is intended for qualified service personnel. Do not make switching module connections unless qualified to do so.

To prevent electric shock that could result in serious injury or death, adhere to the following safety precautions:

- Before removing or installing the switching module in the mainframe, make sure the mainframe is turned off and disconnected from line power.
- Before making or breaking connections to the switching module, make sure power is removed from all external circuitry.
- Do not connect signals that may exceed the maximum specifications of the Model 7707. Specifications are provided at the end of this section.

D-shell connectors

Figure 2 shows the pin numbers for the Model 7707 rear panel connectors. The 50-pin D-shell is used to access digital input/output channels, and the 25-pin D-shell is used to access analog input channels. Terminal identification for the D-shell connector pins is provided in Table 1.

Figure 2

Rear view—Model 7707 pinouts

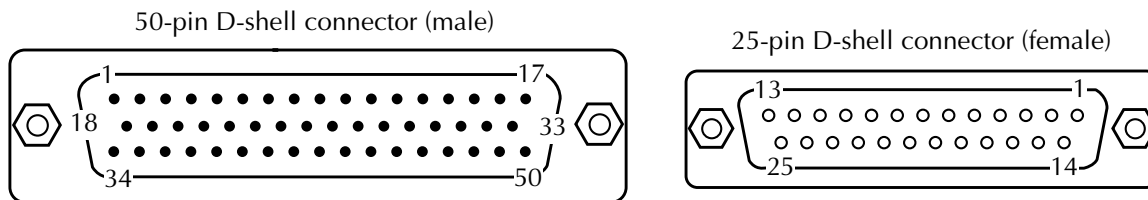


Table 1
D-shell pin identification

50-pin D-shell (DB-50)									
Pin	7707 Terminal	Pin	7707 Terminal	Pin	7707 Terminal	Pin	7707 Terminal	Pin	7707 Terminal
1	Gnd	11	Ch 13 Bit 3	21	Gnd	31	Ch 14 Bit 1	41	Protection K2
2	Ch 11 Bit 2	12	Ch 16 Bit 6	22	Ch 12 Bit 0	32	Ch 14 Bit 4	42	Gnd
3	Ch 11 Bit 5	13	Gnd	23	Ch 12 Bit 3	33	Ch 14 Bit 7	43	Ch 13 Bit 1
4	Protection K1	14	Gnd	24	Ch 12 Bit 6	34	Ch 11 Bit 0	44	Ch 13 Bit 4
5	Gnd	15	Ch 14 Bit 2	25	Gnd	35	Ch 11 Bit 3	45	Ch 13 Bit 7
6	Ch 12 Bit 1	16	Ch 14 Bit 5	26	Gnd	36	Ch 11 Bit 6	46	Gnd
7	Ch 12 Bit 4	17	Protection K4	27	Ch 13 Bit 2	37	Gnd	47	Ch 14 Bit 0
8	Ch 12 Bit 7	18	Ch 11 Bit 1	28	Ch 13 Bit 5	38	Gnd	48	Ch 14 Bit 3
9	Gnd	19	Ch 11 Bit 4	29	Protection K3	39	Ch 12 Bit 2	49	Ch 14 Bit 6
10	Ch 13 Bit 0	20	Ch 11 Bit 7	30	Gnd	40	Ch 12 Bit 5	50	Gnd

25-pin D-shell (DB-25)									
Pin	7707 Terminal	Pin	7707 Terminal	Pin	7707 Terminal	Pin	7707 Terminal	Pin	7707 Terminal
1	Ch 1 Hi	6	Ch 6 Hi	11	Sense Hi	16	Ch 3 Lo	21	Ch 8 Lo
2	Ch 2 Hi	7	Ch 7 Hi	12	Input Hi	17	Ch 4 Lo	22	Ch 9 Lo
3	Ch 3 Hi	8	Ch 8 Hi	13	—	18	Ch 5 Lo	23	Ch 10 Lo
4	Ch 4 Hi	9	Ch 9 Hi	14	Ch 1 Lo	19	Ch 6 Lo	24	Sense Lo
5	Ch 5 Hi	10	Ch 10 Hi	15	Ch 2 Lo	20	Ch 7 Lo	25	Input Lo

Wiring

NOTE The Model 7707 is shipped with plastic connector covers installed on the D-shell connectors. Each cover is secured to the connector by two screws. After removing a connector cover, retain it and the screws for future use. Any unused D-shell connector must have the connector cover installed.

The Model 7707 is supplied with one 50-pin female IDC ribbon cable connector, and one 25-pin male IDC ribbon cable connector. These ribbon cable connectors mate to the D-shell connectors of the switching module.

WARNING When using IDC ribbon cable connections on the DB-25 (analog inputs), DO NOT exceed 42V on any analog input in the test system (including the front panel inputs of the Model 2700/2750). For higher voltage applications (up to 300V), use wire rated for the application and add supplementary insulation to the wire harness (Figure 6).

The DB-50 connector is used for digital I/O connections. DO NOT exceed 40V on any digital terminal in the test system.

There are two connector kits that have connectors that can be used with the Model 7707:

- **Model 7790 ribbon cable adapter kit** — Contains one female DB-50, one male DB-50 and one male DB-25 IDC ribbon cable connectors. The female DB-50 and the male DB-25 mate to the D-shell connectors on the Model 7707.
- **Model 7789 50/25-pin solder cup connector kit** — Contains one male DB-50 and one male DB-25 solder cup connectors. The male DB-25 mates to the 25-pin D-shell on the Model 7707.

IDC ribbon cable connections

WARNING When using IDC ribbon cable for analog inputs (DB-25), DO NOT exceed 42V on any analog input (including front panel terminals). When using IDC ribbon cable for the digital I/O (DB-50), DO NOT exceed 40V on any digital terminal.

Connect an appropriate length of 50-conductor IDC ribbon cable to a 50-pin female D-shell IDC connector, and connect an appropriate length of 25-conductor IDC ribbon cable to a 25-pin male D-shell IDC connector. Table 2 and Figure 3 provide terminal identification for the 50-pin ribbon cable connections. Table 3 and Figure 4 provide terminal identification for the 25-pin ribbon cable connections.

The connectors of the prepared ribbon cable assemblies mate to the 50- and 25-pin D-shell connectors of the Model 7707 (Figure 5). Make sure an unused D-shell connector has the connector cover installed.

Table 2

Terminal identification for 50-conductor IDC ribbon cable and 7707 DB-50 connector

Ribbon cable*		7707	DB-50	Ribbon cable*		7707	DB-50
Conductor	Color	Terminal	Pin #	Conductor	Color	Terminal	Pin #
1	Brown	Gnd	1	26	Blue	Gnd	42
2	Red	Ch 11 Bit 0	34	27	Violet	Gnd	26
3	Orange	Ch 11 Bit 1	18	28	Grey	Ch 13 Bit 0	10
4	Yellow	Ch 11 Bit 2	2	29	White	Ch 13 Bit 1	43
5	Green	Ch 11 Bit 3	35	30	Black	Ch 13 Bit 2	27
6	Blue	Ch 11 Bit 4	19	31	Brown	Ch 13 Bit 3	11
7	Violet	Ch 11 Bit 5	3	32	Red	Ch 13 Bit 4	44
8	Grey	Ch 11 Bit 6	36	33	Orange	Ch 13 Bit 5	28
9	White	Ch 11 Bit 7	20	34	Yellow	Ch 13 Bit 6	12
10	Black	Protection K1	4	35	Green	Ch 13 Bit 7	45
11	Brown	Gnd	37	36	Blue	Protection K3	29
12	Red	Gnd	21	37	Violet	Gnd	13
13	Orange	Gnd	5	38	Grey	Gnd	46
14	Yellow	Gnd	38	39	White	Gnd	30
15	Green	Ch 12 Bit 0	22	40	Black	Gnd	14
16	Blue	Ch 12 Bit 1	6	41	Brown	Ch 14 Bit 0	47
17	Violet	Ch 12 Bit 2	39	42	Red	Ch 14 Bit 1	31
18	Grey	Ch 12 Bit 3	23	43	Orange	Ch 14 Bit 2	15
19	White	Ch 12 Bit 4	7	44	Yellow	Ch 14 Bit 3	48
20	Black	Ch 12 Bit 5	40	45	Green	Ch 14 Bit 4	32
21	Brown	Ch 12 Bit 6	24	46	Blue	Ch 14 Bit 5	16
22	Red	Ch 12 Bit 7	8	47	Violet	Ch 14 Bit 6	49
23	Orange	Protection K2	41	48	Grey	Ch 14 Bit 7	33
24	Yellow	Gnd	25	49	White	Protection K4	17
25	Green	Gnd	9	50	Black	Gnd	50

* 50-conductor IDC ribbon cable is available from Keithley.

Figure 3
50-conductor ribbon cable terminal identification

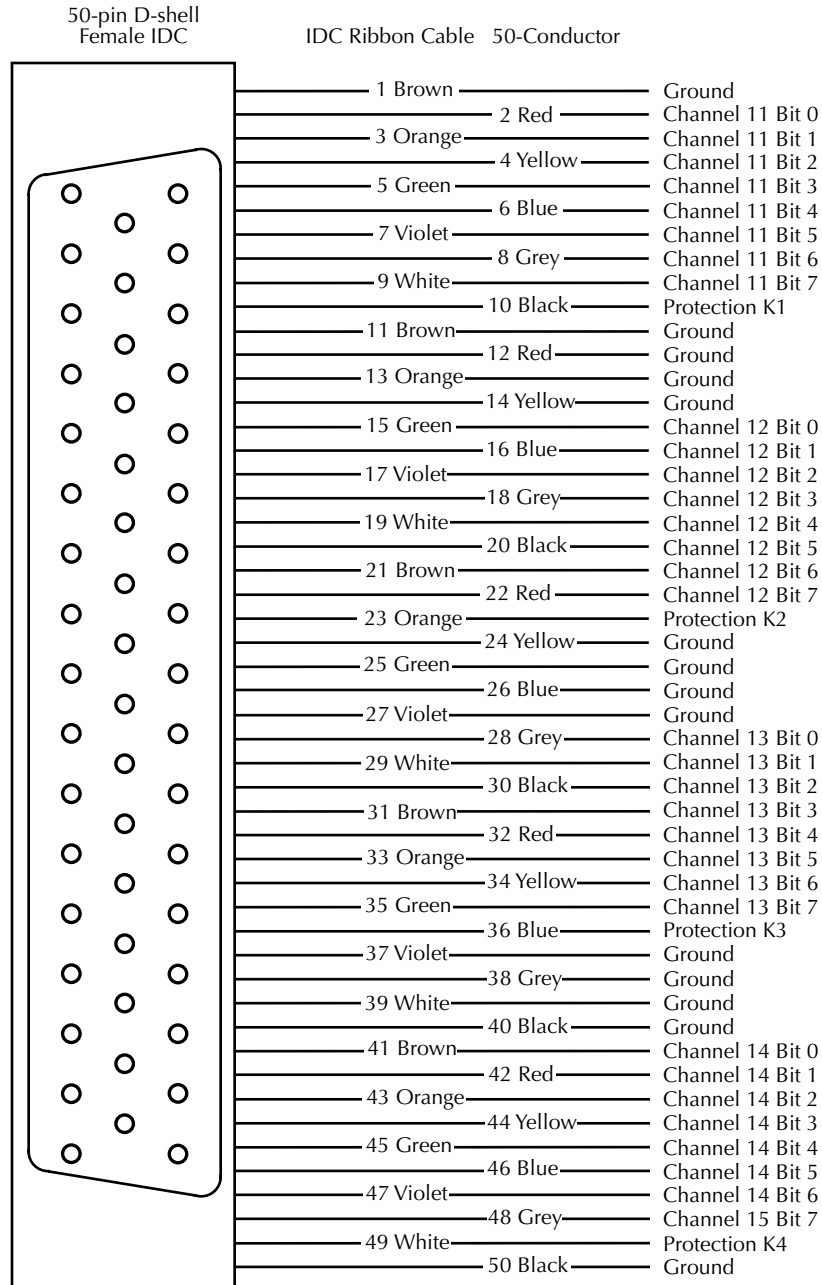


Table 3
Terminal identification for 25-conductor IDC ribbon cable and 7707 DB-25 connector

Ribbon cable*		7707	DB-25	Ribbon cable*		7707	DB-25
Conductor	Color	Terminal	Pin #	Conductor	Color	Terminal	Pin #
1	Brown	Ch 1 Hi	1	14	Yellow	Ch 7 Lo	20
2	Red	Ch 1 Lo	14	15	Green	Ch 8 Hi	8
3	Orange	Ch 2 Hi	2	16	Blue	Ch 8 Lo	21
4	Yellow	Ch 2 Lo	15	17	Violet	Ch 9 Hi	9
5	Green	Ch 3 Hi	3	18	Grey	Ch 9 Lo	22
6	Blue	Ch 3 Lo	16	19	White	Ch 10 Hi	10
7	Violet	Ch 4 Hi	4	20	Black	Ch 10 Lo	23
8	Grey	Ch 4 Lo	17	21	Brown	Sense Hi	11
9	White	Ch 5 Hi	5	22	Red	Sense Lo	24
10	Black	Ch 5 Lo	18	23	Orange	Input Hi	12
11	Brown	Ch 6 Hi	6	24	Yellow	Input Lo	25
12	Red	Ch 6 Lo	19	25	Green	—	—
13	Orange	Ch 7 Hi	7				

* 25-conductor IDC ribbon cable is available from Keithley.

Figure 4
25-conductor ribbon cable terminal identification


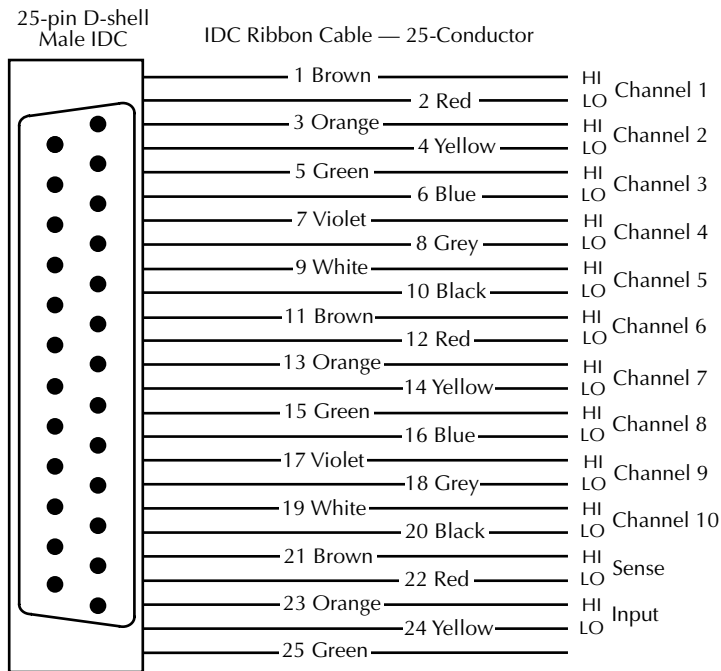


Figure 5
Connecting ribbon cable assembly

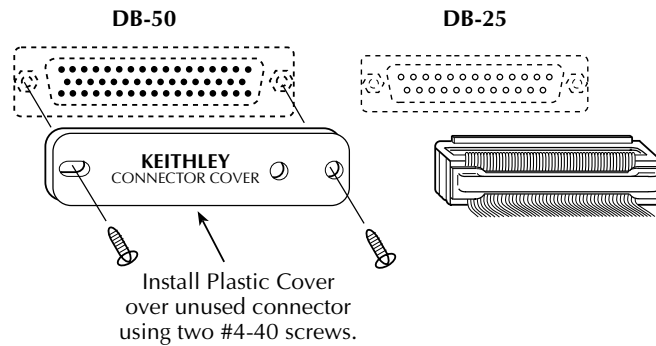

WARNING: When using ribbon cable, on the DB-25, DO NOT exceed 42 volts on any analog input in the test system (including the front panel inputs of the Model 2700/2750).

The DB-50 connector is used for digital I/O connections. DO NOT exceed 40V on any digital terminal in the test system.

Solder cup cable connections


Make all connections to D-shell male solder cup connectors using the correct wire size up to 20 AWG. Terminal identification for the 50-pin D-shell connector is provided in [Table 1](#) and [Table 2](#). Terminal identification for the 25-pin D-shell connector is provided in [Table 1](#) and [Table 3](#). Make sure to add supplementary insulation around the harness for voltages above 42V peak ([Figure 6](#)).

WARNING For analog inputs (DB-25), all solder cup wiring must be rated for the maximum voltage in the system. For example, if 300V is applied to the front terminals of the DMM, all wiring for analog inputs must be rated for 300V.

For the digital I/O (DB-50), wiring must be rated for the maximum voltage applied to a digital terminal (up to 40V).

A connector cover must be installed on an unused 50-pin D-shell connector. If the connector is left open, an electrical shock hazard may be present.

Figure 6
Connecting solder cup cable assembly

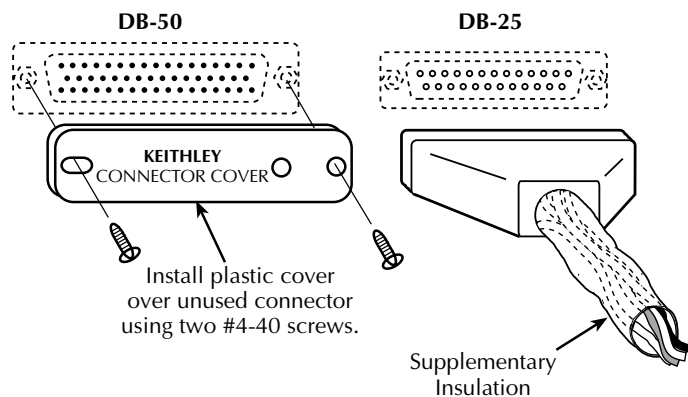

WARNING: When using a solder cup cable on the DB-25, use supplementary insulation around the harness for voltages above 42V peak.

The DB-50 connector is used for digital I/O connections. DO NOT exceed 40V on any digital terminal in the test system.

Connection log

Make a copy of Table 4 and affix it to the cover of the Model 7707. Use this to record connection information and channel descriptions as needed.

Table 4
Connection log Model 7707

Channel	Color	Description
INPUT	H	
	L	
SENSE	H	
	L	
CH1	H	
	L	
CH2	H	
	L	
CH3	H	
	L	
CH4	H	
	L	
CH5	H	
	L	
CH6	H	
	L	
CH7	H	
	L	
CH8	H	
	L	
CH9	H	
	L	
CH10	H	
	L	

I/O Line	Ch 11			Ch 12			Ch 13			Ch 14		
	In	Out	Color	In	Out	Color	In	Out	Color	In	Out	Color
Bit 0	(B0)	0 1		(B8)	0 1		(B16)	0 1		(B24)	0 1	
Bit 1	(B1)	0 1		(B9)	0 1		(B17)	0 1		(B25)	0 1	
Bit 2	(B2)	0 1		(B10)	0 1		(B18)	0 1		(B26)	0 1	
Bit 3	(B3)	0 1		(B11)	0 1		(B19)	0 1		(B27)	0 1	
Bit 4	(B4)	0 1		(B12)	0 1		(B20)	0 1		(B28)	0 1	
Bit 5	(B5)	0 1		(B13)	0 1		(B21)	0 1		(B29)	0 1	
Bit 6	(B6)	0 1		(B14)	0 1		(B22)	0 1		(B30)	0 1	
Bit 7	(B7)	0 1		(B15)	0 1		(B23)	0 1		(B31)	0 1	
	K1			K2			K3			K4		

0 = low, 1 = high

Analog inputs

The following Model 7707 channels are used to measure analog input:

- Channels 1 through 10 are system measurement channels.
- Channel 15 is the 2-pole/4-pole selection relay.
- Channels 16 and 17 are the backplane isolation relays for sense and input respectively.

Operation

Operation to measure analog input is the same as operation for the Model 7700. The only exceptions are that the Model 7707 does not have any amps channels, and it does not have a cold junction for thermocouple temperature measurements.

Operation information for the Model 7700 switching module is provided in the Model 2700 or 2750 User's Manual. Section 2 covers basic open/close operation, while the "Scanning" section covers scanning.

Dual independent multiplexers — Multiple channel operation can be used to configure the Model 7707 as two independent 1×5 multiplexers by closing channel 15 (Figure 1). This isolates channels 1 through 5 from channels 6 through 10.

WARNING Multiple channel operation should only be performed by experienced test engineers who recognize the dangers associated with multiple channel closures.

Typical analog input connections

The following examples show typical connections for the following types of measurements:

- Ω 2-Wire resistance and thermistor connections, Figure 7.
- Ω 4-Wire resistance and RTD connections, Figure 8.
- Voltage connections (AC or DC), Figure 9.

Figure 7
2-wire resistance and thermistor connections

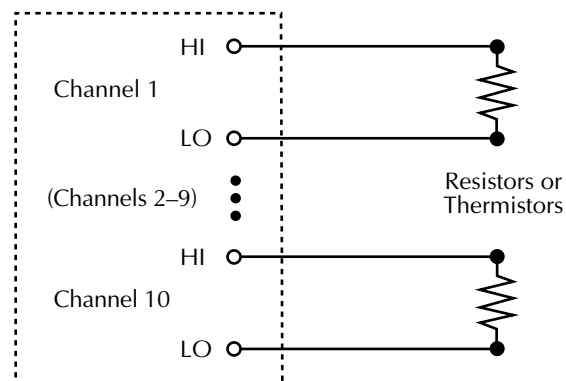


Figure 8
4-wire resistance and RTD connections


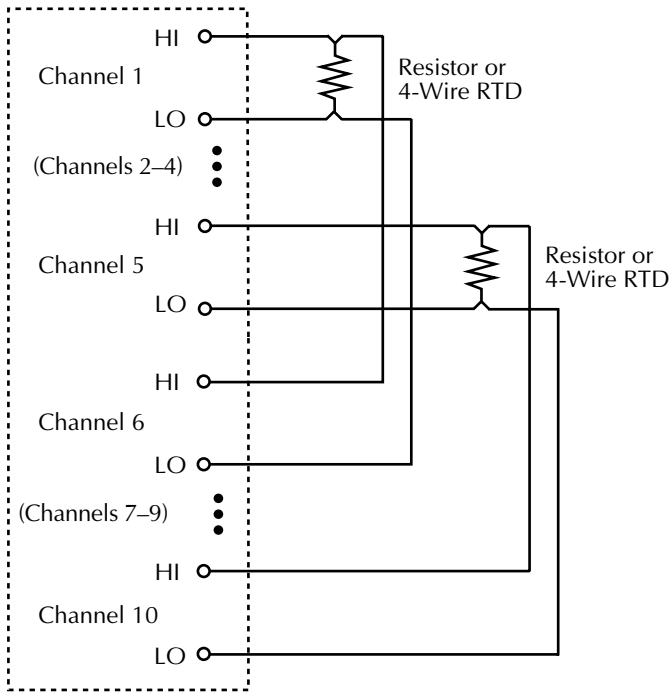


Figure 9
Voltage connections (AC or DC)

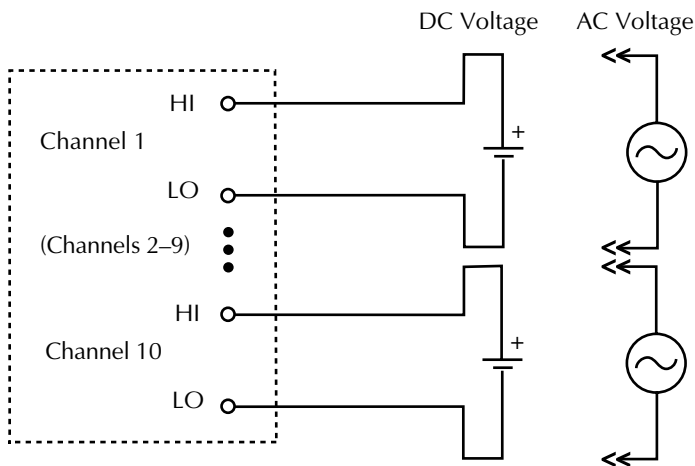


Digital I/O

The Model 7707 has four digital input/output channels (11, 12, 13, and 14). Each I/O channel can be set as either a digital input port or a digital output port. As shown in [Figure 10](#), each port has 8 lines (bits 0 through 7).

When an I/O channel is used as an input port, the state (high or low) of each input line (bit) can be read. When an I/O channel is used as an output port, each line (bit) can be set high or low to control external circuitry.

Figure 10
Block diagram of digital I/O channels

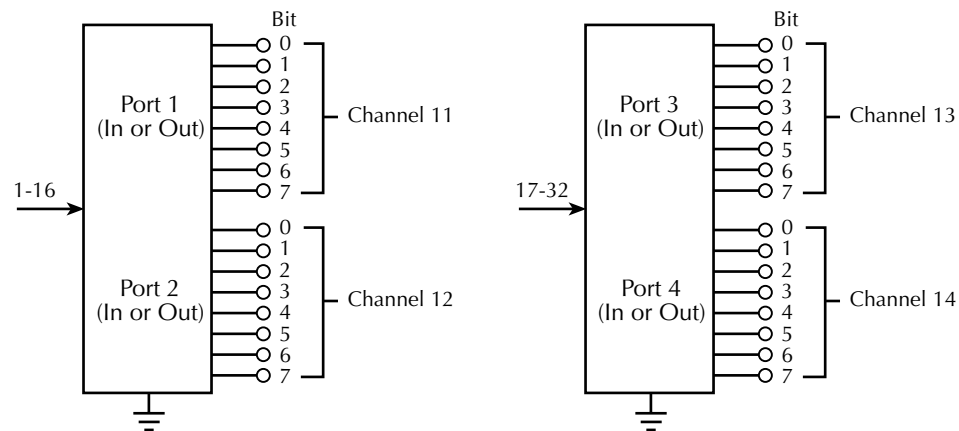

Digital outputs

Digital outputs are used to control logic devices, indicators, fixtures, switches, solenoids, loads, relays, etc. With one I/O channel set as an output port, eight output lines (bits) are available. With two channels set as output ports, 16 output lines (bits) are available. With three channels set as output ports, 24 output lines (bits) are available. And finally, with all four channels set as output ports, 32 output lines (bits) are available.

An output line can be set high to $\approx 4.3\text{V}$ or low to 0V (digital ground). Output lines are set as follows:

- Logic '0' sets output line low to 0V (digital ground).
- Logic '1' sets output line high to $\approx 4.3\text{V}$.

NOTE A digital I/O channel must first be configured as an output port before its output lines can be set high or low. See "Setting digital outputs," page 19, for details.

Sink or source

A digital output line (bit) can be used as a sink for an external source (up to 40V), or as a $\approx 4.3\text{V}$ source for a low-current device.

Sink mode

As a sink, current provided by an external source flows into the module when the output line is set low (logic '0'). Using an output line as a sink provides control for high voltage (up to 40V) and/or high current (up to 100mA) devices, such as relays, solenoids, and other loads. Figure 11, Figure 12, and Figure 13 show how to use an output line as a sink.

CAUTION Do not apply more than $+40\text{V}$ to the K1, K2, K3, and K4 pins of the module. For the output lines, do not exceed the maximum sink current. The maximum sink current for an output line is 100mA . Exceeding these limits may cause damage to the instrument that is not covered by the warranty.

Figure 11
Typical digital output—sink mode (with K1 protection)



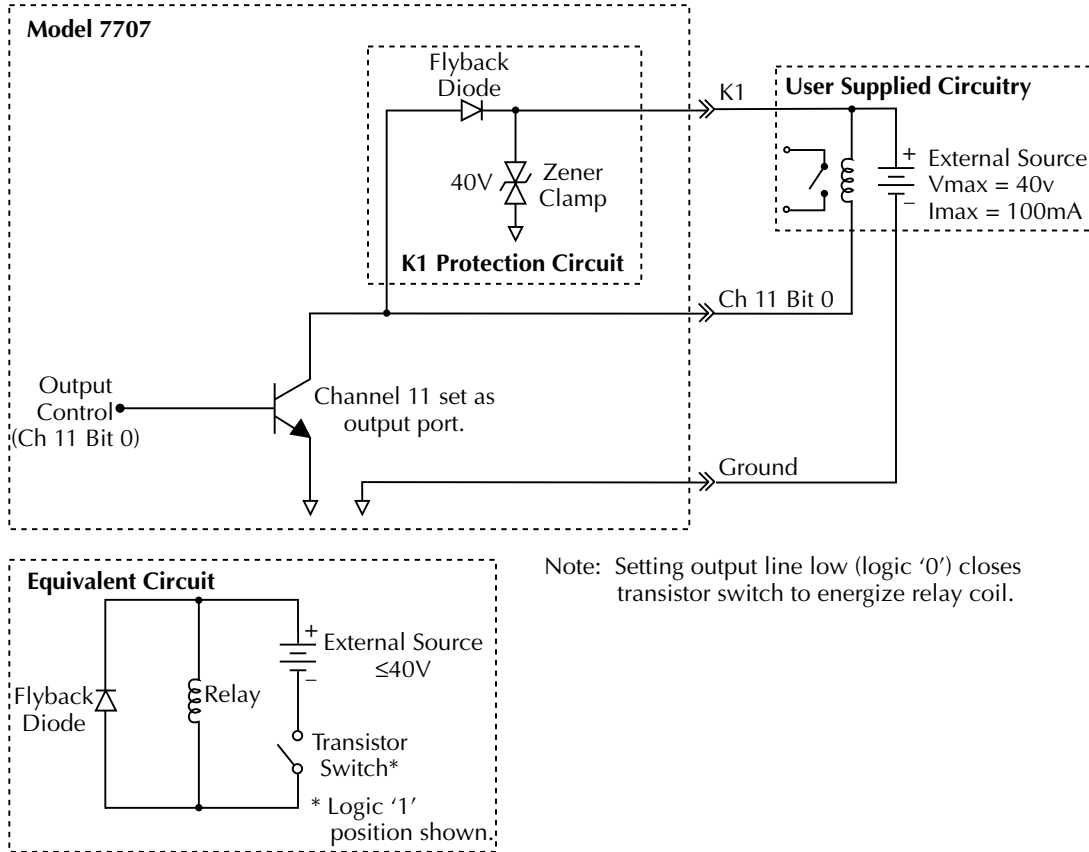


Figure 12
Typical digital output—sink mode (without K1 protection)

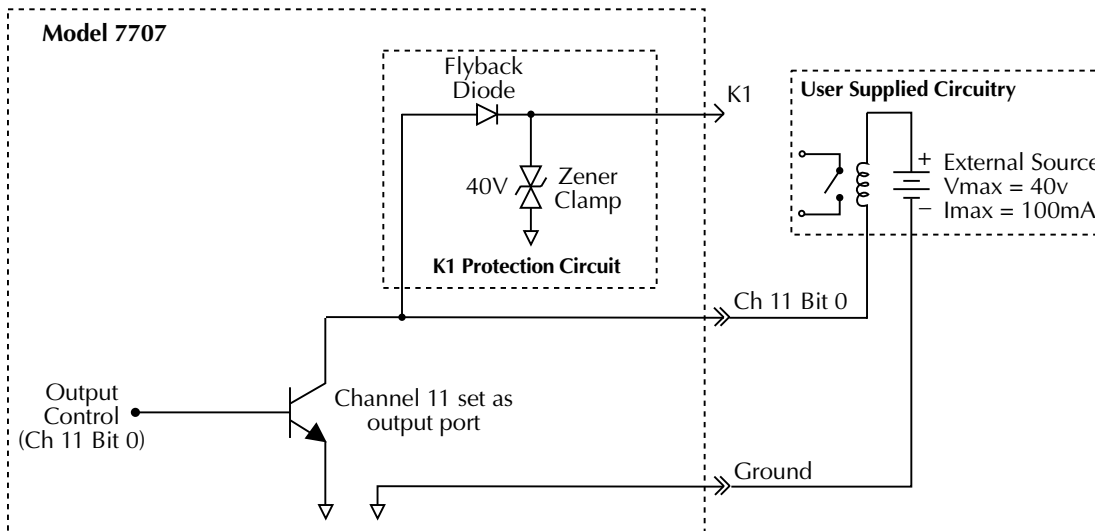

Note: Setting output line low (logic '0') closes transistor switch to energize relay coil.

Figure 13
Typical digital output—sink mode (external flyback diode protection used)

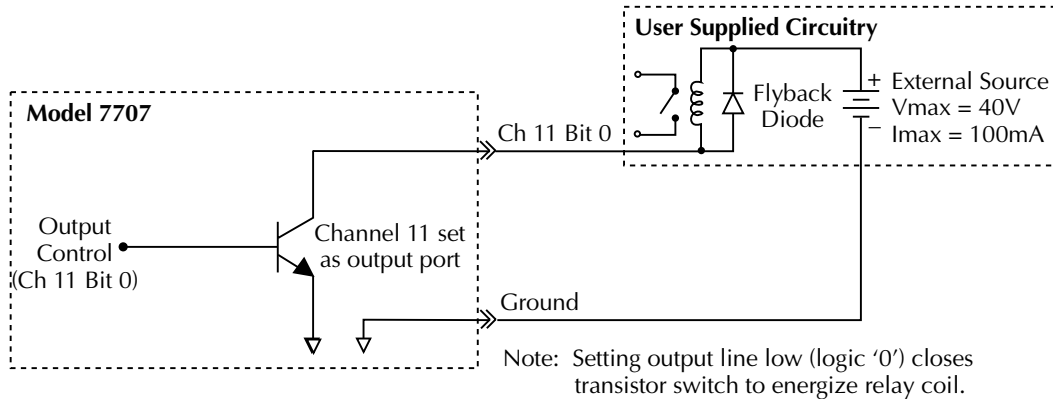


Source mode

When used as a source, current provided by the internal 5V supply flows out of the module to a load when the output line is set high (logic '1'). Using an output line as a source provides control for low voltage, low current (up to 1mA) loads, such as logic devices and indicator lamps. Figure 14 shows how to use an output line to apply high and low logic levels to a NAND gate.

CAUTION Each output line can source up to 1mA. Exceeding 1mA may cause damage to the Model 7707 that is not covered by the warranty.

Figure 14
Typical digital output—source mode

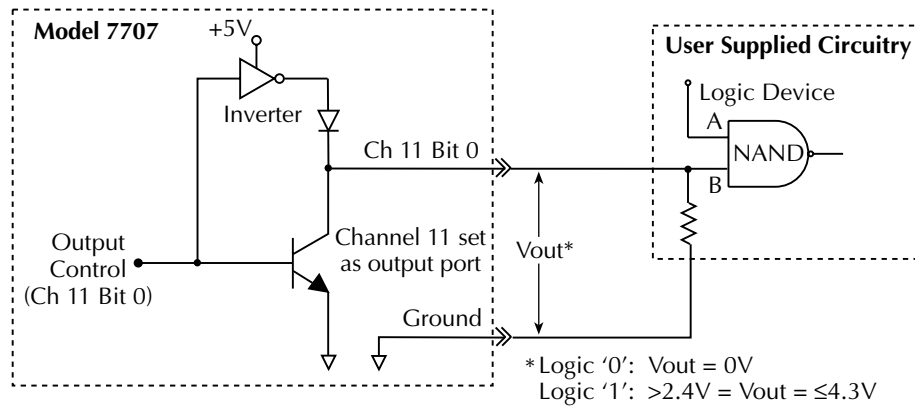

Note: Setting output line high (logic '1') opens transistor switch to apply logic high ('1') to NAND gate.
 Setting output line low (logic '0') closes transistor switch to apply logic low (digital ground) to NAND gate.

Digital I/O protection


Short circuit protection

Each digital output line has internal short circuit protection up to 25V. Over-current protection is tripped at approximately 1A. A simplified circuit showing thermal protection for a digital output is shown in Figure 15.

In Figure 15, a short circuit condition exists when the transistor switch for the digital output is closed (logic '0'). When the current reaches 1A, the driver for the digital output automatically reduces the current to a level that will not damage the digital I/O. If the short circuit condition is maintained, thermal limit circuitry senses the rise in device temperature and further decreases the current.

CAUTION Short circuit protection is effective up to 25V. To avoid damage to the Model 2700/2750, DO NOT apply >25V directly to a digital I/O line.

Figure 15
Short circuit protection for digital outputs

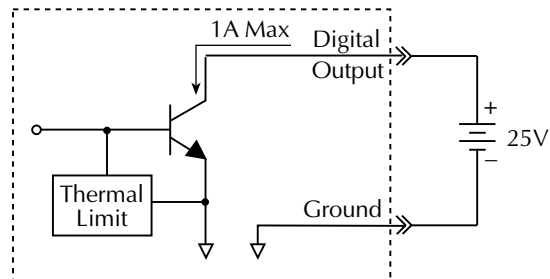

CAUTION To avoid damage to digital circuitry, DO NOT apply >25V directly to a digital I/O line.

K1, K2, K3, and K4 protection circuits

Each digital I/O channel has a circuit to protect it from high voltage. Figure 11 shows the key components of the protection circuit for channel 11. It includes a zener clamp to limit voltage to 40V, and a fly-back diode to provide a current discharge path for an inductive load (i.e., relay coil). Without a current discharge path, fly-back voltage that occurs when the inductive load is switched could damage the digital I/O.

Figure 11 shows how to connect an external circuit to the K1 protection circuit for channel 11. This circuit is shown connected to output line Bit 0, but it is also connected to the other output lines (Bits 1 through 7) in a similar fashion to protect those lines. As shown in the Equivalent Circuit, the flyback diode is placed across the relay coil to provide a discharge path for fly-back voltage. There are similar protection circuits for the other three digital I/O channels; K2 protects channel 12, K3 protects channel 13, and K4 protects channel 14.

External protection circuits

For localized protection, an external flyback diode can be connected directly across the relay coil to provide a current discharge path for flyback voltage. Figure 13 shows how to connect the diode across the coil.

Even when using K1, K2, K3, or K4 protection, additional devices, such as fuses and current limiting resistors, may be required to adequately protect the switching module from damage caused by reactive loads.

Output bit patterns

A binary bit pattern is a series of ‘0’s’ and ‘1’s’ that identifies the state of each output line (bit) in the pattern. Setting a bit to a logic ‘1’ effectively sets the output line high to approximately +4.3V while setting it to a logic ‘0’ sets the output line low to 0V.

Operations to set output bit patterns are divided into two categories; basic operation and advanced operation:

Basic operation — Basic operation handles each output channel as a single 8-bit output pattern. An 8-bit pattern is known as a byte. Output bytes can be set from either the front panel or set using remote programming.

NOTE For most applications, it is only necessary to set one 8-bit output pattern (byte). When working with bytes, you do not need to concern yourself with advanced operation.

Advanced operation — Advanced operation provides additional flexibility by allowing two digital output ports to be treated as a single 16-bit output pattern (word), or all four output ports to be treated as a 32-bit output pattern (double-word). Words and a double-word can only be set using remote programming.

Basic operation — setting bytes (8-bits)

8-bit output patterns (bytes)

Each I/O channel set as an output port is an 8-bit binary output pattern (byte). Bit 7 (B7) of each port is the most significant bit (MSB) and Bit 0 (B0) is the least significant bit (LSB).

From the front panel, the 8-bit output pattern for each port is set by entering a decimal value that is the equivalent of the desired binary bit pattern. Figure 16 lists the decimal weights for the bits of an 8-bit output pattern. To determine the decimal value for an output pattern, simply add up the decimal weights for the bits to be set to ‘1’. As shown in the example in Figure 16, the decimal equivalent for output binary pattern ‘10100101’ is the sum of the decimal weights for B7, B5, B2, and B0.

Figure 16

Decimal weighting for 8-bit output pattern (byte)

Channel 11, 12, 13, or 14

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B7	B6	B5	B4	B3	B2	B1	B0
Binary bit pattern*:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight:	128 (2 ⁷)	64 (2 ⁶)	32 (2 ⁵)	16 (2 ⁴)	8 (2 ³)	4 (2 ²)	2 (2 ¹)	1 (2 ⁰)

* 0 = line set low, 1 = line set high.

Example – Determine decimal value for binary output pattern ‘10100101’ (bits B7, B5, B2 and B0 to be set high to logic ‘1’):

Bit position:	B7	B6	B5	B4	B3	B2	B1	B0
Binary bit pattern:	1	0	1	0	0	1	0	1
Decimal weight of bits set high:	128	—	32	—	—	4	—	1
Decimal value for bit pattern:	$= B7 + B5 + B2 + B0$ $= 128 + 32 + 4 + 1$ $= 165$							

For remote programming, the following command is used to set the 8-bit output pattern for each output port:

```
OUTP:BYTE <NRf|NDN>,<clist>
```

Valid channels for the byte <clist> parameter include channels 11, 12, 13, and 14.

Like front panel operation, the decimal equivalent of the binary pattern can be used to set the port. However, the pattern can also be set using the binary, octal, or hexadecimal equivalent. For details, see “[Setting digital outputs — Remote programming](#),” page 21.

Advanced operation — setting words (16-bits) or double-words (32-bits)

16-bit output patterns (words)

For remote programming, there is a single command to set two output ports to form a 16-bit output pattern (word):

```
OUTP:WORD <NRf|NDN>,<clist>
```

Valid channels for the word <clist> parameter include channels 11 and 13.

This command is used to write to channel 11 or channel 13. Channel 11 is combined with channel 12 to form a 16-bit output pattern, and channel 13 is combined with channel 14 to form a second 16-bit output pattern.

When channel 11 is set as a word, Bit 0 (B0) of channel 11 will be the LSB, and Bit 7 (B15) of channel 12 will be the MSB. When channel 13 is set as a word, Bit 0 (B0) of channel 13 will be the LSB, and Bit 7 (B15) of channel 14 will be the MSB.

The decimal equivalent of the 16-bit output pattern can be used to set the ports. [Figure 17](#) lists the decimal weights of the 16 bits. The bit pattern can also be set using the binary, octal, or hexadecimal equivalent. For details, see “[Setting digital outputs — Remote programming](#),” page 21.

Figure 17

Decimal weighting for 16-bit output pattern (word)

Channel 11 or 13 (B0 - B7)

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B7	B6	B5	B4	B3	B2	B1	B0
Binary bit pattern:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight:	128 (2 ⁷)	64 (2 ⁶)	32 (2 ⁵)	16 (2 ⁴)	8 (2 ³)	4 (2 ²)	2 (2 ¹)	1 (2 ⁰)

Channel 12 or 14 (B8 - B15)

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B15	B14	B13	B12	B11	B10	B9	B8
Binary bit pattern:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight:	32768 (2 ¹⁵)	16384 (2 ¹⁴)	8192 (2 ¹³)	4096 (2 ¹²)	2048 (2 ¹¹)	1024 (2 ¹⁰)	512 (2 ⁹)	256 (2 ⁸)

32-bit output pattern (double-word)

For remote operation, there is a single command to set the four output ports to form a 32-bit output pattern (double word):

```
OUTP:DWOR <Nrf|NDN>, <clist>
```

The only valid channel for the double-word <clist> parameter is channel 11.

This command is used to write to channel 11. Channel 11 is combined with channels 12, 13, and 14 to form the 32-bit output pattern. When channel 11 is set as a double-word, Bit 0 of channel 11 (B0) will be the LSB, and Bit 7 of channel 14 (B31) will be the MSB.

The decimal equivalent of the 32-bit output pattern can be used to set the ports. [Table 5](#) lists the decimal weights of the 32 bits. The bit pattern can also be set using the binary, octal, or hexadecimal equivalent. For details, see “[Setting digital outputs — Remote programming](#),” page 21.

Setting digital outputs

Before setting a digital output pattern, an I/O channel must first be set as an output port. This can be done from the front panel or remote programming.

From the front panel, the pattern for each 8-bit port must be set individually. For remote programming, commands are provided to set 8-bit patterns (bytes), 16-bit patterns (words) and a 32-bit pattern (double-word).

From the front panel, each 8-bit port is set using a decimal value that is the equivalent of the binary output bit pattern. For remote programming, an output bit pattern can be set using decimal, binary, hexadecimal, or octal values.

Figure 18
Decimal weighting for 32-bit output pattern (double-word)

Channel 11 (B0 - B7)

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B7	B6	B5	B4	B3	B2	B1	B0
Binary bit pattern:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight:	128 (2^7)	64 (2^6)	32 (2^5)	16 (2^4)	8 (2^3)	4 (2^2)	2 (2^1)	1 (2^0)

Channel 12 (B8 - B15)

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B15	B14	B13	B12	B11	B10	B9	B8
Binary bit pattern:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight:	32768 (2^{15})	16384 (2^{14})	8192 (2^{13})	4096 (2^{12})	2048 (2^{11})	1024 (2^{10})	512 (2^9)	256 (2^8)

Channel 13 (B16 - B23)

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B23	B22	B21	B20	B19	B18	B17	B16
Binary bit pattern:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight*:	2^{23}	2^{22}	2^{21}	2^{20}	2^{19}	2^{18}	2^{17}	2^{16}

Channel 14 (B24 - B31)

Digital I/O line:	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
Bit position:	B31	B30	B29	B28	B27	B26	B25	B24
Binary bit pattern:	0/1	0/1	0/1	0/1	0/1	0/1	0/1	0/1
Decimal weight*:	2^{31}	2^{30}	2^{29}	2^{28}	2^{27}	2^{26}	2^{25}	2^{24}

* $2^{16} = 65536$	$2^{20} = 1048576$	$2^{24} = 16777216$	$2^{28} = 268435456$
$2^{17} = 131072$	$2^{21} = 2097152$	$2^{25} = 33554432$	$2^{29} = 536870912$
$2^{18} = 262144$	$2^{22} = 4194304$	$2^{26} = 67108864$	$2^{30} = 1073741824$
$2^{19} = 524288$	$2^{23} = 8388608$	$2^{27} = 134217728$	$2^{31} = 2147483648$

Front panel basic operation

NOTE 8-bit output bit patterns are set and viewed from the CARD menu. The following summarizes how to use this menu to set digital outputs. For detailed information, see “CARD menu,” page 32.

CARD: CONFIG — The CONFIG option of the CARD menu is used to set 8-bit output patterns. The menu is accessed by pressing SHIFT, and then CARD. After selecting the CONFIG item and the slot that has the Model 7707, one or more of the digital I/O channels can be configured as an output port.

There is a menu item for every digital I/O channel. For example, assume a Model 7707 is installed in slot 1. From these menu items, a channel can be set as an input (IN) or output (OUT) port:

```
CHAN 111 IN/OUT
CHAN 112 IN/OUT
CHAN 113 IN/OUT
CHAN 114 IN/OUT
```

After a digital I/O channel is set as an output (OUT) port, you will then be prompted to enter a decimal value to set the 8-bit output pattern:

```
DIGOUT1:   Set digital output port 1 (channel 11) from 000 to 255 (in decimal).
DIGOUT2:   Set digital output port 2 (channel 12) from 000 to 255 (in decimal).
DIGOUT3:   Set digital output port 3 (channel 13) from 000 to 255 (in decimal).
DIGOUT4:   Set digital output port 4 (channel 14) from 000 to 255 (in decimal).
```

CARD: VIEW — The VIEW option of the CARD menu is used to view the hexadecimal equivalent of the set output patterns for the output ports. The menu is accessed by pressing SHIFT, and then CARD. After selecting the VIEW item and the slot that has the Model 7707, the hexadecimal equivalent of the output patterns for channels 11, 12, 13 and 14 will scroll across the display. For example:

111:OUT 0xFF = hexadecimal FF (decimal 255) set for output port

The binary equivalent of hexadecimal FF is the '11111111.' For this binary bit pattern, all 8 bits are set high to logic '1.'

Remote programming

Commands are available to set byte, word, and double-word output patterns. These commands are listed in [Table 5](#). Details on these commands follow the table.

NOTE Attempting to set or query an output pattern for an input port will generate error -221 (settings conflict). Make sure to set the appropriate I/O channels as output ports using the `OUTPut:DIGital:STATe` command.

Both digital output and digital input commands are summarized together in [Table 7](#) (see “[Digital I/O command summary](#),” page 34). A photo copy of that table serves as a handy reference to program the digital I/O.

Table 5

Commands to set digital outputs

Command	Description	Default
<i>Set port(s) as input or output:</i> OUTPut:DIGital :STATe , <clist> :STATe? <clist>	Path to set channels of digital I/O port: Set listed channels as output or input ports; 1 (on) sets channels as output ports, 0 (off) sets channels as input ports. Query port type of listed channels (1 = output port, 0 = input port).	Note 1
<i>Setting bytes (basic operation):</i> OUTPut:DIGital :BYTE <NDN or NRf>, <clist> :BYTE? <clist>	Path to set digital output bytes: Set a byte output pattern ² (valid channels are 11, 12, 13, and 14): <NDN> = #Bxx...x Binary format; each x = 1 or 0 = #Hx Hexadecimal format; x = 0 to FF = #Qx Octal format; x = 0 to 377 <NRf> = 0 to 255 Decimal format Query the byte bit pattern for the specified output channels.	Note 3

OUTPut:DIGital

Using remote programming, the Model 7707 can be set to output up to four 8-bit digital patterns (bytes), two 16-bit digital patterns (words), or one 32-bit pattern. The output bit pattern can be set using the decimal, binary, hexadecimal or octal format.

NOTE *Examples for the following commands assume a Model 7707 installed in slot 1 of the main-frame.*

:STATE , <clist> Set I/O channel(s) as output or input
:STATE? <clist> Query port type

Use to set (or query) the specified I/O channels as either output ports or input ports. Parameter value “1” (or “on”) sets the channels as output ports. Parameter value “0” (or “off”) sets the channels as input ports.

The :STATE? <clist> command queries the port type for the specified I/O channels. A “1” or a “0” will be returned for each channel in the list:

1 = Output port
 0 = Input port

For example, the following command queries port type for I/O channels 11, 12, 13, and 14:

```
OUTP:DIG:STAT? (@111:114)
```

The response message “0, 0, 1, 1” indicates that channels 11 and 12 are input ports, and channels 13 and 14 are output ports.

:BYTE <NDN or NRF>, <clist> Set digital output byte patterns
:BYTE? <clist> Query output byte patterns

Use to set (or query) an 8-bit digital output byte pattern for the specified I/O channel(s). Channels 11, 12, 13, and 14 can be set as 8-bit output patterns.

NOTE *Only channels 11, 12, 13, and 14 are valid with the :BYTE command. Using any other channel number(s) with the command generates error -221 (settings conflict).*

The value to set the 8-bit output pattern can be sent in the decimal, binary, hexadecimal, or octal format.

Example: Set output bit pattern “100101” for channel 13 (Bits B5, B2 and B0 set high):

```
OUTP:DIG:STAT 1, (112)                      ' Set channel 12 as output port.
OUTP:DIG:BYTE #B100101, (@121)            ' Set pattern; binary format.
```

In order to use one of the other formats, convert the binary value to its hexadecimal, octal, or decimal equivalent and send the command as follows:

```
OUTP:DIG:BYTE #H25, (@121)                ' Set pattern; hexadecimal format.
OUTP:DIG:BYTE #Q45, (@121)                ' Set pattern; octal format.
OUTP:DIG:BYTE 37, (@121)                  ' Set pattern; decimal format.
```

:BYTE? command — For non-decimal formats, one of the following headers will accompany the returned value to identify which format is selected:

#B = Header for binary values
 #H = Header for hexadecimal values
 #Q = Header for octal values

The :FORMat command is used to select the format for returned values.

:WORD <NDN or NRf>, <clist> Set digital output word patterns
:WORD? <clist> Query output word patterns

Use to set (or query) a 16-bit digital output word pattern. Channels 11 and 12 are combined to form one 16-bit pattern, and channels 13 and 14 are combined to form a second 16-bit pattern.

NOTE Only channels 11 and 13 are valid with the **:WORD** command. Using any other channel number(s) with the command generates error -221 (settings conflict).

When you write a word output pattern to channel 11, the bits for both channels 11 and 12 will set. As shown in [Figure 17](#), channel 11 is used for bits B0 through B7, and channel 12 is used for bits B8 through B15. In a similar manner, when you write a word output pattern to channel 13, the bits of channels 13 and 14 will set.

NOTE When setting a word bit pattern, both channels (11 and 12, or 13 and 14) must be configured as output ports. Otherwise, error -221 (settings conflict) will occur when the **:WORD** command is sent.

The value to set the 16-bit output pattern can be sent in the decimal, binary, hexadecimal, or octal format.

Example: Write 16-bit output bit pattern “00000001 00000111” to channel 11 (Bits B8, B2, B1 and B0 set high):

```
OUTP:DIG:STAT 1, (111, 112)           ' Set I/O channels 11 and 12 as outputs ports.
OUTP:DIG:WORD #B100000111, (@111)    ' Set pattern; binary format.
```

Notice that leading zeroes for the binary word need not be included in the command.

In order to use one of the other formats, convert the binary value to its hexadecimal, octal, or decimal equivalent and send the command as follows:

```
OUTP:DIG:WORD #H107, (@111)          ' Set pattern; hexadecimal format.
OUTP:DIG:WORD #Q407, (@111)          ' Set pattern; octal format.
OUTP:DIG:WORD 263, (@111)            ' Set pattern; decimal format.
```

:WORD? command — For non-decimal formats, one of the following headers will accompany the returned value to identify which format is selected:

#B = Header for binary values
 #H = Header for hexadecimal values
 #Q = Header for octal values

The **:FORMat** command is used to select the format for returned values.

:DWORD <NDN or NRf>, <clist> Set digital output double-word pattern
:DWORD? <clist> Query output double-word pattern

Use to set (or query) a 32-bit digital output word pattern. Channels 11, 12, 13, and 14 are combined to form one 32-bit pattern.

NOTE Only channel 11 is valid with the **:DWORD** command. Using any other channel number with the command generates error -221 (settings conflict).

When you write an output pattern to channel 11, the bits for channels 11, 12, 13, and 14 will set. As shown in [Figure 18](#), channel 11 is used for bits B0 through B7, channel 12 is used for bits B8 through B15, channel 13 is used for bits B16 through B23, and channel 14 is used for bits B24 through B31.

NOTE When setting a double-word bit pattern, all I/O channels (11, 12, 13, and 14) must be configured as output ports. Otherwise, error -221 (settings conflict) will occur when the **:DWORD** command is sent.

The value to set the 32-bit output pattern can be sent in the decimal, binary, hexadecimal, or octal format.

Example: Write 32-bit output bit pattern “00000001 00000000 00000001 00000111” to channel 11 (Bits B24, B8, B2, B1 and B0 set high):

```
OUTP:DIG:STAT 1, (111:114)          ' Set I/O channels 11, 12, 13, and 14 as output ports.
OUTP:DIG:DWOR #B100000000000000100000111, (@111) ' Set pattern; binary format.
```

Notice that leading zeroes for the binary double-word need not be included in the command.

In order to use one of the other formats, convert the binary value to its hexadecimal, octal, or decimal equivalent and send the command as follows:

```
OUTP:DIG:DWOR #H1000107, (@111)      ' Set pattern; hexadecimal format.
OUTP:DIG:DWOR #Q100000407, (@111)    ' Set pattern; octal format.
OUTP:DIG:DWOR 16777479, (@111)       ' Set pattern; decimal format.
```

:DWord? command — For non-decimal formats, one of the following headers will accompany the returned value to identify which format is selected:

```
#B = Header for binary values
#H = Header for hexadecimal values
#Q = Header for octal values
```

The :FORMat command is used to select format for the returned values.

```
:FORMat <name>, [<NRf>]   Select data format for reading output patterns
:FORMat?                  Query data format
```

Select (or query) the data format for reading digital output patterns. The :BYTE?, :WORD? and :DWord? commands are used to read digital output patterns.

The response message for :BYTE?, :WORD? and :DWord? will be a value that corresponds to the set output pattern. The binary format (BINary) allows you to directly identify which bits are set. For example, for a returned binary value of #B100101, bits B5 (MSB), B2, and B0 (LSB) are set. When using one of the other data formats, you will have to convert the returned value to its binary equivalent to determine which bits are set.

The optional <NRf> parameter is used to specify the length of the byte/word/dword returned by the :BYTE?, :WORD? and :DWord? commands. Parameter value “0” will return the complete byte/word/dword but not include any leading zeroes. Parameter values 1 to 32 sets the length (number of digits) of the byte/word/dword. If the length is too small for the value, then the least significant digits of the byte/word/dword will be truncated.

When the :FORMat? command is sent, the response message will indicate the selected data format and the length for the returned pattern (i.e., BIN, 0).

NOTE *The OUTP:DIG:FORM command is coupled to the SENS:DIG[:DATA]:FORM command. That is, they both perform the same function. Either one of these commands can be used to set the format for returned digital I/O bit patterns.*

Digital inputs

Digital TTL inputs can be read by the Model 2700/2750. With one I/O channel set as an input port, eight input lines (bits) are available. With two channels set as input ports, 16 input lines (bits) are available. With three channels set as input ports, 24 input lines (bits) are available. And finally, with all four channels set as input ports, 32 input lines (bits) are available.

TTL inputs are read as follows:

- TTL high (>2V to 5V) is read as logic '1.'
- TTL low (<0.8V) is read as logic '0.'

NOTE A digital I/O channel must first be configured as an input port before its input lines can be read. See "Reading digital inputs," page 28, for details.

Input bit patterns

Operations to read input bit patterns are divided into two categories; basic operation and advanced operation:

Basic operation — Basic operation handles each input channel as a single 8-bit input pattern. An 8-bit pattern is known as a byte. Input bytes can be read from either the front panel or read using remote programming.

NOTE For most applications, it is only necessary to read one 8-bit input pattern (byte). When working with bytes, you do not need to concern yourself with advanced operation.

Advanced operation — Advanced operation provides additional flexibility by allowing two digital input ports to be treated as a single 16-bit input pattern (word), or all four input ports to be treated as a 32-bit input pattern (double-word). Words and a double-word can only be read using remote programming.

Basic operation — reading bytes (8-bits)

8-bit input patterns (bytes)

Each I/O channel that is set as an input port is an 8-bit binary input pattern (byte). As shown in [Figure 16](#), Bit 7 (B7) of each port is the most significant bit (MSB) and Bit 0 (B0) is the least significant bit (LSB).

From the front panel, the 8-bit output pattern for each port is read as a hexadecimal value. To determine the bit pattern, the hexadecimal value has to be converted to its binary equivalent. For example, the binary equivalent of hexadecimal 'F1' is '11110001.' For that bit pattern, Bits 0, 4, 5, 6, and 7 are set to TTL high (logic '1'). Bits 1, 2, and 3 are set to TTL low (logic '0').

For remote programming, the following command is used to read an 8-bit input pattern for each input port:

```
SENS:DIG[:DATA]:BYTE? <clist>
```

Valid channels for the byte <clist> parameter include channels 11, 12, 13, and 14.

The bit pattern can be returned as a decimal, binary, hexadecimal, or octal value. [Figure 16](#) provides decimal weighting for each bit. The binary equivalent of the returned bit pattern value directly identifies the state of each line (bit). For example, assume the following binary equivalent of a returned value for an 8-bit pattern:

```
11110000
```

The above bit pattern indicates that bits B0 through B3 are TTL low (logic '0') and bits B4 through B7 are TTL high (logic '1').

The :FORMat command sets the returned reading format for the bit pattern. For details on commands to read bit patterns, see “[Reading digital inputs — Remote programming](#),” page 28.

Advanced operation — reading words (16-bits) or double-words (32-bits)

16-bit input patterns (words)

For remote programming, there is a single command to read 16-bit patterns (words) formed by two input ports. Sixteen bits of data (two bytes) is called a word. The following command reads a word bit pattern:

```
SENS:DIG[:DATA]:WORD? <clist>
```

Valid channels for the word <clist> parameter include channels 11 and 13.

This command is used to read channel 11 or channel 13. Channel 11 is combined with channel 12 to form a 16-bit pattern, and channel 13 is combined with channel 14 to form a second 16-bit pattern.

When channel 11 is read as a word, Bit 0 (B0) of channel 11 will be the LSB, and Bit 7 (B15) of channel 12 will be the MSB. When channel 13 is read as a word, Bit 0 (B0) of channel 13 will be the LSB, and Bit 7 (B15) of channel 14 will be the MSB.

The bit pattern can be returned as a decimal, binary, hexadecimal, or octal value. [Figure 17](#) provides decimal weighting for each bit. The binary equivalent of the returned bit pattern value directly identifies the state of each line (bit). For example, assume the following binary equivalent of a returned 16-bit pattern:

```
00001111 11110000
```

The above bit pattern indicates that bits B4 through B11 are TTL high (logic ‘1’). The other bits are TTL low (logic ‘0’).

The :FORMat command sets the returned reading format for the bit pattern. For details on commands to read bit patterns, see “[Reading digital inputs — Remote programming](#),” page 28.

32-bit input pattern (double-word)

For remote programming, there is a single command to read a 32-bit pattern (double-word) formed by four input ports. Thirty-two bits of data (two words) is called a double-word. The following command reads a double-word bit pattern:

```
SENS:DIG[:DATA]:WORD? <clist>
```

The only valid channels for the double-word <clist> parameter is 13.

This command is used to read channel 11. Channel 11 is combined with channels 12, 13, and 14 to form a 32-bit pattern. When channel 11 is read as a double-word, Bit 0 (B0) of channel 11 will be the LSB, and Bit 7 (B31) of channel 14 will be the MSB.

The bit pattern can be returned as a decimal, binary, hexadecimal, or octal value. [Table 5](#) provides decimal weighting for each bit. The binary equivalent of the returned bit pattern value directly identifies the state of each line (bit). For example, assume the following binary equivalent of a returned 32-bit pattern:

```
00001111 11111111 11111111 11110000
```

The above bit pattern indicates that lines (bits) B4 through B27 are TTL high (logic ‘1’). The other bits are TTL low (logic ‘0’).

The :FORMat command sets the returned reading format for the bit pattern. For details on commands to read bit patterns, see “[Reading digital inputs — Remote programming](#),” page 28.

Reading digital inputs

Before reading a digital input pattern, an I/O channel must first be set as an input port. This can be done from the front panel or remote programming.

From the front panel, each 8-bit port is read individually. For remote programming, commands are provided to read 8-bit patterns (bytes), 16-bit patterns (words), and a 32-bit pattern (double-word).

From the front panel, the hexadecimal equivalent of the 8-bit pattern can be read for each input port. For remote programming, an input bit pattern can be read in the decimal, binary, hexadecimal, or octal format.

Front panel basic operation

NOTE *8-bit input bit patterns are set and read from the CARD menu. The following summarizes how to use this menu to set and read input patterns. For detailed information, see “CARD menu,” page 32.*

CARD: CONFIG — The CONFIG option of the CARD menu is used to set an I/O channel as an input port. The menu is accessed by pressing SHIFT, and then CARD. After selecting the CONFIG item and the slot that has the Model 7707, one or more of the digital I/O channels can be configured as an input port.

There is a menu item for every digital I/O channel. For example, assume a Model 7707 is installed in slot 1. From these menu items, a channel can be set as an input (IN) or output (OUT) port:

CHAN 111 IN/OUT

CHAN 112 IN/OUT

CHAN 113 IN/OUT

CHAN 114 IN/OUT

CARD: VIEW — The VIEW option of the CARD menu is used to read the hexadecimal equivalent of the bit patterns for the input channels. The menu is accessed by pressing SHIFT, and then CARD. After selecting the VIEW item, and the slot that has the Model 7707, the hexadecimal bit pattern values will scroll across the display. For example:

111:IN 0xFF = hexadecimal FF (decimal 255) on input port

The binary equivalent of hexadecimal FF is the ‘11111111.’ For this binary bit pattern, all 8 bits are set to TTL high to logic ‘1.’

Remote programming

Commands are available to read byte, word, and double-word bit input patterns. These commands are listed in Table 6. Details on these commands follow the table.

NOTE *Attempting to read an input pattern on an output port will generate error -221 (settings conflict). Make sure to set the appropriate I/O channels as input ports using the OUTPUT:DIGITAL:STATE command.*

Both digital input and digital output commands are summarized together in Table 7 (see “Digital I/O command summary,” page 34). A photocopy of that table serves as a handy reference to program the digital I/O.

Table 6

Commands to set and read digital inputs

Command	Description	Default
<i>Set port(s) as input or output:</i> OUTPut:DiGital :STATe , <clist> :STATe? <clist>	Path to set channels of digital I/O port: Set listed channels as input or output; 0 (off) sets channels as input ports. 1 (on) sets channels as output ports. Query port type for listed channels; 0 = input, 1 = output.	Note 1
<i>Read input port bit patterns:</i> SENSE:DiGital[:DATA] :FORMat <name>, [<NRf>] :FORMat? :BYTE ? <clist> :WORD?<clist> :DWORD? <clist>	Path to read digital input patterns: Select data format for reading digital inputs ² : <name> = ASCii Decimal format BINary Binary format HEXadecimal Hexadecimal format OCTal Octal format <NRf> = 0 Return value without leading zeros 1 to 32 Specify number of digits to return Query data format for reading digital inputs. Read byte input patterns (valid channels are 11, 12, 13, and 14). Read word input patterns (valid channels are 11 and 13). Read double-word input pattern (valid channel is 11).	Note 3
Channel list parameter: <clist> = (@SCH) where: S = Mainframe slot number (1, 2, 3, 4, or 5); CH = Module channel number (must be 2 digits) Examples: (@111) = Slot 1, Channel 11 (@511, 513) = Slot 5, Channels 11 and 13		

Notes:

- *RST and SYSTem:PRESet sets I/O channels 11, 12, 13, and 14 as input ports (0).
- The OUTPut:DiGital:FORMat command can instead be used to select data format (Table 5).
- *RST and SYSTem:PRESet have no effect on the data format for reading digital inputs.

NOTE Examples for the following commands assume a Model 7707 installed in slot 1 of the mainframe.

OUTPut:DiGital

The following OUTPut command is used to set I/O channels as input ports or output ports:

:STATe , <clist> Set I/O channel(s) as input or output
:STATe? <clist> Query port type

Use to set (or query) the specified I/O channels as either output ports or input ports. Parameter value “0” (or off) sets the channels as input ports. Parameter value “1” (or on) sets the channels as output ports.

The :STATe? <clist> command queries the port type for the specified I/O channels. A “0” or a “1” will be returned for each channel in the list:

0 = Input port
 1 = Output port

For example, the following command queries port type for I/O channels 11, 12, 13, and 14:

```
OUTP:DiG:STAT? (@111:114)
```

The response message “0, 0, 1, 1” indicates that channels 11 and 12 are input ports, and channels 13 and 14 are output ports.

SENSe:DIGital[:DATA]

Using remote programming, the Model 7707 can read four 8-bit digital patterns (bytes), two 16-bit digital patterns (words), or one 32-bit pattern. The input bit pattern can read using the decimal, binary, hexadecimal, or octal format.

:FORMat <name>, [<NRf>] Select data format for reading input patterns
:FORMat? Query data format

Select (or query) the data format for reading digital input patterns. The :BYTE?, :WORD? and :DWORD? commands are used to read digital input patterns.

The response message for :BYTE?, :WORD? and :DWORD? will be a value that corresponds to the input pattern. The binary format (BINary) allows you to directly identify which bits are set. For example, for a returned binary value of #B100101, bits B5 (MSB), B2, and B0 (LSB) are set. When using one of the other data formats, you will have to convert the returned value to its binary equivalent to determine which bits are set.

The optional <NRf> parameter is used to specify the length of the byte/word/dword returned by the :BYTE?, :WORD? and :DWORD commands. Parameter value “0” will return the complete byte/word/dword but not include any leading zeroes. Parameter values 1 to 32 sets the length (number of digits) of the byte/word/dword. If the length is too small for the value, then the least significant digits of the byte/word/dword will be truncated.

When the :FORMat? command is sent, the response message will indicate the selected data format and the length for the returned pattern (i.e., BIN, 0).

NOTE The **SENS:DIG[:DATA]:FORM** command is coupled to the **OUTP:DIG:FORM** command. That is, they both perform the same function. Either one of these commands can be used to set the format for returning digital I/O bit patterns.

:BYTE? <clist> Read input byte patterns

Use to read an 8-bit input pattern (byte) present on the specified input channel(s). Input channels 11, 12, 13, and 14 can be read as 8-bit input ports. When reading a byte, Bit B0 will be the LSB, and Bit B7 will be the MSB, as shown in [Figure 16](#).

NOTE Only channels 11, 12, 13, and 14 are valid with the :BYTE command. Using any other channel number(s) with the command generates error -221 (settings conflict).

An input pattern can be returned in the decimal, binary, hexadecimal, or octal format. For non-decimal formats, one of the following headers will accompany the returned value to identify which format is selected:

#B = Header for binary values
 #H = Header for hexadecimal values
 #Q = Header for octal values

Use the :FORMat command to select the format for reading input patterns.

Example: Assume bit pattern “00011001” is present on channel 13. The following commands will read the byte input pattern using the binary format:

```
OUTP:DIG:STAT 0, (113)           ' Set channel 13 as input port.
SENS:DIG:FORM BIN, 0           ' Select binary format (no leading zeroes).
SENS:DIG:BYTE? @113           ' Read byte bit pattern.
```

The returned response message will be “#B11001” to indicate that Bits B0, B3, and B4 of channel 113 are set to TTL high (logic ‘1’). The rest of the byte bits are set low (logic ‘0’).

:WORD? <clist> Read input word pattern(s)

Use to read a 16-bit input pattern (word) present on the specified input channel(s). Input channels 11 and 13 can be read as 16-bit input ports. Channel 11 is combined with channel 12 to form one 16-bit pattern, and channel 13 is combined with channel 14 to form a second 16-bit pattern.

NOTE Only channels 11 and 13 are valid with the :WORD command. Using any other channel number(s) with the command generates error -221 (settings conflict).

When reading a word bit pattern, both channels (11 and 12, or 13 and 14) must be configured as input ports. Otherwise, error -221 (settings conflict) will occur when the :WORD command is sent.

When channel 11 is read as a word, Bit 0 (B0) of channel 11 will be the LSB, and Bit 7 (B15) of channel 12 will be the MSB. When channel 13 is set as a word, Bit 0 (B0) of channel 13 will be the LSB, and Bit 7 (B15) of channel 14 will be the MSB. Bit positions for a word are shown in [Figure 17](#).

An input pattern can be returned in the decimal, binary, hexadecimal, or octal format. For non-decimal formats, one of the following headers will accompany the returned value to identify which format is selected:

#B = Header for binary values

#H = Header for hexadecimal values

#Q = Header for octal values

Use the :FORMat command to select the format for reading input patterns.

Example: Assume bit pattern “00001001 00010101” is present on channels 11 and 12. The following commands will read the word input pattern using the binary format:

```
OUTP:DIG:STAT 0, (111, 112)      ' Set channels 11 and 12 as input ports.
SENS:DIG:FORM BIN, 0            ' Select binary format (no leading zeroes).
SENS:DIG:WORD? @111            ' Read word bit pattern.
```

The returned response message will be “#B100100010101” to indicate that Bits B0, B2, B4, B8, and B11 for channels 11 and 12 are set to TTL high (logic ‘1’). The rest of the byte bits are set low (logic ‘0’).

:DWORD? <clist> Read input double-word pattern

Use to read a 32-bit input pattern (double-word) present on the four input ports. Input channel 11 is read to return the 32-bit pattern. Channel 11 is combined with channels 12, 13, and 14 to form one 32-bit pattern.

NOTE Only channel 11 is valid with the :DWORD command. Using any other channel with the command generates error -221 (settings conflict).

When reading a double-word bit pattern, all I/O channels (11, 12, 13, and 14) must be configured as input ports. Otherwise, error -221 (settings conflict) will occur when the :DWORD command is sent.

When channel 11 is read as a double-word, Bit 0 (B0) of channel 11 will be the LSB, and Bit 7 (B31) of channel 14 will be the MSB. Bit positions for a double-word are shown in [Figure 18](#).

An input pattern can be returned in the decimal, binary, hexadecimal, or octal format. For non-decimal formats, one of the following headers will accompany the returned value to identify which format is selected:

#B = Header for binary values
 #H = Header for hexadecimal values
 #Q = Header for octal values

Use the :FORMat command to select the format for reading input patterns.

Example: Assume bit pattern “00000001 00110010 00001001 00010101” is present on channels 11, 12, 13, and 14. The following commands will read the double-word input pattern using the binary format:

```
OUTP:DIG:STAT 0, (111:114)           ' Set channels 11, 12, 13, and 14 as input ports.
SENS:DIG:FORM BIN, 0                 ' Select binary format (no leading zeroes).
SENS:DIG:WORD? @111)                 ' Read word bit pattern.
```

The returned response message will be “#B1001100100000100 00010101” to indicate that Bits B0, B2, B4, B8, B11, B17, B20, B21, and B24 are set to TTL high (logic ‘1’). The rest of the byte bits are set low (logic ‘0’).

CARD menu

The CARD menu is used for the following operations:

- CONFIG — This menu item is used to set digital I/O channels as input or output ports. For output ports, this menu item is used to set the output bit pattern.
- VIEW — View the analog input channels that are presently closed. Also view the bit patterns (hexadecimal equivalent) for input and output channels.

Figure 19 shows the two navigation paths for the CARD menu.

As shown, the CARD menu is accessed by pressing SHIFT and then CARD. In general, the manual range keys (▲ and ▼), cursor keys (◀ and ▶) and the ENTER key are used to navigate through the menu structure.

CONFIG menu item

Figure 19A shows the menu path to configure the digital I/O channels. After the appropriate slot is selected, work your way through the menu to select a channel as an input or output port, and set the bit pattern for output ports.

VIEW menu item

Figure 19B shows the menu path to view Model 7707 channels. After the appropriate slot is selected, closed analog input channels (1 through 10, 15, 16 and 17), and digital input/output bit pattern values for channels 11, 12, 13, and 14 will scroll across the display.

The scrolling channel string is truncated by four dots (...) to indicate the end. The string of channels will scroll continuously until it is stopped by pressing a front panel key.

Example — Assume a Model 7707 installed in slot 1 and the following channel string is scrolling for the VIEW item of the menu:

```
102, 117, 111:IN 0xAA, 112:IN 0xC1, 113:OUT 0xB2, 114:OUT 0xF0 ....
```

The above channel string indicates the following:


- Analog input channels 102 and 117 are closed. Channel 117 connects the input at channel 102 to the DMM.
- Channels 111 and 112 are set as input ports. Hexadecimal value AA for channel 111 indicates bit pattern 10101010 on the input port. Hexadecimal value C1 for channel 112 indicates bit pattern 11000001 on the input port.

- Channels 113 and 114 are set as input ports. Hexadecimal value B2 for channel 113 indicates bit pattern 10110010 is set for the output port. Hexadecimal value F0 for channel 114 indicates bit pattern 11110000 is set for the output port.

NOTE The scrolling speed of the channel string is adjustable, or can be paused. The ◀ key slows down scrolling speed and the ▶ key speeds it up. The ENTER key pauses scrolling. Press ENTER a second time to resume scrolling.

To exit from VIEW, press the EXIT key. Pressing an instrument setting key will also exit VIEW, but it will also perform the operation associated with the key. For example, pressing Ω2 will exit VIEW, and select the Ω2 function.

Figure 19
CARD menu paths for Model 7707

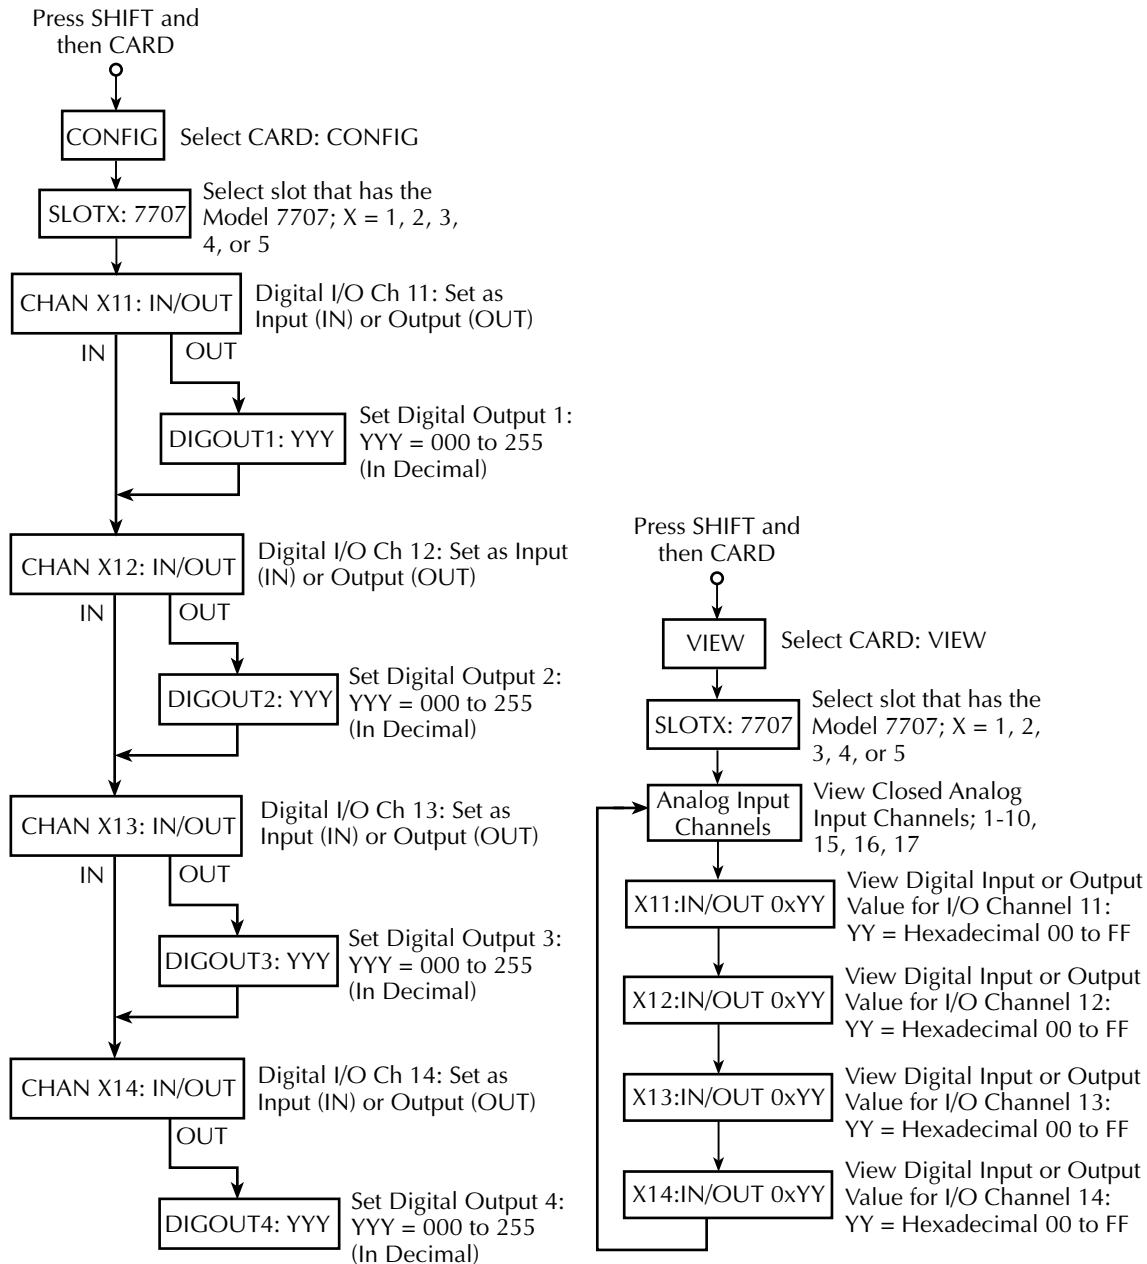

A. Configure module

B. View channels

Digital I/O command summary

The commands to control the digital I/O are summarized in [Table 7](#). A photocopy of this table serves as a handy reference to program the digital I/O.

NOTE For more information on digital input and output commands, see [Table 5](#) (outputs) and [Table 6](#) (inputs). Details follow those tables.

Table 7
Summary of digital I/O commands

Command	Description
Configure I/O ports as input or output: OUTPut:DIGital :STATe , <clist> :STATe? <clist>	Path to set digital I/O channels: Set channels as output or input ports; 1 (on) = output, 0 (off) = input. Query port type of listed channels (1 = output port, 0 = input port).
Set digital output patterns: OUTPut:DIGital :BYTE <NDN or NRf>, <clist> :BYTE? <clist> :WORD <NDN or NRf>, <clist> :WORD? <clist> :DWORd <NDN or NRf>, <clist> :DWORd? <clist> :FORMat <name>, [<NRf>] :FORMat?	Path to set digital output patterns: Set a byte output pattern (valid channels are 11, 12, 13, and 14): Query the byte bit pattern for the specified output channels. Set a word output pattern (valid channels are 11 and 13): Query digital word output pattern for channels 11 and/or 13. Set a double-word output pattern (valid channel is 11): Query digital double-word output pattern for channel 11. Select data format for reading digital outputs* : <name> = ASCii, BINary, HEXadecimal or OCTal <NRf> = 0 (no leading zeros), or 1 to 32 (# of digits to return) Query digital output data format.
Read digital input patterns: SENSE:DIGital[:DATA] :BYTE ? <clist> :WORD? <clist> :DWORd? <clist> :FORMat <name>, [<NRf>] :FORMat?	Path to read digital input patterns: Read byte input patterns (valid channels are 11, 12, 13, and 14). Read word input patterns (valid channels are 11 and 13). Read double-word input pattern (valid channel is 11). Select data format for reading digital outputs* : <name> = ASCii, BINary, HEXadecimal, or OCTal <NRf> = 0 (no leading zeros), or 1 to 32 (# of digits to return) Query digital output data format.

*The OUTP:DIG:FORM command is coupled to the SENS:DIG[:DATA]:FORM command. That is, they both perform the same function. Either one of these commands can be used to set the format for returned digital I/O bit patterns.

Service

Service for the Model 7707 includes a procedure to verify performance of analog input channels, and provides replaceable parts information.

WARNING All service information is intended only for qualified service personnel. Do not attempt to service the Model 7707 unless you are qualified to do so.

Performance verification

Use the performance verification procedure for the Model 7700.

Replaceable parts

This section contains replacement parts information and component layout drawings for the Model 7707.

Parts lists

Both electrical and mechanical parts for the Model 7707 are listed in [Table 8](#).

Ordering information

To place an order, or to obtain information concerning replacement parts, contact your Keithley representative or the factory (see inside front cover for addresses). When ordering parts, be sure to include the following information:

- Card model number (Model 7707 module).
- Card serial number.
- Part description.
- Component designation (if applicable).
- Keithley part number.

Factory service

If the instrument is to be returned to Keithley Instruments for repair, perform the following:

- Call the Repair Department at 1-888-KEITHLEY for a Return Material Authorization (RMA) number.
- Complete the service form at the back of this manual, and include it with the instrument.
- Carefully pack the instrument in the original packing carton.
- Write ATTENTION REPAIR DEPARTMENT and the RMA number on the shipping label.

Table 8
Model 7707 parts list

Circuit designation	Description	Keithley part no.
C1	CAP, 1000pF, 20%, 50V, CERAMIC (1206)	C-418-1000P
C101, C102, C103, C104	CAP, 47PF, 10%, 100V, CERAMIC (1206)	C-451-47P
C106	CAP, .01uF, 20%, 50V, CERAMIC (1206)	C-418-.01
C107-C115	CAP, 470U, 20%, 25V, ALUM ELEC	C-622-470
C2, C7, C9, C11, C13, C15, C17, C19, C21, C25, C27	CAP, .1UF, 20%, 50V CERAMIC (1206)	C-418-.1
C200-C231, C301-C304	CAP, 22PF, 10%, 100V, CERAMIC (1206)	C-451-22P
C24, C26, C28, C30, C34, C36, C38, C40	CAP, 1000P, 10%, 100V, CERAMIC (1206)	C-451-1000P
C29, C31-C33, C35, C37, C39, C41-C51	CAP, .1UF, 20%, 50V CERAMIC (1206)	C-418-.1
C3, C550, C551	CAP, 4.7U, 10%, 35V TANTALUM	C-476-4.7
C4, C5	CAP, .1UF, 20%, 50V CERAMIC (1206)	C-418-.1
C500	CAP, 100P, 10%, 100V CERAMIC	C-451-100P
C6, C8, C10, C12, C14, C16, C18, C20	CAP, 1000PF, 10%, 50V, MONO CERAMIC (0805)	C-452-1000P
C600, C601	CAP, 100P, 10%, 100V CERAMIC	C-451-100P
CR1, CR6-CR15, CR26-CR29	DIODE, DUAL SWITCHING, BAV99L (SOT-23)	RF-82
CR16, CR17	DIODE MBR5130LT3	RF-115
CR2, CR3	DUAL HIGH SPEED DIODE	RF-147
CR30-CR61	DIODE, SWITCHING, 250MA, BAV103 (SOD-80)	RF-89
FOR 7709-312A	4-40X1/4 PHILLIPS PAN HD	4-40X1/4PPH
HS100	HEAT SINK	HS-58
J1	CONN, RT ANGLE DUAL ROW RECEPT	CS-1065-1
J2	CONN, FEMALE, 25 PIN	CS-484
K11, K12	NON LATCHING RELAY	RL-242
K1-K10, K13	SINGLE COIL LATCH RELAY	RL-225
L1, L2, L3, L4, L5, L6, L100	FERRITE CHIP 600 OHM BLM32A07 (1206)	CH-62
L7-L42	CHOKES, 22UH	CH-66-22
P2	CONN, RT ANGLE, D-SUB, 50 PINS	CS-1107-1
Q1, Q2	P CHANNEL TMOSET	TG-392
Q20	TRANS, NPN PWR, TIP31 (TO-220AB)	TG-253
Q3, Q5, Q7, Q9, Q11, Q23, Q25, Q33, Q35	TRANS, PNP SILICON	TG-388
Q4, Q6, Q8, Q10, Q12, Q24, Q26, Q31, Q32, Q34, Q36	TRANS, NPN SILICON	TG-389
R1	RES, 100K, 5%, 125mW, METAL FILM (1206)	R-375-100K
R111-R118, R54-R61, R73-R80, R92-R99	RES, 10K, 1%, 1/4W METAL FILM (1206)	R-391-10K
R129, R133-R164, R5, R7, R9, R11, R36, R38, R45, R47, R72	RES, 10K, 1%, 100MW, THICK FILM (0805)	R-418-10K
R19	RES, 12.1, 1%, 1/4W METAL FILM (1206)	R-391-12.1
R2, R16, R18, R21, R40, R49, R208	RES, 1K, 5%, 125MW METAL FILM (1206)	R-375-1K
R201, R202, R210	RES ARRAY 4X4.3K, 5%, .125W	TF-276-4.3K
R203, R204, R216-R223	RES, ARRAY 4X1K 5%, .125W	TF-276-1K
R205	THICK FILM SMT	TF-276-220
R209	RES ARRAY 4X10K, 5%, .125W	TF-276-10K
R211, R212, R215, R250-R256	RES, 2.21K, 1%, 1/4W METAL FILM (1206)	R-391-2.21K
R22-R25, R30-R35	RES, 4.22K, 1%, 1/4W METAL FILM (1206)	R-391-4.22K
R26	RES, 15k, 1%, 100MW, THICK FILM (0805)	R-418-15K
R27	RES, 24.9K, 1%, 100MW, THICK FILM (0805)	R-418-24.9K
R3	RES, 1K, 1%, 100MW, THICK FILM (0805)	R-418-1K
R43, R44, R52, R53	RES, 10K, 5%, 125MW, METAL FILM (1206)	R-375-10K
R46, R48, R50, R51, R206, R207	RES, 220, 5%, 125MW, METAL FILM (1206)	R-375-220

Table 8 (cont.)


Model 7707 parts list

Circuit designation	Description	Keithley part no.
R6, R8, R10, R12-R15, R17, R37, R39, R41, R42	RES, 220, 5%, 125MW, METAL FILM (1206)	R-375-220
R62-R69, R81-R88, R100-R107, R119-R126	RES, 10K, 1%, 1/4W METAL FILM (1206)	R-391-10K
R70	RES, 6.19K, 1%, 100MW, THICK FILM (0805)	R-418-6.19K
R71	RES, 4.53K, 1%, 100MW, THICK FILM (0805)	R-418-4.53K
R91, R110	RES, 10K, 1%, 100MW, THICK FILM (0805)	R-418-10K
RV100, RV101, RV102, RV103	TRANSIENT VOLTAGE SUPPRESSOR	VR-25
U1	IC, SCHMITT-TRIGGER NAND GATE (SOIC)	IC-950
U18, U20, U26, U28	IC, OCTAL BUFFER DRIVER, 3-ST INVERT	IC-1454
U19	IC, AJD SHUNT REGULATOR, TL431CLP	IC-677
U2	IC, 2.5V CASCADABLE SERIAL EEPROM	LSI-212
U3	PROGRAM	7707-800A01
U30, U31, U35, U36, U40, U41, U45, U46	IC, PROTECTED QUAD POWER DRIVERS	IC-1212
U32, U33, U37, U38, U42, U43, U47, U48	IC, QUAD COMPARATOR, LM339D (SOIC)	IC-774
U34	IC, POS NAND GATES/INVERT, 74HCT14 (SOIC)	IC-656
U4-U7, U10-U12, U14-U17, U22-U25	IC, OCTAL D FLIP-FLOP, POS 3-ST	IC-1448
U8, U9	IC, 3-TO-8 LINE DECODE, 74ACT138 (SOIC)	IC-654
Y1	CRYSTAL CERAMIC RESONATOR, 8M	CR-59-2
	I/O MODUL 0 R	ANALOG/
	FINAL INSPECTION	7707-FIN-51
	50 5-SHELL FEMALE IDC	7707-306A
	25 D-SHELL MALE	7709-307A
	CHIPLOC BAG STATIC SHIELDING	PO-13-1
	SCANNER BOARD STAKING	7707-SCAN-31
	4-40 PEM NUT	FA-131
	MECHANICAL ASSEMBLY	7707-SCAN-MECH-3
	#4-40 X 1/4 LG. PHIL. FLAT HD. SCREW	4-40X1/4PFH
	4-40X3/16 PHIL. PAN HD SEMS	4-40X3/16PPHSEM
	BOTTOM CARD COVER	7703-301B
	TOP CARD COVER	7703-302C
	SCANNER PC BOARD ASSEMBLY	7707-100B
	SCANNER BOARD SURFACE MOUNT	7707-SCAN-1B
	BOTTOM	
	SCANNER BOARD THRU HOLE	7707-SCAN-1H
	MASS TERM BRACKET	7709-303-3A
	SCREWLOCK, FEMALE	CS-725
	SCANNER BOARD SURFACE MOUNT TOP	7707-SCAN-1T
	HOLE SIZE	7707-102B
	IC, 8 BIT MICROCONTROLLER	LSI-242
	LABEL	MC-926A
	DUAL CONN COVER	7709-312A
	SERIAL NUMBER LABEL	MC-285
	4-40X7/16 STANDOFF	ST-166-18
	FGS SHIPPING KIT	7707-SHI-41
	2700 SUPPORT SOFTWARE	2700-850B03
	PACKING LIST	PA-770A
	PACKING LIST	PA-774A

Component layout

Component layouts for the Model 7707 circuit boards are provided in [Figure 20](#) and [Figure 21](#).

Figure 20
Model 7707 component layout

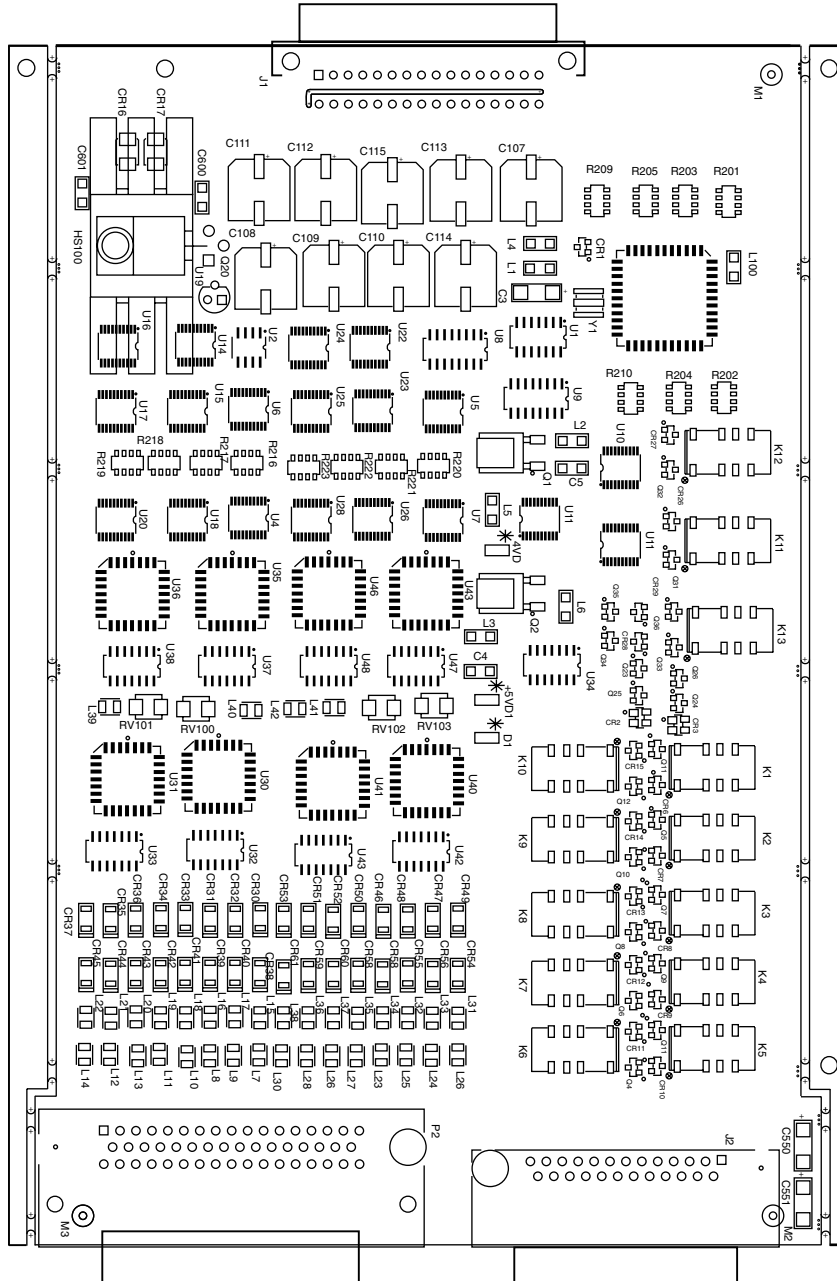

Primary Side Components (Side - 06)

Note: For component information, see 7707 Product Structure.

Specifications — 7707 Multiplexer-Digital I/O Module

GENERAL

10 CHANNELS: 10 channels of 2-pole relay input.
All channels configurable to 4-pole.

RELAY TYPE: Latching electromechanical.

ACTUATION TIME: <3ms.

FIRMWARE: Specified for Model 2700 rev. B03 and Model 2750 rev. A01.

CAPACITY: Model 2700: (1) 7707 and (1) 770X*

Model 2750: (4) 7707 and (1) 770X*


*Refer to Model 7707 Manual for measurement considerations when used with Model 7706.

CAPABILITIES

CHANNELS 1–10: Multiplex one of 10 2-pole or one of 5 4-pole signals into DMM.

CHANNELS 11–14: 32 Digital Inputs/Outputs referenced to chassis ground.

THERMAL PROTECTION: Channels 11–14 are thermally protected to 1A up to 25V.

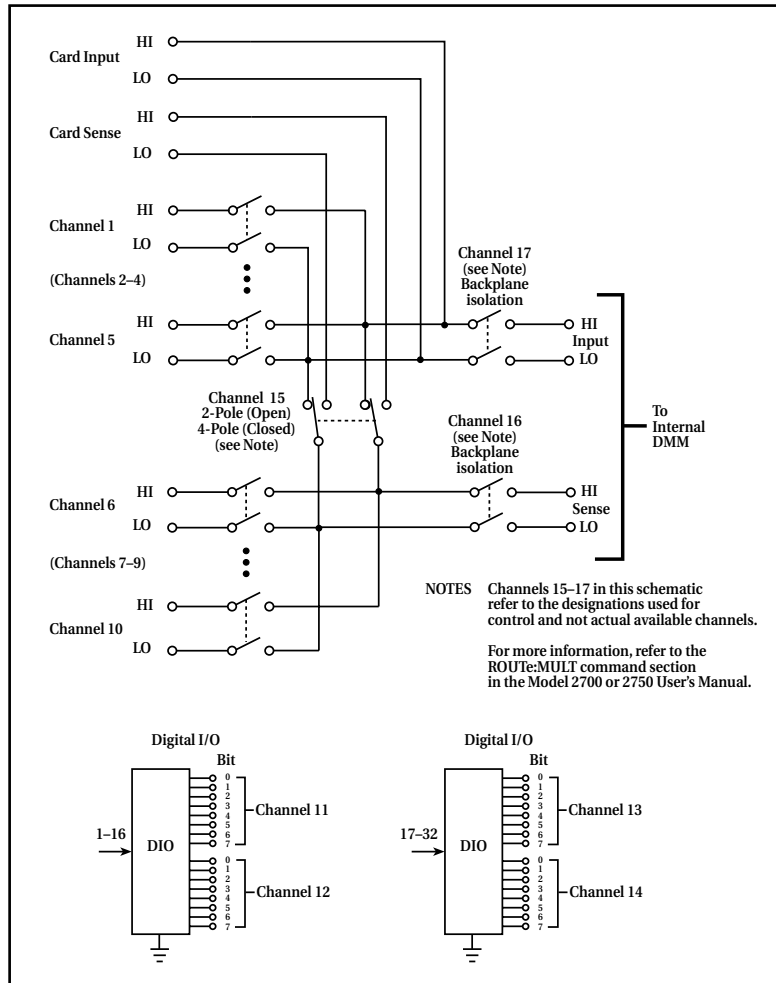

Specifications (Continued) — 7707 Multiplexer-Digital I/O Module

DIGITAL INPUT/OUTPUT (Channels 11–14)

$V_{IN}(L)$: <0.8V (TTL).

$V_{IN}(H)$: >2V (TTL).

$V_{OUT}(L)$: <1.0V @ $I_{OUT} = 100\text{mA}$.

$V_{OUT}(H)$: >2.4V @ $I_{OUT} = 1\text{mA}$.

$V_{OUT}(H)\text{MAX.}$: <40V with external open drain pull-up.

READ/WRITE SPEED: 50/s.

NOTES: When 7707 card is installed in slot 1 of the 2700 or 2750 with Channels 11-14 programmed as outputs, add the following additional uncertainty:

1. For 100VDC and 1000VDC, 30 to “PPM of Reading”.
2. For thermocouple temperature:

Refer to Model 7707 Manual for measurement consideration when used with the Model 2700, 2750, and 7708.

ENVIRONMENTAL

OPERATING ENVIRONMENT: Specified for 0°C to 50°C.
Specified to 50% R.H. at 35°C.

STORAGE ENVIRONMENT: -25°C to 65°C.

WEIGHT: <0.5kg (1.1 lbs).

ACCESSORY AVAILABLE:

Model 7790 50/50/25 Pin Female/Male D-Shell IDC Connectors

INPUTS (Channels 1–10)

MAXIMUM SIGNAL LEVEL: Any Channel to Any Channel (1–10): 300VDC or 300Vrms (425V peak) for AC waveforms, 1A switched, 60W, 125VA maximum.

SAFETY CATEGORY: Conforms to European Union Directive 73/23/EEC EN 61010-1, CAT I.

CONTACT LIFE (typ.): >10⁵ operations at max. signal level: >10⁸ operations cold switching.

CONTACT RESISTANCE: <1Ω any path and additional 1Ω at end of contact life.

CONTACT POTENTIAL: <6μV typical per contact pair and additional 5μV with Channels 11–14 at rate $V_{OUT}(L)$.

OFFSET CURRENT: <100pA.

CONNECTOR TYPE: 50-pin male D-shell, Channels 11–14.

25-pin female D-shell, Channels 1–10.

Supplied with female and male IDC ribbon cable connectors.

ISOLATION BETWEEN ANY TWO TERMINALS: >10⁹Ω, <100pF with isolation channels 16 and 17 open.

ISOLATION BETWEEN ANY TERMINAL AND EARTH: > 10⁹Ω, <200pF

CROSS TALK (10MHz, 50Ω Load): <-35dB.

INSERTION LOSS (50Ω Source, 50Ω Load): <0.1dB below 1MHz.

<3dB below 2MHz.

COMMON MODE VOLTAGE: 300VDC or 300Vrms (425V peak) for AC waveforms between any terminal and chassis.

Specifications are subject to change without notice.

Measurement considerations (digital outputs)

The Model 7707 digital outputs provide thermal short circuit protection. That is, when a channel is programmed as an output, internal circuitry will be protected from an inadvertent connection up to 1A at 25V.

The protection on the Model 7707 consumes power at approximately 80mA per channel or 320mA per Model 7707 with all four channels (11-14; 32-bits) programmed as outputs. Generated heat is dissipated within the Model 7707 module and Model 2700 or 2750 mainframes.

As a result of the power (current) consumption and heat dissipation, adhere to the following guidelines.

Capacity

Model 2700 Multimeter/Data Acquisition System — The Model 2700 can provide power, up to a total of 350mA, for both module slots. This is sufficient power to properly operate a Model 7707 with any Model 770X module, except the Model 7706 all-in-one module. The Model 7706 consumes power at approximately 180mA. Power consumption of the Model 7706 is independent of digital channels Output State. Therefore, when the Model 7707 is used with the Model 7706, only two Model 7707 Digital I/O channels can be programmed as outputs (16 bits). Failure to adhere to these limitations will cause erratic operations, such as resetting the Model 2700 internal microprocessors.

Model 2750 Multimeter Switch System — The Model 2750 can provide power, up to a total of 1.3A, for the five module slots. This is sufficient power for up to four Model 7707s and one other switching module. The capacity limits, when using four Model 7707s, are as follows:

- Four Model 7707s and one Model 770X (except Model 7706) – There is sufficient power to properly operate up to 4 Model 7707s (128 bits) with any Model 770X module, except the Model 7706.
- Four Model 7707s and one Model 7706 – Four Model 7707s can be used with a Model 7706 but not all digital channels of the Model 7707 can be used since power for Model 7706 must be factored in. The Model 7706 has two output channels (16 bits). That leaves 112 bits available for use by the Model 7707s. For example, 14 digital channels (112 bits) on four Model 7707s can be programmed as outputs.

NOTE When a digital channel on the Model 7707 is programmed as an input or off, no power is consumed and capacity limitations do not apply.

Additional measurement uncertainty

On the Model 7707, additional heat is dissipated when the digital channels are programmed as outputs. This heat can cause additional uncertainty in thermocouple temperature measurements in the Models 2700, 2750, and 7708 Thermocouple Module when more than two digital channels are programmed as outputs.

The amount of uncertainty is dependent on slot number location of the Model 7707, the amount of time the channel is programmed as an output, and the other Model 770X module being used. The following table lists additional uncertainty to the published specification for the Model 2700 and 2750 (front terminals), and the Model 7708. Other modules, such as the Model 7700 that measures thermocouple temperature, are also affected by this heat, but are still within published specification.

NOTE The listed uncertainty is with Channel 11-14 programmed as outputs. The uncertainty is linear. That is, for each channel programmed as input or off, there will be approximately 25% reduction in the listed uncertainty.

Table 9
Additional uncertainty for Model 7708

Thermocouple	Range	2700 front terminals	2750 front terminals	7708
J	-200 to 0°C 0 to +768°C	0.7 0.1	0.4	
K	-200 to 0°C 0 to +1372°C	0.5 0.2		1.6
N	-200 to 0°C 0 to +1300°C	0.8 0.2	0.3	3.0 0.5
T	-200 to 0°C 0 to +400°C	0.5 0.1	0.1	1.5
E	-200 to 0°C 0 to +1000°C	0.2		0.6
R	0 to +400°C +400 to +1768°C	1.2 0.4	0.3 2.2	5.9
S	0 to +400°C +400 to +1768°C	1.3 0.4	0.5 2.6	5.7
B	+350 to +1100°C +1100 to +1820°C	1.8 0.5	1.1	9.4 2.4

Notes:

1. The above listed uncertainties are guaranteed by design for types J, K, N, T, E, R, S and B.
2. When the 7707 and 7708 are used together, 7707 must be installed in the lowest numbered slot.

For example: Model 2700: 7707 in slot 1

7708 in slot 2

Model 2750: 7707 in slot 2

7708 in slot 3

Specifications are subject to change without notice.

All Keithley trademarks and trade names are the property of Keithley Instruments, Inc. All other trademarks and trade names are the property of their respective companies.

KEITHLEY

Keithley Instruments, Inc.

28775 Aurora Road • Cleveland, Ohio 44139 • 440-248-0400 • Fax: 440-248-6168
1-888-KEITHLEY (534-8453) • www.keithley.com

Sales Offices: BELGIUM:

Bergensesteenweg 709 • B-1600 Sint-Pieters-Leeuw • 02-363 00 40 • Fax: 02/363 00 64

CHINA:

Yuan Chen Xin Building, Room 705 • 12 Yumin Road, Dewai, Madian • Beijing 100029 • 8610-6202-2886 • Fax: 8610-6202-2892

FINLAND:

Tietäjäsentie 2 • 02130 Espoo • Phone: 09-54 75 08 10 • Fax: 09-25 10 51 00

FRANCE:

3, allée des Garays • 91127 Palaiseau Cédex • 01-64 53 20 20 • Fax: 01-60 11 77 26

GERMANY:

Landsberger Strasse 65 • 82110 Germering • 089/84 93 07-40 • Fax: 089/84 93 07-34

GREAT BRITAIN:

Unit 2 Commerce Park, Brunel Road • Theale • Berkshire RG7 4AB • 0118 929 7500 • Fax: 0118 929 7519

INDIA:

Flat 2B, Willocrissa • 14, Rest House Crescent • Bangalore 560 001 • 91-80-509-1320/21 • Fax: 91-80-509-1322

ITALY:

Viale San Gimignano, 38 • 20146 Milano • 02-48 39 16 01 • Fax: 02-48 30 22 74

JAPAN:

New Pier Takeshiba North Tower 13F • 11-1, Kaigan 1-chome • Minato-ku, Tokyo 105-0022 • 81-3-5733-7555 • Fax: 81-3-5733-7556

KOREA:

2FL., URI Building • 2-14 Yangjae-Dong • Seocho-Gu, Seoul 137-888 • 82-2-574-7778 • Fax: 82-2-574-7838

NETHERLANDS:

Postbus 559 • 4200 AN Gorinchem • 0183-635333 • Fax: 0183-630821

SWEDEN:

c/o Regus Business Centre • Frosundaviks Allé 15, 4tr • 169 70 Solna • 08-509 04 679 • Fax: 08-655 26 10

SWITZERLAND:

Kriesbachstrasse 4 • 8600 Dübendorf • 01-821 94 44 • Fax: 01-820 30 81

TAIWAN:

1FL., 85 Po Ai Street • Hsinchu, Taiwan, R.O.C. • 886-3-572-9077 • Fax: 886-3-572-9031