


KENWOOD

CD-2280M/CD-2260M CD Changer Quick-Start Guide

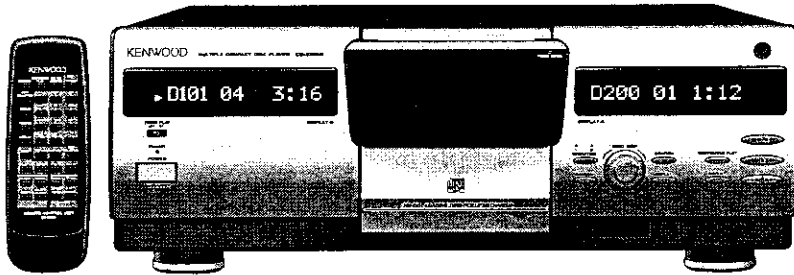


In this guide we'll show you:

- * How to use Simultaneous Dual-Room Play and Continuous Play (CD-2280M)
- * How to mute DTS CDs during Continuous Play (CD-2280M)
- * How to enter disc and track names
- * How to set up the VR-2090 receiver for Dual-Room Play with the CD-2280M

Simultaneous Dual-Room Play (CD-2280M only)

The CD-2280M has dual disc transports. Transport A plays through analog output A and the digital output; transport B plays through analog output B. You can play discs on both transports at the same time for Simultaneous Dual-Room Play.

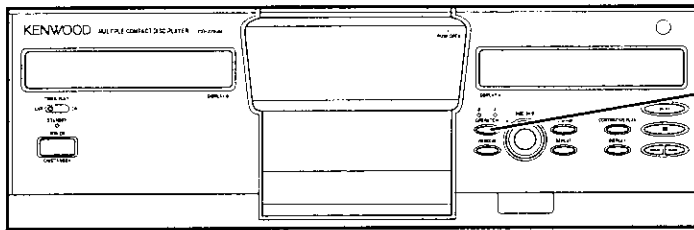

To activate either transport, press the front-panel **OPERATION** button.


The A and B indicators above the button will light accordingly

The player's front-panel transport controls will operate the active transport

Continuous Play (CD-2280M only)

By alternating between its two disc transports, the CD-2280M can play tracks continually without any interruption between tracks

1. Select Transport A (see above)
2. Press **PLAY**, or activate one of the following playback modes:
All Disc
Random Play
Memory Play
Music Type Play
Best Selection Play

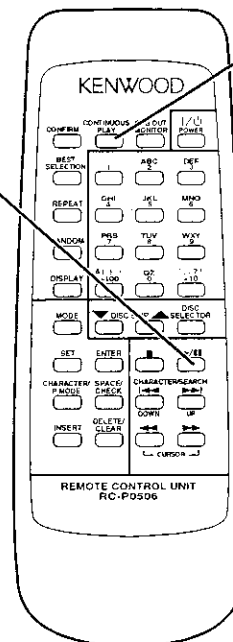

3. Press **CONTINUOUS PLAY**
The display reads:
CONTINUOUS PLAY

Note:

- * During Continuous Play the same signal plays from analog outputs A and B
- * The digital output is not used during Continuous Play
- * DTS CDs that are muted by the user (see next page) will be skipped during Continuous Play so that digital noise is not sent through the analog output


CD-2280M/CD-2260M CD Changer Quick-Start Guide

Muting DTS CDs During Continuous Play (CD-2280M only)

DTS Multi-Channel Music CDs contain information that plays through the CD-2280M's digital output only.

To prevent digital noise from being played through the analog outputs during Continuous Play or when listening to music in Room B of a Dual-Room installation, the user must "mute" DTS-encoded CDs so that they can be automatically skipped.

When playing DTS music CDs, make sure you have activated the digital input on your receiver or decoder.

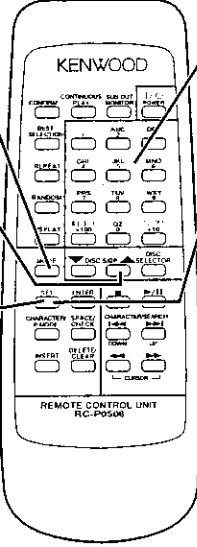- 
1. Press **MODE**
The display reads:
TITLE INPUT
 2. Press **DISC SKIP** until
the display reads:
DTS ANALOG MUTE
 3. Press **SET**
The display flashes:
MUTE ON
 4. Press **SET** again
The display stops flash-
ing and changes to:
SELECT DISC
 5. Use the 10-key pad
to select the disc
The display flashes:
DXXX MUTE ON
 6. Press **SET**
The display stops
flashing and reads:
DXXX MUTE ON
 7. Repeat steps 1-6 for
each DTS-encoded
CD

To Un-Mute a DTS CD:

Repeat steps 1-6, but after step 3, press **DISC SKIP**. The display will flash:

MUTE OFF

Then proceed with steps 4-7.


Naming Discs and Tracks

Discs can be given disc names (up to 25 characters), and up to 20 tracks per disc can also be named (up to 15 characters each).

Although the most convenient time to enter disc and track names is when you insert the discs into the player for the first time, (that way the player keeps track of the disc names for you as you insert the discs), you can use this procedure to enter or change disc and track names any time you want.

These instructions explain how to enter disc names when you insert the discs into the player for the first time.

A Open the loading door and leave it open for this entire operation

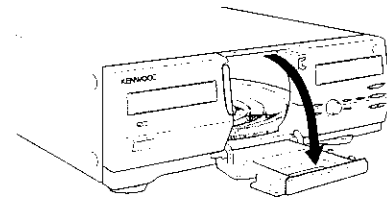

B Select an empty disc slot

Enter the disc number directly on the 10-key pad,

Then press **ENTER**


OR:

Use the **DISC SKIP** buttons to select the disc

The disc tray will rotate so that the slot is in the loading position, and the display will show the disc number:
DXXX



C Insert a CD in the empty slot. Make sure the label faces towards your right.

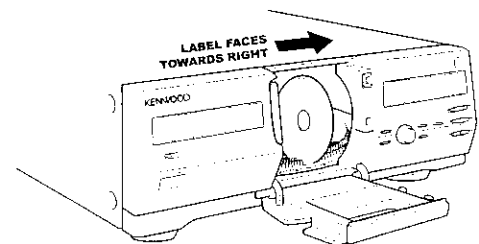

CD-2280M/CD-2260M CD Changer Quick-Start Guide

D Enter the disc name

1: Press **MODE**. The display flashes:
TITLE INPUT

2: Press **SET**. The display reads:
D--- T-- SELECT
then the disc number you selected will flash:
DXXX

3: Press **SET** again. The display will stop flashing and will change to the alphanumeric character display:
=>ZABC

4: Use the 10-key pad to select characters (see step 8 for details)

5: Use **CHARACTER/P.MODE** to shift between capital letters, lowercase letters and numbers/symbols

6: Use **SPACE/CHECK** to enter spaces

7: If you make a mistake, use **DELETE/CLEAR** to erase your last entry

8: Press a button once, twice or three times to select the different characters shown above it. The selected character flashes on the display. (You can also use the **CHARACTER SEARCH** buttons to select characters.)

9: After selecting each character, press **SET** to enter it

10: Press **ENTER**

The display reads:
TITLE STORE!!


11: The display then switches to show the disc number, and the first track number flashes:
DXXX T01

To enter track names:

12: Repeat steps 3-10

13: The display then switches to show the disc number, and the next track number flashes:
DXXX T02

14: Repeat steps 3-10 for each track on the disc.

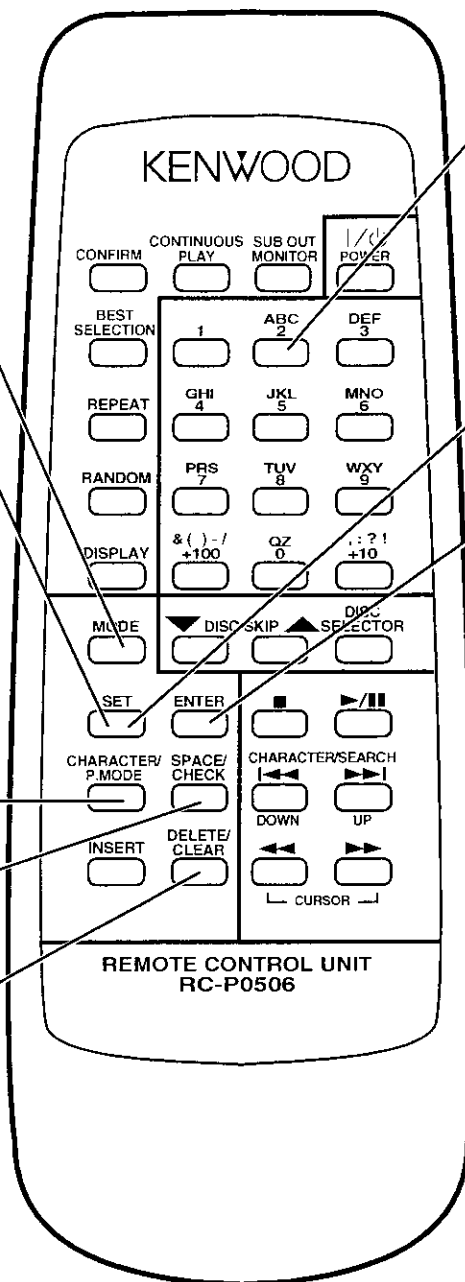


CD-2280M/CD-2260M CD Changer Quick-Start Guide

Setting-up the VR-2090 for Dual-Room operation with the CD-2280M


If you're using a CD-2280M with a VR-2090 receiver in a dual-room installation, you need to use the PowerPad remote to set up the CD2/Tape2 input of the VR-2090 for CD2

1 Select MAIN MENU, then select SETUP

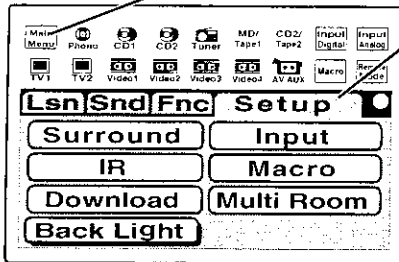


* The **SETUP** menu automatically appears

2 Select MULTI ROOM

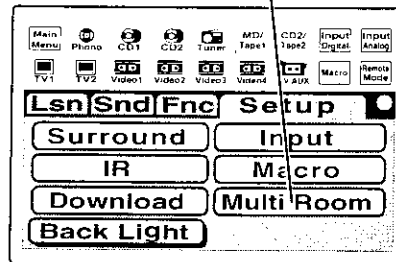


* The **MULTI-ROOM** menu automatically appears

3 Select the MULTI-ROOM icon

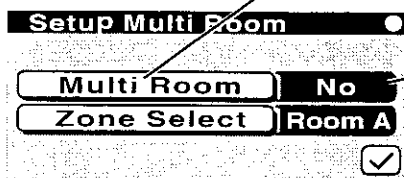


* The display box changes to

4 Select the check-mark

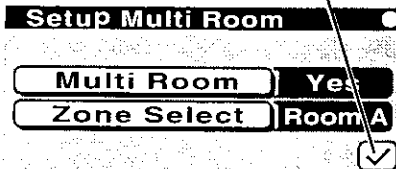


* The **SETUP** menu reappears

5 Select the INPUT icon

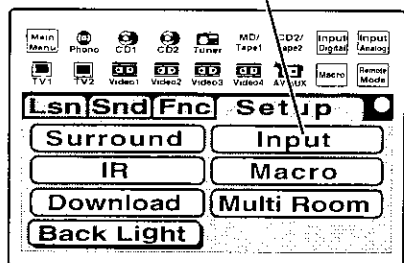

* The **INPUT** menu automatically appears

6 Select the CD2/TAPE2 icon

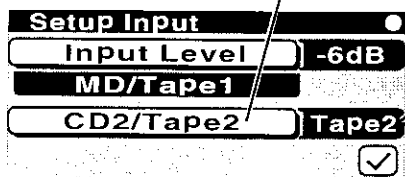

* The display box changes to

Note:

Program both PowerPad's CD1 and CD2/Tape2 inputs to control the CD-2280M using IR code number '8992'. For programming instructions see the PowerPad Remote Commander Quick-Start Guide, or page 21 of the VR-2090/VR-2080 instruction manual.