

# KENWOOD

## DDX7015 DDX7045

---

MONITOR WITH DVD RECEIVER

### INSTRUCTION MANUAL

MONITEUR ET LECTEUR DVD INTEGRE

### MODE D'EMPLOI

MONITOR CON RECEPTOR DVD

### MANUAL DE INSTRUCCIONES

KENWOOD CORPORATION

**SIRIUS HD Radio**  
R E A D Y R E A D Y



<b>Before Use</b> .....	<b>4</b>	<b>TV Control</b> .....	<b>34</b>	<b>Setup Menu</b> .....	<b>57</b>	<b>Sound Effects Menu</b> .....	<b>84</b>
<b>About discs</b> .....	<b>6</b>	<ul style="list-style-type: none"> <li>• Displaying the TV Picture screen</li> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the TV Control screen</li> <li>• Displaying the TV Menu screen</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Control screen</li> <li>• Displaying the Setup Menu screen</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Control screen</li> <li>• Displaying the Sound Effects Menu screen</li> </ul>	
<b>Notes on playing MP3/WMA</b> .....	<b>7</b>	<ul style="list-style-type: none"> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Preset Select</li> <li>• Set Station Name</li> <li>• Direct Search</li> </ul>		<b>Audio Set Up</b> .....	<b>58</b>	<b>Audio Control</b> .....	<b>85</b>
<b>DDX7015/7045 Basic operation</b> .....	<b>8</b>			<ul style="list-style-type: none"> <li>• Displaying the Audio Set Up screen</li> <li>• Crossover Network Setup</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Audio Control 1 screen</li> <li>• Displaying the Audio Control 2 screen</li> </ul>	
<b>Basic Operations of Remote Controller</b> .....	<b>10</b>			<b>Audio Set Up</b> .....	<b>60</b>	<b>Equalizer</b> .....	<b>86</b>
<b>Switch Screen Mode</b> .....	<b>12</b>			<ul style="list-style-type: none"> <li>• Displaying the Car Type Set Up screen</li> <li>• Displaying the Speaker Set Up screen</li> <li>• Displaying the Channel Level screen</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Equalizer screen</li> <li>• Tone curve setup</li> <li>• Parametric Equalizer</li> </ul>	
<b>Control during DVD Video or Video CD Playback</b> .....	<b>14</b>			<ul style="list-style-type: none"> <li>• Channel Level</li> <li>• DTA Setup</li> <li>• High Pass Filter Setup</li> <li>• Low Pass Filter Setup</li> </ul>		<b>Zone Control</b> .....	<b>90</b>
<ul style="list-style-type: none"> <li>• Displaying the DVD/VCD Playback screen</li> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the DVD-V/DVD-A/VCD Control screen</li> <li>• DVD Disc Menu</li> <li>• VCD Zoom Control</li> <li>• Information Display</li> <li>• Direct Search</li> </ul>		<b>SIRIUS Tuner Control</b> .....	<b>38</b>	<b>DVD Setup</b> .....	<b>66</b>	<ul style="list-style-type: none"> <li>• Displaying the Zone Control screen</li> </ul>	
<ul style="list-style-type: none"> <li>• Displaying the DVD/VCD Playback screen</li> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the DVD-V/DVD-A/VCD Control screen</li> <li>• DVD Disc Menu</li> <li>• VCD Zoom Control</li> <li>• Information Display</li> <li>• Direct Search</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the SIRIUS Tuner Control screen</li> <li>• Displaying the SIRIUS Tuner Menu</li> <li>• Channel Search</li> <li>• Channel Memory</li> <li>• Direct Channel Search</li> <li>• Information Display</li> </ul>	<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the SIRIUS Tuner Control screen</li> <li>• Displaying the SIRIUS Tuner Menu</li> <li>• Channel Search</li> <li>• Channel Memory</li> <li>• Direct Channel Search</li> <li>• Information Display</li> </ul>	<ul style="list-style-type: none"> <li>• Displaying the DVD SETUP 1 screen</li> <li>• Displaying the DVD SETUP 2 screen</li> <li>• Language Setup</li> <li>• Parental Level Setup</li> </ul>		<b>Digital Effec</b> .....	<b>91</b>
<b>Tuner Control</b> .....	<b>20</b>			<b>System Setup</b> .....	<b>70</b>	<ul style="list-style-type: none"> <li>• Displaying the Digital Effect screen</li> </ul>	
<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the Tuner Control screen</li> <li>• Displaying the Tuner Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Preset Select</li> <li>• Set Station Name</li> <li>• Direct Search</li> <li>• Traffic Information</li> <li>• Search for Program Type</li> <li>• Radio Text</li> </ul>		<b>HD Radio Control</b> .....	<b>42</b>	<ul style="list-style-type: none"> <li>• Displaying the System 1 screen</li> <li>• Displaying the System 2 screen</li> </ul>		<b>Position</b> .....	<b>92</b>
<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the Tuner Control screen</li> <li>• Displaying the Tuner Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Preset Select</li> <li>• Set Station Name</li> <li>• Direct Search</li> <li>• Traffic Information</li> <li>• Search for Program Type</li> <li>• Radio Text</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the HD Radio Control screen</li> <li>• Displaying the HD Radio Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Receive Mode</li> <li>• Title Display</li> </ul>	<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the HD Radio Control screen</li> <li>• Displaying the HD Radio Menu screen</li> <li>• Seek Mode</li> <li>• Auto Memory</li> <li>• Manual Memory</li> <li>• Receive Mode</li> <li>• Title Display</li> </ul>	<ul style="list-style-type: none"> <li>• Displaying the DVD SETUP 1 screen</li> <li>• Displaying the DVD SETUP 2 screen</li> <li>• Language Setup</li> <li>• Parental Level Setup</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Position screen</li> </ul>	
<b>CD/MP3/WMA/Disc Changer Play Control</b> .....	<b>26</b>			<b>DAB Tuner control</b> .....	<b>46</b>	<b>Glossary</b> .....	<b>94</b>
<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the CD/MP3/WMA/Disc Changer Control screen</li> <li>• Displaying the CD/MP3/WMA/Disc Changer Menu screen</li> <li>• Set Disc Name</li> <li>• Select Folder (during MP3/WMA play)</li> <li>• ID3/WMA TAG Display (during MP3/WMA play)</li> <li>• Disc Select (during play by disc changer)</li> <li>• Direct Search</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the DAB Tuner Control screen</li> <li>• Displaying the DAB Tuner Menu screen</li> <li>• Seek Mode</li> <li>• Auto Ensemble Memory</li> <li>• Service Preset Memory</li> <li>• Service Select</li> <li>• Language Filter</li> <li>• Search for Program Type</li> <li>• DAB Information</li> <li>• DAB Announcement</li> </ul>	<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the DAB Tuner Control screen</li> <li>• Displaying the DAB Tuner Menu screen</li> <li>• Seek Mode</li> <li>• Auto Ensemble Memory</li> <li>• Service Preset Memory</li> <li>• Service Select</li> <li>• Language Filter</li> <li>• Search for Program Type</li> <li>• DAB Information</li> <li>• DAB Announcement</li> </ul>	<ul style="list-style-type: none"> <li>• Displaying the System 1 screen</li> <li>• Displaying the System 2 screen</li> </ul>		<b>Troubleshooting Guide</b> .....	<b>95</b>
<b>Mute Telephone</b> .....	<b>33</b>			<b>Weather Band Tuner Control</b> .....	<b>52</b>	<b>Specifications</b> .....	<b>100</b>
<ul style="list-style-type: none"> <li>• Mute Telephone</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the Weather Band Tuner Control screen</li> </ul>		<ul style="list-style-type: none"> <li>• Displaying the Easy Control Panel</li> <li>• Displaying the Weather Band Tuner Control screen</li> </ul>			
		<b>Character Entry</b> .....	<b>54</b>				
		<ul style="list-style-type: none"> <li>• How To Use the Character Entry screen</li> </ul>					
		<b>Source Select</b> .....	<b>55</b>				
		<ul style="list-style-type: none"> <li>• Displaying the Control screen</li> <li>• Displaying the Source Select screen</li> </ul>					
		<b>Adjusting the Monitor Display Position and Quality</b> .....	<b>56</b>				
		<ul style="list-style-type: none"> <li>• Displaying the Screen Control screen</li> <li>• Displaying the Tilt Control screen</li> </ul>					

# Before Use

## ⚠ WARNING

### To prevent injury and/or fire, take the following precautions:

- Ensure that the unit is securely installed. Otherwise it may fly out of place during collisions and other jolts.
- When extending the ignition, battery or ground wires, make sure to use automotive-grade wires or other wires with an area of 0.75mm<sup>2</sup> (AVG18) or more to prevent cable deterioration and damage to the cable coating.
- To prevent short circuits, never put or leave any metallic objects (e.g., coins or metal tools) inside the unit.
- If the unit starts to emit smoke or strange smells, turn off the power immediately and consult your Kenwood dealer.
- Do not touch the liquid crystal fluid if the LCD is damaged or broken due to shock. The liquid crystal fluid may be dangerous to your health or even fatal. If the liquid crystal fluid from the LCD contacts your body or clothing, wash it off with soap immediately.


## ⚠ CAUTION

### To prevent damage to the machine, take the following precautions:

- Make sure to ground the unit to a negative 12V DC power supply.
- Do not open the top or bottom covers of the unit.
- Do not install the unit in a spot exposed to direct sunlight or excessive heat or humidity. Also avoid places with too much dust or the possibility of water splashing.
- Do not subject the faceplate to excessive shock, as it is a piece of precision equipment.
- When replacing a fuse, only use a new one with the prescribed rating. Using a fuse with the wrong rating may cause your unit to malfunction.
- To prevent short circuits when replacing a fuse, first disconnect the wiring harness.
- Do not use any screws except for the ones provided. The use of improper screws might result in damage to the main unit.
- You cannot view video pictures whilst the vehicle is moving. To enjoy TV/video pictures, find a safe place to park and engage the parking brake.

## NOTE

- If you experience problems during installation, consult your Kenwood dealer.
- If the unit does not seem to be working right, try pressing the reset button first. If that does not solve the problem, consult your Kenwood dealer.

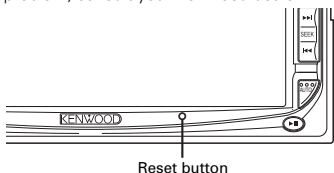

### Screen brightness during low temperatures

When the temperature of the unit falls such as during winter, the liquid crystal panel's screen will become darker than usual. Normal brightness will return after using the monitor for a whilst.

### Audio units you can control from the DDX7015/7045 Receiver (in November of 2003):


KDC-CX89, KDC-CX87, KDC-CX85, KDC-C719, KDC-C717, KDC-C715, KDC-C669, KDC-C667, KDC-C665, KDC-C469, KDC-C467, KDC-C465, KDC-D301, KTC-9090DAB, KDV-C830, KDV-C840, KDV-C860, KDC-CX89, KTC-SR901, KTC-SR902, KPA-CP100, KTC-WB100, KTC-V500N/P/E (Set the "O-N" switch to "N" position if provided.)

### Navigation units you can control from the DDX7015/7045 Receiver (in November of 2003):

KNA-DV2100, KNA-DV3100

### Loading and Replacing the battery

Use one lithium battery (CR2025). Insert the batteries with the ⊕ and ⊖ poles aligned properly, following the illustration inside the case.

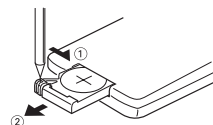

## ⚠ WARNING

Store unused batteries out of the reach of children. Contact a doctor immediately if the battery is accidentally swallowed.

- ⚠ Do not set the remote on hot places such as above the dashboard.
- 🗨️ The provided batteries are intended for use in operation checking, and their service life may be short.
- When the remote controllable distance becomes short, replace both of the batteries with new ones.

### Cleaning the panel and monitor

When the operator panel and monitor panels are dirty, wipe and clean them using a soft cloth (such as a commercially available silicon coated cloth). When contaminated excessively, clean them using a cloth dipped in a neutral detergent first, then remove the detergent using a dry cloth.

Do not use a hard cloth and a volatile chemical (such as an alcohol). If used, the panel surface may be scratched or printed letters may be erased.

### Cleaning the disc slot


As dust can accumulate in the disc slot, clean it occasionally. Your discs can get scratched if you put them in a dusty disc slot.

### Lens Fogging

Right after you turn on the car heater in cold weather, dew or condensation may form on the lens in the disc player of the unit. Called lens fogging, discs may be impossible to play. In such a situation, remove the disc and wait for the condensation to evaporate. If the unit still does not operate normally after a whilst, consult your Kenwood dealer.

### Region codes in the world

The DVD players are given a region code according to the country or area it is marketed, as shown in the following map.

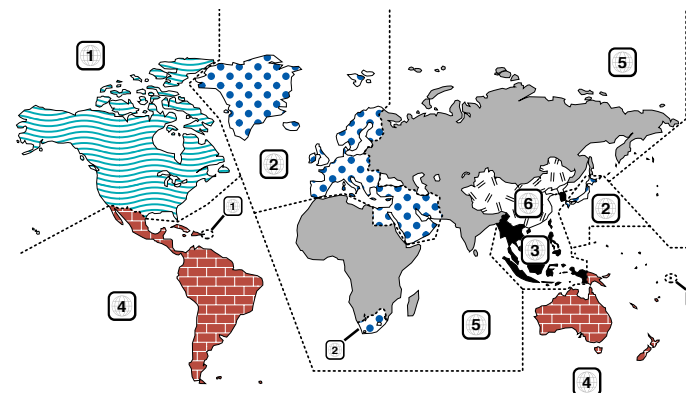

### Icons on the DVD discs

Icon	Description
	Indicates the region code where the disc can be played.
	Number of voice languages recorded with the audio function. The number in the icon indicates the number of voice languages. (Max. 8 languages)
	Number of subtitle languages recorded with the subtitle function. The number in the icon indicates the number of subtitle languages. (Max. 32 languages)
	Number of angles provided by the angle function. The number in the icon indicates the number of angles. (Max. 9 angles)
	Aspect ratios that can be selected. "LB" stands for Letter Box and "PS" for Pan/Scan. In the example on the left, the 16:9 video can be converted into letter box video.

### Unplayable discs

This player cannot play back any of the following discs.

- DVD-ROM/DVD-RAM discs
- CDV discs (Only the audio part can be reproduced)
- Photo CD discs
- HQ-VCD discs
- CD-G/CD-EG/CD-EXTRA discs (Only the audio can be reproduced)
- DVD-Audio

Also, you cannot play back the DVD-R/RW and DVD+R/RW discs if not recorded in the DVD-Video format.

### Restrictions due to difference between discs

Some DVD and VCD discs can be played only in certain playback modes according to the intentions of the software producers. As this player plays discs according to their intentions, some functions may not work as intended by you. Please be sure to read the instructions provided with each disc. When an inhibition icon is displayed on the monitor, it indicates that the disc being played is under the restriction as described above.



The illustrations of the display and the panel appearing in this manual are examples used to explain more clearly how the controls are used. Therefore, what appears on the display in the illustrations may differ from what appears on the display on the actual equipment, and some of the illustrations on the display may represent something impossible in actual operation.


### Explanation of icons used on this manual

- Indicates the key operation on the receiver.
- Indicates the button you must touch.
- Indicates the key or joystick operation on the remote controller.
- The initial value of each setup is shown.
- Gives an additional information or an operation advice.

# About discs

### Handling discs


- Don't touch the recording surface of the disc.

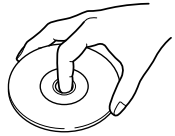

- CD-R/RW, DVD-R/RW, and DVD+R/RW are easier to damage than a normal music CD. Use a CD-R/RW, DVD-R/RW, or DVD+R/RW after reading the caution items on the package etc.
- Don't stick tape etc. on the disc. Also, don't use a disc with tape stuck on it.

### When using a new disc

If the disc center hole or outside rim has burrs, use it after removing them with a ball pen etc.

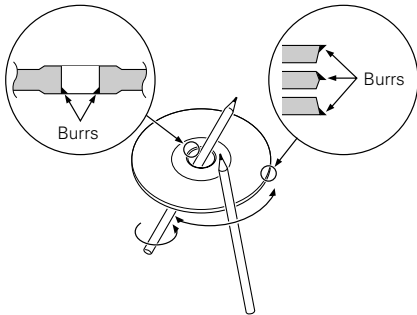


### Disc accessories

Don't use disc type accessories.

### Disc cleaning

 Clean from the center of the disc and move outward.




### Removing discs

When removing discs from this unit pull them out horizontally.

### Discs that can't be used

- Discs that aren't round can't be used.

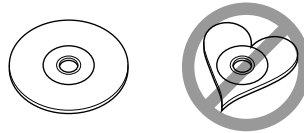

- Discs with coloring on the recording surface or that are dirty can't be used.
- This unit can only play the CDs with . It may not correctly play discs which do not have the mark.
- A CD-R or CD-RW that hasn't been finalized can't be played. (For the finalization process refer to your CD-R/CD-RW writing software, and your CD-R/CD-RW recorder instruction manual.)

### Disc storage

- Don't place them in direct sunlight (On the seat or dashboard etc.) and where the temperature is high.
- Store discs in their cases.

# Notes on playing MP3/WMA

This unit can play MP3 (MPEG1, 2 Audio Layer 3)/WMA.

Note, however, that the MP3/WMA recording media and formats acceptable are limited. When writing MP3/WMA, pay attention to the following restrictions.

### Acceptable media

The MP3/WMA recording media acceptable to this unit are CD-ROM, CD-R, and CD-RW. When using CD-RW, do full format not quick format to prevent malfunction.

### Acceptable medium formats

The following formats are available for the media used in this unit. The maximum number of characters used for file name including the delimiter (".") and three-character extension are indicated in parentheses.

- ISO 9660 Level 1 (12 characters)
- ISO 9660 Level 2 (31 characters)
- Joliet (64 characters)
- Romeo (128 characters)

Up to 170 characters can be displayed in the long file name format. For a list of available characters, see the instruction manual of the writing software and the section Entering file and folder names below.

The media reproducible on this unit has the following limitations:

- Maximum number of directory levels: 8
  - Maximum number of files per folder: 255
  - Maximum number of characters for folder name: 64
  - Maximum number of folders: 100
- MP3/WMA written in the formats other than the above may not be successfully played and their file names or folder names are not properly displayed.

### Settings for your MP3/WMA encoder and CD writer

Do the following setting when compressing audio data in MP3/WMA data with the MP3/WMA encoder.

- Transfer bit rate: MP3: 8 — 320 kbps  
WMA: 48 — 192 kbps
- Sampling frequency: MP3: 32, 44.1, 48 kHz  
WMA: 32, 44.1, 48 kHz

When you use your CD writer to record MP3/WMA up to the maximum disc capacity, disable additional writing. For recording on an empty disc up to the maximum capacity at once, check Disc at Once.

Play mode may not be possible when portions of the functions of Windows Media Player 9 or higher are used.

### Entering ID3 tag

The Displayable ID3 tag is ID3 version 1.x. For the character code, refer to the List of Codes.

0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
0															
1				A	Q	a	q								
2				2	B	R	b	r							
3				#	3	C	c	s							
4				\$	4	D	d	t							
5				%	5	E	e	u							
6				&	6	F	f	v							
7				'	7	G	g	w							
8				(	8	H	h	x							
9				)	9	I	i	y							
A				-		J	j	z							
B				+		K	k	(							
C				<		L	l	(							
D				-		M	m	)							
E				.		N	n	-							
F				/		O	o								

### Entering file and folder names

The code list characters are the only file names and folder names that can be entered and displayed. If you use any other character for entry, the file and folder names are not displayed correctly. They may neither be displayed correctly depending on the CD writer used. The unit recognizes and plays only those MP3/WMA which have the MP3/WMA extension (.MP3/.WMA).

A file with a name entered with characters not on the code list may not play correctly.

### Writing files into a medium



When a medium containing MP3/WMA data is loaded, the unit checks all the data on the medium. If the medium contains a lot of folders or non-MP3/WMA files, therefore, it takes a long time until the unit starts playing MP3/WMA. In addition, it may take time for the unit to move to the next MP3/WMA file or a File Search or Folder Search may not be performed smoothly.

Loading such a medium may produce loud noise to damage the speakers.

- Do not attempt to play a medium containing a non-MP3/WMA file with the MP3/WMA extension. The unit mistakes non-MP3/WMA files for MP3/WMA data as long as they have the MP3/WMA extension.
- Do not attempt to play a medium containing non MP3/WMA.

### MP3/WMA playing order

When selected for play, Folder Search, File Search, or for Folder Select, files and folders are accessed in the order in which they were written by the CD writer. Because of this, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99", depending on your CD writer.

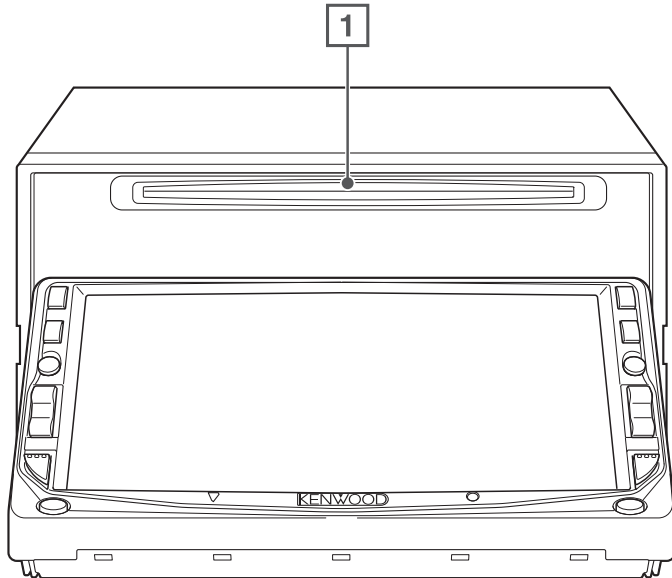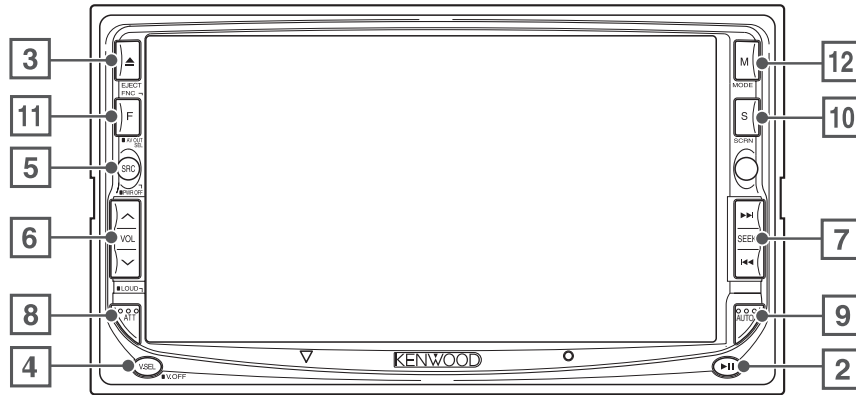

**1 Play Disc [Disc insertion slot]**  
A disc is played when you insert it.

**2 Play/Pause [▶||] key**  
Pauses and replays a disc.

**3 Eject Disc [EJECT] key**  
The disc is ejected.


**4 Switch Video Sources [V.SEL] key**  
The video sources are switched each time you press the key.



\* Optional accessory

Clears the video image when pressed more than one second. When pressed again, the original image is redisplayed.

**5 Switch Audio Source/Power Supply [SRC] key**  
The audio sources are switched each time you press the key.

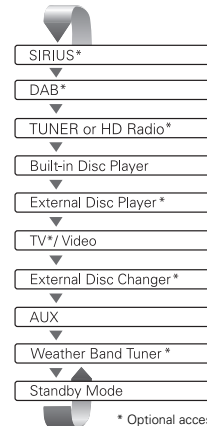

\* Optional accessory

Hold down more than 1 second to turn the power supply Off.  
Push it again to turn power supply On.

**6 Volume Controls [VOL] key**


**7 Track/Station Selectors [SEEK] key**  
Selects a music or chapter, track, or frequency.

**8 Attenuator/Loudness [ATT]/[LOUD] key**  
Attenuates the volume.  
Press it again to cancel muting.  
Press it for more than one second to turn the Loudness function on or off.  
If turned on, high and low tones are enhanced during low volume.

**9 Select Seek Mode [AUTO] key**  
Selects the Seek mode. (see pages 22/36 for the <Seek Mode>)

**10 Screen Setup [SCRN] key**  
Displays the Screen Setup or Angle Setup screen. (see page 58)


**11 Function [FNC] key**  
The video sources are switched each time you press the key.

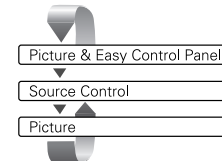

Switches the source that is output at the AV OUTPUT terminal when it is pressed more than 1 second.

**12 Switch Screen Mode [MODE] key**  
The screen mode is switched. (see page 12)

The display turns on when you put the parking brake, except for the navigation system.

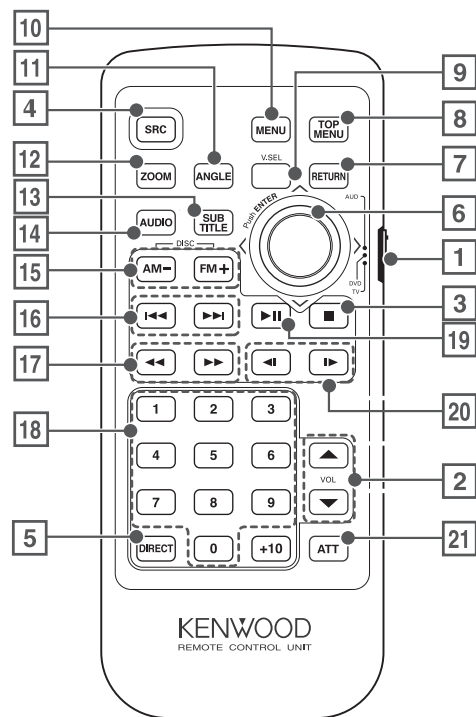

**1 Remote Control Mode selector**

Selects one of the following remote control modes.  
 TV: TV source  
 DVD: Built-in DVD/VCD/CD/MP3/WMA/WMA player source  
 AUD: Tuner source or attached disc changer/disc player source

**2 Volume Control**

Adjusts the volume.

**3 [DISC]**

Stops to play the built-in disc player.

**4**

Switches over the sound source each time it is pressed.

**5**

Selects the Direct Search mode. (see pages 19/24/33/37 for <Direct Search>)

**6 Joystick [DVD] [VCD]**

Enters your selection from the DVD/VCD Disc Menu.

**7 [DVD] [VCD]**

Returns to the previous screen when the DVD/VCD Disc Menu is used.

**8 [DVD]**

Calls the Top menu of DVD Disc Menu.

**9 Switch Video Sources [V.SEL] key**

The video sources are switched each time you press the key.



Clears the video image when pressed more than one second. When pressed again, the original image is redisplayed.

**10 [DVD]**

Calls the DVD Disc Menu.

**11 [DVD] [VCD]**

Each time you press the button, the angle switch.

**12 [DVD] [VCD]**

Each time you press the button, the zoom ratio switch.

**13 [DVD]**

Switches a subtitle language. (See <Language Setup>, page 68)

**14 [DVD]**

Switches an audio language. (See <Language Setup>, page 68)

**15 [DISC]**

Select a folder or a disc.

**[TV]**

FM: Switches to TV1, TV2, or VIDEO.

**[TUNER]**

FM: Switches to the FM1, FM2, or FM3 band.  
 AM: Switches to the AM band.

**16 [DISC]**

◀◀ or ▶▶: Selects a chapter, a track or a song.

**[TV]**

◀◀ or ▶▶: Select a channel.

**[TUNER]**

◀◀ or ▶▶: Selects a station.

**17 [DVD]**

◀◀: Fast Backward (Rewind). The speed changes each time it is pressed.

▶▶: Fast Forward. The speed changes each time it is pressed.

**18 [TV] [TUNER]**

1 — 6: Call the stations from memory.

**19 [DISC]**

Plays or pauses.

**[TUNER]**

Selects the Seek mode. (see page 22/44 for the <Seek Mode>)

**20 [DVD]**

◀: Slow Backward.

▶: Slow Forward.



**21 Attenuator [ATT] key**

Attenuates the volume.  
 Press it again to cancel muting.

<b>[DVD]</b>	: An operation during DVD playback
<b>[VCD]</b>	: An operation during VCD playback
<b>[DISC]</b>	: An operation during DVD, VCD, CD, MP3/WMA/WMA or MD playback
<b>[Other than DVD]</b>	: An operation other than DVD playback
<b>[Other than DVD/VCD]</b>	: An operation other than DVD or VCD playback
<b>[TV]</b>	: An operation during TV source
<b>[TUNER]</b>	: An operation during FM/AM broadcasting source

## Switch Screen Mode

The Screen mode of the monitor changes each time the [MODE] key is pressed.

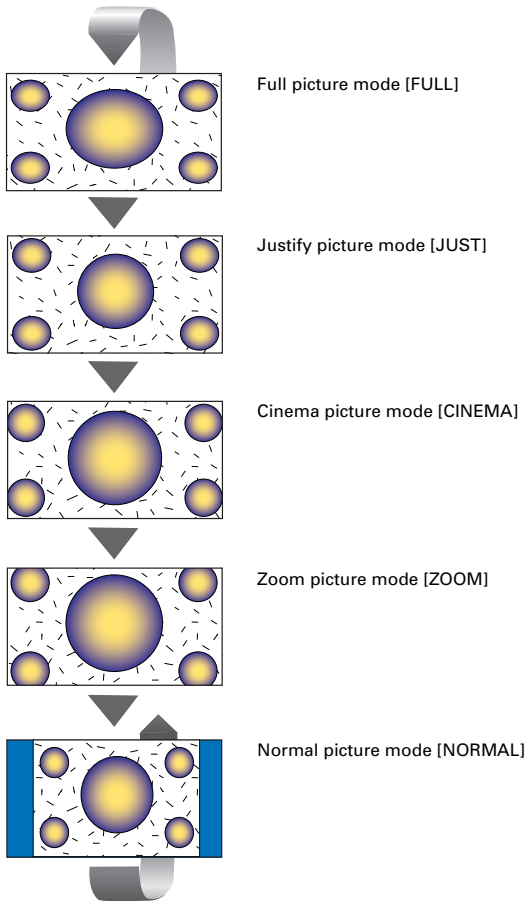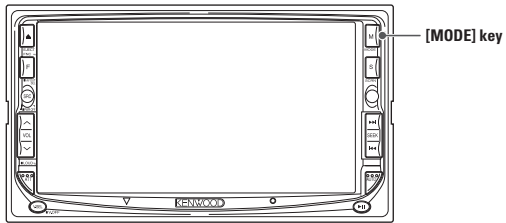


- When the Menu, Easy Control screen, or Navigation is selected, it is shown in the full-size display mode automatically. Their Screen mode cannot be changed.
- The Screen mode can be set for each of DVD/VCD, TV, and video images.

## Control during DVD Video or Video CD Playback

 
Various control screens appear when you play back a DVD Video (DVD) or a Video CD (VCD) disc.

### Displaying the DVD/VCD Playback screen


You can use the following operations when displaying DVD/VCD images.



DVD playback screen

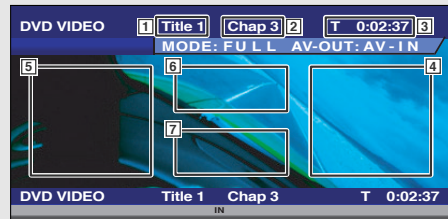

VCD playback screen

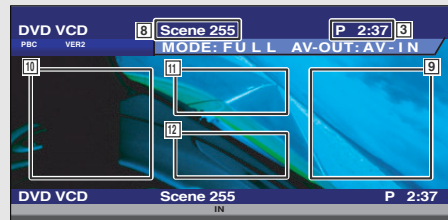

- 1 Title Number Display
- 2 Chapter Number Display
- 3 Play Time Display
- 4 Forward Chapter Search Area  
Selects the next chapter.
- 5 Backward Chapter Search Area  
Selects the previous chapter.
- 6 DVD Disc Menu Control Buttons Area  
Displays the Disc Menu Control button (see page 18)
- 7 Information Display Button Area

- 8 Scene/Track Number Display
- 9 Forward Scene/Track Search Area  
Selects the next scene (when PBC is On) or track (when PBC is Off).
- 10 Backward Scene/Track Search Area  
Selects the previous scene (when PBC is On) or track (when PBC is Off).
- 11 Zoom Control Button Area  
Displays the Zoom Control buttons (see page 19).
- 12 Information Display Button Area

- For DVD/VCD playback, DVD-V/VCD picture selection, or controller key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated (see page 74).


CD (VCD) disc.

### Displaying the Easy Control Panel

The Control Panel is displayed in a floating position of the DVD/VCD screen.



Display of Easy Control Panel

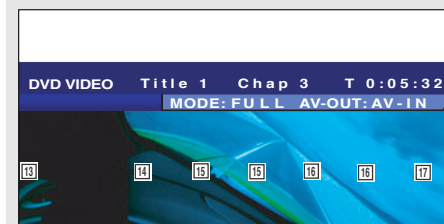

- 13 Switches the source.
  - 14 Stops to play.
  - 15 Rewinds or fast forwards.
  - 16 Chapter Search (DVD)  
Searches for a chapter.  
Scene/Track Search (VCD)  
Selects a scene (when PBC is On) or a track (when PBC is Off).
  - 17 Plays or pauses.
- The Easy Control Panel display is cleared when you touch the center of image display area.



## Displaying the DVD/VCD Control screen

Plays a DVD/VCD using various functions.



DVD/VCD Control screen

 


- 18 Ejects the disc from the built-in disc player.
- 19 Calls the Sound Effects Menu. (see page 84)
- 20 Calls the Setup Menu. (see page 57)
- 21 Displays the Source Select screen. (see page 55)
- 22 Fast Forwards or Rewinds.
- 23 Stops to play.  
When pressed twice, the disc is played from its beginning when you play it in the next time.
- 24 Selects a chapter, a scene or a track.  
When the DVD is paused, touch this button to start single-frame stepping.
- 25 Plays or pauses.
- 26 Slow Forwards or Backwards. (during DVD playback only)
- 27 Turns the PBC function of VCD On or Off. (when VCD Ver 2.0 or SVCD is in use only)
- 28 Switches the Repeat Play operations in the following sequence.  
DVD: Title Repeat, Chapter Repeat, Repeat Off  
VCD: Track Repeat, Repeat Off (Available when the PBC is off)
- 29 Scrolls the display text.
- 30 Switches the play time display in the following sequence.  
DVD: Title, chapter, remaining titles  
VCD: Track, disc, remaining discs (Effective only when the PBC function is off)
- 31 Title Number Display (DVD)
- 32 Chapter/Scene/Track Number Display
- 33 Play Time Display
- 34 Appears when a disc is inserted.
- 35 Function Indicator

## DVD Disc Menu

Selects an option from the DVD Disc Menu.


### 1 Displays the Disc Menu Control screen



- ① Calls the Menu Control.
- ② Switches the picture angle. (during program playback only)
- ③ Switches the caption language. (during program playback only)
- ④ Switches the voice language. (during program playback only)
- ⑤ Displays the Zoom Control screen.
- ⑥ Clears the Disc Menu Control.


### 2 Select Disc Menu options

#### Disc Menu

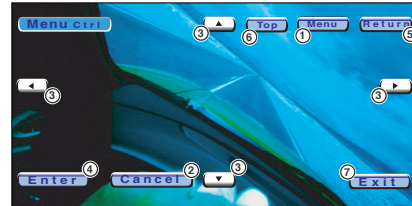

- ① Calls the Menu. (during DVD playback only)
- ② Returns to the Disc Menu Control screen.
- ③ Selects a menu option.
- ④ Enters your menu selection.
- ⑤ Returns to the previous menu screen.
- ⑥ Displays the Top Menu.
- ⑦ Clears the Disc Menu Control.

#### Zoom Control


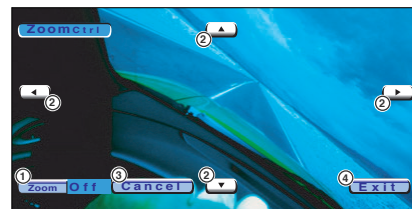


- ① Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.
- ② Scrolls the screen in the direction you touch.
- ③ Returns to the Disc Menu Control screen.
- ④ Clears the Disc Menu Control.

## VCD Zoom Control

 Displays an enlarged VCD screen.


### 1 Displays the Zoom Control screen

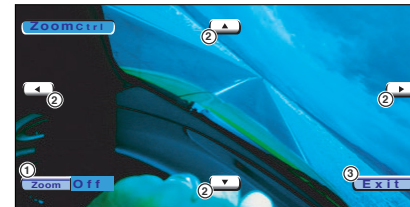

- ① Changes the zoom ratio at 4 levels (2 times, 3 times, 4 times, or off) each time you touch.
- ② Scrolls the screen in the direction you touch.
- ③ Clears the Zoom Control button.

## Information Display

 Displays the DVD and AV information.



The information is displayed for 5 seconds.

## Direct Search

You can search for a DVD/VCD chapter, scene or track by entering its number.

### 1 Selects the Direct Search mode



The following items can be searched directly each time it is pressed.  
 DVD: Title, Chapter, Time, Direct number  
 VCD (when PBC is On): Scene, Direct number  
 VCD (when PBC is Off): Track, Time  
 However, the direct search may not be supported for some discs.

### 2 Enter a number or time



### 3 Search



The operation ends automatically if you do not operate within 10 seconds.

## Tuner Control


Various control screens appear in the Tuner Source mode.

### Displaying the Easy Control Panel

The Tuner Control Panel is displayed in a floating position of the selected picture.



Displaying the Easy Control Panel

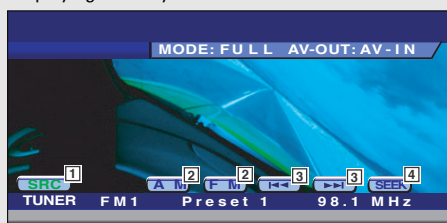

- 1 Switches the source.
- 2 Switches the band (to AM or FM1/2/3).
- 3 Tunes in a station
- 4 Switches the Seek mode.  
(see page 22 for the <Seek Mode>)


- For receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

### Displaying the Tuner Control screen

You can tune in a station using various functions.



Tuner Control screen

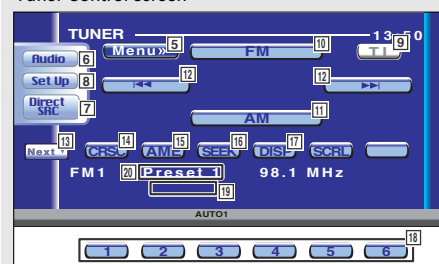

- 5 Calls the Tuner Menu.
- 6 Calls the Sound Effects Menu. (see page 84)
- 7 Displays the Source Select screen. (see page 55)
- 8 Calls the Setup Menu. (see page 57)
- 9 Turns the Traffic Information function On or Off. (see <Traffic Information>, page 24)
- 10 Switches to the FM1/2/3 band.
- 11 Switches to the AM band.
- 12 Tunes in a station.  
Use the <Seek Mode> to change the frequency switching.
- 13 Switches between 1 to 6 buttons and Function buttons to use.
- 14 Turns the CRSC function On or Off. (Only when receiving the FM broadcast)
- 15 Selects the Auto Memory mode. (See page 22 for the <Auto Memory>)
- 16 Switches the Seek mode. (see page 22 for the <Seek Mode>)
- 17 Selects the Program Service Name, Station Name, or Radio Text mode for text display.
- 18 When 1 to 6 buttons appear, you can call up the stations from memory.  
For memory of broadcasting stations, see <Auto Memory> (see page 22) or <Manual Memory> (see page 22).
- 19 Seek Mode Indicator
- 20 Memory Number Display
- 21 Selects options from various function menus.
- 22 Returns to the Tuner Control screen.


The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).

### Displaying the Tuner Menu screen

You can select menu options using various functions.



Tuner Menu screen

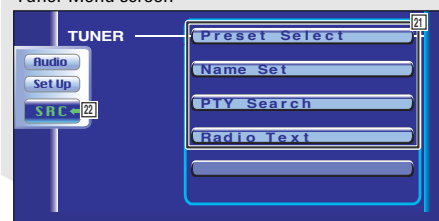

## Seek Mode

Sets a station selection.



If **SEEK** is not shown, touch **Next**.  
The mode is switched each time you touch the button.



Tunes in a station with good reception automatically.



Tune in stations in memory one after another.



Switches to the next channel manually.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Select a band you wish to store in memory



### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch or .  
Auto Memory terminates when 6 stations are stored or when all stations are tuned in.

The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

Stores the current receiving station in memory.

### 1 Select a station you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.  
Continue to touch until the memory number appears.


## Preset Select

Lists and tunes in stations in memory one after the other.

### 1 Call the Tuner Menu



### 2 Call the Preset Select Menu

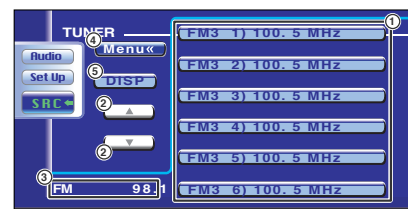

- ① Tunes in the displayed station.  
If the station name is displayed if it has been set.
- ② Switches the band of the displayed station list.
- ③ Band Display.
- ④ Returns to the Tuner Menu.
- ⑤ Switches the Station List display between the Program Service Name and SNPS (Frequency).

## Set Station Name

Names a station.

### 1 Tune in a station you wish to name



### 2 Call the Tuner Menu



### 3 Selects the Set Name mode



### 4 Enter a name

For character entry details, see <Character Entry> (see page 54).

### 5 Exit the Set Name mode



- You can store up to 30 stations in memory.
- You can set a station name only after you have applied the parking brake.

## Direct Search

Tunes in a station when its frequency is entered.

 
### 1 Select a band



### 2 Selects the Direct Search mode



### 3 Enter a frequency



When you enter them, signal reception starts.

Example: When you receive FM 92.1 MHz  
 9 2 . 1

Example: When you receive AM 810 kHz  
 8 1 0

The operation ends automatically if you do not operate within 10 seconds.


## Traffic Information

When a traffic bulletin starts, any source is switched to the traffic information and it is displayed automatically.

### When the traffic bulletin starts...

The Traffic Information screen appears automatically.

Traffic Information screen

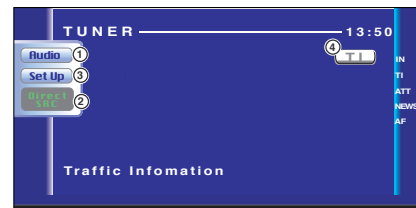

- ① Calls the Sound Effects Menu. (see page 84)
- ② Switches the source.
- ③ Calls the Setup Menu. (see page 57)
- ④ Turns the Traffic Information function on or off.

During reception of traffic information the adjusted volume is automatically remembered, and the next time it switches to traffic information it's automatically the remembered volume.

## Search for Program Type

A program is tuned when you set its program type.

### 1 Call the Tuner Menu



### 2 Call the PTY Search Menu



- ① Selects a program type.
- ② Scrolls the program type list.
- ③ Searches for the program type.  
It is displayed when the Program Type is selected.
- ④ Returns to the Tuner Menu.

### 3 Select a program type



### 4 Search for the program type




## Radio Text

You can display the radio text.

### 1 Call the Tuner Menu



### 2 Display the Radio Text

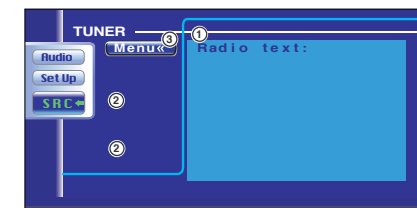

- ① Displays the Radio Text.
- ② Scrolls the Radio Text.  
It is displayed when information cannot be displayed on a single screen page.
- ③ Returns to the Tuner Menu.

## CD/MP3/WMA/WMA/Disc Changer Play Control


You can call various control screens during CD/MP3/WMA/WMA/Disc Changer

### Displaying the Easy Control Panel

The CD/MP3/WMA/Disc Changer Play Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel  
During CD playback

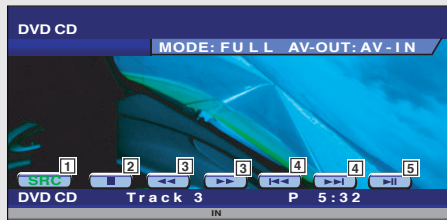

During MP3/WMA playback



During playback on disc changer



During playback on CD player



- 1 Switches the source.
- 2 Stops to play the built-in disc player.
- 3 When a CD is played back on the built-in disc player: Rewinds or fast forwards.
- 4 Selects a song.  
When a disc is played back on an external disc player, a disc changer or the MP3/WMA/WMA, continue to touch this key to start rewinding or fast forwarding.
- 5 Plays or pauses.
- 6 When an MP3/WMA/WMA is played back on the built-in disc player: Selects a folder.
- 7 When a disc is played back on the disc changer: Selects a disc.



- For CD/MP3/WMA/WMA/Disc Changer playback and receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.


playback.

### Displaying the CD/MP3/WMA/Disc Changer Control screen

You can play the CD/MP3/WMA/disc changer using various functions.




CD Control screen

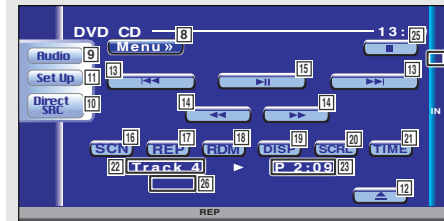

During CD playback

- 8 Calls the CD Menu.
- 9 Calls the Sound Effects Menu. (see page 84)
- 10 Displays the Source Select screen. (see page 55)
- 11 Calls the Setup Menu. (see page 57)
- 12 Ejects the disc from the built-in disc player.
- 13 Fast Forwards or Rewinds.
- 14 Selects a track.
- 15 Plays or pauses.
- 16 Starts or stops Scan Play (that plays the beginning of each song one after the other).
- 17 Repeats to play (the present track).
- 18 Starts or stops Random Play (to play songs in random order).
- 19 Selects the Disc Name (see <Set Disc Name>, page 30), Disc Text, or Track Text mode for text display.
- 20 Scrolls the display text.
- 21 Switches the play time display between Track, Disc, and Disc Remaining Time.
- 22 Track Number Display
- 23 Play Time Display
- 24 Appears when a disc is inserted.
- 25 Stops to play the built-in disc player.  
When pressed twice, the disc is played from its beginning when you play it in the next time.
- 26 Function Indicator


MP3/WMA Control screen

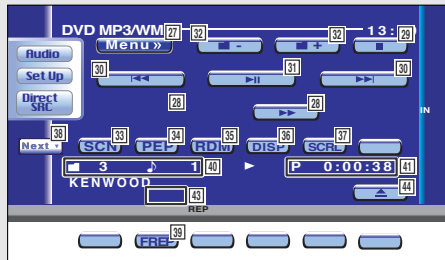

### During MP3/WMA play

- 27 Calls the MP3/WMA Menu.
- 28 Fast Forwards or Rewinds.
- 29 Stops to play.  
When pressed twice, the disc is played back from its beginning in the next time.
- 30 Selects a song.
- 31 Plays or pauses.
- 32 Selects a folder.
- 33 Starts or stops Scan Play (that plays the beginning of each song one after the other).
- 34 Repeats to play (the present song).
- 35 Starts or stops Random Play (to play songs of the present folder in random order).
- 36 Selects the Folder name, File name, Title (ID3/WMA tag), Artist name (ID3/WMA tag), or Album name (ID3 tag) for text display.
- 37 Scrolls the display text.
- 38 Switches the button display.
- 39 Repeats to play the song of the present folder.
- 40 **Folder and File Number Display**
- 41 **Play Time Display**
- 42 Appears when a disc is inserted.
- 43 **Function Indicator**
- 44 Ejects a disc.

Disc Changer/CD player Control screen

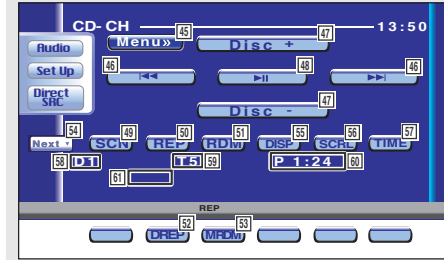

### During play by the disc changer

- 45 Calls the Disc Changer/CD player Menu.
- 46 Selects a track.  
Starts Fast Forward or Fast Rewind when it is held down.
- 47 Selects a disc. (Function of Disc Changer)
- 48 Plays or pauses.
- 49 Starts or stops Scan Play (that plays the beginning of each song one after the other).
- 50 Repeats to play (the present track).
- 51 Starts or stops Random Play (to play songs in random order).
- 52 Repeats to play disc (the present disc). (Function of Disc Changer)
- 53 Starts or stops Magazine Random Play (to play songs of the disc changer in random order). (Function of Disc Changer)
- 54 Switches the button display.
- 55 Selects the Disc Name (see <Set Disc Name>, page 31), Disc Text, or Track Text mode for text display.
- 56 Scrolls the display text.
- 57 Switches the play time display between Track, Disc, and Disc Remaining Time.
- 58 **Disc Number Display** (Function of Disc Changer)
- 59 **Track Number Display**
- 60 **Play Time Display**
- 61 **Function Indicator**


## Displaying the CD/MP3/WMA/Disc Changer Menu screen

You can select menu options using various functions.



- 62 Selects options from various function menus.
- 63 Returns to the CD/MP3/WMA/Disc Changer Control screen.

CD Menu screen

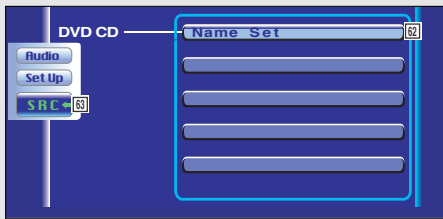

The available functions vary depending on the source used.

## Set Disc Name

Names a CD.

- 1 Play a CD you wish to name
- 2 Call the CD/Disc Changer Menu



- 3 Select the Set Name mode



The **Name Set** position varies depending on the disc you are playing.

- 4 Enter a name

For character entry details, see <Character Entry> (see page 54).

- 5 Exit the Set Name mode



- You cannot name an MD or MP3/WMA disc.
- Number of discs that can be stored in memory  
Built-in disc player: 10  
External CD changer/ player:  
Varies depending on the CD changer/ player.  
Refer to the CD changer/ player manual.


## Directory List (during MP3/WMA play)

The directory of an MP3/WMA disc are listed for quick search.

- 1 Call the MP3/WMA Menu



- 2 Start the Select Folder

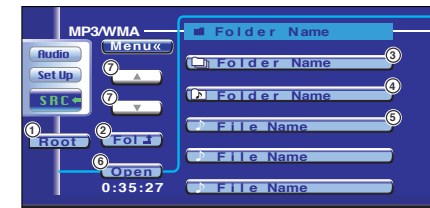

- ① Returns to the root directory.
- ② Displays the next higher level of hierarchy.
- ③ Displays a directory if the subdirectory has a folder. When you touch the directory, it opens.
- ④ Displays a directory if the subdirectory has files without a directory. When you touch the directory, it opens and songs in the directory are played.
- ⑤ Displays the MP3/WMA files. When you touch a file, its song is played back.
- ⑥ Plays the selected directory.
- ⑦ Scrolls the list.

- 3 Select a song



Display the desired song and touch the file display.




## ID3/WMA TAG Display (during MP3/WMA play)

The ID3/WMA TAG information of MP3/WMA file is listed.

### 1 Call the MP3/WMA Menu



### 2 Display the ID3/WMA TAG

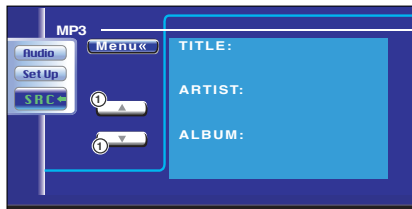

① Scrolls the list.

## Disc Select (during play by disc changer)

The discs loaded on the disc changer are listed for quick disc selection.

### 1 Calls the Disc Changer Menu



### 2 Call the Disc Select Menu



- ① Plays the displayed disc.
- ② Selects the Disc Name or Disc Text mode for text display.
- ③ Scrolls the list.  
(It is not displayed when a disc changer having 6 or less discs is used.)

### 3 Select the desired disc



Touch the desired disc display.

## Direct Search

Searches for a disc or a song when its number is entered.

### During play on the built-in disc player

#### 1 Select the Direct Search mode



The following items can be searched directly each time it is pressed.

CD: Track number, Total play time  
MP3/WMA: Folder, File

#### 2 Enter a disc or track number



#### 3 Search

When searching for a song:



### During play on an external in disc player or disc changer

#### 1 Enter a disc or track number



#### 2 Search

When searching for a song:



When searching for a disc:



The operation ends automatically if you do not operate within 10 seconds.

## Mute Telephone

When the telephone is called, the system is paused automatically.

### When the telephone is called...

The Phone Call ("Call") screen appears, and system is paused.

Phone Call ("Call") screen



① Returns to the previous source screen and restart the system to play.

### If you continue to listen the source audio during phone call...



The system restarts to play while the phone call is continued.

### When the call ends...

Hang up the phone.  
The system restarts to play.

## TV Control (with the optional accessory TV Tuner connected only)


Various control screens appear in the TV Source mode.

### Displaying the TV Picture screen

Various control screens appear in the TV Source mode.



TV Picture screen

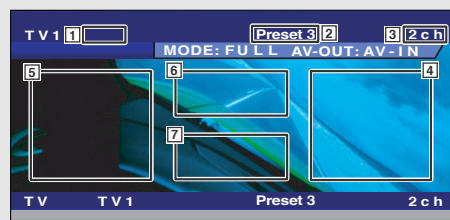


### Displaying the Easy Control Panel

The Control Panel is displayed in a floating position of the TV picture.



Displaying the Easy Control Panel

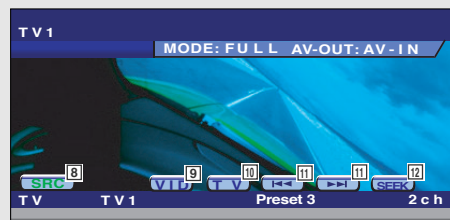

- 1 TV Band Number Display
- 2 Memory Number Display
- 3 Channel Number Display
- 4 Channel Up Area  
Increase the channel.
- 5 Channel Down Area  
Decrease the channel.
- 6 Band/Video Switch Area  
Switches to TV1, TV2, or VIDEO.
- 7 Information Display Button Area

- For TV picture selection and receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The information display is cleared automatically after approximately 5 seconds. Also, the information can be displayed automatically when it is updated (see page 74).

- 8 Switches the source.
- 9 Switches to Video (VIDEO).
- 10 Switches the TV band (to TV1 or TV2).
- 11 Calls up a channel.
- 12 Switches the Seek mode.  
(see page 36 for the <Seek Mode>)


- The Easy Control Panel display is cleared when you touch the center of image display area.

### Displaying the TV Control screen

You can tune in a TV station using various functions.



TV Control screen

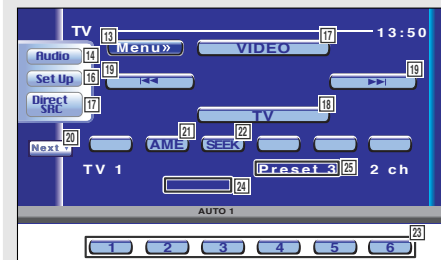


### Displaying the TV Menu screen

You can select menu options using various functions.



TV Menu screen

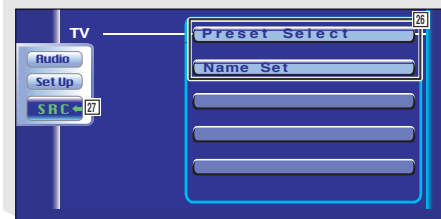

- 13 Calls the TV Menu.
- 14 Calls the Sound Effects Menu. (see page 84)
- 15 Displays the Source Select screen. (see page 55)
- 16 Calls the Setup Menu. (see page 57)
- 17 Switches to VIDEO.
- 18 Switches to TV1 or TV2.
- 19 Select a channel.  
Use the <Seek Mode> (see page 36) to change the channel tuning sequence.
- 20 Switches between 1 to 6 buttons and Function buttons to use.
- 21 Selects the Auto Memory mode.  
(see page 36 for the <Auto Memory>)
- 22 Switches the Seek mode.  
(see page 36 for the <Seek Mode>)
- 23 When 1 to 6 buttons appear, you can call up the channels from memory.  
For memory of broadcasting stations, see <Auto Memory> (see page 36) or <Manual Memory> (see page 36).
- 24 Seek Mode Indicator
- 25 Memory Number Display

- 26 Selects options from various function menus.
- 27 Returns to the TV Control screen.

- The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).


## Seek Mode

 Sets a TV station selection.



If **SEEK** is not shown, touch **Next**.

The mode is switched each time you touch the button.



**AUTO 1** Tunes in a station with good reception automatically.

**AUTO 2** Tune in stations in memory one after another.

**MANUAL** Switches to the next channel manually.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Select a band you wish to store in memory



### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch or .

Auto Memory terminates when 6 stations are stored or when all stations are tuned in.

The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

Stores the current receiving channel in memory.

### 1 Select a channel you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.  
Continue to touch until the memory number appears.

## Preset Select

Lists and tunes in stations in memory one after the other.


### 1 Select a band you wish to call



### 2 Call the TV Menu



### 3 Call the Preset Select Menu

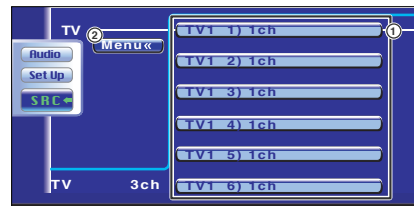

- ① Tunes in the displayed station.  
If the station name is displayed if it has been set.
- ② Returns to the TV Menu.

## Set Station Name

Names a station.

### 1 Select a station you wish to name



### 2 Call the TV Menu



### 3 Selects the Set Name mode



### 4 Enter a name

For character entry details, see <Character Entry> (see page 54).

### 5 Exit the Set Name mode



- You can store up to 20 stations in memory.
- You can set a station name only after you have applied the parking brake.

## Direct Search

Tunes in a station when its channel number is entered.

### 1 Selects the Direct Search mode



### 2 Enter a channel number



When you enter a channel number, signal reception starts.

Example: When you receive Channel 06

Direct Search ends automatically if you do not operate within 10 seconds.

## SIRIUS Tuner Control <North American sales only> (with the optional accessory)

SIRIUS Tuner connected only


Various control screens appear in the SIRIUS Tuner source mode.

### Displaying the Easy Control Panel

The SIRIUS Tuner Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel

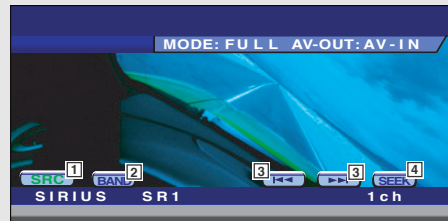


- 1 Switches the source.
- 2 Switches the band.
- 3 Tunes in a station.
- 4 Switches the Seek mode.  
SEEK 1: Tunes channels one after the other.  
SEEK 2: Selects channels in memory one after the other.

- For system key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

### Displaying the SIRIUS Tuner Control screen



SIRIUS Tuner Control screen

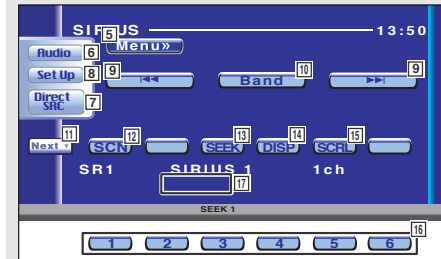


- 5 Calls the SIRIUS Tuner Menu.
- 6 Calls the Sound Effects Menu. (see page 84)
- 7 Displays the Source Select screen. (see page 55)
- 8 Calls the Setup Menu. (see page 57)
- 9 Tunes in a station.
- 10 Switches the band.
- 11 Switches between 1 to 6 buttons and Function button to use.
- 12 Starts or stops Channel Scan (that tunes channels one after the other).
- 13 Switches the Seek mode.  
SEEK 1: Tunes channels one after the other.  
SEEK 2: Selects channels in memory one after the other.
- 14 Changes the display from Song Title & Artist Name, Composer Name, Channel Name, to Category Name.
- 15 Scrolls the display text.
- 16 When 1 to 6 buttons appear, you can call up the channel from memory.  
For memory of channel stations, see <Channel Memory> (see page 40).
- 17 Seek Mode Indicator

### Displaying the SIRIUS Tuner Menu

You can select menu options using various functions.



SIRIUS Tuner Menu screen

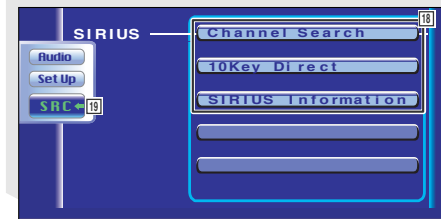

- 18 Selects options from various function menus.
- 19 Returns to the SIRIUS Tuner Control screen.

- For SIRIUS Tuner function details, see the Instruction Manual of SIRIUS Satellite Radio Tuner (optional accessory).

## Channel Search

The categories and channels are listed for your channel selection.

### 1 Call the SIRIUS Tuner Menu



### 2 Start Channel Searching



The category list appears.

Category Selection screen




- ① Selects a category.
- ② Scrolls the list.
- ③ Returns to the SIRIUS Tuner Menu.

### 3 Select a category



The channel list of the selected category appears.

Channel Selection screen

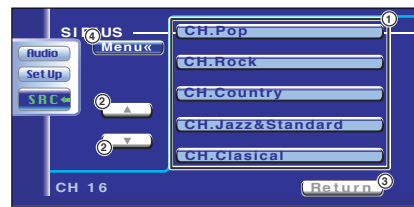

- ① Tunes in a channel.
- ② Scrolls the list.
- ③ Returns to the Category Selection screen.
- ④ Returns to the SIRIUS Tuner Menu.

### 4 Select a channel



The selected channel is tuned.

 
## Channel Memory

Stores the current receiving channel in memory.

### 1 Select a channel you wish to store in memory



### 2 Store in memory



If 1 to 6 are not shown, touch Next. Continue to touch until the memory number appears.

## Direct Channel Search

A channel is tuned when you enter its number.


### 1 Call the SIRIUS Tuner Menu



### 2 Display the Direct Search screen



Direct Search screen

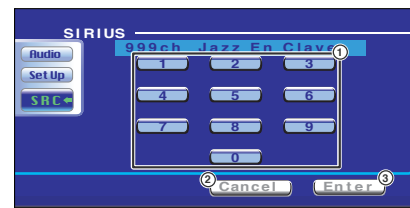

- ① Enters a channel number.
- ② Returns to the SIRIUS Tuner Menu.
- ③ Tunes in a channel when you enter its number.

### 3 Enter a channel number



### 4 Tuning



## Information Display

The tuned program information is displayed.

### 1 Call the SIRIUS Tuner Menu



### 2 Display the Information screen



Information screen



- ① Displays the information (such as Channel Name, Category Name, Artist Name, Song Title, and Composer).
- ② Scrolls the information display.
- ③ Returns to the SIRIUS Tuner Menu.

## HD Radio Control <North American sales only> (with the optional accessory HD Radio

tuner connected only)


Various control screens appear in the HD Radio Source mode.

### Displaying the Easy Control Panel

The HD Radio Control Panel is displayed in a floating position of the selected picture.



Displaying the Easy Control Panel

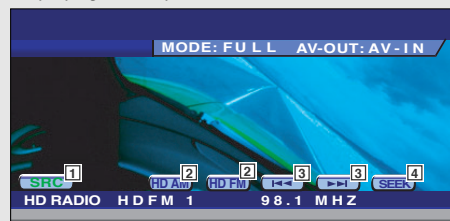

- 1 Switches the source.
- 2 Switches the band (HD FM1/2/3, HD AM).
- 3 Tunes in a station.
- 4 Switches the Seek mode.  
(see page 44 for the <Seek Mode>)

- For receiver key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

### Displaying the HD Radio Control screen

You can tune in a station using various functions.



HD Radio Control screen



### Displaying the HD Radio Menu screen

You can select menu options using various functions.



HD Radio Menu screen



- 5 Calls the HD Radio Menu.
- 6 Calls the Sound Effects Menu. (see page 84)
- 7 Displays the Source Select screen. (see page 55)
- 8 Calls the Setup Menu. (see page 57)
- 9 Switches to the HD FM1/2/3 band.
- 10 Switches to the HD AM band.
- 11 Tunes in a station.  
Use the <Seek Mode> to change the frequency switching.
- 12 Switches between 1 to 6 buttons and Function buttons to use.
- 13 Selects the Auto Memory mode.  
(See page 44 for the <Auto Memory>)
- 14 Switches the Seek mode.  
(see page 44 for the <Seek Mode>)
- 15 Switches between Station Name and Song Title display modes.
- 16 Scrolls the display text.
- 17 When 1 to 6 buttons appear, you can call up the stations from memory.  
For memory of broadcasting stations, see <Auto Memory> (see page 44) or <Manual Memory> (see page 44).
- 18 Seek Mode Indicator
- 19 Selects options from various function menus.
- 20 Returns to the HD Radio Control screen.

 
- For HD Radio function details, see the Instruction Manual of HD Radio tuner (optional accessory).

## Seek Mode

Sets a station selection.



If **SEEK** is not shown, touch **Next**.  
The mode is switched each time you touch the button.



**AUTO 1** Tunes in a station with good reception automatically.

**AUTO 2** Tune in stations in memory one after another.

**MANUAL** Switches to the next channel manually.

## Auto Memory

Stores stations with good reception in memory automatically.

### 1 Select a band you wish to store in memory



### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch **←** or **→**.  
Auto Memory terminates when 6 stations are stored or when all stations are tuned in.

The operation ends automatically if you do not operate within 10 seconds.

## Manual Memory

Stores the current receiving station in memory.

### 1 Select a station you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.  
Continue to touch until the memory number appears.


## Receive Mode

The digital or analog program is selected and received.

### 1 Call the HD Radio Menu



### 2 Call the Receive mode Menu

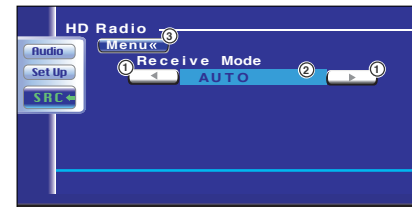

- ① Switches the Receive mode.
- ② Receive mode Display.
- ③ Returns to the HD Radio Menu.

### 3 Select the Receive mode



**AUTO:** Automatically switches between the Digital and Analog Receive modes depending on the broadcasting type. If programs are broadcasted in both modes, the digital program is received. Also, if a program is received in the Ball Game mode (the non-displayed broadcast program), the analog program is automatically received.

**DIGITAL:** Receives the digital program only.  
**ANALOG:** Receives the analog program only.

## Title Display

An information about the received song is displayed.


### 1 Call the HD Radio Menu



### 2 Display the Title screen



Title screen

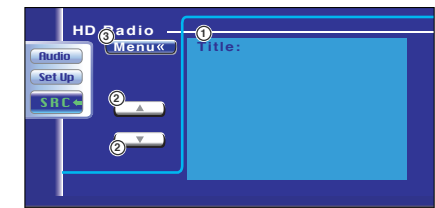

- ① Displays the information (such as song title, artist name, album name and genre).
- ② Scrolls the information display.
- ③ Returns to the HD Radio Menu.

## DAB Tuner control (with the optional accessory DAB tuner connected only)


Various control screens appear in the DAB Tuner source mode.

### Displaying the Easy Control Panel

The DAB Tuner Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel

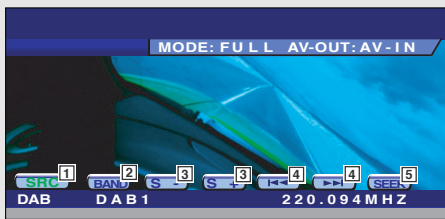

- 1 Switches the source.
- 2 Switches the band (to DAB1/2/3)
- 3 Selects a service.
- 4 Selects the Ensemble.
- 5 Switches the Seek mode.  
(see page 48 for the <Seek Mode>)


- For system key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

### Displaying the DAB Tuner Control screen

You can select the Ensemble and services using various functions.



DAB Tuner Control screen

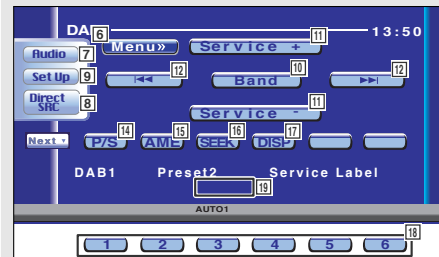


- 6 Calls the DAB Tuner Menu.
- 7 Calls the Sound Effects Menu. (see page 84)
- 8 Displays the Source Select screen. (see page 55)
- 9 Calls the Setup Menu. (see page 57)
- 10 Switches the band (to DAB1/2/3).
- 11 Selects a service.  
You can select a service in the <Seek Mode> (see page 48).
- 12 Selects the Ensemble.
- 13 Switches between 1 to 6 buttons and Function button to use.
- 14 Selects the primary or secondary operation.
- 15 Selects the Auto memory mode. (see page 48 for the <Auto Ensemble memory>)
- 16 Switches the Seek mode.  
(see page 48 for the <Seek Mode>)
- 17 Changes the display between Ensemble label, PTY label, Component label, Region label, and Audio quality.
- 18 When 1 to 6 buttons appear, you can call a service from memory.
- 19 Seek Mode Indicator

### Displaying the DAB Tuner Menu screen

You can select menu options using various functions.



DAB Tuner Menu screen

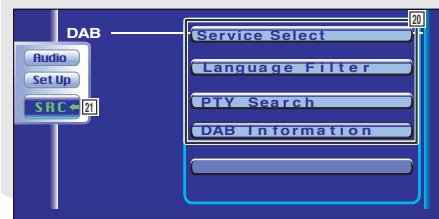

- 20 Selects options from various function menus.
- 21 Returns to the DAB Tuner Control screen.

- For DAB Tuner function details, see the Instruction Manual of DAB Tuner (optional accessory).




## Seek Mode

 A service selection method can be set.



If **SEEK** is not shown, touch **Next**.  
The mode display is switched each time you touch the button.



**AUTO 1** Tunes in an ensemble with good reception automatically.

**AUTO 2** Selects services in memory one after another.

**MANUAL** Switches to the next channel manually.

## Auto Ensemble Memory

An ensemble with good reception is stored in memory automatically.

### 1 Select a band you wish to store in memory



### 2 Select the Auto Memory mode



If **AME** is not shown, touch **Next**.

### 3 Start Auto Memory



Touch or .  
Auto Memory terminates when 6 ensembles are stored or when all ensembles are tuned in.

## Service Preset Memory

The current receiving service is stored in memory.

### 1 Select a service you wish to store in memory



### 2 Store in memory



If **1** to **6** are not shown, touch **Next**.  
Continue to touch until the memory number blinks once.


## Service Select

The service list of the currently receiving ensemble is displayed for your selection.

### 1 Call the DAB Tuner Menu



### 2 Call the Service Select Menu

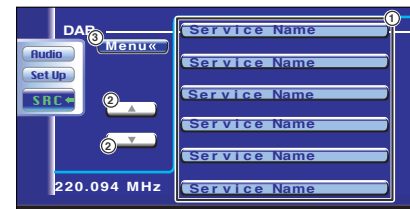

- ① Selects a service.
- ② Scrolls the service list.
- ③ Returns to the DAB Tuner Menu.

### 3 Select a service



 
## Language Filter

The languages are list for your selection.

### 1 Call the DAB Tuner Menu



### 2 Call the Language Filter Menu



- ① Selects a language.
- ② Searches for the selected language.
- ③ Returns to the DAB Tuner Menu.

### 3 Select a language you wish to use



### 4 Search for the language



## Search for Program Type

The services are received when you set its program type.

### 1 Call the DAB Tuner Menu



### 2 Call the PTY Search Menu




- ① Selects a program type.
- ② Searches for the program type.
- ③ Displays the Language select screen.
- ④ Returns to the DAB Tuner Menu.

### 3 Select a program type



## Select a Language

### Display the Language select screen

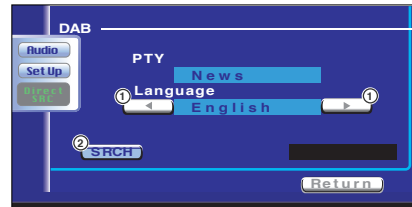

- ① Selects a Language.
- ② Searches for the program type.
- ③ Returns to the PTY Search Menu.

### Select a Language



### 4 Search for the program type




## DAB Information

The DAB information is displayed.

### 1 Call the DAB Tuner Menu



### 2 Display the DAB Information screen

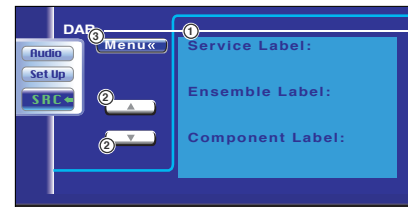

- ① Displays the DAB information (such as Service label, Ensemble label, Component label, Audio quality, Region label, and Dynamic label).
- ② Scrolls the information display.
- ③ Returns to the DAB Tuner Menu.

## DAB Announcement

When the Announcement you have turned on starts, any source is switched to the Announcement automatically.

### When the announcement starts...

The Announcement screen appears automatically.

Announcement screen



- ① Calls the Sound Effects Menu. (see page 84)
- ② Switches the source. (see page 57)
- ③ Calls the Setup Menu. (see page 57)

## Weather Band Tuner Control (with the optional accessory Weather Band Tuner

connected only)


Various control screens appear in the Weather Band Tuner source mode.

### Displaying the Easy Control Panel

The Weather Band Tuner Control Panel is displayed in a floating position of the selected picture.



Display of Easy Control Panel

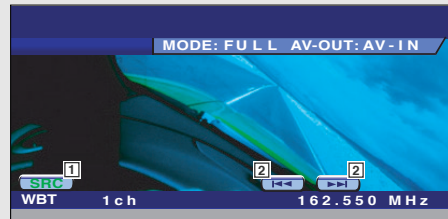

- [1] Switches the source.
- [2] Tunes in a station.




- For system key operations, see <DDX7015/7045 Basic Operations> (see page 8).
- The Easy Control Panel display is cleared when you touch the center of image display area.

### Displaying the Weather Band Tuner Control screen



Weather Band Tuner Control screen

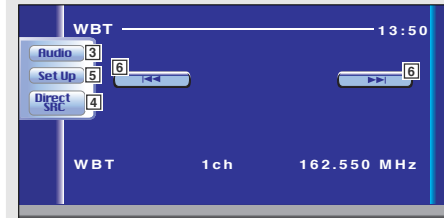


- [3] Calls the Sound Effects Menu. (see page 84)
- [4] Displays the Source Select screen. (see page 55)
- [5] Calls the Setup Menu. (see page 57)
- [6] Tunes in a station.

## Character Entry


### How To Use the Character Entry screen

When you select the Set Disc Name mode or others, the following screen appears for character entry.

Character Entry screen

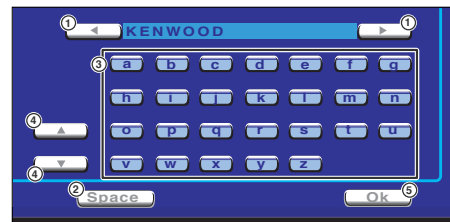

- ① Shifts the cursor.  
If you erase a character, locate the cursor on it and touch this button.
- ② Enters a space.
- ③ Enters characters.
- ④ Scrolls up or down the character button display.
- ⑤ Exits the Character Entry mode and returns to the previous screen.

 You can enter characters only after you have applied the parking brake.

## Source Select

### Source Select

The source you wish to listen to can be selected quickly.


### Displaying the Control screen



Press this key several times until the Control screen appears.

Control screen



 The Source Select screen can be displayed from the control screen of any source.




### Displaying the Source Select screen



Continue to touch until the Source Select screen appears.

Source Select screen

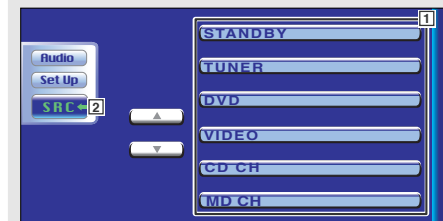

- ① Select the source.
- ② Returns to the Control screen previously displayed.

## Adjusting the Monitor Display Position and Quality


You can adjust the position and picture quality of the monitor.

### Displaying the Screen Control screen

You can adjust the picture quality using the following keys.



Screen Control screen

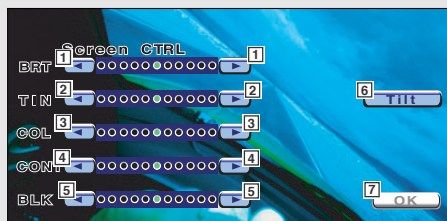

- 1 Brightness Control  
Disabled if the Auto Dimmer is On.
- 2 Tint Control  
Displayed for an NTSC system image on TV or Video.
- 3 Color Control  
Displayed on the TV and Video screen only.
- 4 Black Level Adjustment
- 5 Contrast Control
- 6 Displays the Adjust Monitor Position screen.  
(see <Displaying the Tilt Control screen>, page 56)
- 7 Returns to the previous screen.

The Screen Control screen is displayed only when you have applied the parking brake.



### Displaying the Tilt Control screen

You can set the monitor tilt.



Tilt Adjust screen



- 8 Monitor Tilt Adjustment
- 9 The monitor fully closes.
- 10 Returns to the Screen Control screen.
- 11 Returns to the previous screen.

## Setup Menu

You can set up various receiver parameters.

### Displaying the Control screen



Press this key several times until the Control screen appears.


Control screen



### Displaying the Setup Menu screen



Setup Menu screen

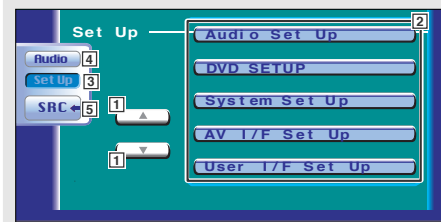

You can call the same Setup Menu for the Control screen of each source.

- 1 Scrolls the Setup Menu.
- 2 Calls each Setup Menu.
- 3 Recalls the previous Setup Menu.
- 4 Calls the Sound Effects Menu. (see page 84)
- 5 Returns to the Control screen of the previous source.

Your setup on the Sound Effects menu is adjusted automatically according to your <Audio Set Up> (see page 58) on the Setup menu. We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects menu>.

The available functions vary depending on the model used (the tuner specifications and the broadcasting system that can be received).


## Audio Set Up

You can setup a speaker network, etc.

### Displaying the Audio Set Up screen



Speaker setup screen

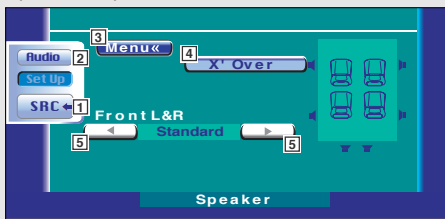


- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Displays the X'Over setup screen. (see page 59)
- 5 Sets up the front speaker type to fine-tune for the optimal equalizer curves.  
 Standard: Setup for general diameter speakers  
 Narrow: Setup for small diameter speakers  
 Middle: Setup for small diameter woofer  
 Wide: Setup for large diameter woofer

## Crossover Network Setup

You can set a crossover frequency of speakers.



X'Over setup screen

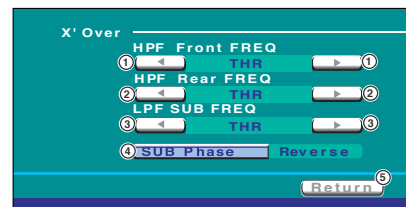

- 1 Sets a Front High Pass Filter frequency.  
 You can select any of the following frequency.  
 Through, 40, 60, 80, 100, 120, 150, 180, 220 Hz
- 2 Sets a Rear High Pass Filter frequency.  
 You can select any of the following frequency.  
 Through, 40, 60, 80, 100, 120, 150, 180, 220 Hz
- 3 Sets a Sub woofer Low Pass Filter frequency.  
 You can select any of the following frequency.  
 50, 80, 120, Through Hz
- 4 Sets the phase of subwoofer output.  
 The phase is reversed 180 degrees when set to "Reverse".
- 5 Returns to the Speaker setup screen.

## Audio Set Up (with the optional accessory DSP unit connected only)


You can set up more detailed settings by connecting the optional accessory DSP unit.

### Displaying the Car Type Set Up screen

If your vehicle type is selected, the Digital Time Alignment is set automatically (for timing adjustment of sound output for each channel) to have the highest surround effects.



Car Type Set Up screen

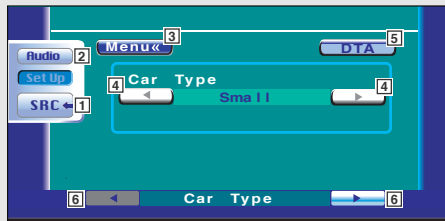

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Sets up the car type you use together with this unit.
- 5 Displays the DTA (Digital Time Alignment) Setup screen. (see page 64)  
You can adjust the digital time alignment that was set automatically when you selected the car type.
- 6 Displays the Speaker Set Up screen.

You cannot set up "Car Type" when "Position Setting" (see page 90) is "All".

unit.

### Displaying the Speaker Set Up screen

When the speaker type and size are set, the speaker crossover network and equalizer curve are set automatically.



Speaker Set Up screen




- 7 Displays the X'over (HPF) screen. (See <High Pass Filter Setup>, page 64)  
You can adjust the crossover setup that was set automatically when you selected the speaker type.
- 8 Display the X'over (LPF) screen. (See <Low Pass Filter Setup>, page 64)  
You can adjust the crossover setup that was set automatically when you selected the speaker type.
- 9 Sets up the front speaker type to fine-tune for the optimal equalizer curves.  
Standard: Setup for general diameter speakers  
Narrow: Setup for small diameter speakers  
Middle: Setup for small diameter woofer  
Wide: Setup for large diameter woofer
- 10 Select the speakers for Multi-channel sounds.  
"3/2": Center speaker, Front speaker, Rear speaker  
"2/2": Front speaker, Rear speaker  
"3/0": Center speaker, Front speaker  
"2/0": Front speaker
- 11 Set the use or no use of Sub Woofer.
- 12 Displays the Channel Level Setup screen.
- 13 Displays the Car Type Set Up screen.

### Displaying the Channel Level screen

You can set the volume at each setup position.



Channel Level screen

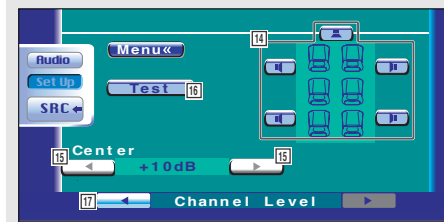

- 14 Selects a speaker to be set. (see <Channel Level>, page 62)
  - 15 Sets the speaker volume. (see <Channel Level>, page 62)
  - 16 Starts or stops test signal tone output for setup check.
  - 17 Displays the Speaker Set Up screen.
- Your setup on the <Sound Effects Menu> is adjusted automatically to get the best sound effects according to the car type and speaker you have set on the <Audio Set Up> (see page 60). We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects Menu>.  
You can fine-adjust the automatic set value by <DTA Setup> (see page 62), <Crossover Network Setup> (see page 59), or <Parametric Equalizer> (see page 88).
- Stop the test signal tone if you have finished setting up the Channel Level. If you leave the test signal tone on, you may not be able to set up other settings.


## Channel Level

Set the volume at each setup position.

### 1 Select a speaker you wish to adjust



Channel Level setup screen

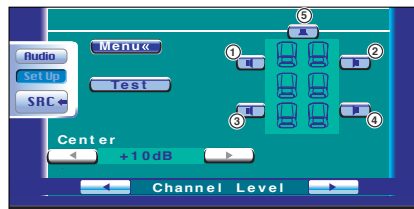

- ① Left front speaker
- ② Right front speaker
- ③ Left rear speaker
- ④ Right rear speaker
- ⑤ Center speaker

### 2 Adjust the volume




## DTA Setup

Manually set the sound output timing of each channel.

### 1 Display the DTA Setup screen




DTA Setup screen

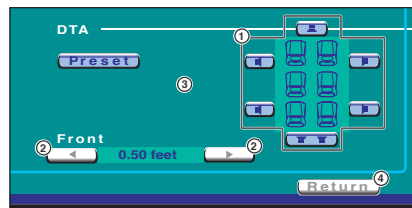

- ① Selects a speaker to be adjusted.
- ② Sets the distance between the selected speakers to adjust delay time.
- ③ Stores the adjusted status in memory or calls it from memory.
- ④ Returns to the Car Type Set Up screen.

### 2 Select a speaker you wish to adjust

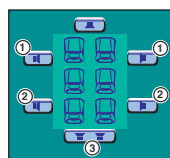

- ① Front speaker
- ② Rear speaker
- ③ Subwoofer

### 3 Set a delay time



The speakers are virtually moved to the desired distance.  
When the values of front speakers increase, they are virtually moved forward. When the values of rear speakers and subwoofer increase, they are virtually moved backward.

### Store or call your setup into/from memory

To store your setup in memory



Continue to touch more than 2 seconds.

To call your setup from memory






# Setup Menu

English

## High Pass Filter Setup


You can manually set a High Pass Filter of Crossover Network.

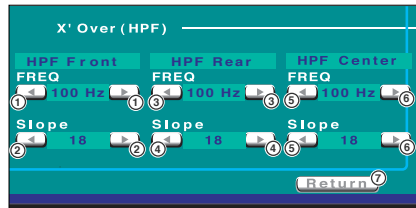

- ① Sets a crossover frequency of Front High Pass Filter.
- ② Sets a crossover slope of Front High Pass Filter.
- ③ Sets a crossover frequency of Rear High Pass Filter.
- ④ Sets a crossover slope of Rear High Pass Filter.
- ⑤ Sets a crossover frequency of Center High Pass Filter.
- ⑥ Sets a crossover slope of Center High Pass Filter.
- ⑦ Returns to the Speaker Set Up screen.

## Low Pass Filter Setup

You can manually set a Low Pass Filter of Crossover Network.

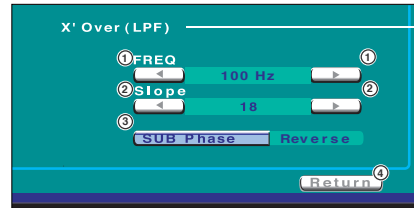

- ① Sets a crossover frequency of Low Pass Filter.
- ② Sets a crossover slope of Low Pass Filter.
- ③ Sets the phase of subwoofer output.  
The phase is reversed 180 degrees when set to "Reverse".
- ④ Returns to the Speaker Set Up screen.

## DVD Setup

You can set up the DVD play.

### Displaying the DVD SETUP 1 screen



DVD SETUP 1 screen



- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Selects a disc menu language.\*1 (See <Language Setup>, page 68)
- 5 Selects a subtitle language.\*1 (See <Language Setup>, page 68)
- 6 Selects an audio language.\*1 (See <Language Setup>, page 68)
- 7 Sets the dynamic range.\*2 (Wide)
 

The dynamic range is reduced by changing from "Wide" to "Normal" and from "Normal" to "Midnight". You can easy to listen a small sound when the dynamic range is narrow.  
This is effective only when you are using a Dolby Digital software.
- 8 Displays the DVD SETUP 2 screen.

If **DVD SETUP** is not shown, touch or to display it.

### Displaying the DVD SETUP 2 screen



DVD SETUP 2 screen



- 9 Sets an angle mark display. (On)
- 10 Selects the screen display mode.\*1 (16:9)
  - \*16:9\*: Displays wide pictures.
  - \*4:3 LB\*: Displays wide pictures in the Letter Box format (having black stripes at the top and bottom of screen).
  - \*4:3 PS\*: Displays wide pictures in the Pan & Scan format (showing pictures cut at the right and left ends).
- 11 Displays the Parental Lock screen.\*1 (OFF) (See <Parental Level Setup>, page 69)
- 12 Keep "Auto" to use.
- 13 Displays the DVD SETUP 1 screen.




\*1 Disabled when a DVD is being played.  
\*2 Disabled when the Zone function is On.

## Language Setup

Select a language you use for the speech and menus.

### 1 Display the Language Setup screen

See <Displaying the DVD SETUP 1 screen> (see page 66) and select a language you wish to use.

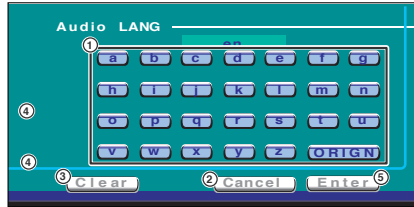

- ① Enters a language code.
- ② Cancels the language setup and returns to the DVD SETUP 1 screen.
- ③ Clears the language code.
- ④ Sets the original audio language.  
(It appears during audio language setup.)
- ⑤ Sets the language and returns to the DVD SETUP 1 screen.  
(It appears after you have entered a language code.)

### 2 Enter a language code

See the Language Code Table shown at right to select the desired language.

### 3 Set the language you use




Language Code Table

Abbreviation	Language	Abbreviation	Language
aa	Afar	lv	Latvian, Lettish
ab	Abkhazian	mg	Malagasy
af	Afrikaans	mi	Maori
am	Amharic	mk	Macedonian
ar	Arabic	ml	Malayalam
as	Assamese	mn	Mongolian
ay	Aymara	mo	Moldavian
az	Azerbaijani	mr	Marathi
ba	Bashkir	ms	Malay
be	Byelorussian	mt	Maltese
bg	Bulgarian	my	Burmese
bh	Bihari	na	Nauru
bi	Bislama	ne	Nepali
bn	Bengali, Bangla	nl	Dutch
bo	Tibetan	no	Norwegian
br	Breton	oc	Occitan
ca	Catalan	om	(Afan) Oromo
co	Corsican	or	Oriya
cs	Czech	pa	Punjabi
cy	Welsh	pl	Polish
da	Danish	ps	Pashto, Pushto
de	German	pt	Portuguese
dz	Bhutani	qu	Quechua
el	Greek	rm	Rhaeto-Romance
en	English	rn	Kirundi
eo	Esperanto	ro	Romanian
es	Spanish	ru	Russian
et	Estonian	rw	Kinyarwanda
eu	Basque	sa	Sanskrit
fa	Persian	sd	Sindhi
fi	Finnish	sg	Sangho
fj	Fiji	sh	Serbo-Croatian
fo	Faroese	si	Singhalese
fr	French	sk	Slovak
fy	Frisian	sl	Slovenian
ga	Irish	sm	Samoan
gd	Scots Gaelic	sn	Shona
gl	Galician	so	Somali
gn	Guarani	sq	Albanian
gu	Gujarati	sr	Serbian
ha	Hausa	ss	Siswati
hi	Hindi	st	Sesotho
hr	Croatian	su	Sundanese
hu	Hungarian	sv	Swedish
hy	Armenian	sw	Swahili
ia	Interlingua	ta	Tamil
ie	Interlingue	te	Telugu
ik	Inupiak	tg	Tajik
in	Indonesian	th	Thai
is	Icelandic	ti	Tigrinya
it	Italian	tk	Turkmen
iw	Hebrew	tl	Tagalog
ja	Japanese	tn	Setswana
ji	Yiddish	to	Tongan
jw	Javanese	tr	Turkish
ka	Georgian	ts	Tsonga
kk	Kazakh	tt	Tatar
kl	Greenlandic	tw	Twi
km	Cambodian	uk	Ukrainian
kn	Kannada	ur	Urdu
ko	Korean	uz	Uzbek
ks	Kashmiri	vi	Vietnamese
ku	Kurdish	vo	Volapuk
ky	Kirghiz	wo	Wolof
la	Latin	xh	Xhosa
ln	Lingala	yo	Yoruba
lo	Laotian	zh	Chinese
lt	Lithuanian	zu	Zulu

## Parental Level Setup

Sets a parental level.

### 1 Display the Parental Level code number screen

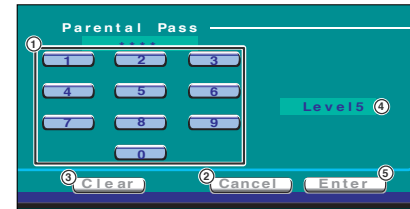


- ① Enters a code number.
- ② Cancels the current setup and returns to the DVD SETUP 2 screen.
- ③ Clears the code number.
- ④ Displays the present parental lock level.
- ⑤ Determines the code number and displays the Parental Level Setup screen.

### 2 Enter the code number



- The number you enter first is set as your code number.
- You can clear the code number by pressing the Reset button.

### 3 Display the Parental Level Setup screen

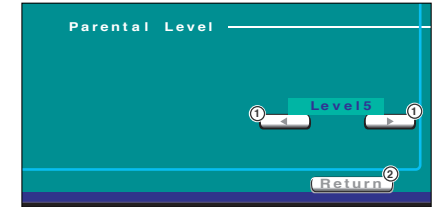

- ① Sets a parental level.
- ② Returns to the DVD SETUP 2 screen.

### 4 Set a parental level



### 5 Enter the parental level setup



- If a disc has a higher parental lock level, the audience needs to enter the code number.
- The parental lock level varies depending on a loaded disc.
- If a disc has no parental lock, any audience can play it back even when you have set the parental lock.


## System Setup

You can set up the system parameters.

### Displaying the System Set Up 1 screen



System Set Up 1 screen

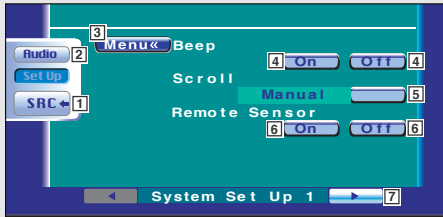


- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Turns the key touch tone On or Off. ( On)
- 5 Allows scrolling of text display on the Source Control screen. ( Auto)  
"Auto": Scrolls the screen automatically.  
"Manual": Allows you to scroll the screen manually.
- 6 Selects a remote control signal. ( On)  
When turned "Off", the remote control of TV reception is rejected.
- 7 Displays the System Set Up 2 screen.

If **System Set Up** is not shown, touch or to display it.

### Displaying the System Set Up 2 screen



System Set Up 2 screen

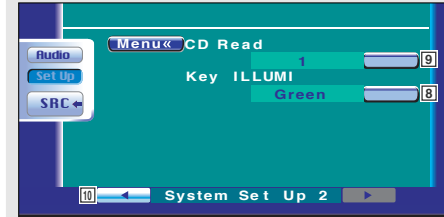

- 8 Selects an illumination color of receiver keys.  
( Red)  
"Green": Green  
"Red": Red
- 9 Sets a music CD playback. ( 1)  
"1": Automatically recognizes and plays back an MP3/WMA disc, a DVD or a music CD.  
"2": Forcibly plays back a disc as a music CD.  
Select "2" if you wish to play a music CD having a special format or if you cannot play a disc in the "1" position.
  - You cannot play an MP3/WMA/VCD disc in the "2" position. Also, you may not play some music CDs in the "2" position.
  - Your setup is disabled when the disc is being played.
- 10 Displays the System Set Up 1 screen.


## AV Interface

You can set audio and visual (AV) interface parameters.

### Displaying the AV I/F 1 screen



AV I/F 1 screen

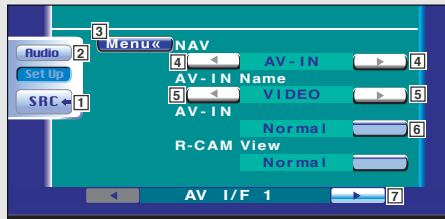


- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Selects a navigation system connection. ( **RGB**)  
"RGB": Allows the Kenwood's Navigation System to connect via its interface cable.  
"AV-IN": Allows a third-party navigation system to connect via the AV INPUT port.  
"OFF": Must be used if no navigation system is connected. (The navigation display is cancelled when the AV source is switched.)
- 5 Sets a name to be displayed when you select a system that is connected via the AV INPUT port. ( **VIDEO**)  
If you have set the navigation system connection to "AV IN", the display is fixed to "NAV".
- 6 Sets an image display of the system that is connected via the AV INPUT port. ( **Normal**)  
"Normal": When the image source is switched, an image entered via the AV INPUT port is displayed.  
"AUTO": When an image signal is entered via the AV INPUT port, this image is displayed.
- 7 Displays the AV I/F 2 screen.

If is not shown, touch or to display it.

### Displaying the AV I/F 2 screen



AV I/F 2 screen

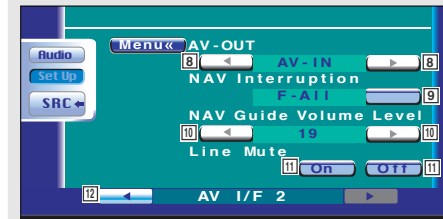

- 8 Selects an AV source to be output at the AV OUTPUT port. ( **AV-IN**)  
If you select DVD as a source when the optional accessory DSP unit is connected, no DVD sound is output to the AV output port.
- 9 Selects speakers used for voice guidance of the navigation system. ( **F-Left**)  
"F-Left": Uses the front left side speaker for voice guidance.  
"F-Right": Uses the front right side speaker for voice guidance.  
"F-All": Uses both front speakers for voice guidance.
- 10 Adjusts the volume for voice guidance of the navigation system. ( **19**)
- 11 Mutes the volume during voice guidance of the navigation system. ( **On**)  
When turned "On", the volume level drops for voice guidance.
- 12 Displays the AV I/F 1 screen.


## User Interface

You can set up user interface (IF) parameters.

### Displaying the User I/F 1 screen



User I/F 1 screen

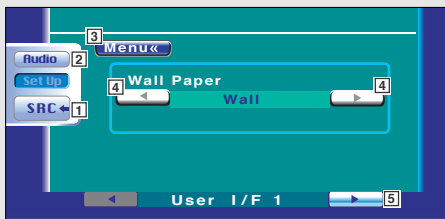

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Switches the wall paper.
- 5 Displays the User I/F 2 screen.

If **User I/F Set Up** is not shown, touch or to display it.

### Displaying the User I/F 2 screen



User I/F 2 screen



- 6 Sets an on-screen display of the DVD playback screen. () **MANU**  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 7 Sets an on-screen display of the navigation screen. () **Auto**  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 8 Sets an on-screen display of the video playback screen. () **Auto**  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 9 Sets an on-screen display of the TV screen. () **Auto** (optional accessory) (with the optional accessory TV tuner connected only)  
If you set to "Auto", an information is displayed for 5 seconds when updated.
- 10 Displays the User I/F 1 screen.


## Touch Panel Adjust

You can adjust the touch panel operations.

### 1 Display the Touch Panel Adjust screen




If **Adjust** is not shown, touch or to display it.

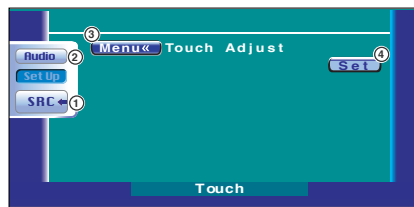

- ① Returns to the Control screen of the previous source.
- ② Calls the Sound Effects Menu. (see page 84)
- ③ Calls the Setup Menu.
- ④ Allows you to start touch panel adjustment.

### 2 Start to adjust the touch panel

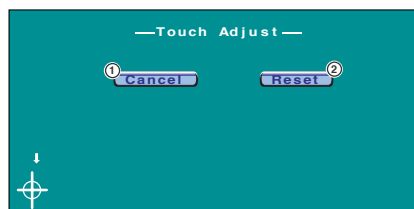

- ① Cancels the adjustment and returns to the Touch Panel Adjust screen.
- ② Resets to the initial status.

### 3 Adjustment



Touch the center of left lower and right upper when requested.


## Clock

Adjusts the clock time

### 1 Display the Clock Screen



If **Adjust** is not shown, touch or to display it.

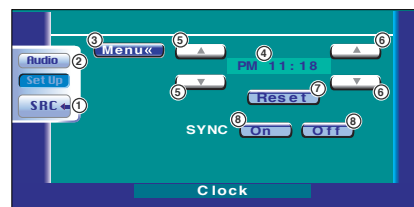

- ① Returns to the Control screen of the previous source.
- ② Calls the Sound Effects Menu. (see page 84)
- ③ Calls the Setup Menu.
- ④ Clock time display.
- ⑤ Adjusts hours.
- ⑥ Adjusts minutes.
- ⑦ Sets "00" minute.  
Setup examples: 3:00~3:29 → 3:00  
3:30~3:59 → 4:00
- ⑧ Sets the clock time in synchronous with the time data sent from the RDS station. ( Off)  
When turned "On", the synchronous mode starts and the clock cannot be adjusted manually.

### 2 Adjust the clock time



## Security Code Setup

You can set a security code to protect your receiver system against theft.


When the Security Code function is activated, the code can't be changed and the function can't be released.

Note, the Security Code can be set as the 4 digit number of your choice.

### 1 Display the Security Code Setup screen




If **Set Up** is not shown, touch or to display it.

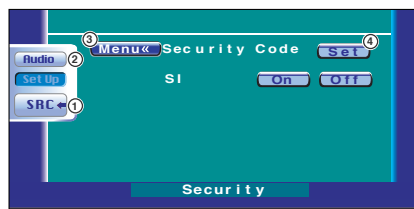

- ① Returns to the Control screen of the previous source.
- ② Calls the Sound Effects Menu. (see page 84)
- ③ Calls the Setup Menu.
- ④ Allows you to start security code registration.

If you have already completed the code registration, the **Set** is not displayed.

### 2 Start the security code registration

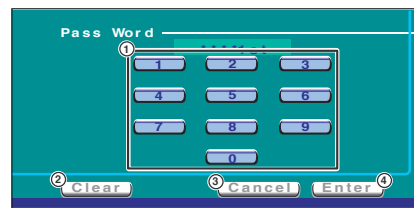

- ① Enters a security code.
- ② Clears your entry.
- ③ Cancels the registration and returns to the Security Code Setup screen.
- ④ Enters the security code.

### 3 Enter a security code



Input a four-digit number.

### 4 Register your security code



### 5 Reenter the security code

Reenter the same security code as that you have entered in Step 3 for confirmation.

If you enter a different security code, the screen returns to Step 3 (for the first code entry).

### 6 Register the security code again



Your security code has been registered. If you press the Reset button or if you disconnect your Receiver from the battery after the code registration, you need to enter the registered security code. See below for details.

If you have pressed the Reset button or if you have disconnected the Receiver from battery...

### 1 Enter the correct security code



You must enter the same security code as that you have entered in Step 3 above.

### 2 Enter the security code

 


Now, you can use your Receiver.




You can display the SIRIUS ID.

### Displaying the SIRIUS Set Up screen



SIRIUS Set Up screen

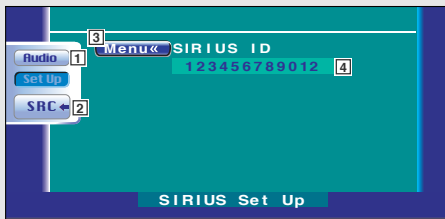


- 1 Returns to the Control screen of the previous source.
- 2 Calls the Sound Effects Menu. (see page 84)
- 3 Calls the Setup Menu.
- 4 Displays the SIRIUS ID

If **SIRIUS Set Up** is not shown, touch **▲** or **▼** to display it.


## DAB Set Up (with the optional accessory DAB Tuner connected only)

 The DAB reception can be set.

### Displaying the DAB Set Up screen



DAB Set Up screen

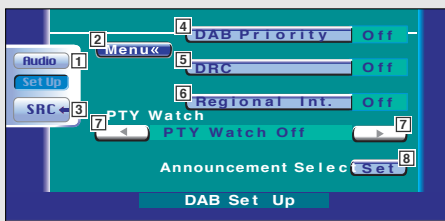

- 1 Calls the Sound Effects Menu. (see page 84)
- 2 Returns to the Control screen of the previous source.
- 3 Calls the Setup Menu.
- 4 Turns the DAB Priority On or Off.
- 5 Turns the Dynamic Range Control function On or Off.
- 6 Turns the Regional Announcement function On or Off.
- 7 Sets a program type to be selected automatically when the receiving ensemble starts.
- 8 Displays the Announcement Selection screen.

If **DAB Set Up** is not shown, touch or to display it.

## Announcement Selection

Various announcement reception parameters can be set.

### 1 Displays the Announcement Selection screen



- 1 Turns the Announcement Reception function On or Off.
- 2 Scrolls the Announcement items.
- 3 Enters the setup and returns to the DAB Set Up screen.

### 2 Set the announcement parameters



- Traffic News: Traffic information
- Transport News: Time table information of public transportation services
- Warning: Lower priority items than alarms (power failure, cutoff of water supply and others)
- News: News flash
- Weather: Weather forecasting
- Event: Event information
- Special Event: Undetermined event information
- Radio Info: Programme information, advance notice
- Sports news: Sports news
- Financial news: Financial news

### 3 Terminate the setup



## Sound Effects Menu

You can set up the receiver sound effects.

### Displaying the Control screen



Control screen



You can display the same Sound Effects Menu on the Control screen of any source.

### Displaying the Sound Effects Menu screen



Sound Effects screen



- 1 Calls the Sound Effects Menu.
- 2 Calls the Setup Menu. (see page 57)
- 3 Returns to the Control screen of the previous source.

Your setup on the <Sound Effects Menu> is adjusted automatically according to your <Audio Set Up> (see page 58) on the Setup menu. We recommend you to complete the <Audio Set Up> first, then set up the <Sound Effects Menu>.

Displayed items vary depending on the optional accessory connected.


## Audio Control

You can adjust the front and rear and right and left audio balance.

### Displaying the Audio Control 1 screen



Audio Control 1 screen

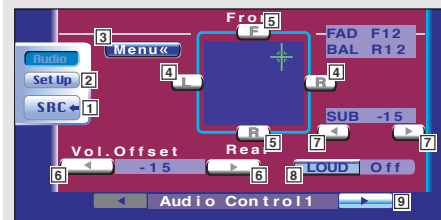

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 Adjusts the right and left volume balance.
- 5 Adjusts the front and rear volume balance.
- 6 Adjusts the volume of the present source based on the difference level of original volume.
- 7 Adjusts the subwoofer volume. (with the optional accessory DSP unit connected only)
- 8 Turns the Loudness control function On or Off. (Does not appear when the optional accessory DSP unit is connected.)  
If turned "On", high and low tones are automatically enhanced during low volume. (On)
- 9 Displays the Audio Control 2 screen.

### Displaying the Audio Control 2 screen



Audio Control 2 screen



- 10 Adjusts the bass boost of the B.M.S power amplifier (optional accessory).
- 11 Set the center frequency of bass boost you have set for the "Amp Bass".  
If you set it to "Low", the center frequency is dropped for 20 to 30%.
- 12 Displays the Audio Control 1 screen.


## Equalizer

You can set up the equalizer.

### Displaying the Equalizer screen



Equalizer screen

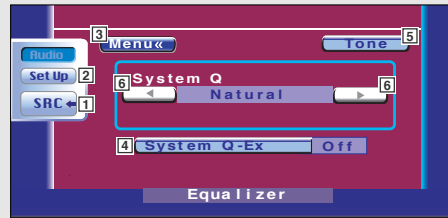

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 **Tone** : Displays the Tone curve setup screen. (see page 87)  
**P-EQ** : Displays the Parametric Equalizer screen. (see <Parametric Equalizer> page 88) (with the optional accessory DSP unit connected only)  
You can adjust the value set for the Equalizer Curve Type.
- 5 Selects an equalizer curve type.  
You can select any of the following equalizer curves.  
System Q
  - "Natural"
  - "Rock"
  - "Top 40"
  - "Dance"
  - "Vocal"
  - "Classic"
  - "User" (when the tone curve (page 87) is set up)
 KBS (with the optional accessory DSP unit connected)
  - "Natural"
  - "Top 40"
  - "Rock"
  - "Dance"
  - "Vocal"
  - "Classic"
  - "User" (when Parametric Equalizer (page 88) is set up)

## Tone curve setup

You can set a Tone curve.

### 1 Display the Tone setup screen



Tone setup screen



- 1 Bass adjustment items are displayed.
- 2 Middle adjustment items are displayed.
- 3 Treble adjustment items are displayed.
- 4 Bass DC Extend settings  
If turned "On", it extends the bass center frequency to the low register by approximately 20%.
- 5 Returns to the Equalizer screen.

### 2 Select a frequency band you wish to adjust



You can adjust the following frequency bands.  
Bass: 60, 70, 80, 100 Hz  
Middle: 500, 1k, 1.5k, 2k Hz  
Treble: 10k, 12.5k, 15k, 17.5k Hz

### 3 Set a center frequency



### 4 Set a level



### 5 Set a Q factor



You can set it up only when Bass or Middle is adjusted.


### 6 Close the Tone setup screen



## Parametric Equalizer

You can Manually set the equalizer curve by adjusting the center frequency, gain and Q value. (with the optional accessory DSP unit connected only)

### 1 Display the Parametric Equalizer screen

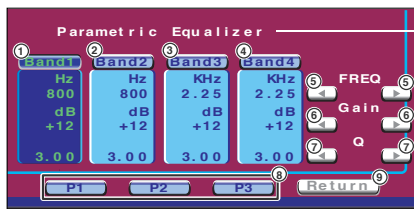

- ①②③④ Select a band to be adjusted.
- ⑤ Sets a frequency.
- ⑥ Sets a gain level.
- ⑦ Sets a Q value.
- ⑧ Store the present equalizer curve in memory, or call it from memory.
- ⑨ Exits the Parametric Equalizer setup and returns to the Equalizer screen.

### 2 Select a frequency band you wish to adjust



You can adjust the following frequency bands.

- ② 60, 80, 100, 120, 160, 200, 250 Hz
- ③ 315, 400, 500, 630, 800, 1k Hz
- ④ 1.25k, 1.6k, 2k, 2.5k, 3.15k, 4k Hz
- ⑤ 5k, 6.3k, 8k, 10k, 12.5k, 16k Hz

### 3 Set a center frequency



### 4 Set a gain



### 5 Set a Q value



### Store or call the equalizer curve into/from memory

To store the equalizer curve in memory:



Continue to touch **P1** to **P3** more than 2 seconds.

To call the equalizer curve from memory:



Touch **P1** to **P3** of the equalizer curve you wish to call from memory.

When you call an equalizer curve, its type is shown as "User".

### 6 Close the Parametric Equalizer screen




## Zone Control

You can set the front and rear audio source.

### Displaying the Zone Control screen



Zone Control screen (when the Zone function is On)

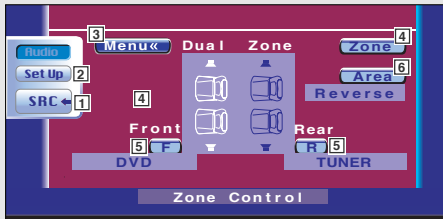

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 Turns the Zone Function (that sets different source sounds for front and rear speakers) On or Off. When turned On, **F** and **R** are shown.
- 5 Sets the front and rear audio source separately. (This button appears when the Zone function is On.)
- 6 Switches the front and rear audio sources. (This button appears when the Zone function is On.) Use "Reverse" to change over the front and rear audio sources.

• If the zone function is turned on, the [F] / [R] button appears on each source control screen, with which you can adjust the volume balance between the front and rear sources.



- If you select DVD as the main source when the optional accessory DSP unit is connected, no DVD sound is output from the sub-source.


## Digital Effect (with the optional accessory DSP unit connected only)

You can set up the Digital Effect.

### Displaying the Digital Effect screen



Digital Effect screen

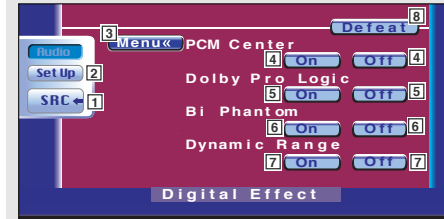

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 **PCM Center**  
If you set to "On", a sound is output from the center speaker.
- 5 Turns the Dolby Pro Logic function on or off.
- 6 Turns the Bi Phantom function on or off. If you set to on, the signal of the center channel is controlled so that it can be exactly positioned.
- 7 Sets up the dynamic range when the Dolby Digital sound is used. If you set to "On", it compresses the dynamic range to control loud sounds.
- 8 The DSP unit settings return to default.

• The Dolby Pro Logic and PCM Center functions are effective when the 2ch PCM signal is used.  
• You can set up the Bi Phantom function when the Dolby Pro Logic function is on.


## Position (with the optional accessory DSP unit connected only)

You can adjust the sound effects according to your listening position.

### Displaying the Position screen



Position screen

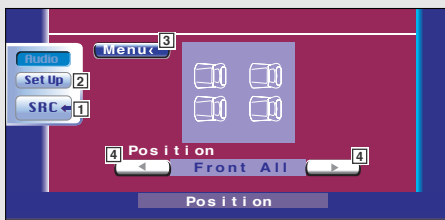

- 1 Returns to the Control screen of the previous source.
- 2 Calls the Setup Menu. (see page 57)
- 3 Calls the Sound Effects Menu.
- 4 Sets a listening position.  
You can select any of "Front R" (Right front), "Front L" (Left front), "Front" (All front), "Rear" (All rear) and "ALL" (All) positions.

The final distance is adjusted to the total of Car Type Set Up value (see page 58) and Position Setup (both Position and Position Fine Control) value.

## DVD: Digital Versatile Disc

A type of disc which contains recording of audio/video packaged media with high video and audio quality, such as a movie, featuring large recording capacity and digital signal processing capability.

## VCD: VIDEO CD

A type of CD which contains the recording of moving images. It compresses image information by about 1/120 and audio information by about 1/6 and accommodates up to 74 minutes of recording in a disc with the same diameter as ordinary music CD of 12 cm.

Some VCDs do not have the P.B.C. compatibility and are capable of playback only, while some are P.B.C.-compatible and are capable of various special playback control operations. This player can play both of these VCDs.

## MPEG: Moving Picture Expert Group (DVD, VCD)

This is an international standard for digital video and audio compression and decompression in media.

## Dolby Digital

This is a digital audio compression technology developed by Dolby Laboratories. It is compatible with 5.1-channel surround audio as well as normal stereo (2-channel) audio and can accommodate a large amount of audio data efficiently in a disc.

## DTS

Name of a digital surround system developed by Digital Theater Systems, Inc.

## Top menu/menu (DVD)

Some DVDs display more than one title in a screen. This screen is referred to as the top menu.

The menu is the item display (menu screen) for use in setting operations. The menu can be recalled any time during playback to perform settings according to the current software, including the audio switching between Dolby Digital and PCM, switching of language used in the subtitles and spoken voice.

## Title number (DVD)

The title is the largest unit of video and audio recorded in a DVD. It usually corresponds to a single movie of video software or an album (sometimes a piece of music) of music software. The numbers assigned to individual titles are referred to as the title numbers.

## Chapter number (DVD)

The chapter is a section of video and audio recorded in a DVD. A title is composed of several chapters. The numbers assigned to individual chapters are referred to as the chapter numbers.

## Subtitles (DVD)

Some DVD discs contains the recording of more than one subtitle language. This player allow you to select one of the recorded subtitle languages during playback.

## Track number (CD, VCD)

A track is also a section of video and audio recorded in a disc. The numbers assigned to individual tracks are referred to as the track numbers.

With most of music CDs, a track is assigned to a piece of music. However, with a VCD, the sections of the contents do not always correspond to the assigned tracks.

As (special) playback functions such as skipping and programming of ordinary CDs are based on track number data, such playback functions are sometimes impossible with some VCDs.

## P.B.C.: Play-Back Control (VCD)

When a VIDEO CD carries "Play Back Control capable" or similar message on the disc or jacket, desired scenes and information can be played back in an interactive manner using a hierarchical structure while viewing the menu screens displayed on the TV screen.

Some system functions are limited to control depending on your setup.

- The rear speakers of DTA cannot be set.
- The "Channel Level" of rear speakers cannot be set.

"Multi Channel" has been set to "2/0" or "3/0" (no rear speaker setting) on the Speaker Set Up screen (page 61).

- No signals can be set.
- The "Equalizer" cannot be set.
- The "Position" cannot be set.
- The "Car Type Setup" value cannot be set.
- The "Speaker Setup" value cannot be set.
- No crossover frequency can be set.
- The "Channel Level" (test signal output) cannot be set.

The Zone Control has been turned On (page 90).

- The center speaker for DTA cannot be set.
- The "Channel Level" of the center speaker cannot be set.

"Multi Channel" has been set to "2/0" or "2/2" (no center speaker setting) on the Speaker Set Up screen (page 61).

- The subwoofer of DTA cannot be set.
- The "Channel Level" of the subwoofer cannot be set.

"Sub Woofer" has been set to "Off" on the Speaker Set Up screen (page 61).



# Troubleshooting Guide

What might appear to be a malfunction in your unit may just be the result of slight misoperation or miswiring. Before calling service, first check the following table for possible problems.

## General

### The power does not turn on.

- The fuse has blown.
- After checking for short circuits in the wires, replace the fuse with one having the same rating.

### The desired source is NOT selected although you pressed the SRC button.

- An optional unit required to listen to each source is not connected yet.
- The RESET button is not pressed yet although the optional unit has been connected to the system.
- The "O-N" switch of the optional unit is at the "O" position.
- A disc changer not supported by the system is used.
- A non-connected source is not selected. See <INSTALLATION MANUAL> and connect the unit correctly.
- Press the reset button (see page 4).
- Set the "O-N" switch to the "N" position.
- Use a disc changer supported by the system (see page 4).

### Nothing happens when the buttons are pressed.

- The computer chip in the unit is not functioning normally.
- Press the reset button on the unit (see page 4).

### No television/video image appears.

- The unit is not connected to the parking brake detection switch.
- The parking brake is not engaged.
- Make proper connections according to <INSTALLATION MANUAL>.
- For safety reasons no television/video images are displayed while the vehicle is moving. Engaging the parking brake will cause images to be displayed.

### The screen is dark.

- The unit is in a location where temperature is low.
- If the temperature of the monitor unit drops, the screen may appear darker when power is first turned on due to the characteristics of a liquid crystal panel. Wait a while after turning power on for the temperature to rise. Normal brightness will return.

### The screen does not darken when the vehicle's lights are turned on.

- The unit is set to auto dimmer.
- The illumination wire has not been connected. (If manual dimmer is set)
- When the unit is set to auto dimmer, it is not linked to the vehicle's light switch.
- Make proper connections according to <INSTALLATION MANUAL>.

### AM/FM radio reception is poor and/or there is noise.

- The TV antenna and vehicle's radio antenna are too close.
- Separate the two antennas as far as possible.
- Turn off the main unit.

### The remote controller does not operate.

- The remote control mode selector is not set correctly.
- Switch the remote control mode selector according to the source you select (see page 12).

### No sound can be heard, or the volume is low.

- Attenuator is turned on.
- The fader or balance settings are set all the way to one side.
- The input/output wires or wiring harness are connected incorrectly.
- Turn off Attenuator.
- Reset the fader and/or balance settings.
- Reconnect the input/output wires or the wiring harness correctly. See the section on <INSTALLATION MANUAL>.

### The sound quality is poor or distorted.

- One of the speaker wires is being pinched by a screw in the car.
- The speakers are not wired correctly.
- Check the speaker wiring.
- Reconnect the speaker wires so that each output terminal is connected to a different speaker.

### Radio reception is poor.

- The car antenna is not extended.
- The antenna control wire is not connected.
- Pull the antenna out all the way.
- Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

### The memory is erased when the ignition is turned off.

- The battery wire has not been connected to the proper terminal.
- The ignition and battery wire are incorrectly connected.
- Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.
- Connect the wire correctly, referring to the section on <INSTALLATION MANUAL>.

### The sound/picture skips on a DVD/VCD/CD.

- The disc is scratched or dirty.
- Clean the disc, referring to the section on <Disc cleaning> (see page 6).

### A track will not play.

- Random play has been selected.
- Turn off random play.

### A VCD cannot be played using menus.

- The VCD disc being played is not compatible with P.B.C.
- Menu playback is available only with VCD discs recorded with P.B.C.

### The subtitle is not displayed.

- The DVD disc being played does not contain the recording of subtitles.
- The subtitle cannot be displayed when the DVD disc being played does not contain the recording of subtitles.

### The voice (or subtitle) language cannot be changed.

- The DVD disc being played does not contain the recording of more than one audio (or subtitle) language.
- The voice (or subtitle) language cannot be changed when the DVD disc being played does not contain the recording of more than one voice (or subtitle) language.

## The viewing angle cannot be changed.

- The DVD disc being played does not contain the recording of more than one angle.
- You are attempting to switch the angle in a DVD section where more than one angle is not recorded.
- The viewing angle cannot be changed when the DVD disc being played does not contain the recording of more than one angle.
- More than one viewing angle may be recorded only in limited sections in a disc.

## Playback will not start even after a title is selected.

- A viewing restriction (RATING) has been set for the disc.
- Check the viewing restriction level (RATING) setting.

## The voice or subtitle language selected in the initial setting is not played.

- The DVD disc being played does not contain the recording of the selected voice or subtitle language.
- Use a DVD disc containing the recording of the selected voice or subtitle language.

## Disc source

### The disc control mode cannot be selected.

- No wire has been connected to the disc changer input terminal on the unit.
- Connect the wire to the disc changer input terminal on the unit.

### The specified disc does not play, but another one plays instead.

- The specified CD is quite dirty.
- The CD is upside-down.
- The disc is loaded in a different slot from that specified.
- The disc is severely scratched.
- Clean the CD.
- Load the CD with the labeled side up.
- Eject the disc magazine and check the number for the specified disc.
- Try another disc instead.

### The sound skips.

- Something is touching the disc changer.
- The CD is scratched or dirty.
- Remove whatever is touching it.
- If skipping happens at the same place when the car is stopped, something with the CD is wrong. Clean the CD.

### The display shows that the changer is being played, but no sound can be heard.

- The computer chip in the unit is not functioning normally.
- Press the reset button on the unit (see page 4).

### The specified track will not play.

- Random play or magazine random play has been selected.
- Turn off random play or magazine random play.

### Track repeat, disc repeat, track scan, disc scan, random play, and magazine random play start by themselves.

- The setting is not cancelled.
- The settings for these functions remain on until the setting to off or the disc ejected, even if the power is turned off or the source changed.

### Can't remove disc.

- The cause is that more than 10 minutes has elapsed since the vehicle ACC switch was turned OFF.
- The disc can only be removed within 10 minutes of the ACC switch being turned OFF. If more than 10 minutes has elapsed, turn the ACC switch ON again and press the Eject button.

## MP3/WMA source

### Cannot play an MP3/WMA.

- The media is scratched or dirty.
- Clean the media, referring to the CD cleaning of the section on <About discs> (see page 6).

### The sound skips when an MP3/WMA is being played.

- The media is scratched or dirty.
- The recording condition is bad.
- Clean the media, referring to the CD cleaning of the section on <About discs> (see page 6).
- Record the media again or use another media.

### The MP3/WMA track time isn't displayed correctly.

- --
- There are times when it isn't displayed correctly according to the MP3/WMA recording conditions.

### Can't display the ID3 tag information correctly.

- Record is not made in conformity with the ID3 tag version 1.x.
- Record in conformity with the ID3 tag version 1.x. Also, the display may be incorrect if an MP3/WMA file uses the ID3 tag v1.x standard and if this standard has been expanded after production of the machine software.

## The following messages are displayed when certain problems are occurring in your system. Take the recommended actions.

- Hot Error** The protective circuit in the unit activates when the temperature inside the unit exceeds 60°C (140°F), stopping all operation.  
⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc will start playing again.
- Hold Error** The protective circuit in the unit activates when the temperature inside the automatic disc changer exceeds 60°C (140°F), stopping all operation.  
⇒ Cool down the unit by opening the windows or turning on the air conditioner. As the temperature falls below 60°C (140°F), the disc will start playing again.
- Mecha Error** The disc player is malfunctioning.  
⇒ Eject the disc and try inserting it again. Contact the Kenwood dealer if this indicator continues blinking or the disc cannot be ejected.
- Disc Error** The unplayable discs is inserted.
- Read Error** The disc is upside-down.  
⇒ Load the disc with the labeled side up.  
The disc is quite dirty.  
⇒ Clean the disc, referring to the section on <Disc cleaning> (see page 6).
- Region code Error** The DVD software encoded for other region code.
- Parental level Error** The parental level is set to high levels.
- Error 07 — 67** The unit is malfunctioning for some reason.  
⇒ Press the reset button on the unit. If the "Error ##" code does not disappear, consult your nearest service center.

# Specifications

## Specifications subject to change without notice.

### Monitor Section

Picture size .....	6.95 inches (diagonal) wide 154.1(W)x87.1(H)mm
Display system .....	Transparent TN LCD panel
Drive system .....	TFT active matrix system
Number of pixels .....	336,960 (480Hx234VxRGB)
Effective pixels .....	99.99%
Pixel arrangement .....	RGB striped arrangement
Back lighting .....	Cold Cathode Fluorescent Tube

### DVD Section

D/A Converter .....	24Bit
A/D Converter .....	20Bit
Decoder .....	Linear PCM/Dolby Pro Logic II/Dolby digital/ dts/MLP/MP3/WMA
Wow & Flutter .....	Below Measurable Limit
Frequency response	
(Sampling frequency;192k) .....	20~88,000Hz
(Sampling frequency;176.4k) .....	20~80,000Hz
(Sampling frequency;96k) .....	20~44,000Hz
(Sampling frequency;88.2k) .....	20~40,000Hz
(Sampling frequency;48k) .....	20~22,000Hz
(Sampling frequency;44.1k) .....	20~20,000Hz
Total harmonic distortion (1k) .....	0.003%
Signal to Noise ratio .....	100dB (DVD-Audio 192k)
Dynamic range .....	100dB (DVD-Audio 192k)
DISC Format .....	DVD-Audio/DVD-Video/VIDEO-CD/CD-DA
Sampling frequency .....	44.1kHz/48kHz, 88.2kHz/96kHz, 176.4kHz/192kHz
Quantifying bit number .....	16/20/24bit

### DSP Section

4 BAND Parametric equalizer	
BAND1 frequency .....	60/80/100/120/160/200/250Hz
BAND2 frequency .....	315/400/500/630/800/1kHz
BAND3 frequency .....	1.25k/1.6k/2k/2.5k/3.15k/4k/5k
BAND4 frequency .....	5k/6.3k/8k/10k/12.5k/16k/20k
Gain .....	-9/-7/-5/-3/-2/-1/0/1/2/3/5/7/9dB
Q control .....	0.25/0.5/1/0.2/0.4
X'over	
High pass filter: frequency .....	30/60/70/80/90/100/120/150Hz
: slope .....	12/18/24dB
Low pass filter: frequency .....	60/70/80/90/100/120/150Hz
: slope .....	12/18/24dB
Time alignment .....	0~6.1m (5cm Step)
	0~20.3ft (0.17ft Step)
Channel level .....	±10dB

### FM Tuner section

Frequency range (200kHz) .....	87.9~107.9MHz
Usable sensitivity (S/N=30dB) .....	9.3dBf (0.8µV/75Ω)
Quieting sensitivity (S/N=50dB) .....	15.2dBf (1.6µV/75Ω)
Frequency response (±3.0dB) .....	30Hz~15kHz
S/N (dB) (MONO) .....	75dB
Selectivity (±400kHz) .....	≥ 80dB
Stereo separation .....	40dB (1kHz)

### AM Tuner section

Frequency range (10kHz) .....	530kHz~1700kHz
Usable sensitivity .....	28dBµ

### TV section

Color TV Broadcasting system	
North American Type .....	NTSC
South American Type .....	NTSC/PAL-M
Receivable channels: VHF .....	2~13ch
: UHF .....	14~69ch
Channel selection system .....	PLL frequency synthesizer system
IF signal detection system .....	Split carrier system
Antenna input .....	4ch diversity (75 Ω/3.5Ω miniplug)

### Video section

Color system of external video input	
North American Type .....	NTSC
South American Type .....	NTSC/PAL
External video input level (RCA jacks) .....	1Vp-p/75Ω
External audio max input level(RCA jacks) .....	1V22kΩ
Analog RGB input .....	0.7Vp-p/75Ω

### Audio section

Maximum Power (Front&Rear) .....	50Wx4
Full Bandwidth Power (Front&Rear)	
(at Less than 1%THD) .....	22Wx4
Maximum Power (Center) .....	47Wx1
Full Bandwidth Power (Center)	
(at Less than 1%THD) .....	22Wx1
Preout level (V) .....	5V/10kΩ
Preout impedance .....	80Ω

### General

Operating voltage .....	14.4V (11V~16V)
Current consumption .....	15A
Dimensions (WxHxD)	
Main Unit Installation .....	182mmx53mmx165mm 7-3/16x2-1/16x6-1/2inch
Hideaway unit .....	225mmx40mmx168mm 8-7/8x1-9/16x6-5/8inch
Operational temperature range .....	-10°C~60°C
Storage temperature range .....	-20°C~85°C
Weight: Main unit .....	2.2kg (4.9lbs)
: Hideaway unit .....	1.4kg (3.0lbs)

### TV Antenna Unit

Output impedance .....	75 Ω/3.5Ω miniplug
Operating voltage .....	12V
Consumed current .....	1.0A
Cable length .....	5m
Size (WxHxD) .....	50x14.5x500mm 1-15/16x9/16x19-11/16inch
Weight .....	300gx2 (0.7lbsx2)

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION  
2967-3, ISHIKAWA-CHO,  
HACHIOJI-SHI  
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT  
CONFORMS TO DHHS REGULATIONS NO.21 CFR  
1040.10, CHAPTER 1, SUBCHAPTER J.

Location : Bottom Panel

### FCC WARNING

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### NOTE

This Class B digital apparatus complies with Canadian ICES-003.



is a trademark of DVD Format/Logo Licensing Corporation registered in the U.S., Japan and other countries.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories.  
"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

Although the effective pixels for the liquid crystal panel is given as 99.99% or more, 0.01% of pixels may not light or may light incorrectly.