

KENWOOD

MULTIPLE COMPACT DISC PLAYER

DP-R5750

INSTRUCTION MANUAL

KENWOOD CORPORATION



B60-1273-08 (J) (K) (AP)

Introduction

Your choice of this product indicates that you are a devotee to excellence in sound reproduction.

We appreciate your patronage and take pride in the long tradition of quality components that our company represents.

So that you can get the most out of your unit, we suggest that you take the time to read through this manual before you hook up and operate your system. This will acquaint you with operating features and system-connection considerations so that your listening pleasure will be enhanced right from the start. You will notice that in all aspects of planning, engineering, styling, operating convenience and adaptability we have sought to anticipate your needs and desires.

Keep this manual handy for future reference.

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.

Model _____ Serial Number _____

Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost.

Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.

For the U.S.A

CAUTION:
Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD CORPORATION
SHIONOGI SHIBUYA BUILDING 17-5,
2- CHOME, SHIBUYA, SHIBUYA-KU,
TOKYO, JAPAN

KENWOOD CORP. CERTIFIES THIS EQUIPMENT
CONFORMS TO DHHS REGULATIONS NO. 21
CFR 1040.10, CHAPTER I, SUBCHAPTER J.

 
 
Location: Back Panel

Accessories

Audio cord 1 System control cord 1






Remote control unit 1 Batteries(R03/AAA) 2



Contents

Caution: Read the pages marked  carefully to ensure safe operation.

Introduction	2	Manual play (TRACK mode)	10
 Before applying power	3	Repeated play	13
 Safety precautions	3	Programmed play (PGM mode)	14
 IMPORTANT SAFEGUARDS	4	Random play	16
Before operation	6	Use of headphone	17
System connections	7	In case of difficulty	18
Control and indicators	8	Specifications	19
Operation of remote control unit	9		

Before applying power

 **Caution: Read this page carefully to ensure safe operation.**

For the U.S.A. and Canada

Important!

Units shipped to the U.S.A. and Canada are designed for operation on 120 volts AC only.

For Australia and Europe

Important!

Units shipped to Australia are designed for operation on 240 V AC only.

Units shipped to Europe are designed for operation on 230 V AC only.

For the United Kingdom

Important!

Units shipped to the U.K. are designed for operation on 240 volts AC only.

 
The mains plug must be removed from the wall socket prior to any internal examination.

The wires in this mains lead are coloured in accordance with the following code:

Blue Neutral
Brown Live

The wires in this mains lead must be connected to the terminals in the plug as follows:

Wire colour	Plug terminal marking
Blue	N or Black
Brown	L or Red

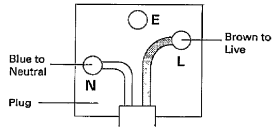

Notes:

1. If a 13-amp plug is used, this must be fitted with a 13-amp fuse.
2. If a 3-pin plug with earthing contact is used, no wire must be connected to the E terminal.

For other countries

Important!

Units shipped to countries other than the above countries are equipped with an AC voltage selector switch on the rear panel. Refer to the following paragraph for the proper setting of this switch.

AC voltage selection

This unit operates on 110-120 or 220-240 volts AC. The AC voltage selector switch Type A or Type B on the rear panel is set to the voltage that prevails in the area to which the unit is shipped. Before connecting the power cord to your AC outlet, make sure that the setting position of this switch matches your line voltage. If not, it must be set to your voltage in accordance with the following direction.

AC voltage selector switch

Type A



AC 110-120 V ~ AC 220-240 V ~

Type B



AC 110-120 V ~ AC 220 V ~ AC 230-240 V ~





Move switch lever to match your line voltage with a small screwdriver or other pointed tool.

Note:

Our warranty does not cover damage caused by excessive line voltage due to improper setting of the AC voltage selector switch.

Safety precautions

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

  <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>
	<p>THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.</p>
	<p>THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.</p>

DP-R5750 (Eh) 3

 **Caution : Read this page carefully to ensure safe operation.**

13. Lightning – For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and power-line surges.

14. Abnormal smell – If an abnormal smell or smoke is detected, immediately turn the power OFF and unplug

18. Power lines – An outside antenna system should not be located in the vicinity of overheated power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

19. AC outlets – Do not connect other audio equipment

 
IMPORTANT SAFEGUARDS

 Caution: Read this page carefully to ensure safe operation.


Please read all of the safety and operating instructions before operating this appliance. Adhere to all warnings on the appliance and in the instruction manual. Follow all the safety and operating instructions. These safety and operating instructions should be retained for future reference.

- 1. Power sources** – The appliance should be connected to a power supply only of the type described in the instruction manual or as marked on the appliance. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For appliances intended to operate from battery power, or other sources, refer to the instruction manual.
- 2. Power-cord protection** – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Never pull or stretch the cord.




- 3. CAUTION – Polarization** – This appliance may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 4. Ventilation** – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the appliance and to protect it from overheating, and these openings must not be blocked or covered. The appliance should be situated so that its location or position does not interfere with its proper ventilation.
To maintain good ventilation, do not put records or a tablecloth on the appliance. Place the appliance at least 10 cm away from the walls.
Do not use the appliance on a bed, sofa, rug or similar surface that may block the ventilation openings. This appliance should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

 


- 5. Water and moisture** – The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.



 - 6. Temperature** – The appliance may not function properly if used at extremely low, or freezing temperatures. The ideal ambient temperature is above +5°C (41°F).
- 7. Heat** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 8. Electric shock** – Care should be taken so that objects do not fall and liquid is not spilled into the enclosure through openings. If a metal object, such as a hair pin or a needle, comes into contact with the inside of this appliance, a dangerous electric shock may result. For families with children, never permit children to put anything, especially metal, inside this appliance.

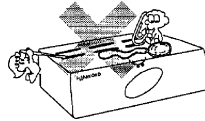

 - 9. Enclosure removal** – Never remove the enclosure. If the internal parts are touched accidentally, a serious electric shock might occur.



- 10. Magnetic fields** – Keep the appliance away from sources of magnetic fields such as TV sets, speaker systems, radios, motorized toys or magnetized objects.
- 11. Cleaning** – Unplug this appliance from the wall outlet before cleaning. Do not use volatile solvents such as alcohol, paint thinner, gasoline, or benzine, etc. to clean the cabinet. Use a clean dry cloth.
- 12. Accessories** – Do not place this appliance on an unstable cart, stand, tripod, bracket, or table. The appliance may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the appliance. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

4 DP-R5750 (En)

Introduction

Your choice of this product indicates that you are a devotee to excellence in sound reproduction.

We appreciate your patronage and take pride in the long tradition of quality components that our company represents.

So that you can get the most out of your unit, we suggest that you take the time to read through this manual before you hook up and operate your system. This will acquaint you with operating features and system-connection considerations so that your listening pleasure will be enhanced right from the start.

For the U.S.A

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

In compliance with Federal Regulations, following

⚠ Caution : Read this page carefully to ensure safe operation.

13. Lightning – For added protection for this appliance during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the appliance due to lightning and power-line surges.

14. Abnormal smell – If an abnormal smell or smoke is detected, immediately turn the power OFF and unplug the appliance from the wall outlet. Contact your dealer or nearest service center.

 


15. Damage requiring service – The appliance should be serviced by qualified service personnel when:

- A. The power-supply cord or the plug has been damaged.
- B. Objects have fallen, or liquid has been spilled into the appliance.
- C. The appliance has been exposed to rain or water.
- D. The appliance does not appear to operate normally by following the instruction manual. Adjust only those controls that are covered by the instruction manual as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the appliance to its normal operation.
- E. The appliance has been dropped, or the enclosure damaged.
- F. The appliance exhibits a marked change in performance.

16. Servicing – The user should not attempt to service the appliance beyond that described in the instruction manual. All other servicing should be referred to qualified service personnel.

17. Outdoor antenna grounding – If an outside antenna is connected to the appliance, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code ANSI/NFPA 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure.

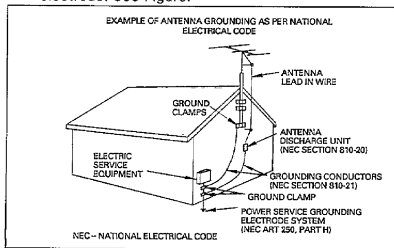


Notes:

1. Item 3 is not required except for grounded or polarized equipment.
2. Item 17 and 18 are not required except for units provided with antenna terminals.
3. Item 17 complies with UL in the U.S.A.

18. Power lines – An outside antenna system should not be located in the vicinity of overheated power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

 19. AC outlets – Do not connect other audio equipment with a power consumption larger than that specified to the AC outlet on the rear panel. Never connect other electrical appliances, such as an iron or toaster, to it to prevent fire or electric shock.

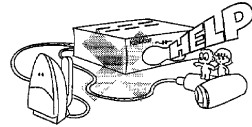

20. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

21. Attachment – Do not use attachments not recommended by the appliance manufacturer as they may cause hazards.

22. Replacement parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

23. Safety check – Upon completion of any service or repairs to this appliance, ask the service technician to perform safety checks to determine that the appliance is in proper operating condition.

DP-R5750 (En) 5

System connections

 
Make connection as shown below. When connecting the related system components, refer also to the instruction manuals of the related components.

Do not plug in the power lead until all connections are completed.

To AC outlet

Before operation

■ Disc handling precautions

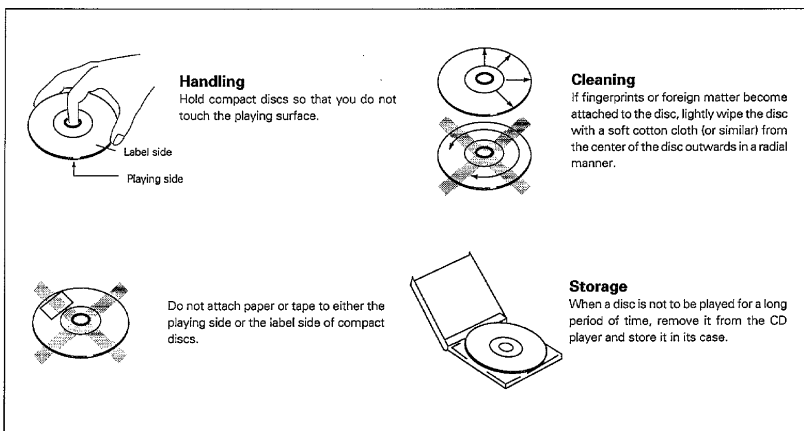

■ Beware of condensation

When water vapor comes into contact with the surface of cold material, water drops are produced.

If condensation occurs, correct operation may not be possible, or the unit may not function correctly.

This is not a malfunction, however, and the unit should be dried. (To do this, turn the POWER switch ON and leave the unit as it is for several hours.)

Be specially careful in the following conditions.

- When the unit is brought from a cold place to a warm place, and there is a large temperature difference.
- When a heater starts operating.
- When the unit is brought from an air - conditioned place to a place of high temperature with high humidity.
- When there is a large difference between the internal temperature of the unit and ambient temperature, or in conditions where condensation occurs easily.

■ Transporting and moving precautions

When transporting or moving this appliance, perform the operations below:

1. Press the stop key.
2. Press the OPEN/CLOSE key to open the tray.
3. Take out the disc.
4. Press the OPEN/CLOSE key to close the tray.
5. After waiting for a few seconds, press the POWER key to cut the power supply.

IMPORTANT SAFEGUARDS

⚠ Caution: Read this page carefully to ensure safe operation.

Please read all of the safety and operating instructions before operating this appliance. Adhere to all warnings on the appliance and in the instruction manual. Follow all the safety and operating instructions. These safety and operating instructions should be retained for future reference.

1. **Power sources** – The appliance should be connected to a power supply only of the type described in the instruction

 
6. **Temperature** – The appliance may not function properly if used at extremely low, or freezing temperatures. The ideal ambient temperature is above +5°C (41°F).

7. **Heat** – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

System connections

Make connection as shown below. When connecting the related system components, refer also to the instruction manuals of the related components.

Do not plug in the power lead until all connections are completed.

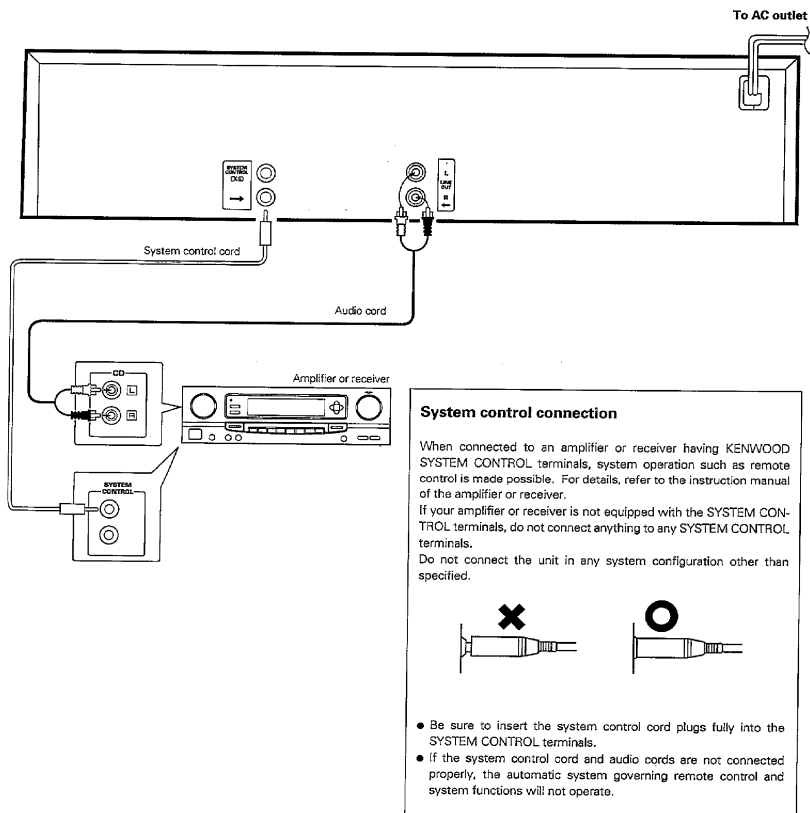


Notes:


1. Connect all cords firmly. If connections are loose there could be loss of sound or noise produced.
2. When plugging and unplugging connection cords, be sure to first remove the power cord from the AC outlet. Plugging/unplugging connection cords without removal of the power cord can cause malfunctions or damage to the unit.

DP-R5750 (Er) 7

 Operation of remote control unit

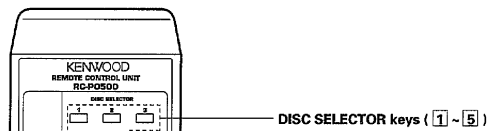

Controls and indicators

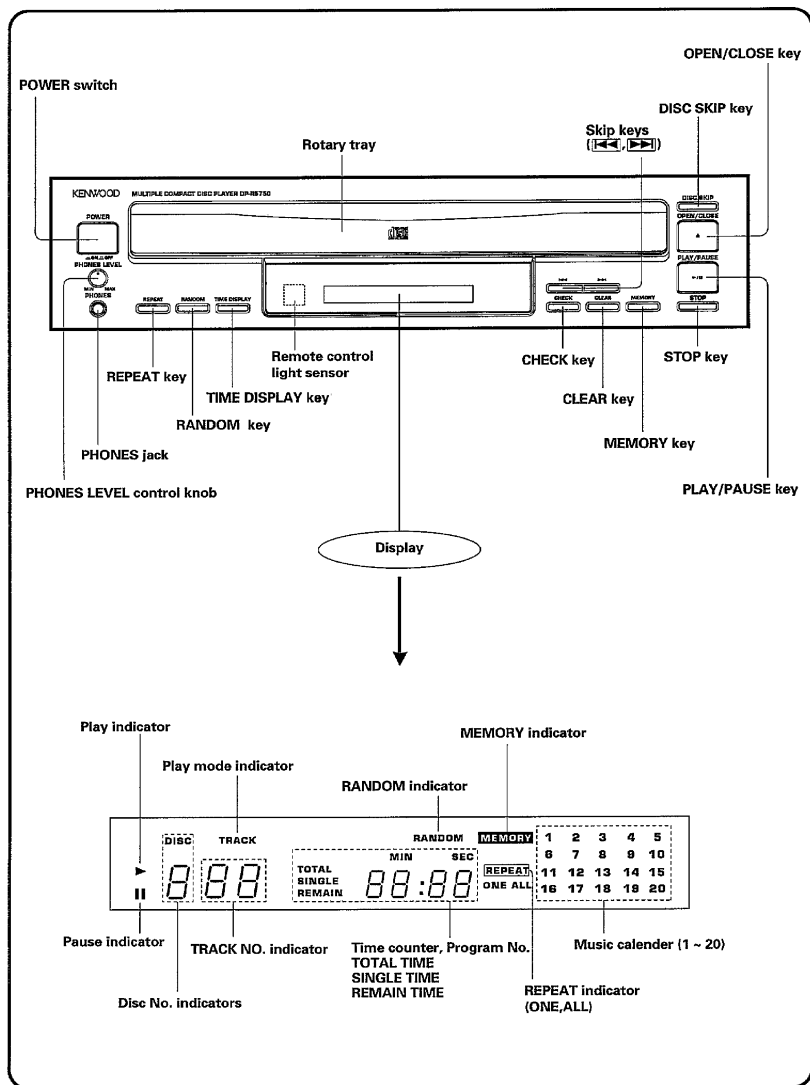 

8 DP-R5750 (En)

 
Before operation

■ Disc handling precautions



Handling


Hold compact discs so that you do not touch the playing surface.



Cleaning

If fingerprints or foreign matter become attached to the disc, lightly wipe the disc.

 Operation of remote control unit

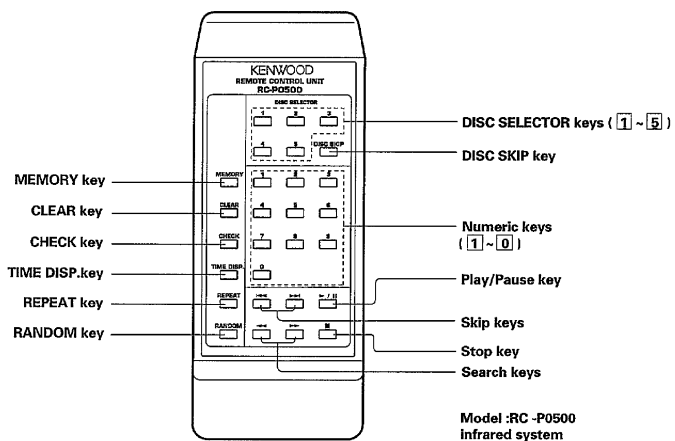

■ Loading batteries

- 1 Remove the cover.**
- 2 Insert batteries.**
 - Insert two AAA-size (R03/AAA) batteries as indicated by the polarity marking.
- 3 Close the cover.**

■ Operation procedure


Operating range

Remote control light sensor


Approx. 6m

- When two operation keys on the remote control unit are pressed successively, press each key securely reserving an interval of more than 1 second for each press.

 - Notes:
1. The supplied batteries are intended for use in operation checks. Therefore, their lives may be shorter than ordinary batteries.
 2. When the remote-controllable distance gets shorter than before, replace both batteries with new ones.
 3. Malfunction may occur if direct sunlight or the light of a high-frequency lighting fluorescent lamp enters the remote control light sensor. In such a case, change the system installation position to prevent the malfunction.

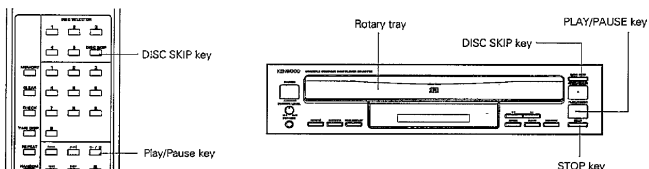

Manual play (TRACK mode)

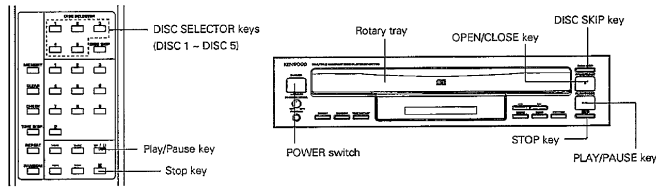 


■ Playing a CD from the beginning

In the diagram, the keys with rounded corners represent the keys on the actual appliance. The keys with the square corners represent the keys on the remote control unit.



1 Press the POWER switch to ON.

 Initial indicator




2 Load a CD.

  - ① Open the disc tray.
- ② Place a disc on the tray.

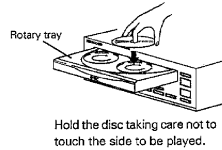

 - When inserting three or more discs, use the **DISC SKIP** key to rotate the tray.
- Up to five discs may be inserted.
- When inserting a disc while the tray rotates, a malfunction might occur. Insert the disc when the tray does not rotate.






3 Close the tray.

- After the tray is closed completely, perform next step.




4 Start playback.

   - ① Select the disc.
- ② Start playback.

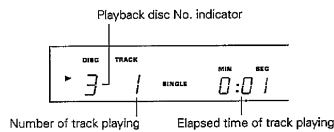

- Play will commence from the disc selected. When two or more discs are inserted, the discs will be played in ascending order from disc 1.
- Automatically stops when the fifth disc has finished playing.

 To pause CD play






To resume playback, press the **▶/II** key again.

To stop CD play



   1D DP-RS750 (2H)

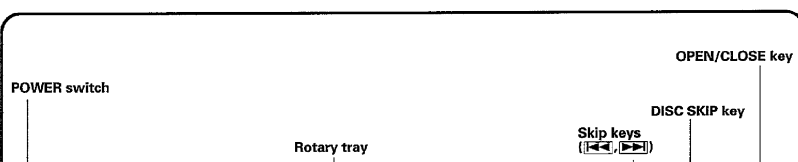

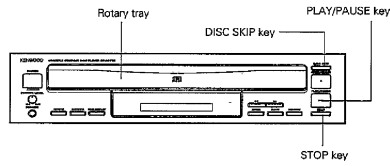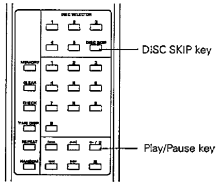


■ To change discs while playing

1 Open tray.



 2 Change the discs.

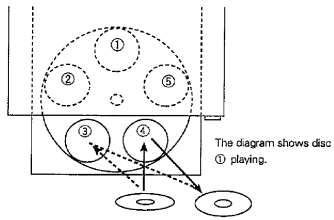

Two discs can be changed at one time.

- While disc ① is playing, discs ③ and ④ can be changed.
- While disc ② is playing, discs ④ and ⑤ can be changed. (The same as below.)

3 Close tray.



■ To change discs while playback is stopped

 
1 Stop playback.



2 Open tray.



3 Change discs.

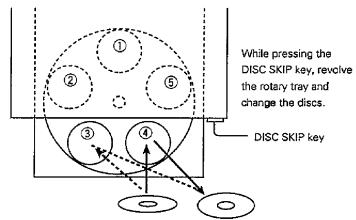

Up to two discs can be changed.

4 Close tray.

 
 


Repeated play


■ Repeated listening

Repeating a single track

1 Stop playback.

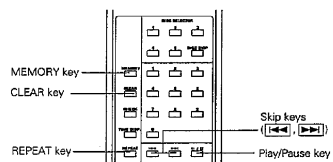

Manual play (TRACK mode)

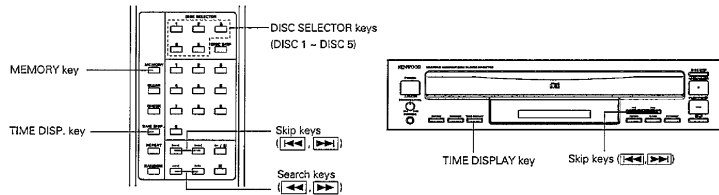 


■ Listening from the desired track

1 Ensure that the CD player is in the TRACK mode.


- When the MEMORY key illuminates, press the MEMORY key and the light goes out.

 2 Select the desired disc.




3 Select the desired track.

 Using the SKIP key



 Using the numerical keys on the remote control unit




Example:

For the eleventh track, press key [1] twice.
For the twentieth track, press the [2] key and then press the [0] key.


Continue pressing until the desired track No. appears.

4 Press the PLAY/PAUSE key.

 - After selecting the tracks, conduct playback.




Skipping tracks

 

- Skips in the direction of the pressed key, and plays back from the beginning of the selected track.
- When the [2] key is pressed once during play, the track starts again from the beginning.

 
To fast forward and backward



- The track will start to play from where you release the key.

TIME DISP. key

 Press the [TIME DISP.] key when you want to check the elapsed time and remaining time of the track being played. Every time the [TIME DISP.] key is pressed, the displayed time changes as shown below.

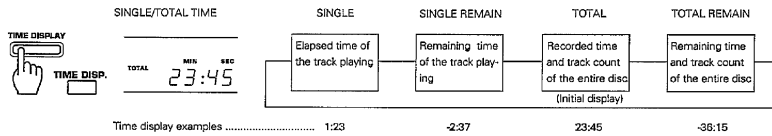

Repeated play

■ Repeated listening

Repeating a single track

 
- 1 Stop playback.**
- 2 Press the CLEAR key.**
- 3 Select the desired disc.**
- 4 Select the desired track.**
- 5 Press the REPEAT key twice.**
REPEAT ONE illuminates.

• Each time the key is pressed, normal playback is switched. REPEAT ALL-REPEAT ONE.

- 6 Start playback.**

Repeating the entire disc

- 1 Stop playback.**
- 2 Press the CLEAR key.**
- 3 Press the REPEAT key one time.**
REPEAT ALL illuminates.
- 4 Start playback.**

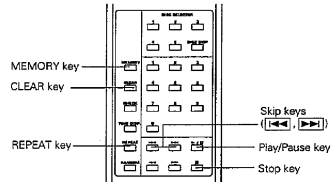


Repeating of programmed tracks

- 1 Stop playback.**
- 2 Press the CLEAR key.**
- 3 Select desired track, switch to REPEAT mode.**

For repeating all the tracks on a single disc.	For repeating several tracks on several discs.	For repeating a single track.
<ol style="list-style-type: none"> Select the disc number by the DISC SELECTOR. Press the MEMORY key. Press the REPEAT key twice. <p>REPEAT ONE illuminates.</p>	<ol style="list-style-type: none"> Select the disc number by the DISC SELECTOR. Press the MEMORY key. Repeat steps ① and ②. Press the REPEAT key one time. <p>REPEAT ALL illuminates.</p>	<ol style="list-style-type: none"> Select the disc number by the DISC SELECTOR. Use the SKIP key and the numerical keys to select the track No. Press the MEMORY key. Press the REPEAT key twice. <p>REPEAT ONE illuminates.</p>
- 4 Start playback.**

 To stop repeat play

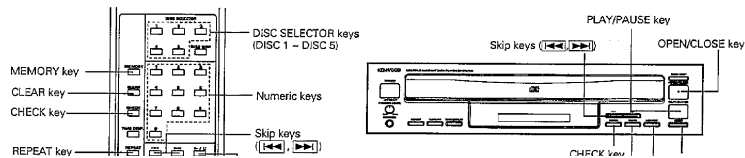


Programmed play (PGM mode)


The program mode allows you to play desired tracks in the order you want to hear them. A maximum of 32 selections can be entered in memory.

■ Playing desired tracks in desired order

 1 Press the STOP key.




2 Press the CLEAR key.

 


3 Program desired tracks in desired order.

 ① Select the disc.




② Select the track number.

 
Using the SKIP key



 Using the numerical keys on the remote control unit




 - By repeating steps ① ②, up to twenty tracks may be selected.
- If you made a mistake, press the [CLEAR] key and select the correct track.
- By pressing the [MEMORY] key without selecting track numbers, all the tracks on the disc selected in step ① of ③ will be programmed.



Indicator A is the abbreviation for ALL, which means all tracks.

 
5 Start playback.



- If one of the skip keys ([SKIP+] or [SKIP-]) is pressed during programmed playback, the track being played is skipped in the forward or reverse direction.

To check the programmed order

 Display showing program No. 12, DISC 3, track No. 7.




- Cannot check during playback.
- Every time the [CHECK] key is pressed, the track No. and the order it was programmed (P-No.) are displayed in the order of programming.


To stop programmed playback




 
4 Programming.





 Input example : Track 6 on disc 5 is input into program 3.



Manual play (TRACK mode)

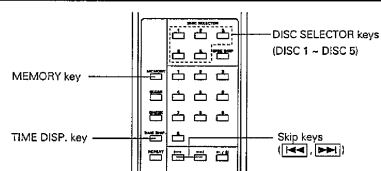  

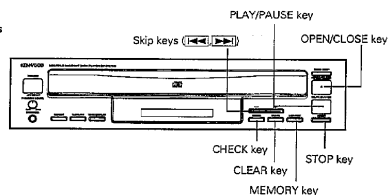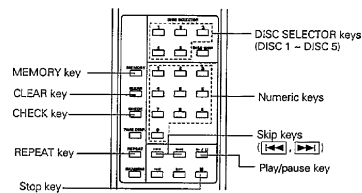  


■ To add a track to the program

1 Press the STOP key.




2 Select the track No. to be added.

 ① Select the disc.




② Select the track number.

 Using the SKIP key

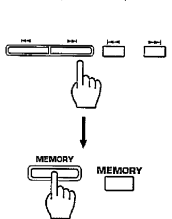

 Using the numerical keys on the remote control unit

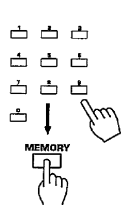


■ To change a track in the program

1 Press the STOP key.



 
2 Press the CHECK key.



Press until the P.No. to be changed is displayed.


3 Select the track No. to replace the previous one.

 ① Select the disc.




② Select the track number.

 
Using the SKIP key

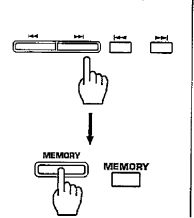

 Using the numerical keys on the remote control unit

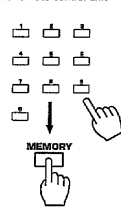

■ To clear tracks from the program

 

- The program cancels completely.
- If pressed during playback, the program is cleared and playback continues in the normal sequence.
- Single tracks cannot be canceled separately.

Auto-Space function

In the program mode, a space of about 4 seconds is inserted automatically between the programmed tracks. This function is provided to facilitate the DPSS function of the cassette deck. However, such a space may also be inserted in case the sound of two tracks are continued, for example with some classic music and live recordings.

Use of headphone

■ Listening through headphones

1 Insert the headphone plug into the headphones jack.

 
 


2 Adjust the volume.

PHONES LEVEL

Random play


The random play function chooses tracks at random (non-selected), and in differing order. It lets you enjoy hours of tireless track listening.

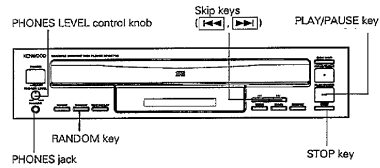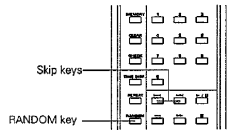

■ Playing tracks in a random order


1 Ensure that the CD player is in the TRACK mode.

 - ① Stop playback.
- ② Press the CLEAR key.



2 Press the RANDOM key.

 Switches ON/OFF for each pressing of the RANDOM key.




During random track selection.

DISC	RANDOM	1	2	3	4	5
▶ 2		6	7	8	9	10
		11	12	13	14	15
		16	17	18	19	20

During random selection play.


DISC	TRACK	PGM	RANDOM	3
▶ 2	3	SINGLE	0:01	

 3 Start playback.



- Tracks from all the disc(s) in the tray will be played randomly.
- When the first track has been played, another track is selected at random again, and played.
- Press the REPEAT key and random playback continues indefinitely.

 
To select another track during random play



- When the [SKIP] key is pressed once during play, the track starts again from the beginning.

To cancel random play

 Press either one of these keys.




- Normal play starts from the track being played.
- Playback stop.

Programmed play (PGM mode)

The program mode allows you to play desired tracks in the order you want to hear them. A maximum of 32 selections can be entered in memory.

 ■ Playing desired tracks in desired order



1 Press the STOP key.



- By repeating steps ① ②, up to twenty tracks may be selected.
- If you made a mistake, press the [CLEAR] key and select the correct track.

In case of difficulty

When appears to be a malfunction may not always be serious. If your unit should not perform as expected, consult the table below to see if the problem can be corrected before seeking help from your dealer or service representative.


Symptom	Cause	Remedy
No power is applied with the POWER switch ON.	<ul style="list-style-type: none"> Power plug is loosely connected. With the power plug connected to the switched AC outlet of an amplifier, the power of the amplifier is turned off. 	<ul style="list-style-type: none"> Insert the power plug firmly to the AC outlet. Turn the amplifier's power ON.
Disc is loaded, player does not play.	<ul style="list-style-type: none"> Disc is loaded upside down. Disc is loose. Disc is dirty. Disc is cracked. Condensation occurred on the optical lens unit. 	<ul style="list-style-type: none"> Load the disc again with its label side up. Insert disc properly. Wipe off the dust on the surface of the disc referring to "Disc handling precautions". Replace the disc with a new one. Leave the player for about 1 hour so that the condensation is removed.
No sound.	<ul style="list-style-type: none"> Disc is not loaded. Play mode is not entered (The play/pause indicator is not lit). Disc is too dirty. Disc is cracked. The connection cords are inserted loosely. 	<ul style="list-style-type: none"> Load a disc and press the PLAY/PAUSE key . Press the PLAY/PAUSE key . Wipe off the dust on the disc surface referring to "Disc handling precautions". Replace the disc with a new one. Connect all connection cords firmly.
Music is interrupted. (Sound is skipped.)	<ul style="list-style-type: none"> Disc is too dirty. Disc is cracked. Oscillation is applied to this unit. Tray is open during playback. 	<ul style="list-style-type: none"> Wipe off the dust on the disc surface referring to "Disc handling precautions". Replace the disc with a new one. Try selecting a place where no strong vibrations occur by changing the installation place, etc. Press the OPEN/CLOSE key and the tray closes.

Notes:

- This system is microprocessor-controlled, so malfunction may occur due to external noise or interference noise. In such a case, unplug the power cord, plug it and turn power on again.
- Do not use contact cleaners because it could cause a malfunction. Be specially careful against contact cleaners containing oil, for they may deform the plastic components.

18 DP-R5750 (Er)

 The random play function chooses tracks at random (non-selected), and in differing order. It lets you enjoy hours of tireless track listening.

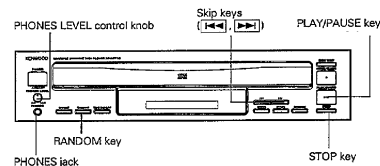

■ Playing tracks in a random order

**For CANADA
DOC REGULATION**

"This digital apparatus does not exceed the CLASS B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of the Canadian Department of Communications."

**For the U.S.A.
FCC WARNING**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment may cause harmful interference to radio communications, if it is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

In case of difficulty

When appears to be a malfunction may not always be serious. If your unit should not perform as expected, consult the table below to see if the problem can be corrected before seeking help from your dealer or service representative.

Symptom	Cause	Remedy
No power is applied with the POWER switch ON.	<ul style="list-style-type: none">● Power plug is loosely connected.● With the power plug connected to the switched AC outlet of an amplifier, the	<ul style="list-style-type: none">● insert the power plug firmly to the AC outlet.● Turn the amplifier's power ON.